

Thank you for purchasing our product. The basic manual has been found to contain a mistake. Please refer below for correction, so that you can continue to get the most out of our products.

## ■ Basic manual P. 15 “Charging the battery”

**Note:** Before charging the battery, turn off the camera.

## ■ Basic manual P. 24 “Specifications —Camera”

Movie record mode

Record mode	Resolution	File format	Incorrect		Correct	
			Remaining recording time (sec.)		Remaining recording time (sec.)	
			With sound	Without sound	With sound	Without sound
SHQ	640 x 480 (30 frames/sec.)	Motion-JPEG	8*	8*	8*	8*
HQ	640 x 480 (15 frames/sec.)		17	17	17	17
SQ1	320 x 240 (30 frames/sec.)		34	35	23	24
SQ2	320 x 240 (15 frames/sec.)		67	70	46	48

\*Maximum recording time: Limited regardless of the card's memory.