

# Quick Start Guide Stylus 725 SW


## Start Here

For more information, please refer to the Basic & Advanced Manuals or visit: [www.olympusamerica.com/support](http://www.olympusamerica.com/support)

OLYMPUS IMAGING AMERICA INC.


### BEFORE YOU BEGIN

#### Gather these items (box contents)

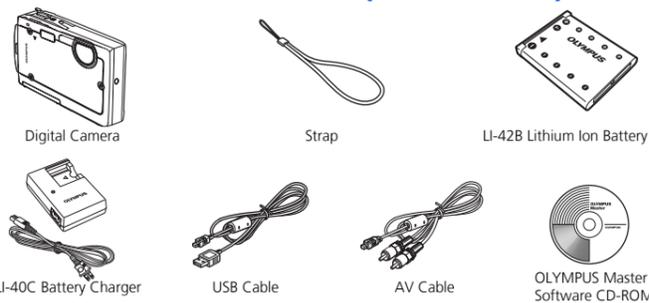

Items not shown: Advanced Manual (CD-ROM), Basic Manual, warranty card. Contents may vary depending on purchase location.


#### Charge the battery (recommended\*)

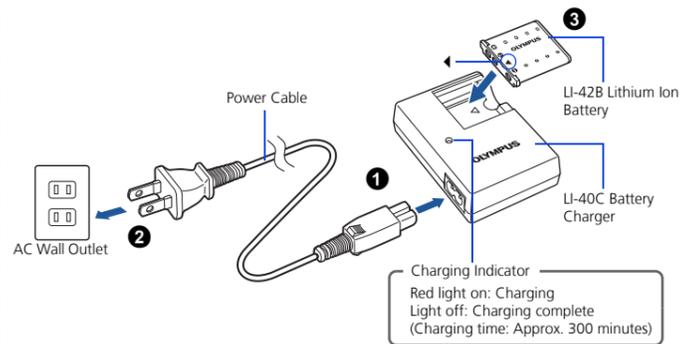

\*Battery comes partially charged.


## 1 GET STARTED

### a. Attach the strap

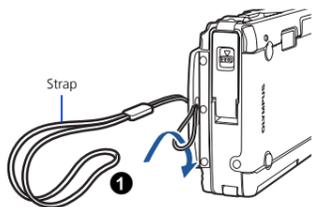



- Pull the strap tight so that it does not come loose.

### b. Insert the battery

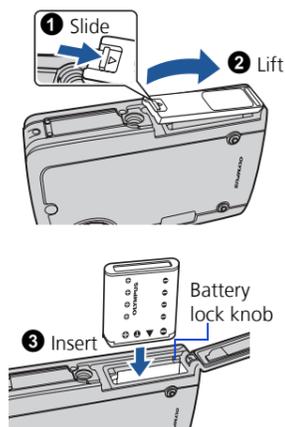


### c. Set the date and time

- 1 Press **POWER** button to turn the camera on.
- 2 Press  $\Delta$  or  $\nabla$  to set [Y] and then press  $\triangleright$  to go to the next step.
- 3 Repeat the operations above to set [M], [D], [TIME] and the date formats.
- 4 Press  $\odot$ .

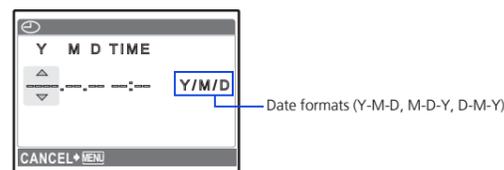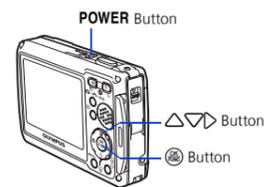


## 2 TAKE A PICTURE

### a. Zoom

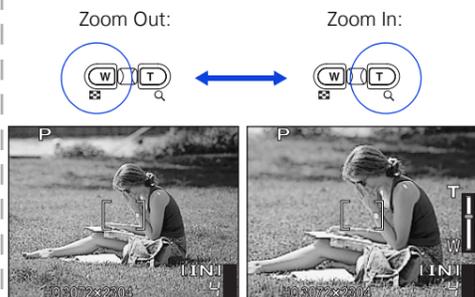

### b. Focus


- 1 Using the monitor, place the AF target mark over your subject.

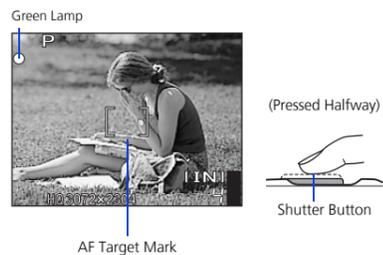

- 2 Press and hold the shutter button halfway to lock the focus.
  - The green lamp indicates the focus is locked.


### c. Take the picture

- 1 Press the shutter button completely to take the picture.

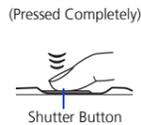

- Pictures are recorded in the internal memory.
- Pictures can also be recorded to an optional xD-Picture Card (It is called just "card" in the attached instruction manual.)


### CAMERA DIAGRAM

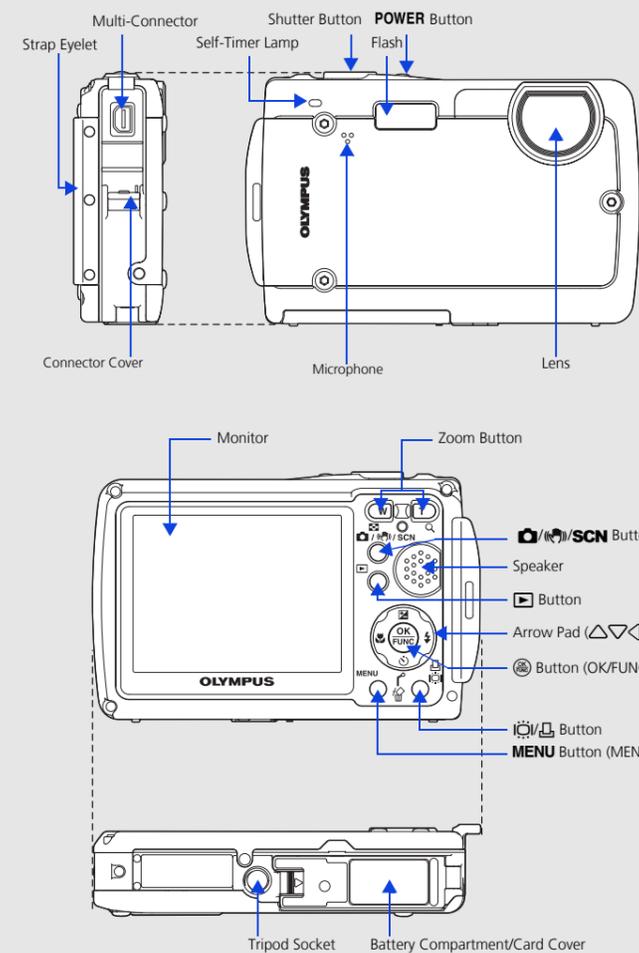

## 3 REVIEW OR ERASE A PICTURE

### a. Select the playback mode


- 1 Press the  $\triangleright$  button.
  - The last picture taken will be displayed.

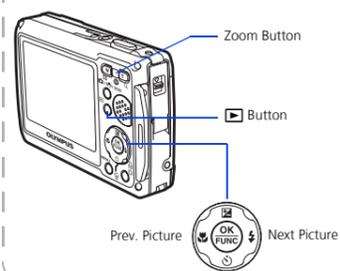

### b. Take a closer look

- Press T or W to zoom in or out.
  - Press  $\odot$  to return to the original size.
  - Press  $\Delta$ ,  $\nabla$ ,  $\leftarrow$ , or  $\rightarrow$  to scroll around.
- Press the  $\text{SCN}$  button to return to the shooting mode.

### c. To erase a picture

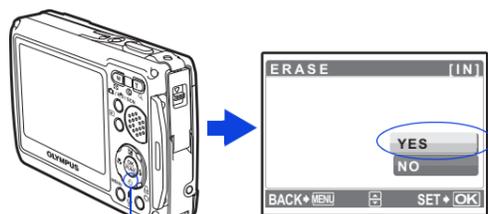

- 1 Display the picture you want to erase.
  - Select the single-frame playback. A single image cannot be erased while the close-up playback/index playback is operated.
- 2 Press the  $\nabla$  button.
- 3 Select [YES], and press  $\odot$ .
  - The picture is permanently erased.

## 4 TRANSFER IMAGES


### a. Install the software

- 1 Insert the OLYMPUS Master CD-ROM.
  - 2 **Windows:** Click the "OLYMPUS Master" button.  
**Macintosh:** Double-click the "Installer" icon.
  - 3 Simply follow the on-screen instructions.
- Remember to register your camera when you install OLYMPUS Master or visit: [www.olympusamerica.com/prodreg](http://www.olympusamerica.com/prodreg)




### b. Connect the camera to the computer

- 1 Connect the camera and computer using the USB cable (included).
  - The monitor will turn on automatically.

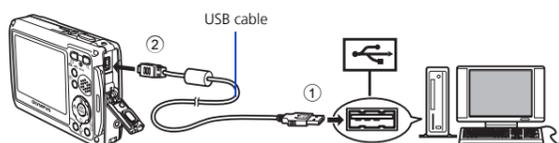


- 2 Select [PC] on the monitor, and press  $\odot$ .
- Your PC will now recognize your camera as a removable storage drive.

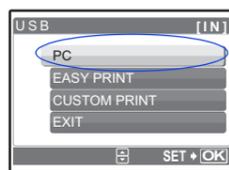

### c. Transfer images to the computer

- 1 With the camera now connected, open OLYMPUS Master.
  - The [Transfer Images] window is displayed.
- 2 Select the images you want to transfer, and click the [Transfer Images] button.

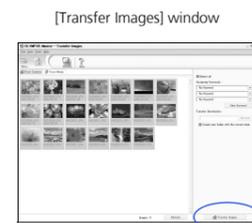

If the [Transfer Images] window is not displayed automatically:

- a. Click the "Transfer Images" icon on the OLYMPUS Master main menu.
- b. Click the "From Camera" icon.

