


Panasonic[®]

Portable Stereo CD System

RX-DS14

Operating Instructions

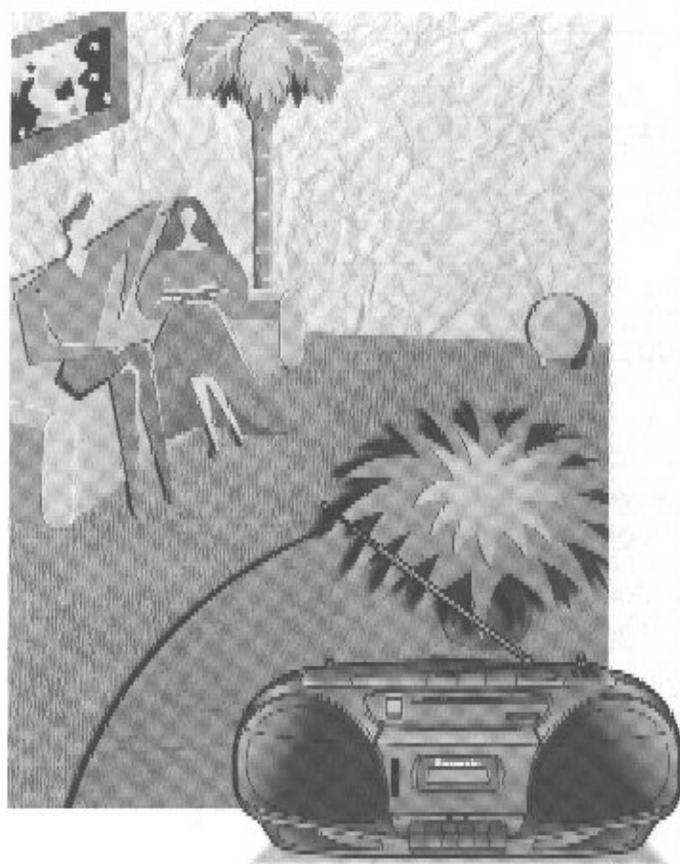

Before connecting, operating or adjusting this product, please read these instructions completely.

P PC

COMPACT
disc
DIGITAL AUDIO

RQT3218-P

Precautions

Before using this unit please read these operating instructions carefully. Take special care to follow the warnings indicated on the unit itself as well as the safety suggestions listed below.

Afterwards keep them handy for future reference.

Safety

1. **Power Source**—The unit should be connected to power supply only of the type described in the operating instructions or as marked on the unit.
2. **Polarization**—If the unit is equipped with a polarized AC power plug (a plug having one blade wider than the other), that plug will fit into the AC outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
3. **Power Cord Protection**—AC power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Never take hold of the plug or cord if your hand is wet, and always grasp the plug body when connecting or disconnecting it.
4. **Nonuse Periods**—When the unit is not used, turn the power off. When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

Installation

Environment

1. **Water and Moisture**—Do not use this unit near water—for example, near a bathtub, washbowl, swimming pool, or the like. Damp basements should also be avoided.
2. **Condensation**—Moisture may form on the lens in the following conditions...
 - immediately after a heater has been turned on.
 - in a steamy or very humid room.
 - when the unit is suddenly moved from a cold environment to a warm one.If moisture forms inside this unit, it may not operate properly. To correct this problem, turn on the power and wait about one hour for the moisture to evaporate.
3. **Heat**—The unit should be situated away from heat sources such as radiators and the like. It also should not be placed in temperatures less than 5°C (41°F) or greater than 35°C (95°F).

Placement

1. **Ventilation**—The unit should be situated so that its location or position does not interfere with its proper ventilation. Allow 10 cm (4") clearance from the rear of the unit.
2. **Foreign Material**—Care should be taken so that objects do not fall into and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration, or shock.
3. **Magnetism**—The unit should be situated away from equipment or devices that generate strong magnetic fields.
4. **Stacking**—Do not place heavy objects, other than system components, on top of the unit.
5. **Surface**—Place the unit on a flat, level surface.
6. **Carts and Stands**—The unit should be used only with a cart or stand that is recommended by the manufacturer. The unit and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the unit and cart combination to overturn.
7. **Wall or Ceiling Mounting**—The unit should not be mounted to a wall or ceiling, unless specified in this operating instructions.



Maintenance

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

Service

1. **Damage Requiring Service**—The unit should be serviced by qualified service personnel when:
 - (a) The AC power supply cord or the plug has been damaged; or
 - (b) Objects have fallen or liquid has been spilled into the unit; or
 - (c) The unit has been exposed to rain; or
 - (d) The unit does not appear to operate normally or exhibits a marked change in performance; or
 - (e) The unit has been dropped, or the enclosure damaged.
2. **Servicing**—The user should not attempt to service the unit beyond that described in the operating instructions. All other servicing should be referred to an authorized service personnel.
(Only for U.S.A.)
Call 1-800-545-2672 for the address of an authorized factory servicenter.

Precautions

Listening caution

THE FOLLOWING PHRASES ARE APPLIED ONLY FOR U.S.A.:

CAUTION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Notice: This system complies with new Part 15, except for the radio receiver, which complies with old Part 15, Subpart C of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation. The radio receiver is not subject to above item (2).

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.



Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion—and, most importantly, without affecting your sensitive hearing.

We recommend you to avoid prolonged exposure to excessive noise.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:



- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

Location of Controls

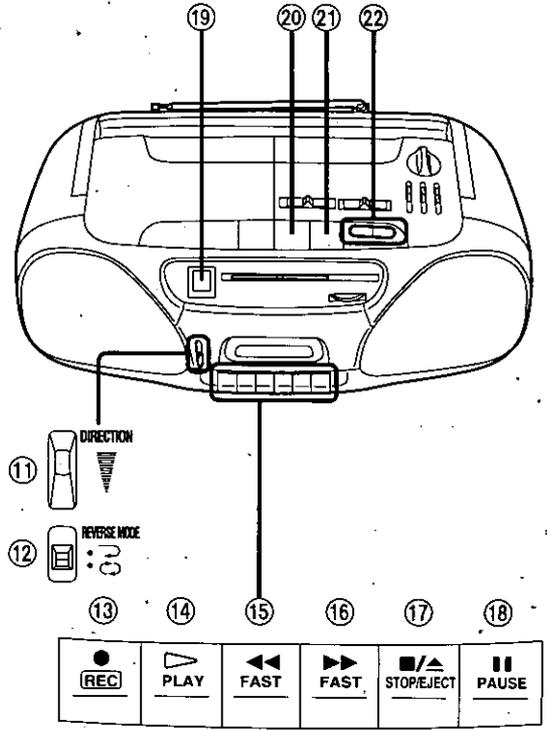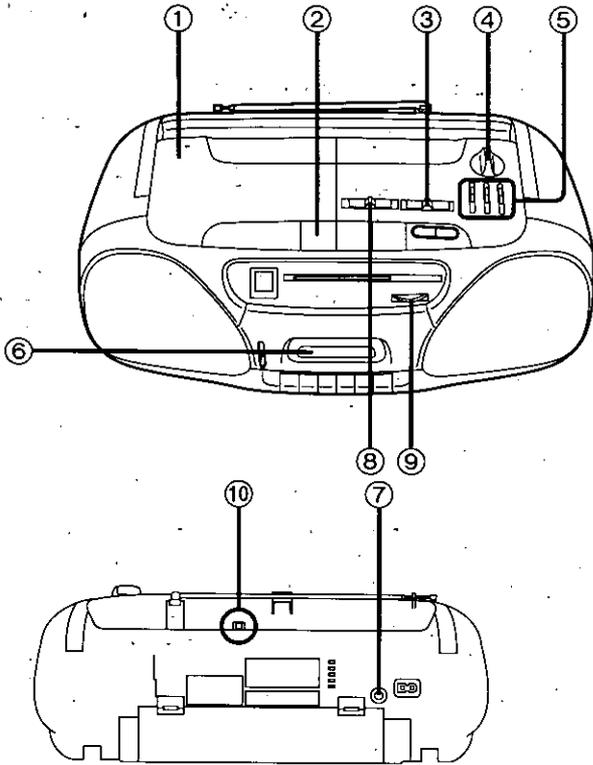

| No. | Name | Ref. page |
|-----|------|-----------|
|-----|------|-----------|

Basic controls

| | | |
|---|---|----------|
| ① | Disc lid | 10 |
| ② | Disc lid open button (CD ▲) | 10 |
| ③ | Function selector/operation switch (SELECTOR) | 8-10, 12 |
| ④ | Volume control (VOLUME) | 7 |
| ⑤ | 3-band equalizer (XBS/BASS/TREBLE) | 7 |
| ⑥ | Cassette lid | 8 |
| ⑦ | Headphones jack (PHONES) | 7 |

Tuner controls

| | | |
|---|------------------------|----|
| ⑧ | Band switch (BAND) | 9 |
| ⑨ | Tuning dial (TUNING) | 9 |
| ⑩ | Beat proof switch (BP) | 11 |

| No. | Name | Ref. page |
|-----|------|-----------|
|-----|------|-----------|

Cassette deck controls


| | | |
|---|------------------------------------|--------|
| ⑪ | Tape direction button (DIRECTION) | 8 |
| ⑫ | Reverse mode switch (REVERSE MODE) | 8 |
| ⑬ | Recording button (● REC) | 11, 12 |
| ⑭ | Playback button (▶ PLAY) | 8 |
| ⑮ | Rewind button (◀◀ FAST) | 8 |
| ⑯ | Fast forward button (▶▶ FAST) | 8 |
| ⑰ | Stop/eject button (■/▲ STOP/EJECT) | 11, 12 |
| ⑱ | Pause button (PAUSE) | 11, 12 |

CD controls

| | | |
|---|--|----|
| ⑲ | Display panel | 10 |
| ⑳ | Stop button (■ STOP) | 10 |
| ㉑ | Play/pause button (▶/ PLAY/PAUSE) | 10 |
| ㉒ | Skip/search buttons (◀◀, ▶▶ SKIP/SEARCH) | 10 |

Power Sources

Using household AC power

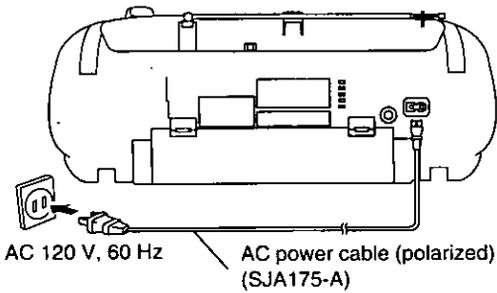


If the unit is not going to be used for a prolonged period of time when a household AC outlet is used to power it, disconnect the power cable to conserve power.

(Only for U.S.A.)

To order accessories call MSC Accessory Dept. 1-800-332-5368.

Using batteries (not included)

Disconnect the power cable from the AC IN~ socket on the rear panel, and insert six "D" size (R20/LR20, not included) batteries in the order numbered below.

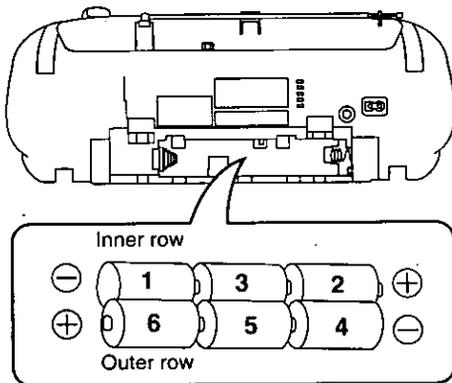

■ How to remove the batteries

Insert your finger into the opening on the bottom of the unit, and push the batteries out.



■ When to replace the batteries

Replace all the batteries if the sound is distorted or the unit fails to operate properly. When the batteries start to wear out, it may not be possible to play CDs properly even when there is nothing wrong with the radio and tape operations.

■ Use of batteries

- Do not mix new batteries with old batteries.
- Do not mix different types of batteries (manganese with alkaline, etc.).
- Install the batteries with their (+) and (-) ends aligned properly.
- Do not recharge the batteries.
- Remove the batteries if the unit is not going to be used for a long period of time.
- Remove them if the unit is always going to be powered from a household AC outlet.
- Do not throw batteries into a fire or short-circuit, disassemble or apply heat to them.

Common Operations

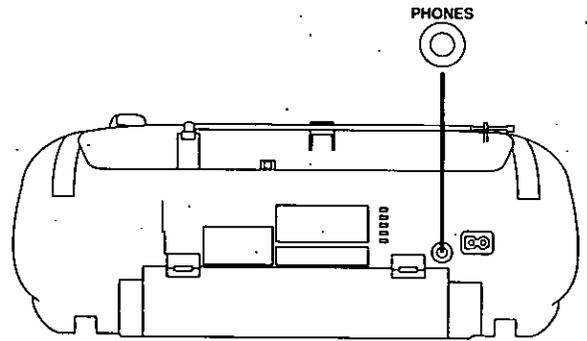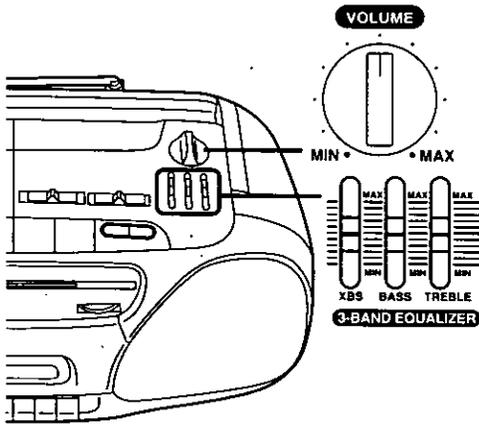

Adjusting the volume




Turn **VOLUME** to adjust the volume to the desired level. Turn it clockwise to turn up the volume. Turn it counterclockwise to turn down the volume.

Adjusting the tone quality

It allows you to tailor the frequency response of the unit to compensate for room acoustics and other factors which affect frequency response. The overall tone can be altered by adjusting the controls which controls the following bands; XBS, BASS and TREBLE.

Positioning the control to the "MAX" side will amplify the corresponding frequency band; the "MIN" side will attenuate it.

Listening through headphones (not included)

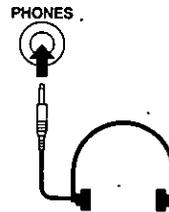


Turn down the volume and connect the headphones to the **PHONES** jack.


- Plug type: Stereo mini
- Avoid listening for prolonged periods of time to prevent hearing damage.

Listening to Tapes

Only normal tapes can be used.

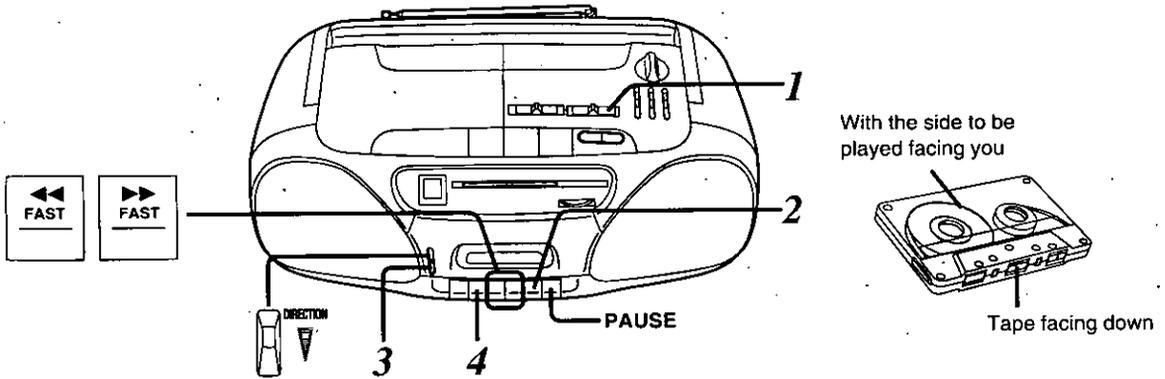

1 Set **SELECTOR** to "TAPE/**OFF**".

 

2 Press **STOP/EJECT**, load the tape and close the cassette lid.



3 Set **REVERSE MODE** into the desired mode.



4 Press **PLAY** to start play.



To stop play:



Press **STOP/EJECT**.
It turns the power off.

To stop play temporarily:



Press **PAUSE**.
To resume play:
Press **PAUSE** again.

To reverse the direction:



Press **DIRECTION** down during playback.

Type of tape which can be played on this unit:

| | |
|------------------------|---|
| Normal position/TYPE I | ○ |
| High position/TYPE II | × |
| Metal/TYPE IV | × |

This unit will not be able to do full justice to characteristics of high-position tapes and metal tapes even if they are played back.


Auto-Stop:

During playback or recording, when the tape reaches its end, the automatic stop system will release the playback and record buttons and automatically turn the unit off. During tape playback, if the reverse mode selector is set to "⊙" position, the automatic stop system does not function.

Note:

When the tape reaches the end by pressing ►► **FAST** or ◀◀ **FAST**, the automatic stop system does not function. The tape will stop, but the motor continues to turn. Do not leave the set in this condition. Be sure to press **STOP/EJECT**.

To rewind or fast forward the tape

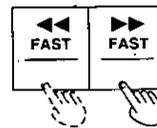

In the stop mode, press ►► **FAST** or ◀◀ **FAST**.

Note


Do not press **PLAY** during rewinding or fast forwarding, as this may jam the tape. Be sure to press **STOP/EJECT** before proceeding to the next operation.

AUTO REVERSE SYSTEM.

This unit is equipped with an auto reverse function that allows you to perform two-side playback or repeat two-side playback. If the direction button is pressed during the tape playback, the reverse side of the cassette tape can be heard.

Two-side playback mode (↔):


- Be sure to start from the forward direction (side A).

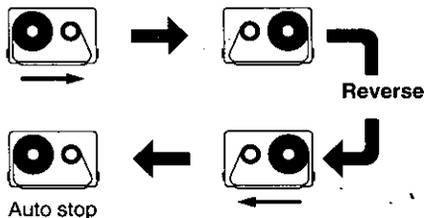

- If playback is started from the reverse direction (side B), side B only will be played, after which auto stop will operate.


Repeat two-side playback mode (↻):

Playback will be repeated until the STOP/EJECT is pressed.

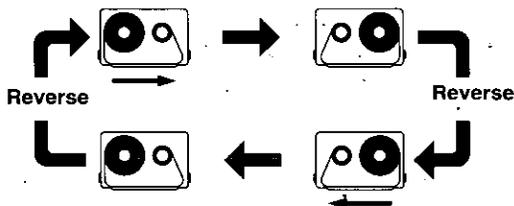


Note


During playback in the reverse direction, if you press STOP/EJECT to stop the tape movement, and then press the playback button again, playback will begin always in the forward direction.

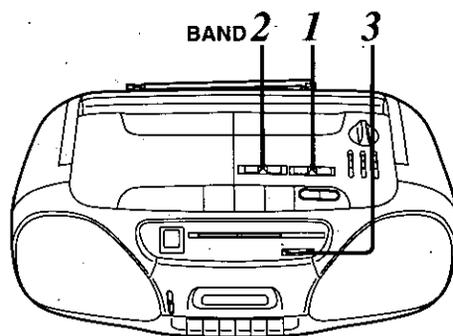

- 1 Set SELECTOR to "RADIO".

 

- 2 Set BAND as desired.

 

- 3 Tune in the desired station using TUNING.



- ☺: To increase the frequency
- ☹: To lower the frequency

Turning the power off:

Set SELECTOR to "TAPE/ **OFF**".

- When an FM stereo broadcast is accompanied by too much noise

Switch the sound to monaural to reduce noise.

Set BAND to "FM".

Adjusting the antennas

For FM reception:

Pull out the telescopic antenna and adjust its length and angle for optimum reception.


For AM reception:

The sensitive ferrite core antenna inside the set will provide excellent AM reception in most areas. For optimum reception, turn the set in the direction which gives the best results since the ferrite core antenna is directional.

For your reference:

Radio broadcasts may be hard to receive in a moving vehicle or building because their signals are weak. Whenever possible, use the unit by a window.

Listening to CDs

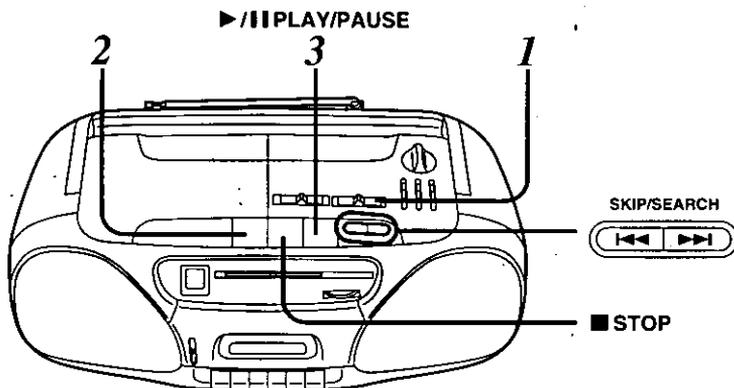


1 **Set SELECTOR to "CD".**

Indicates that a CD has not been loaded.

2 **Press CD ▲, insert the CD and close the lid.**

Insert the CD with its label side facing up.

Total number of tracks

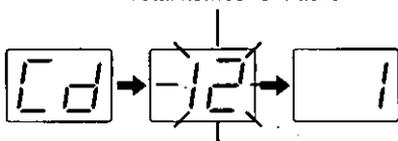

3 **Press ►/|| to start play.**

Play starts from track 1 and continues to the last track, after which it automatically stops.

After the track number now displayed flashes on and off rapidly, it will stop flashing and light up when play is commenced.

To stop play:

Press ■.

To stop play temporarily:

Press ►/||. To resume play: Press ►/|| again.

The track number display flashes on and off slowly.

Turning the power off:
Set SELECTOR to "TAPE/ **OFF**".

Skipping to the beginning of a track

SKIP/SEARCH

Press ►► to skip to the start of the next track.
You can skip as many tracks as the number of times you press the button.

SKIP/SEARCH

Press ◀◀ to skip to the start of the present track.
If you press the button again quickly, you can skip to the beginning of the previous track.

• In the stop mode, to play from the indicated track, press ►/||.

Rapid forwarding and reversing (search)

SKIP/SEARCH

During play, keep pressing ►► or ◀◀.
Release the button at the desired position.

(Backward) (Forward)


Note

Interference may affect radio or TV reception when CDs are played close to a radio or TV set. If this occurs, place the unit as far away from the set as possible.

Before Recording

Auto reverse does not function during recording.
Recording and erasure of recording can be made only in the forward direction.

To take up the leader tape

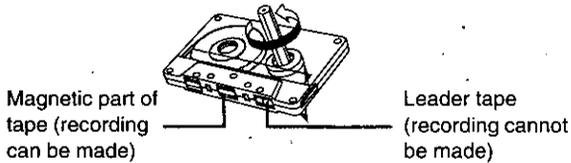

Type of tape which can be used for recording

| | |
|------------------------|---|
| Normal position/TYPE I | ○ |
| High position/TYPE II | × |
| Metal/TYPE IV | × |

The sound may not be recorded properly if high-position tapes and metal tapes are used with this unit.

Note


If the unit is brought near a TV set during recording, noise may be recorded due to the effects of the signals from the TV set. Maintain a distance of at least 1.5 meters between the unit and a TV set.

For your reference:

- Any change made to the volume or tone quality during recording will not affect the recording.
- In order to prevent trouble caused by flat batteries, it is recommended that you either supply power to the unit from the household AC outlet or replace all the batteries with new ones when you are recording something which is important to you.

Recording Radio Programs

Only normal tapes can be used.

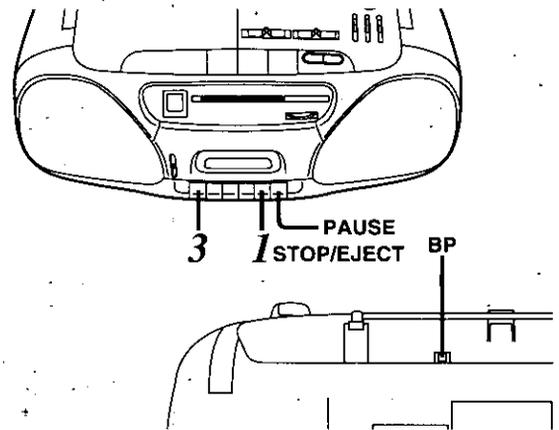

Preparation: Take up the leader tape before proceeding.

- 1**  **Press STOP/EJECT and load the tape.**
Load the tape with the side to be recorded facing you.

- 2** **Tune in the broadcast station.**
(See to page 9.)

- 3**  **Press [REC].**

To stop the recording:

-  **Press STOP/EJECT.**

To stop the recording temporarily:

Press PAUSE.


To resume recording, press PAUSE again.

■ When too much noise is heard while recording AM broadcast


Set BP to whichever position yields less noise.

Recording Compact Discs

Only normal tapes can be used with this unit for recording.

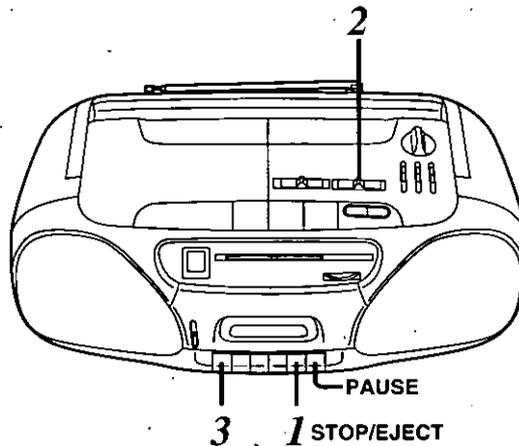

Preparation: Insert the CD.

 


Press STOP/EJECT and load the tape.

- Load the tape with the side to be recorded facing you.
- Either have the leader tape wound up in advance or locate the position where recording is to begin.



Set SELECTOR to "CD".

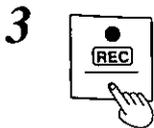

Press [REC] to start recording on the tape.

CD play starts simultaneously. Recording stops at the end of the tape. If the tape comes to the end while a track is still being recorded, the track will be only partially recorded.

To continue recording on the other side of the tape, remove the tape, turn it around, install it again, and start recording once more.

To stop the recording:



Press STOP/EJECT.

To stop the recording temporarily:

Press PAUSE.

To resume recording, press PAUSE again.

Recording your favorite tracks:

After step 2, press ◀◀ or ▶▶ and display the track number before pressing [REC] to start recording.

When the recording is completed, press STOP/EJECT to stop the tape.

For your reference:

- Any change made to the volume or tone quality during recording will not affect the recording.
- In order to prevent trouble caused by flat batteries, it is recommended that you either supply power to the unit from the household AC outlet or replace all the batteries with new ones when you are recording something which is important to you.

 
Concerning Compact Discs

Only compact discs having this mark can be used with this unit.




■ To remove a disc from its case

Press the center holder and lift the disc holding by the edges.




■ To hold the disc

 Hold the disc by the edges so the surface is not soiled with fingerprints. Fingerprints, dirt and scratches can cause skipping and distortion.




■ To store a disc in its case

Insert the disc with label facing upwards and press downward at the center.

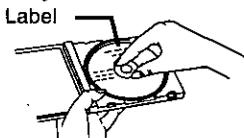

■ If the surface is soiled

 Wipe gently with a soft, damp (water only) cloth.



■ If the disc is brought from a cold to a warm environment, moisture may form on the disc

Wipe off with a soft, dry, lint-free cloth before using the disc.

Improper disc storage:

You can damage discs if you store them in the following places;

- Areas exposed to direct sunlight
- Humid or dusty areas
- Areas directly exposed to a heat outlet or heating appliance

Handling precautions:

- Do not write on the label side with a ball-point pen or other writing utensils.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not soil with fingerprints.

Concerning Cassette Tapes

■ Selection of cassette tapes

Cassette tapes of 100 minutes or longer:

These tapes are handy for their long playback and recording time but be careful about repeatedly stopping and starting, rewinding and fast forwarding these tapes in short intervals as they are thin, tend to stretch and may become entangled in the deck mechanism.


■ If the tape loosens, take up the slack

Tape slack may cause the tape to break.




■ To prevent erasure of recorded sounds

Remove the erase-prevention tabs with a screwdriver or a similar object.

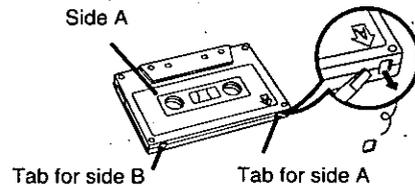

To re-record on a protected cassette, cover the slot with adhesive tape.

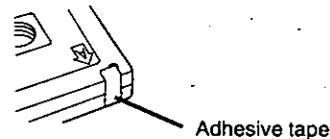

Improper tape storage:

You can damage tapes if you store them in the following places;

- In high temperature [35°C (95°F) or higher] or high humidity (80% or higher) areas
- In a strong magnetic field (near a speaker, on top of a TV, etc.)
This can erase a recording.
- Areas exposed to direct sunlight

To erase sound previously recorded on a tape:

Recording new sound onto a pre-recorded tape automatically erases what was previously recorded.

To erase all the sound on a tape:

Disconnect the microphone.

1. Load the tape with the side whose recording is to be erased facing you.
2. Set SELECTOR to TAPE/ **OFF**.
3. Press **[REC]**.

Troubleshooting Guide

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation.

If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

(In U.S.A. consult MSC Authorized Servicenters for detailed instructions or call 1-800-545-2672 for the address of an authorized factory servicenter.)

| Problem | Probable cause(s) | Suggested Remedy | Page |
|---------|-------------------|------------------|------|
|---------|-------------------|------------------|------|

Common problems

| | | | |
|---|---|---|---|
| No operation when unit is powered by dry batteries. | Is the AC power cable still connected to the unit while batteries are being used? | Disconnect the AC power cable. | 6 |
| | Are the batteries flat? | Replace them with new ones. Alternatively, use a household AC outlet as the power source. | 6 |
| | Have the batteries been installed incorrectly with their (+) and (-) polarities reversed? | Align the (+) and (-) polarities correctly. | 6 |

While listening to CDs

| | | | |
|--|---|---|----|
| Play does not start. No display of track numbers, etc. | Has the CD been installed upside down? | Install the CD with the label side facing up. | 10 |
| | Has condensation formed on the unit's CD section? | Turn on the power and leave it on for about an hour before further operation. | 3 |
| Certain sections are not played properly. | Is the CD dirty? | Wipe it with a soft cloth. | 13 |
| | Is the CD scratched? | Replace it with a new CD. | |

While listening to tapes

| | | | |
|--|---|---|----|
| Cassette is not ejected. | Are the batteries flat? | Replace them with new ones or, alternatively, use a household AC outlet as the power source and then try ejecting the cassette again. | 6 |
| No recording. | Have the tape's accidental erasure prevention tabs been broken out? | Cover the holes with adhesive tape. | 13 |
| High level of noise; poor sound quality. | Are the heads dirty? | Clean them. | 15 |
| | Have the heads been magnetized? | Demagnetize them using a head eraser available from an audio store. | 15 |

While listening to the radio

| | | | |
|--|---|---|---|
| High level of noise; stations cannot be tuned in well. | Has the antenna been adjusted properly? | Try changing its direction. | 9 |
| Noise heard during AM reception. | Are you using a remote controller near the unit? | Use the remote controller at a distance. | |
| | Are you operating the unit and a TV set at the same time? | Place the unit at a distance from the TV. Alternatively, turn off the TV's power. | |

Maintenance

■ Maintenance of external surfaces

Clean it with a cloth, dampened in a mild solution of soap and water.

Do not clean the cabinet with benzine or thinner.

Avoid excessive moisture.

Avoid spray aerosol type cleaner. Some cleaners contain corrosive chemicals that may cause internal damage and cabinet deformation.

■ Tape head care


To assure sound quality for recording and playback, be sure to clean the tape heads after approximately every 10 hours of use.

1. Open the cassette compartment cover by pressing STOP/EJECT.
2. Clean the tape heads, pinch rollers and the capstan shafts with a cotton swab (or a soft, lint-free cloth) slightly moistened with isopropyl alcohol.
Do not use any solution other than alcohol for head cleaning.



■ Lens care

Open the disc holder and clean the lens with a blower (not included). If the lens is extremely dirty, clean it with a cotton swab.

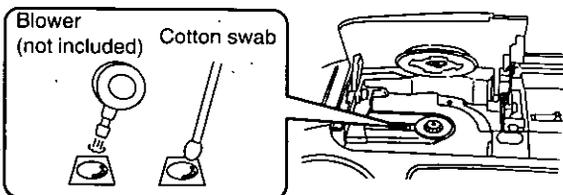

■ Head demagnetization

- In order to maintain good sound quality, it is recommended that the head assembly be demagnetized when distortion or poor sound quality persists after cleaning the head. If the head assembly becomes magnetized, it could create loss of high end frequency response.
- Several types of head demagnetizers are available and may be purchased separately at local electronics supply stores. Follow the instructions that are supplied with the device.
- Do not bring any type of metal objects or tools, such as magnetic screwdrivers, in contact with the head assembly.

Technical Specifications

■ Radio

| | |
|-----------------|--------------|
| Frequency range | 88-108 MHz |
| FM | 525-1705 kHz |
| AM | |

■ CD player

| | |
|--------------------|---|
| Sampling frequency | 44.1 kHz |
| Decoding | 16 bit linear |
| Beam source | Semiconductor laser (wavelength 780 nm) |
| No. of channels | 2 channel, stereo |
| Wow and flutter | Less than possible measurement data |
| D/A converter | MASH (1 bit DAC) |

■ Tape recorder

| | |
|--------------------------|----------------------------|
| Track system | 4 track, 2 channel, stereo |
| Recording system | AC bias |
| Erasing system | Multi-pole magnet |
| Monitor system | Variable sound monitor |
| Frequency range (Normal) | 50-12000 Hz |

■ General

| | |
|------------------------|---|
| Power requirement | 120 V, 60 Hz, |
| AC | Power consumption; 14 W |
| Battery | 9 V (Six "D" size, R20/LR20 batteries) |
| Speakers | 10 cm (4") x 2 |
| Output jack | Headphones; 2.0 mV, 32Ω |
| Dimensions (W x H x D) | 470 x 181 x 263 mm (18 1/2" x 7 1/8" x 10 1/2") |
| Weight | 3.6 kg (7 lb. 15 oz.) without batteries |

Note:

Specifications are subject to change without notice. Weight and dimensions are approximate.

MASH is a trademark of NTT.

Product Service

Do not attempt to remove the cover(s) or repair the unit yourself. Refer servicing to qualified personnel only.

Product information

For product service, product information or assistance with product operation, refer to the servicenter directory.

**Matsushita Consumer Electronics
Company, Division of Matsushita
Electric Corporation of America**
One Panasonic Way Secaucus,
New Jersey 07094

**Panasonic Sales Company,
Division of Matsushita Electric of
Puerto Rico, Inc. ("PSC")**
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park, Carolina,
Puerto Rico 00985

**Matsushita Electric of
Canada Limited**
5770 Ambler Drive,
Mississauga, Ontario
L4W 2T3