


Portable Stereo CD System

Panasonic®

RX-ES30

Operating Instructions

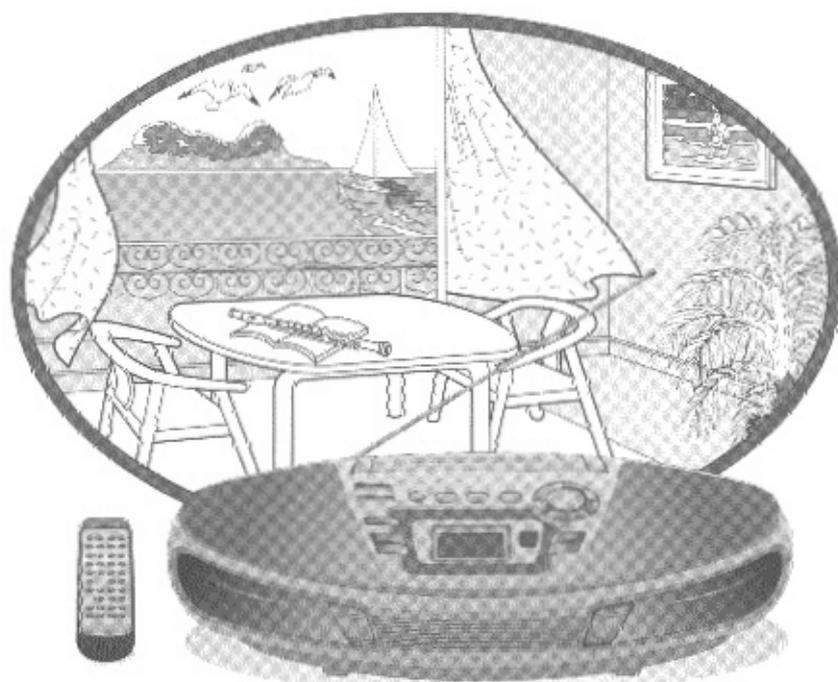

COMPACT
disc
DIGITAL AUDIO

Before connecting, operating or adjusting this product, please read these instructions completely. Please save this manual.

P **PC**

RQT4760-P

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully.

The model number and serial number of this product can be found on either the back or the bottom of the unit. Please note them in the space provided below and keep for future reference.

MODEL NUMBER RX-ES30
SERIAL NUMBER

User memo:

DATE OF PURCHASE
DEALER NAME
DEALER ADDRESS
TELEPHONE NUMBER

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CAUTION:

TO PREVENT ELECTRIC SHOCK MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPLIANCE TO RAIN, SPLASHING, DRIPPING OR MOISTURE.

The following mark and symbols are located on bottom of the unit.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE SCREWS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Before use

Supplied Accessories 2
Precautions 3
Concerning the Remote Control 4
Power Sources 5
Location of Controls 6
Using Headphones 7
Setting the Clock 8
Selecting the Display 8

Listening

Changing the Sound Quality 9
Listening to the Radio 10
Listening to CDs 12
Listening to Cassettes 15

Recording

Before Recording 17
Recording Radio Programs 18
Recording from CDs 19


Timer

Using the Timer 22

Reference


Concerning compact discs 26
Concerning cassette tapes 26
Troubleshooting Guide 27
Technical Specifications Back cover
Maintenance Back cover
Product service Back cover

Supplied Accessories

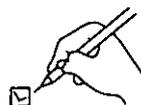

Please check and identify the supplied accessories. Use numbers indicated in parentheses when asking for replacement parts. (Only for U.S.A.) To order accessories contact 1-800-332-5368 or web site (http://www.panasonic.com).

- AC power cord (polarized) (RJA0065-A) 1pc.

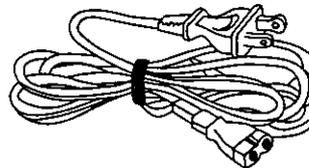

- Remote control transmitter (RAK-RX949WK) 1pc.



Precautions

Before using this unit please read these operating instructions carefully. Take special care to follow the warnings indicated on the unit itself as well as the safety suggestions listed below. Afterwards keep them handy for future reference.

Safety

1. **Power Source**—The unit should be connected to power supply only of the type described in the operating instructions or as marked on the unit.
2. **Polarization**—If the unit is equipped with a polarized AC power plug (a plug having one blade wider than the other), that plug will fit into the AC outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
3. **Power Cord Protection**—AC power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Never take hold of the plug or cord if your hand is wet, and always grasp the plug body when connecting or disconnecting it.
4. **Nonuse Periods**—When the unit is not used, turn the power off. When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

Installation

Environment

1. **Water and Moisture**—Do not use this unit near water—for example, near a bathtub, washbowl, swimming pool, or the like. Damp basements should also be avoided.
2. **Condensation**—Moisture may form on the lens in the following conditions...
 - immediately after a heater has been turned on.
 - in a steamy or very humid room.
 - when the unit is suddenly moved from a cold environment to a warm one.If moisture forms inside this unit, it may not operate properly. To correct this problem, turn on the power and wait about one hour for the moisture to evaporate.
3. **Heat**—The unit should be situated away from heat sources such as radiators and the like. It also should not be placed in temperatures less than 5°C (41°F) or greater than 35°C (95°F).

Placement

1. **Ventilation**—The unit should be situated so that its location or position does not interfere with its proper ventilation. Allow 10 cm (4") clearance from the rear of the unit.
2. **Foreign Material**—Care should be taken so that objects do not fall into and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration, or shock.
3. **Magnetism**—The unit should be situated away from equipment or devices that generate strong magnetic fields.
4. **Stacking**—Do not place heavy objects, other than system components, on top of the unit.
5. **Surface**—Place the unit on a flat, level surface.
6. **Carts and Stands**—The unit should be used only with a cart or stand that is recommended by the manufacturer. The unit and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the unit and cart combination to overturn.
7. **Wall or Ceiling Mounting**—The unit should not be mounted to a wall or ceiling, unless specified in this operating instructions.



Maintenance

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

Service

1. **Damage Requiring Service**—The unit should be serviced by qualified service personnel when:
 - (a) The AC power supply cord or the plug has been damaged; or
 - (b) Objects have fallen or liquid has been spilled into the unit; or
 - (c) The unit has been exposed to rain; or
 - (d) The unit does not appear to operate normally or exhibits a marked change in performance; or
 - (e) The unit has been dropped, or the enclosure damaged.
2. **Servicing**—The user should not attempt to service the unit beyond that described in the operating instructions. All other servicing should be referred to an authorized service personnel.

For the address of an authorized servicenter:
In the U.S.A. 1-800-211-7262 or web site
(<http://www.panasonic.com>)
In Canada 905-624-5505 or web site
(www.panasonic.ca/feedback.html)

THE FOLLOWING APPLIES ONLY IN THE U.S.A.:

CAUTION:



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Notice: This system complies with new Part 15, except for the radio receiver, which complies with old Part 15, Subpart C of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation. The radio receiver is not subject to above item (2).

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

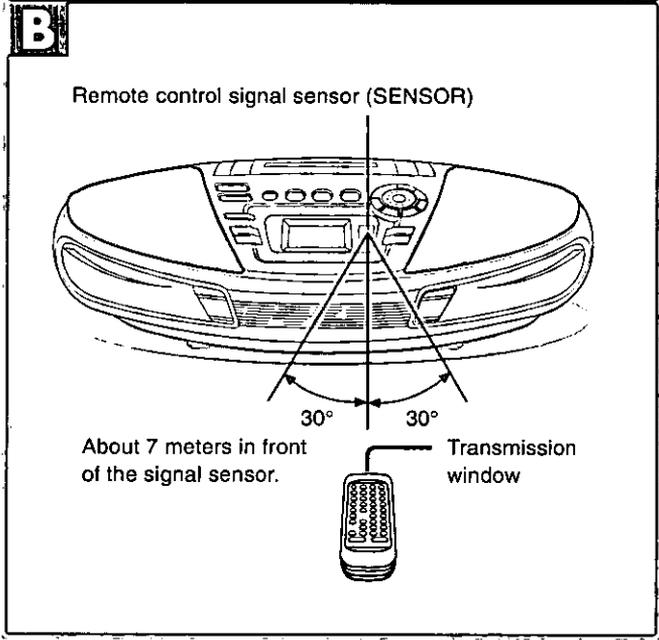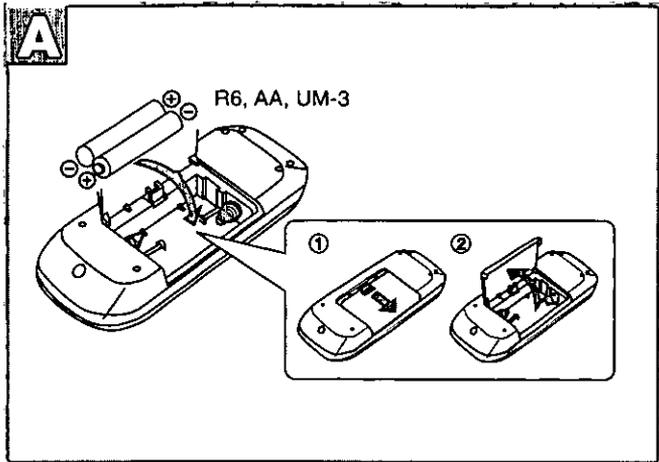

Precautions

Listening caution



Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion—and, most importantly, without affecting your sensitive hearing.

We recommend you to avoid prolonged exposure to excessive noise.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing.

Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

Concerning the Remote Control

Battery (not included) installation and removal

A

Remove the batteries by pulling the positive side (⊕) of the battery up.

Correct method of use

B

Operation notes

- Do not place obstacles between the remote control signal sensor and remote control unit.
- Do not expose the remote control signal sensor to direct sunlight or to the bright light of an inverter fluorescent light.
- Take care to keep the remote control signal sensor and end of the remote control unit free from dust.

To prevent damage

- Never place heavy items on it.
- Do not disassemble or reconstruct it.
- Do not spill water or other liquids on it.

Power Sources

Operating unit on AC power

Connect the included AC power cord to the [AC IN ~] socket of the unit and your household AC outlet.

Operating unit on battery power (Not included)

Battery installation and removal

Place unit on a soft cloth when installing and removing batteries to avoid damaging the front panel.

- 1 Open the battery cover on the rear panel.
- 2 Install batteries in the order indicated in the diagram.

Remove batteries by inserting your finger into opening at the bottom of the unit and pushing out. 

When to replace the batteries

When the batteries are weak:

" " starts to flash and "U01" appears on the display, then the unit automatically turns itself off.

Be sure to replace all batteries with new ones.

Memory batteries (Not included)

What is memory?

Memory is the information which can be programmed into the unit such as:

- Time
- Time programming
- CD programming
- Radio stations

If memory batteries are not used, the memory is cancelled at the following times.

- In electric failures
- When the AC power cord is removed from the AC outlet
- When using batteries as the power source, the AC power cord is inserted into the unit while disconnected from the AC outlet


Battery installation and removal

Lift the negative end of the number 4 battery to remove batteries.


Replacing batteries

- The service life of these batteries is approximately one year. To preserve the memory, connect the AC power cord to the household AC outlet before replacing all the memory batteries with new ones.
- When disconnecting the AC power cord, first turn the unit off by pressing [POWER ]. The service life of the memory back-up batteries is reduced if the AC power cord is disconnected from the household AC outlet with the power still supplied.


A

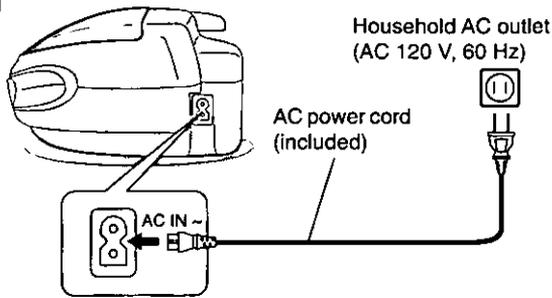


B

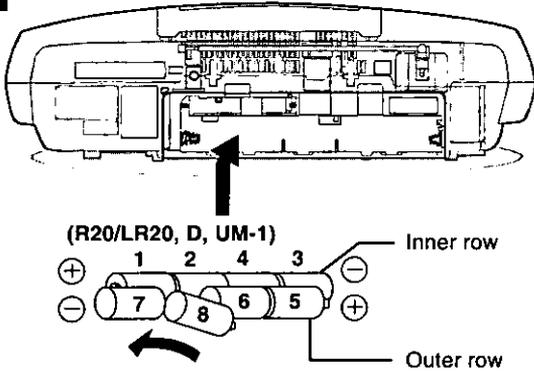


C

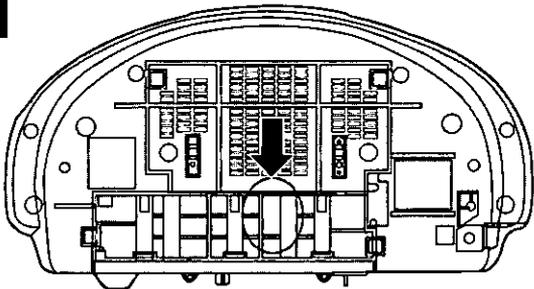




D

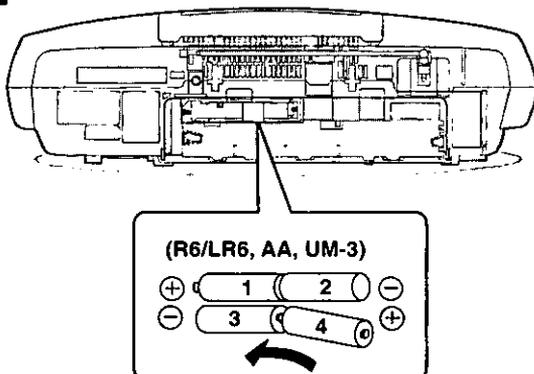

E

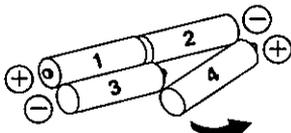

Before use

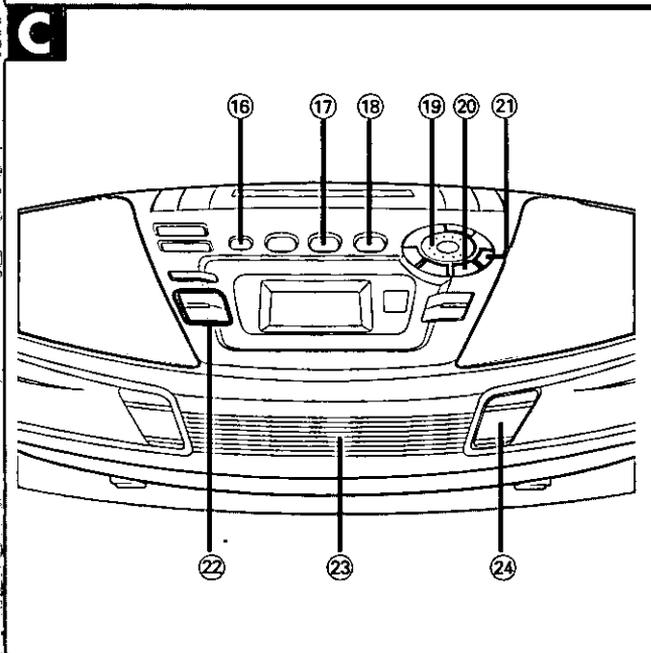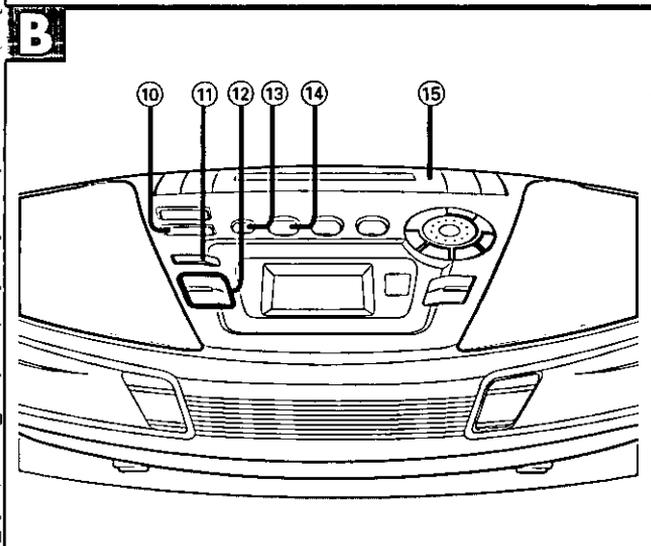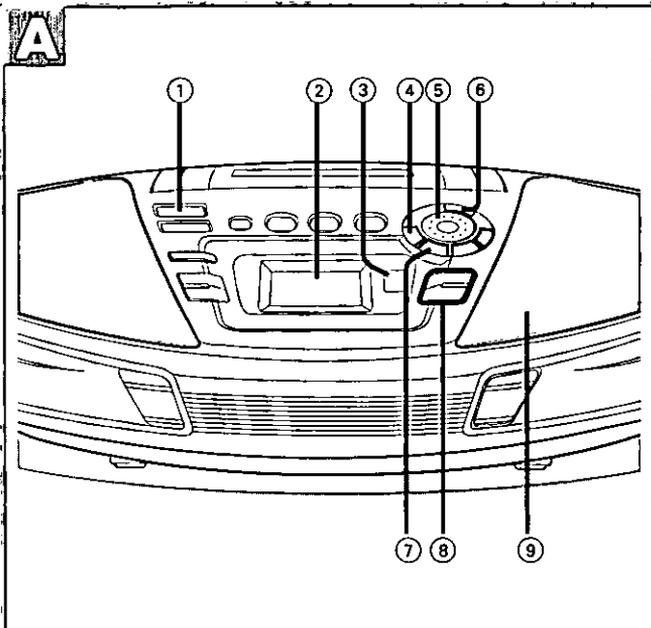

Basic controls

Number	Designation	Reference Page
①	Standby/on switch (POWER ψ /I)	
	Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.	
②	Display panel	
③	Remote control signal sensor (SENSOR)	4
④	Play timer/record timer button (\odot PLAY/REC)	22-24
⑤	Time adjust/preset tuning/CD track select/equalizer jog (\llcorner / \vee \longleftarrow \longrightarrow \triangleright / \wedge)	8, 9, 11, 12
⑥	Equalizer mode button (EQ MODE)	9
⑦	Clock/timer button (CLOCK/TIMER)	8, 22, 23, 24
⑧	Volume control buttons (VOLUME +, -)	10
⑨	Speaker	


Cassette deck controls

Number	Designation	Reference Page
⑩	Deck eject button (DECK \blacktriangle)	15
⑪	Record/record pause button (\bullet / \bullet REC/REC PAUSE)	18, 19
⑫	Fast forward/rewind/TPS buttons (FF $\overline{\text{TPS}}$ / + / \blacktriangleright , REW $\overline{\text{TPS}}$ / - / \blacktriangleleft)	16
⑬	Tape mode select/stop button (\blacksquare TAPE/CD)	15
⑭	Cassette play/direction button (\blacktriangleleft \blacktriangleright TAPE)	15
⑮	Deck	

Tuner/CD controls

Number	Designation	Reference Page
⑯	CD mode select/stop button (\blacksquare TAPE/CD)	12
⑰	Band button (TUNER BAND)	10
⑱	CD play/pause button (\blacktriangleright / CD)	12
⑲	Preset tuning/CD track select jog (\llcorner / \vee \longleftarrow \longrightarrow \triangleright / \wedge)	11, 12
⑳	CD program/clear, tuner preset button (\bullet MEMORY - CLEAR)	11, 14
㉑	CD recording mode button (CD REC MODE)	20, 21
㉒	Tuning/CD search buttons (FF $\overline{\text{TPS}}$ / + / \blacktriangleright , REW $\overline{\text{TPS}}$ / - / \blacktriangleleft , TUNING)	10, 12
㉓	CD tray	
㉔	CD tray open button (\blacktriangle CD OPEN)	12

Location of Controls

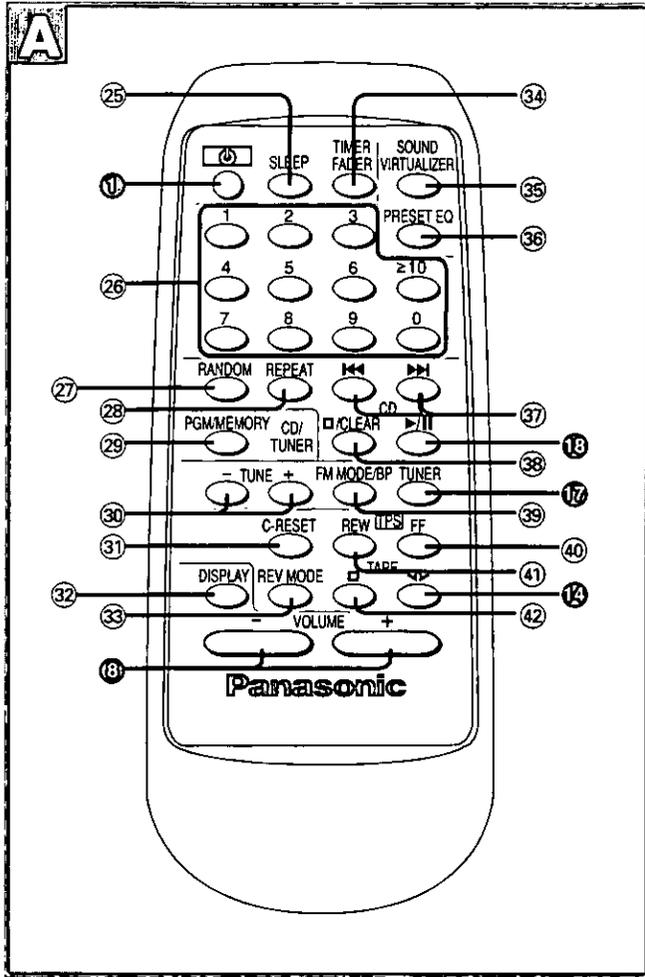

Remote Control

Number	Designation	Reference Page
25	Sleep timer button (SLEEP)	24
26	Numbered button	11,13,14
27	Random play button (RANDOM)	13
28	Repeat button (REPEAT)	13
29	CD program/tuner memory button (PGM/MEMORY)	11, 14
30	Tuning buttons (-TUNE +)	10
31	Tape counter reset button (C-RESET)	16
32	Display select button (DISPLAY)	8
33	Reverse mode select button (REV MODE)	15
34	Timer fader button (TIMER FADER)	25
35	Sound virtualizer button (SOUND VIRTUALIZER)	9
36	Preset EQ button (PRESET EQ)	9
37	CD skip/search buttons (◀▶)	12
38	CD stop/program clear button (■/CLEAR)	12, 14
39	FM mode/BP button (FM MODE/BP)	10, 18
40	Fast forward/TPS button (TPS FF)	16
41	Rewind/TPS button (REW TPS)	16
42	Tape stop button (■)	15

When the unit is supplied with AC power, buttons such as 1 functions the same way as the buttons on the main unit. To save power, the unit cannot be turned on from the remote control when batteries are used.


Using Headphones B

Lower the volume and connect the headphones (not included).




Plug type: 3.5 mm stereo

Note

Avoid listening for prolonged periods of time to prevent hearing damage.

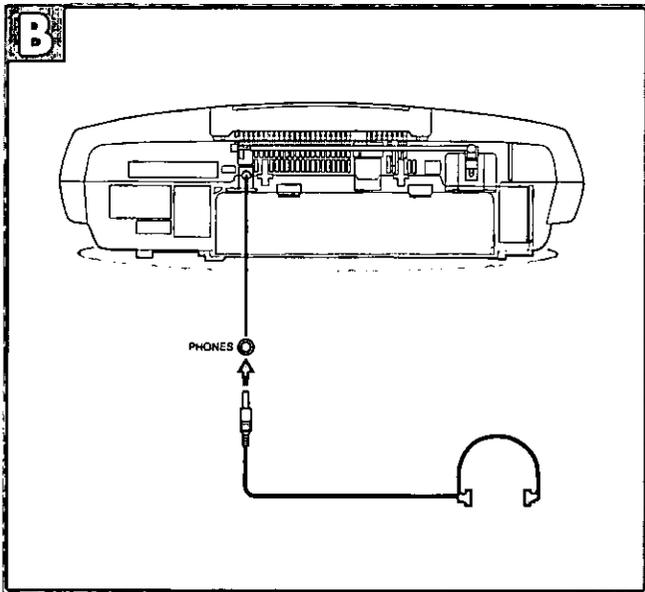

Before use

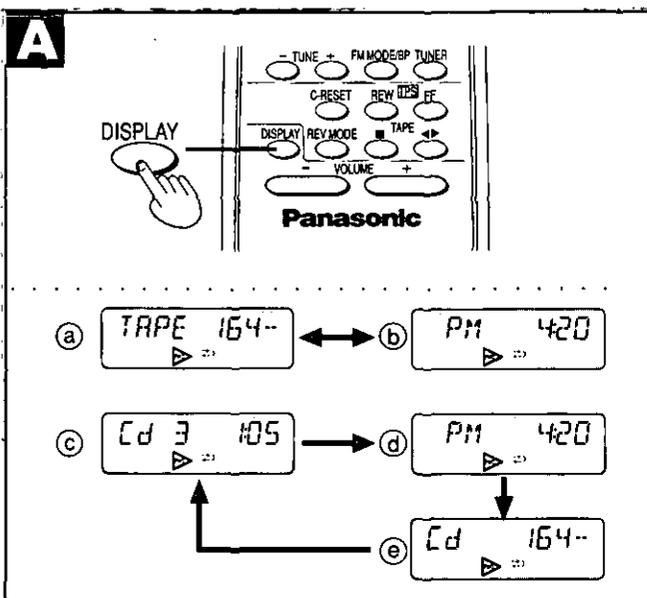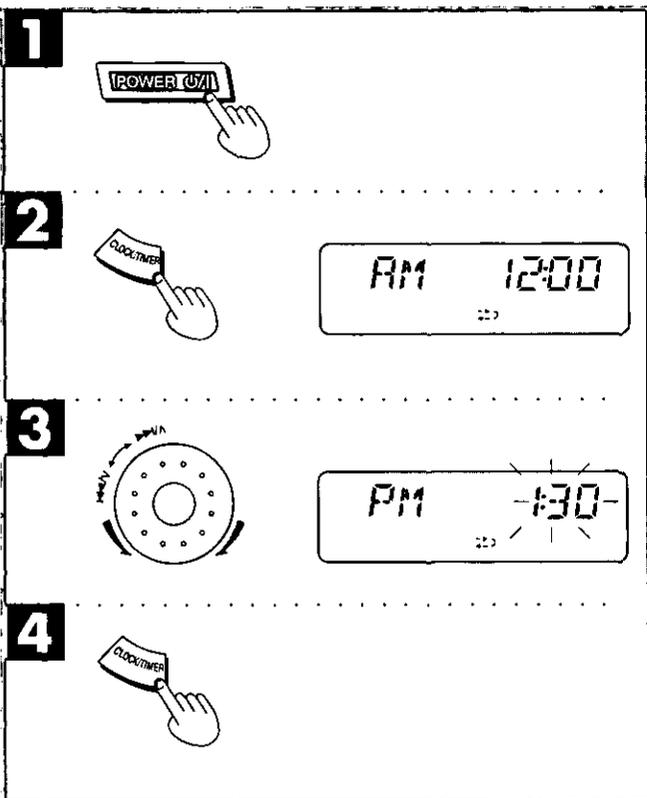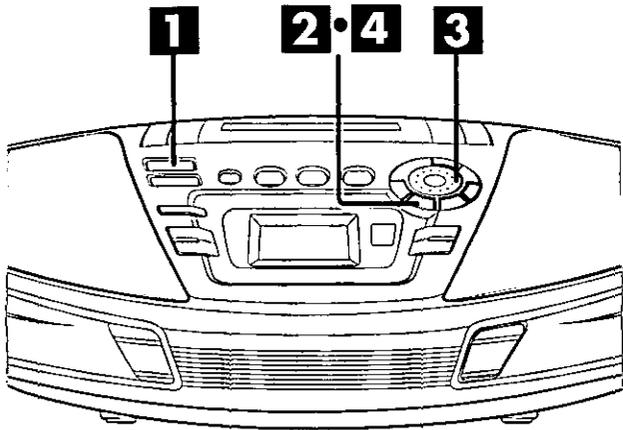

Setting the Clock

The clock has a 12-hour display.
 Example: Setting the clock to 1:30 p.m.;

- 1** Press [POWER].
 (This turns the unit on.)
- 2** Press [CLOCK/TIMER].
 Clock is displayed.

Clock → ON PLAY → OFF PLAY →
 Original display ← OFF REC ← ON REC ←

 (The display changes each time the button is pressed.)
- 3** Dial [/ / /] to show desired time.
 The time display can be changed in one minute units by dialing the jog.
Hint
 If the jog is dialed in quick succession, the time display will change in 10 minute units.
- 4** While the time display is flashing:
 Press [CLOCK/TIMER].
 The clock now starts operating, and the display returns to its original status.

To display the clock (When the unit is on): **A**
 (Available only from the remote control)

Press [DISPLAY] when the unit is on.

Selecting the Display **A**

(Only from the remote control)

Press [DISPLAY] when the unit is on.
 The display changes each time the button is pressed.

- When using the cassette
 - (a) Tape counter
 - (b) Present time
- When using the radio or CD
 - (c) Frequency/play status
 - (d) Present time
 - (e) Tape counter

"----" appears on the tape counter display when a cassette has not been inserted.

Selecting equalizer effects

Four types of sound quality can be selected.

- 1** Press [EQ MODE].
(The present sound quality effect will display.)
- 2** Dial [◀◀/√↔▶▶/∧] to select desired sound quality.
When it is turned clockwise, the displayed image of the sound quality effect changes in the following sequence.

- ① Gives added punch to rock and other music (XBS)
- ② Lightens pop and other music (CLEAR)
- ③ Softens music (SOFT)
- ④ Enhances vocals (VOCAL)
- ⑤ No sound quality effects used

When using the remote control **A**

Press [PRESET EQ].

The displayed image of a sound quality effect changes each time the button is pressed.

Note

- Recordings are not affected by changes in sound quality.
- The effect when listening through headphones is different to that heard from the speakers.
- Select a different sound quality if treble sounds are too strong.

Using the "live" effect (Sound Virtualizer) **B**

(Only from the remote control)

The "live" effect allows enjoyment of the 3-D feeling listening to live music. Compared with earlier surround sound systems, the sound virtualizer leaves middle-range sounds such as vocals clear and gives natural width and depth to music. Sound virtualizer is effective with stereo sound.





Press [SOUND VIRTUALIZER] to display "■ ■ ■ ■ ■ ■ ■ ■ ■ ■".


To cancel:

Press [SOUND VIRTUALIZER] to clear the "■ ■ ■ ■ ■ ■ ■ ■ ■ ■" indicator.

Note

- The effect is not as apparent when listening through headphones.
- Cancel this effect if noise increases when listening to FM radio.
- Recordings are not affected by changes in sound quality.

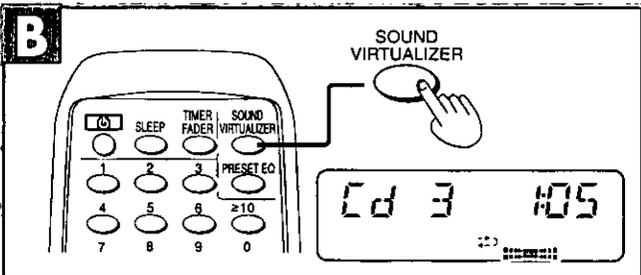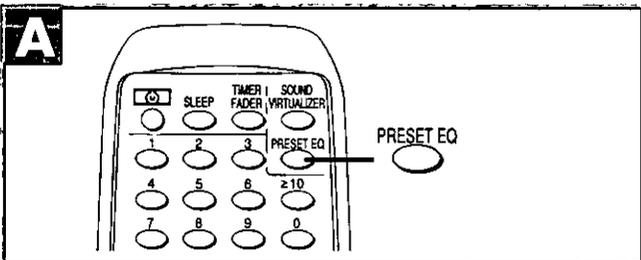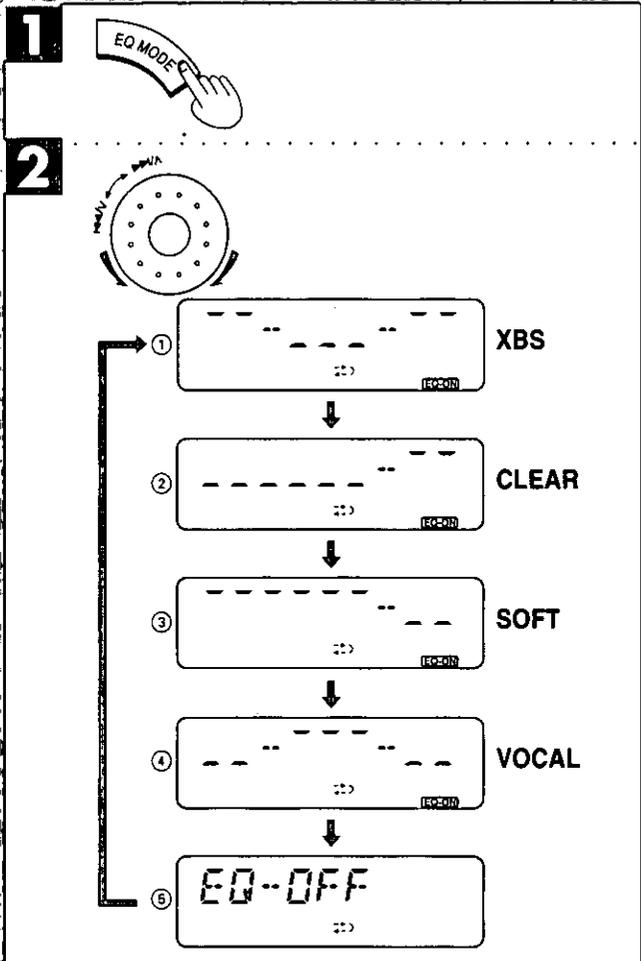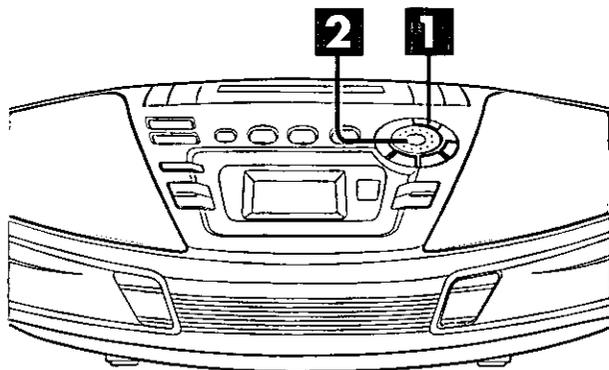


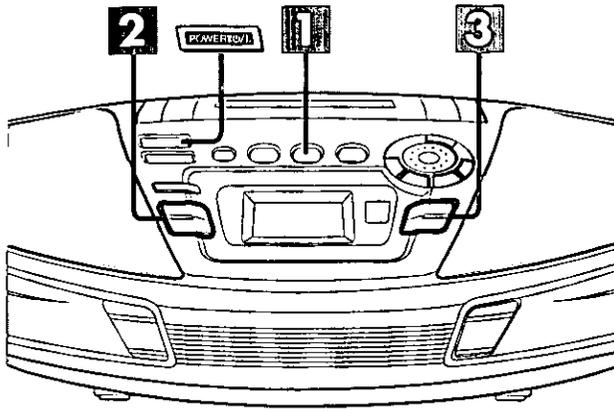

1 **TUNER BAND**

2 **TUNING**

3 **VOLUME**

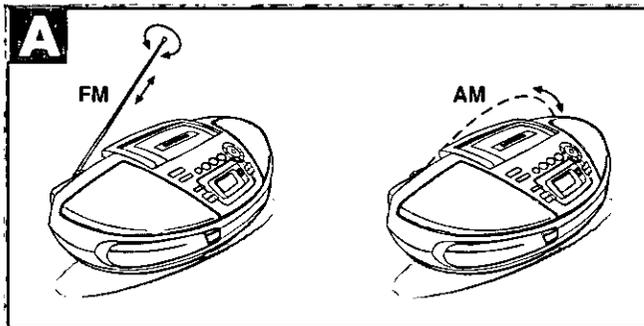

B

Panasonic

Listening to the Radio

Normal tuning

Press **[POWER ⏻/⏻]**.

(When using batteries for the power supply)

1 Press **[TUNER BAND]** to display "AM" or "FM".
AM ↔ FM
(The display changes each time the button is pressed.)

2 Press **[+]** or **[-]** to select the station.
"STEREO" lights when stereo broadcasts are being received.

Automatic tuning:

Keep **[+]** or **[-]** depressed until the frequency display starts to change. A station with good reception is automatically selected and the selection process then stops.

To stop automatic tuning, press **[+]** or **[-]** again.

Note

Automatic tuning may stop without a station having been tuned in when interference is encountered on neighbouring airwaves. In such a case, tune in a station by tapping **[+]** or **[-]**.

3 Adjust the volume level.

Hint

- Pressing **[TUNER BAND]** will automatically turn the unit on and receive the station which was previously tuned (only when AC power is supplied).
- The volume can be adjusted even in the unit off mode. (Available only from the main unit)

Note

- The unit cannot be turned on from the remote control when batteries are being used to power the unit.
- Sound is momentarily interrupted if you load/unload tapes while listening to an AM broadcast.

Improving reception

Adjust the length and direction of the whip antenna for FM, and change the direction of the unit for AM.

Note

Radio broadcasts may be hard to receive in a moving vehicle or building because their signals are weak. In such cases, use the unit near a window.

When interference of FM stereo reception occurs

(Available only from the remote control)

Press **[FM MODE/BP]**.

The "MONO" display appears.

Monaural sound is selected but noise is reduced and sound becomes clearer.

To return to stereo sound, press **[FM MODE/BP]** again to turn off the "MONO" display.

Leave the "MONO" display off to listen to FM stereo programs.

FM allocation setting

By adjusting the allocation, you can enable this tuner to receive FM broadcasts allocated in 0.1 MHz steps.

1 Press **[TUNER BAND]** to select AM.
2 Press and hold **[TUNER BAND]** for approximately 5 seconds.

The frequency display will return to the minimum frequency of the FM band and the display will begin to flash. Keep holding for approximately 5 more seconds.

3 When the display stops flashing and indicates a different frequency number, release **[TUNER BAND]**.

To return to the original frequency, repeat steps **1** to **3** above.

Note

After changing the "allocation" setting, the frequencies you previously preset into the memory will be cleared.

Listening to the Radio

Preset tuning

Once stations have been programmed, they can easily be tuned in.
Ten FM and ten AM stations can be programmed.

Programming stations

Preset radio stations on the FM and AM bands.

- 1** Press [TUNER BAND] to display "AM" or "FM".
AM ↔ FM
(The display changes each time the button is pressed.)
- 2** Press [+] or [-] to select the station.
- 3** Press [●MEMORY - CLEAR] once.
"PGM" flashes.
- 4** While "PGM" is flashing:
Dial [◀◀/V ↔ ▶▶/∧] to select the preset channel to be programmed.
- 5** While "PGM" is flashing:
Press [●MEMORY - CLEAR].
If the "PGM" indicator goes out during programming, return to step **3**.
- 6** Repeat steps **2** to **5** to program other stations.

Selecting the preset channel


- 1** Press [TUNER BAND] to display "AM" or "FM".
- 2** Dial [◀◀/V ↔ ▶▶/∧] to select the preset channel. **A**
▶▶/∧ : Up
◀◀/V : Down

To select a preset channel with the remote control
Press the numbered buttons. **B**
To select number 10
[≥10] → [1] → [0]

To skip an unwanted preset channel

Example: If channel 3 is not needed

- 1** Select number 3 (steps **1** and **2** above).
- 2** Press [●MEMORY - CLEAR] ("PGM" flashes).
- 3** While "PGM" is flashing, dial [◀◀/V ↔ ▶▶/∧] until "--" is displayed.

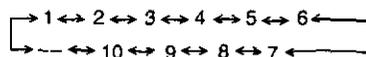





(The display changes each time the jog is dialed.)


- 4** Press [●MEMORY - CLEAR].

The next time you select preset numbers, 3 is skipped.
1 → 2 → 4 → 5...

Noté

The cleared number can still be selected with the remote control's numbered buttons.

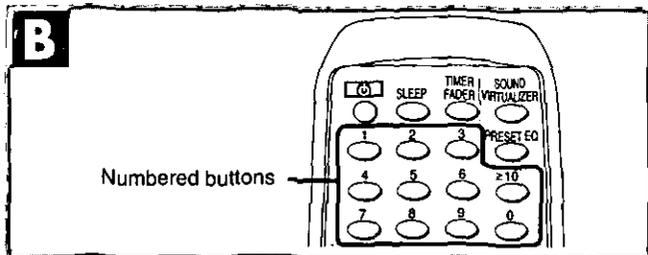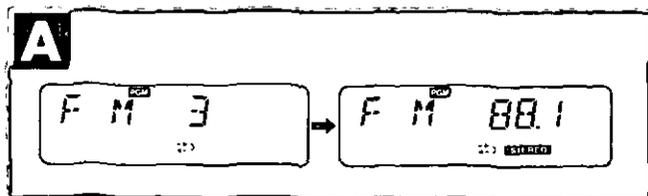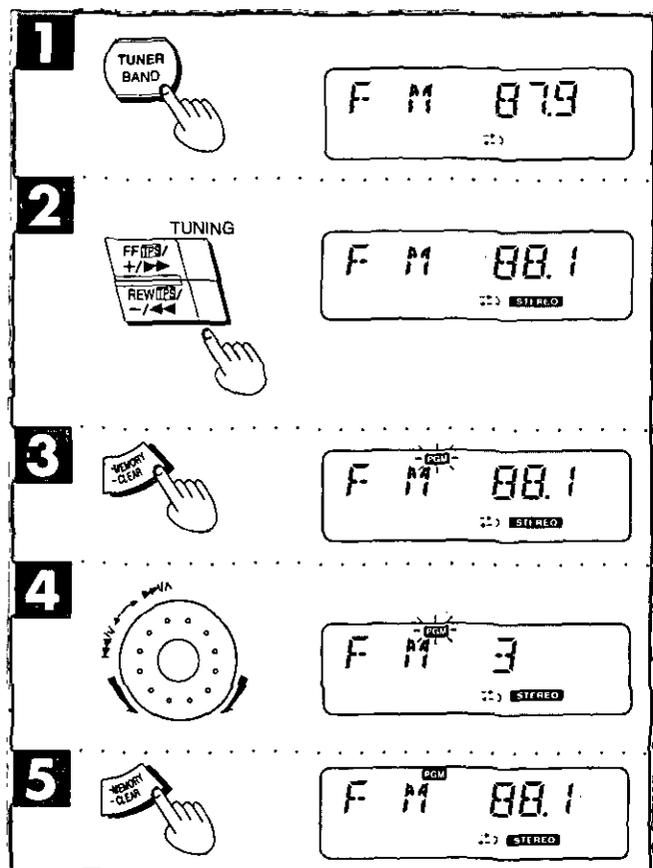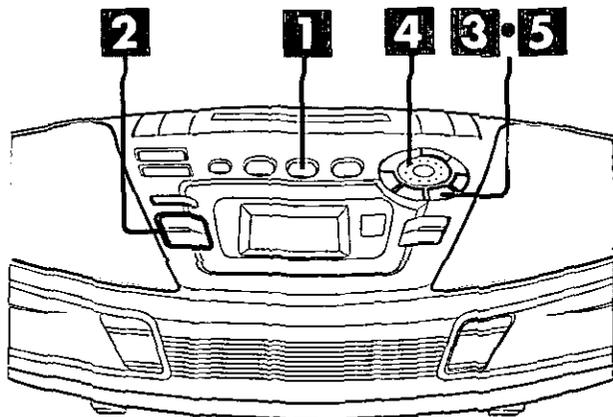

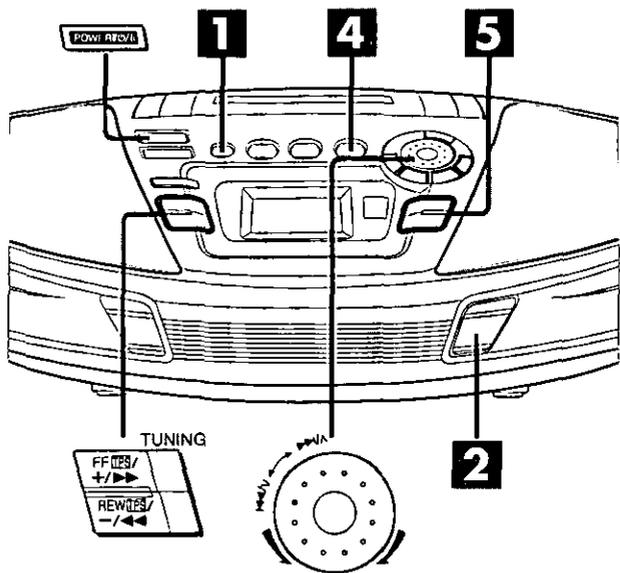

1

2

3

4

5

A

Listening to CDs

Normal play

Press [POWER \odot /I].

(When using batteries for the power supply)

- 1** Press [TAP/CD] to select the CD mode.
TAP \leftrightarrow Cd
(The display changes each time the button is pressed.)
"NO DISC" indicates a disc has not been inserted.
- 2** Press [CD OPEN], then insert a CD.
Insert the CD with the label facing up.
- 3** Push the CD tray to close it.
- 4** Press [▶/|| CD].
Plays to the last track and automatically stops.
- 5** Adjust the volume level.

To stop playing:

Press [TAP/CD].

To stop play from the remote control

Press [M/CLEAR].

Press [▶/|| CD] to pause play.

Press [▶/|| CD] to return to play mode.

Note

- The unit cannot be turned on from the remote control when batteries are being used to power the unit.
- If interference occurs to radios or televisions, place the unit further away from this equipment.
- Do not use irregular shaped CDs. **A**

Hint

- Pressing [▶/|| CD] automatically turns the unit on, and if a CD is inserted, begins play (only when AC power is supplied).
- The volume can be adjusted even in the unit off mode. (Available only from the main unit)

Skipping tracks

Main unit : Dial [◀◀/V ↔ ▶▶/∧] to skip tracks.

Remote control : Press the button once for each track to be skipped.

	Backward	Forward
Main unit	◀◀/V	▶▶/∧
Remote control	◀◀	▶▶

Searching backward and forward

Keep the button pressed during play or pause mode.

	Backward	Forward
Main unit	◀◀	▶▶
Remote control	◀◀	▶▶

Listening to CDs

Starting play from a selected track (Direct play)

(Only from the remote control)

Preparation : Press [■/CLEAR].

If "PGM" is illuminated, press [■/CLEAR] again to clear it.

Select the track number with the numbered buttons. Play starts at the selected track and continues to the last track.

To select a track numbered 10 or more

Example

Track 20: [≥10] → [2] → [0]

Track 35: [≥10] → [3] → [5]

Repeating tracks

(Only from the remote control)

Press [REPEAT] before or during play.

1- [REPEAT] → [REPEAT] → off (no display)

(The display changes each time the button is pressed.)

Press [▶/||] to begin play if you are in the stop mode.

To repeat only one track:

Press [REPEAT] to display "1- [REPEAT]". **A**

To repeat all tracks on the CD:

Press [REPEAT] to display "[REPEAT]". **B**

To repeat programmed tracks:

① Program desired tracks (steps 1 to 4 on page 14).

② Press [REPEAT] to display "[REPEAT]".

③ Press [▶/||] to begin play.

To clear the repeat function:

Press [REPEAT] to cancel "1- [REPEAT]" or "[REPEAT]".

Pressing [▲ CD OPEN] will cancel repeat function.

Random play

(Only from the remote control)

1 Press [■/CLEAR] to select the CD mode.

2 Press [RANDOM] when CD is in stop mode. "RANDOM" is not displayed if pressed when CD is in play mode.





3 Press [▶/||]. All tracks play at random, and play automatically stops.


To cancel random play:

- Press [RANDOM] to clear "RANDOM" display. If cancelled during random play, the CD plays from the track in play to the end of the CD, and automatically stops.
- Pressing [▲ CD OPEN] will cancel random function.

Note

- Random play cannot be used in combination with program play.
- Skipping to tracks which have already been played is not possible.
- Searching forward and backward are possible only within the track in play.
- Tracks cannot be selected with the remote control's numbered buttons during random play. ("E" is displayed.)

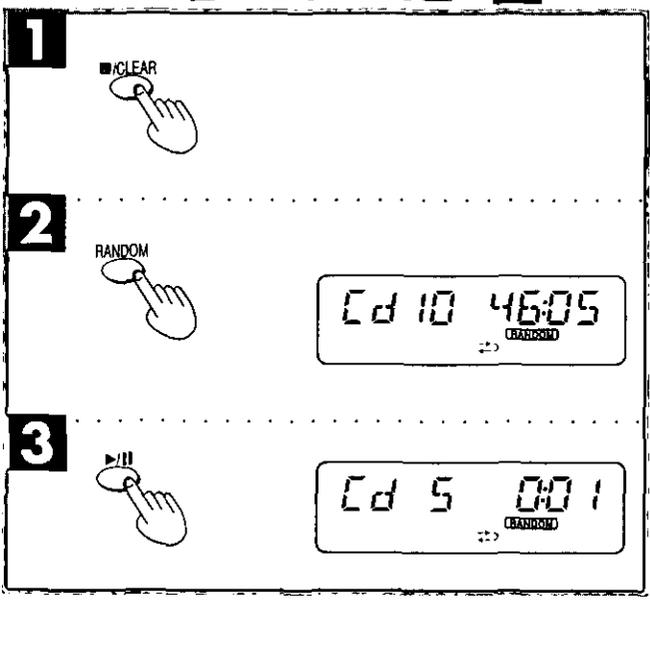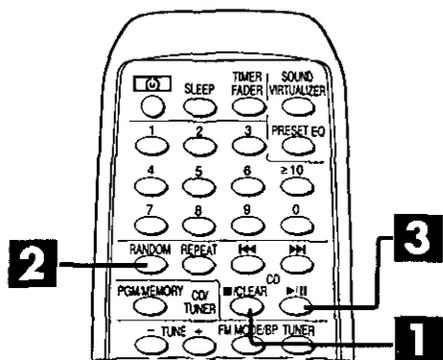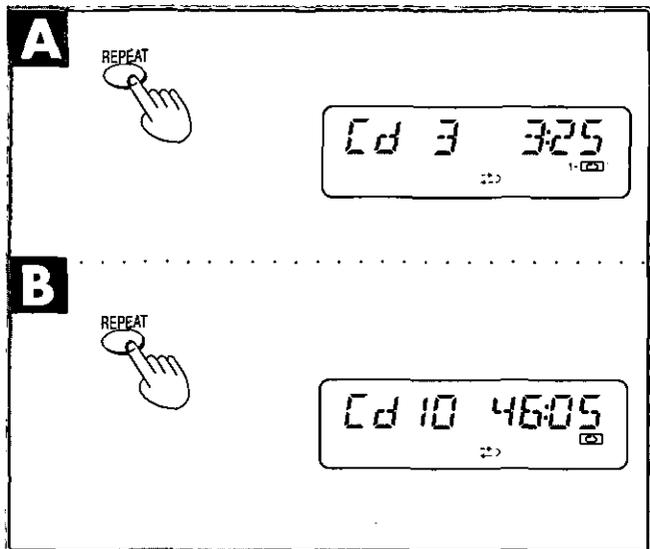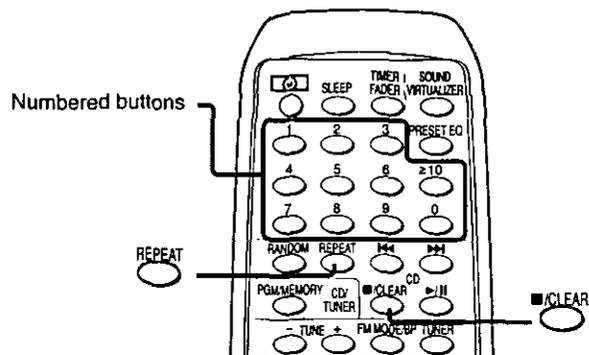

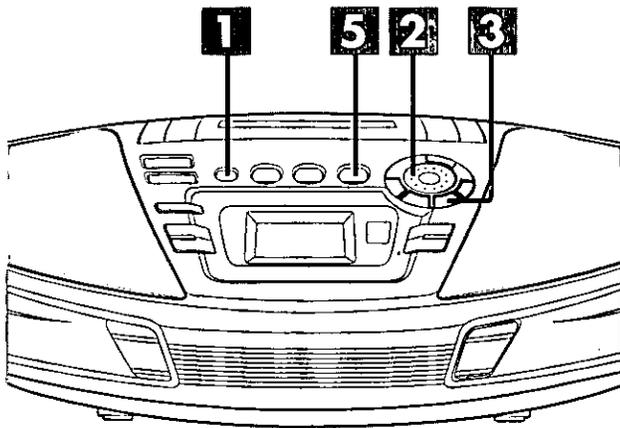


1 Total number of tracks Total play time

2 Track number Play time

3 Programmed track Play sequence

4 Total play time of programmed tracks

5

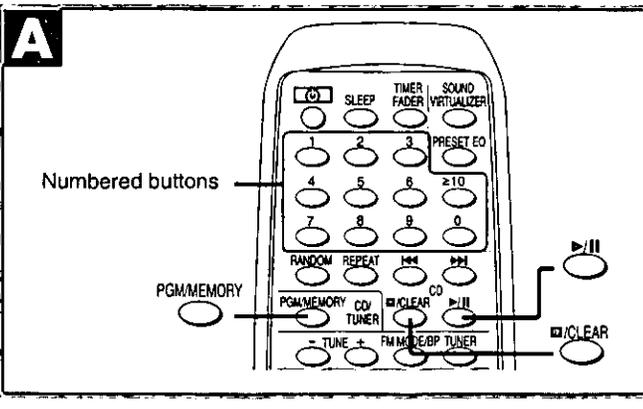

Listening to CDs

Selecting and listening to favourite tracks (Program play)

Up to 36 tracks can be programmed.

- 1** Press [TAPE/CD] to select the CD mode. When "RANDOM" is displayed, press [RANDOM] on the remote control to clear the display.
- 2** Dial [◀◀/V ↔ ▶▶/∧] to select the desired track.
- 3** Press [MEMORY - CLEAR] to record the selection.
- 4** Continue programming by repeating steps 2 and 3.
- 5** Press [▶/|| CD]. Selected tracks play in the programmed sequence, and play automatically stops.

When using the remote control

- 1 Press [CD/CLEAR] to select the CD mode.
- 2 Press [PGM/MEMORY]. "PGM" illuminates.
- 3 Press the numbered buttons to select the track to be programmed.
- 4 Press [▶/||].

To cancel program play:

(From the main unit)
Keep [MEMORY - CLEAR] pressed when CD is in stop mode until "CLEAR" is displayed.
(From the remote control)
Press [CD/CLEAR] when CD is in stop mode to display "CLEAR". Pressing [▲ CD OPEN] will cancel program function.

When " - - - " is displayed:

Total play time of the programmed tracks exceeds 100 minutes. Tracks can still be programmed and played.

When "FULL" is displayed:

36 tracks have already been programmed. No further tracks can be programmed.



Memory retention of programmed tracks:

Track programming is retained even if play is stopped or the unit is turned off. The display "Cd-P" indicates that programming is retained in the memory.

To check programming:

While "Cd-P" display is on, dial [◀◀/V ↔ ▶▶/∧]. The track number and its play sequence can be checked each time the jog is dialed.

Listening to Cassettes

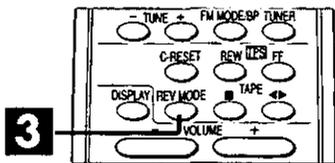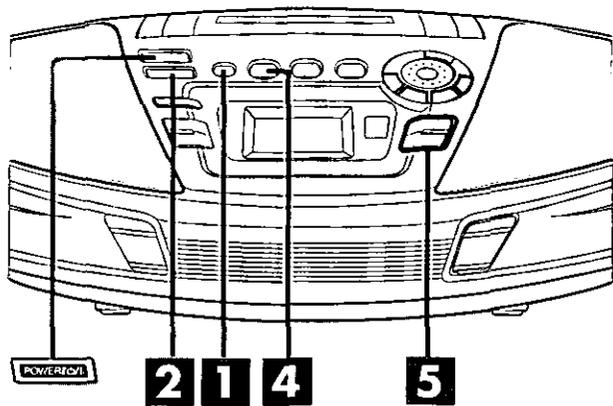

1 TAPE

2 Side to be played back facing up

Insert the tape with the exposed tape facing you.

3 TAPE 000

4 TAPE 001

Tape travel direction indicator


5 VOL 15

Types of tapes which can be played on this unit:
The unit automatically identifies the type of tape.

Normal position/TYPE I	OK
High position/TYPE II	OK
Metal position/TYPE IV	OK

Press [POWER ψ /I].
(When using batteries for the power supply)

- 1** Press [■ TAPE/CD] to select the cassette mode.
TAPE \leftrightarrow Cd
(The display changes each time the button is pressed.)
- 2** Press [DECK \blacktriangle], load the tape and close the lid.
The direction is automatically set to play the top side ("▶" is displayed).
- 3** Press [REV MODE] on the remote control to select the mode.

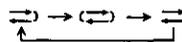

(The display changes each time the button is pressed.)

- \leftrightarrow : Both sides are played.
- \rightarrow : Both sides play repeatedly until [■ TAPE/CD] is pressed.
- \leftarrow : One side is played.

- 4** Press [◀▶ TAPE].
"FWD" is displayed and play begins. ("REV" is displayed when play begins while "◀" is displayed.)
▶: The side which is facing up is played back.
◀: The reverse side is playback.

- 5** Adjust the volume level.

To stop play:

Press [■ TAPE/CD].
To stop play from the remote control
Press [■].

To listen to the other side of the tape:
Press [◀▶ TAPE] during playback.





Hint

- Pressing [◀▶ TAPE] automatically turns the unit on, and if a tape is inserted, begins play (only when AC power is supplied).
- The volume can be adjusted even in the unit off mode. (Available only from the main unit)

Note

The unit cannot be turned on from the remote control when batteries are being used to power the unit.

Listening

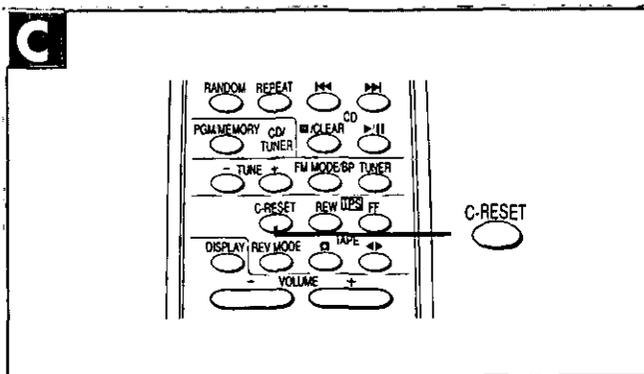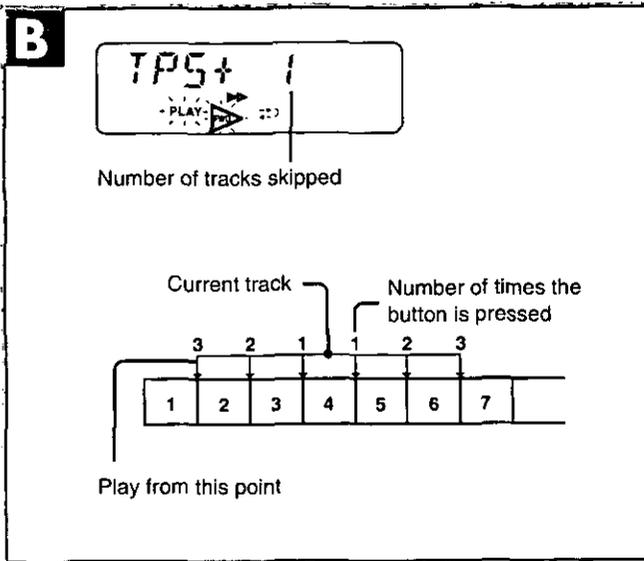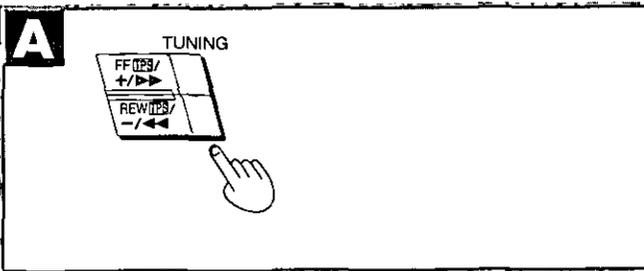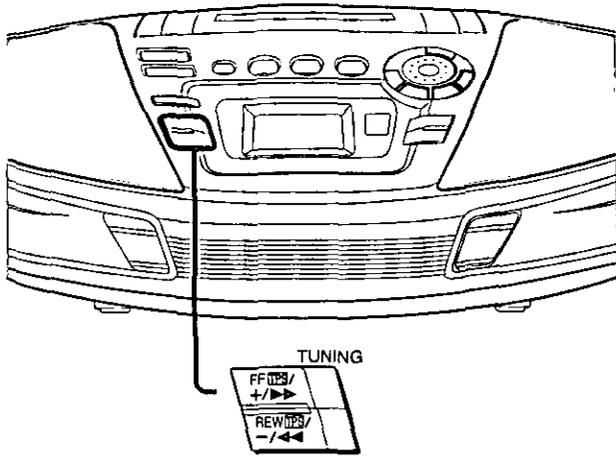

Listening to Cassettes

Fast forwarding and rewinding a cassette

Press during stop mode.

	Rewind	Fast forward
Main unit	REW [TPS]	FF [TPS]
Remote control	REW [TPS]	[TPS] FF

Finding the beginning of a track (TPS: Tape Program Sensor)

Press the button once for each track to be skipped (up to 9 tracks).

Press during play mode.

	Backward	Forward
Main unit	REW [TPS]	FF [TPS]
Remote control	REW [TPS]	[TPS] FF

Note

Since the blank spaces between tracks are used for locating the beginning of each track, TPS may not operate in the following cases:

- ① When the blank spaces are 4 seconds or less.
- ② When there are no blank spaces on the tape.
- ③ When there are parts of a track which have been recorded at a particularly low level or which have not been recorded at all (such as with classical music).
- ④ When 10 or fewer seconds have elapsed since the beginning of a track or when there are 10 or fewer seconds until the beginning of the next track.
- ⑤ When a tape is recorded with fade-ins or fade-outs.

To reset the tape counter to "000"

(Available only from the remote control)

Press **[C-RESET]**.

Before Recording

Types of tapes which can be used for recording

Automatically identifies the type of tape.

Normal position/TYPE I	OK
High position/TYPE II	OK
Metal position/TYPE IV	NO

This unit cannot make a recording or erase correctly if metal position tapes are used.

To record from the beginning of the tape **A**

You cannot record on the leader part of the tape. Before recording, wind the tape past the leader to a point where recording can start immediately.


To erase a tape **B**

1. Load the recorded tape with the side to be erased facing upward.
2. Press [**TAPE/CD**] to select "TAPE".
3. Press [**O/O II REC/REC PAUSE**].

Note


- Any change made to the volume or sound quality during recording will not affect the recording.
- In order to prevent trouble caused by flat batteries, it is recommended that you either supply power to the unit from the household AC outlet or replace all the batteries with new ones when you are recording something which is important to you.
- **The recording level is set automatically.**
- "E" is displayed if the cassette you are using has had its tabs removed and make a recording. (⇒ page 26).

A

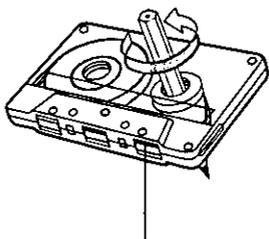


Leader tape (on which nothing can be recorded)

B

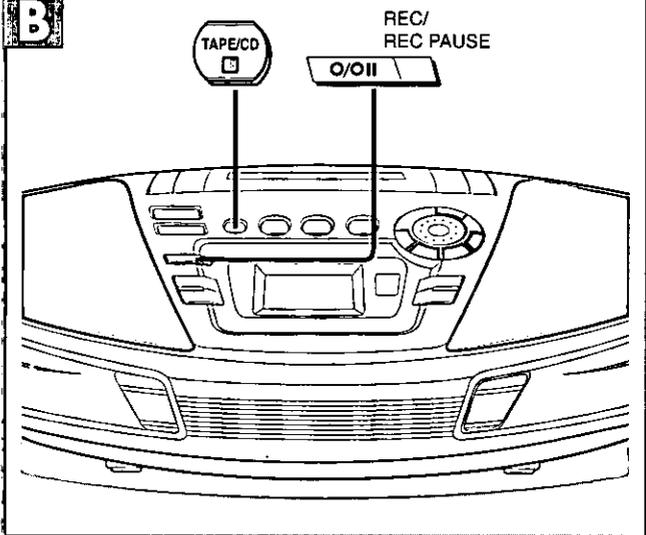

Recording Radio Programs

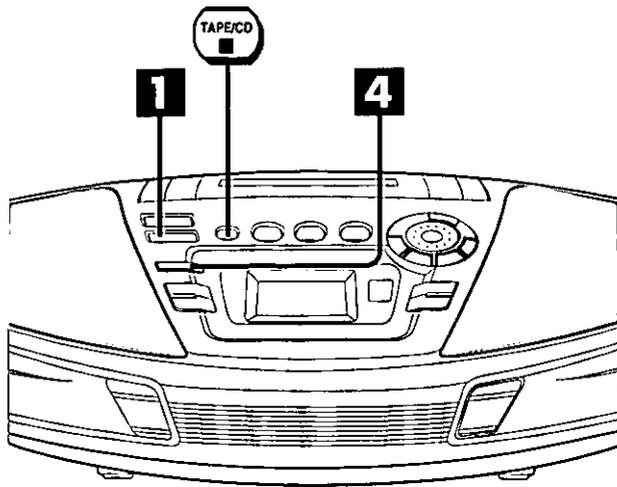

1 Press [DECK ▲] and load the cassette with the side to be recorded facing up.

2 Select desired radio station.
(→ page 10)

3 Press [REV MODE] on the remote control to select the mode.

⏮ ⏭ : Records onto both sides, starting with the side facing up.

⏮ : Records one side only.

4 Press [●/● II REC/REC PAUSE].
"FWD REC" is displayed and recording begins. "REV REC" is displayed when recording begins while "◀" is displayed.

To stop recording:
Press [■ TAPE/CD].

To stop recording temporarily:
Press [●/● II REC/REC PAUSE].




To resume recording, press [●/● II REC/REC PAUSE].



When there is too much interference during AM recording

(Available only from the remote control)

Press [FM MODE/BP].

Select "bP1" or "bP2" whichever yields less noise.

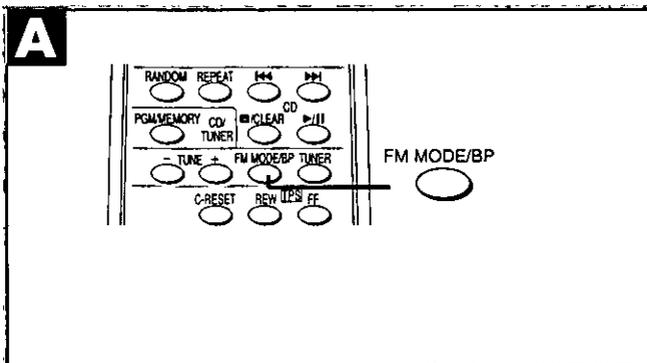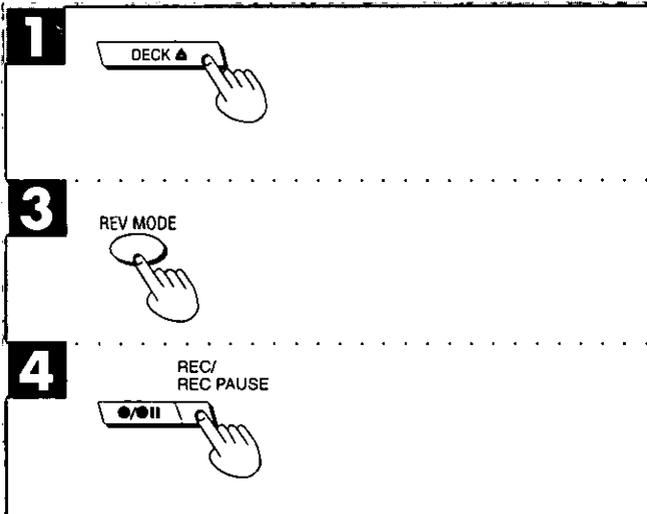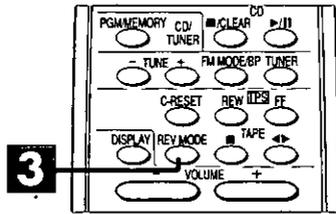

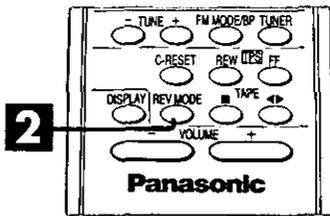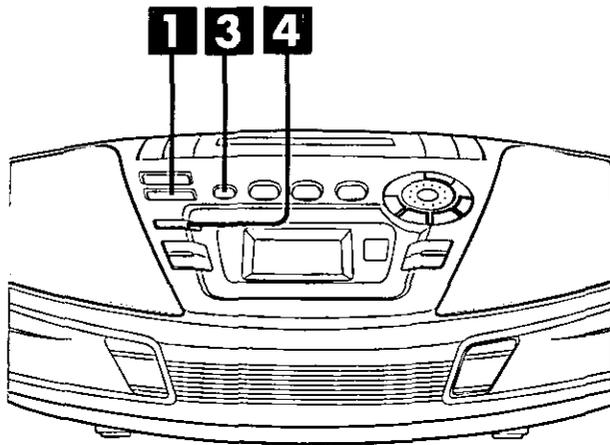

Recording from CDs

Normal recording

Recording and CD play begin simultaneously.
Getting ready: Insert the CD.

- 1** Press [DECK ▲] and load the cassette with the side to be recorded facing up.
Tape length must be longer than the CD play time.
- 2** Press [REV MODE] on the remote control to select the mode.
⇒ ⇐: Records onto both sides, starting with the side facing up.
⇒ : Records one side only.
- 3** Press [■ TAPE/CD] to select the CD mode.
TAPE ↔ Cd
(The display changes each time the button is pressed.)
- 4** Press [●/● II REC/REC PAUSE].
"FWD REC" is displayed and recording and CD play begin simultaneously. "REV REC" is displayed when recording begins while "◀" is displayed.

To stop recording:
Press [■ TAPE/CD].

To pause recording:
Press [●/● II REC/REC PAUSE] (CD will also pause).
To begin recording again, press [●/● II REC/REC PAUSE].

After recording
When CD play is finished, the cassette simultaneously stops.


To continue recording a different CD on the same cassette:
1. Press [▲ CD OPEN] and replace the CD.
2. Press [●/● II REC/REC PAUSE].



Recording favourite tracks

1. Program desired tracks (⇒ steps 2 to 4 on page 14) after step 3.
2. Press [●/● II REC/REC PAUSE].

To skip tracks not to be recorded

1. Press [●/● II REC/REC PAUSE] during recording.
CD will also pause.
2. Dial [◀/▶ / V / ▲] to display the number of the next track to be recorded.
3. Press [●/● II REC/REC PAUSE] to begin recording again.

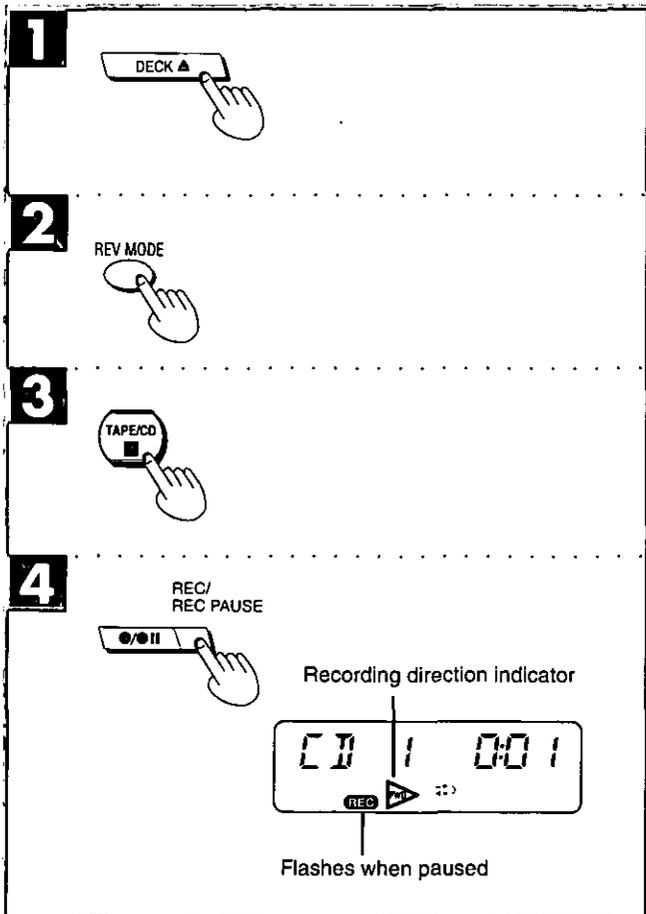

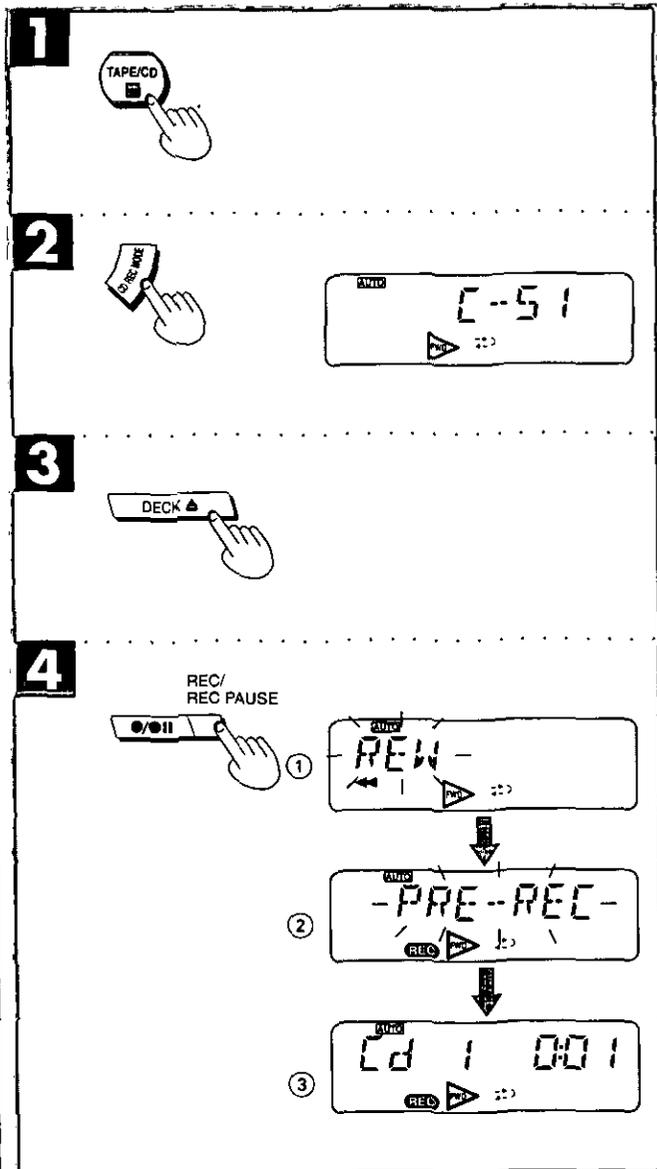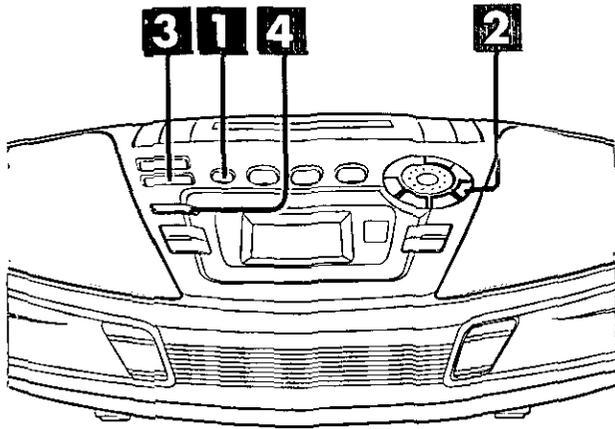

Recording from CDs

Easy CD recording (Auto)

Recording all tracks or programmed tracks of a CD in programmed order.

- It is not necessary to rewind the cassette. Recording always begins from the beginning of the side facing up.
- If the side ends in the middle of a track, the track which was cut off is recorded on the opposite side from the beginning.

Getting ready: Insert the CD.

1 Press [TAPE/CD] to select the CD mode.

2 Press [CD REC MODE] to display "AUTO".

AUTO → 1-REC → OFF

(The display changes each time the button is pressed.)
The necessary tape length will be displayed. (Example: Tape of 51 minutes or more necessary to record all tracks.)

3 Insert a cassette which is longer than that displayed in step 2.

Insert with the side to be recorded first up.

4 Press [REC/REC PAUSE].

Automatically rewinds, and recording from the first track begins after a 10 second interval.

Reverse mode is displayed as "REW".

- ① Rewinding tape
- ② Recording 10 second interval
- ③ Recording begins

The unit stops when recording finishes.

To stop recording (CD will also stop):

Press [TAPE/CD].

To record favourite tracks:

1. Program desired tracks (⇒ steps 2 to 4 on page 14) after step 1.
2. Continue to perform above steps 2 to 4 to start recording.

Note

- Auto CD recording cannot be used in combination with random play and repeat play (⇒ page 13).
- "C----" is displayed if the tape required for recording exceeds 120 minutes.

Recording from CDs

One track recording (1 TRACK)

Records one track from the CD and stops. This function is convenient when recording different tracks from various CDs. Recording can begin from any place on the tape. Getting ready: Insert a CD.

1 Press [DECK ▲] and load the cassette with the side to be recorded facing up.

Recording direction is automatically set to begin from the side facing up (the "▶" indicator is displayed). Find the position on the tape where recording is to begin.

2 Press [TAPES/CD] to select the CD mode.

3 Press [CD REC MODE] to display "1-REC".

AUTO → 1-REC → OFF

(The display changes each time the button is pressed.)

4 Dial [◀◀/▶▶] to select the track to be recorded.

Omit this step when recording the first track on the CD.

5 Press [●/● II REC/REC PAUSE].

CD play and recording begin simultaneously. Records only one track and stops.

Reverse mode is displayed as "⇌".

- If the track is interrupted when the end of the cassette is reached, recording automatically begins again from the beginning of the track on the opposite side (if recording was begun on the opposite side, recording stops at the end of the present side).

To continue recording with another CD:

Press [▲ CD OPEN], insert a CD and follow steps **4** and **5**.



To stop recording (CD will also stop):

Press [TAPES/CD].


Hint

Try listening to the track to check the type of song it is before recording. Press [CD REC MODE] to display "1-REC," then press [▶/II CD] to play the CD.

Press [●/● II REC/REC PAUSE] to record a song you like during CD play. The track is recorded from the beginning.

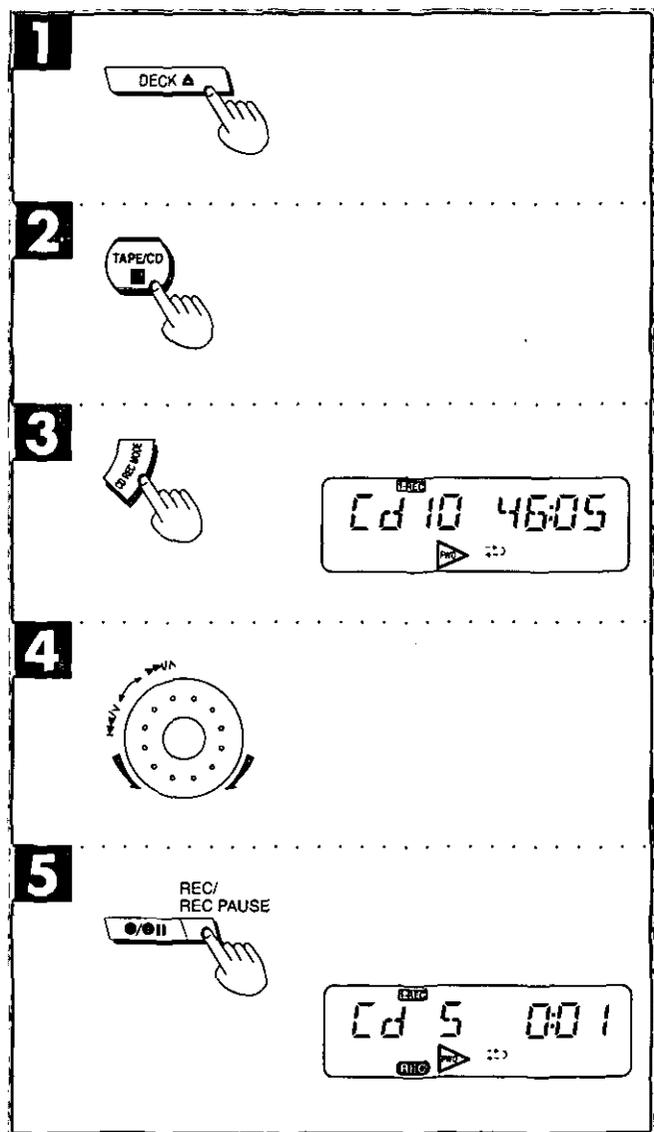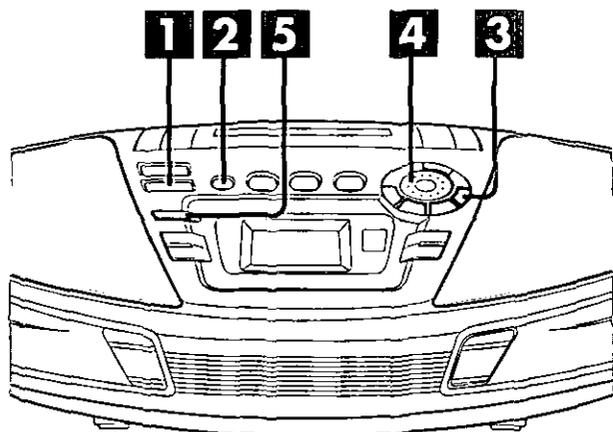

Using the Timer

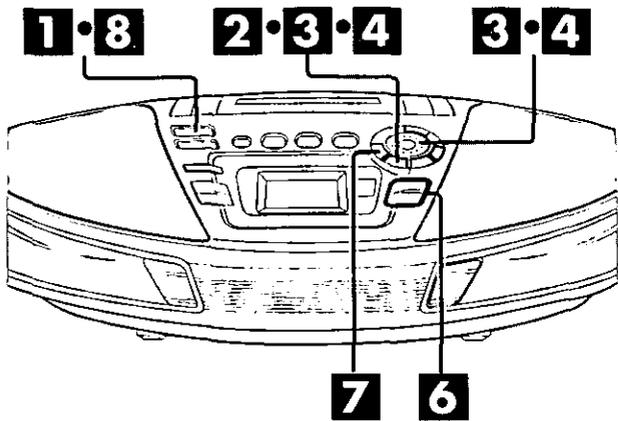

Using the Play Timer

Select this timer when you want to use the timer as an alarm clock. You can wake up with listening to music (CD, tuner or tape) at a desired volume level and time.

The clock has a 12-hour display.

Make sure that you have completed "Setting the Clock" on page 8.

Example: Setting CD play from 7:30 a.m. to 8:30 a.m. on play timer.

Setting the start and finish times

- Press [POWER ϕ /I] to turn the unit on.
- Press [CLOCK/TIMER] twice to set "ON" and "OPLAY" flashing.
They flash for about 10 seconds.

(The display changes each time the button is pressed.)
- (Within 10 seconds) Dial [\llcorner / \vee / \llcorner / \vee] to set the start time.
 - Press [CLOCK/TIMER].
Finish time flashes.
- Dial [\llcorner / \vee / \llcorner / \vee] to set the finish time.
 - Press [CLOCK/TIMER].
Display returns to original mode.
When "E" is displayed:
Check whether start and finish are set for the same time.

Note

The set time remains active until changed.

Programming play

- Get the music source ready.
Listening to the radio: \rightarrow page 10
Listening to CDs: \rightarrow page 12
Listening to cassettes: \rightarrow page 15
- Press VOLUME [+], [-] to adjust volume for time of play.
The volume set here remains effective even if it is changed after step 7.

Setting the timer function


- Press [OPLAY/REC] to display "OPLAY".
Each time it is pressed:
OPLAY \rightarrow OREC \rightarrow off (no display)

If the record timer has not been set
Each time it is pressed: OPLAY \rightarrow off (no display)
When "E" is displayed:
Check whether the clock has been set (\rightarrow page 8).

- Press [POWER ϕ /I] to turn the unit off.
Programming can be checked when the unit is off (\rightarrow page 24).

To clear the timer function:

Press [OPLAY/REC] when the unit is on to clear the "OPLAY" display.

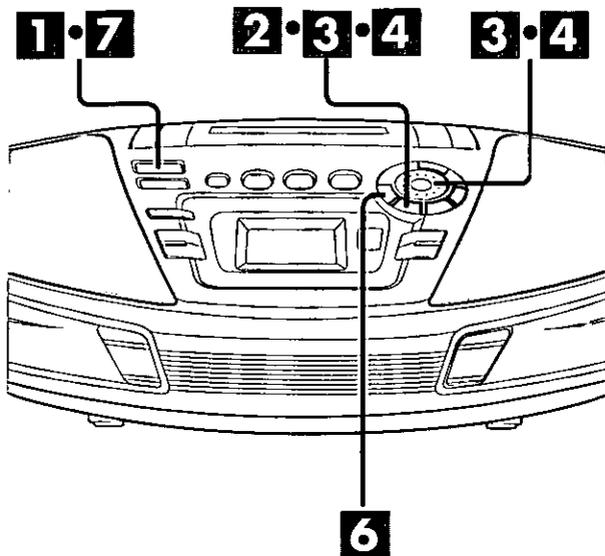

Using the Timer

Using the Recording Timer

Select this timer when you want to use the timer to record a mid-night program or while you are out.

The clock has a 12-hour display.


Make sure that you have completed "Setting the Clock" on page 8.

Example: Recording from 1:30 p.m. to 2:30 p.m.

Setting the start and finish times

- 1 Press [POWER ϕ /I] to turn the unit on.
- 2 Press [CLOCK/TIMER] four times to set "ON" and "DREC" flashing.

They flash for about 10 seconds.

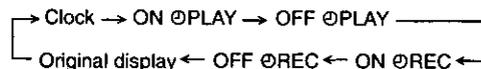

(The display changes each time the button is pressed.)

- 3 ① (Within 10 seconds) Dial [◀◀/V ← → ▶▶/∧] to set the start time.
② Press [CLOCK/TIMER].
Finish time flashes.

- 4 ① Dial [◀◀/V ← → ▶▶/∧] to set the finish time.
② Press [CLOCK/TIMER].
Display returns to original mode.
When "E" is displayed:
Check whether start and finish are set for the same time.

Note

The set time remains active until changed.

Programming recording

- 5 Get the music source ready.
 - ① Select radio station.
 - ② Insert cassette into deck.
 - ③ Press [REV MODE] on the remote control to select the mode.
 - Reduce the volume level now if you do not wish to listen during recording.
 - (Available only from the remote control)
 - If there is excessive interference when recording an AM station, press [FM MODE/BP] to select "bP1" or "bP2" which ever yields less noise.

Setting the timer function

- 6 Press [DPLAY/REC] to display "DREC".
Each time it is pressed: DPLAY → DREC → off (no display)

If the play timer has not been set

Each time it is pressed: DREC ↔ off (no display)



When "E" is displayed:

Check whether the clock has been set (→ page 8).

- 7 Press [POWER ϕ /I] to turn the unit off.
Programming can be checked when the unit is off (→ page 24).
The unit turns on approximately 30 seconds before the set start time and recording begins.

To clear the timer function:

Press [DPLAY/REC] when the unit is on to clear the "DREC" indicator.

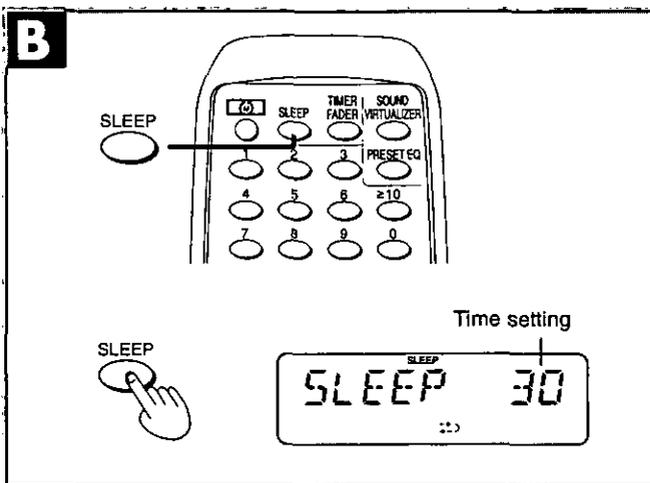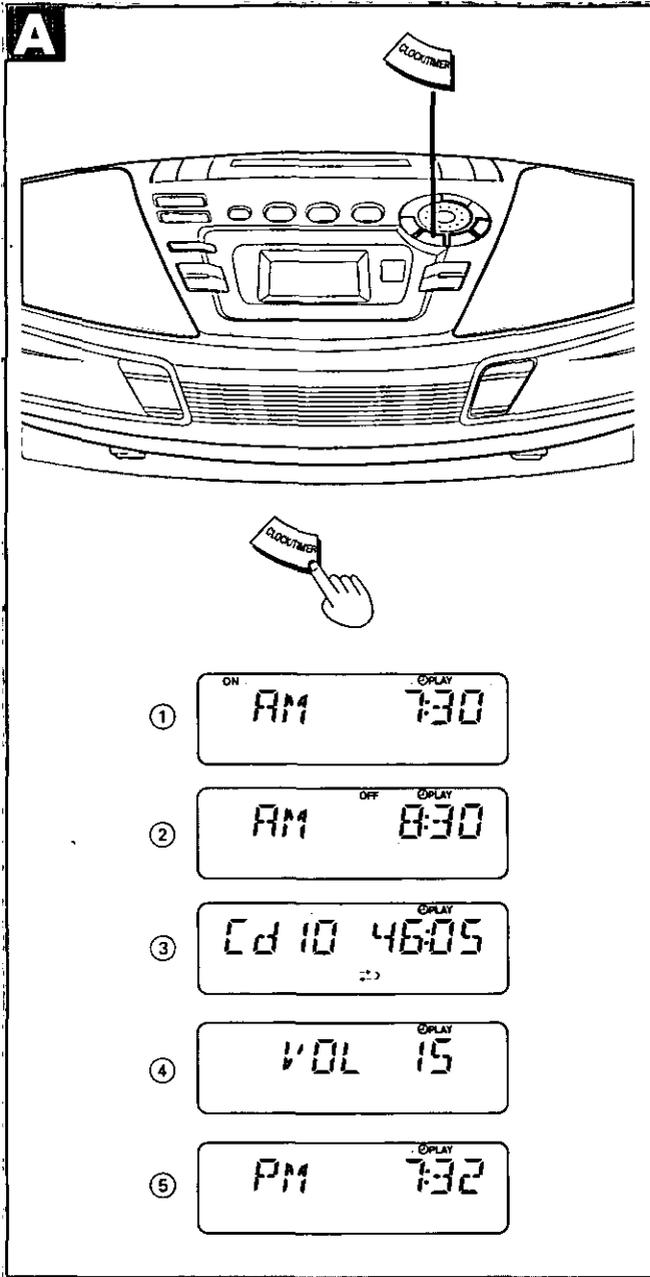

Using the Timer

Using the Play/Recording Timer

To play music after programming:

- ① Begin playing of desired music source. Programming for the play/record time remains in the memory even if the volume or source is changed during play.
- ② After playing music, turn the unit off.
 - Direction displayed when unit is turned off is activated in the play/recording timer. After playing music, check the direction ("▶" or "◀") of the cassette to be played or recorded before turning the unit off.
 - When using the play timer with a CD, check the setting of the random, repeat or programmed play mode before turning the unit off.

To change the source or volume of the play timer function:

Press [PLAY/REC] to clear the "OPLAY" Indicator and follow steps 5 to 8. (→ page 22)

To change the radio station to be recorded:

Press [PLAY/REC] to clear the "OREC" indicator and follow steps 5 to 7. (→ page 23)

To use the timer at the same time daily:

Check that "OPLAY" or "OREC" is displayed and turn the unit off.

Note

Always turn the unit off before the programmed start time. The timer does not activate if unit is on.

To check programming

Press [CLOCK/TIMER] when unit is off.

The display automatically changes in the following order.

Display example: Play CD from 7:30 to 8:30 on play timer. **A**


- ① Programmed on time
- ② Programmed off time
- ③ Programmed music source
- ④ Timer volume
- ⑤ Original display

Using the Sleep Timer

(Only from the remote control)

The unit off time can be set up to two hours ahead of the present time. It lets you fall asleep while listening to music.

Press [SLEEP] to select the desired time. **B**

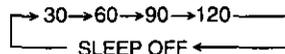

(The display changes each time the button is pressed.)

The unit is turned off after the set time has elapsed.

To release the timer function:

Press [SLEEP] to select "SLEEP OFF".

To check the time remaining during operation:

Press [SLEEP].

To change the time remaining during operation:

Press [SLEEP] to show the remaining time then press [SLEEP] to select the desired time.

(Continued on next page)

Using the Timer

Using the sleep timer

Using the sleep and play timers in combination

Example: Falling asleep listening to FM programming and waking up the next morning listening to a CD. **A**

1. Program the play timer for CD play (→ page 22).
2. Select the desired radio station and set the sleep timer. Play starts at the set volume even if it was reduced after setting the timer.

• When programmed times overlap **B**

When play is programmed to begin before the sleep timer turns the unit off, the play timer is not activated. The unit turns off after the programmed sleep timer is completed. Always set the sleep timer so that the unit turns off by the time the play timer is programmed to begin.

Using the sleep and recording timers in combination

Example: Falling asleep listening to a CD and recording FM programming during the night. **C**

1. Program the recording timer to record the FM programming and insert recording cassette into deck (→ page 23).
2. Insert the CD and set the sleep timer.

• When programmed times overlap **D**

When recording is programmed to begin before the sleep timer turns the unit off, the recording timer is not activated. The unit turns off after the programmed sleep timer is completed. Always set the sleep timer so that the unit turns off by the time the recording timer is programmed to begin.

Note

The play and recording timers cannot be used together.

Using the timer fader function (Timer Fader)

(Only from the remote control)

• Using timer fader and sleep timer in combination

Volume will decrease slowly with time till power is turned off at the end of sleep.

Select this function to provide much comfortable sleep when listening to tape, CD or radio with sleep mode.

• Using timer fader and play timer in combination

Volume will increase from 0 to last set volume level gradually.

Select this function to provide a more comfortable wake up when using the play timer as an alarm.

Press [TIMER FADER] to indicate " **FADER** ". **E**




To cancel the **TIMER FADER** function:






Press [TIMER FADER] again to cancel.

" **FADER** " goes off.

Note

- All timer functions are affected while " **FADER** " is displayed.
- Timer fader mode works everyday as long as " **FADER** " is displayed.
- If record timer is used, there will be no affect to the recording.

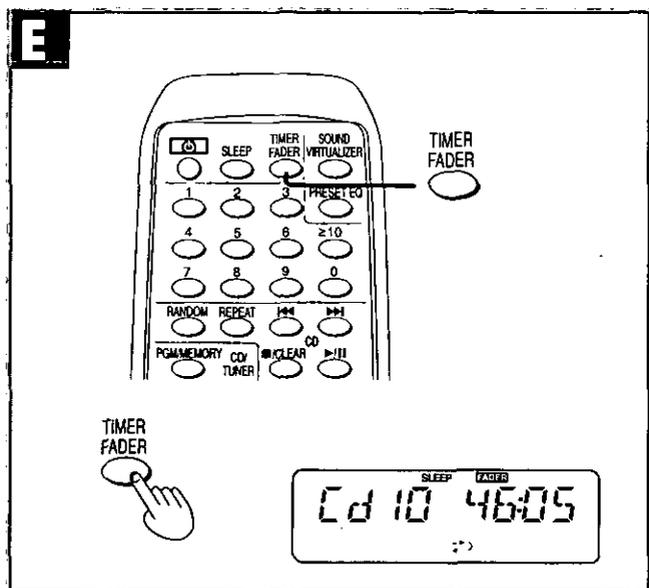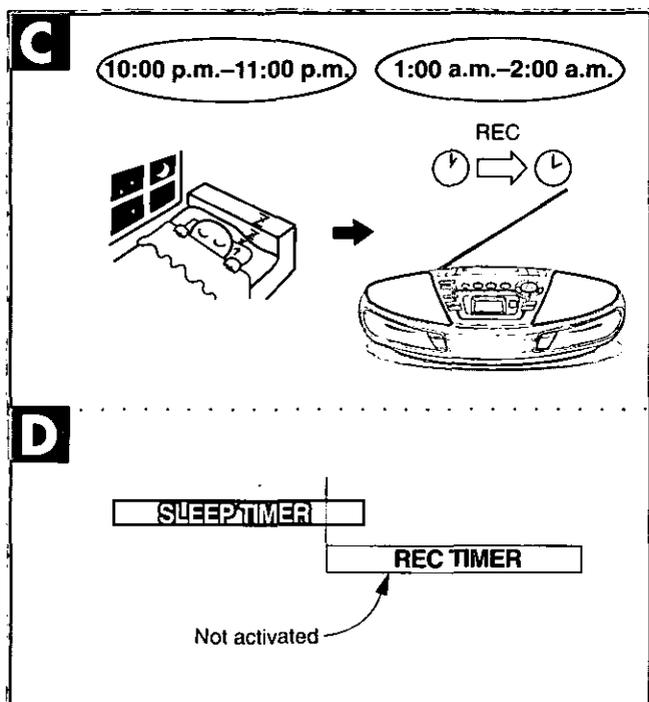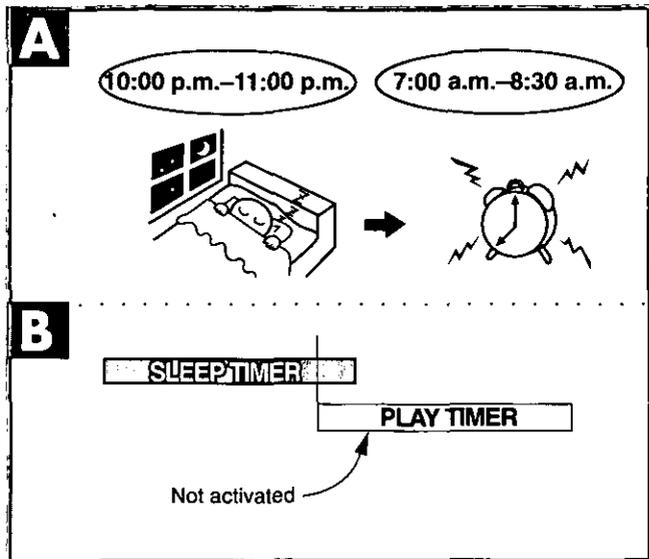

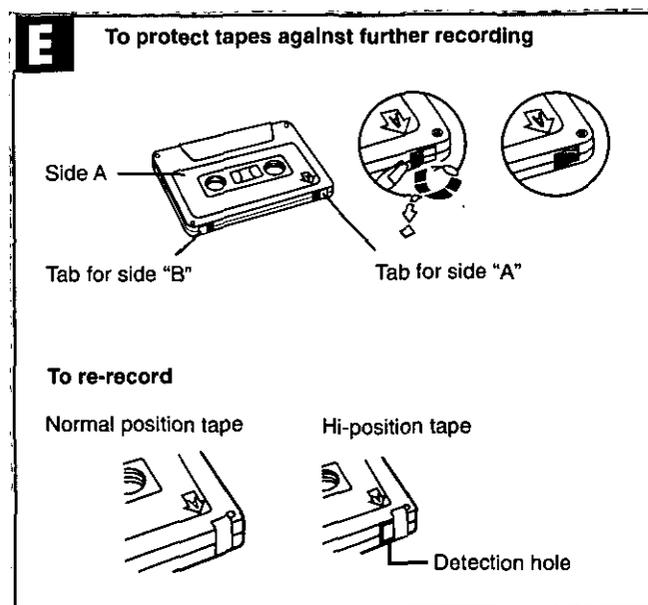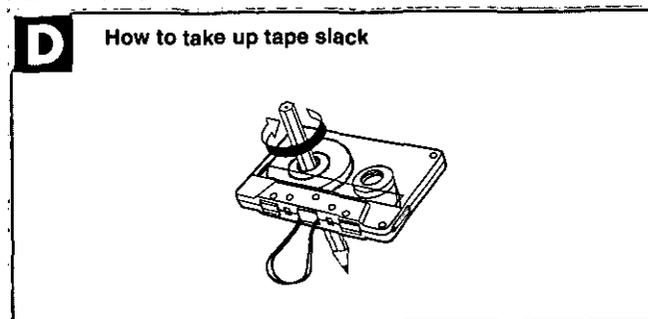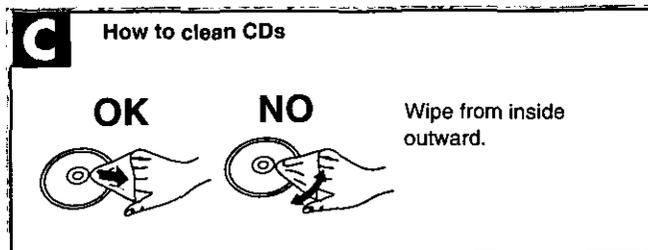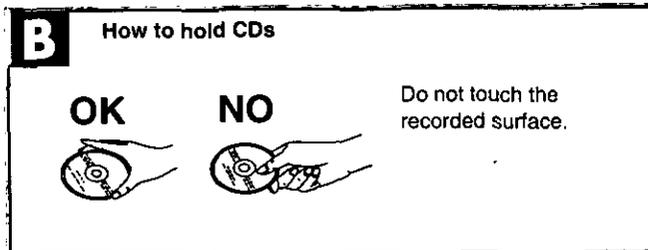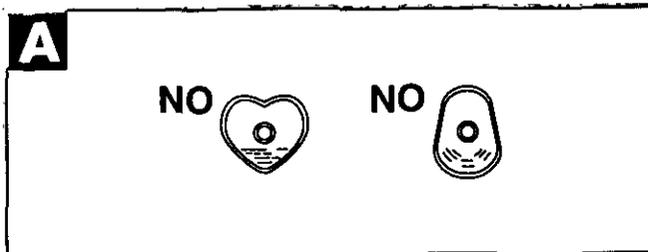

Concerning compact discs

With this player, you can play compact discs having this mark.
However, do not use irregular shaped CDs. CDs of the sort can damage the unit. **A**

COMPACT
disc
DIGITAL AUDIO

Handling precautions

Handle CDs as shown on the left (**B** - **C**).

- If you are taking the disc from a cold to a warm environment, moisture may form on the disc. Wipe this off with a soft, dry, lint-free cloth before using the disc.
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not attach labels or stickers to CDs. (Do not use CDs with exposed adhesive from tape or left over peeled off stickers.)
- Do not use scratch-proof protectors or covers other than those specified for use with this system.

Storage precautions

Be sure to store discs in their cases to protect them from dust, scratches, and warping.

Do not place or store discs in the following places

- Locations exposed to direct sunlight
- Humid or dusty locations
- Locations directly exposed to a heat vent or heating appliance
- In the glove compartment or on the rear deck of an automobile

Concerning cassette tapes

Selection of cassette tapes

Tapes can get caught on the capstans. Use caution with the following types of tapes.

Cassette tapes exceeding 100 minutes

Tapes are made of a thin film material. Do not repeatedly advance and stop the tape, fast-forward it or rewind it.

Endless-tapes

For this unit, it is recommended to use the tape which is appropriate to the auto reverse mechanism.

Always read the instructions provided with your tapes.

Tape slack **D**

Tape slack may cause the tape to break.
Use a pencil or similar object to take up the slack.

Erasure prevention **E**

Use a screwdriver or similar object to break out the tab.

To re-record on a protected cassette

Cover the hole with adhesive tape.
Do not cover the detection hole on hi-position tapes.

Storage precautions

Do not place or store tapes in the following places:

- In high temperature (35°C or higher) or high humidity (80% or higher) areas.
- In a strong magnetic field (near a speaker, on top of a TV, etc.) This can erase a recording.
- Locations exposed to direct sunlight.

Troubleshooting Guide

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation.

If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

For detailed instructions, contact an authorized servicenter in the U.S.A. and Panasonic Canada Inc. Customer Care Centre in Canada.

In the U.S.A. 1-800-211-7262 or web site (<http://www.panasonic.com>)

In Canada 905-624-5505 or web site (www.panasonic.ca/faq.html)

Problem	Probable cause (s)	Suggested remedy	Page
Common problems			
"E" appears.	Have you made an incorrect operation?	Read the operating instructions and try again.	/
"U01" appears.	Are the batteries flat?	Replace them with new ones. Alternatively use a household AC outlet as the power source.	5
"U02" appears.	Power is not supplied the unit.	Install the batteries or connect the power cord.	5
Preset channels, timer functions, and clock are cleared.	Did you unplug the unit without inserting memory batteries?	Insert memory batteries.	5
While listening to CDs			
Play does not start. No display of track numbers etc.	Has the CD been installed upside down?	Install the CD with the label side facing up.	12
	Has there been a sudden change in temperature? For instance, was the unit brought straight from a cold place into a warm location?	Condensation may have formed on the lens unit. Leave it for about an hour before attempting operation again.	/
Certain sections are not played properly.	Is the CD soiled?	Wipe with a soft cloth.	26
	Is the CD scratched?	Replace with a new CD.	/
While listening to tapes			
No recording.	Have the tape's accidental erasure prevention tabs been broken out?	Cover the holes with adhesive tape.	26
Poor quality sound.	Are the heads soiled?	Clean them.	Back cover
While listening to the radio			
Stations cannot be tuned in well.	Has the antenna been adjusted properly?	Try changing its direction.	10
Noise heard during AM reception.	Are you using a remote control of other appliances near the unit?	Use the remote control at a distance.	/
	Are you operating the unit and a TV set at the same time?	Place the unit at a distance from the TV. Alternatively turn the TV off.	/
While using the timer			
No timer operation at the programmed time.	Is the unit turned on (when the play timer and the recording timer are being used)?	Turn the unit off upon completion of the settings.	22, 23
	Is the programmed timer indicator (ⓄPLAY, ⓄREC or SLEEP) on?	Operate again so the indicator lights.	22-24

Technical Specifications

Radio

Frequency range

FM

87.9-107.9 MHz (200 kHz steps)

87.5-108.0 MHz (100 kHz steps)

AM

520-1710 kHz (10 kHz steps)

CD player

Sampling frequency

44.1 kHz

Decoding

16 bit linear

Beam source

Semiconductor laser (wavelength 780 nm)

No. of channels

2 channel, stereo

Wow and flutter

Below measurable limit

D/A converter

MASH (1 bit DAC)

Tape recorder

Track system

4 track, 2 channel, stereo

Monitor system

Variable sound monitor

Recording system

AC bias

Erasing system

AC erase

Frequency range

Normal position

50-12000 Hz

High position

50-13000 Hz

General

Speakers

8 cm (3") 5.4 Ω x 2

Jacks

Output

PHONES: 3.5 mm stereo (16-32 Ω)

Power requirement

AC

120 V, 60 Hz

Battery

12 V [Eight R20/LR20(D), UM-1] batteries]

•Do not use rechargeable type batteries.

Memory back-up for computer/clock

6 V [Four R6/LR6 (AA, UM-3) batteries]

•Do not use rechargeable type batteries.

Dimensions (WxHxD)

521 x 146 x 270 mm

(20½" x 5¾" x 10⅝")

Weight

4.4 kg (9.7 lb) without batteries

Note

Specifications are subject to change without notice.

Weight and dimensions are approximate.

Maintenance

If the surfaces are dirty

To clean this unit, wipe with a soft, dry cloth.


If the surfaces are extremely dirty, use a soft cloth dipped in a soap-and-water solution or a weak detergent solution.

- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically impregnated cloth, read the instructions that came with the cloth carefully.

For a cleaner crisper sound

We recommend that you periodically clean parts (the shaded portion in the figure below) the tape contacts like the heads.

Do not use any solution other than alcohol for head cleaning.

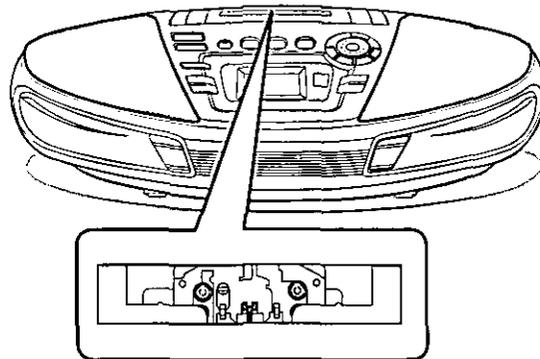

Product service

Do not attempt to remove the cover(s) or repair the unit yourself. Refer servicing to qualified personnel only.

Product information

For product service, product information or assistance with product operation, refer to the servicentre directory.

Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus, New Jersey 07094
<http://www.panasonic.com>

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")
Ave. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic Canada Inc.
5770 Ambler Drive, Mississauga, Ontario L4W 2T3
www.panasonic.ca

En

RQT4760-P
L1298S0(M)

Precautions

Before using this unit please read these operating instructions carefully. Take special care to follow the warnings indicated on the unit itself as well as the safety suggestions listed below. Afterwards keep them handy for future reference.

Safety

1. **Power Source**—The unit should be connected to power supply only of the type described in the operating instructions or as marked on the unit.
2. **Polarization**—If the unit is equipped with a polarized AC power plug (a plug having one blade wider than the other), that plug will fit into the AC outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
3. **Power Cord Protection**—AC power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Never take hold of the plug or cord if your hand is wet, and always grasp the plug body when connecting or disconnecting it.
4. **Nonuse Periods**—When the unit is not used, turn the power off. When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

Installation

Environment

1. **Water and Moisture**—Do not use this unit near water—for example, near a bathtub, washbowl, swimming pool, or the like. Damp basements should also be avoided.
2. **Condensation**—Moisture may form on the lens in the following conditions...
 - immediately after a heater has been turned on.
 - in a steamy or very humid room.
 - when the unit is suddenly moved from a cold environment to a warm one.If moisture forms inside this unit, it may not operate properly. To correct this problem, turn on the power and wait about one hour for the moisture to evaporate.
3. **Heat**—The unit should be situated away from heat sources such as radiators and the like. It also should not be placed in temperatures less than 5°C (41°F) or greater than 35°C (95°F).

Placement

1. **Ventilation**—The unit should be situated so that its location or position does not interfere with its proper ventilation. Allow 10 cm (4") clearance from the rear of the unit.
2. **Foreign Material**—Care should be taken so that objects do not fall into and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration, or shock.
3. **Magnetism**—The unit should be situated away from equipment or devices that generate strong magnetic fields.
4. **Stacking**—Do not place heavy objects, other than system components, on top of the unit.
5. **Surface**—Place the unit on a flat, level surface.
6. **Carts and Stands**—The unit should be used only with a cart or stand that is recommended by the manufacturer. The unit and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the unit and cart combination to overturn.
7. **Wall or Ceiling Mounting**—The unit should not be mounted to a wall or ceiling, unless specified in this operating instructions.



Maintenance

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

Service

1. **Damage Requiring Service**—The unit should be serviced by qualified service personnel when:
 - (a) The AC power supply cord or the plug has been damaged; or
 - (b) Objects have fallen or liquid has been spilled into the unit; or
 - (c) The unit has been exposed to rain; or
 - (d) The unit does not appear to operate normally or exhibits a marked change in performance; or
 - (e) The unit has been dropped, or the enclosure damaged.
2. **Servicing**—The user should not attempt to service the unit beyond that described in the operating instructions. All other servicing should be referred to an authorized service personnel.
For the address of an authorized servicenter:
In the U.S.A. 1-800-211-7262 or web site
(<http://www.panasonic.com>)
In Canada 905-624-5505 or web site
(www.panasonic.ca/feedback.html)

THE FOLLOWING APPLIES ONLY IN THE U.S.A.:

CAUTION:



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Notice: This system complies with new Part 15, except for the radio receiver, which complies with old Part 15, Subpart C of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation. The radio receiver is not subject to above item (2).

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

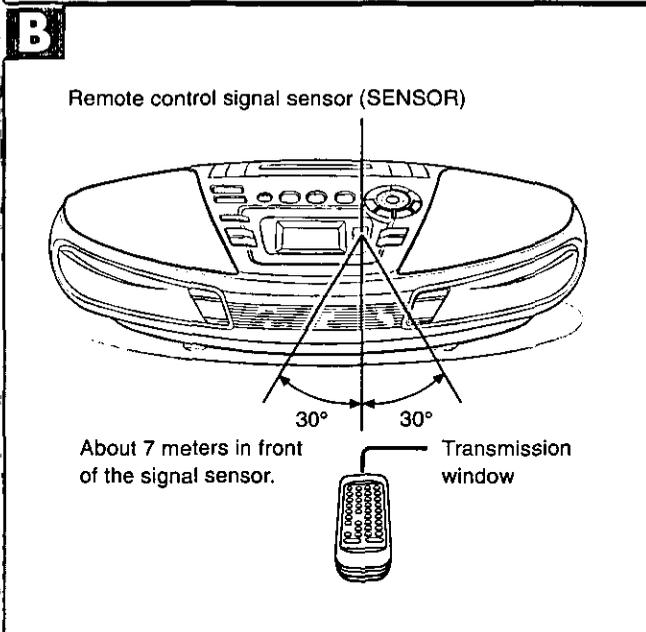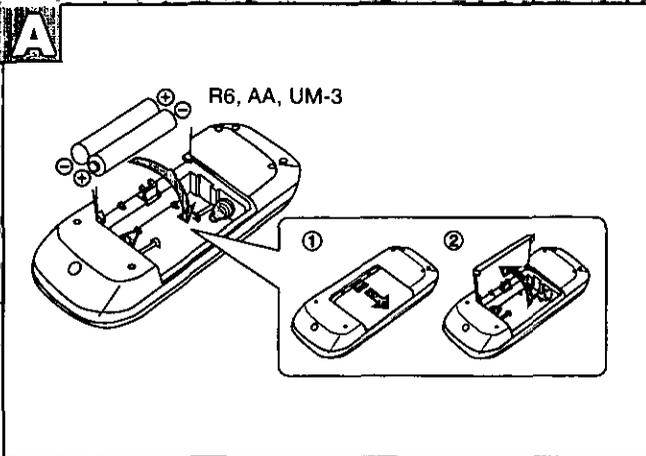

Precautions

Listening caution



Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion—and, most importantly, without affecting your sensitive hearing.

We recommend you to avoid prolonged exposure to excessive noise.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing.

Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

Concerning the Remote Control

Battery (not included) installation and removal

Remove the batteries by pulling the positive side (+) of the battery up.

Correct method of use

Operation notes

- Do not place obstacles between the remote control signal sensor and remote control unit.
- Do not expose the remote control signal sensor to direct sunlight or to the bright light of an inverter fluorescent light.
- Take care to keep the remote control signal sensor and end of the remote control unit free from dust.

To prevent damage

- Never place heavy items on it.
- Do not disassemble or reconstruct it.
- Do not spill water or other liquids on it.

Power Sources

Operating unit on AC power

Connect the included AC power cord to the [AC IN ~] socket of the unit and your household AC outlet.

Operating unit on battery power (Not included)

Battery installation and removal

Place unit on a soft cloth when installing and removing batteries to avoid damaging the front panel.

- 1 Open the battery cover on the rear panel.
- 2 Install batteries in the order indicated in the diagram.

Remove batteries by inserting your finger into opening at the bottom of the unit and pushing out. 

When to replace the batteries

When the batteries are weak:

" " starts to flash and "U01" appears on the display, then the unit automatically turns itself off.

Be sure to replace all batteries with new ones.

Memory batteries (Not included)

What is memory?

Memory is the information which can be programmed into the unit such as:

- Time
- Time programming
- CD programming
- Radio stations

If memory batteries are not used, the memory is cancelled at the following times.






- In electric failures
- When the AC power cord is removed from the AC outlet
- When using batteries as the power source, the AC power cord is inserted into the unit while disconnected from the AC outlet

Battery installation and removal

Lift the negative end of the number 4 battery to remove batteries.




Replacing batteries

- The service life of these batteries is approximately one year. To preserve the memory, connect the AC power cord to the household AC outlet before replacing all the memory batteries with new ones.
- When disconnecting the AC power cord, first turn the unit off by pressing [POWER ]. The service life of the memory back-up batteries is reduced if the AC power cord is disconnected from the household AC outlet with the power still supplied.

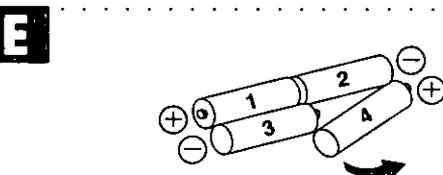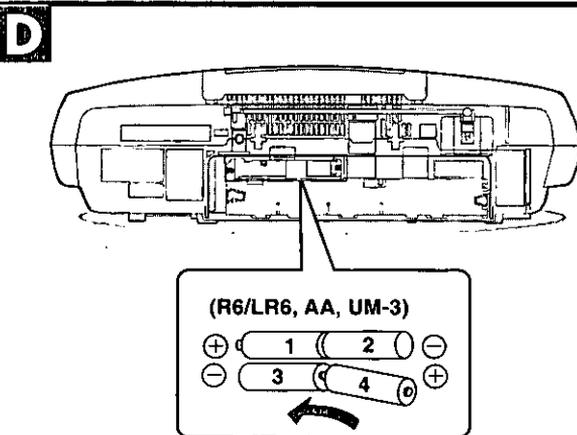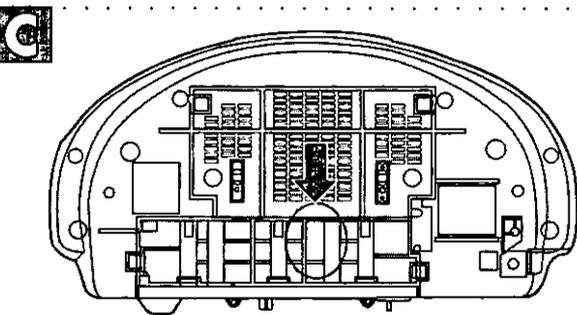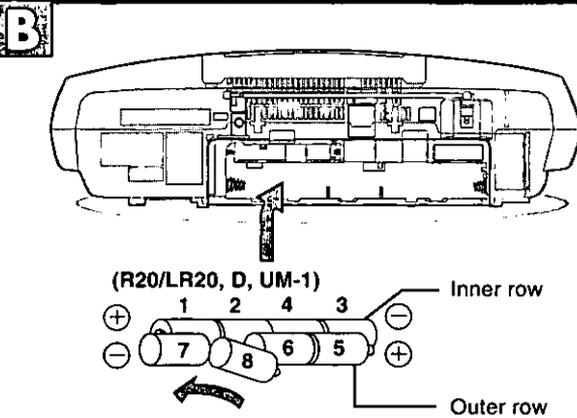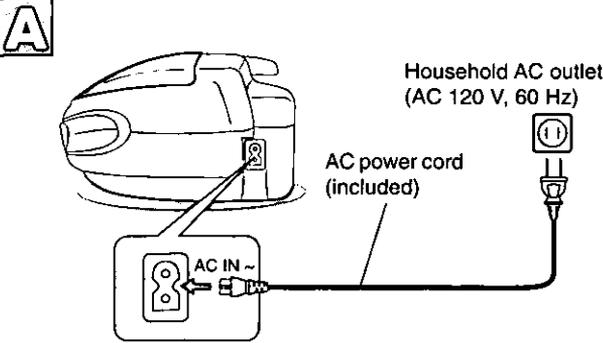

Location of Controls

Before use

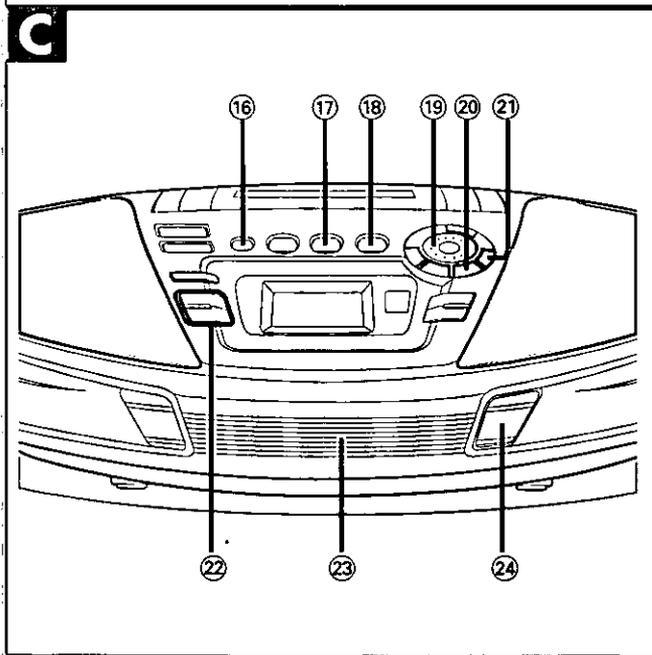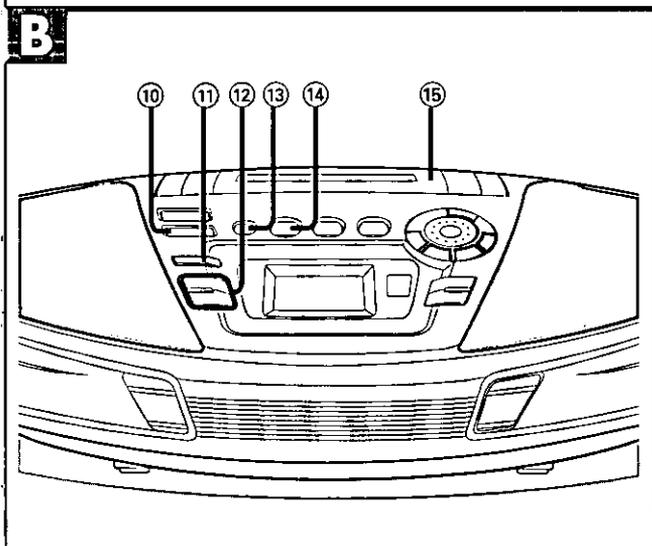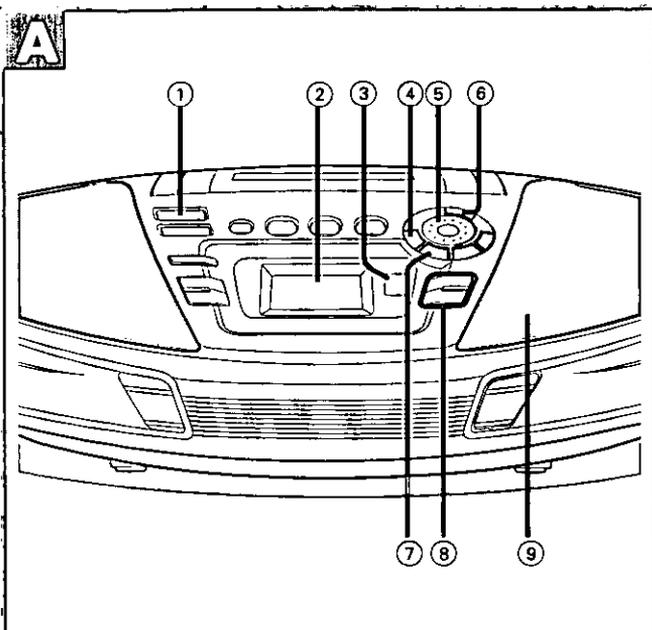

Basic controls

Number	Designation	Reference Page
①	Standby/on switch (POWER 0/I)	
	Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.	
②	Display panel	
③	Remote control signal sensor (SENSOR)	4
④	Play timer/record timer button (PLAY/REC)	22-24
⑤	Time adjust/preset tuning/CD track select/equalizer jog (◀◀/V ↔ ▶▶/∧)	8, 9, 11, 12
⑥	Equalizer mode button (EQ MODE)	9
⑦	Clock/timer button (CLOCK/TIMER)	8, 22, 23, 24
⑧	Volume control buttons (VOLUME +, -)	10
⑨	Speaker	


Cassette deck controls

Number	Designation	Reference Page
⑩	Deck eject button (DECK ▲)	15
⑪	Record/record pause button (●/● REC/REC PAUSE)	18, 19
⑫	Fast forward/rewind/TPS buttons (FF [TPS] / + / ▶▶, REW [TPS] / - / ◀◀)	16
⑬	Tape mode select/stop button (■ TAPE/CD)	15
⑭	Cassette play/direction button (◀▶ TAPE)	15
⑮	Deck	

Tuner/CD controls

Number	Designation	Reference Page
⑯	CD mode select/stop button (■ TAPE/CD)	12
⑰	Band button (TUNER BAND)	10
⑱	CD play/pause button (▶/ CD)	12
⑲	Preset tuning/CD track select jog (◀◀/V ↔ ▶▶/∧)	11, 12
⑳	CD program/clear, tuner preset button (●MEMORY - CLEAR)	11, 14
㉑	CD recording mode button (CD REC MODE)	20, 21
㉒	Tuning/CD search buttons (FF [TPS] / + / ▶▶, REW [TPS] / - / ◀◀, TUNING)	10, 12
㉓	CD tray	
㉔	CD tray open button (▲ CD OPEN)	12

Location of Controls

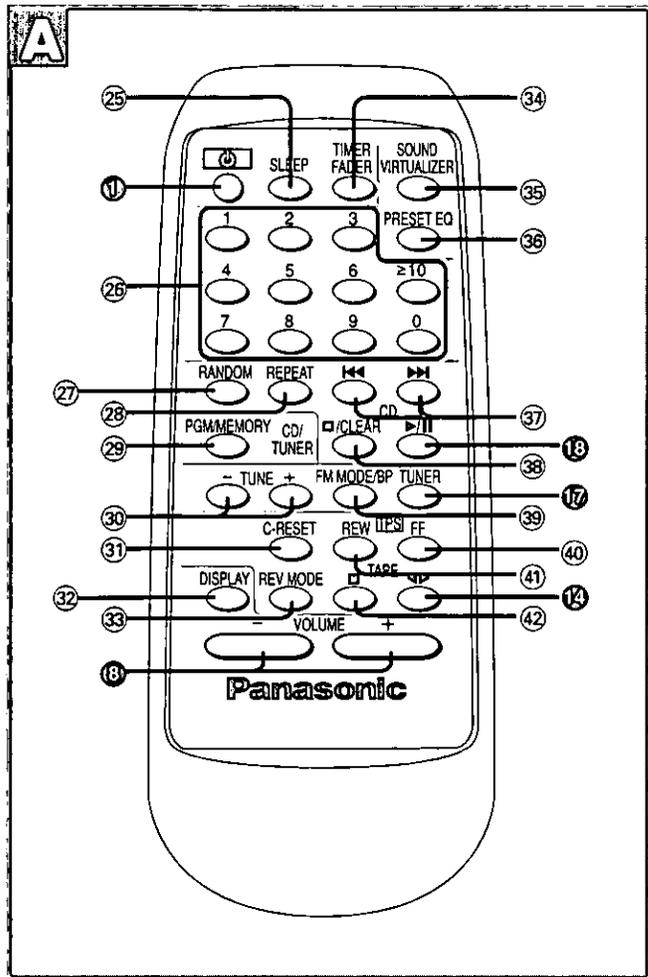

Remote Control

Number	Designation	Reference Page
25	Sleep timer button (SLEEP)	24
26	Numbered button	11, 13, 14
27	Random play button (RANDOM)	13
28	Repeat button (REPEAT)	13
29	CD program/tuner memory button (PGM/MEMORY)	11, 14
30	Tuning buttons (- TUNE +)	10
31	Tape counter reset button (C-RESET)	16
32	Display select button (DISPLAY)	8
33	Reverse mode select button (REV MODE)	15
34	Timer fader button (TIMER FADER)	25
35	Sound virtualizer button (SOUND VIRTUALIZER)	9
36	Preset EQ button (PRESET EQ)	9
37	CD skip/search buttons (◀◀, ▶▶)	12
38	CD stop/program clear button (■/CLEAR)	12, 14
39	FM mode/BP button (FM MODE/BP)	10, 18
40	Fast forward/TPS button (TPS FF)	16
41	Rewind/TPS button (REW TPS)	16
42	Tape stop button (■)	15

When the unit is supplied with AC power, buttons such as 1 functions the same way as the buttons on the main unit. To save power, the unit cannot be turned on from the remote control when batteries are used.


Using Headphones B




Lower the volume and connect the headphones (not included).

Plug type: 3.5 mm stereo

Note

Avoid listening for prolonged periods of time to prevent hearing damage.

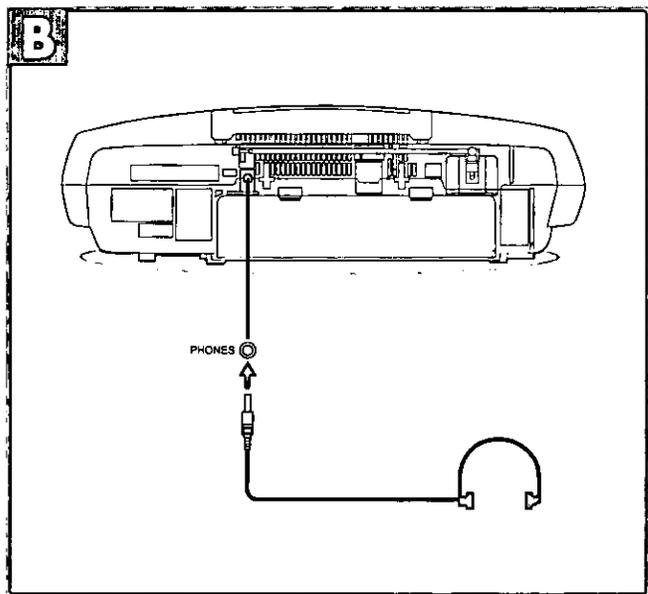

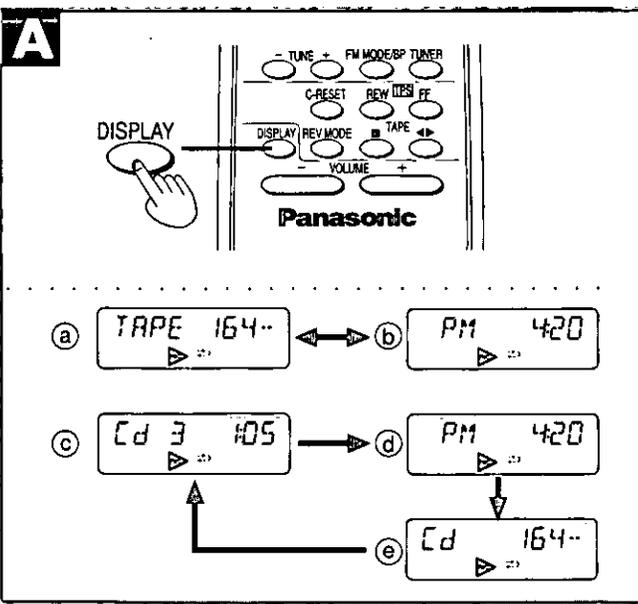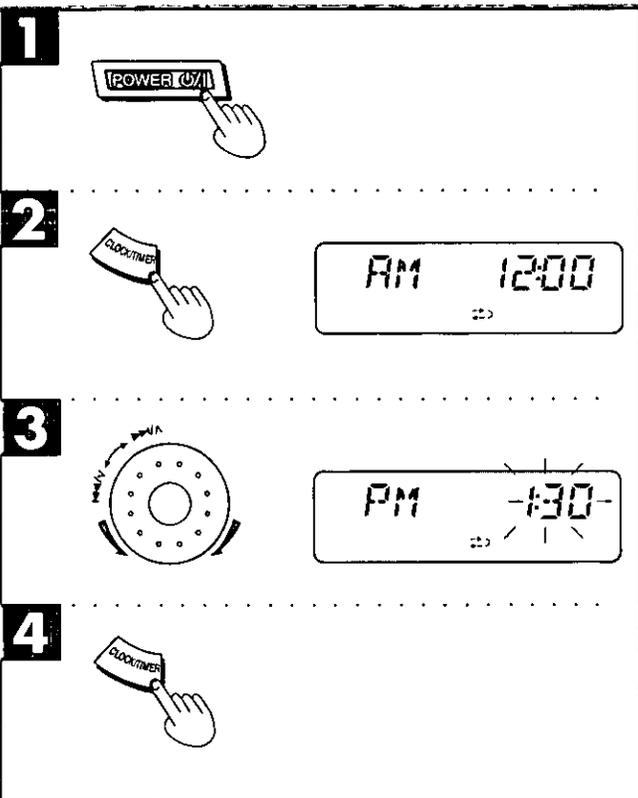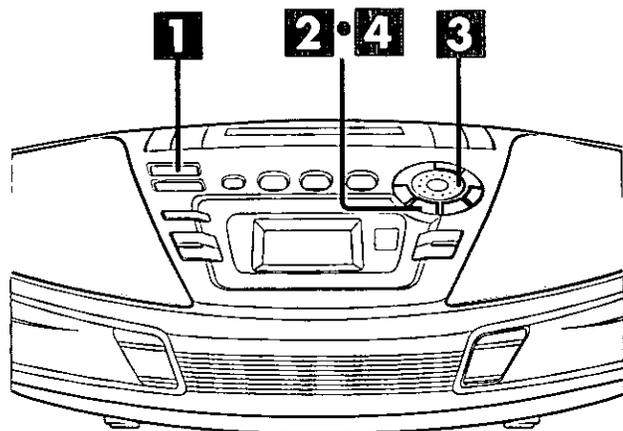

Setting the Clock

The clock has a 12-hour display.
Example: Setting the clock to 1:30 p.m.;

- 1** Press [POWER O/I].
(This turns the unit on.)
- 2** Press [CLOCK/TIMER].
Clock is displayed.
 (The display changes each time the button is pressed.)
- 3** Dial [◀/▶/∨/∧] to show desired time.
The time display can be changed in one minute units by dialing the jog.
Hint
If the jog is dialed in quick succession, the time display will change in 10 minute units.
- 4** While the time display is flashing:
Press [CLOCK/TIMER].
The clock now starts operating, and the display returns to its original status.

To display the clock (When the unit is on): **A**
(Available only from the remote control)

Press [DISPLAY] when the unit is on.

Selecting the Display **A**

(Only from the remote control)

Press [DISPLAY] when the unit is on.
The display changes each time the button is pressed.

- When using the cassette
 - (a) Tape counter
 - (b) Present time
- When using the radio or CD
 - (c) Frequency/play status
 - (d) Present time
 - (e) Tape counter

"---" appears on the tape counter display when a cassette has not been inserted.

Changing the Sound Quality

Selecting equalizer effects

Four types of sound quality can be selected.

- 1** Press [EQ MODE].
(The present sound quality effect will display.)
- 2** Dial [◀◀/V ← →▶▶/∧] to select desired sound quality.

When it is turned clockwise, the displayed image of the sound quality effect changes in the following sequence.

- ① Gives added punch to rock and other music (XBS)
- ② Lightens pop and other music (CLEAR)
- ③ Softens music (SOFT)
- ④ Enhances vocals (VOCAL)
- ⑤ No sound quality effects used

When using the remote control **A**

Press [PRESET EQ].

The displayed image of a sound quality effect changes each time the button is pressed.

Note

- Recordings are not affected by changes in sound quality.
- The effect when listening through headphones is different to that heard from the speakers.
- Select a different sound quality if treble sounds are too strong.

Using the "live" effect (Sound Virtualizer) **B**

(Only from the remote control)

The "live" effect allows enjoyment of the 3-D feeling listening to live music. Compared with earlier surround sound systems, the sound virtualizer leaves middle-range sounds such as vocals clear and gives natural width and depth to music.

Sound virtualizer is effective with stereo sound.





Press [SOUND VIRTUALIZER] to display "■ ■ ■ ■ ■ ■ ■ ■ ■ ■".


To cancel:

Press [SOUND VIRTUALIZER] to clear the "■ ■ ■ ■ ■ ■ ■ ■ ■ ■" indicator.

Note

- The effect is not as apparent when listening through headphones.
- Cancel this effect if noise increases when listening to FM radio.
- Recordings are not affected by changes in sound quality.

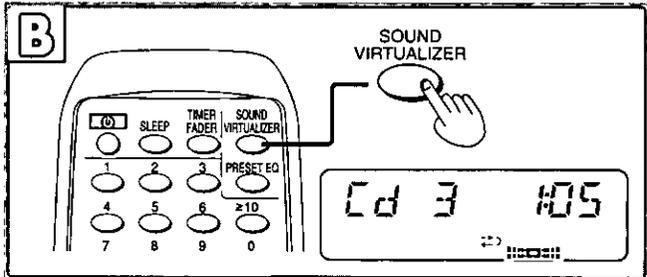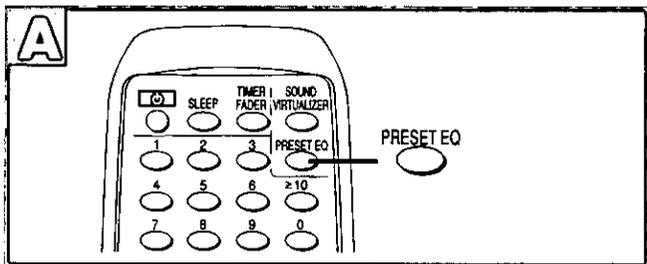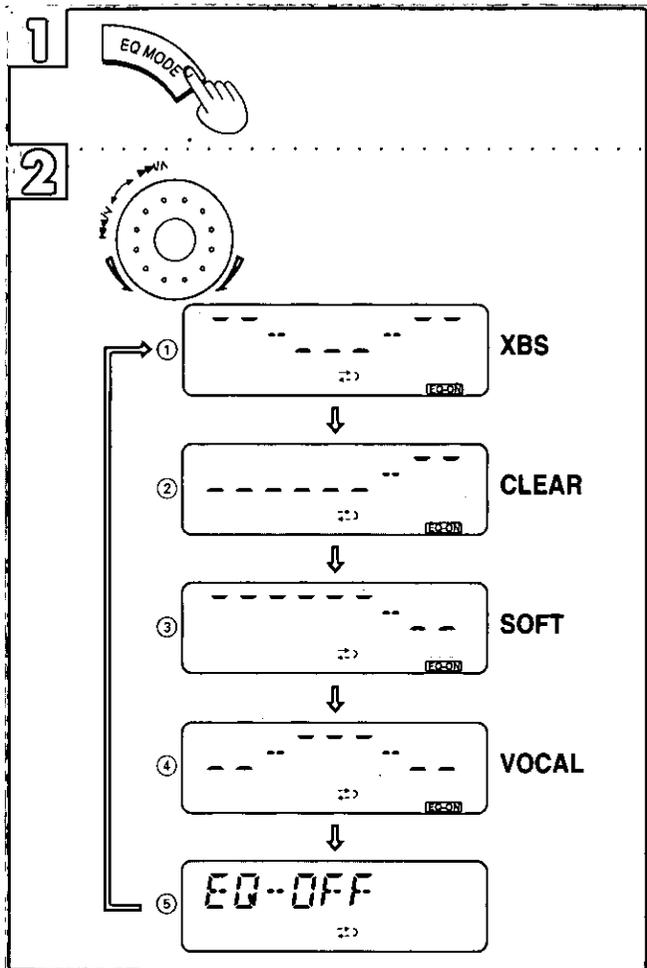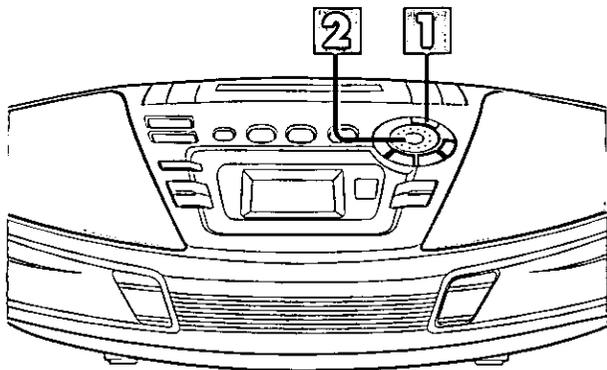

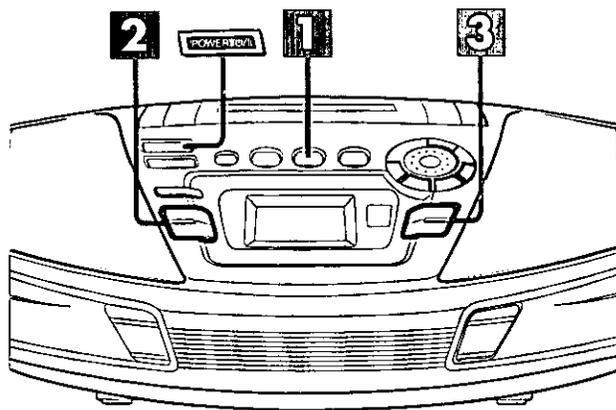

1 TUNER BAND

F M 87.9

2 TUNING


FF FMS/ +/▶
REW/BS/ -/◀

F M 88.1
STEREO

3 VOLUME

+
-

VOL 15
STEREO

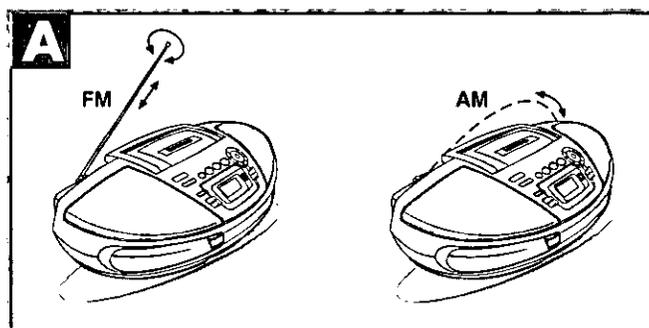

B

Panasonic

Listening to the Radio

Normal tuning

Press [POWER ⏻].

(When using batteries for the power supply)

1 Press [TUNER BAND] to display "AM" or "FM".

AM \leftrightarrow FM

(The display changes each time the button is pressed.)

2 Press [+] or [-] to select the station.

"STEREO" lights when stereo broadcasts are being received.

Automatic tuning:

Keep [+] or [-] depressed until the frequency display starts to change. A station with good reception is automatically selected and the selection process then stops.

To stop automatic tuning, press [+] or [-] again.

Note

Automatic tuning may stop without a station having been tuned in when interference is encountered on neighbouring airwaves. In such a case, tune in a station by tapping [+] or [-].

3 Adjust the volume level.

Hint

- Pressing [TUNER BAND] will automatically turn the unit on and receive the station which was previously tuned (only when AC power is supplied).

- The volume can be adjusted even in the unit off mode. (Available only from the main unit)

Note

- The unit cannot be turned on from the remote control when batteries are being used to power the unit.

- Sound is momentarily interrupted if you load/unload tapes while listening to an AM broadcast.

Improving reception \square

Adjust the length and direction of the whip antenna for FM, and change the direction of the unit for AM.

Note

Radio broadcasts may be hard to receive in a moving vehicle or building because their signals are weak. In such cases, use the unit near a window.

When interference of FM stereo reception occurs \square

(Available only from the remote control)

Press [FM MODE/BP].

The "MONO" display appears.

Monaural sound is selected but noise is reduced and sound becomes clearer.

To return to stereo sound, press [FM MODE/BP] again to turn off the "MONO" display.

Leave the "MONO" display off to listen to FM stereo programs.

FM allocation setting

By adjusting the allocation, you can enable this tuner to receive FM broadcasts allocated in 0.1 MHz steps.

1 Press [TUNER BAND] to select AM.

2 Press and hold [TUNER BAND] for approximately 5 seconds.

The frequency display will return to the minimum frequency of the FM band and the display will begin to flash. Keep holding for approximately 5 more seconds.

3 When the display stops flashing and indicates a different frequency number, release [TUNER BAND].

To return to the original frequency, repeat steps **1** to **3** above.

Note

After changing the "allocation" setting, the frequencies you previously preset into the memory will be cleared.

Listening to the Radio

Preset tuning

Once stations have been programmed, they can easily be tuned in.

Ten FM and ten AM stations can be programmed.

Programming stations

Preset radio stations on the FM and AM bands.

- 1 Press [TUNER BAND] to display "AM" or "FM".
AM ↔ FM
(The display changes each time the button is pressed.)
- 2 Press [+] or [-] to select the station.
- 3 Press [MEMORY - CLEAR] once.
"PGM" flashes.
- 4 While "PGM" is flashing:
Dial [◀◀/V ↔ ▶▶/∧] to select the preset channel to be programmed.
- 5 While "PGM" is flashing:
Press [MEMORY - CLEAR].
If the "PGM" indicator goes out during programming, return to step 3.
- 6 Repeat steps 2 to 5 to program other stations.

Selecting the preset channel

- 1 Press [TUNER BAND] to display "AM" or "FM".
- 2 Dial [◀◀/V ↔ ▶▶/∧] to select the preset channel. **A**
▶▶/∧ : Up
◀◀/V : Down


To select a preset channel with the remote control
Press the numbered buttons. **B**

To select number 10
[≥10] → [1] → [0]

To skip an unwanted preset channel

Example: If channel 3 is not needed

- 1 Select number 3 (steps 1 and 2 above).
- 2 Press [MEMORY - CLEAR] ("PGM" flashes).
- 3 While "PGM" is flashing, dial [◀◀/V ↔ ▶▶/∧] until "--" is displayed.

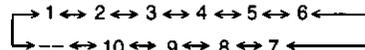

(The display changes each time the jog is dialed.)





- 4 Press [MEMORY - CLEAR].


The next time you select preset numbers, 3 is skipped.

1 ↔ 2 ↔ 4 ↔ 5...

Note

The cleared number can still be selected with the remote control's numbered buttons.

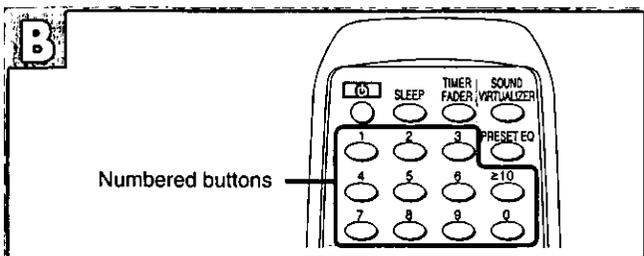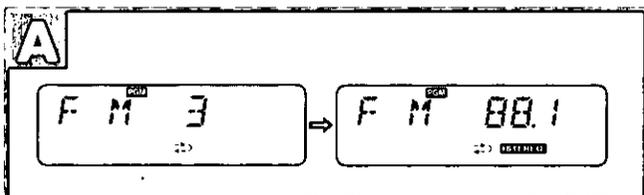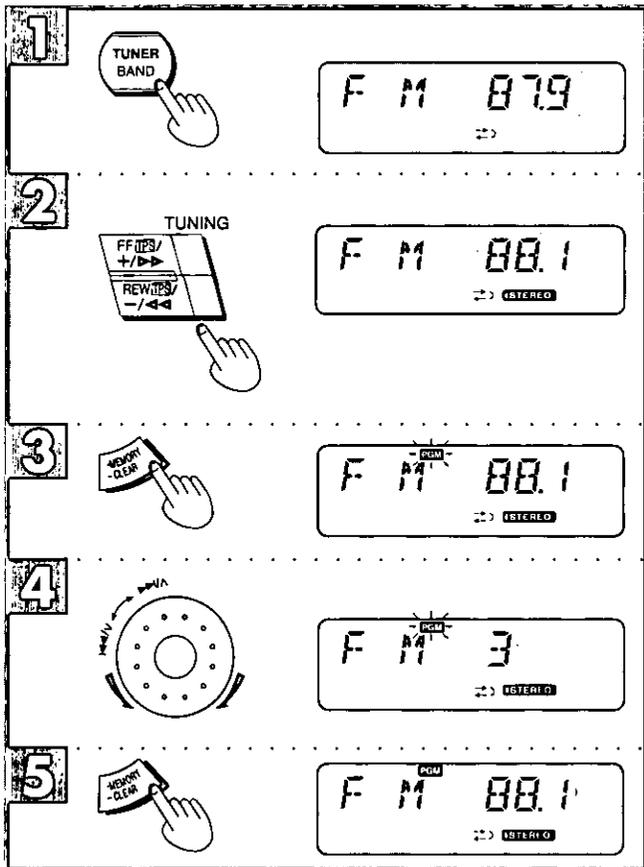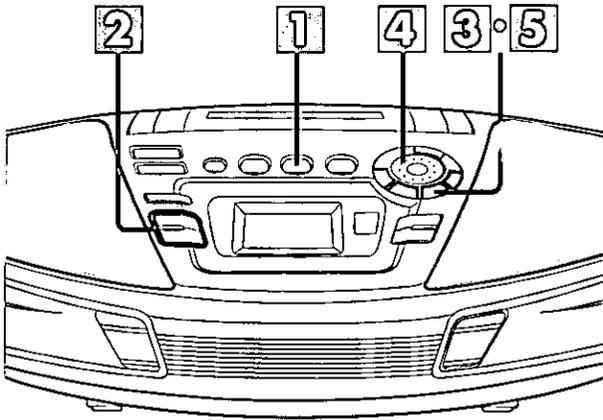

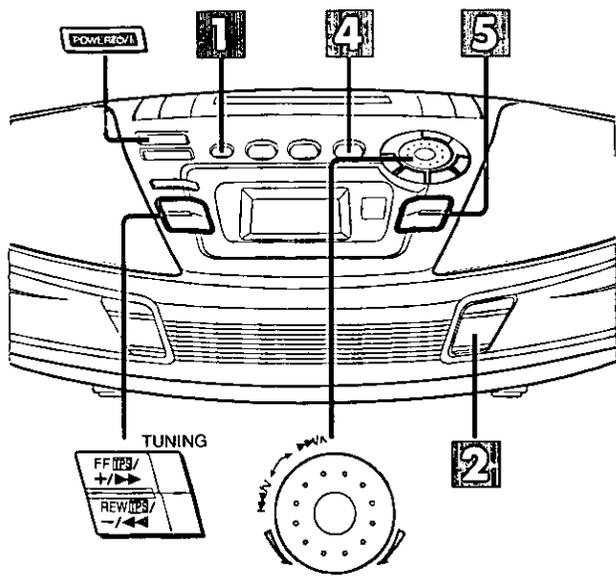

1 NO DISC

2

Label

3

↑

4 Elapsed time of track in play

Track number in play Cd 1 001

5 VOL 15

A NO NO

Listening to CDs

Normal play

Press [POWER ψ /I].

(When using batteries for the power supply)

- 1** Press [\square TAPE/CD] to select the CD mode.
TAPES \leftrightarrow Cd
(The display changes each time the button is pressed.)
"NO DISC" indicates a disc has not been inserted.
- 2** Press [\triangle CD OPEN], then insert a CD.
Insert the CD with the label facing up.
- 3** Push the CD tray to close it.
- 4** Press [\triangleright /II CD].
Plays to the last track and automatically stops.
- 5** Adjust the volume level.

To stop playing:

Press [\square TAPE/CD].

To stop play from the remote control

Press [\square /CLEAR].

Press [\triangleright /II CD] to pause play.

Press [\triangleright /II CD] to return to play mode.

Note

- The unit cannot be turned on from the remote control when batteries are being used to power the unit.
- If interference occurs to radios or televisions, place the unit further away from this equipment.
- Do not use irregular shaped CDs.

Hint

- Pressing [\triangleright /II CD] automatically turns the unit on, and if a CD is inserted, begins play (only when AC power is supplied).
- The volume can be adjusted even in the unit off mode. (Available only from the main unit)

Skipping tracks

Main unit : Dial [\llcorner /V \longleftrightarrow \triangleright /^] to skip tracks.

Remote control : Press the button once for each track to be skipped.

	Backward	Forward
Main unit	\llcorner /V	\triangleright /^
Remote control	\llcorner	\triangleright

Searching backward and forward

Keep the button pressed during play or pause mode.

	Backward	Forward
Main unit	\llcorner	\triangleright
Remote control	\llcorner	\triangleright

Starting play from a selected track (Direct play)

(Only from the remote control)

Preparation : Press [REPEAT/CLEAR].

If "PCM" is illuminated, press [REPEAT/CLEAR] again to clear it.

Select the track number with the numbered buttons.

Play starts at the selected track and continues to the last track.

To select a track numbered 10 or more

Example

Track 20: [≥10] → [2] → [0]

Track 35: [≥10] → [3] → [5]

Repeating tracks

(Only from the remote control)

Press [REPEAT] before or during play.

1- [REPEAT] → [REPEAT] → off (no display)

(The display changes each time the button is pressed.)

Press [▶/||] to begin play if you are in the stop mode.

To repeat only one track:

Press [REPEAT] to display "1- [REPEAT]". **A**

To repeat all tracks on the CD:

Press [REPEAT] to display "[REPEAT]". **B**

To repeat programmed tracks:

① Program desired tracks (steps ① to ④ on page 14).

② Press [REPEAT] to display "[REPEAT]".

③ Press [▶/||] to begin play.

To clear the repeat function:

Press [REPEAT] to cancel "1- [REPEAT]" or "[REPEAT]".

Pressing [▲ CD OPEN] will cancel repeat function.

Random play

(Only from the remote control)

① Press [REPEAT/CLEAR] to select the CD mode.

② Press [RANDOM] when CD is in stop mode.

"RANDOM" is not displayed if pressed when CD is in play mode.

③ Press [▶/||].

All tracks play at random, and play automatically stops.

To cancel random play:

• Press [RANDOM] to clear "RANDOM" display.

If cancelled during random play, the CD plays from the track in play to the end of the CD, and automatically stops.

• Pressing [▲ CD OPEN] will cancel random function.





Note


• Random play cannot be used in combination with program play.

• Skipping to tracks which have already been played is not possible.

• Searching forward and backward are possible only within the track in play.

• Tracks cannot be selected with the remote control's numbered buttons during random play. ("E" is displayed.)

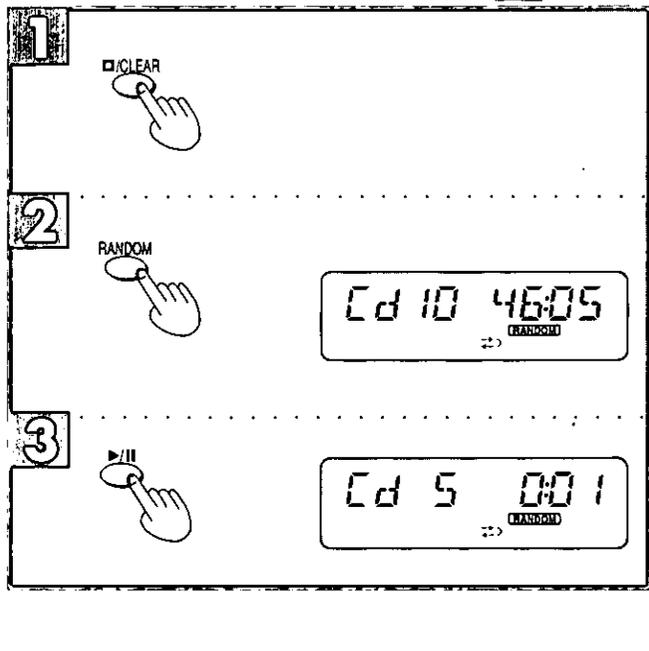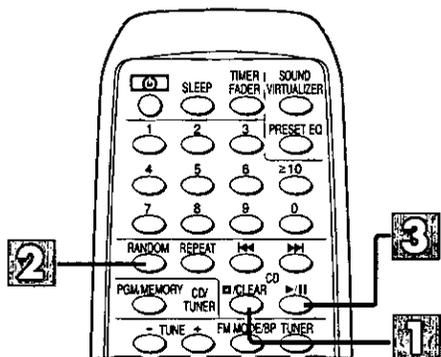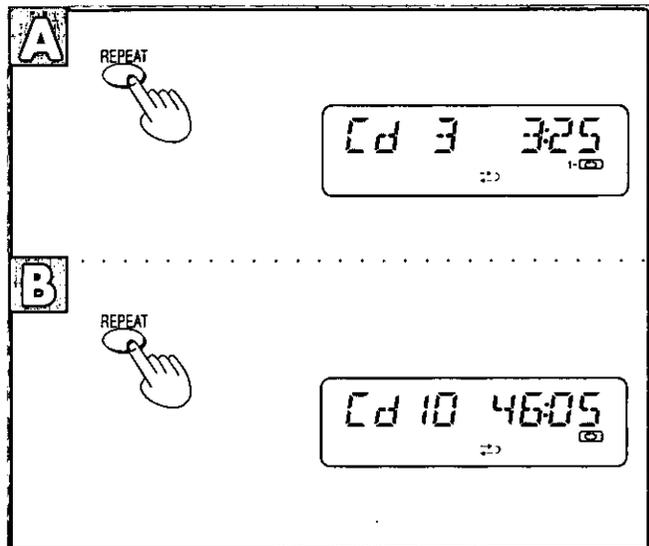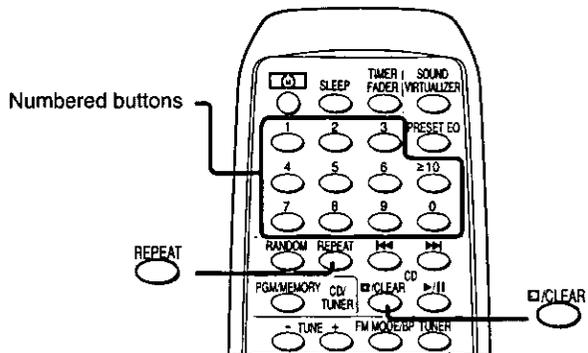

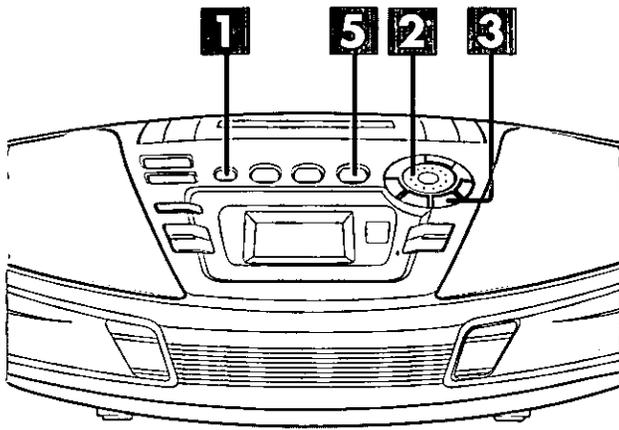

1 Total number of tracks Total play time


2 Track number Play time

3 Play sequence

 Programmed track

4 Total play time of programmed tracks

5 Play time

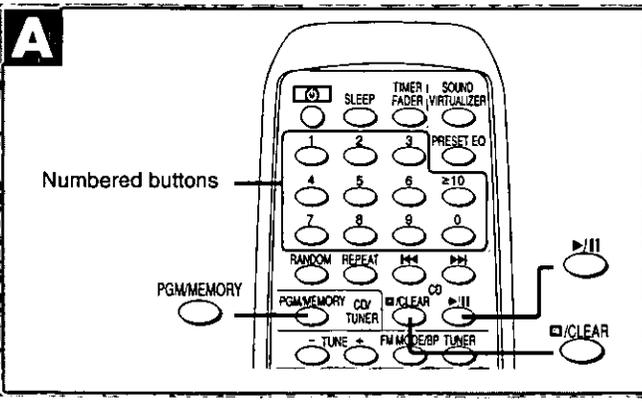

Listening to CDs

Selecting and listening to favourite tracks (Program play)

Up to 36 tracks can be programmed.

- 1** Press [TAPE/CD] to select the CD mode. When "RANDOM" is displayed, press [RANDOM] on the remote control to clear the display.
- 2** Dial [|<</V <-----> >>| / ^] to select the desired track.
- 3** Press [MEMORY - CLEAR] to record the selection.
- 4** Continue programming by repeating steps **2** and **3**.
- 5** Press [>|| CD]. Selected tracks play in the programmed sequence, and play automatically stops.

When using the remote control A

- 1** Press [TAPE/CLEAR] to select the CD mode.
- 2** Press [PGM/MEMORY]. "PGM" illuminates.
- 3** Press the numbered buttons to select the track to be programmed.
- 4** Press [>||].

To cancel program play:

(From the main unit)
 Keep [MEMORY - CLEAR] pressed when CD is in stop mode until "CLEAR" is displayed.
 (From the remote control)
 Press [TAPE/CLEAR] when CD is in stop mode to display "CLEAR". Pressing [▲ CD OPEN] will cancel program function.

When "--:--" is displayed:

Total play time of the programmed tracks exceeds 100 minutes. Tracks can still be programmed and played.

When "FULL" is displayed:

36 tracks have already been programmed. No further tracks can be programmed.




Memory retention of programmed tracks:

Track programming is retained even if play is stopped or the unit is turned off. The display "Cd-P" indicates that programming is retained in the memory.

To check programming:

While "Cd-P" display is on, dial [|<</V <-----> >>| / ^]. The track number and its play sequence can be checked each time the jog is dialed.

Listening to Cassettes

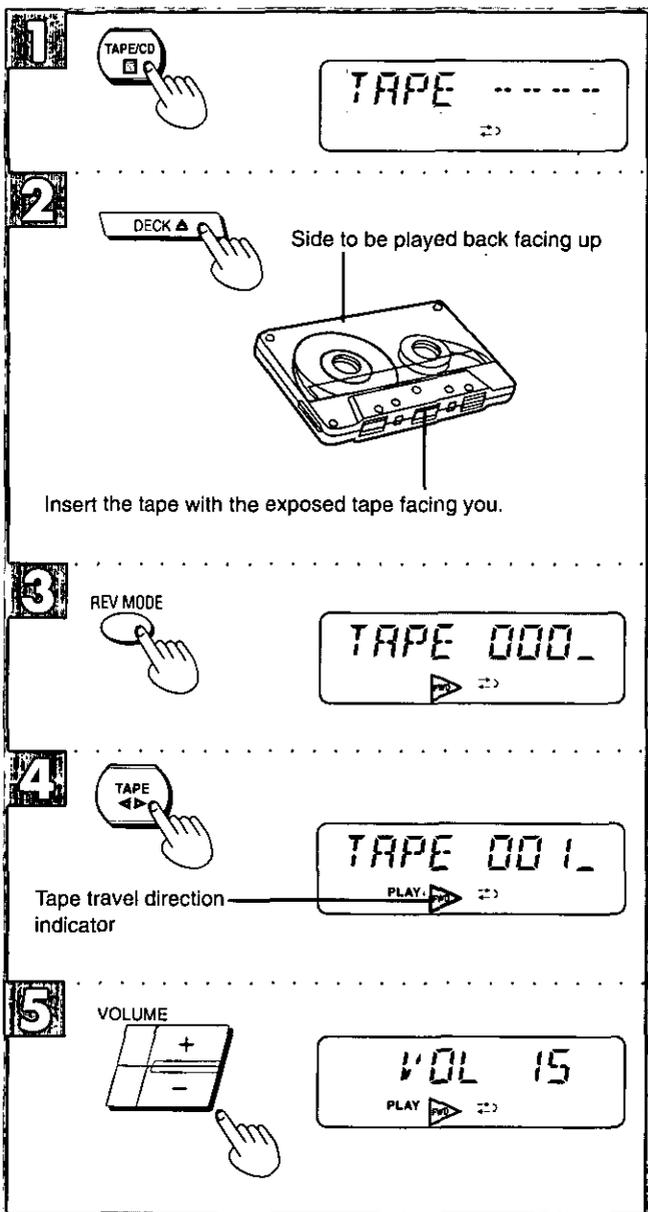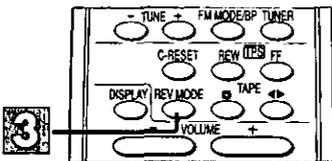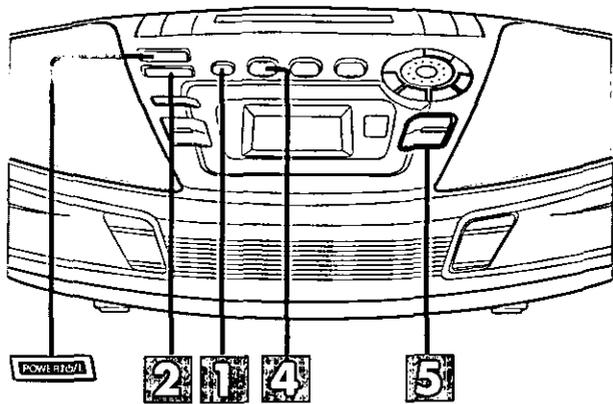

Types of tapes which can be played on this unit:
The unit automatically identifies the type of tape.

Normal position/TYPE I	OK
High position/TYPE II	OK
Metal position/TYPE IV	OK

Press [POWER \odot /I].
(When using batteries for the power supply)

- 1** Press [TAPE/CD] to select the cassette mode.
TAPE \leftrightarrow Cd
(The display changes each time the button is pressed.)
- 2** Press [DECK Δ], load the tape and close the lid.
The direction is automatically set to play the top side ("▶" is displayed).
- 3** Press [REV MODE] on the remote control to select the mode.

(The display changes each time the button is pressed.)
▶ : Both sides are played.
▶▶ : Both sides play repeatedly until [TAPE/CD] is pressed.
▶▶▶ : One side is played.
- 4** Press [◀▶ TAPE].
"FWD" is displayed and play begins. ("REV" is displayed when play begins while "◀▶" is displayed.)
▶▶▶ : The side which is facing up is played back.
▶▶▶▶ : The reverse side is playback.
- 5** Adjust the volume level.

To stop play:
Press [TAPE/CD].
To stop play from the remote control
Press [REW].

To listen to the other side of the tape:
Press [◀▶ TAPE] during playback.


Hint

- Pressing [◀▶ TAPE] automatically turns the unit on, and if a tape is inserted, begins play (only when AC power is supplied).
- The volume can be adjusted even in the unit off mode. (Available only from the main unit)

Note

The unit cannot be turned on from the remote control when batteries are being used to power the unit.

Listening to Cassettes

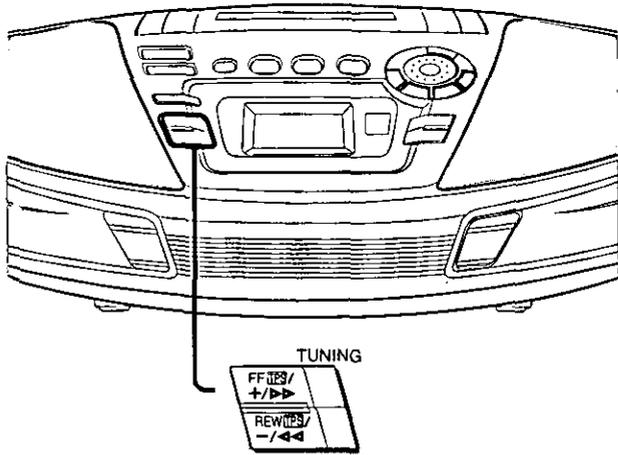

Fast forwarding and rewinding a cassette

Press during stop mode.

	Rewind	Fast forward
Main unit	REW [TPS]	FF [TPS]
Remote control	REW [TPS]	[TPS] FF

Finding the beginning of a track (TPS: Tape Program Sensor)

Press the button once for each track to be skipped (up to 9 tracks).

Press during play mode.

	Backward	Forward
Main unit	REW [TPS]	FF [TPS]
Remote control	REW [TPS]	[TPS] FF

Note




Since the blank spaces between tracks are used for locating the beginning of each track, TPS may not operate in the following cases:

- ① When the blank spaces are 4 seconds or less.
- ② When there are no blank spaces on the tape.
- ③ When there are parts of a track which have been recorded at a particularly low level or which have not been recorded at all (such as with classical music).
- ④ When 10 or fewer seconds have elapsed since the beginning of a track or when there are 10 or fewer seconds until the beginning of the next track.
- ⑤ When a tape is recorded with fade-ins or fade-outs.

To reset the tape counter to "000"

(Available only from the remote control)

Press [C-RESET].

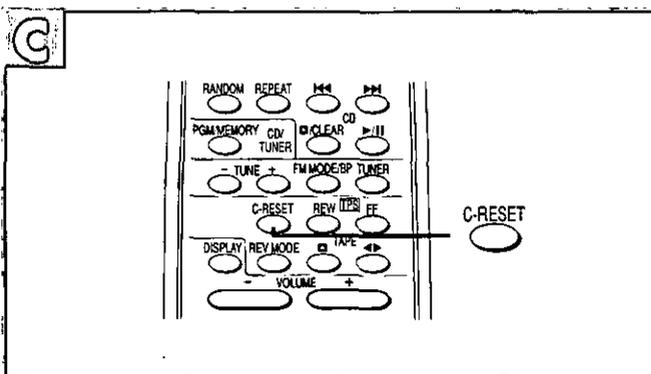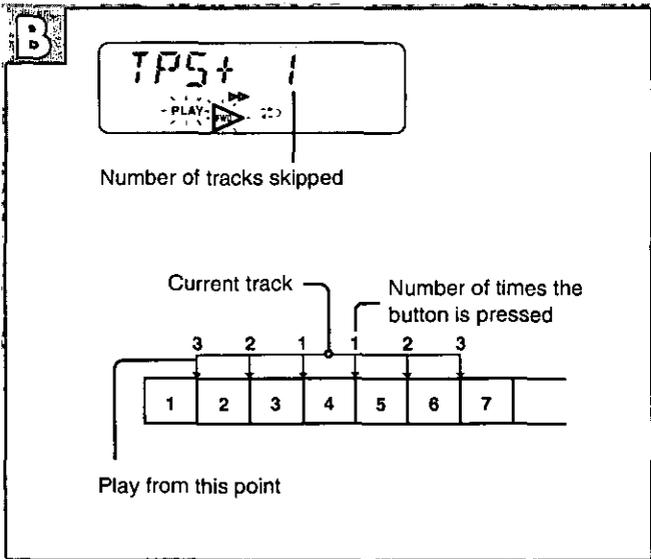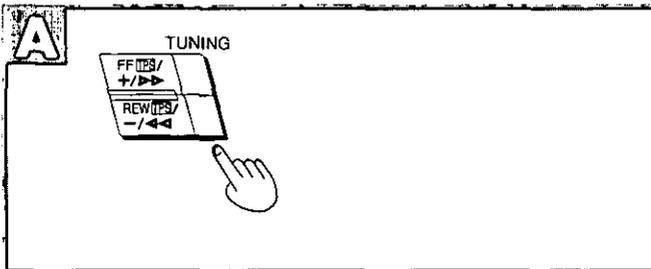

Before Recording

Types of tapes which can be used for recording

Automatically identifies the type of tape.

Normal position/TYPE I	OK
High position/TYPE II	OK
Metal position/TYPE IV	NO

This unit cannot make a recording or erase correctly if metal position tapes are used.

To record from the beginning of the tape

You cannot record on the leader part of the tape. Before recording, wind the tape past the leader to a point where recording can start immediately.


To erase a tape

1. Load the recorded tape with the side to be erased facing upward.
2. Press [ TAPE/CD] to select "TAPE".
3. Press [ O/O II REC/REC PAUSE].

Note


- Any change made to the volume or sound quality during recording will not affect the recording.
- In order to prevent trouble caused by flat batteries, it is recommended that you either supply power to the unit from the household AC outlet or replace all the batteries with new ones when you are recording something which is important to you.
- **The recording level is set automatically.**
- "E" is displayed if the cassette you are using has had its tabs removed and make a recording. (⇒ page 26).





A

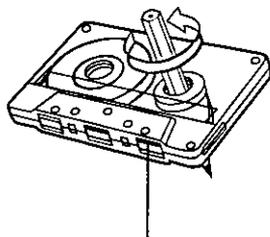

Leader tape (on which nothing can be recorded)

B

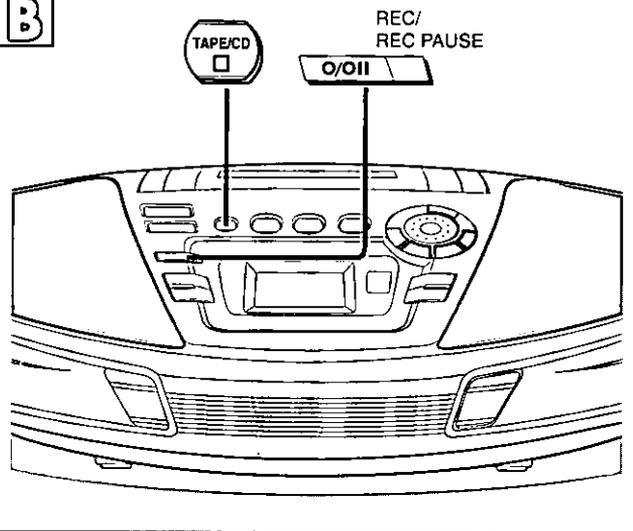

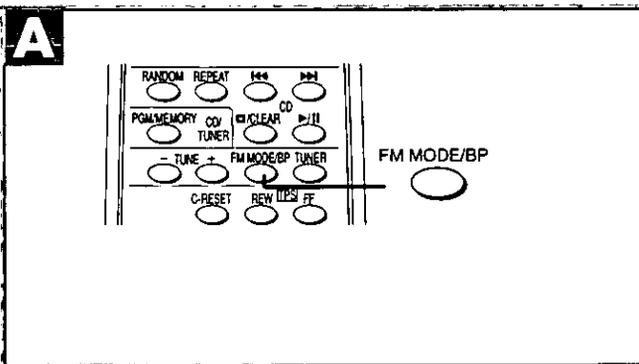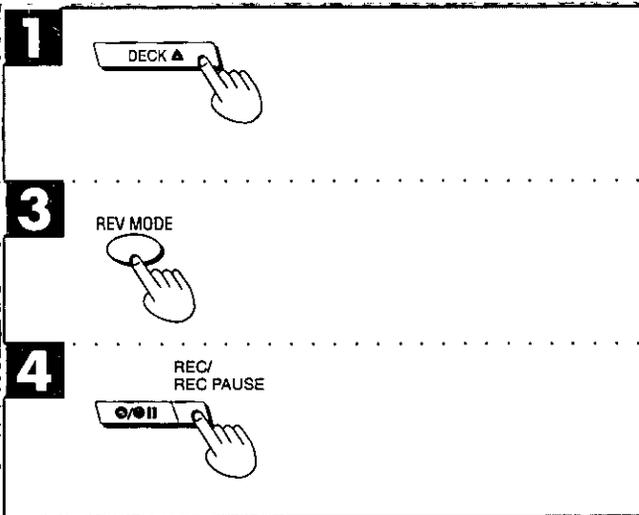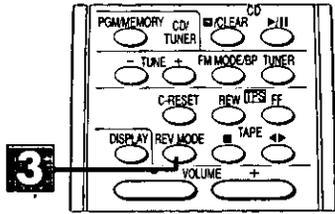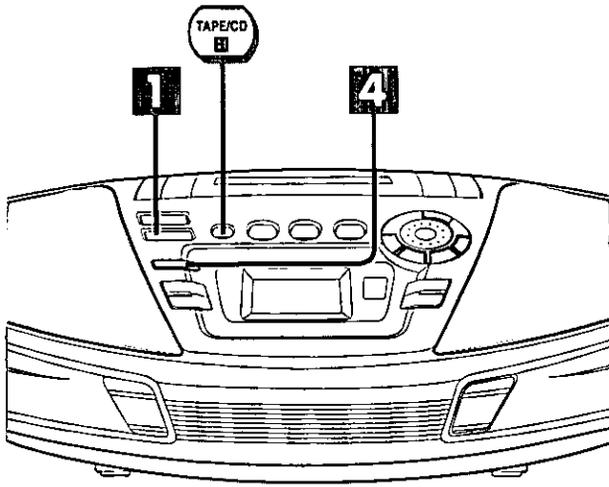

Recording Radio Programs

- 1** Press [DECK \blacktriangle] and load the cassette with the side to be recorded facing up.
- 2** Select desired radio station.
(\Rightarrow page 10)
- 3** Press [REV MODE] on the remote control to select the mode.
 - \Rightarrow \Rightarrow : Records onto both sides, starting with the side facing up.
 - \Rightarrow : Records one side only.
- 4** Press [REC/REC PAUSE].
 "FWD REC" is displayed and recording begins. "REV REC" is displayed when recording begins while " \triangleleft " is displayed.

To stop recording:
Press [TAPE/CD].

To stop recording temporarily:
Press [REC/REC PAUSE].

To resume recording, press [REC/REC PAUSE].

When there is too much interference during AM recording \triangleleft

(Available only from the remote control)

Press [FM MODE/BP].

Select "bP1" or bP2" whichever yields less noise.

Recording from CDs

Normal recording

Recording and CD play begin simultaneously.
Getting ready: Insert the CD.

- 1** Press [DECK \blacktriangle] and load the cassette with the side to be recorded facing up.
Tape length must be longer than the CD play time.
- 2** Press [REV MODE] on the remote control to select the mode.
⇒ ⇐: Records onto both sides, starting with the side facing up.
⇒ : Records one side only.
- 3** Press [TAPE/CD] to select the CD mode.
TAPE ↔ Cd
(The display changes each time the button is pressed.)
- 4** Press [O/O II REC/REC PAUSE].
"FWD REC" is displayed and recording and CD play begin simultaneously. "REV REC" is displayed when recording begins while "◀" is displayed.

To stop recording:
Press [TAPE/CD].

To pause recording:
Press [O/O II REC/REC PAUSE] (CD will also pause).
To begin recording again, press [O/O II REC/REC PAUSE].

After recording
When CD play is finished, the cassette simultaneously stops.




To continue recording a different CD on the same cassette:
1. Press [CD OPEN] and replace the CD.
2. Press [O/O II REC/REC PAUSE].

Recording favourite tracks

1. Program desired tracks (⇒ steps 2 to 4 on page 14) after step 3.
2. Press [O/O II REC/REC PAUSE].

To skip tracks not to be recorded

1. Press [O/O II REC/REC PAUSE] during recording.
CD will also pause.
2. Dial [◀ / V ← → / ^] to display the number of the next track to be recorded.
3. Press [O/O II REC/REC PAUSE] to begin recording again.

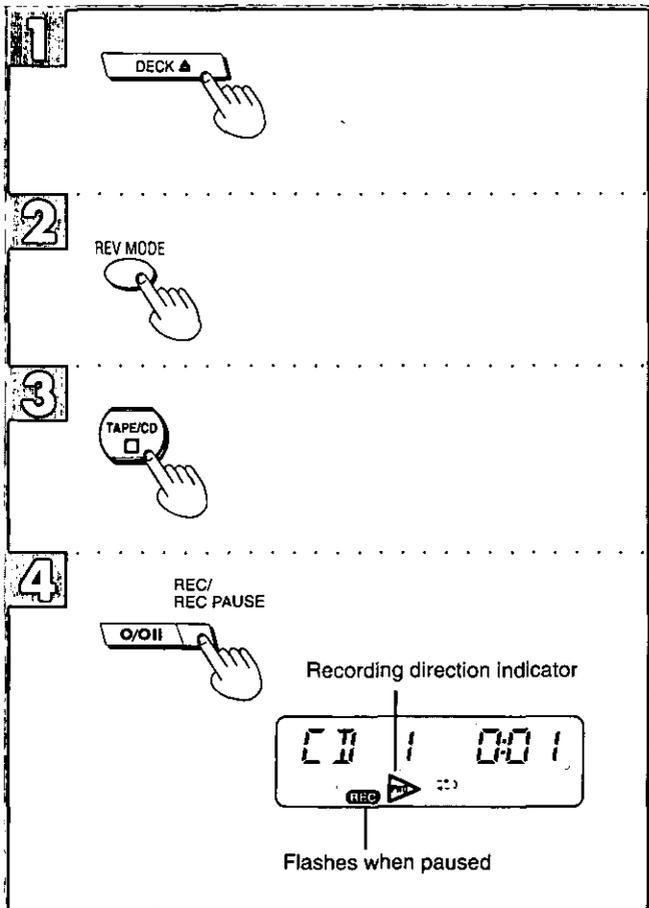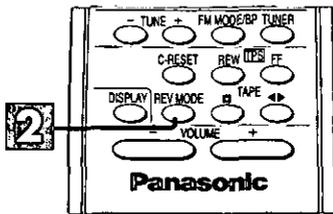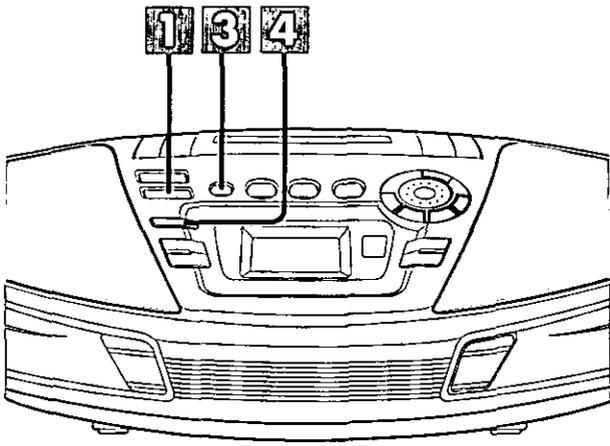

Recording from CDs

Easy CD recording (Auto)

Recording all tracks or programmed tracks of a CD in programmed order.

- It is not necessary to rewind the cassette. Recording always begins from the beginning of the side facing up.
 - If the side ends in the middle of a track, the track which was cut off is recorded on the opposite side from the beginning.
- Getting ready: Insert the CD.

1 Press [TAPE/CD] to select the CD mode.

2 Press [CD REC MODE] to display "AUTO".

AUTO → 1-REC → OFF

(The display changes each time the button is pressed.)
The necessary tape length will be displayed. (Example: Tape of 51 minutes or more necessary to record all tracks.)

3 Insert a cassette which is longer than that displayed in step 2.

Insert with the side to be recorded first up.

4 Press [O/O II REC/REC PAUSE].

Automatically rewinds, and recording from the first track begins after a 10 second interval.
Reverse mode is displayed as "⇒".

- ① Rewinding tape
- ② Recording 10 second interval
- ③ Recording begins

The unit stops when recording finishes.

To stop recording (CD will also stop):



Press [TAPE/CD].

To record favourite tracks:

1. Program desired tracks (⇒ steps 2 to 4 on page 14) after step 1.
2. Continue to perform above steps 2 to 4 to start recording.

Note

- Auto CD recording cannot be used in combination with random play and repeat play (⇒ page 13).
- "C----" is displayed if the tape required for recording exceeds 120 minutes.

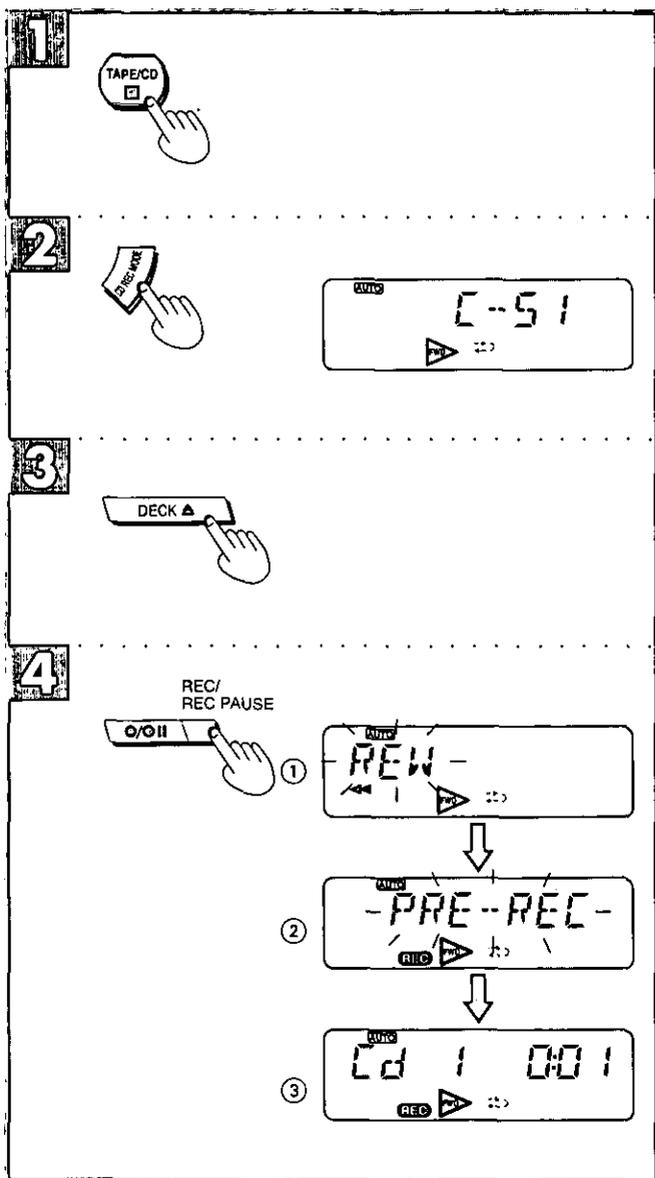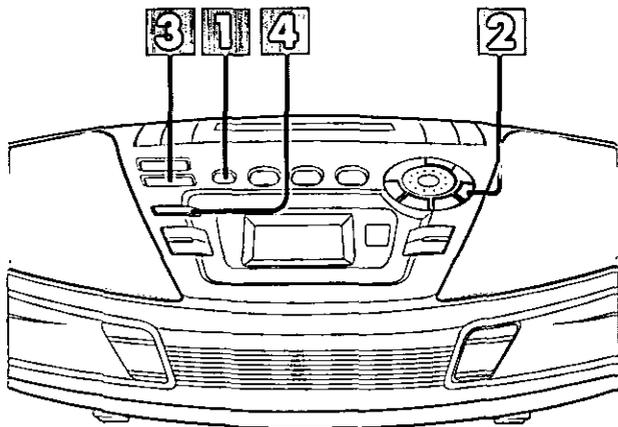

Recording from CDs

One track recording (1 TRACK)

Records one track from the CD and stops. This function is convenient when recording different tracks from various CDs. Recording can begin from any place on the tape. Getting ready: Insert a CD.

- 1 Press [DECK \blacktriangle] and load the cassette with the side to be recorded facing up.

Recording direction is automatically set to begin from the side facing up (the " \blacktriangleright " indicator is displayed). Find the position on the tape where recording is to begin.

- 2 Press [TAPE/CD] to select the CD mode.

- 3 Press [CD REC MODE] to display "1-REC".

AUTO \rightarrow 1-REC \rightarrow OFF

(The display changes each time the button is pressed.)

- 4 Dial [\lll / \vee \longleftrightarrow \ggg / \wedge] to select the track to be recorded.

Omit this step when recording the first track on the CD.

- 5 Press [O/O II REC/REC PAUSE].

CD play and recording begin simultaneously. Records only one track and stops.

Reverse mode is displayed as " \rightleftarrows ".

- If the track is interrupted when the end of the cassette is reached, recording automatically begins again from the beginning of the track on the opposite side (if recording was begun on the opposite side, recording stops at the end of the present side).

To continue recording with another CD:

Press [\blacktriangle CD OPEN], insert a CD and follow steps 4 and 5.



To stop recording (CD will also stop):

Press [TAPE/CD].

[HIT]

Try listening to the track to check the type of song it is before recording. Press [CD REC MODE] to display "1-REC," then press [\blacktriangleright II CD] to play the CD.

Press [O/O II REC/REC PAUSE] to record a song you like during CD play. The track is recorded from the beginning.

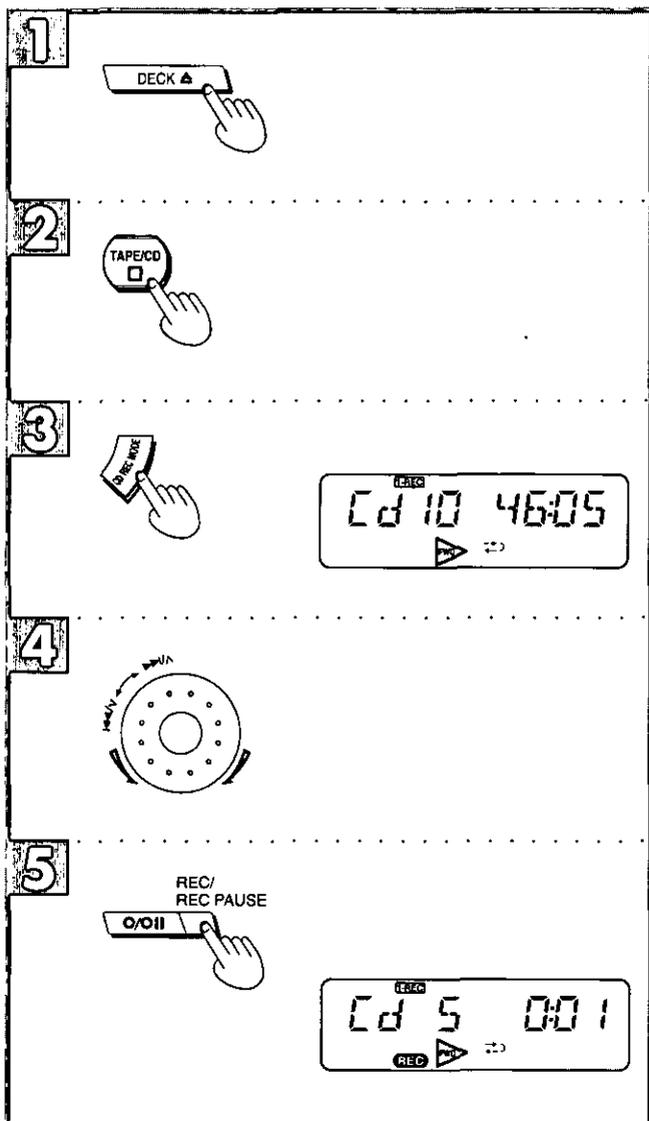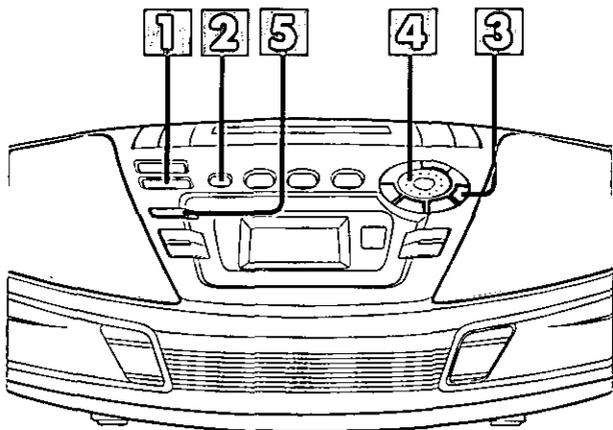

Using the Timer

Using the Play Timer

Select this timer when you want to use the timer as an alarm clock. You can wake up with listening to music (CD, tuner or tape) at a desired volume level and time.

The clock has a 12-hour display.

Make sure that you have completed "Setting the Clock" on page 8.

Example: Setting CD play from 7:30 a.m. to 8:30 a.m. on play timer.

Setting the start and finish times

- 1** Press [POWER \odot /I] to turn the unit on.
- 2** Press [CLOCK/TIMER] twice to set "ON" and "⊙PLAY" flashing.
They flash for about 10 seconds.

(The display changes each time the button is pressed.)
- 3**
 - ① (Within 10 seconds) Dial [◀◀/V ↔ ▶▶/^] to set the start time.
 - ② Press [CLOCK/TIMER].
Finish time flashes.
- 4**
 - ① Dial [◀◀/V ↔ ▶▶/^] to set the finish time.
 - ② Press [CLOCK/TIMER].
Display returns to original mode.
When "E" is displayed:
Check whether start and finish are set for the same time.

Note

The set time remains active until changed.

Programming play

- 5** Get the music source ready.
Listening to the radio: → page 10
Listening to CDs: → page 12
Listening to cassettes: → page 15
- 6** Press VOLUME [+], [-] to adjust volume for time of play.
The volume set here remains effective even if it is changed after step 7.

Setting the timer function


- 7** Press [⊙PLAY/REC] to display "⊙PLAY".
Each time it is pressed:
⊙PLAY → ⊙REC → off (no display)

If the record timer has not been set
Each time it is pressed: ⊙PLAY ↔ off (no display)
When "E" is displayed:
Check whether the clock has been set (→ page 8).

- 8** Press [POWER \odot /I] to turn the unit off.
Programming can be checked when the unit is off (→ page 24).

To clear the timer function:

Press [⊙PLAY/REC] when the unit is on to clear the "⊙PLAY" display.

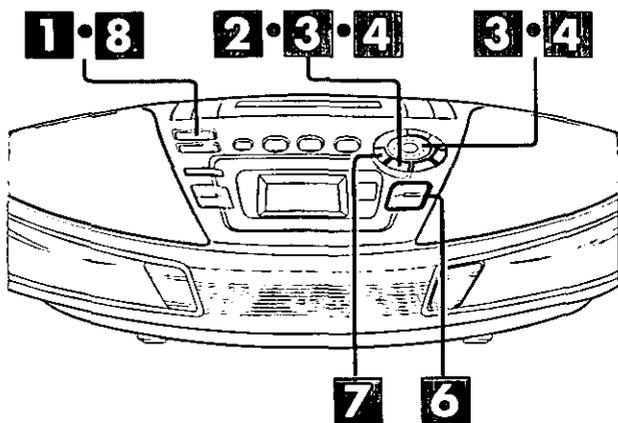

1

2

3

①

②

ON

OFF

4

①

②

OFF

6

7


8

Flashes at programmed time

Timer

22

ROT4760

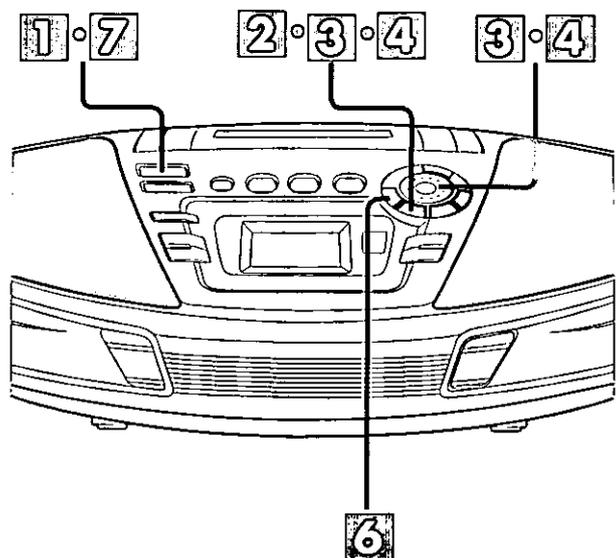

1 Press [POWER O/I].

2 Press [CLOCK/TIMER].

3 ① Turn the dial clockwise to set the start time. ② Press [CLOCK/TIMER].

4 ① Turn the dial clockwise to set the finish time. ② Press [CLOCK/TIMER].

6 Press [PLAY/REC].

7 Press [POWER O/I].

Flashes when recording begins

Using the Timer

Using the Recording Timer

Select this timer when you want to use the timer to record a mid-night program or while you are out.

The clock has a 12-hour display.


Make sure that you have completed "Setting the Clock" on page 8.

Example: Recording from 1:30 p.m. to 2:30 p.m.

Setting the start and finish times

- 1** Press [POWER O/I] to turn the unit on.
- 2** Press [CLOCK/TIMER] four times to set "ON" and "O REC" flashing.

They flash for about 10 seconds.

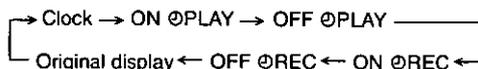

(The display changes each time the button is pressed.)

- 3** ① (Within 10 seconds) Dial [\leftarrow / \leftarrow] to set the start time.
- ② Press [CLOCK/TIMER].

Finish time flashes.

- 4** ① Dial [\leftarrow / \leftarrow] to set the finish time.

② Press [CLOCK/TIMER].

Display returns to original mode.

When "E" is displayed:

Check whether start and finish are set for the same time.

NOTE

The set time remains active until changed.

Programming recording

- 5** Get the music source ready.
 - ① Select radio station.
 - ② Insert cassette into deck.
 - ③ Press [REV MODE] on the remote control to select the mode.

- Reduce the volume level now if you do not wish to listen during recording.

(Available only from the remote control)

- If there is excessive interference when recording an AM station, press [FM MODE/BP] to select "bP1" or "bP2" which ever yields less noise.

Setting the timer function

- 6** Press [PLAY/REC] to display "O REC".
- Each time it is pressed: $\text{OPLAY} \rightarrow \text{O REC} \rightarrow \text{off (no display)}$

If the play timer has not been set

Each time it is pressed: $\text{O REC} \leftrightarrow \text{off (no display)}$

When "E" is displayed:

Check whether the clock has been set (\rightarrow page 8).

- 7** Press [POWER O/I] to turn the unit off.
- Programming can be checked when the unit is off (\rightarrow page 24).
The unit turns on approximately 30 seconds before the set start time and recording begins.

To clear the timer function:

Press [PLAY/REC] when the unit is on to clear the "O REC" indicator.

Using the Timer

Using the Play/Recording Timer

To play music after programming:

- ① Begin playing of desired music source. Programming for the play/record time remains in the memory even if the volume or source is changed during play.
- ② After playing music, turn the unit off.
 - Direction displayed when unit is turned off is activated in the play/recording timer. After playing music, check the direction ("▶" or "◀") of the cassette to be played or recorded before turning the unit off.
 - When using the play timer with a CD, check the setting of the random, repeat or programmed play mode before turning the unit off.

To change the source or volume of the play timer function:

Press [PLAY/REC] to clear the "PLAY" indicator and follow steps ⑤ to ⑧. (→ page 22)

To change the radio station to be recorded:

Press [PLAY/REC] to clear the "REC" indicator and follow steps ⑤ to ⑦. (→ page 23)

To use the timer at the same time daily:

Check that "PLAY" or "REC" is displayed and turn the unit off.

Note

Always turn the unit off before the programmed start time. The timer does not activate if unit is on.

To check programming

Press [CLOCK/TIMER] when unit is off.

The display automatically changes in the following order.

Display example: Play CD from 7:30 to 8:30 on play timer. **A**


- ① Programmed on time
- ② Programmed off time
- ③ Programmed music source
- ④ Timer volume
- ⑤ Original display

Using the Sleep Timer

(Only from the remote control)

The unit off time can be set up to two hours ahead of the present time. It lets you fall asleep while listening to music.

Press [SLEEP] to select the desired time. **B**

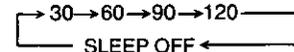

(The display changes each time the button is pressed.)

The unit is turned off after the set time has elapsed.

To release the timer function:

Press [SLEEP] to select "SLEEP OFF".



To check the time remaining during operation:

Press [SLEEP].

To change the time remaining during operation:

Press [SLEEP] to show the remaining time then press [SLEEP] to select the desired time.

(Continued on next page)

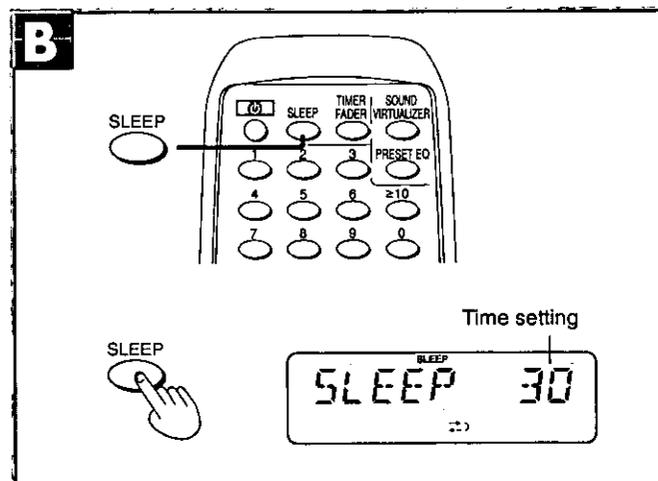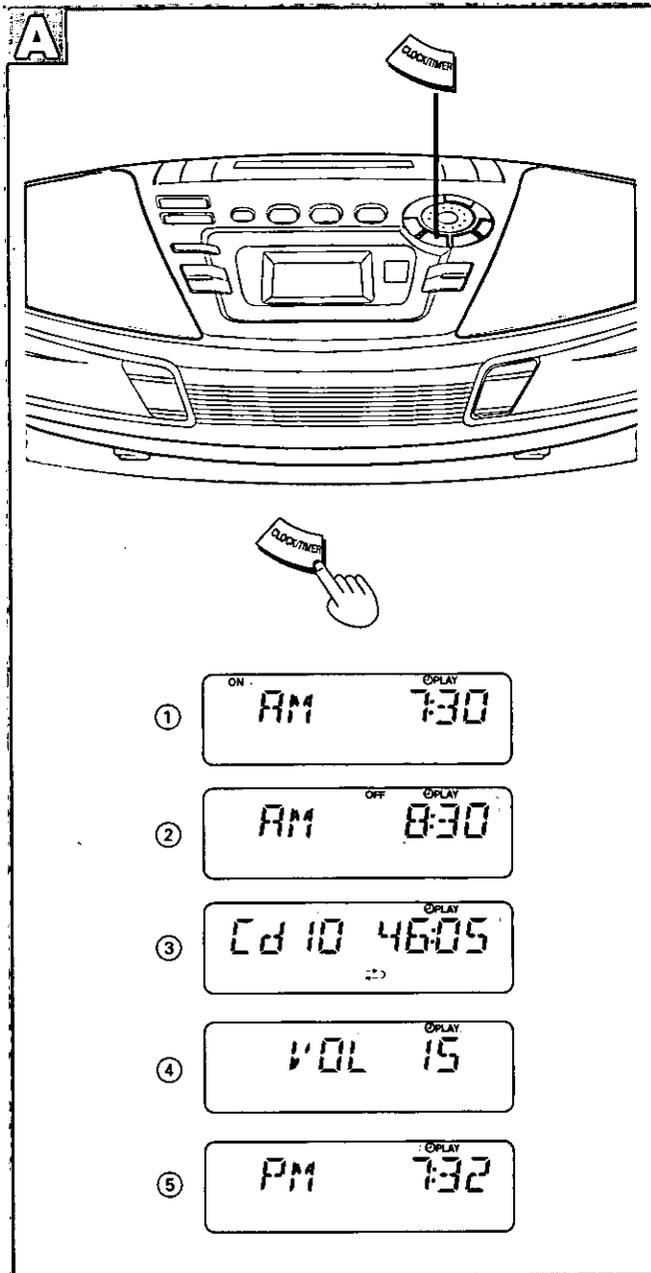

Using the Timer

Using the sleep timer

Using the sleep and play timers in combination

Example: Falling asleep listening to FM programming and waking up the next morning listening to a CD. **A**

1. Program the play timer for CD play (⇒ page 22).
2. Select the desired radio station and set the sleep timer. Play starts at the set volume even if it was reduced after setting the timer.

• When programmed times overlap **B**

When play is programmed to begin before the sleep timer turns the unit off, the play timer is not activated. The unit turns off after the programmed sleep timer is completed. Always set the sleep timer so that the unit turns off by the time the play timer is programmed to begin.

Using the sleep and recording timers in combination

Example: Falling asleep listening to a CD and recording FM programming during the night. **C**

1. Program the recording timer to record the FM programming and insert recording cassette into deck (⇒ page 23).
2. Insert the CD and set the sleep timer.

• When programmed times overlap **D**

When recording is programmed to begin before the sleep timer turns the unit off, the recording timer is not activated. The unit turns off after the programmed sleep timer is completed. Always set the sleep timer so that the unit turns off by the time the recording timer is programmed to begin.

Note

The play and recording timers cannot be used together.

Using the timer fader function (Timer Fader)

(Only from the remote control)

• Using timer fader and sleep timer in combination

Volume will decrease slowly with time till power is turned off at the end of sleep.

Select this function to provide much comfortable sleep when listening to tape, CD or radio with sleep mode.

• Using timer fader and play timer in combination

Volume will increase from 0 to last set volume level gradually.

Select this function to provide a more comfortable wake up when using the play timer as an alarm.

Press [TIMER FADER] to indicate " **FADER** ". **E**




To cancel the **TIMER FADER** function:






Press [TIMER FADER] again to cancel.

" **FADER** " goes off.

Note

- All timer functions are affected while " **FADER** " is displayed.
- Timer fader mode works everyday as long as " **FADER** " is displayed.
- If record timer is used, there will be no affect to the recording.

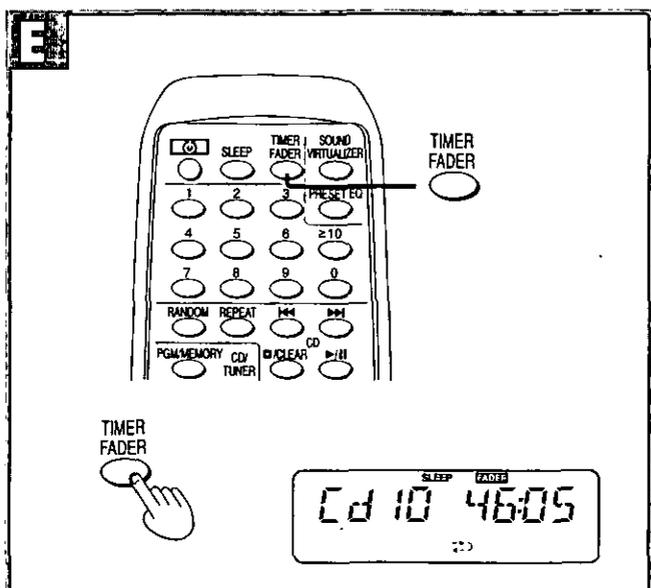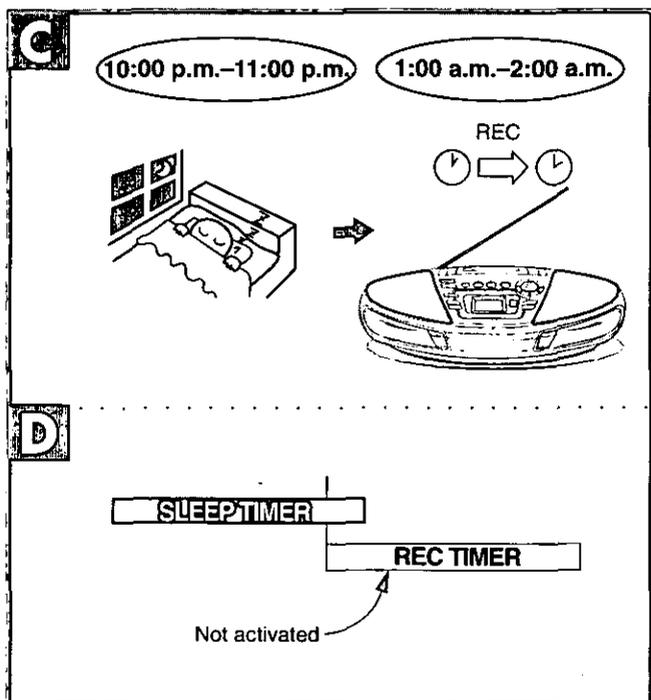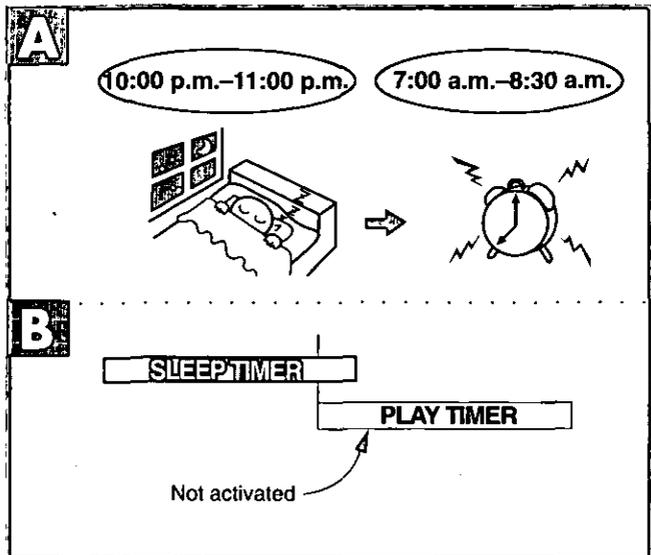

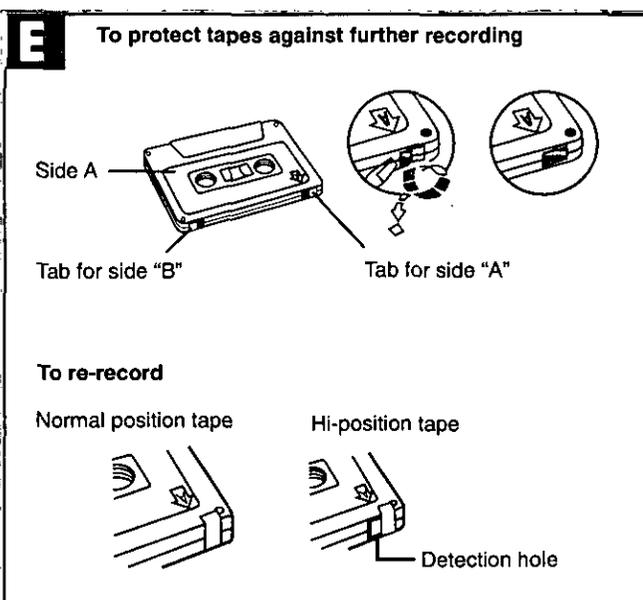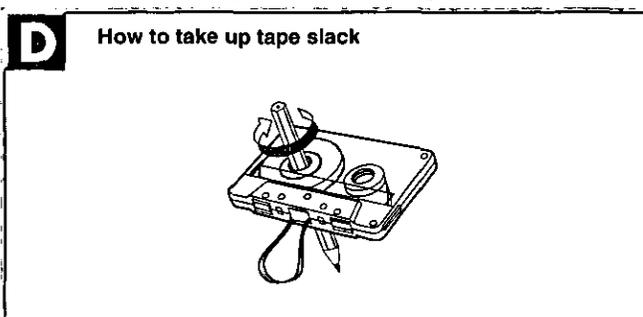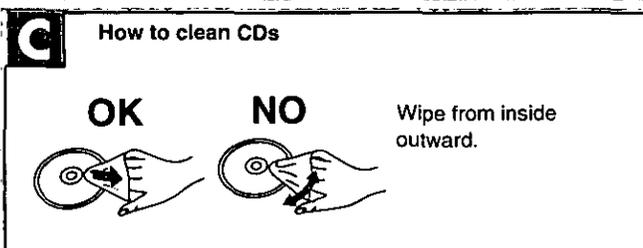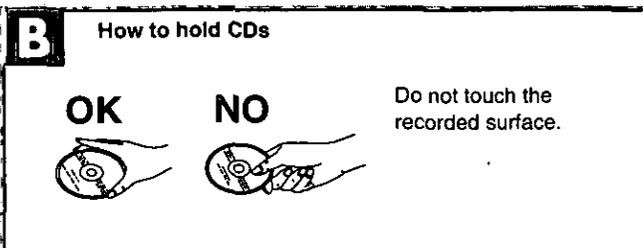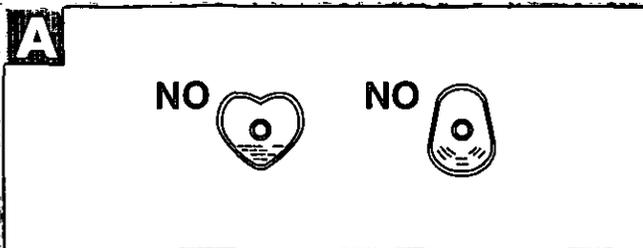

Concerning compact discs

With this player, you can play compact discs having this mark.
However, do not use irregular shaped CDs.
CDs of the sort can damage the unit. 

COMPACT
disc
DIGITAL AUDIO

Handling precautions

Handle CDs as shown on the left (B - C).

- If you are taking the disc from a cold to a warm environment, moisture may form on the disc. Wipe this off with a soft, dry, lint-free cloth before using the disc.
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Do not attach labels or stickers to CDs. (Do not use CDs with exposed adhesive from tape or left over peeled off stickers.)
- Do not use scratch-proof protectors or covers other than those specified for use with this system.

Storage precautions

Be sure to store discs in their cases to protect them from dust, scratches, and warping.

Do not place or store discs in the following places

- Locations exposed to direct sunlight
- Humid or dusty locations
- Locations directly exposed to a heat vent or heating appliance
- In the glove compartment or on the rear deck of an automobile

Concerning cassette tapes

Selection of cassette tapes

Tapes can get caught on the capstans. Use caution with the following types of tapes.

Cassette tapes exceeding 100 minutes

Tapes are made of a thin film material. Do not repeatedly advance and stop the tape, fast-forward it or rewind it.

Endless-tapes

For this unit, it is recommended to use the tape which is appropriate to the auto reverse mechanism.

Always read the instructions provided with your tapes.

Tape slack

Tape slack may cause the tape to break.
Use a pencil or similar object to take up the slack.

Erasure prevention

Use a screwdriver or similar object to break out the tab.

To re-record on a protected cassette

Cover the hole with adhesive tape.
Do not cover the detection hole on hi-position tapes.

Storage precautions

Do not place or store tapes in the following places:

- In high temperature (35°C or higher) or high humidity (80% or higher) areas.
- In a strong magnetic field (near a speaker, on top of a TV, etc.) This can erase a recording.
- Locations exposed to direct sunlight.

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation.

If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

For detailed instructions, contact an authorized servicenter in the U.S.A. and Panasonic Canada Inc. Customer Care Centre in Canada.

In the U.S.A. 1-800-211-7262 or web site (<http://www.panasonic.com>)

In Canada 905-624-5505 or web site (www.panasonic.ca/faq.html)

Problem	Probable cause (s)	Suggested remedy	Page
Common problems			
"E" appears.	Have you made an incorrect operation?	Read the operating instructions and try again.	/
"U01" appears.	Are the batteries flat?	Replace them with new ones. Alternatively use a household AC outlet as the power source.	5
"U02" appears.	Power is not supplied the unit.	Install the batteries or connect the power cord.	5
Preset channels, timer functions, and clock are cleared.	Did you unplug the unit without inserting memory batteries?	Insert memory batteries.	5
While listening to CDs			
Play does not start. No display of track numbers etc.	Has the CD been installed upside down?	Install the CD with the label side facing up.	12
	Has there been a sudden change in temperature? For instance, was the unit brought straight from a cold place into a warm location?	Condensation may have formed on the lens unit. Leave it for about an hour before attempting operation again.	/
Certain sections are not played properly.	Is the CD soiled?	Wipe with a soft cloth.	26
	Is the CD scratched?	Replace with a new CD.	/
While listening to tapes			
No recording.	Have the tape's accidental erasure prevention tabs been broken out?	Cover the holes with adhesive tape.	26
Poor quality sound.	Are the heads soiled?	Clean them.	Back cover
While listening to the radio			
Stations cannot be tuned in well.	Has the antenna been adjusted properly?	Try changing its direction.	10
Noise heard during AM reception.	Are you using a remote control of other appliances near the unit?	Use the remote control at a distance.	/
	Are you operating the unit and a TV set at the same time?	Place the unit at a distance from the TV. Alternatively turn the TV off.	/
While using the timer			
No timer operation at the programmed time.	Is the unit turned on (when the play timer and the recording timer are being used)?	Turn the unit off upon completion of the settings.	22, 23
	Is the programmed timer indicator (⊕PLAY, ⊕REC or SLEEP) on?	Operate again so the indicator lights.	22-24

Technical Specifications

Radio

Frequency range

FM

87.9-107.9 MHz (200 kHz steps)

87.5-108.0 MHz (100 kHz steps)

AM

520-1710 kHz (10 kHz steps)

CD player

Sampling frequency

44.1 kHz

Decoding

16 bit linear

Beam source

Semiconductor laser (wavelength 780 nm)

No. of channels

2 channel, stereo

Wow and flutter

Below measurable limit

D/A converter

MASH (1 bit DAC)

Tape recorder

Track system

4 track, 2 channel, stereo

Monitor system

Variable sound monitor

Recording system

AC bias

Erasing system

AC erase

Frequency range

Normal position

50-12000 Hz

High position

50-13000 Hz

General

Speakers

8 cm (3") 5.4 Ω x 2

Jacks

Output

PHONES: 3.5 mm stereo (16-32 Ω)

Power requirement

AC

120 V, 60 Hz

Power consumption: 32 W

Battery

12 V [Eight R20/LR20(D, UM-1) batteries]

•Do not use rechargeable type batteries.

Memory back-up for computer/clock

6 V [Four R6/LR6 (AA, UM-3) batteries]

•Do not use rechargeable type batteries.

Dimensions (WxHxD)

521 x 146 x 270 mm

(20 $\frac{1}{2}$ " x 5 $\frac{3}{4}$ " x 10 $\frac{5}{8}$ ")

Weight

4.4 kg (9.7 lb) without batteries

Note

Specifications are subject to change without notice.

Weight and dimensions are approximate.

Maintenance

If the surfaces are dirty

To clean this unit, wipe with a soft, dry cloth.


If the surfaces are extremely dirty, use a soft cloth dipped in a soap-and-water solution or a weak detergent solution.

- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically impregnated cloth, read the instructions that came with the cloth carefully.

For a cleaner crisper sound

We recommend that you periodically clean parts (the shaded portion in the figure below) the tape contacts like the heads.

Do not use any solution other than alcohol for head cleaning.

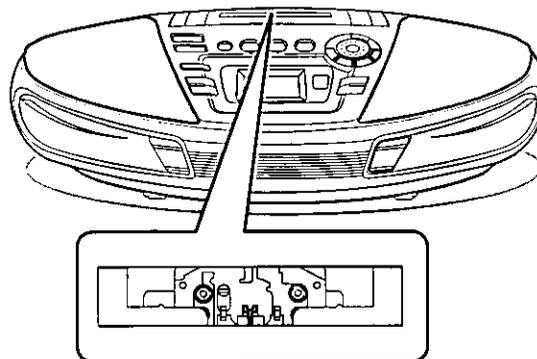

Product service

Do not attempt to remove the cover(s) or repair the unit yourself. Refer servicing to qualified personnel only.

Product information

For product service, product information or assistance with product operation, refer to the servicentre directory.

Panasonic Consumer Electronics
Company, Division of Matsushita
Electric Corporation of America
One Panasonic Way Secaucus,
New Jersey 07094
<http://www.panasonic.com>

Panasonic Sales Company,
Division of Matsushita Electric of
Puerto Rico, Inc. ("PSC")
Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park, Carolina,
Puerto Rico 00985

Panasonic Canada Inc.
5770 Ambler Drive,
Mississauga,
Ontario L4W 2T3
www.panasonic.ca

En

RQT4760-P
L1298S0(M)