



Model No.
SL-J600V
SL-SV553J
SL-SV550

Portable CD player Operating Instructions

The model number and serial number of this product can be found on either the back or the bottom of the unit. Please note them in the space provided below and keep for future reference.

MODEL NUMBER _____
 SERIAL NUMBER _____

Dear Customer

Thank you for purchasing this product. Before connecting, operating or adjusting this product, please read these instructions completely. Please save this manual for future reference.

Note:

SL-J600V and SL-SV550 models are not designed for use with a remote control.



This manual was printed with soy based ink.



Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
 One Panasonic Way Secaucus, New Jersey 07094 <http://www.panasonic.com>
Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")
 Ave. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic Canada Inc.
 5770 Ambler Drive, Mississauga, Ontario L4W 2T3 www.panasonic.ca

© 2003 Matsushita Electric Industrial Co., Ltd.
 Printed in Japan

RQT6771-1P
 F0203KN1033

Troubleshooting guide

- References to battery recharging apply only to SL-J600V.
- References to the remote control apply only to SL-SV553J.

Before requesting service, make the below checks. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem:
In the U.S.A., contact the Panasonic Customer Call Center at 1-800-211-7262, or e-mail consumerproducts@panasonic.com, or the website (<http://www.panasonic.com>).
In Canada, contact the Panasonic Canada Inc. Customer Care Centre at 905-624-5505, or visit the website (www.panasonic.ca), or an authorized Servcentre close to you.

No play.	<ul style="list-style-type: none"> • The HOLD function is on (⇄page 2). • The disc isn't correctly set. • The disc is scratched or dirty.(Tracks skipped.) • The unit may not read MP3 correctly if it is shaken while it is reading the files. • There is moisture on the lens. Wait for about an hour and then try again. • The lens is dirty: clean it with a blower (recommended product: SZZP1038C).If the lens gets marked with fingerprints, gently wipe them off with a cotton swab. • You may not be able to play MP3 if you have copied a multi-session disc that has no data between sessions.
No sound or there is a lot of noise.	<ul style="list-style-type: none"> • Ensure the plugs are inserted firmly. • Wipe the plugs clean with a clean cloth. • Noise may occur when playing MP3 if recording quality is poor. • The elapsed playing time disappears and sound is interrupted if bumps continue repeatedly. • Separate this unit from mobile telephones.
Play doesn't resume from the track where play stopped at.	<ul style="list-style-type: none"> • This doesn't work if you change discs. • This doesn't work during random play. • It may not work correctly under some conditions.
Play doesn't start from the first track.	<ul style="list-style-type: none"> • Random play modes may be on (⇄page 6). • Play resumes from the track where you last stopped play. Use skip to return to the first track.
The unit stops working.	Disconnect then reconnect all power sources (batteries and AC adaptor).
Cannot search through tracks.	You cannot search through MP3 files.
Cannot skip albums.	You cannot skip between the first and last albums during play.
The battery indicator fails to appear or is incorrect.	<ul style="list-style-type: none"> • The indicator does not appear when the AC adaptor is connected. • The indicator does not appear correctly under some conditions.
Radio reception is noisy.	<ul style="list-style-type: none"> • Keep the unit away from other tuners and televisions. • The AM antenna is in the unit, so noise may increase if you hold the unit.

SL-SV553J ONLY

The unit malfunctions when connected to other equipment.	Be sure to connect other equipment through the remote control. Speakers connected directly to the unit should have an impedance of 1 kΩ or less.
The remote control malfunctions.	Use only the included remote control to operate this unit.

SL-J600V ONLY

Cannot recharge.	<ul style="list-style-type: none"> • You aren't using the special rechargeable batteries (⇄page 5). • You must insert two batteries before you can recharge them. • The unit must be off before you can recharge.
The AC adaptor becomes warm during recharging.	This is normal.
The batteries are taking a long time to recharge.	The batteries may take a maximum of 6 hours to recharge under some conditions.
Play time is very short even after recharging.	The batteries may have reached the end of their service life. Usually they can be recharged 300 times.
Play time is short after recharging.	<ul style="list-style-type: none"> • This may occur after the first time you recharge the batteries or after you haven't used them for a long time. Play time should be restored after a few recharges. • The batteries can go flat if you leave the AC adaptor connected after recharging is complete.


Display

hold	The HOLD function is on (⇄page 2).
no disc	<ul style="list-style-type: none"> • You haven't inserted a disc or it isn't inserted correctly. • You have inserted a disc this unit cannot play.
OPEN	The disc lid is open.
F	Full: The program already contains 20 tracks.
3	Reading MP3 files.


Location of controls/Connection to other equipment

Turn off this unit and the other equipment before connection.


Main unit

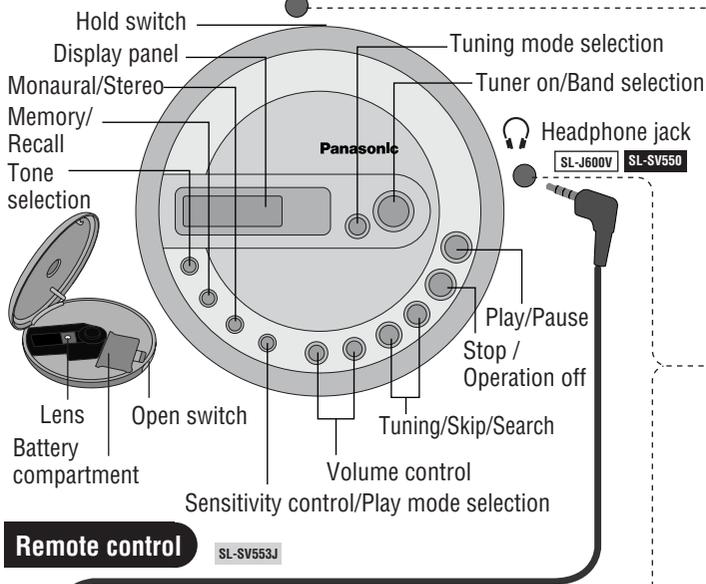

Remote control

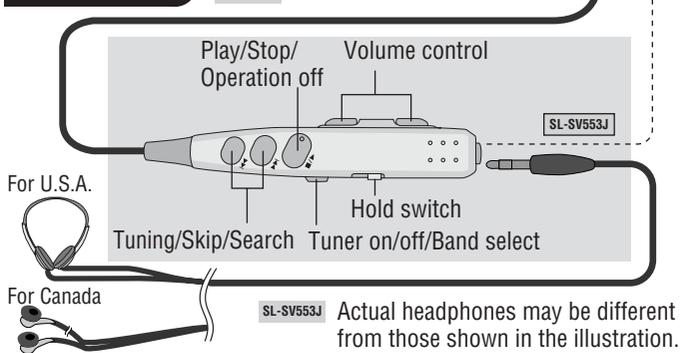

To DC IN jack

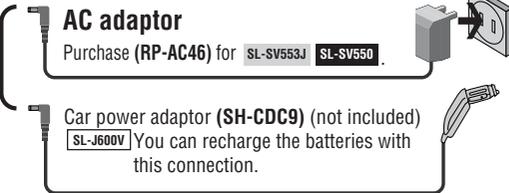


Household AC outlet

Car audio



Some cannot be connected.

Audio system

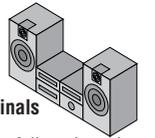


Adjust the volume on the audio system.

SL-J600V SL-SV550 Directly to headphone jack

SL-SV553J Through to Headphone jack

 Connect remote control to main unit first.



Audio cable (not included)

- Set the unit's volume to 10.
- Use the main unit to avoid beep sounds heard when operating the remote control buttons.

To CD or AUX terminals

Supplied Accessories

Check the packing carton for these accessories.

SL-J600V SL-SV550 ONLY

SL-SV553J ONLY

For U.S.A.

- 1 Pair of stereo headphones: LOBAD0000162

For Canada

- 1 Pair of stereo earphones: LOBAB0000123

SL-J600V ONLY

- 1 AC adaptor: RFEA403C-2S

- 1 Active speaker system (2 speakers and 1 unit base): RAPT0001-S

Use numbers indicated when ordering replacements or optional accessories from your Panasonic dealer. In U.S.A. contact 1-800-332-5368 or the website (<http://www.panasonic.com>).

Playing MP3

This unit can play MP3 files you have recorded to discs. MPEG Layer-3 audio decoding technology licenced from Fraunhofer IIS and Thomson multimedia.

HOLD

This function causes the unit to ignore accidental button presses. Set to HOLD so the unit doesn't power on accidentally or play is interrupted.

- The unit and remote control each have independent HOLD switches.

Note on CD-R and CD-RW

This unit can play CD-R and CD-RW recorded with CD-DA or MP3. Use an audio recording disc for CD-DA and finalize* it when you finish recording. The unit may not be able to play some discs due to the condition of the recording.

※ A process performed after recording that enables CD-R/CD-RW players to play audio CD-R and CD-RW.

Resume function

The unit stores the track where you stopped play. Replacing the disc cancels the function.

Auto power off function


If the unit is left in stop mode for approximately 10 minutes, the unit powers itself off automatically.

SL-SV553J ONLY

Using jogger soft case

Insert so buttons are facing away from your body.


Fasten the belt securely.

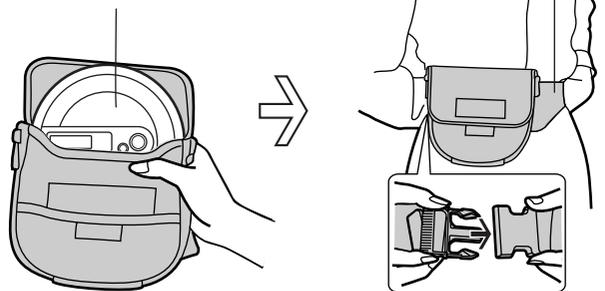

- Before jogging with this unit, allow sufficient time for the memory buffer to fill up completely (CD-DA: 45 seconds, MP3: 100 seconds).
- This unit is designed for light jogging, but not for serious running. It may occasionally skip if used by an aggressive runner, or by someone with a heavy, jarring stride.
- Do not machine wash. Fading and loss of shape can occur.
- Do not drop the unit as the soft case cannot protect the unit and CD from damage.

SL-SV553J ONLY

Using headphones

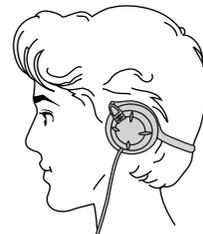

IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the safety precautions listed below. Keep these operating instructions handy for future reference.

Safety

- Power source**—Connect the unit to a power source of the type described in these instructions or as marked on the unit.
- Polarization**—The unit is equipped with a polarized power plug where one blade is wider than the other. This safety feature ensures that the plug fits into your household AC outlet only one way. If the plug doesn't fit one way, try reversing it. If the plug still doesn't fit, contact an electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the plug.
- Power cord protection**—Route the AC power supply cord so that it will not be walked on or pinched by items placed on or against it. Never take hold of the plug or cord with wet hands. Always grasp the plug body firmly when connecting and disconnecting it.
- Overloading**—When connecting the AC power supply cord, be careful not to overload the household AC outlet, extension cord, or outlet from any other device as this can result in fire or electric shock.
- Nonuse periods**—Turn the unit off when it is not in use. Unplug the unit from the household AC outlet if it is not to be used for a long time. Unplug the unit during lightning storms. Leaving the unit connected to a household AC outlet for extended periods can cause battery fluid leakage.
- Attachments and accessories**—Use only the attachments and accessories recommended in these operating instructions.

Installation

Placement

- Foreign material**—Ensure objects and liquids do not get into the unit. Avoid exposing the unit to excessive smoke, dust, mechanical vibration, and shock.
- Magnetism**—Situate the unit away from equipment and devices that generate strong magnetic fields.
- Stacking**—Do not place anything on top of this unit.
- Wall and ceiling mounting**—Do not mount the unit on walls or ceilings unless specified in the instructions.

Environment

- Water and moisture**—Do not use the unit near water, such as near a bathtub or swimming pool. Avoid damp basements.
- Heat**—Situate the unit away from heat sources, such as radiators. Do not leave it in an automobile exposed to direct sunlight with the doors and windows closed as this may deform the cabinet. Do not situate where temperatures fall below 5 °C (41 °F) or rise above 35 °C (95 °F).

Maintenance

Unplug the unit from the household AC outlet before cleaning.
Clean with a damp cloth.
Do not use abrasive pads, scouring powders, or solvents.

Service

- Damage requiring service**—The unit should be serviced by qualified service personnel if:
 - The AC power supply cord or AC adaptor has been damaged; or
 - Objects or liquids have gotten into the unit; or
 - The unit has been exposed to rain; or
 - The unit does not operate normally or exhibits a marked change in performance; or
 - The unit has been dropped or the cabinet damaged.
- Servicing**—Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.
- Replacement parts**—When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.
- Safety check**—After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

Caution

- Discontinue use if you experience discomfort with the earphones or any other parts that directly contact your skin. Continued use may cause rashes or other allergic reactions.
- Do not use in the car when the unit is connected to the speakers.

Batteries

- Do not peel off the covering on batteries and do not use if the covering has been peeled off.
- Align the poles + and - correctly when inserting the batteries.
- Do not mix different types of batteries or old and new batteries.
- Remove the batteries if you do not intend to use the unit for a long time.
- Do not throw into fire, short-circuit, disassemble, or subject to excessive heat.
- Do not attempt to recharge dry cell batteries.
- When carrying batteries in a pocket or bag, ensure no metal objects such as necklaces are placed together with them. Contact with metal may cause short-circuiting which can cause a fire.

CDs

- Do not use irregularly shaped CDs.
- Do not use non-specification discs.
- Do not use CDs printed with label printers available on the market.
- Do not use CDs with labels and stickers that are coming off or with adhesive exuding from under labels and stickers.

Listening



Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play.

If you experience a ringing in your ears, reduce volume or discontinue use. Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas. You should use extreme caution or temporarily discontinue use in potentially hazardous situations. Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts. To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion. Once you have established a comfortable sound level:
- Leave it there.

Specifications

CD SECTION

CD-DA

No. of channels: 2 (left and right, stereo)
Frequency response: 20 to 20,000 Hz (–10 dB to 0 dB)
DA converter: 1 bit, MASH
Headphone output level: RMS max. 8 mW+8 mW/16 Ω (adjustable)

SL-J600V ONLY

Speaker output level: RMS max. 450 mW+450 mW

MP3

Supported bit-rates: 32 kbps to 320 kbps (128 kbps is recommended)
Supported sampling frequency: 48 kHz/44.1 kHz/32 kHz
Maximum number of items (sum of albums and tracks): 999
Maximum album levels: 100

Pickup

Light source: Semiconductor laser
Wavelength: 780 nm

RADIO SECTION

Frequency

Radio frequency:
FM; 87.90–107.90 MHz (0.2 MHz steps)
87.50–108.00 MHz (0.1 MHz/0.05 MHz steps)
AM; 520–1710 kHz (10 kHz steps)
522–1629 kHz (9 kHz steps)

GENERAL

Power supply:

SL-J600V

DC input (via included AC adaptor): DC 4.5 V
AC adaptor input: AC 120 V, 60 Hz

SL-SV553J **SL-SV550**

DC input (via optional AC adaptor): DC 4.5 V

Operational temperature range: 0 °C–40 °C (32 °F–104 °F)

SL-J600V ONLY

Rechargeable temperature range:

5 °C–40 °C (41 °F–104 °F)

Recharging time: 4 to 5 hours

Power consumption:

Using AC adaptor:

Using headphones/earphones (MP3/CD-DA/RADIO): 3.1 W/ 2.9 W/ 2.1 W

Using speakers (MP3/CD-DA/RADIO): 6.5 W/ 6.4 W/ 3.6 W

Recharging:

Without speakers : 5.4 W
With speakers : 5.9 W

Power consumption in standby mode:

Without speakers : 2.1 W
With speakers : 2.8 W

Play time:

[Approximate operating time in hours (playing MP3 at the recommended bitrate of 128 kbps, with HOLD on and S-XBS canceled, at 25 °C (77 °F) on a flat and stable surface)]

Batteries used	MP3 disc	CD-DA disc	RADIO (FM BAND)
2 optional alkaline batteries	35	23	75
SL-J600V 2 optional rechargeable batteries	14	10	30

- The play time may be less depending on the operating conditions.
- Play time will be considerably reduced when playing CD-RW.

Dimensions (W×H×D):

CD player:
135×25.8×135 mm (5¹/₁₆"×1¹/₃₂"×5⁵/₁₆")
Including components (SL-J600V ONLY):
135.5×286×185 mm (5¹/₁₆"×11¹/₃₂"×7⁹/₃₂")

Mass:

CD player:
223 g (7.9 oz.) (with batteries)
177 g (6.2 oz.) (without batteries)
Including components (SL-J600V ONLY):
391 g (13.8 oz.)

Note:

Specifications are subject to change without notice. Mass and dimensions are approximate.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CAUTION:

Use only car adaptor, Model: SH-CDC9 manufactured by Matsushita Electric Industrial Co., Ltd.

Marking sign is located on bottom of the unit.

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

CAUTION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus, New Jersey 07094

ONLY FOR U.S.A.

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic Portable Audio Products Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Product or Part Name	Parts	Labor
All Portable Audio Products except item listed below	One (1) Year	One (1) Year
Rechargeable batteries (in exchange for defective item)	Ten (10) Days	Not applicable

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. This Limited Warranty excludes both parts and labor for batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

Mail-In Service

For assistance in the continental U.S.A. in obtaining repairs please ship the product to:

Panasonic Services Company
Customer Servicenter
Suite B
4900 George McVay Drive
McAllen, TX 78503

For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached.

Customer Services Directory

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:
1-800-211-PANA (7262), Monday-Friday 9 am-9 pm;
Saturday-Sunday 9 am-7 pm, EST.
or send e-mail:
consumerproducts@panasonic.com
For hearing or speech impaired TTY users, TTY: 1-877-833-8855

Web Site: <http://www.panasonic.com>
You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Product service

1. **Damage requiring service**—The unit should be serviced by qualified service personnel if:
 - (a) The AC power supply cord or AC adaptor has been damaged; or
 - (b) Objects or liquids have gotten into the unit; or
 - (c) The unit has been exposed to rain; or
 - (d) The unit does not operate normally or exhibits a marked change in performance; or
 - (e) The unit has been dropped or the cabinet damaged.
2. **Servicing**—Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.
3. **Replacement parts**—When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.
4. **Safety check**—After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

Product information

For product information or assistance with product operation:

In the U.S.A., contact the Panasonic Customer Call Center at 1-800-211-7262, or e-mail consumerproducts@panasonic.com, or the website (<http://www.panasonic.com>).

For assistance in the continental U.S.A. in obtaining repairs please ship the product to:

Panasonic Services Company - Customer Servicenter
Suite B 4900 George McVay Drive
McAllen, TX 78503

In Puerto Rico contact the Panasonic Sales Company.

Tel. (787) 750-4300 Fax. (787) 768-2910

When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached.

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Also, the purchaser will be responsible for shipping the unit to the above address. In Canada, contact the Panasonic Canada Inc. Customer Care Centre at 905-624-5505, or visit the website (www.panasonic.ca), or an authorized Servicenter close to you.

User memo:

DATE OF PURCHASE _____
DEALER NAME _____
DEALER ADDRESS _____
TELEPHONE NUMBER _____

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but are for illustration only.)

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Service in Puerto Rico
Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/Factory
Servicenter:
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787) 750-4300 Fax (787) 768-2910

Accessory Purchases:


1-800-332-5368 (Customer Orders Only)
For hearing or speech impaired TTY users, TTY: 1-866-605-1277
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(6 am to 5 pm Monday-Friday; 6 am to 10:30 am Saturday; PST)
(Visa, MasterCard, Discover Card, American Express, Check)

F0402NY1082

Power Supply

References to battery recharging apply only to SL-J600V.


Dry cell batteries (not included)

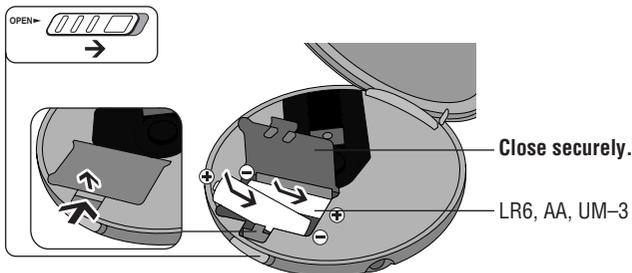

- Fit the battery lid so it is secure and flush with the battery compartment. The disc may be damaged if the lid becomes loose or is displaced.

The battery indicator

This indicator appears when the unit is on.

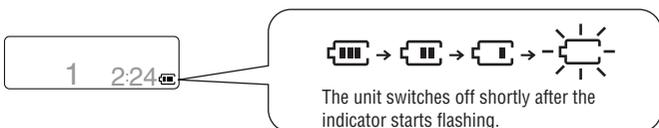


- Before playing starts the battery indicator may flash although the batteries are not drained. It appears correctly once you start play.
- The remaining time may differ when listening to a CD or the radio.

General

Removing batteries

Play time


⇨ Specifications, page 3

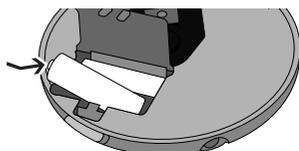

Listening to CDs Basic Play

References to the remote control apply only to SL-SV553J.

Playback

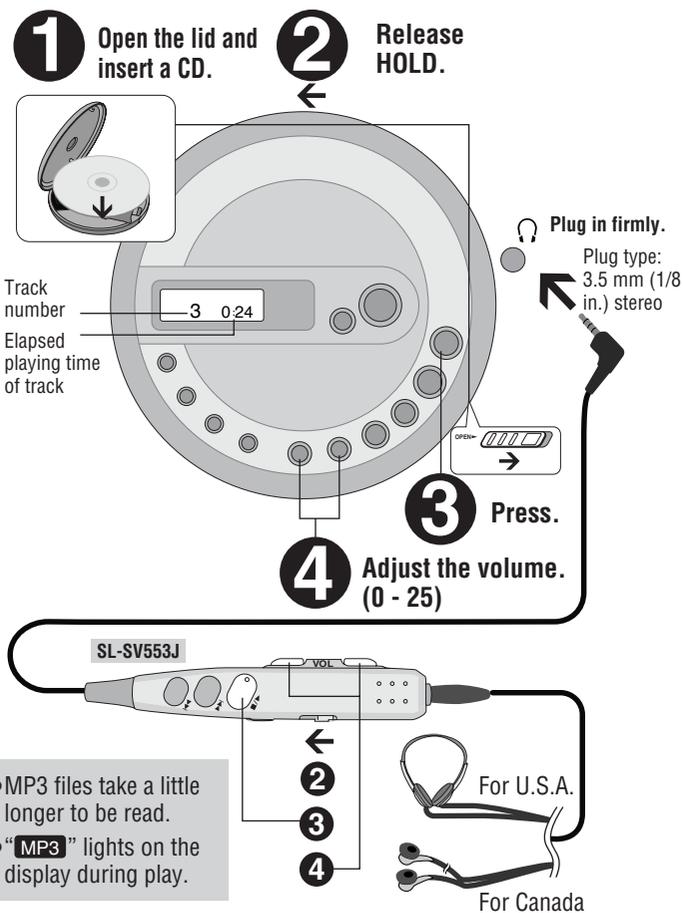

- MP3 files take a little longer to be read.
- "MP3" lights on the display during play.

Rechargeable batteries (not included)

SL-SV553J SL-SV550 ONLY

- If rechargeable batteries are to be used, rechargeable batteries manufactured by Panasonic are recommended.
- This unit cannot recharge batteries. The battery indicator will not function correctly when using rechargeable batteries.

SL-J600V ONLY

As a safety precaution this unit is constructed so it is impossible to recharge ordinary batteries. For details, check with your dealer.


Special rechargeable Ni-Cd batteries P-3GAVA/2B (set of 2)

Ordinary dry cell batteries/rechargeable batteries



Recharge before initial use. Make sure the unit is off when recharging. Insert the same way as the dry cell batteries.

Connect the AC adaptor supplied.

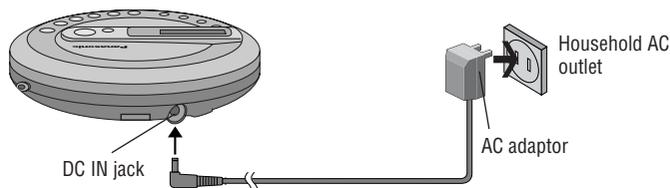

- The battery indicator () scrolls while recharging and disappears when finished (4 to 5 hours).
- You can recharge the batteries before they are fully discharged.

Conserving power

To save power when the unit is not to be used for a long time, unplug the AC adaptor from the household AC outlet. The unit consumes a small amount of power, even when it is turned off.

Without speakers: approx. 2.1 W
With speakers: approx. 2.8 W

Listening to CDs Basic Play

Pause

Main unit



Press.

Remote control

Not available.

- Press again to restart play.

Search

Main unit



Press and hold during play.

Remote control



Press and hold during play.

- You cannot search while playing MP3.
- You can search only within the current track during program, one track repeat, or random play modes (⇨ page 6).

Skip

Main unit



Press.

Remote control



Press.

- Press [] twice to skip to the previous track during play.

Stop

Main unit



Press.

Remote control



Press.

- Press again to turn the unit off.

- Press and hold to turn the unit off.

15 68:24

Number of tracks Total play time


MP3

ALBUM 10-- 72


Number of albums Number of tracks

Program Play

- Press [- <<<, >>> +] while stopped to select the tracks.
You can skip albums when programming MP3 tracks (⇄ below).

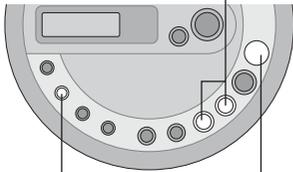


- Press [MEMORY/RECALL] to register.

 

- Repeat steps 1 and 2 to register up to 20 tracks.

- Press [▶/||] to start play.

When playing MP3

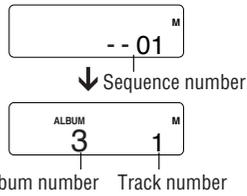

- **To confirm the contents of the program**
Press [MEMORY/RECALL] while the disc is playing.

- **To delete the entire program**
Press [■ OPR OFF].

Changing the sound quality

Each time you press [S-XBS]





S-XBS ← No display (canceled)
Boosts the bass

- The effect may differ between different kinds of music.

Play modes

Each time you press [MODE]

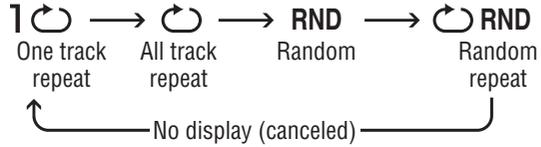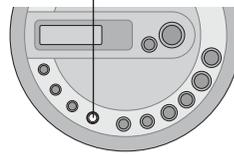


- You cannot select "RND" while playing MP3.
- You cannot skip back to other tracks during random play.

Anti-Skip System

This system reduces the skipping caused by vibration to a minimum. You can change the anti-skip memory time for CD-DA to improve sound quality.

Each time you press and hold [MODE]

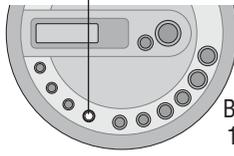

POS2 ← POS1

 
 

Better sound quality, 10-second anti-skip memory

Normal sound quality, 45-second anti-skip memory

- You cannot change the memory time for MP3. It is a maximum of 100 seconds for data recorded at 128 kbps.

Starting play from an album (Album skip)

Press and hold [- <<<, >>> +] until the album you want appears.

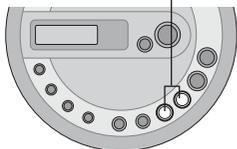

Playing only the tracks in a selected album (Album mode)

Each time you press and hold [MODE]




ALBUM MODE ← No display (canceled)

- You cannot turn album mode on during program play.
- You can select another album with album skip.

This unit can play MP3, a method of compressing audio without overtly hurting audio quality.

When creating MP3 files to play on this unit

- Disc formats: ISO9660 level 1 and level 2 (except for extended formats)
- It is better not to create folders (album) within folders (004album below).

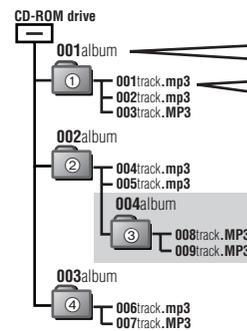

Naming tracks and albums

Prefix with 3-digit numbers in the order you want to play



Up to 27 characters for tracks and 30 for albums

If you created an album such as 004album on the left, the files may not play in name order. The albums would play in the order ①, ②, ③, ④.



Limitations on MP3

- This unit is compatible with multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.
- This unit cannot play files recorded using packet write.
- If the disc includes both MP3 and normal audio data (CD-DA), the unit plays the type recorded in the inner part of the disc. If the disc includes both MP3 and other types of audio data (e.g. WMA or WAV), the unit plays only the MP3.
- Depending on how you create MP3 files, they may not play in the order you numbered them or may not play at all.

Listening to the Radio

References to the remote control apply only to SL-SV553J.

You can tune directly to a station in **Free Mode** by finding the station's frequency, or you can store stations in **Memory Mode** to make tuning simpler.

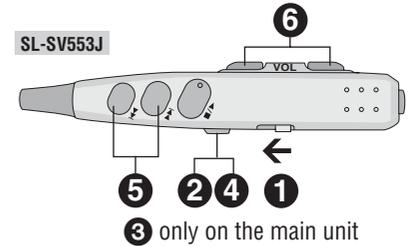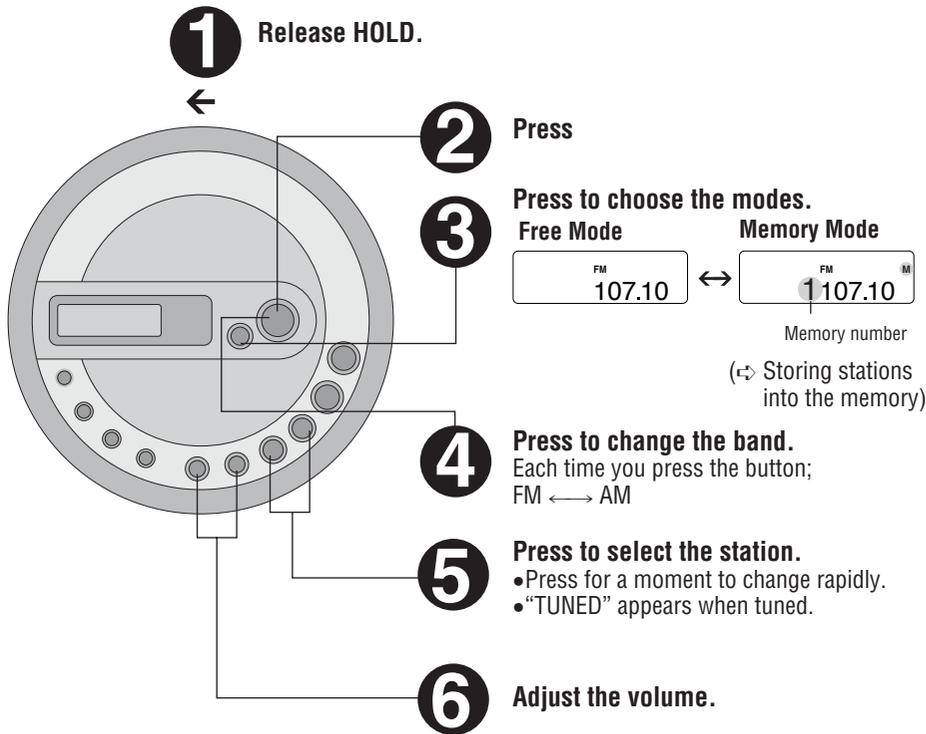


■ To turn off the radio

Press [■ OPR OFF] (main unit) or press and hold [RADIO] (remote control).

Storing stations into the memory

Store the frequencies of up to 30 stations; 20 FM and 10 AM.

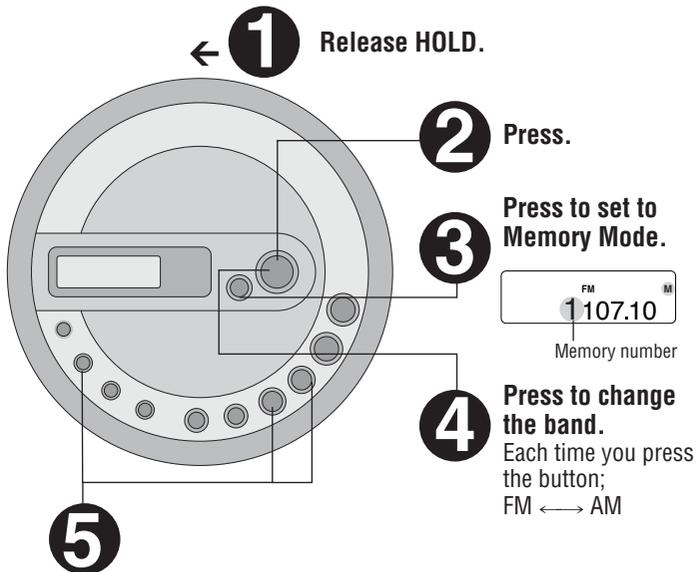

■ To erase unnecessary stations

Preparation: Press [TUNING MODE] to set to **Memory Mode**.
Press [RADIO/BAND] to select the band.

- 1** Press [- ◀▶ +] to select the memory number to be erased.
 - 2** Press [MEMORY/RECALL].
The frequency number flashes.
- Do each of the following within 10 seconds.
- 3** Press and hold [MEMORY/RECALL] until "----" flashes.
 - 4** Press [MEMORY/RECALL] to erase the memory number.
The next memory number appears.

Store stations into the memory as desired.

- 1** Press [MEMORY/RECALL].

 


Do each of the following within 10 seconds.

- 2** Press [- ◀▶ +] to select the frequency.

• Press [- ◀▶ +] for a moment to change rapidly.

- 3** Press [MEMORY/RECALL].



- 4** Press [- ◀▶ +] to select the memory number.

• Press [- ◀▶ +] for a moment to change rapidly.


- 5** Press [MEMORY/RECALL] to confirm the setting.

Listening to the Radio

To obtain good reception

AM

Try various directions to obtain optimum reception.

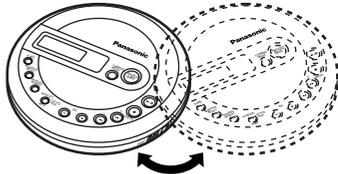


FM

The headphones/earphones cord is also the FM antenna, so extend it instead of leaving it coiled.

To receive an FM broadcast clearly

Set to "CITY" if reception is poor or if there is interference from another station.

Each time you press and hold [FM RECEPT - CITY/NOR]

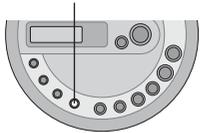


CITY

← → No display (canceled)

To select stereo or monaural FM

Set to "MONO" when there is noise during FM reception. Sound becomes monaural, but noise is reduced.

Each time you press [FM MODE MONO/ST]

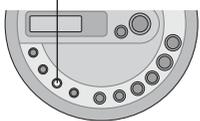

MONO

← → No display (stereo)

Changing the sound quality

The operation is the same as when playing CDs. (↔ page 6)


When using overseas

Change the frequency step according to the area.

Preparation: Press [RADIO/BAND] to switch on the power.

1

Press and hold [RADIO/BAND] until the step appears.

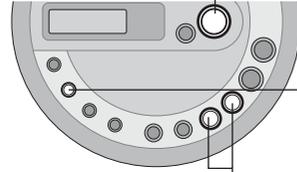

2

Within 10 seconds

Press to select the step.

Each time you press [- <<<, >>> +]



3

Within 10 seconds

Press and hold [MEMORY/RECALL] until the frequency appears to confirm the step.

■ To return to the previous frequency step


Repeat the above procedure.

● Changing the step erases the stations you stored in memory.

Listening through the speakers SL-J600V ONLY

1 Attaching the unit base.

Place speaker with the cords on the left side.

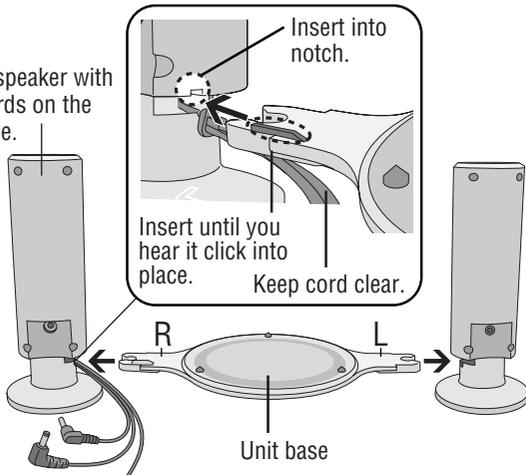


2 Fitting cords into place on bottom of the unit base, and connecting the grey cord to [SP IN].

Insert grey cord last.

Gold plug Silver plug

Grey cord


To [SP IN]

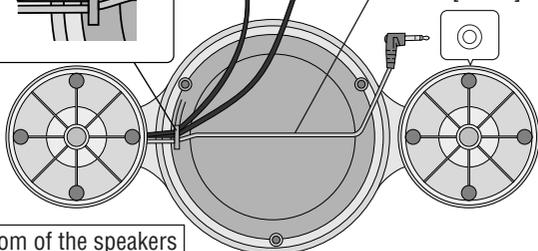


Bottom of the speakers

3 Placing the main unit on the unit base and connecting the other cords.

Household AC outlet

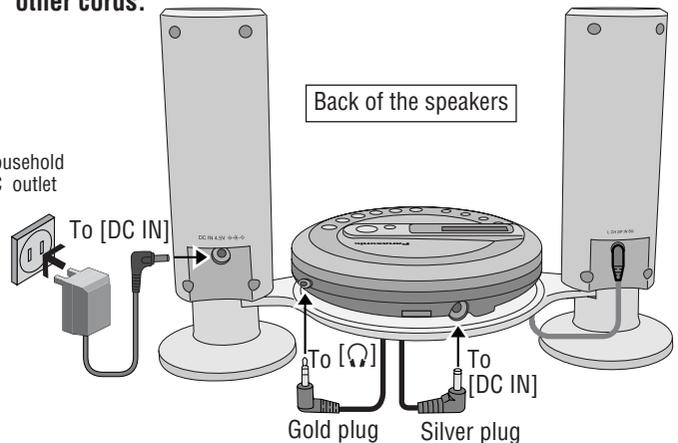

4 Press [OPR] to turn the speakers on.

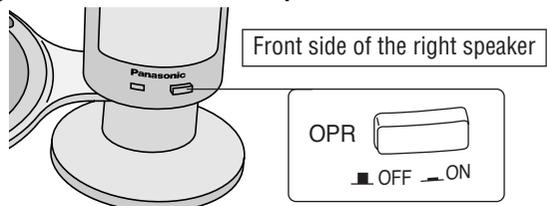

Operations are the same using or not using the unit base and speakers.

- The rechargeable batteries are also recharged in the unit base while the unit is off.
- Turning off the speaker [OPR] does not turn the power off. Press [■ OPR OFF] on the main unit (twice when playing a CD) to turn the power off.
- These speakers do not have magnetic shielding. Keep them away from televisions, computers, and other items easily affected by magnetism.