

Panasonic®

Operating Instructions 58"/65" Class 1080p Plasma HDTV (58.0/64.7 inches measured diagonally)

Manual de instrucciones Televisión de alta definición de 1080p y clase 58"/65" de Plasma (58,0/64,7 pulgadas medidas diagonalmente)

Model No. **TH-58PZ850U**
Número de modelo **TH-65PZ850U**

Quick Start Guide

(See page 6-15)

Guía de inicio rápido

(vea la página 6-15)

- For assistance (U.S.A.), please call:
1-877-95-VIERA (958-4372)
or visit us at www.panasonic.com/contactinfo
- For assistance (Puerto Rico), please call:
787-750-4300
or visit us at www.panasonic.com
- For assistance (Canada), please call:
1-866-330-0014
or visit us at www.vieraconcierge.ca
- Para solicitar ayuda (EE.UU.), llame al:
1-877-95-VIERA (958-4372)
ó visítenos en www.panasonic.com/contactinfo
- Para solicitar ayuda (Puerto Rico), llame al:
787-750-4300
ó visítenos en www.panasonic.com



[TH-58PZ850U]



[TH-65PZ850U]

VIERA CAST™

VIERA Link™

HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE

HDTV

SD
HD

BBE®
High Definition Sound

BBE.ViVA
HD3D Sound

English

Please read these instructions before operating your set and retain them for future reference.
The images shown in this manual are for illustrative purposes only.

Español

Lea estas instrucciones antes de utilizar su televisor y guárdelas para consultarlas en el futuro.
Las imágenes mostradas en este manual tienen solamente fines ilustrativos.

TQB2AA0786

Turn your own living room into a movie theater!
 Experience an amazing level of multimedia excitement



(Image: TH-58PZ850U)

This device contains a digital television tuner, so it should receive digital over the air TV programming, with a suitable antenna, after the end of full-power analog TV broadcasting in the United States (as required by law) on February 17, 2009. Some older television receivers, if they rely on a TV antenna, will need a TV Converter to receive over the air digital programming, but should continue to work as before for other purposes (e.g., for watching low-power TV stations still broadcasting in analog, watching pre-recorded movies, or playing video games). When a Converter is used with an older television receiver, a signal splitter might be necessary to continue to receive low-power analog broadcasts via an antenna. For more information, please see www.DTV.gov . For information on the TV Converter program, and on government coupons that may be used toward the purchase of one, see www.dtv2009.gov , or call the NTIA at 1-888-DTV-2009. Please check with your cable or satellite service provider if you have questions about your cable or satellite set-top box.

 <p>SDHC Logo is a trademark.</p>	 <p>GalleryPlayer and the GalleryPlayer Logo are trademarks of GalleryPlayer, Inc.</p>	 <p>VIERA Link™ is a trademark of Matsushita Electric Industrial Co., Ltd.</p>	 <p>VIERA CAST™ is a trademark of Matsushita Electric Industrial Co., Ltd.</p>
 <p>Manufactured under license from BBE Sound, Inc.</p>	 <p>Licensed by BBE Sound, Inc. under one or more of the following US patents: 5510752, 5736897. BBE and BBE symbol are registered trademarks of BBE Sound, Inc.</p>		 <p>HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.</p>

Contents

Please read before using the unit

- Safety Precautions..... 4
- Notes..... 5

Quick Start Guide

- Accessories/Optional Accessory 6
- Basic Connection..... 9
- Identifying Controls..... 13
- First Time Setup 14

Enjoy your TV!

Basic Features

- Watching TV..... 16
- Viewing from SD Card 18
- Watching Videos and DVDs..... 22
- Displaying PC Screen on TV 24
- VIERA CAST™..... 26


Advanced Features

- How to Use Menu Functions
(picture, sound quality, etc.)..... 28
- VIERA Link™ “HDAVI Control™” 32
- Network setting 36
- VIERA CAST™ setting 38
- Lock 40
- Editing and Setting Channels 42
- Closed Caption 44
- Input Labels/Monitor Out 45
- Using Timer..... 46
- Programming the Remote to Operate
Peripheral Equipment 47
- Recommended AV Connections 48

FAQs, etc.

- Remote Control Operation/Code List..... 50
- Ratings List for Lock 53
- Technical Information 54
- Care and Cleaning 58
- Specifications..... 59
- FAQ..... 60
- Limited Warranty (for U.S.A.)..... 62
- Customer Services Directory (for U.S.A.) .. 63
- Limited Warranty (for Canada)..... 64

Enjoy rich multimedia

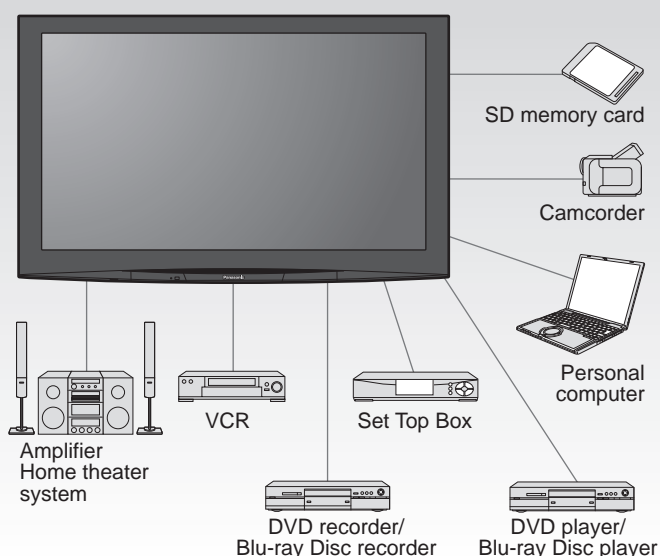

HDAVI Control™

HDAVI Control™ is a trademark of
Matsushita Electric Industrial Co., Ltd.



EZ Sync™

EZ Sync™ is a trademark of
Matsushita Electric Industrial
Co., Ltd.



Manufactured under license from Dolby Laboratories.
DOLBY and the double-D symbol are
trademarks of Dolby Laboratories.

Safety Precautions



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: To reduce the risk of electric shock, do not remove cover or back.
No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place liquid containers (flower vase, cups, cosmetics, etc.) above the set (including on shelves above, etc.).

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) To prevent electric shock, ensure the grounding pin on the AC cord power plug is securely connected.



FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

To assure continued compliance, follow the attached installation instructions and use only shielded interface cables when connecting to computer or peripheral devices. Any changes or modifications not expressly approved by Panasonic Corp. of North America could void the user's authority to operate this device.

FCC Declaration of Conformity Model No. TH-58PZ850U, TH-65PZ850U

Responsible Party: Panasonic Corporation of North America
One Panasonic Way, Secaucus, NJ 07094
Contact Source: Panasonic Consumer Electronics Company
1-877-95-VIERA (958-4372)
email: consumerproducts@panasonic.com

CANADIAN NOTICE:

For Model TH-58PZ850U, TH-65PZ850U
This Class B digital apparatus complies with Canadian ICES-003.



WARNING

Small parts can present choking hazard if accidentally swallowed.
Keep small parts away from young children.
discard unneeded small parts and other objects, including packaging materials and plastic bags/sheets to prevent them from being played with by young children, creating the potential risk of suffocation.

■ Set up

Do not place the Plasma TV on sloped or unstable surfaces.

- The Plasma TV may fall off or tip over.

Do not place any objects on top of the Plasma TV.

- If water spills onto the Plasma TV or foreign objects get inside it, a short-circuit may occur which could result in fire or electric shock. If any foreign objects get inside the Plasma TV, please consult an Authorized Service Center.

This Plasma TV is for use only with the following optional accessories. Use with any other type of optional accessories may cause instability which could result in the possibility of injury.

(All of the following accessories are manufactured by Matsushita Electric Industrial Co., Ltd.)

- Wall-hanging bracket (Vertical)
TY-WK42PV4W (TH-58PZ850U),
TY-WK65PV7 (TH-65PZ850U)
- Pedestal
TY-ST65R4-WG (TH-65PZ850U)

Always be sure to ask a qualified technician to carry out set-up.

- Two or more people are required to install and remove the television. If two people are not present, the television may be dropped, and personal injury may result.

Transport only in upright position!

- Transporting the unit with its display panel facing upright or downward may cause damage to the internal circuitry.

■ AC Power Supply Cord

The Plasma TV is designed to operate on 120 V AC, 60 Hz. Securely insert the power cord plug as far as it will go.

- If the plug is not fully inserted, heat may be generated which could cause fire. If the plug is damaged or the wall socket plate is loose, they should not be used.

The included power cord is for use with this unit only.

Do not use any power cord other than that provided with this TV.

- Doing so may cause fire or electric shocks.

Do not handle the power cord plug with wet hands.

- Doing so may cause electric shocks.

Do not do anything that might damage the power cord. When disconnecting the power cord, hold the plug, not the cord.

- Do not make any modifications to, place heavy objects on, place near hot objects, heat, bend, twist or forcefully pull the power cord. Doing so may cause damage to the power cord which can cause fire or electric shock. If damage to the cord is suspected, have it repaired at an Authorized Service Center.

■ If problems occur during use

If a problem occurs (such as no picture or no sound), or if smoke or an abnormal odor is detected from the Plasma TV, unplug the power cord immediately.

- Continued use of the TV under these conditions might cause fire or permanent damage to the unit. Have the TV evaluated at an Authorized Service Center. Servicing of the TV by any unauthorized personnel is strongly discouraged due to its high voltage dangerous nature.

If water or foreign objects get inside the Plasma TV, if the Plasma TV is dropped, or if the cabinet becomes damaged, disconnect the power cord plug immediately.

- A short may occur, which could cause fire. Contact an Authorized Service Center for any repairs that need to be made.



CAUTION

Do not cover the ventilation holes.

- Doing so may cause the Plasma TV to overheat, which can cause fire or damage to the Plasma TV.

Leave a space of 3 15/16" (10 cm) or more at the top, left and right, and 2 3/4" (7 cm) or more at the rear.

When using the pedestal, keep the space between the bottom of the TV and the floor surface.

■ When using the Plasma TV

Be sure to disconnect all cables before moving the Plasma TV.

- Moving the TV with its cables attached might damage the cables which, in turn, can cause fire or electric shock.

Disconnect the power plug from the wall outlet as a safety precaution before carrying out any cleaning.

- Electric shocks can result if this is not done.

Clean the power cord plug regularly to prevent it from becoming dusty.

- Built-up dust on the power cord plug can increase humidity which might damage the insulation and cause fire. Unplug the cord from the wall outlet and clean it with a dry cloth.

This Plasma TV radiates infrared rays; therefore, it may affect other infrared communication equipment.

Install your infrared sensor in a place away from direct or reflected light from your Plasma TV.

Do not climb up onto the television or use it as a step.

(Young children should be made particularly aware of this caution.)

- If the unit falls over or becomes damaged through misuse, injury may result.

The TV will still consume some power as long as the power cord is inserted into the wall outlet.

Notes

■ Do not display a still picture for a long time

This causes the image to remain on the plasma screen ("Image retention"). This is not considered a malfunction and is not covered by the warranty.

Typical still images

- Channel number and other logos
- Image displayed in 4:3 mode
- SD Card photo
- Video game
- Computer image



To prevent "Image retention", the screen saver is automatically activated after a few minutes if no signals are sent or no operations are performed. (p. 61)

■ Set up

- Do not place the unit where it's exposed to sunlight or other bright light (including reflections).
- Use of some types of fluorescent lighting may reduce the remote control's transmission range.

Accessories/Optional Accessory

Accessories

 
☒ Check you have all the items shown.

Accessories


☐ Remote Control Transmitter
● N2QAYB000217




☐ Batteries for the Remote Control Transmitter (2)
● AA Battery



☐ Cable clammer

 


☐ AC cord

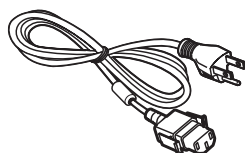


☐ Pedestal
● TBLX0080 (TH-58PZ850U)

How to assemble (p.7)

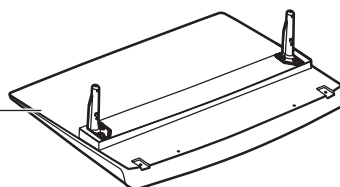

☐ Cleaning cloth

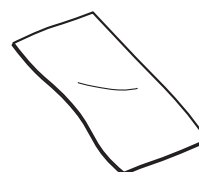

☐ Operating Instructions

☐ Product Registration Card (U.S.A.)

☐ Quick Setup Guide


☐ Customer Care Plan Card (U.S.A.)

(For viewing HD programming)


☐ RS232C terminal Specifications

Optional Accessory

Wall-hanging bracket (vertical)

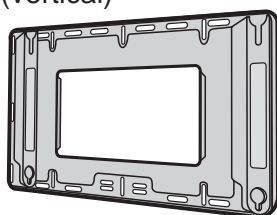


● TY-WK42PV4W (TH-58PZ850U)

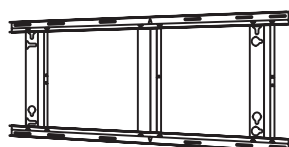

● TY-WK65PV7 (TH-65PZ850U)

Pedestal

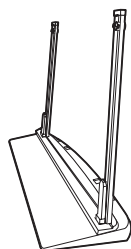


● TY-ST65R4-WG (TH-65PZ850U)

Note


- In order to maintain the TV's performance and safety, be absolutely sure to ask your dealer or a licensed contractor to secure the wall-hanging brackets.
- Carefully read the instructions accompanying the plasma TV stand or pedestal, and be absolutely sure to take steps to prevent the TV from tipping over.
- Handle the TV carefully during installation since subjecting it to impact or other forces may cause its panel to crack.

Installing the remote's batteries

1

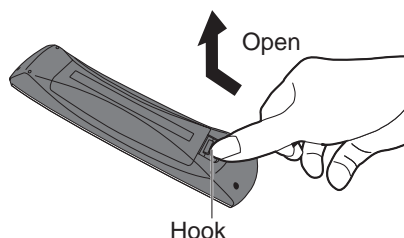

2

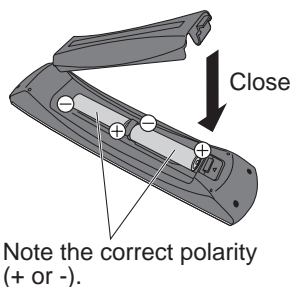


Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
 - Do not mix old and new batteries.
 - Do not mix different battery types (such as alkaline and manganese batteries).
 - Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or break batteries.
- Make a note of the remote control codes before changing batteries in case the codes are reset. (p. 47)

Attaching the pedestal to TV (TH-58PZ850U)


Assembling the pedestal

- Fix securely with assembly screws (A). (Total 4 screws)
- Tighten screws firmly.

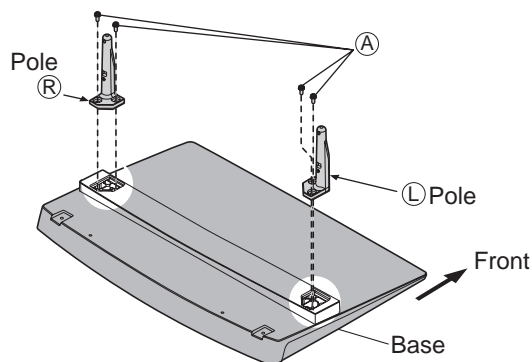

Set-up

- Carry out work on a horizontal and level surface.
- Align the pedestal with its center of rotation, referring to "Assembling the pedestal,"
- Tighten screws firmly.

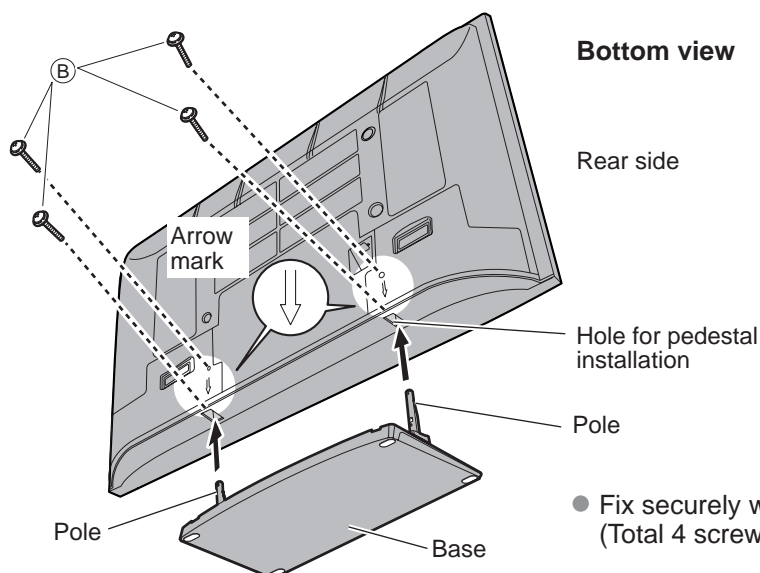

Bottom view

Rear side

Hole for pedestal installation

Pole

 
Pole

Base


- Fix securely with assembly screws (B). (Total 4 screws)

Accessories

Assembly screws
(4 of each)




M5 x 18 (Silver)

 


M5 x 35 (Black)

Poles (2)

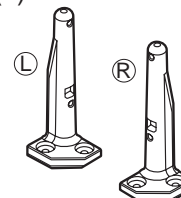

- (L) or (R) is printed at the bottom of the poles.

Base (1)

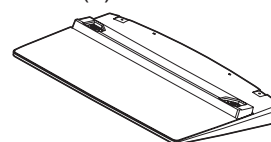

Warning

Do not disassemble or modify the pedestal.

- Otherwise the TV may fall over and become damaged, and personal injury may result.

Caution

Do not use any other TV and displays.

- Otherwise the TV may fall over and become damaged, and personal injury may result.

Do not use the pedestal if it becomes warped or damaged.


- If you use the pedestal when it is damaged, personal injury may result. Contact your nearest Panasonic Dealer immediately.

During set-up, make sure that all screws are securely tightened.


- If sufficient care is not taken to ensure screws are properly tightened during assembly, the pedestal will not be strong enough to support the TV, and it might fall over and become damaged, and personal injury may result.

Accessories/Optional Accessory (Continued)

AC cord connection

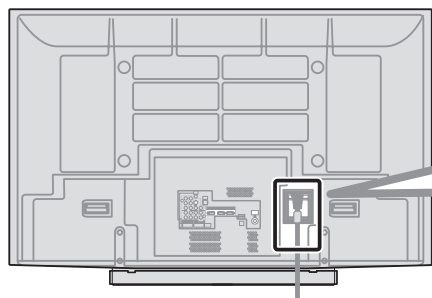


To attach

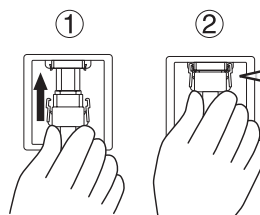

Insert it firmly until the tabs on both sides click into place.


To remove

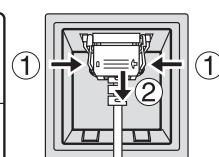


Keep pushing both side snaps

Cable Binding Instructions


[TH-58PZ850U]

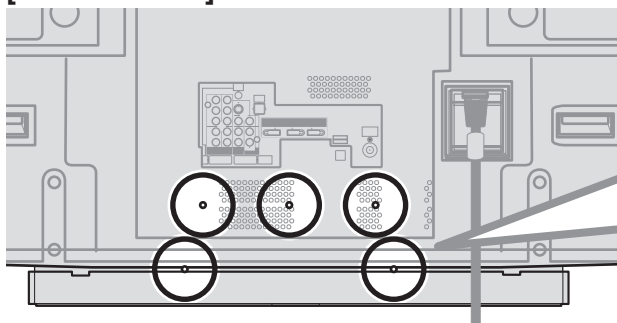


[TH-65PZ850U]

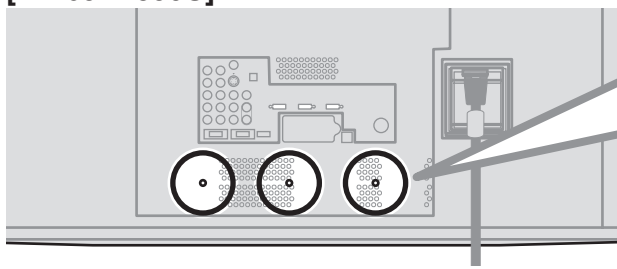

To attach

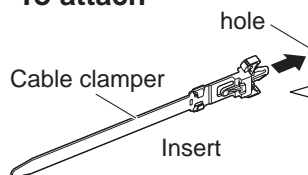


To remove

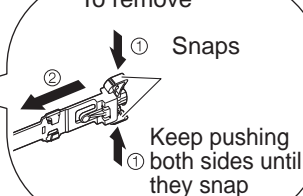


Keep pushing both sides until they snap

To bundle

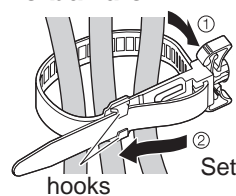

To loosen

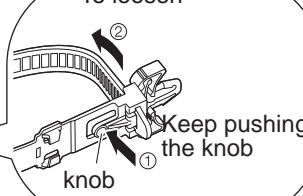


Keep pushing the knob

- Do not bundle the RF cable and AC cord together (could cause distorted image).
- Fasten the cables with the Cable clasper as necessary.
- When using the options, follow the option's assembly manual to fix cables.


Reference of connection

Antenna terminal

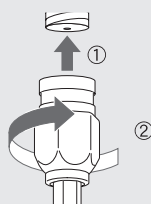


- Firmly tighten by hand.

Pin terminals

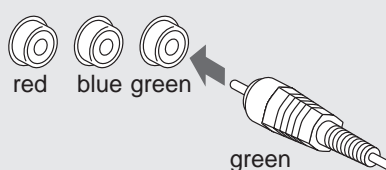

- Match colors of plugs and terminals.
- Insert firmly.

HDMI terminal

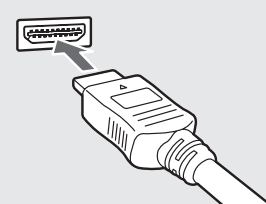


- Insert firmly.

Basic Connection

Example 1 Connecting Antenna (To watch TV)


TV

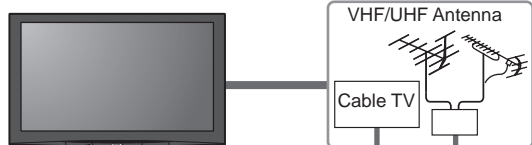

VHF/UHF Antenna

- NTSC (National Television System Committee): Conventional broadcasting
- ATSC (Advanced Television Systems Committee): Digital TV Standards include digital high-definition television (HDTV), standard-definition television (SDTV), data broadcasting, multi-channel surround-sound audio and interactive television.

To connect antenna terminal and Cable Box

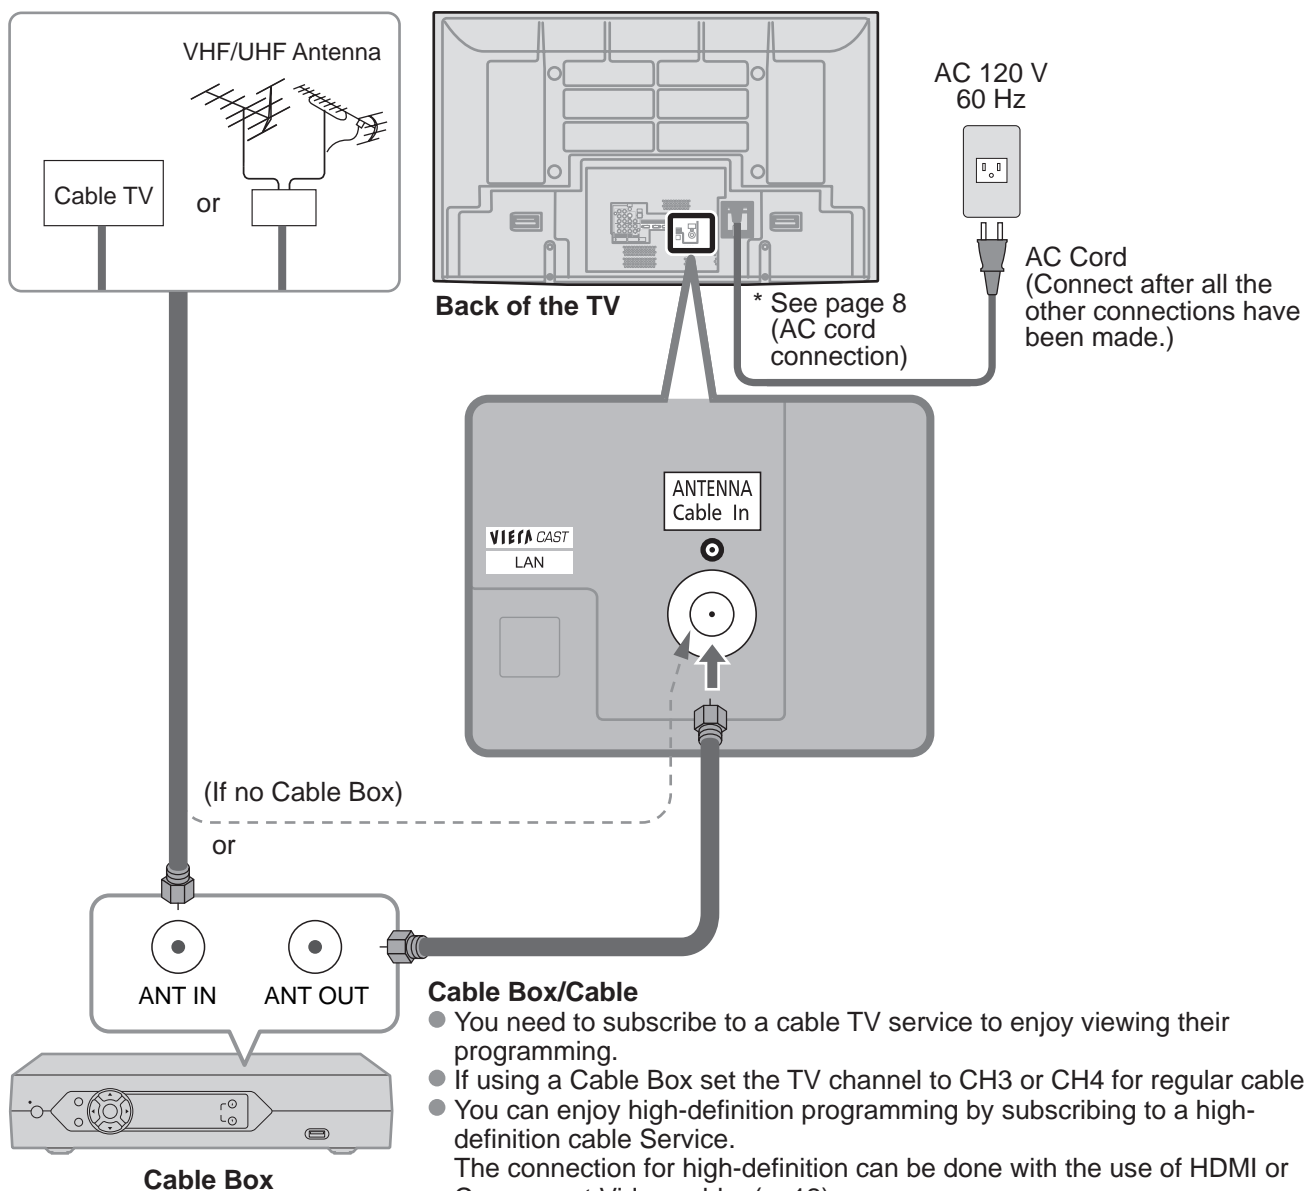

Cable Box/Cable

- You need to subscribe to a cable TV service to enjoy viewing their programming.
- If using a Cable Box set the TV channel to CH3 or CH4 for regular cable.
- You can enjoy high-definition programming by subscribing to a high-definition cable Service. The connection for high-definition can be done with the use of HDMI or Component Video cable. (p. 12)
- To view high-definition programming select the correct video input. (p. 22)

Note

- Not all cables and external equipment shown in this book are supplied with the TV.
- For the details of the external equipment's connections, please refer to the operating manuals for the equipment.
- When disconnecting the power cord, be absolutely sure to disconnect the power cord plug from the wall outlet first.
- For additional assistance, visit us at: www.panasonic.com
www.panasonic.ca

Basic Connection (Continued)

Example 2 Connecting DVD recorder (VCR) (To record/playback)

TV




DVD Recorder

If this source has higher resolution through interlace or progressive signal, connection can be done with the use of Component Video or HDMI cable. (p. 12)


VCR

Connection can be done with the use of an RF cable and Composite Video/S Video cable. (p. 12)


To connect antenna terminal and DVD recorder or VCR

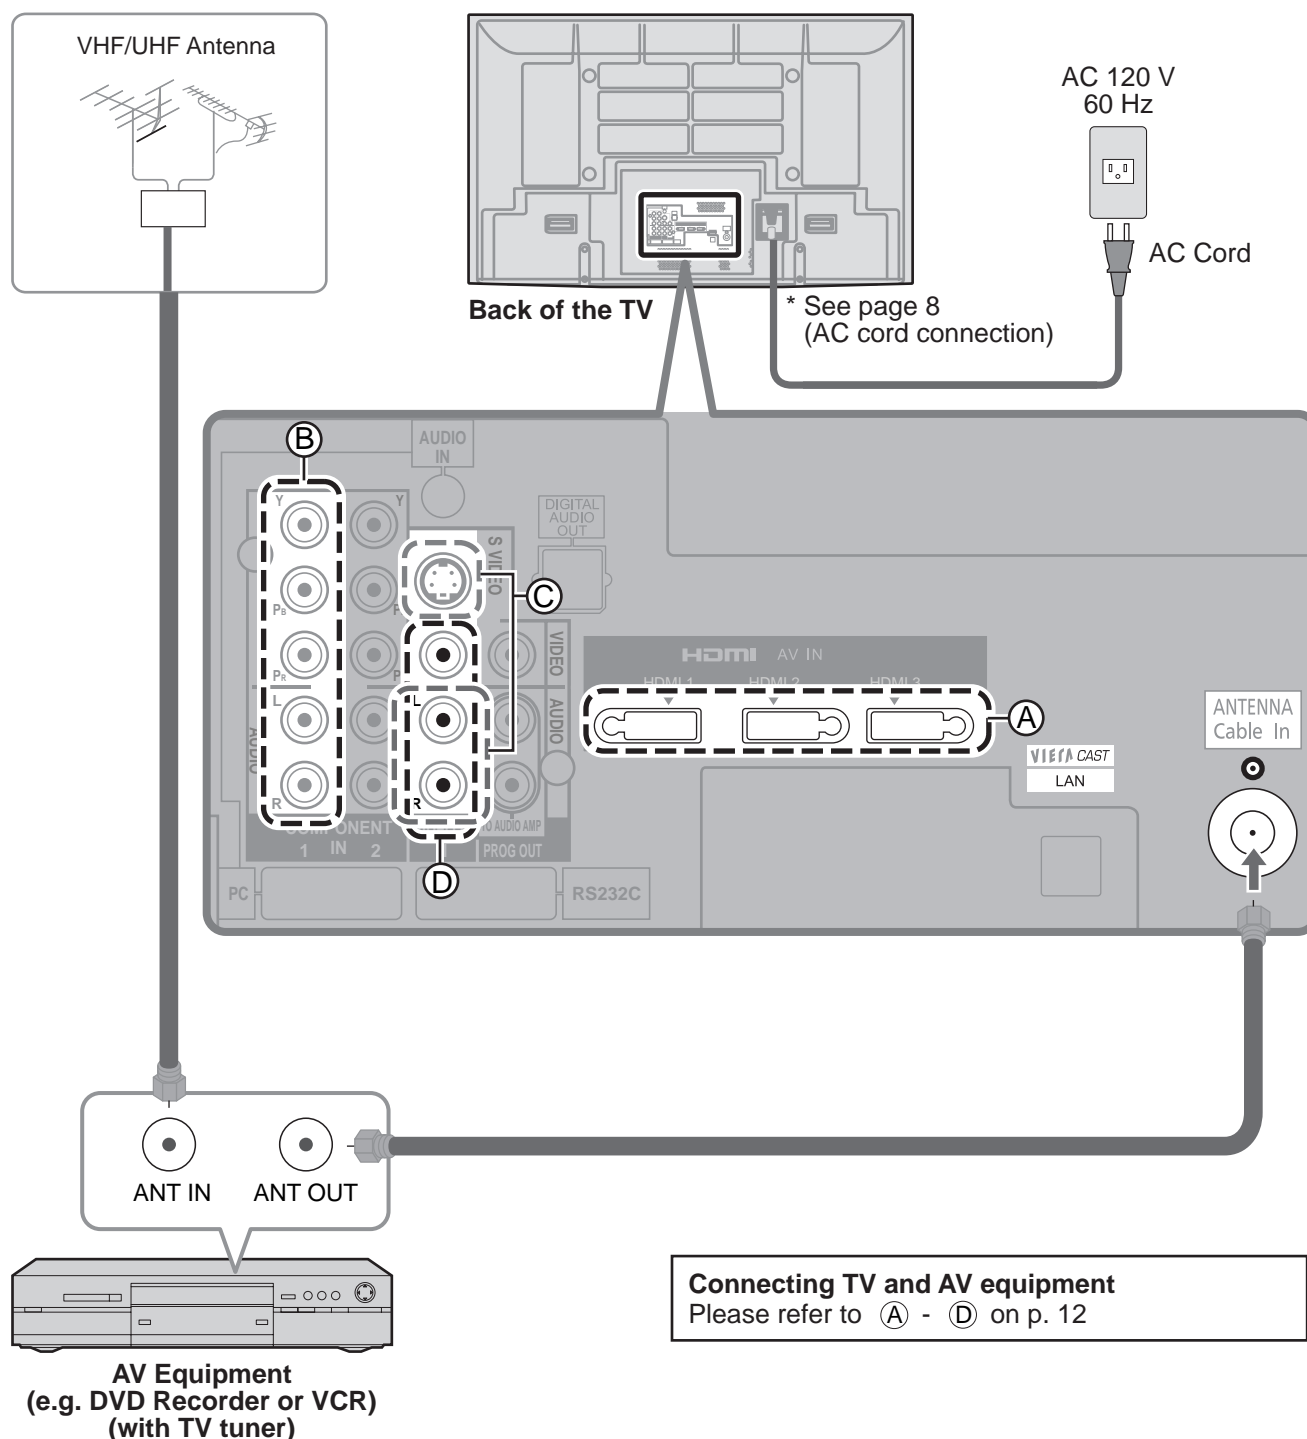

Example 3 Connecting DVD recorder (VCR) and satellite receiver

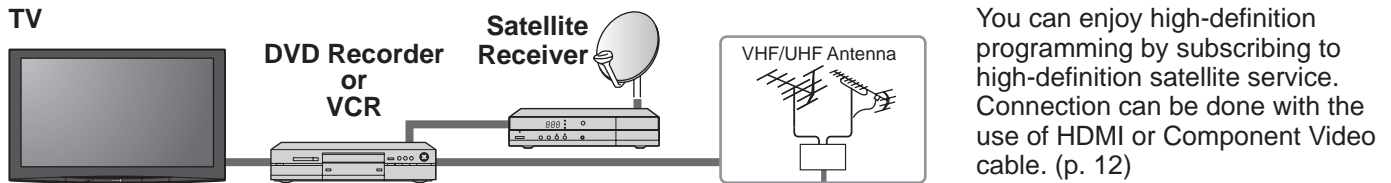

To connect antenna terminal and Satellite Receiver and DVD recorder or VCR

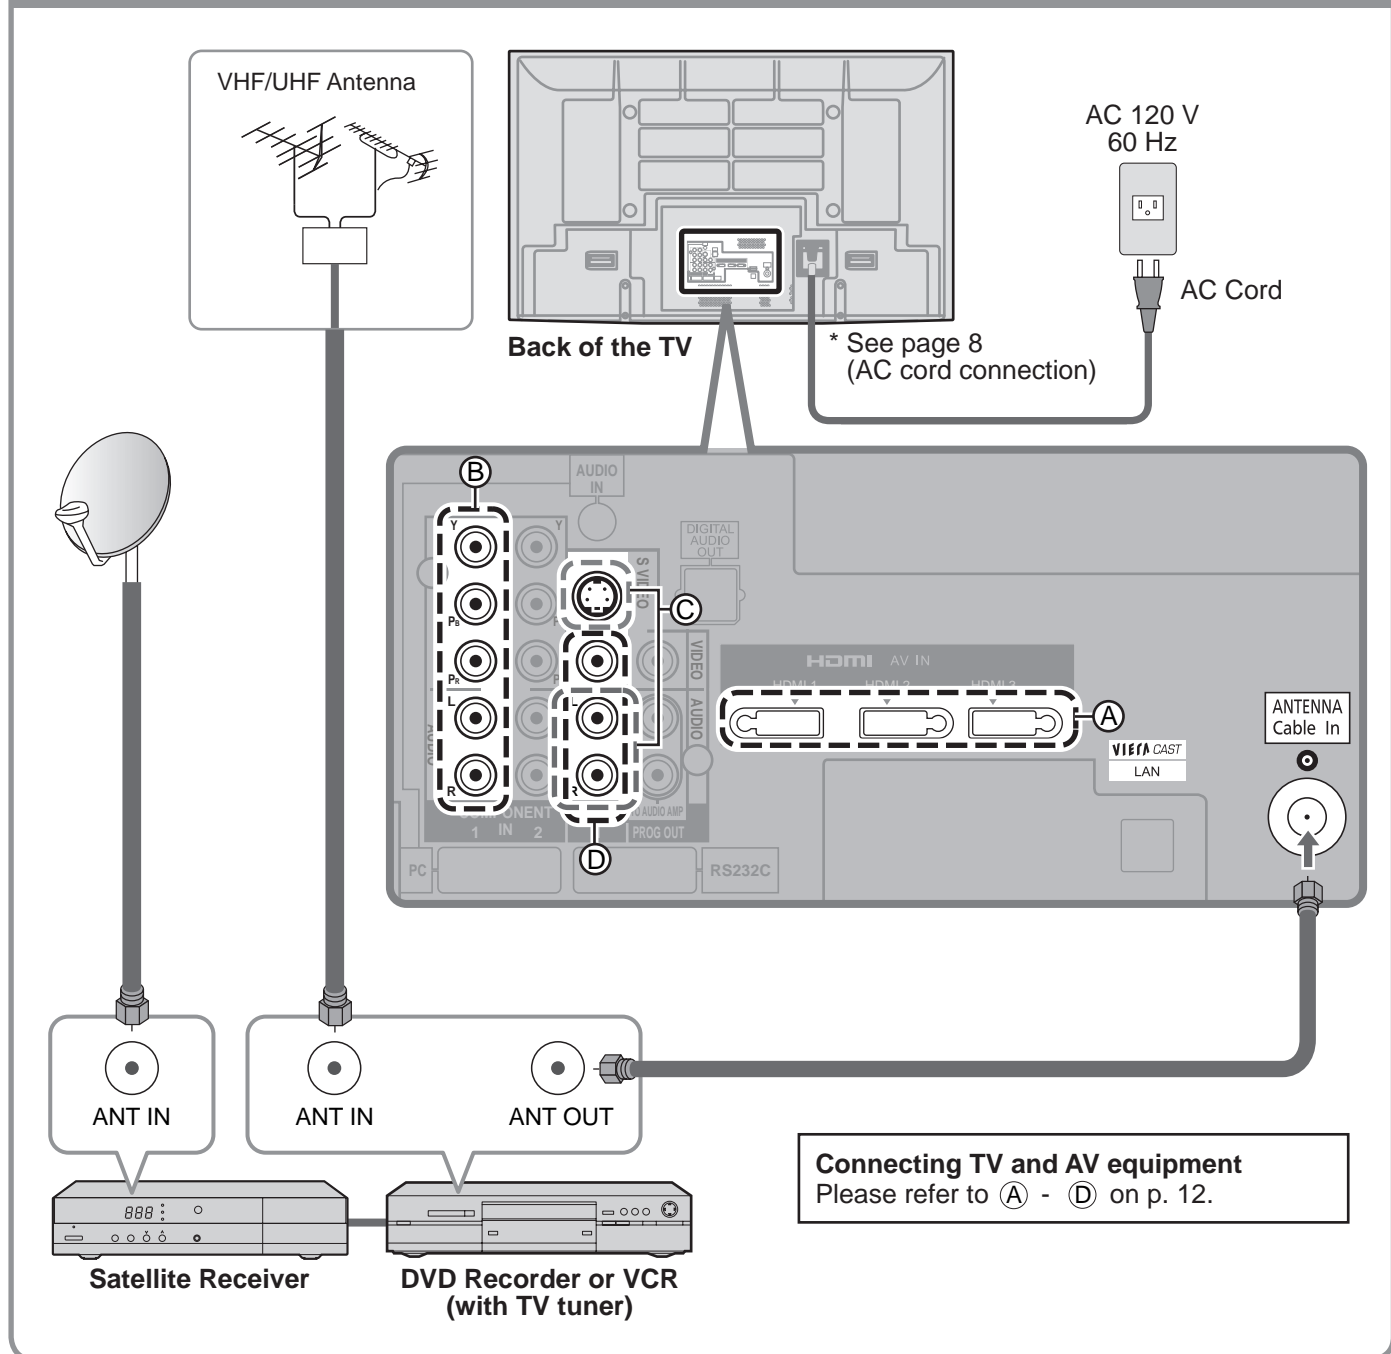

Note


- For details of external equipment connections, please refer to the operating manuals for the equipment.

Basic Connection (Continued)

AV cable connections


High-Definition

A To use HDMI terminals

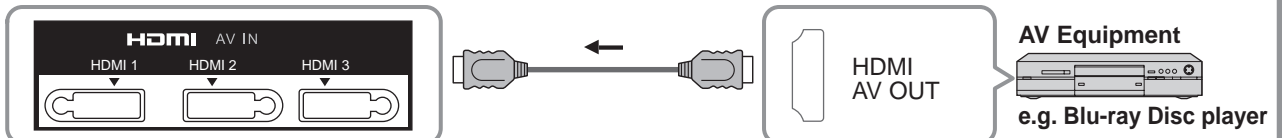

- Connecting to HDMI terminals will enable you to enjoy high-definition digital images and high-quality sound.
- For "VIERA Link™ connections", please refer to p. 49.


B To use COMPONENT terminals

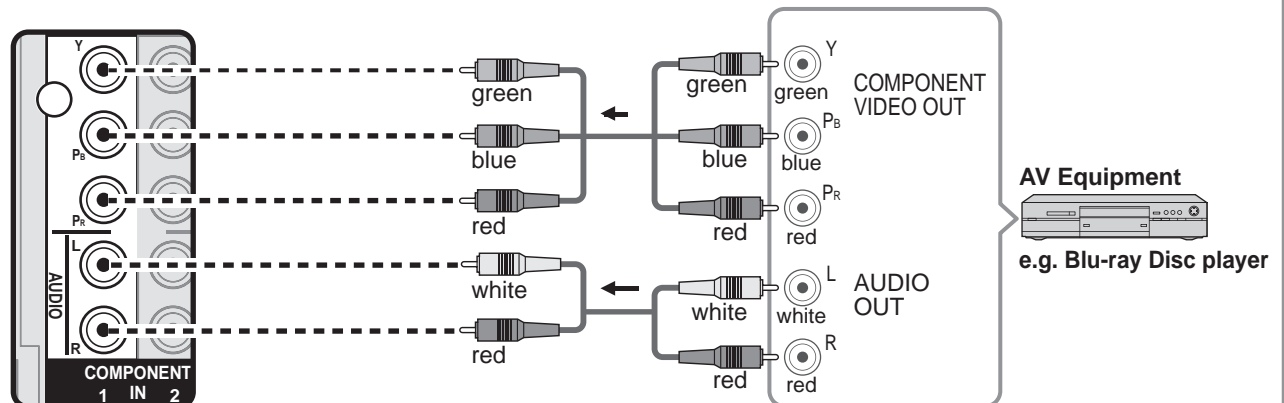


- Recorders may also be connected to COMPOSITE or S VIDEO terminals. (see below)

Standard-Definition

C To use S VIDEO terminals

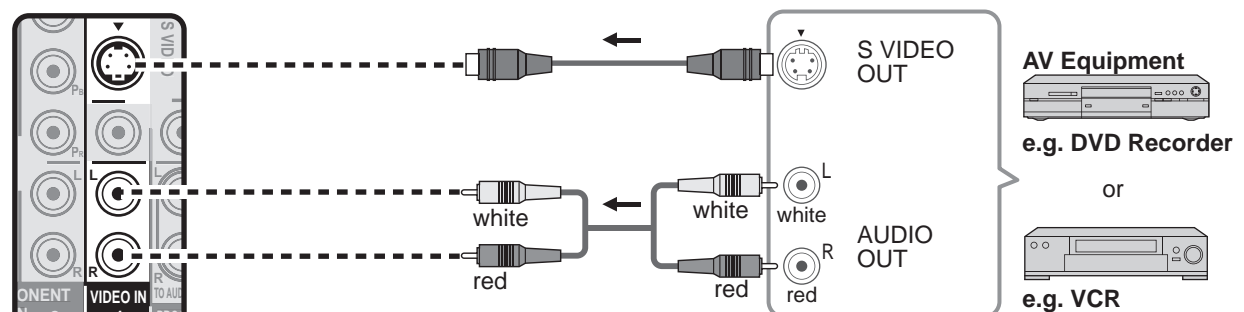

D To use COMPOSITE terminals

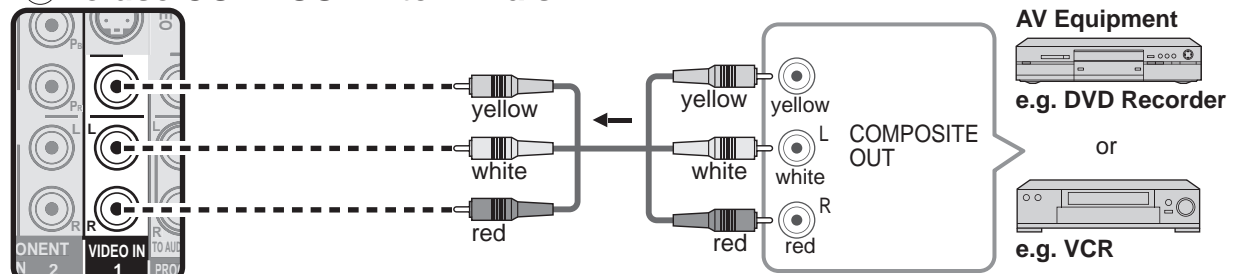

- The S Video input will override the composite video signal when S Video cable is connected. Connect either S Video or Video cable.
- Connecting to S VIDEO terminals will enable you to enjoy greater picture quality than using Composite terminals.


Note

- Some programs contain a copyright protection signal to prevent recording.
- When the copyright protection program is displayed, do not connect the other TV monitor through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the other TV monitor.
- For the details of the external equipment's connections, please refer to the operating manuals for this equipment.

Identifying Controls

TV controls/indicators


Front of the TV

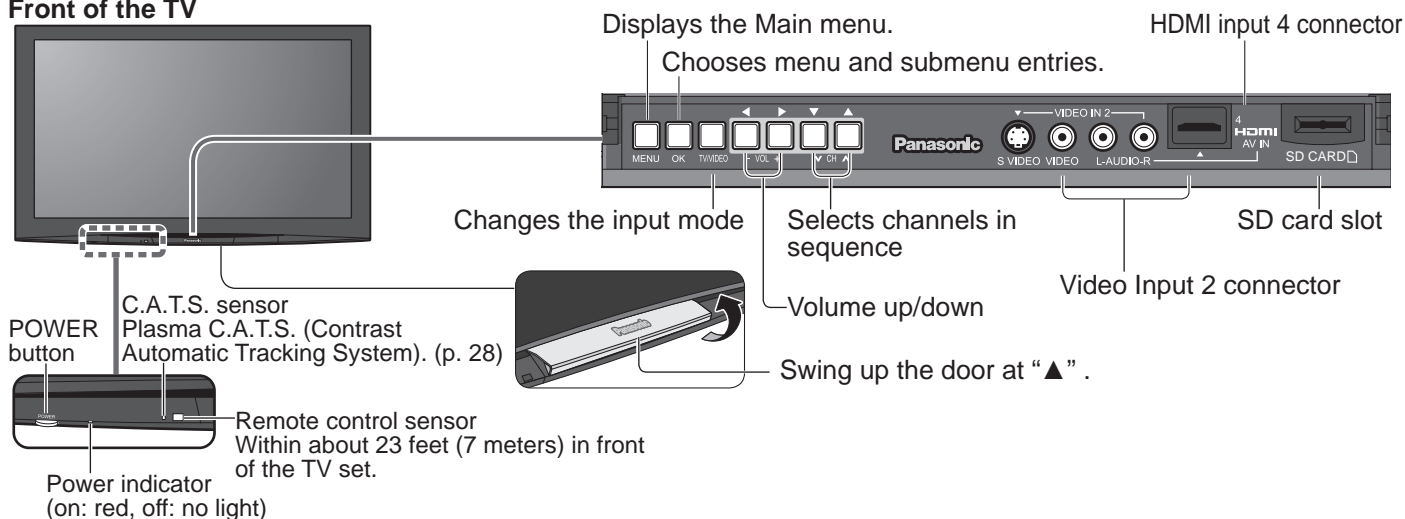

Note


- The TV consumes a limited amount of power as long as the power cord is inserted into the wall outlet.

Remote control

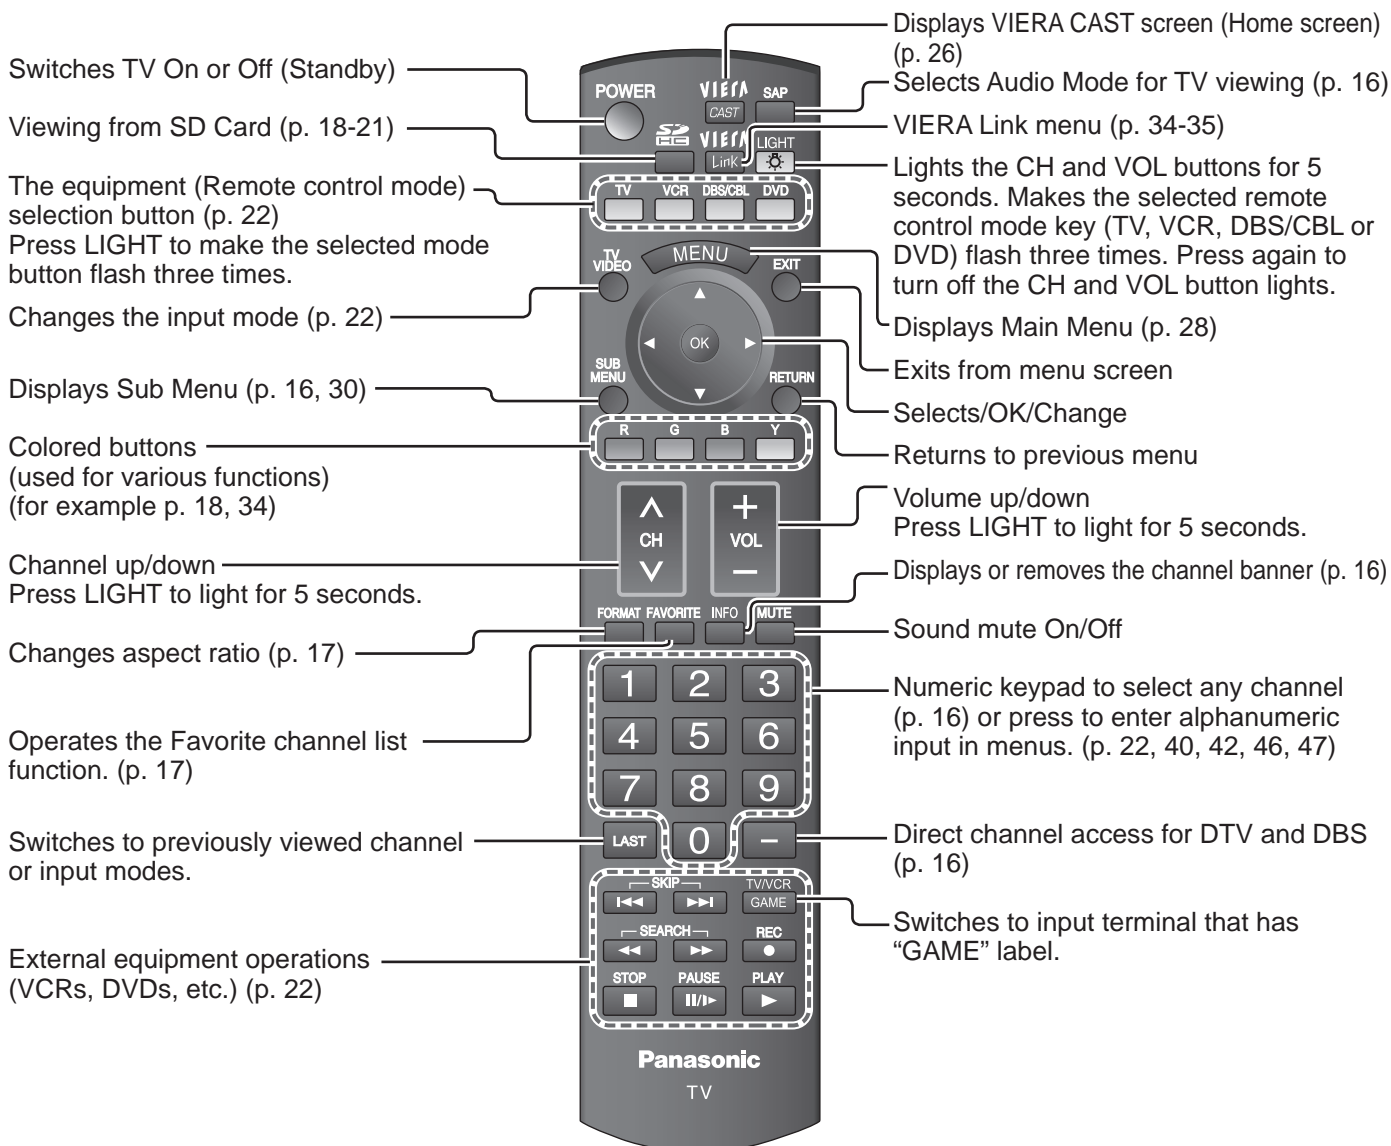


First Time Setup

“First time setup” is displayed only when the TV is turned on for the first time after the power cord is inserted into a wall outlet and when “Auto power on” (p. 30-31) is set to “No”.

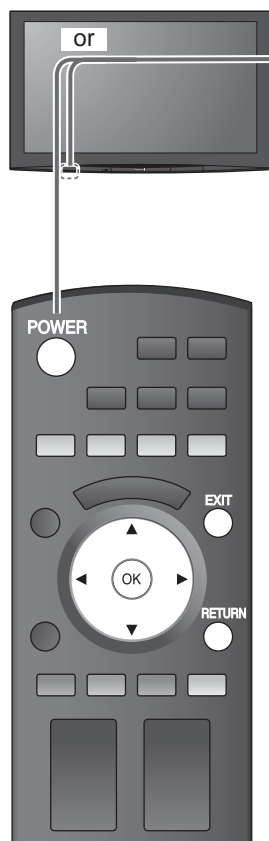


1 Turn the TV On with the POWER button

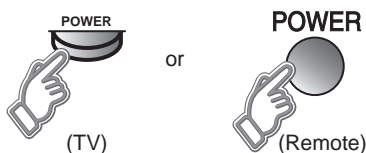


* This setting will be skipped next time if you select “Home”.

 ① Select your language




② Be sure to select “Home”

 

● Please confirm your selection (Home) before pressing OK button.

 ■ If you select “Store” by mistake in ②, confirmation screen will be displayed.



- Select “No” and return to previous screen ②.
- If you select “Yes”, Screen enters store demonstration mode. Displays “Please select your viewing environment” screen once again as shown below. Reselect “Home”.
 - Unplug the TV and plug it again.
 - Press and hold down the front POWER button.

■ Press to exit from a menu screen

EXIT



■ Press to return to the previous screen

RETURN




Note


- To change setting (Language/ Auto program/ Network setting/ VIERA CAST setting/ Clock) later, go to Menu screen (p. 30)

2 Auto channel setup

① Select “Auto program”

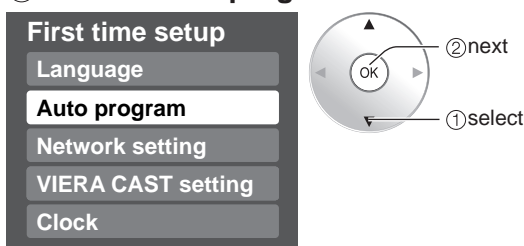

② Select “ANT in”

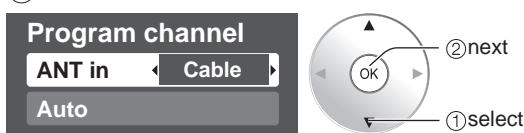


③ Select “Auto”



ANT in

Cable: Cable TV
Antenna: Antenna

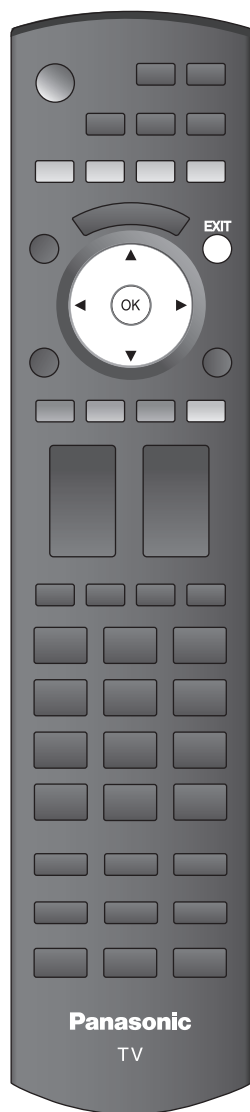

■ Press to exit from a menu screen

EXIT

Note

- About broadcasting systems

Analog (NTSC):




Conventional broadcasting

Digital (ATSC):

New programming that allows you to view more channels featuring high-quality video and sound

2

④ Select scanning mode (ALL channels/Analog only/Digital only)

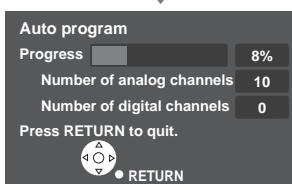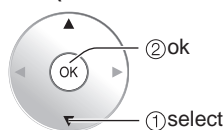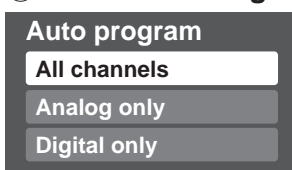

Start scanning the channels



- Available channels (analog/digital) are automatically set.

All channels: Scans digital and analog channels

Analog only: Scans Analog channels only

Digital only: Scans Digital channels only



⑤ Confirm registered channels

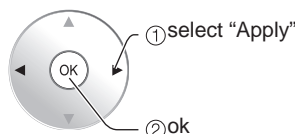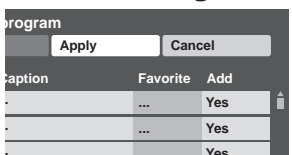

- If OK is not pressed after selecting "Apply", the channels will not be saved. The channel will be saved when no operation is performed for 60 seconds and the "Manual program" menu will also exit automatically.
- If you perform scanning more than twice, previously saved channels are erased.

3



Network setting/VIERA CAST setting

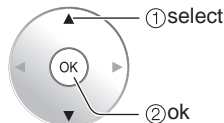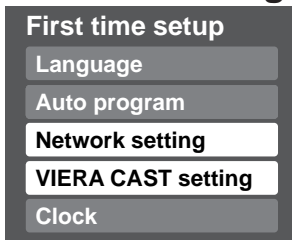



Network setting (p. 36-37)
VIERA CAST setting (p. 38-39)

4


Adjust the clock

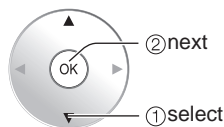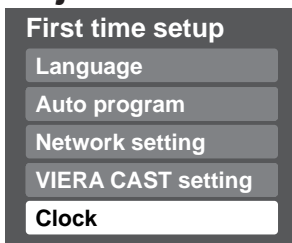

① Manual setting

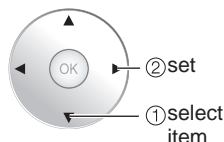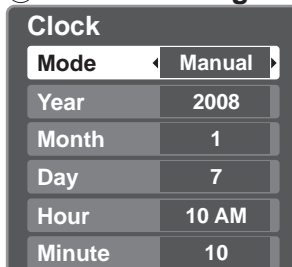

② Auto setting

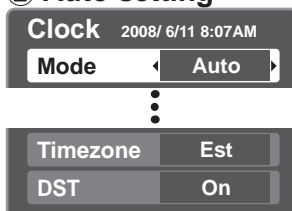

Mode

Manual: Adjust the clock manually (Year/Month/Day/Hour/Minute)

Auto: The clock is adjusted automatically via Internet service.

Only available when the TV is on a network.

➔ Set "Network setting" and "VIERA CAST setting" first. (Time zone/DST)

Year Select the year

Month Select the month

Day Select the day

Hour Adjust the hour

Minute Adjust the minute

Time zone

Select your time zone. (EST/CST/MST/PST/AKST/HST/NT/AST)


DST Set DST (Daylight Saving Time) setting. (On/Off)

On: Advances the clock one hour from the time is set according to the time zone.

Watching TV


Connect the TV to a cable box/cable, set-top-box, satellite box, or antenna cable (p. 9-12)

To watch TV and other functions

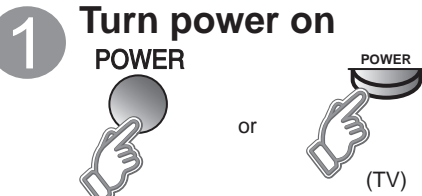

Note

- If the mode is not TV, press **TV** and select TV. (p. 22)

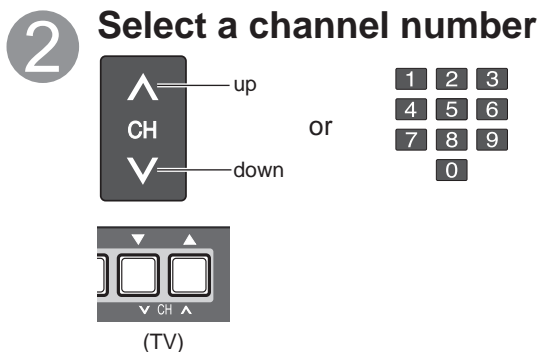

■ To directly input the digital channel number

- When tuning to a digital channel, press the button to enter the minor number in a compound channel number.

example: CH15-1: **1** **5** **-** **1**

■ Other Useful Functions (Operate after 2)

Listen with SAP (Secondary Audio Program)

■ Select Audio Mode for watching TV




- **Digital mode**
Press SAP to select the next audio track (if available) when receiving a digital channel.
Audio track 1 of 2 (English)
- **Analog mode**
Press SAP to select the desired audio mode.
• Each press of SAP will change the audio mode. (Stereo/SAP/Mono)

Display the SUB MENU



■ Press SUB MENU to show sub menu screen. (p. 30)


This menu consists of shortcuts to convenient functions.

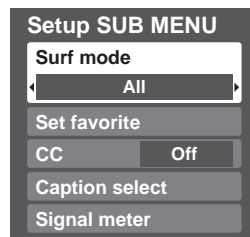

Information Recall




■ Displays or removes the channel banner.

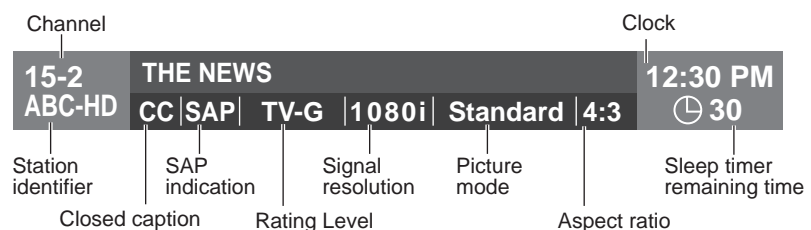

Change aspect ratio

■ Press **FORMAT** to cycle through the aspect modes. (p. 54)

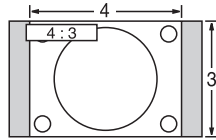

- 480i, 480p: FULL/JUST/4:3/ZOOM
- 1080p, 1080i, 720p: FULL/H-FILL/JUST/4:3/ZOOM

Call up a favorite channel



■ FAVORITE

Channel numbers registered in Favorite are displayed on the favorite tune screen. Select the desired broadcast station with the cursor or use number buttons. (see below)





Note

- Reselect "Cable" or "Antenna" in "ANT in" of "Program channel" to switch the signal reception between cable TV and antenna. (p. 15, 43)
- The channel number and volume level remain the same even after the TV is turned off.


Favorite Feature

■ Set Favorite Feature


1 Display the SUB MENU.

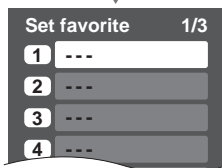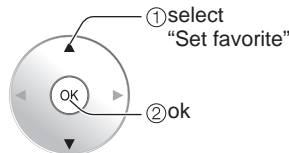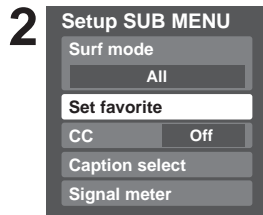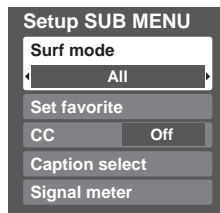

- Press FAVORITE repeatedly to change between pages (1/3, 2/3, 3/3, or exit).

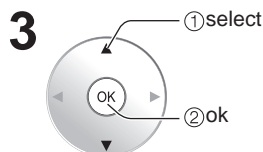

Press ▲▼ to highlight a position on the list. Then, press OK to save the displayed channel in that position.

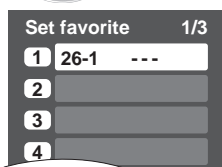

- You can also use the NUMBER buttons (1-9 and 0) to select a list number (1-9 and 0). By doing so, the displayed channel will be saved on that list number without pressing OK.

● To delete a favorite channel

A saved channel can be removed from the list by holding down OK while its position is highlighted.

● To change the page

Pressing ◀ changes the page backward.

Pressing ▶ changes the page forward.



■ Use Favorite Feature

1 FAVORITE




Press FAVORITE.

- Press FAVORITE repeatedly to change between pages (1/3, 2/3, 3/3, or exit).

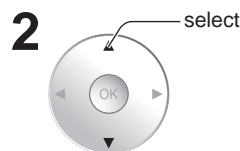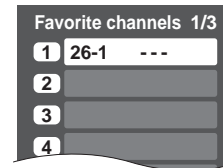

Press ▲▼ or a Numbered key (1-9 and 0) to highlight a channel on the list.

- Selecting a channel number from the list with the number button will display the channel directly.

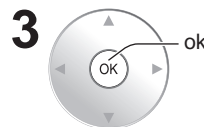

Press OK to display the highlighted channel.

Viewing from SD Card


You can view movies and photos taken with a digital camera or digital video camera and saved on an SD card. (Media other than SD Cards may not be reproduced properly.)

Movie player




SD Card

- Insert the card

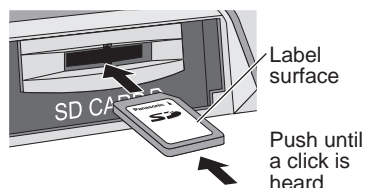

- Remove the card
➔ Press in lightly on SD Card, then release.

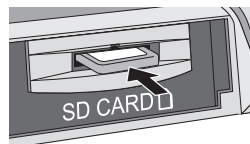

- Compliant card type (maximum capacity): SDHC Card (16 GB), SD Card (2 GB), miniSD Card (1 GB) (requiring miniSD Card adapter)
- For cautions and details on SD Cards (p. 55)
- Blue LED lights while SD Card is inserted if set "SD card LED" to "On" in Setup Menu (p. 30).

1

Insert the SD card and select "Play SD card now"

- "SD card setting" will be displayed automatically each time an SD card is inserted for the first time.

SD card setting

Play SD card automatically
Movie
Play SD card now

Play SD card automatically: Set it to playback the data when SD card is inserted.

Movie: The video data plays automatically from next time. ➔ Go to P. 19 ②

Photo: The photo data plays automatically from next time. ➔ Go to P. 20 ②

Select later: "SD card" menu will be displayed from next time. ➔ Go to ②


Off: The data can be played manually.

① Press the SD key or select "SD card" on the Menu

- You can skip this step when "Play SD card now" is selected or other than "off" (Movie/Photo/Select later) is set in "Play SD card automatically" setting.



or

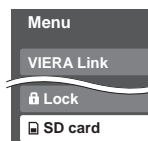

② Select the item

SD card
Photo viewer
Movie player

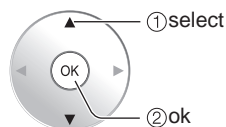


Photo viewer ➔ Go to P. 20 ②

Note

- No video signals can be output from PROG OUT terminal when playing the movie.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

■ Press to return to TV



■ Press to exit from a menu screen



■ Press to return to the previous screen



2

Select the movie to be listed

Recording format (MPEG2/AVCHD)

Movie information

Date and Time:
Date and time of recording are displayed.

Duration:
Recording time is displayed.

3

View

Navigation area

● To display Navigation area
→ R G B Y / OK

● To hide Navigation area → RETURN

● To previous movie → R

● To next movie → G

● To display/hide banner → INFO

Movie Banner

Date and Time 06/10/2007 11:34 AVCHD PLAY

Duration 00h05m27s 00:00.14

Elapsed time of current movie

Other settings

■ To adjust picture and audio/

To use VIERA Link function

In ② or ③

1 Display "Movie menu"



2 Select the item

3 Adjust or set

example: Picture menu
Picture menu/Audio menu
VIERA Link (p. 28)


■ To confirm or change the current audio status

In ② or ③

1 Display "current audio status"



2 Each press of SAP will change the audio mode. (If the movie has multiple audio signals.)

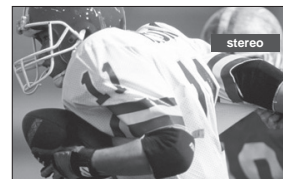


(Current audio status)

- It may take several seconds to change the sound.

Viewing from SD Card (Continued)

Photo viewer

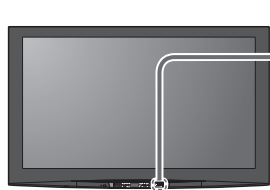


1

Follow direction 1 in Movie player (P. 18)




2

Select the data to be viewed

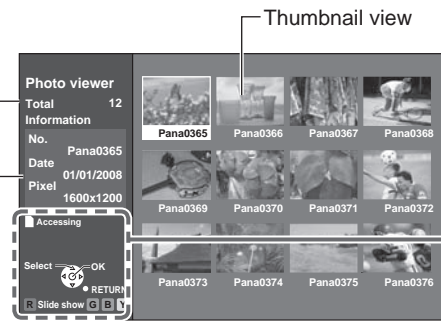

Thumbnail view

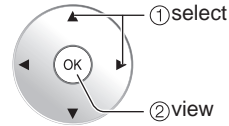

① select


② view

Selected picture information is displayed.
No.: Image number or file name is displayed.
Date: Date of recording is displayed.
Pixel: Display resolution is displayed.


Total number of images

Navigation area

Present status
(While reading the data)

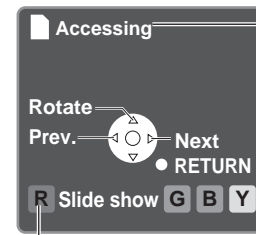

(to Slide show)

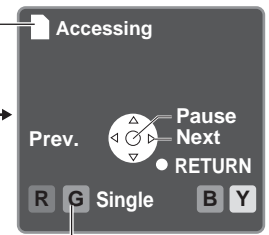

(to Single photo display)

Note

- Depending on the JPEG format, "Information" contents may not be displayed correctly. Refer to p. 55 (Data format for SD card browsing) for details.


3

View



Displays one at a time

Navigation area

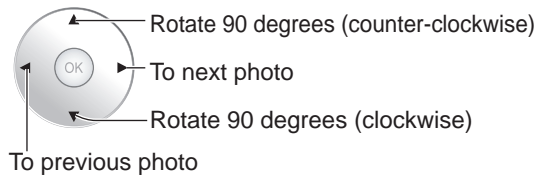

- To display/hide Navigation area → INFO

■ Press to return to TV



■ Press to exit from a menu screen



■ Press to return to the previous screen



To change the view (slide show mode, adjusting images, etc.)


■ To set up the slide show mode

In ② or ③



1 Display "Photo menu"



2 Select "Setup slide show"

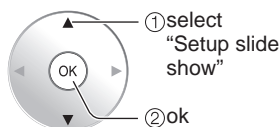


3 Select the item and adjust

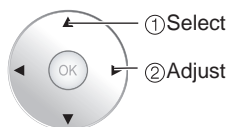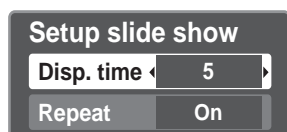

Disp. time	You can set how many seconds each image is displayed in Slide show mode. (1-10/15/20/30/45/60/120 sec)
Repeat	Turn the slide show Repeat function On or Off.

Note

- For large image sizes, the display time will be longer than the number of seconds set.
- To stop in mid-cycle → Press 


■ To adjust picture

In ② or ③


1 Display "Photo menu"



2 Select "picture"

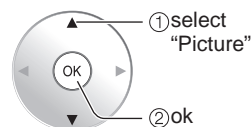


3 Select the item

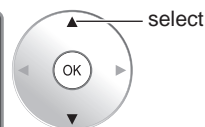

Picture menu (p. 28)

4 Adjust or select

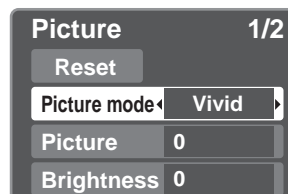

Viewing from a GalleryPlayer SD Card

You can view high-definition art and photography purchased on or downloaded to an SD card. GalleryPlayer provides pre-loaded SD cards with copy-protected imagery and images for download to your computer that can be saved on an SD card for display on your television.

GalleryPlayer images are available for a fee from GalleryPlayer, Inc.


Watching Videos and DVDs

If you have applicable equipment connected to the TV, you can easily watch videos and DVDs using the TV's remote control.

Input Select

You can select the external equipment to access.

To operate other manufacturers' equipment, you need to register the code for the equipment. (p. 47)

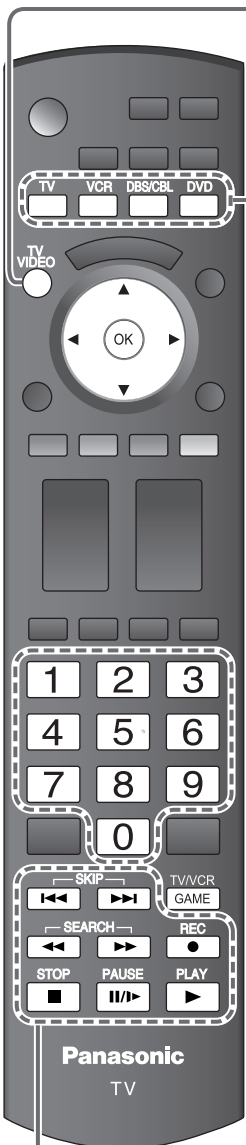

1 With the connected equipment turned On
Display the Input select menu

2 **Select the input mode**

Input select

1 TV

2 Component 1 **AUX**

3 Component 2

4 **HDMI 1** **GAME**

5 HDMI 2

6 HDMI 3

7 HDMI 4 **GAME**

8 Video 1

9 Video 2 **GAME**

0 PC


1 2 3

4 5 6

7 8 9

0

or

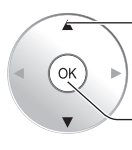

①select


②enter

Press corresponding NUMBER button on the remote control to select the input of your choice.

Select the input of your choice, then press OK.

- During the selection, if no action is taken for several seconds, the "Input select" menu disappears.
- The terminal and label of the connected equipment are displayed. To label each of the inputs, please refer to p. 45.

(example)




Terminal Label

(example)


Note

- The input label will be displayed on "Input select" screen if Input label is set on p. 45.
- For front input terminals (HDMI 4/Video 2), "GAME" input label is set as default. (Picture mode is set to "Game", refer to p. 56.)
- For more details for picture mode setting, refer to p.56. For Input label, refer to p. 45.

Press Game to switch to the game screen
Switches to Input terminal that has "GAME" label.



- Cycle through the input terminals if there are multiple Input terminals that have "GAME" label. (p. 45)
- If there is no Input terminal with "GAME" label, you cannot switch the input terminal to any other input terminal than the one currently selected.

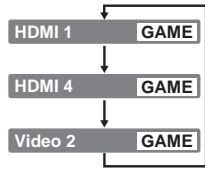

3 **Select the remote control mode**
Press the key to select

4 **Operate the connected equipment, pointing TV's remote control at the equipment**

Note

- For details, see the manual of the connected equipment.

(example)

	VCR MODE	DVD MODE		VCR MODE	DVD MODE
	VCR Record	Record		Stop	Stop
	—	Skip Reverse/Forward		Pause	Pause
	Rewind/Fast Forward	Reverse/Forward		Play	Play

(For other operations, see p. 50)

VIERA Link™ Setting

If you connect equipment that has “HDAVI Control” function to a TV with HDMI cable, you can use more convenient functions. Please refer to p. 32-35. Before using these functions, you need to set “VIERA Link” setting to “On” as shown below.

- 1 Display menu**
A hand icon points to the **MENU** button on the remote.
- 2 Select “Setup”**
The **Menu** screen is shown with options: **VIERA Link**, **Lock**, **SD card**, **CC**, and **Setup**. A diagram shows the directional pad with **① select** pointing to the center (OK) and **② next** pointing to the right arrow.
- 3 Select “VIERA Link setting”**
The **Setup** screen (2/2) is shown with options: **VIERA Link setting** and **Network setting**. A diagram shows the directional pad with **① select** pointing to the center (OK) and **② next** pointing to the right arrow.
- 4 Select “VIERA Link”**
The **VIERA Link setting** screen is shown with options: **VIERA Link** (set to **On**), **Power off link** (Set), **Power on link** (Set), and **Default speakers** (TV). A diagram shows the directional pad with **select** pointing to the center (OK).
- 5 Select “On”**
(default is On)
A diagram shows the directional pad with **change** pointing to the center (OK).

■ Press to exit from a menu screen



■ Press to return to the previous screen



Now you can set each “VIERA Link” function according to your preference (p. 32-35)

Note


- If no HDMI equipment is connected or standard HDMI equipment (non- “VIERA Link”) is used, set it to “Off”.
- For the details on the external equipment’s connections, please refer to the operating manuals for the equipment.

Displaying PC Screen on TV

The screen of the PC connected to the unit can be displayed on the TV.

You can also listen to PC sound with the audio cable connected. To connect PC (p. 48)


1 Display the Input select menu

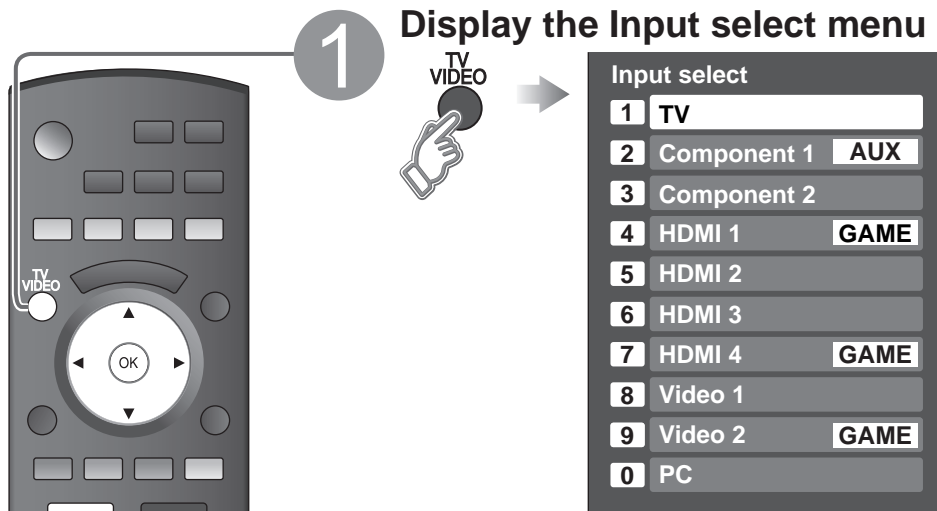

The diagram shows a Panasonic TV remote control with a line pointing to the TV VIDEO button. An arrow points from this button to a menu titled "Input select".

Input select	
1	TV
2	Component 1 AUX
3	Component 2
4	HDMI 1 GAME
5	HDMI 2
6	HDMI 3
7	HDMI 4 GAME
8	Video 1
9	Video 2 GAME
0	PC

2 Select "PC"

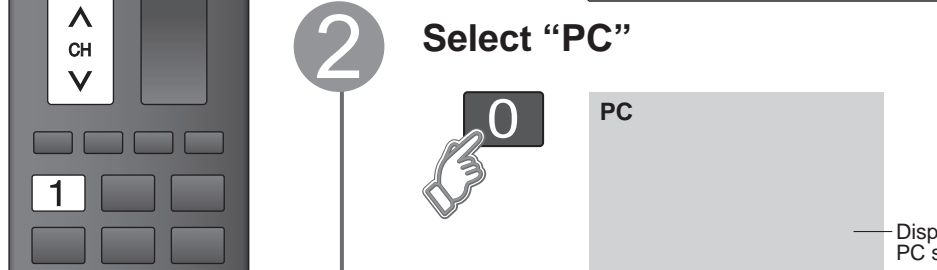


The diagram shows the same remote control with a line pointing to the number 0 button. An arrow points from this button to a box labeled "PC".

PC

Displays PC screen

● Corresponding signals (p. 57)



■ To return to TV



The diagram shows the TV VIDEO button and the number 1 button on the remote, with an arrow pointing from the TV VIDEO button to the number 1 button.

■ PC menu setting (change as desired)

- Making settings ➔ “How to Use Menu Functions” ① to ④ (p. 28)

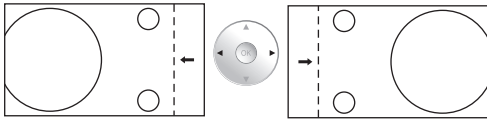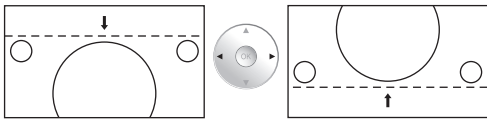Menu	Item	Adjustments/Configurations (options)
Picture	PC adjust	
	Reset	Resets PC adjust
	Sync	<ul style="list-style-type: none"> ● H & V: The H and V sync signals are input from the HD/VD connector. (p. 57) ● On G: Uses a synchronized signal on the Video G signal, which is input from the G connector. (p. 57)
	Dot clock	Alleviates the problem if a picture appears to be vertically-striped, flickers partially or is blurred.
	H-position	Adjusts the horizontal position. 
	V-position	Adjusts the vertical position. 
	Clock phase	<p>Alleviates the problem if the whole picture appears to flicker or is blurred. First adjust the Dot Clock to get the best possible picture, then adjust the Clock Phase so that a clear picture appears.</p> <p>Note</p> <p>It may not be possible to display a clear picture due to poor input signals.</p>
	Input resolution	<p>Switches to wide display.</p> <ul style="list-style-type: none"> ● Input signal switched from VGA to WVGA ● Input signal switched from XGA to WXGA
	H-frequency V-frequency	<p>Displays the H (Horizontal)/V (Vertical) frequencies.</p> <ul style="list-style-type: none"> ● Display range Horizontal: 15 - 110 kHz Vertical: 48 - 120 Hz

- Audio menu (p. 28)
- For PC input, only audio signals can be output from PROG OUT terminals.

VIERA CAST™

Operate VIERA CAST

You can access information services (TV content) from the Home screen via the Internet.

- You need broadband environment to use this service.





Preparations

- VIERA CAST connections (p. 27)
- Network setting (p. 36)
- VIERA CAST setting (p. 38)

1 Display the Home screen



2 Select the item and press OK

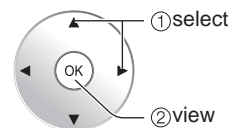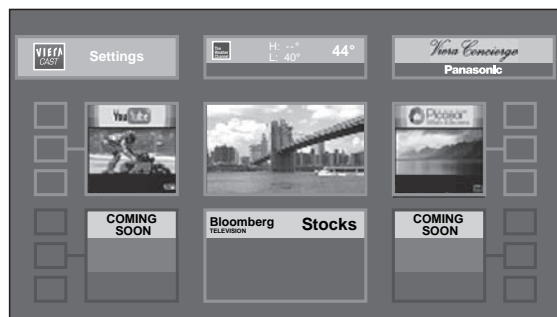

- Press to exit from a menu screen



- Press to return to the Home screen




This screen is an example. It varies according to the usage conditions.

* Depending on the usage conditions, it may take a while to read all the data.


Other settings

■ To adjust picture and audio

1 Display "Menu" and select "picture" or "Audio"

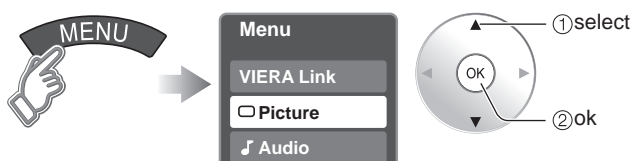


2 Select the item and adjust

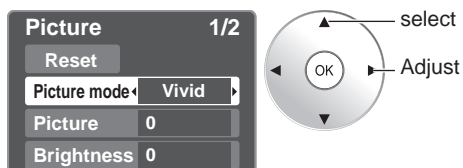


example: Picture menu
Picture menu/Audio menu
(p. 28)

■ To use VIERA Link function

1 Display "Menu" and select "VIERA Link"

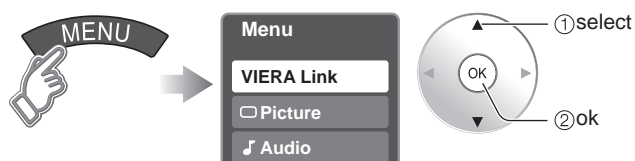

2 Select the item and set

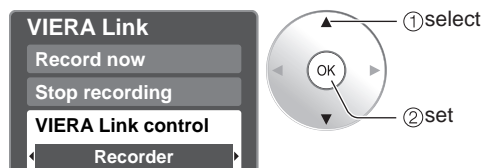

VIERA Link (p. 28, 34)

VIERA CAST connections

1 Contact your Broadband service provider

If you don't have broadband service, please order high-speed Internet service no less than 1.5 Mbps by your local broadband company. If you already have Internet high speed service, make sure that the connection speed is at least 1.5Mbps. Please note that dial-up Internet service cannot be used for the IPTV.

2 Select wired or wireless connection

If the Cable/DSL modem is close to the TV and you have only one TV set, you might choose wired connection. If the Cable/DSL modem is far from the TV and/or you have more TV's in the house, you might want to use a wireless network.

3 Connecting to the internet

A Basic connection


If you are not using the network for connecting anything else but the TV, you could just connect the TV directly to the Cable/DSL Ethernet connection (see schematic below).

B Advanced wired connection

If you are using the network for connecting many PC's/Laptops and want to connect the TV, you should use a router to connect the TV to the internet (see schematic below).

C Advanced wireless connection

If you are using the network for connecting many PC's/Laptops and want to connect the TV, you could also use a wireless router to connect the TV to the Internet (see schematic below).

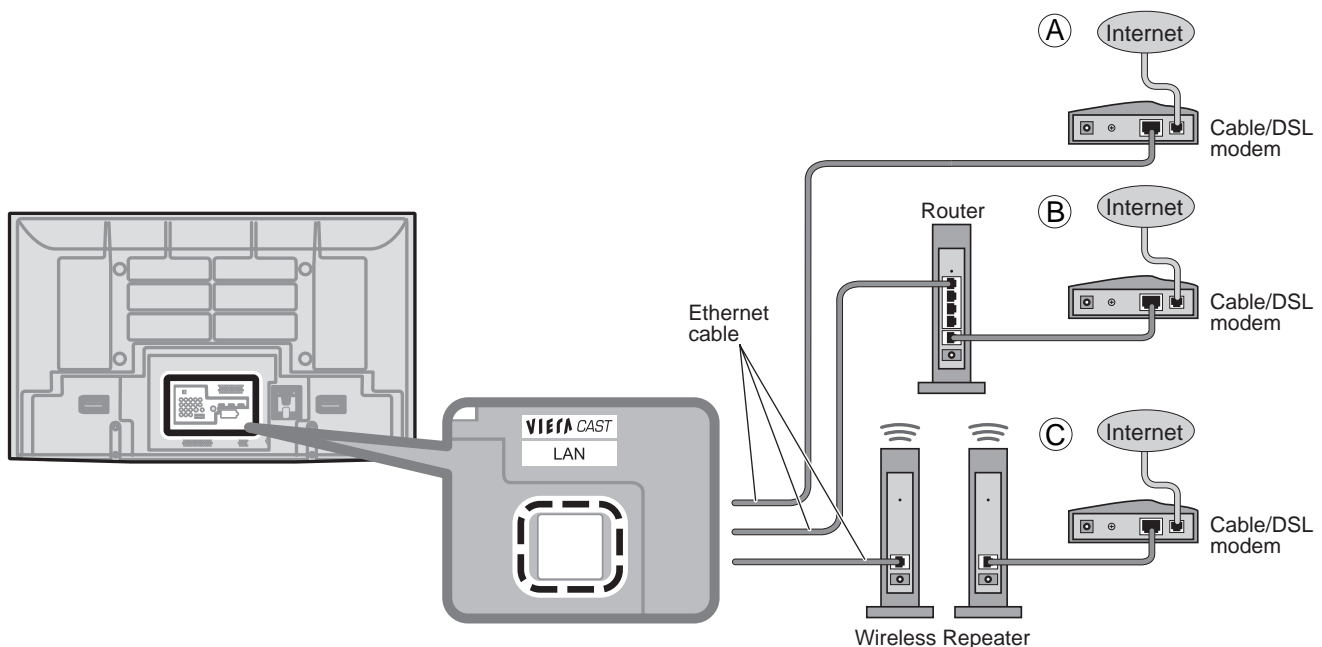

How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV best suited for you.





1 Display menu




- Displays the functions that can be set (varies depending on the input signal)

2 Select the menu

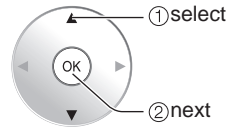
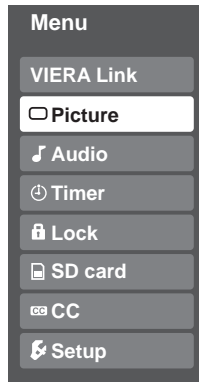


3 Select the item

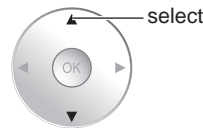

(example: Picture menu)

4 Adjust or select

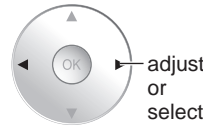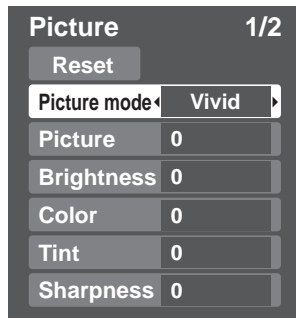

(example: Picture menu)

■ Press to exit from a menu screen




■ Press to return to the previous screen



Menu list

Menu	Item	
VIERA Link	Record now	
	Stop recording	
	VIERA Link control	
	Speaker output	
Picture	Reset	
	Picture mode	
	Picture, Brightness, Color, Tint, Sharpness	
	Color temp.	
	Color mgmt.	
	Digital cinema color	
	C.A.T.S.	
	Pro setting	
	Zoom adjust	
	PC adjust	
	Video NR	
	3D Y/C filter	
	Color matrix	
	Block NR	
	Mosquito NR	
	Black level	
Advanced picture	3:2 pulldown	
	24p Direct in	
	HD size	
Audio	Reset	
	Bass	
	Treble	
	Balance	
	AI sound	
	BBE VIVA 3D	
	BBE	
	Surround	
	Audio leveler	
	Speaker output	
	HDMI 1 in	
	HDMI 2 in	
	HDMI 3 in	
	HDMI 4 in	
Timer	Sleep, Timer 1-5	
Lock		

Adjustments/Configurations (alternatives)			
[Record now/Stop recording] Records programs on the recorder immediately with the TV's remote control (p. 34-35).			
[VIERA Link control] Selects equipment to access and operate. (Recorder/Home theater/Player/Camcorder) (p.34-35)			
[Speaker output] Selects an audio output. (Home theater/TV) (p. 34-35) ● VIERA Link menu is accessible directly by pressing the VIERA Link button on the remote control. ➔  (p. 34)			
Resets all picture adjustments to factory default settings except for "Advanced picture".	Reset		
Basic picture mode (Vivid/Standard/Studio ref/Game/Custom) (p. 56)	Picture mode Vivid		
Adjusts color, brightness, etc. for each picture mode to suit your taste ● Display range Picture/Brightness/Color/Sharpness: 0 - 100 Tint: -50 - +50	Picture	+20	Tint 0
	Brightness	0	Sharpness 0
	Color	0	
Selects a choice of Cool (blue), Normal, or Warm (red) color. (Cool/Normal/Warm)	Color temp. Cool		
On: Enhances green and blue color reproduction, especially outdoor scenes. (On/Off)	Color mgmt. On		
Auto: Automatically adjusts the color gamut of the input image to the color gamut of the panel. On: Shows an expanded display of the input image color gamut. Off: Displays the color gamut of the input image as is. (Auto/On/Off)	Digital cinema color Auto		
Adjusts the brightness and gradation accordingly to optimize contrast. (Off/On)	C.A.T.S. Off		
Adjust the "Picture mode" setting in more detail. (p. 56) (This setting can be adjusted only when "Custom" or "Photo" is selected.)	Pro setting		
Adjusts vertical alignment and size when aspect setting is "ZOOM" (p. 54)	Zoom adjust		
Sets PC display (p. 24)	PC adjust		
Reduces noise, commonly called snow. Leave it off when receiving a strong signal. (Off/On)	Video NR Off		
Minimizes noise and cross-color in the picture. (On/Off)	3D Y/C filter On		
Selects image resolution of component-connected devices (HD/SD) ● SD: Standard Definition HD: High Definition ● Only 480p signal accepted; regular TV (NTSC) is not available.	Color matrix SD		
Reduces noise of specific digital signals of DVD, STB, etc. (On/Off)	Block NR Off		
Reduces HDTV flicker noise in the contoured sections of an image (Off/On)	Mosquito NR Off		
Selects Dark or Light. Valid only for external input signals. (Dark/Light)	Black level Light		
Transfers film to video. (On/Off)	3:2 pulldown Off		
48Hz: Achieves more cinematic playback by reproducing the movie contents at twice the speed of 24 frames per second. (60Hz/48Hz)	24p Direct in 60 Hz		
Selects between 95 % (Size 1) or 100 % (Size 2) for the scanning area with High-definition signal. (Size 1/ Size 2) Select "Size 1" if noise is generated on the edges of the screen. ● Size 1: Selected item for "HD size". Scanning 95% ● Size 2: Selected item for "HD size". Scanning 100%	HD size Size1		
Resets Bass, Treble and Balance adjustments to factory default settings.	Reset		
Increases or decreases the bass response.	Bass 0		
Increases or decreases the treble response.	Treble 0		
Emphasizes the left/right speaker volume.	Balance 0		
Equalizes overall volume levels across all channels and external inputs. (On/Off)	AI sound On		
BBE ViVa HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE ViVa HD3D Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. (On/Off)	BBE VIVA 3D On		
BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism. (On/Off)	BBE On		
Enhances audio response when listening to stereo. (On/Off)	Surround Off		
Minimizes volume disparity after switching to external inputs	Audio leveler 0		
Switch to "Off" when using external speakers (On/Off) ● "AI sound", "Surround", and "Audio leveler" do not work if "Off" is selected	Speaker output On		
The default setting is "Digital" for HDMI connection. (Digital input signal) Select audio input terminal when DVI cable is connected. (Analog audio input signal) (Digital/Component 1/Component 2/Video 1/Video 2/PC)	HDMI1 in	Digital	HDMI3 in Digital
	HDMI2 in	Digital	HDMI4 in Digital
The TV can automatically turn On/Off at the designated date and time (p. 46)	Sleep 60		
Locks the channels and programs (p. 40)			
● In AV mode, the Audio menu and Setup menu give fewer options.			

How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV best suited for you.





1 Display menu





- Displays the functions that can be set (varies according to the input signal)

2 Select "Setup"

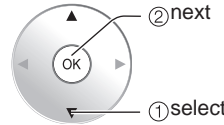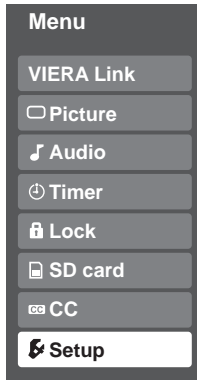

3 Select the item

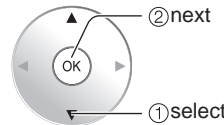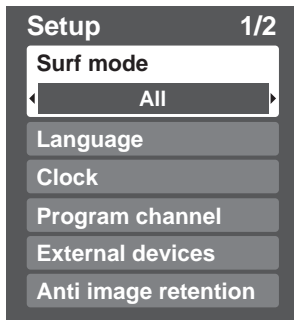

■ Press to exit from a menu screen





■ Press to return to the previous screen



1 Display Sub Menu



2 Select the item

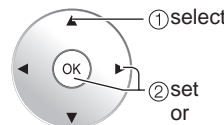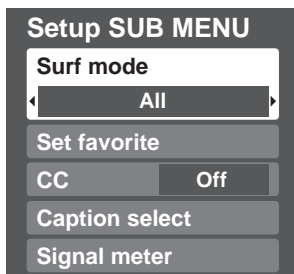

Menu list

Menu	Item	
SD Card	SD card	
CC	CC	
Setup	Surf mode	
	Language	
	Clock	
	Program channel	
	External devices	
	Input labels	
	Monitor out	
	Anti image retention	
	Pixel orbiter	
	Time	
	Side bar	
	Scrolling bar	
	VIERA Link setting	
	VIERA Link	
	Power off link	
	Power on link	
	Default speakers	
	Network setting	
	VIERA CAST setting	
	Advanced setup	
	Auto power on	
	No signal shut-off	
	No action shut-off	
	SD card LED	
	Play SD card automatically	
	About	
	Reset	

Sub menu list

Menu	Item	
Setup SUB MENU	Surf mode	
	Set favorite	
	CC	
	Caption select	
	Signal meter	

(Continued)

Adjustments/Configurations (alternatives)	
[Photo viewer] To view the still picture. (p. 20)	SD card
[Movie player] To view moving pictures recorded in MPEG 2 or AVCHD format. (p. 18)	
Displays subtitles (Closed Caption) (p. 44)	CC
Sets the mode to select the channel with Channel up/down button (All/Favorite/Digital only/Analog only)	Surf mode All
● Favorite: Only channels registered as FAVORITE (p. 17)	
Selects the screen menu language (p. 14)	Language
Adjusts the clock (p. 14)	Clock
Sets channels (p. 42)	Program channel
Selects the terminal and label of the external equipment (p. 45)	
[Component 1/Component 2/HDMI 1/HDMI 2/HDMI 3/HDMI 4/Video 1/Video 2] To prevent howling and image oscillation, stops output of the pictures and audio specified in this menu. (p. 45) (On/Off)	
Prevents "Image retention" with Wobbling. (Automatic/Force)	Pixel orbiter Automatic
● Automatic: Shifts the display image automatically.	
● Force: Shifts the display image every (1/2/3/4) minutes according to what was set in the "Time" menu.	
Sets the time for "Pixel orbiter-Force" setting. (1/2/3/4)	Time 4
Change the brightness of the side bar (Off/Dark/Mid/Bright) (4:3 mode only)	Side bar Bright
● The recommended setting is "Bright" to prevent panel "Image retention". (p. 58)	
Press "OK" to start "Scrolling" on the screen (p. 58)	Scrolling bar
Controls equipment connected to HDMI terminals (p. 32) (On/Off)	VIERA Link On
● "Power off link", "Power on link", and "Default speakers" cannot be selected if "Off" is set.	
Sets "Power off link" of HDMI connection equipment (p. 32) (Set/No)	Power off link Set
Sets "Power on link" of HDMI connection equipment (p. 32) (Set/No)	Power on link Set
Selects the default speakers (p. 32) (TV/Theater)	Default speakers TV
Sets Network setting (p. 36)	Network setting
Sets VIERA CAST setting (p. 38)	VIERA CAST setting
Turns TV On automatically when the cable box or a connected device is turned On (No/Set)	Auto power on No
● The "Sleep" timer, "On/Off timer", and "First time setup" will not function if "Auto power on" is set. (p. 46)	
To conserve energy, the TV automatically turns off when NO SIGNAL and NO OPERATION is performed for more than 10 minutes. (Set/No)	
Note	
● Not in use when setting "Auto power on", "On/Off Timer", "Lock", "SD Mode", or Digital channel.	No signal shut-off Set
● "No signal shut-off was activated" will be displayed for about 10 seconds when the TV is turned on for the first time after turning the power off by "No signal shut-off".	
● The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off.	
To conserve energy, the TV automatically turns off when no operation of remote or front panel key continues for more than 3 hours. (No/Set)	
Note	
● Not in use when setting "Auto power on" or "On/Off Timer" or PC input display.	No action shut-off No
● "No action shut-off was activated" will be displayed for about 10 seconds when the TV is turned on for the first time after turning the power off by "No action shut off".	
● The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off.	
Set to "On", if you light SD card LED while SD card is inserted. (On/Off)	SD card LED On
Set "On" to play back SD cards automatically. (Movie/Photo/Off/Select later)	Play SD card automatically Movie
Displays TV version and software license.	About
Performing Reset will clear all items set with Setup, such as channel settings. (p. 42)	Reset

Adjustments/Configurations (alternatives)	
Sets the mode to select the channel with Channel up/down button (All/Favorite/Digital only/Analog only)	
Sets favorite channels. (p. 17)	
Displays Closed Caption. (p. 44) (Off/On)	
Changes the station identifier. (p. 43)	
Checks the signal strength if interference or freezing occurs on a digital image. (p. 43)	

VIERA Link™ “HDAVI Control™”*

* Simultaneously control all Panasonic “HDAVI Control” equipped components using one button on one remote.

VIERA Link™ is a new name for EZ Sync™

Enjoy additional HDMI Inter-Operability with Panasonic products which have “HDAVI Control” function.

This TV supports “HDAVI Control 3” function.

Connections to some Panasonic equipment (DVD recorder DIGA, HD Camcorder, Player theatre, RAM theater, Amplifier, etc.) with HDMI cables allow you to interface them automatically.

The equipment with “HDAVI Control” function enables the following operations:

- Automatic Input Switching (p. 33)
- Power on link (p. 33)
- Power off link (p. 33)
- Default speakers (p. 33)
- One-touch theater playback (p. 33)
- Speaker control (p. 35)

Equipment with the “HDAVI Control 2” (or more) function enables the following operations:

- VIERA Link control only with the TV’s remote control (for “HDAVI Control 2” or “HDAVI Control 3”) (P. 35)
- Providing the setting information (for “HDAVI Control 3”) (p. 33)
- Automatic lip-sync function (for “HDAVI Control 3”) (p. 33)
- Direct TV Recording (for “HDAVI Control 3”) (p. 35)

VIERA Link “HDAVI Control”, based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers’ equipment that supports HDMI CEC cannot be guaranteed.

Please refer to the individual manuals for other manufacturers’ equipment supporting the VIERA Link function.

■ **For the first time/When adding new equipment, reconnecting equipment or changing the setup after the connection, turn the equipment on and then switch the TV on. Select the input mode to HDMI1, HDMI2, HDMI3 or HDMI4 (p. 22), and make sure that an image is displayed correctly.**

■ HDMI cable

This function needs an HDMI compliant (fully wired) cable. Non-HDMI-compliant cables cannot be utilized.

It is recommended that you use Panasonic’s HDMI cable. Recommended part number:



RP-CDHG10 (3.3 ft/1.0 m), RP-CDHG15 (4.9 ft/1.5 m), RP-CDHG20 (6.6 ft/2.0 m), RP-CDHG30 (9.8 ft/3.0 m), RP-CDHG50 (16.4 ft/5.0 m)

* For more details on the external equipment’s connections, please refer to the operating manuals for the equipment.

1 Follow direction ① - ⑤ in “VIERA Link setting” (p. 23)



2 Select settings

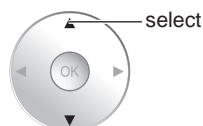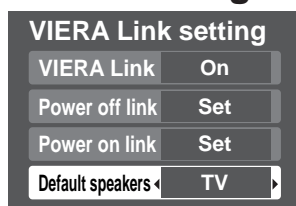


■ **Press to exit from a menu screen**
EXIT



■ **Press to return to the previous screen**
RETURN



3 Set

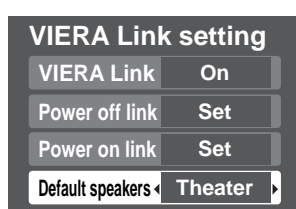

Automatic Input Switching

Power on link

Power off link

Default speakers

One-touch theater playback

Providing the setting information
(for “HDAVI Control 3”)

Automatic lip-sync function
(for “HDAVI Control 3”)

At the start of the DIGA, Player theater, or RAM theater playback, the TV's input automatically switches to the input based on the playback equipment.

- For the RAM theater, the speakers automatically switch to the theater system.

If using the DIGA operation, the TV's input automatically switches to the DIGA and DIGA menu is displayed.

When “Set” is selected (p. 30), TV is turned on automatically and switches to the appropriate HDMI input whenever VIERA Link compatible equipment is initially turned on and Play mode is selected.

When “Set” is selected (p. 30) and the TV is turned off, all connected VIERA Link compatible equipment is also automatically turned off.

- DIGA (Panasonic DVD Recorder) will not turn off if it is still in rec mode.

Caution: The TV remains on even if the VIERA Link compatible equipment is turned off.

“TV” is the default setting. To set the Home Theater system as default speakers, change the default speakers setting from “TV” to “Theater”. Sound will be output from the Home Theater whenever the TV is powered on.

If the “ONE TOUCH PLAY” key is pressed on the remote control for Panasonic Home Theater system, the following sequence of operations is performed automatically.

- ① Home Theater power switches On, and playback begins.
- ② TV power switches On, and the playback screen is displayed.
- ③ Audio is muted on the TV and switches to the theater system.

The following information about the TV settings can be transmitted to each equipment (Recorder/Home theater/ Player) that has “HDAVI Control 3” function connected to a TV with HDMI piece of cable.

Transmittable data		Recorder	Home theater	Player
① On Screen Display Language setting (English/Español/Français)		○	○	○
② Panel Aspect Ratio (16:9 fixed)		○	○	○
③ Closed caption information	mode	○	---	---
	CC type	○	---	---
	Digital setting	○	---	---
④ Channel information	Input signal	○	---	---
	Channel list	○	---	---
	Caption information	○	---	---

Note

- There is a possibility that all the GUI language information might be set from equipment that has HDMI CEC function connected to TV with HDMI cable. Depending on operating conditions or the specification for each piece of equipment the setting may or may not be applied.
- For details on the external equipment's operation, please refer to the operating manuals for the equipment.

[For Recorder]


- You cannot operate other functions while transmitting TV's information above except Power On/Off key operation. When you turn off this unit, the transmission will be interrupted (only when you are transmitting ④ Channel information).

Minimizes lip-sync delays between the picture and audio when you connect to a Panasonic theater system or Amplifier.

VIERA Link™ “HDAVI Control™”

You can enjoy more convenient operation with the “HDAVI Control” function in the “VIERA Link” menu.

For more details on the of “HDAVI Control” function, refer to p. 32



1 Display VIERA Link menu

VIERA Link

or

MENU

Menu

- VIERA Link
- Picture
- Audio
- Timer
- Lock
- SD card

2 Select the item

VIERA Link

- Record now
- Stop recording
- VIERA Link control
 - Recorder
- Speaker output
 - TV

① select

② set or next

3 Select

VIERA Link

- Record now
- Stop recording
- VIERA Link control
 - Home theater
- Speaker output
 - TV

change

4 Set

■ Press to exit from a menu screen
EXIT

■ Press to return to the previous screen
RETURN

Speaker control



VIERA Link Control only with the TV's remote control (for “HDAVI Control 2” or “HDAVI Control 3”)

Direct TV Recording (for HDAVI control 3)

(Continued)

You can select Home theater or TV speakers for audio output.
Control theater speakers with the TV's remote control.
This function is available only when Panasonic Amplifier or Player theater is connected.

- ① Select "Speaker output"
- ② Select "Home theater" or "TV"

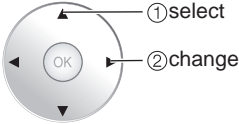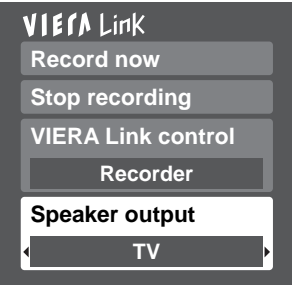

■ **Home theater:** Adjustment for equipment




- The sound of the TV is muted.
- When the equipment is turned off, the TV speakers take over.
- Selecting "Home theater" turns the equipment on automatically if it is in standby mode.

■ **TV:** The TV speakers are on.

In the VIERA Link menu, you can select HDMI connected equipment and access it quickly. Continue using your TV's remote control to operate the equipment, pointing it at the TV.

- ① Select "VIERA Link Control"
- ② Select the equipment you want to access.
(Recorder/Home theater/Player/Camcorder)

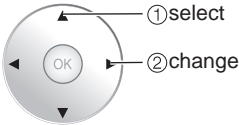

You can select available items only.




■ **Available TV's remote control buttons**

	Move the cursor/Select
	Set/Access
	Return to the previous menu
	Display the Functions menu on the equipment
	Available when the purpose of the keys is displayed on screen

- ③ **Operate the equipment with the TV's remote control, pointing it at the TV.**
 - To operate the equipment, read the manual for the equipment.

Records the current program on the recorder immediately.

- ① Select "Record now"
- ② Select "Stop recording", when you want to stop recording

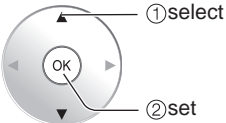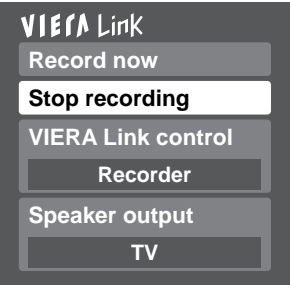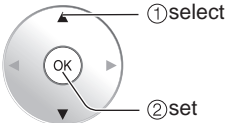


- For optimal recording, the settings of the recorder might be required. For details, read the manual of the recorder.
- Recording will not stop automatically when the program is finished.


Network Setting

This is a setting for connecting to a broadband environment.

1 Display menu




2 Select "Setup"

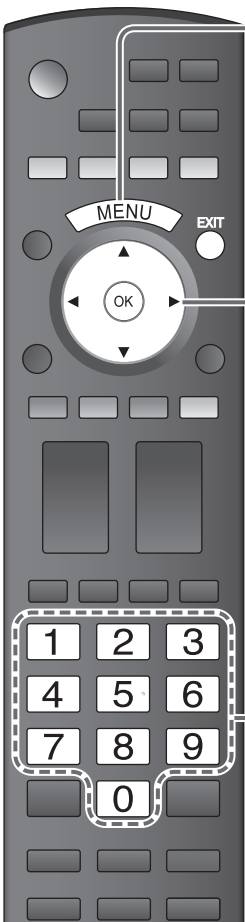

Menu

 
- VIERA Link
- Picture
- Audio
- Timer
- Lock
- SD card
- CC
- Setup**



3 Select "Network setting"

Setup 2/2

- VIERA Link setting
- Network setting**
- VIERA CAST setting
- Advanced setup
- About
- Reset




4 Select the item and adjust

Network setting 1/2

Connection test	Succeeded
IP setting mode	Automatic
IP address	192.168.0.5
Sub netmask	255.255.255.0
Default gateway	192.168.0.254

Network setting 2/2

DNS setting mode	Automatic
Primary DNS	192.168.0.20
Secondary DNS	192.168.0.21
LAN speed setting	Automatic
LAN speed	10BASE half duplex
Software update	
MAC address	12-34-56-78-80-ab

 

■ Press to exit from a menu screen
EXIT

■ Press to return to the previous screen
RETURN

Connection test

IP setting

- IP setting mode
- IP address
- Sub netmask
- Default gateway

DNS setting

- DNS setting mode
- Primary DNS
- Secondary DNS

Connection speed setting



- LAN speed setting
- LAN speed

Software update

Check that the network settings are as shown below, and then start "Connection test".

① Select "Connection test" and press OK.

*Press OK again to cancel the test.
(It takes a while to cancel the test.)

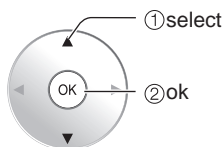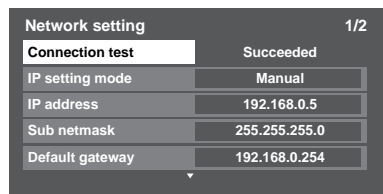

Succeeded: "Connection test" succeeded



Failed: Check the broadband environment connection and settings and the network settings, and then perform the test again.

Test in progress

---: Test not yet performed

① Select "IP setting mode" and set to "Automatic".

(When IP automatic acquisition in DHCP can be used)

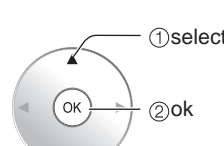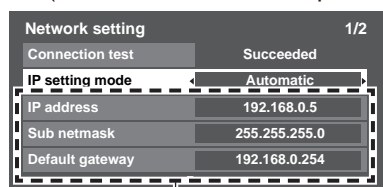


The acquired address is displayed.

② Each IP address is acquired automatically.



■ Manual setting

- ① Select "IP setting mode" and set to "Manual"
- ② Select the item and press OK
- ③ Check the specifications of the broadband router and enter each IP address.

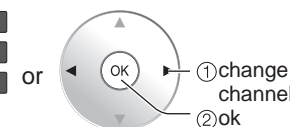

① Select "DNS setting mode" and set to "Automatic".

(When DNS automatic acquisition in DHCP can be used)

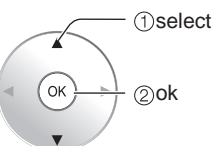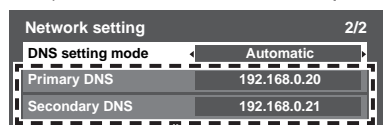


The acquired address is displayed.

② Each IP address is acquired automatically.



If you are using a broadband router, IP automatic acquisition in DHCP can be used under normal circumstances. If you are not sure, check with the person who installed the equipment, or check the instructions for each device.

■ Manual setting

- ① Select "DNS setting mode" and set to "Manual"
- ② Select the item and press OK
- ③ Enter each IP address as was specified by the provider.

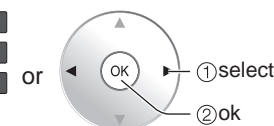

① Select "LAN speed setting" (Default is "Automatic")

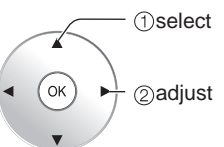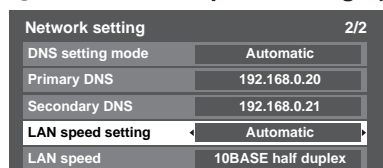



- Normally, select "Automatic".

- If "Connection test" failed, set the "LAN speed setting" to "manual" and then select "10BASE half duplex", "10BASE duplex", "100BASE half duplex" or "100 BASE duplex".

- Cannot be selected when the "LAN speed setting" is "Automatic".

- Changing the settings may make it impossible to connect some types of equipment.

① Select "Software update"

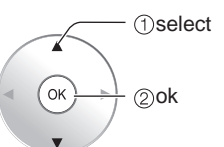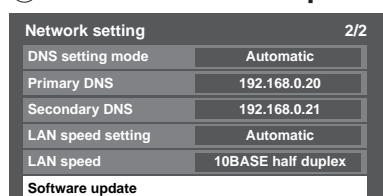


② Press OK to start the software update screen.

③ Follow directions of the screen.


* Set "Clock" first. (p. 15)

VIERA CAST™ Setting


1 Display menu




2 Select "Setup"

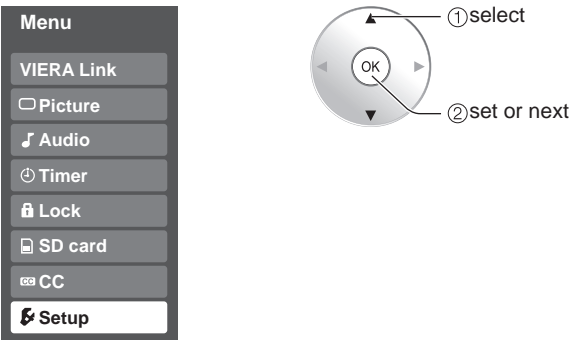

3 Select "VIERA CAST setting"

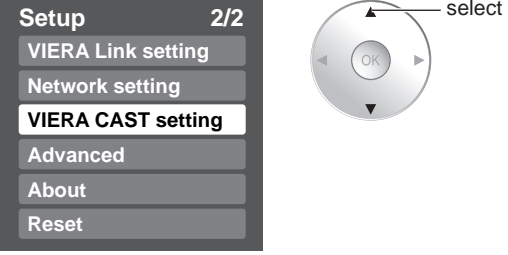

4 Select the item and adjust



■ Press to exit from a menu screen
EXIT

■ Press to return to the previous screen
RETURN



Connection test

Proxy setting

- Proxy address
- Proxy port

Entering characters

① Select “Connection test” and Press OK

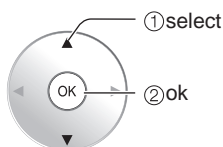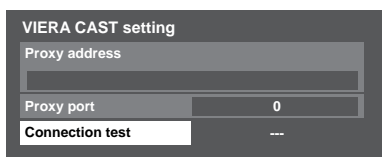


- When a connection is made to the connection test site and a message is displayed that indicates a successful connection
➔ The settings are correct.
 - When the connection is not successful
➔ An error message is displayed on the screen.
 - * Check the connection and settings. (p. 36-37, below)
- If you perform the proxy settings, check the proxy address and the proxy port number.

Set only if specified by the provider.
It is not required for normal household use.

■ Proxy address

This is the address of the relay server that is connected to the target server instead of the browser and sends data to the browser.
Setting is only required if specified by the provider.

① Select “Proxy address” and Press OK

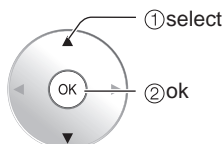

② Enter address (see “Entering characters” below)




③ Select “OK”

■ Proxy port


This number is specified by the provider together with the proxy address.

① Select “Proxy port” and Press OK. ② Enter the Port number.

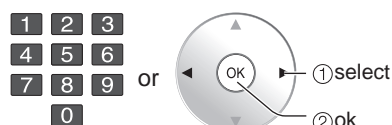

If you perform the proxy settings, it may make it impossible to view VIERA CAST movie content.

You can use the remote control key to enter the alphanumeric characters.

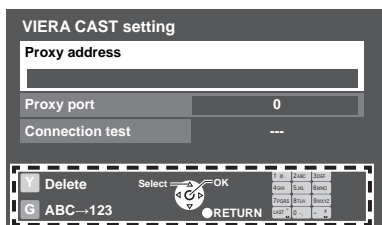

Navigation area



Switches Input mode alphabet to numeric.


Characters are displayed as shown in following table.

	A												B
	Number of presses												
	1	2	3	4	5	6	7	8	9	10	11	12	
1	@	.	/	:	~	_	1						1
2	a	b	c	A	B	C	2						2
3	d	e	f										3
4	g	h	i										4
5	j	k	l										5
6	m	n	o										6
7	p	q	r	s									7
8	t	u	v										8
9	w	x	y	z									9
0	-	,	;	'	”	?	!	()	&	¥	0	0
LAST	Space												*
-	Space												#


- VIERA CAST setting will be effective when you close the menu or run “Connection test”.

Lock

You can lock specified channels or shows to prevent children from watching objectionable content.




1 Display menu



2 Select "Lock"

Menu
VIERA Link
Picture
Audio
Timer
Lock
SD card
CC
Setup

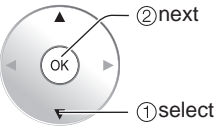


3 Input your 4-digit password

Create password
Enter password.
0 - 9

1	2	3
4	5	6
7	8	9
0		


4 Select the Lock mode

Lock
Mode < Off >
Channel Off
Game Off
Program Off
VIERA CAST Off
Change password

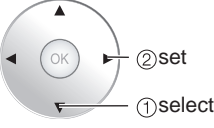


5 Select the item

Lock
Mode Custom
Channel Off
Game Off
Program Off
VIERA CAST Off
Change password



 6 Set



You will be asked to enter your password each time you display the Lock menu.

A 4-digit code must be entered to view a blocked program or change rating settings.

- If it is your first time entering the password, enter the password twice in order to register it.

Off: Unlocks all the lock settings of "Channel", "Game", "Program" and VIERA CAST.

All: Locks all the inputs regardless of the lock settings of "Channel", "Game", "Program" and VIERA CAST.

Custom: Locks specified inputs of "Channel", "Game", "Program" and VIERA CAST.

● "Channel", "Game", "Program" and VIERA CAST will grey out unless "Custom" is selected in "Mode".

■ Press to exit from a menu screen

EXIT

Caution

- Make a note of your password in case you forget it. (If you have forgotten your password, consult your local dealer.)

Note

- When you select a locked channel, a message will be displayed that allows you to view the channel if you input your password.



■ To select the channel or the rating of the program to be locked

Channel lock

Select up to 7 (1-7) channels to be blocked. These channels will be blocked regardless of the program rating.

① Select “Mode” and set to “Custom”

② Select channel to lock.

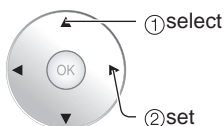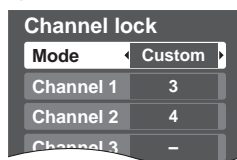


- To lock/unlock all channels:
Select “Mode” and set to “All” or “Off”.

All: Locks all channels
Off: Unlocks all channels

Game lock

Locks Channel 3, Channel 4 and external inputs.

Select “Game” in ⑤ and set to “On”.

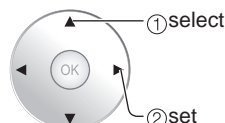



On: Locks
Off: Unlocks

Program lock



■ To set a rating level

“V-chip” technology enables restricted shows to be locked according to TV ratings.

① Select “Mode” and set to “On”.

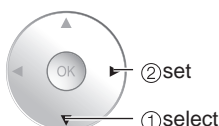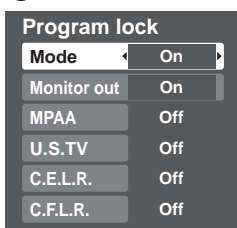


② Select the rating category you wish to follow

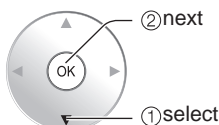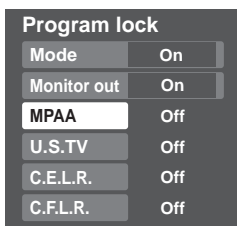

MPAA: U.S movie ratings
U.S.TV: U.S TV program ratings
C.E.L.R.: Canadian English ratings
C.F.L.R.: Canadian French ratings

③ Select the rating to be locked

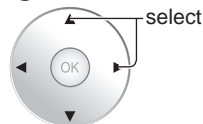



Example of “MPAA” (U.S movie ratings)

NR	No rating
G	General Audience: All ages admitted
PG	Parental Guidance Suggested
PG-13	Parents Strongly Cautioned: Inappropriate for children under 13
R	Restricted: Under 17 requires accompanying parent or adult guardian
NC-17	No one 17 and under admitted
X	Adults only

- To get more information (p. 53)

■ To disable recording of the locked program

➔ Select “Monitor out” and set to “On”.

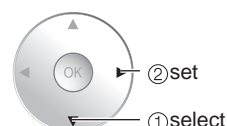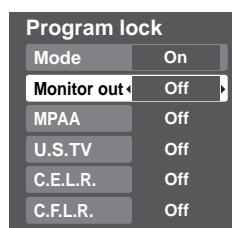

VIERA CAST lock


VIERA CAST lock

Locks VIERA CAST.

Select “VIERA CAST” in ⑤ and set to “On”.

When you press VIERA CAST, the “VIERA CAST Lock” screen is displayed.

Type the correct password to enter the Home screen.


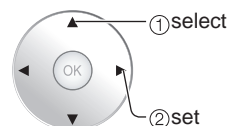


On: Locks
Off: Unlocks

Change password

■ To change the password

- ① In ④, select “Change password” and press OK
- ② Input the new 4-digit password twice

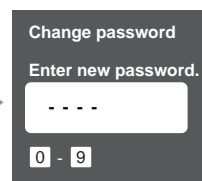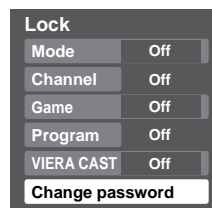


Note

- This television is designed to support the “Downloadable U.S. Region Rating System” when available. (Available only in U.S.A.)
- The Off rating is independent of other ratings.
- When placing a lock on a specific-age-based-rating level, the Off rating and any other more restrictive ratings will also be blocked.


Editing and Setting Channels

The current channel settings can be changed according to your needs and reception conditions.


1 Display menu




2 Select "Setup"

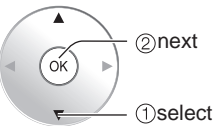

3 Select "Program channel"

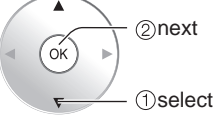


4 Select the function

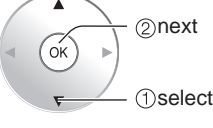

5 Set

■ **Press to exit from a menu screen**
EXIT

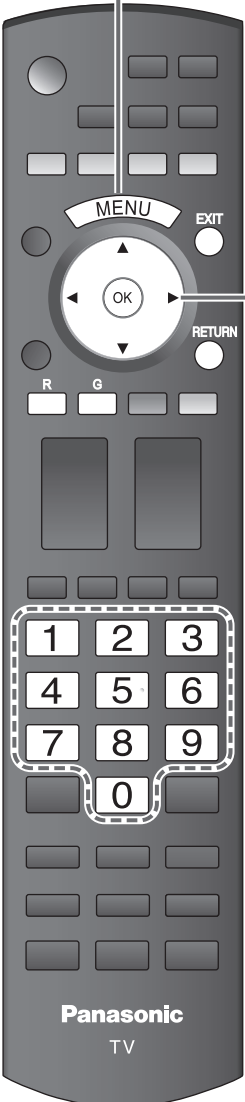

Menu

- VIERA Link
- Picture
- Audio
- Timer
- Lock
- SD card
- CC
- Setup**

Setup 1/2

- Surf mode
- All
- Language
- Clock
- Program channel**
- External devices
- Anti image retention

Reset

Program channel

- ANT in Cable
- Auto**
- Manual
- Signal meter

■ To reset the settings of setup menu

- ① Select "Reset" in Setup menu (3) and press OK
- ② Input your 4-digit password with number buttons
- ③ Select "YES" on the confirmation screen and press OK

Auto

Set automatically

Manual

Set manually

Signal meter



Check signal strength

Automatically searches and adds available channels to the memory.



① Select “ANT in”

➔ Select Cable or Antenna (p. 14)

② Select “Auto”

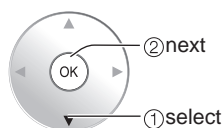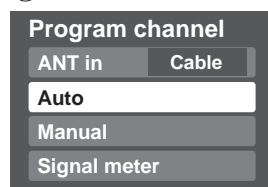

③ Select a scanning mode (p. 15)

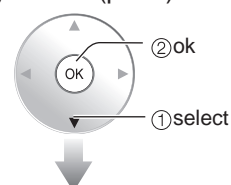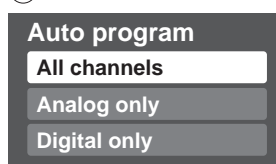

Settings are made automatically



- After the scanning is completed, select “Apply”.
- (see below ⑤).
- All previously saved channels are erased.

Use this procedure when changing the channel setup or changing the channel display.




Also, use this to add or skip channels from channel list manually.

You can select channel tuning mode (Digital only/Analog only) in “Surf mode”(p. 31)

① Select “Edit”

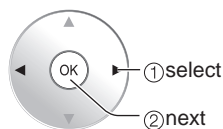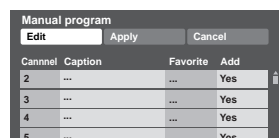



② Select the item to be edited

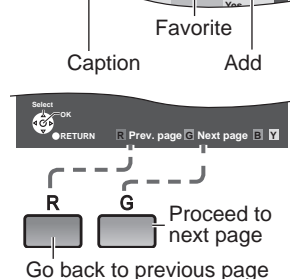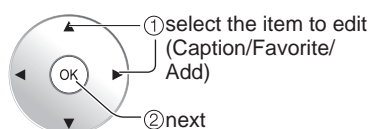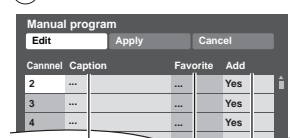

- Caption:
Changes the station identifier
- Favorite:
Registers channel to Favorite List
- Add:
Adds or skips channels

③ Edit

● Caption

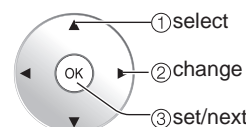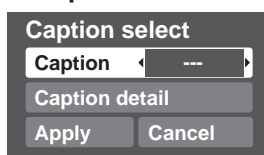



Caption

Select the station identifier

Caption detail

Rename (maximum 7 characters available)

 ● Favorite

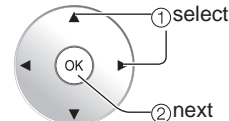



Set favorite Select the number

● Add


Press OK to select “Yes (add)” or “No (skip)”






 
④ Move cursor to channel number

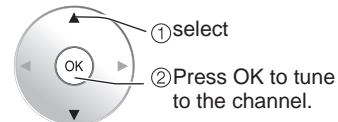


⑤ Select “Apply”

 

To cancel the Edit

 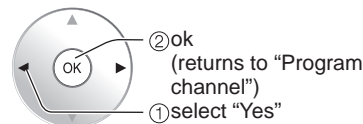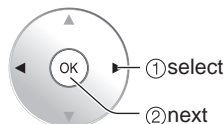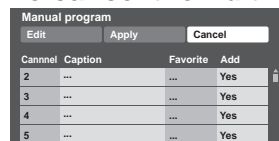

Check the signal strength if interference is found or freezing occurs on a digital image.

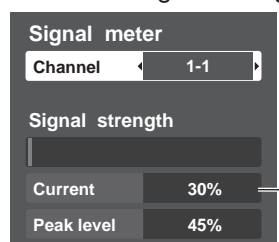

Signal intensity


- If the signal is weak, check the antenna.
- If no problem is found, consult your local dealer.

Note

- Not available if “Cable” is selected in “ANT in” (see above).
- Available only for digital antenna channels.



- If “Lock” (p. 40) is activated and “Program channel” is selected, “Enter password.” will be displayed.

Closed Caption

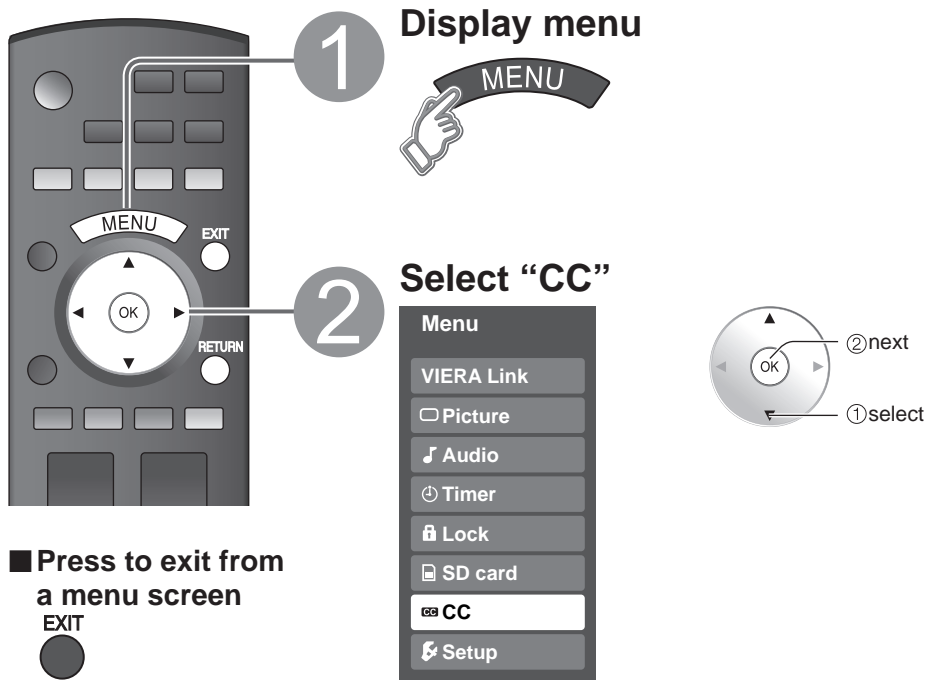

The television includes a built-in decoder that is capable of providing a text display of the audio. The program being viewed must be transmitting Closed Caption (CC) information. (p.54)

■ Select the item and set

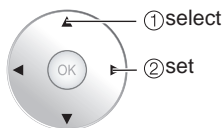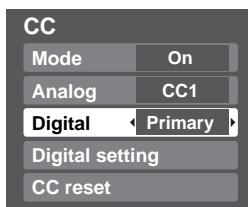

- The settings in "Analog" or "Digital" depend on the broadcaster.

Mode Select "On" (when not using, select "Off").

Analog (Choose the Closed Caption service of Analog broadcasting.)

CC1-4: Information related to pictures (Appears at bottom of screen)

T1-4: Textual information (Appears over entire screen)



Digital (The Digital Closed Caption menu lets you configure the way you choose to view the digital captioning.)

Select the setting.

- "Primary", "Second.", "Service 3", "Service 4", "Service 5", "Service 6"

■ To make more in-depth display settings in digital programs

- ① Select "Digital setting" and press OK
- ② Select the item and set

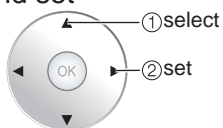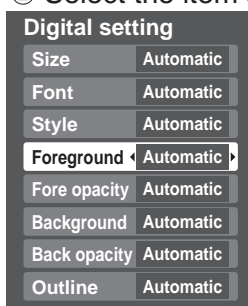

- Size: Text size
- Font: Text font
- Style: Text style (Raised, Depressed, etc.)
- Foreground: Color of text
- Fore opacity: Opacity of text
- Background: Color of text box
- Back opacity: Opacity of text box
- Outline: Outline color of text (Identify the setting options on the screen.)

■ To reset the settings

Select "CC reset" and press OK

CC
Display Closed Caption

Input Labels/Monitor Out

1 Display menu and select "Setup"

2 Select "External devices"

3 Select "Input labels" or "Monitor out"

Press to exit from a menu screen
EXIT


● Input Labels/Monitor Out
● Closed Caption

Advanced

Devices connected to external input terminals can be labeled for easier identification during input selection. (In selecting input mode from p. 22 ②)

■ Select the terminal and label of the external equipment

Input labels	
Component 1	
Component 2	
HDMI 1	
HDMI 2	
HDMI 3	
HDMI 4	GAME
Video 1	
Video 2	GAME
PC	

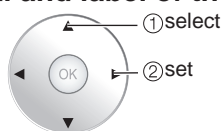


[example]

- Terminals: Comp. 1-2/HDMI 1-4/Video 1-2/PC
 - Label: SKIP*/VCR/DVD/CABLE/DBS/PVR/GAME/AUX/RECEIVER/[BLANK]
- For the PC terminal, only "SKIP" is available.
- * If "SKIP" is selected, the TV/VIDEO button press will skip its input.
- Each selected label will be displayed on "Input select" screen. (p. 22)

To prevent howling and image oscillation, stops output of the pictures and audio specified in this menu. (p. 31)

■ Select the terminal and set "Off"

Monitor out	
Component 1	On
Component 2	On
HDMI 1	On
HDMI 2	On
HDMI 3	On
HDMI 4	On
Video 1	Off
Video 2	On

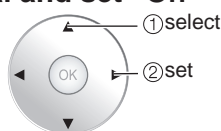

- Select "Off" to stop output of picture and audio. (Video 1/Video 2)
- Component 1/Component 2/HDMI 1/HDMI 2/HDMI 3/HDMI 4 cannot output video signals regardless of "Monitor out" setting. When equipment (STB, DVD, etc.) is connected to HDMI, COMPONENT or PC terminals, no video signals can be passed through PROG OUT terminal.

Input labels

Display labels of external devices

Monitor out



Stop output of the picture and audio

Using Timer


The TV can automatically turn On/Off at the designated date and time.


- The Clock must be set before On time/Off time settings. (p. 15)
- The "Sleep" timer and "On/Off timer" will not work if the "Auto power on" (p. 31) is set.

1 Display menu

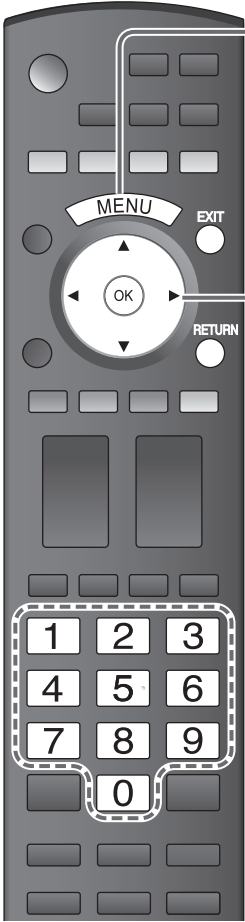



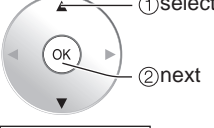
2 Select "Timer"

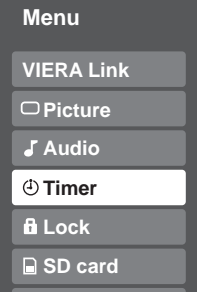

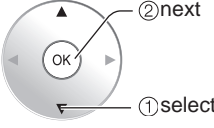

3 Select the timer to set

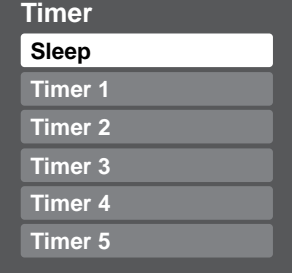



Sleep

Timer 1

Timer 2

Timer 3


Timer 4

Timer 5

4 Set the timer


■ **Press to exit from a menu screen**

EXIT




■ **Press to return to the previous screen**

 
RETURN



■ **To set "Sleep" (Off Timer)**

Set to shut the unit off after a pre-selected amount of time.






● 0/30/60/90 (minutes)

■ **To set "Timer 1-5" (On/Off Timer)**

Select the item and set

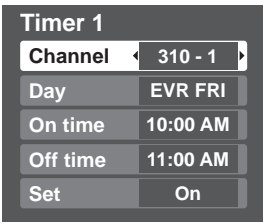

1

2

3

4

5

6


7

8

9

0

or

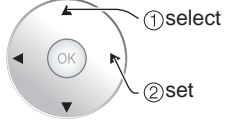

Channel

 Select the channel

Day

 Select the day

SUN/MON/TUE/WED/THU/FRI/SAT

 (displays the nearest future date)

MON-FRI/SAT-SUN/DAILY/EVR

 SUN/EVR MON/

EVR TUE/EVR WED/EVR THU/EVR FRI/

 EVR SAT

On time

 The time to turn On

Off time

 The time to turn Off

Set

 Timer setting (On/Off)


Note

- The TV automatically turns Off after 90 minutes when turned On by the Timer. This operation will be cancelled if the Off time is selected or if a key is pressed.

46

Programming the Remote to Operate Peripheral Equipment

You can operate other manufacturers' equipment using this TV's remote control.



- 1** Connect the external equipment to the TV and **Power Off the external equipment**
- 2** **Press both buttons simultaneously for more than 3 seconds.**
 - Release the buttons when the equipment selection buttons start flashing.
- 3** **Select the equipment** with the equipment selection button
 - The selected button remains lit (other buttons are not lit).
- 4** **Input the equipment's 4-digit remote control code** (p. 51-52)
- 5** **Operate the equipment with the remote control** (p. 50)
 - The external equipment turns On.

■ **Press to return to the TV mode**

TV

Caution

- Registration will fail if the wrong code is input or it takes more than 30 seconds to register.

To find a code not listed in the code list

This procedure searches all codes and is called the "sequence method."


① **After step ③ above, change the code and test**



➔ Operate the equipment with the remote control (p. 50)


- Repeat until the code is found
- It may take many attempts before the correct code is found

② **When the correct code is found**

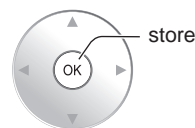

Recommended AV Connections

These diagrams show our recommendations on how to connect the TV unit to your various equipment. For other connections, consult the instructions for each piece of equipment and its specifications. For additional assistance, please visit our website at: www.panasonic.com
www.panasonic.ca

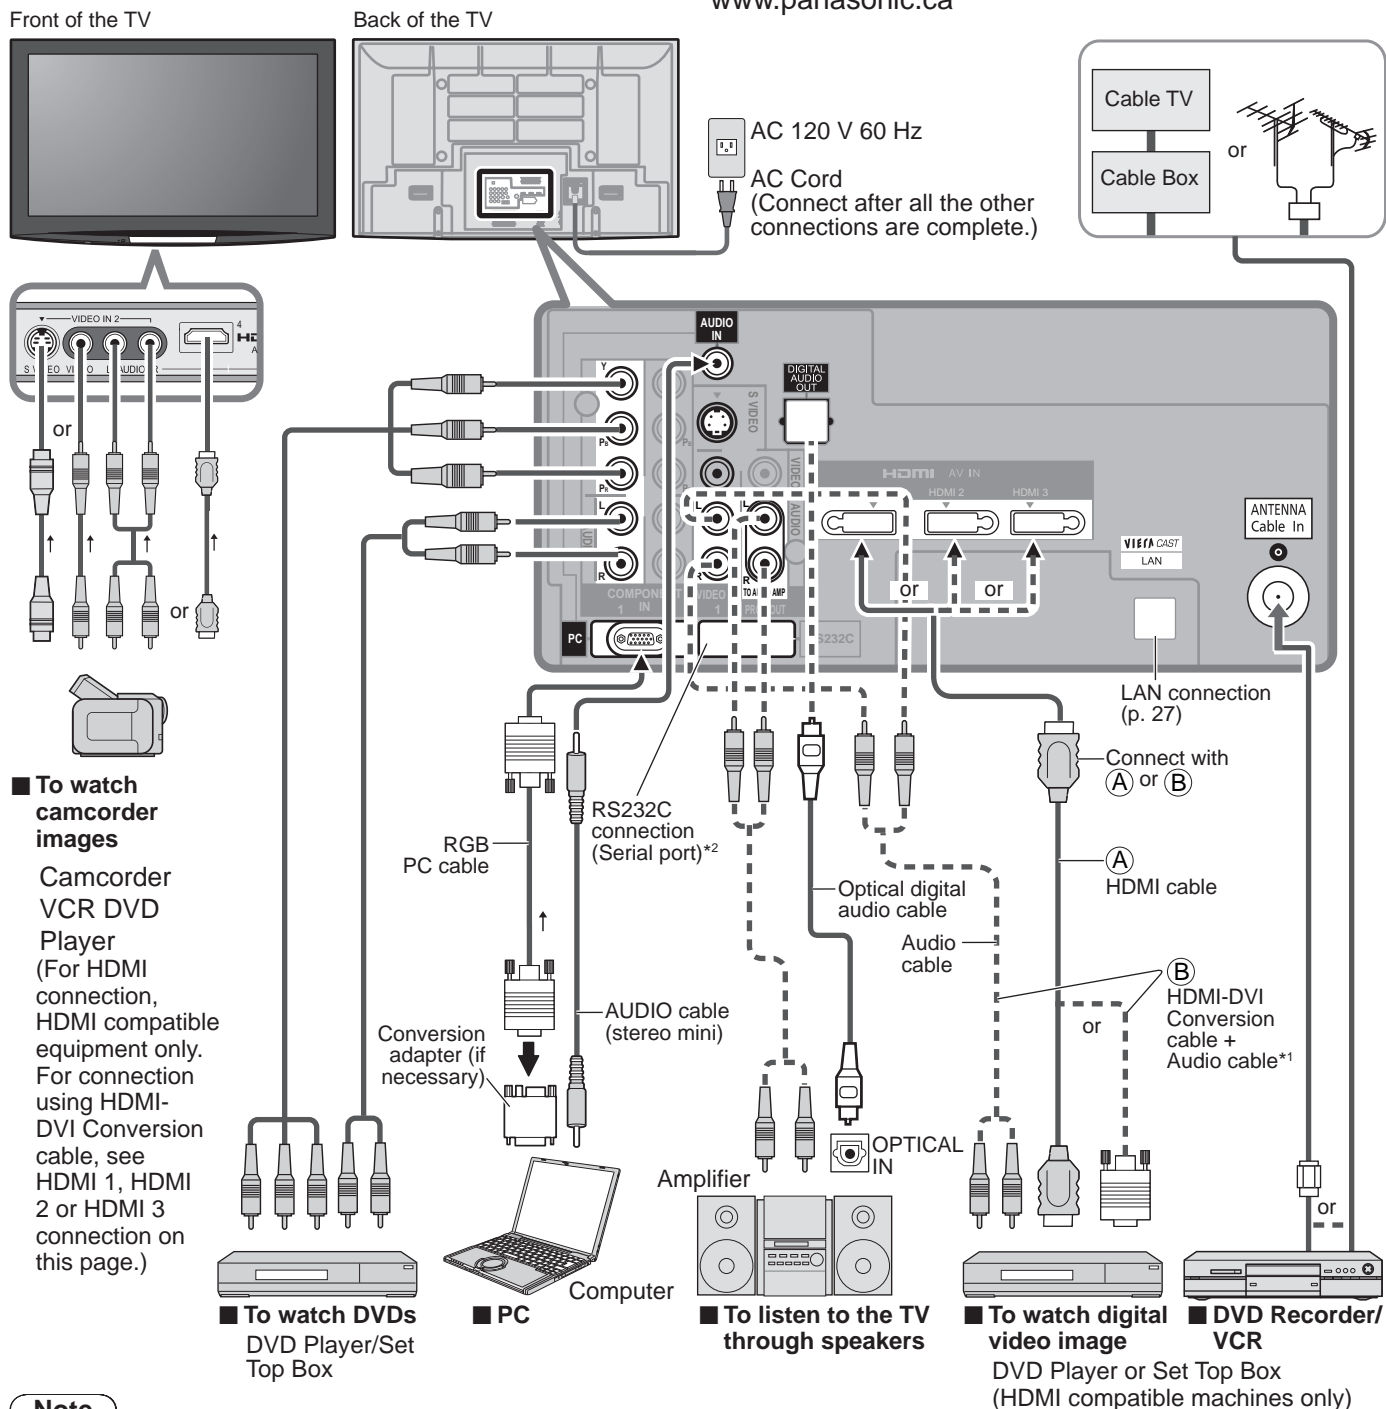

Note

- The picture and audio input signals connected to a terminal specified in "Monitor out" (p. 45) cannot be output from "PROG OUT" terminals. However, audio output can be obtained from "DIGITAL AUDIO OUT" terminal.
- To prevent howling and image oscillation, set the "Monitor out" setting when connecting the VCR with loop-connection. (p. 30, 45)
- When equipment (STB, DVD, etc.) is connected to HDMI, COMPONENT or PC terminals, no video signals can be passed through PROG OUT terminal.
- When receiving digital channel signals, all digital formats are down-converted to composite NTSC video to be output through the PROG OUT terminals.
- *1 Please see p. 28-29 for setup when using an external analog audio cable with an HDMI to DVI cable.
- *2 • For details about the RS232C command, contact Customer Care. (p.63, 64) Note that we only provide information in accordance with our disclosure rules.
- See "RS232C terminal Specification" sheet. (attached separately)

VIERA Link™ Connections

Follow the connection diagrams below for HDAVI control of a single piece of AV equipment such as a Panasonic DVD recorder (DIGA), RAM theater, or Player theater system. Refer to page 32-35 for Setup Menu settings and additional control information.

- Optional HDMI and/or optical cables are not included.

If connection (or setting) of equipment compatible with HDAVI control is changed, switch the power of this unit Off and On again while the power of all equipment is On (so that the unit can correctly recognize the connected equipment) and check that the DVD recorder (DIGA), RAM theater, and Player theater playback operate.

Note

- HDMI 1 is recommended.


When connecting to HDMI 2/HDMI 3/HDMI 4, set the input mode to HDMI 2/HDMI 3/HDMI 4 (p. 22) initially before connecting to HDMI 2/HDMI 3/HDMI 4. After connection, confirm the HDMI control functions (p. 32-35).

■ Connecting this unit to the DVD recorder (DIGA), RAM theater, or Player theater

- For DVD recorder (DIGA): Connect with HDMI cable
- For RAM theater and Player theater: Connect with the HDMI and audio cables.
If audio cable is not connected, you cannot listen to the TV program through the theater system.

■ Connecting this unit to a DVD recorder (DIGA) and AV amp

When using an "VIERA Link" audio-video amplifier and a compatible DVD recorder (DIGA) use a daisy chain connection as shown below.

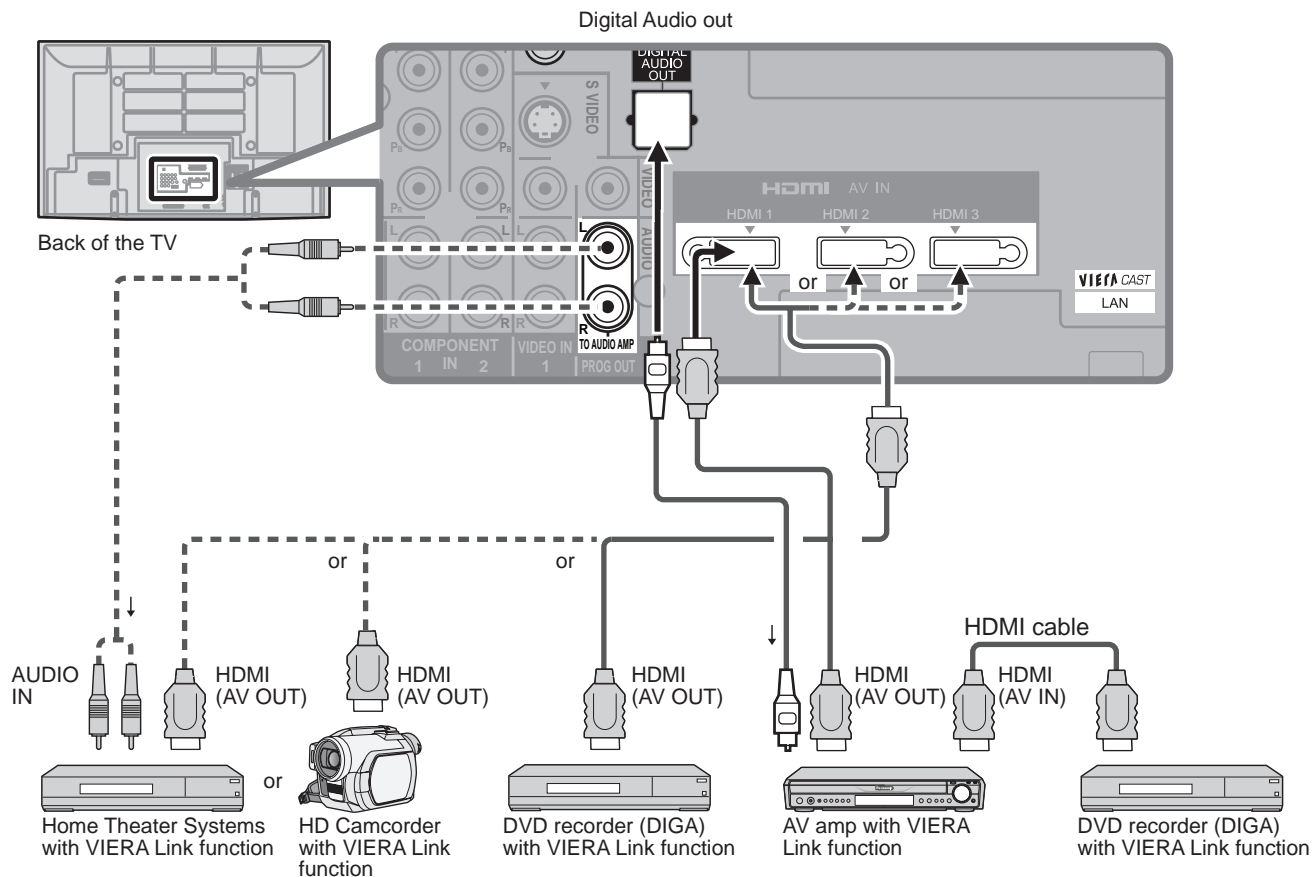

- One AV amp and one DVD recorder (DIGA) can be operated with this unit.
- Refer to the diagram above when connecting a DVD recorder/player and an AV amp to your Viera Television.

■ Setting of this unit after connection

After making connections as shown above, set "VIERA Link" (under "VIERA Link setting") to "On" using the Setup menu. (p. 23, 30-31).

Note

- Individual HDMI equipment may require additional menu settings specific to each model. Please refer to their respective operating instruction manuals.
- When audio from other equipment connected to this unit via HDMI is output using "DIGITAL AUDIO OUT" of this unit, the system switches to 2CH audio.
(When connecting to an AV amp via HDMI, you can enjoy higher sound quality.)
- For more details about HDMI cables for connecting a Panasonic HD camcorder, read the manual for the equipment.

Remote Control Operation/Code List

The following explains how to operate external devices with the TV's remote control.











 
 
















- Register the remote control codes (p. 47) if you want to operate an external device from another manufacturer. (p. 51-52)

Note

- Operation may not be possible depending on the available memory size of the remote control.
This remote control is not designed to cover operation of all functions of all models.


■ Remote Control Operation List


This chart defines which keys are operational after programming (if needed) while in the selected remote control mode, CABLE, DBS, VCR, or DVD.


KEY NAME	VCR MODE	DBS/CBL MODE		DVD MODE
		(DBS)	(CBL)	
 POWER	Power	Power	Power	Power
 SAP	—	LIST	LIST	DVD AUDIO
 TV VIDEO	TV Input Switch	TV Input Switch	TV Input Switch	TV Input Switch
 MENU	—	Menu	Menu	Functions
 EXIT	—	Exit	Exit	—
	—	Up/Down/Left/Right	Up/Down/Right/Left	Up/Down/Right/Left
	—	Select	Select	Enter
 SUB MENU	—	Guide	Guide	Sub Menu
 RETURN	—	PPV/VOD	PPV/VOD	Return
 R	—	Red	A	Red
 G	—	Green	B	Green
 B	—	Blue	C	Blue
 Y	—	Yellow	D	Yellow
	Channel Up/Down	Channel Up/Down	Channel Up/Down	Channel Up/Down
	TV Volume Up/Down	TV Volume Up/Down	TV Volume Up/Down	TV Volume Up/Down
 FORMAT	—	Aspect	Aspect	—
 FAVORITE	—	Favorite	Favorite	Direct Navigator
 INFO	Onscreen Display	Info	Info/Display/OSD	Onscreen Display
 MUTE	TV Mute	TV Mute	TV Mute	TV Mute
 0 - 9	0-9	0-9	0-9	0-9
 LAST	—	Last Channel	Last Channel	Drive Select
 —	—	Sub Channel	Music	PROG (Sub Channel)
 SKIP	—	Page Down/Up	Page Down/Up	Skip Reverse/Forward
 TV/VCR GAME	TV/VCR Switch	TV/DBS Switch	TV/CBL Switch	—
 SEARCH	Rewind/Fast Forward	Rewind/Fast Forward	Rewind/Fast Forward	Reverse/Forward
 REC	VCR Record	PVR Record *1	PVR Record *1	Record
 STOP	Stop	Stop	Stop	Stop
 PAUSE	Pause	Pause	Pause	Pause
 PLAY	Play	Play	Play	Play


*1: Combination type


Remote Control Code List

Cable Converter (C) ()							
Brand	Code	Brand	Code	Brand	Code	Brand	Code
ABC	0003, 0007, 0008	Hytex	0007	Philips	0317, 1305	Supercable	0276
ADB	2092	I3 Micro	1602	Pioneer	0144, 0533, 0877, 1877	Supermax	0883
Americast	0899	Jerrold	0003, 0012, 0276, 0476, 0810	Pulsar	0000	Thomson	1256
Amino	1602, 1822	Memorex	0000	Quasar	0000	Tocom	0012, 0059
Bell South	0899	Motorola	0276, 0476, 0810, 1106, 1187, 1254, 1376, 1951	RadioShack	0883	Torx	0003
Clearmaster	0883	MTS	1951	RCA	0021, 1256	Toshiba	0000
ClearMax	0883	Multitech	0883	Regal	0273, 0279	Tristar	0883
Contec	0019	Myrio	1602, 1822	Runco	0000	United Artists	0007
Coolmax	0883	Oak	0007, 0019	Samsung	0144	V2	0883
Digeo	1187	Optimus	0021	Scientific Atlanta	0008, 0477, 0877, 1877	Viewmaster	0883
Director	0476	Pace	0008, 0237, 1877	Sejin	1602	Vision	0883
General Instrument	0003, 0276, 0476, 0810	Panasonic	0000, 0021, 0107, 0623	Sony	1006	Vortex View	0883
GoldStar	0144	Paragon	0000	Sprucer	0021	Zenith	0000, 0525, 0899
Hamlin	0009, 0273			Starcom	0003		

Cable/PVR Combination (C) ()							
Brand	Code	Brand	Code	Brand	Code	Brand	Code
Americast	0899	Jerrold	0810	Pioneer	0877, 1877	Supercable	0276
Amino	1822	Motorola	0810, 1106, 1187, 1376	RCA	1256	Thomson	1256
Digeo	1187	Myrio	1822	Scientific Atlanta	0877, 1877	Zenith	0899
General Instrument	0810	Pace	0237, 1877	Sony	1006		









Satellite Receiver (S) ()							
Brand	Code	Brand	Code	Brand	Code	Brand	Code
AlphaStar	0772	GE	0566	Magnavox	0722, 0724	RCA	0143, 0566, 0855, 1392
Bell ExpressVu	0775, 1170	General Instrument	0869	Memorex	0724	Samsung	1108, 1109, 1276, 1377, 1442, 1609
Chaparral	0216	GOI	0775, 1775	Mitsubishi	0749	Sanyo	1219
Coolsat	1806	Goodmans	1246	Motorola	0869	Sony	0639, 1639, 1640
Crossdigital	1109	Hisense	1535	NEC	1270	Star Choice	0869
DirecTV	0099, 0247, 0392, 0566, 0639, 0724, 0749, 0819, 1076, 1108, 1109, 1142, 1189, 1377, 1392, 1414, 1442, 1443, 1444, 1609, 1639, 1640, 1749, 1856	Hitachi	0819, 1250	Next Level	0869	Tivo	1142, 1442, 1443, 1444
Dish Network System	0775, 1005, 1170, 1505, 1775	HTS	0775, 1775	Panasonic	0152, 0247, 0701, 1189, 1786	Toshiba	0749, 0790, 1285, 1749
Dishpro	0775, 1005, 1505, 1775	Hughes Network Systems	0749, 1142, 1442, 1443, 1444, 1749	Pansat	1807	UltimateTV	1392, 1640
Echostar	0775, 1005, 1170, 1505, 1775	Humax	1781, 1790	Paysat	0724	Ultrasat	1806
Expressvu	0775, 1775	iLo	1535	Philips	0099, 0722, 0724, 0749, 0856, 1076, 1142, 1442, 1749	Uniden	0722, 0724
Fortec Star	1821, 1948	Janell	0152	Proscan	0392, 0566	US Digital	1535
		JVC	0775, 1170, 1775	Proton	1535	USDTV	1535
		LG	1226, 1414	RadioShack	0869	Voom	0869
						Zenith	1810, 1856

DBS/PVR Combination (S) ()							
Brand	Code	Brand	Code	Brand	Code	Brand	Code
Bell ExpressVu	0775, 1170	Echostar	0775, 1170, 1505	Motorola	0869	Sony	0639, 1640
DirecTV	0099, 0392, 0639, 1076, 1142, 1377, 1392, 1442, 1443, 1444, 1640	Expressvu	0775	Philips	1142, 1442	Star Choice	0869
Dish Network System	0775, 1505	Hughes Network Systems	1142, 1442, 1443, 1444	Proscan	0392	Tivo	1142, 1442, 1443, 1444
Dishpro	0775, 1505	JVC	1170	RCA	1392	Zenith	1810
				Samsung	1442		

VCR (V) ()							
Brand	Code	Brand	Code	Brand	Code	Brand	Code
ABS	1972	GE	0035, 0060, 0202, 0240, 0761, 0807, 1035, 1060, 2613	MTC	0000, 0240	Sansui	0000, 0041, 0067, 0209, 0479, 1479
Accurian	0000	Go Video	0432, 0526, 0614, 0643, 1137	Multitech	0000, 0072	Sanyo	0046, 0047, 0104, 0159, 0240
Admiral	0048, 0209	GoldStar	0037, 0038, 1137, 1237	NEC	0038, 0040, 0041, 0050, 0067, 0104	Scott	0043, 0045, 0121, 0184, 0212
Adventura	0000	Gradiente	0000	Nikko	0037	Sears	0000, 0035, 0037, 0042, 0046, 0047, 0104, 0105, 1237
Aiko	0278	Harley Davidson	0000	Nikon	0034	Sharp	0048, 0807, 0848
Aiwa	0000, 0037, 0124, 0307, 0468	Harman/Kardon	0038, 0075, 0081	Niveus Media	1972	Shintom	0072
Akai	0041, 0061, 0106, 0175, 0242	Harwood	0068, 0072	Noblex	0240	Shogun	0240
Alienware	1972	Headquarter	0046	Northgate	1972	Singer	0072
Allegro	1137	Hewlett Packard	1972	Olympus	0035, 0226	Sonic Blue	0614, 0616, 1137
America Action	0278	Hi-Q	0047	Onkyo	0222	Sony	0000, 0032, 0033, 0034, 0035, 0636, 1032, 1972
American High	0035	Hitachi	0000, 0041, 0042, 0089, 0105, 2613	Optimus	0037, 0048, 0104, 0162, 0432, 0593, 1048, 1062, 1162, 1262	Stack 9	1972
Asha	0240	Howard Computers	1972	Orion	0002, 0184, 0209, 0479, 1479	STS	0042
Audio Dynamics	0040	HP	1972	Panasonic	0035, 0077, 0102, 0162, 0225, 0226, 0227, 0246, 0378, 0485, 0614, 0616, 0837, 1035, 1062, 1162, 1244, 1262, 1562, 1807, 1808, 1809	Sylvania	0000, 0035, 0043, 0081, 0110, 0593, 1593, 1781
Audiovox	0037, 0278	Hughes Network Systems	0042, 0739	Penney	0035, 0037, 0038, 0040, 0042, 0240, 1035, 1237	Symphonic	0000, 0593, 1593
Beaumarck	0240	Humax	0739, 1797, 1988	Pentax	0042, 0105,	Systemax	1972
Bell & Howell	0104	Hush	1972	Tagar Systems	0035	Tashiko	0037
Broksonic	0002, 0121, 0184, 0209, 0348, 0479, 1479	IBUYPOWER	1972	Tatung	0041	Teac	0000, 0041
Calix	0037	Instant Replay	0035, 0226	Philips	0035, 0081, 0110, 0618, 0739, 1081, 1181	Technics	0035, 0162, 0246
Canon	0035, 0102	Jensen	0041	Pilot	0037	Teknika	0000, 0035, 0037
Captive Works	2167	JVC	0008, 0041, 0067, 2079	Pioneer	0067, 1337	Thomas	0000
Carver	0081	KEC	0037, 0278	Polk Audio	0081	Tivo	0618, 0636, 0739, 1337, 1996
CCE	0072, 0278	Kenwood	0038, 0041, 0067	Presidian	1593	TMK	0208, 0240
CineVision	1137	KLH	0072	Profitronic	0240	Toshiba	0043, 0045, 0212, 0845, 1008, 1145, 1972, 1988, 1996
Citizen	0037, 0278, 1278	Kodak	0035, 0037	Proscan	0060, 0202, 0761, 1060	Totevision	0037, 0240
Colt	0072	LG	1037, 1137, 2010	Protec	0072	Touch	1972
Craig	0037, 0047, 0072, 0240	Linksys	1972	Pulsar	0039	Unitech	0240
Curtis Mathes	0035, 0041, 0060, 0162, 1035	Lloyd's	0000, 0208	Quartz	0046	Vector	0045
Cybernex	0240	Logik	0072	Quasar	0035, 0077, 0162, 1035, 1162	Vector Research	0038, 0040
CyberPower	1972	LXI	0037	RadioShack	0000, 1037	Video Concepts	0040, 0045, 0061
Daewoo	0045, 0278, 0561, 0637, 1137, 1278	Magnasonic	0593, 1278	Radix	0037	Videomagic	0037
DBX	0040, 0050	Magnavox	0000, 0035, 0039, 0081, 0110, 0149, 0563, 0593, 1335, 1593, 1781	Randex	0037	Videosonic	0240
Dell	1972	Magnin	0240	RCA	0042, 0060, 0077, 0105, 0106, 0149, 0202, 0240, 0761, 0807, 0880, 1035, 1060, 2613	Vision	1972
Denon	0042	Marantz	0035, 0081	Realistic	0000, 0035, 0037, 0046, 0047, 0048, 0104	Villain	0000
Dimensia	2613	Marta	0037	ReplayTV	0614, 0616	Voodoo	1972
DirecTV	0739	Matsushita	0035, 0162, 1162	Ricavision	1972	Wards	0000, 0035, 0042, 0047, 0048, 0060, 0072, 0081, 0149, 0212, 0240
Durabrand	0038, 0039	Media Center PC	1972	Ricoh	0034	White Westinghouse	0072, 0209, 0637
Dynatech	0000	MEI	0035	Rio	1137	XR-1000	0000, 0035, 0072
Electrohome	0037	Memorex	0000, 0035, 0037, 0039, 0046, 0047, 0048, 0104, 0162, 0209, 0240, 0307, 0348, 0479, 1037, 1162, 1237, 1262	Runco	0039	Yamaha	0038
Electrohome	0037	MGA	0043, 0061, 0240	Salora	0075	Zenith	0000, 0033, 0034, 0039, 0209, 0479, 0637, 1137, 1139, 1479
Emerex	0032	MGN Technology	0240	Samsung	0045, 0240, 0739, 1014	ZT Group	1972
Emerson	0000, 0002, 0037, 0043, 0061, 0068, 0121, 0184, 0208, 0209, 0212, 0278, 0479, 0561, 0593, 0637, 1278, 1479, 1593	Microsoft	1972	Samtron	0643		
		Mind	1972	Sanky	0039, 0048		
		Minolta	0042, 0105				
		Mitsubishi	0043, 0061, 0067, 0075, 0173, 0214, 0242, 0443, 0807				
		Motorola	0035, 0048				

Remote Control Operation/Code List (Continued)

Remote Control Code List

DBS/PVR Combination (V) ()							
Brand	Code	Brand	Code	Brand	Code	Brand	Code
DirectTV	0739	Hughes Network Systems	0739	Philips	0739	Tivo	0739
				Samsung	0739		
DVD-Recorder (V) ()							
Magnavox	0000						
PVR (V) ()							
ABS	1972	Hughes Network Systems	0739	Northgate	1972	Tagar Systems	1972
Alienware	1972	Humax	0739, 1797, 1988	Panasonic	0614, 0616, 1807, 1808, 1809	Tivo	0618, 0636, 0739, 1337
Captive Works	2167	Hush	1972	Philips	0618, 0739	Toshiba	1008, 1972, 1988, 1996
CyberPower	1972	iBUYPOWER	1972	Pioneer	1337	Touch	1972
Dell	1972	LG	2010	RCA	0880	Viewsonic	1972
DirectTV	0739	Linksys	1972	ReplayTV	0614, 0616	Voodoo	1972
Gateway	1972	Media Center PC	1972	Samsung	0739	ZT Group	1972
Go Video	0614	Microsoft	1972	Sonic Blue	0614, 0616		
Hewlett Packard	1972	Mind	1972	Sony	0636, 1972		
Howard Computers	1972	Niveus Media	1972	Stack 9	1972		
HP	1972			Systemax	1972		
DVD (Y) ()							
Accurian	0675, 1072, 1416	Emerson	0591, 0675, 1268	Malata	0782, 1159	Sampo	0698, 0752
Adcom	1094	Enterprise	0591	Marantz	0539	Samsung	0199, 0490, 0573, 0820, 0899, 1044, 1075, 1470
Aiwa	0641	ESA	1268	McIntosh	1273	Sansui	0695
Akai	0695, 0770, 0899, 1089	Fisher	0670	Memorex	0695, 0831, 1270	Sanyo	0670, 0695, 0873
Alco	0790	Funai	0675, 1268, 1334	Microsoft	0522, 1708, 2083	Sensory Science	1158
Allegro	0869	Gateway	1073, 1077, 1158	Mintek	0717, 0839, 1472	Sharp	0630, 0675, 0752, 1256
Amphion Media Works	0872, 1245	GE	0522, 0717, 0815	Mitsubishi	0521, 1521	Sharper Image	1117
AMW	0872, 1245	Go Video	0715, 0741, 0744, 0783, 0833, 0869, 1044, 1075, 1099, 1144, 1158, 1304, 1730	Momitsu	1082	Sherwood	0633, 0770, 1043, 1077
Apex Digital	0672, 0717, 0755, 0794, 0796, 0797, 1004, 1020, 1056, 1061, 1100			NAD	0692, 0741	Shinsson	0533, 0839
Arrgo	1023	Go Vision	1072	Nakamichi	1222	Sigma Designs	0674
Aspire Digital	1168, 1407	GoldStar	0741	NEC	0785	Sonic Blue	0869, 1099
Astar	1678, 1679	GPX	0699, 0769	Nesa	0717	Sony	0533, 0864, 1033, 1069, 1070, 1431, 1432, 1433, 1516, 1533, 1536, 1548, 1791, 1824, 1892, 1903, 1904, 1934, 1981, 2020, 2043
Audiologic	0736	Greenhill	0717	Next Base	0826		
Audiovox	0790, 1041, 1072, 1121, 1122	Harman/Kardon	0582, 0702	NexxTech	1402		
Axion	1072	Helios	2080	Norcent	0872, 1003, 1107, 1265		
B & K	0655, 0662	Hello Kitty	0831	Nova	1517	Sova	1122
BBK	1224	Hitachi	0573, 0664, 1247	Onkyo	0503, 0627, 0792, 1769	Sungale	1074
Bel Canto Design	1571	Hiteker	0672	Oppo	0575, 1224 1525	SVA	0860, 1105
Blaupunkt	0717	Humax	1500, 1588	OptoMedia Electronics	0896	Sylvania	0675, 1268
Blue Parade	0571	iLo	1348, 1472	Oritron	0651	Symphonic	0675
Broksonic	0695, 1419	Initial	0717, 1472	Panasonic	0458, 0490, 0632, 0703, 1010, 1011, 1362, 1462, 1464, 1490, 1641, 1762, 1907, 1908, 1909, 1910, 1925, 1986, 1990, 2017, 2060, 2061, 2062	TAG McLaren	0894
CAVS	1057	Insignia	1268, 2095	Philco	0675	Teac	0790
Cinea	0831	Integra	0627	Philips	0503, 0539, 0646, 0675, 1267, 1340, 1354, 2056, 2084	Technics	0490, 0703
Cinego	1399	Jaton	1078	Philips	0503, 0539, 0646, 0675, 1267, 1340, 1354, 2056, 2084	Technosonic	0730
CineVision	0833, 0869, 0876	JBL	0702	Pioneer	0142, 0525, 0571, 0631, 0632, 1571	Techwood	0692
Citizen	0695, 1277, 1587, 2116	JSI	1423	Polaroid	1020, 1061, 1086, 1245, 1316, 1478, 2130	Terapin	1031
Coby	0778, 0852, 1086, 1107, 1165, 1177, 1351, 1628	JVC	0558, 0623, 0867, 1164, 1275, 1550, 1602	Polk Audio	0539	Theta Digital	0571
Craig	0831	jWin	1049, 1051, 1675	Portland	0770	TiVo	1503
Curtis Mathes	1087	Kawasaki	0790	Presidian	0675, 1072	Toshiba	0503, 0695, 1045, 1154, 1503, 1588, 1608, 1769, 1854
CyberHome	0816, 0874, 1023, 1024, 1117, 1129, 1502, 1537	Kenwood	0490, 0534, 0682	Princeton	0674	Tredex	0799, 0800, 0803, 0804
Daewoo	0705, 0784, 0833, 0869, 1169, 1172, 1234, 1242, 1441	KLH	0717, 0790, 1020, 1149	Proscen	0522	Urban Concepts	0503
Denon	0490, 0634, 1634	Konka	0711, 0721	ProVision	0778	US Logic	0839
Desay	1407	Koss	0651, 0896, 1423	Qwestar	0651	Venturer	0790
Diamond Vision	1316	Landel	0826	RCA	0522, 0571, 0717, 0790, 0822, 1022, 1132, 1769	Vizio	1064, 1226
Disney	0675, 1270	Lasonic	0798, 1173	Rio	0869	Vocopro	1027, 1360
Dual	1068, 1085	Lenox	1127	RJTech	1360	Xbox	0522, 1708, 2083
Durabrand	1127	LG	0591, 0741, 0869	Rotel	0623, 1178	Xwave	1001
DVD2000	0521	LiteOn	1058, 1158, 1416, 1440, 1656	Rowa	0823	Yamaha	0490, 0497, 0539, 0545
Electrohome	2116	Loewe	0511			Zenith	0503, 0591, 0741, 0869
		Magnavox	0503, 0539, 0646, 0675, 1268, 1354, 1472, 1506			Zoece	1265
DVD-Recorder (Y) ()							
Accurian	0675, 1416	Funai	0675, 1334	Panasonic	0490, 1010, 1011, 2060, 2061, 2062	Sony	1033, 1069, 1070, 1431, 1432, 1433, 1536
Apex Digital	1056	Gateway	1073, 1158	Philips	0646, 1340	Sylvania	0675
Aspire Digital	1168	Go Video	0741, 1158, 1304, 1730	Pioneer	0631	Toshiba	1588
Broksonic	1419	iLo	1348	Polaroid	1086, 2130	Zenith	0741
Citizen	2116	JVC	1164, 1275	RCA	0522		
Coby	1086	LG	0741	Samsung	0490, 1470		
CyberHome	1129, 1502	LiteOn	1158, 1416, 1440	Sensory Science	1158		
Electrohome	2116	Magnavox	0646, 0675, 1506	Sharp	0675		
Blu-ray Disc (Y) ()							
LG	0741	Philips	2084	Samsung	0199		
Panasonic	1641, 2061, 2062	Pioneer	0142	Sony	1516		
HD-DVD (Y) ()							
LG	0741	Onkyo	1769	RCA	1769	Toshiba	1769
HTiB (Y) ()							
Aiwa	0641	Panasonic	0458, 1779, 1907, 1908, 1909, 1910, 1925, 1990, 2017	Rio	0869	Teac	0790
Audiovox	0790			Sherwood	1077	Toshiba	1854
KLH	0790	Philips	1267	Sonic Blue	0869	Venturer	0790
Koss	0651	Polk Audio	0539	Sony	1824, 1892, 1903, 1904, 1934, 1981, 2020, 2043	Yamaha	0497
Oritron	0651	RCA	0790				

Ratings List for Lock

“V-chip” technology enables you to lock channels or shows according to standard ratings set by the entertainment industry. (p. 41)

■ U.S. MOVIE RATINGS (MPAA)

NR	NO RATING (NOT RATED) AND NA (NOT APPLICABLE) PROGRAMS. Movie which has not been rated or where rating does not apply.
G	GENERAL AUDIENCES. All ages admitted.
PG	PARENTAL GUIDANCE SUGGESTED. Some material may not be suitable for children.
PG-13	PARENTS STRONGLY CAUTIONED. Some material may be inappropriate for children under 13.
R	RESTRICTED. Under 17 requires accompanying parent or adult guardian.
NC-17	NO ONE 17 AND UNDER ADMITTED.
X	ADULTS ONLY.

■ U.S. TV PROGRAMS RATINGS (U. S. TV)

Age-based Group	Age-based Ratings	Possible Content Selections	Description
NR (Not Rated)	TV-NR	<ul style="list-style-type: none"> ● Viewable ● Blocked 	Not Rated.
Youth	TV-Y	<ul style="list-style-type: none"> ● Viewable ● Blocked 	All children. The themes and elements in this program are specifically designed for a very young audience, including children from ages 2-6.
	TV-Y7	<ul style="list-style-type: none"> ● FV Blocked ● Viewable ● Blocked 	Directed to older children. Themes and elements in this program may include mild physical or comedic violence, or may frighten children under the age of 7.
Guidance	TV-G	<ul style="list-style-type: none"> ● Viewable ● Blocked 	General audience. It contains little or no violence, no strong language, and little or no sexual dialogue or situations.
	TV-PG	<ul style="list-style-type: none"> ● D,L,S,V (all selected) ● Any combination of D, L, S, V 	Parental guidance suggested. The program may contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
	TV-14	<ul style="list-style-type: none"> ● D,L,S,V (all selected) ● Any combination of D, L, S, V 	Parents strongly cautioned. This program may contain sophisticated themes, sexual content, strong language and more intense violence.
	TV-MA	<ul style="list-style-type: none"> ● L,S,V (all selected) ● Any combination of L, S, V 	Mature audiences only. This program may contain mature themes, profane language, graphic violence, and explicit sexual content.

FV: Fantasy/Cartoon Violence. V: Violence S: Sex L: Offensive Language D: Dialogue with sexual content.

■ CANADIAN ENGLISH RATINGS (C. E. L. R.)

E	Exempt - Exempt programming includes: news, sports, documentaries and other information programming, talk shows, music videos, and variety programming.
C	Programming intended for children under age 8. No offensive language, nudity or sexual content.
C8+	Programming generally considered acceptable for children 8 years and over. No profanity, nudity or sexual content.
G	General programming, suitable for all audiences.
PG	Parental Guidance suggested. Some material may not be suitable for children.
14+	Programming contains themes or content which may not be suitable for viewers under the age of 14. Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens.
18+	18+ years old. Programming restricted to adults. Contains constant violence or scenes of extreme violence.

■ CANADIAN FRENCH RATINGS (C. F. L. R.)

E	Exempt - Exempt programming.
G	General - Programming intended for audience of all ages. Contains no violence, or the violence content is minimal or is depicted appropriately.
8 ans+	8+ General - Not recommended for young children. Programming intended for a broad audience but contains light or occasional violence. Adult supervision recommended.
13 ans+	Programming may not be suitable for children under the age of 13 - Contains either a few violent scenes or one or more sufficiently violent scenes to affect them. Adult supervision strongly suggested.
16 ans+	Programming may not be suitable for children under the age of 16 - Contains frequent scenes of violence or intense violence.
18 ans+	Programming restricted to adults. Contains constant violence or scenes of extreme violence.

Caution

- The V-Chip system that is used in this set is capable of blocking “NR” programs (non rated, not applicable and none) as per FCC Rules Section 15.120(e)(2). If the option of blocking “NR” programs is chosen “unexpected and possibly confusing results may occur, and you may not receive emergency bulletins or any of the following types of programming:”
 - Emergency Bulletins (Such as EAS messages, weather warnings and others)
 - Locally originated programming • News • Political • Public Service Announcements • Religious • Sports • Weather

Technical Information


Closed Caption (CC)

- For viewing the CC of digital broadcasting, set the aspect to FULL (If viewing with H-FILL, JUST, ZOOM, or 4:3; characters might be cut off).
- The CC can be displayed on the TV if the receiver (such as a set-top box or satellite receiver) has the CC set On using the Component or HDMI connection to the TV.
- If the CC is set to On on both the receiver and TV when the signal is 480i (except for the HDMI connection), the CC may overlap on the TV.
- If a digital program is being output in analog format, the CC data will also be output in analog format.
- If the recorder or output monitor is connected to the TV, the CC needs to be set up on the recorder or output monitor.

Aspect Ratio (FORMAT)


Press the FORMAT button to cycle through the aspect modes. This lets you choose the aspect depending on the format of the received signal and your preference. (p. 17)
(e.g.: in case of 4:3 image)

● FULL

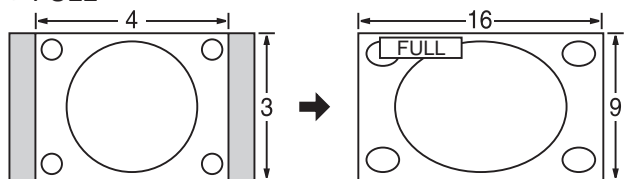


Enlarges the 4:3 image horizontally to the screen's side edges.
(Recommended for anamorphic picture)

● JUST

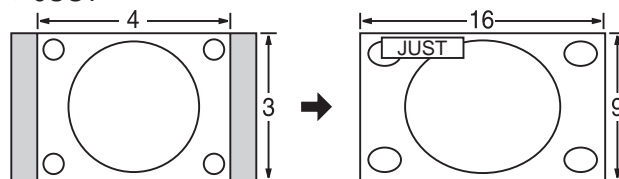


Stretches to justify the 4:3 image to the four corners of the screen.
(Recommended for normal TV broadcast)

● H-FILL

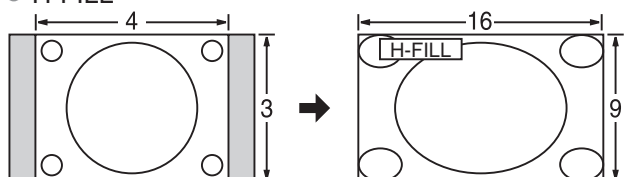


Enlarges the 4:3 image horizontally to the screen's side edges.
The side edges of the image are cut off.

● 4:3

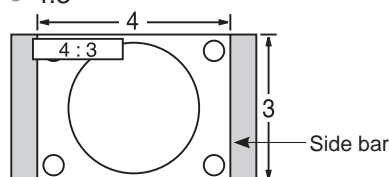

Standard
(Note that "Image retention" of the side bar may occur from displaying it for a long time.)

● ZOOM

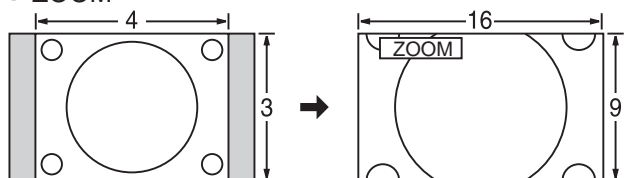

Enlarges the 4:3 image to the entire screen.
(Recommended for Letter Box)

Note

- 480i (4:3), 480i (16:9), 480p (4:3), 480p (16:9):
FULL, JUST, 4:3 or ZOOM
- 1080p/1080i/720p:
FULL, H-FILL, JUST, 4:3 or ZOOM


● Zoom adjust

Vertical image position and size can be adjusted in "ZOOM".

① Select "Zoom adjust" on the "Picture" menu. (p. 28-29)

② V-position: Vertical position adjustment

③ V-size: Vertical size adjustment

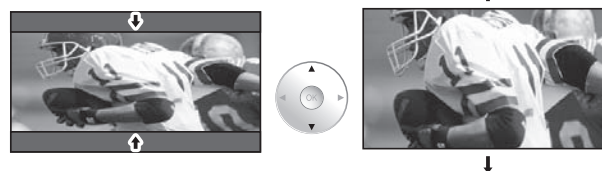

● To reset the aspect ratio →  (OK)

Data format for SD Card browsing

- Photo:** Still images recorded with digital still cameras compatible with JPEG files of DCF* and EXIF** standards
 Data format-Baseline JPEG (Sub-sampling: 4:4:4, 4:2:2 or 4:2:0)
 Max. number of files - 9,999 Image resolution - 160 x 120 to 10,000,000
- Movie:** SD-Video Standard Ver. 1.2 [MPEG-2 (PS format)] and AVCHD Standard compatible files with an audio format that is either MPEG-1/Layer-2 format or Dolby Digital format
 (A modified data with a PC may not be displayed correctly.)

* DCF (Design rule for camera file system): A Japan Electronics and Information Technology Industries Association's standard

** EXIF (Exchangeable Image File Format)

Note

- Format the card with the recording equipment.
- The picture may not appear correctly on this TV depending on the recording equipment used.
- Display may take some time when there are many files and folders.
- This function cannot display Motion JPEG and still image not DCF formatted (i.e. TIFF, BMP).
- Data modified with a PC may not be displayed.
- Images imported from a PC must be compatible with EXIF 2.0, 2.1 and 2.2.
- Partly degraded files might be displayed at a reduced resolution.
- All ".JPG" extension datas in the card will be read in Photo View Mode.
- The folder and file names may be different depending on the digital camera used.
- Do not use two-byte characters or other special codes.
- The card may become unusable with this TV if file or folder names are changed.
- For the suitable SD Memory Cards, please confirm the latest information on the following website.
<http://panasonic.co.jp/pavc/global/cs> (This site is in English only)

Cautions in handling SD Card:

- Do not remove the card while the unit is accessing data (this can damage card or unit).
- Do not touch the terminals on the back of the card.
- Do not subject the card to high pressure or impact.
- Insert the card in the correct direction (otherwise, card may be damaged).
- Electrical interference, static electricity, or erroneous operation may damage the data or card.
- Back up the recorded data at regular intervals in case of deteriorated or damaged data or erratic operation of the unit. (Panasonic is not liable for any deterioration or damage of recorded data.)

SD Card warning messages

Message	Meaning
Is SD card in?	● The card is not inserted.
No file	● The card has no data or this type of data is not supported.
Cannot read file	<ul style="list-style-type: none"> ● The file is broken or unreadable. ● The TV does not support the format.
Feature not available	● Your operation is not available.

GalleryPlayer warning messages

Cannot display image due to incorrect ID data.	<ul style="list-style-type: none"> ● There is a problem with your TV decoder. ● If this message appears, please contact Panasonic Service Center for assistance. Refer to page 63 (Customer Services Directory), page 62, 64 (Limited Warranty)
Cannot display image on SD card.	<ul style="list-style-type: none"> ● There is a problem with the data. Check the data inside the SD card.

Technical Information (Continued)

VIERA Link™ “HDAVI Control™”

HDMI connections to some Panasonic equipment allow you to interface automatically. (p. 32)

- This function may not work normally depending on the equipment condition.
- The equipment can be operated by other remote controls with this function on even if TV is in Standby mode.
- Image or sound may not be available for the first few seconds when the playback starts.
- Image or sound may not be available for the first few seconds when Input mode is switched.
- Volume function will be displayed when adjusting the volume of the equipment.
- If you connect the same kind of equipment at once (for example: one DIGA to HDMI 1/another DIGA to HDMI 2), VIERA Link™ is available for the terminal with the smaller number.
- If you connect equipment that has more than “HDAVI Control 2” (or more) function to the TV with HDMI cable, the sound from DIGITAL AUDIO OUT terminal can be output as multi channel surround.
- “HDAVI Control 3” is the newest standard (current as of December, 2007) for the HDAVI Control compatible equipment. This standard is compatible with the conventional HDAVI equipment.

HDMI connection

HDMI (high-definition multimedia interface) allows you to enjoy high-definition digital images and high-quality sound by connecting the TV unit and the devices.

HDMI-compatible equipment (*1) with an HDMI or DVI output terminal, such as a set-top box or a DVD player, can be connected to the HDMI connector using an HDMI compliant (fully wired) cable.

- HDMI is the world's first complete digital consumer AV interface complying with a non-compression standard.
 - If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adapter cable (*2).
 - When the DVI to HDMI adapter cable is used, connect the audio cable to the audio input terminal.
 - Audio settings can be made on the “HDMI 1 in”, “HDMI 2 in”, “HDMI 3 in” or “HDMI 4” menu screen. (p. 28)
- Applicable audio signal sampling frequencies (L.PCM): 48 kHz, 44.1 kHz, 32 kHz

(*1): The HDMI logo is displayed on an HDMI-compliant device.

(*2): Enquire at your local digital equipment retailer shop.

Caution

- Use with a PC is not assumed.
- All signals are reformatted before being displayed on the screen.
- If the connected device has an aspect adjustment function, set the aspect ratio to “16:9”.
- These HDMI connectors are “type A”.
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- A device having no digital output terminal may be connected to the input terminal of either “COMPONENT”, “S VIDEO”, or “VIDEO” to receive analog signals.
- The HDMI input terminal can be used with only the following image signals: 480i, 480p, 720p, 1080i and 1080p. Match the output setting of the digital device.
- For details of the applicable HDMI signals, see below.

DIGITAL AUDIO OUT terminals

You can enjoy your home theater by connecting a Dolby Digital (5.1 channel) decoder and “Multi Channel” amplifier to the DIGITAL AUDIO OUT terminals.

Caution

- Depending on your DVD player and DVD-Audio software the copyright protection function may operate and disable optical output.
- External speakers cannot be connected directly to PROG OUT terminals.
- When an ATSC channel is selected, the output from the DIGITAL AUDIO OUT jack will be Dolby Digital. When an NTSC channel is selected, the output will be PCM.
- When playing movie on SD Card Movie player, when the sound has been recorded in Dolby Digital, the output from the DIGITAL AUDIO OUT terminal will be Dolby Digital. When the sound is recorded in the other formats, the output will be PCM. See pages 48-49 for more information

Picture mode

- Vivid: Provides enhanced picture contrast and sharpness for viewing in a well-lit room.
- Standard: Recommended for normal viewing conditions with subdued room lighting.
- Studio ref: Provides high-quality gradation and color tone picture for a cinema-like feel.
- Game: For playing video game. This mode will be set automatically if “GAME” is selected from Input label setting (p. 45)
- Custom (Photo): Customizes each item according to your taste. Photo is displayed in JPEG mode.

Note

- Picture mode will be automatically set to “Standard” if you change the Input label from “GAME” to other labels.
- Picture mode will be automatically set to “Game” if you change from an Input label other than “GAME” to “GAME” label.

Pro setting

- Normal: Resets all Pro setting adjustments to factory default settings. (Set/No)
- Panel brightness: Selects the display panel brightness.
(High: Vivid, Mid: Standard, Low: Studio ref)
- Contour emphasis: Adjusts the contour emphasis of the image. (On/Off)
- Gamma adjust: Gamma correction. Adjusts the intermediate brightness of the image. (Normal/Mid/Full 1/Full 2)
- Black extension: Adjusts the dark shades of the image in gradation.
- W/B high R: Adjusts the white balance for light red areas.
- W/B high B: Adjusts the white balance for light blue areas.
- W/B low R: Adjusts the white balance for dark red areas.
- W/B low B: Adjusts the white balance for dark blue areas.
- AGC: Increases the brightness of dark signal automatically. (On/Off)

Input signal that can be displayed

* Mark: Applicable input signal for Component (Y, Pb, Pr), HDMI and PC


	horizontal frequency (kHz)	vertical frequency (Hz)	COMPONENT	HDMI	PC
525 (480) / 60i	15.73	59.94	*	*	
525 (480) / 60p	31.47	59.94	*	*	
750 (720) / 60p	45.00	59.94	*	*	
1,125 (1,080) / 60i	33.75	59.94	*	*	
1,125 (1,080) / 60p	67.43	59.94		*	
1,125 (1,080) / 60p	67.50	60.00		*	
1,125 (1,080) / 24p	26.97	23.98		*	
1,125 (1,080) / 24p	27.00	24.00		*	
640 x 400 @ 70	31.47	70.08			*
640 x 480 @ 60	31.47	59.94			*
Macintosh13" (640 x 480)	35.00	66.67			*
640 x 480 @ 75	37.50	75.00			*
852 x 480 @ 60	31.47	59.94			*
800 x 600 @ 60	37.88	60.32			*
800 x 600 @ 75	46.88	75.00			*
800 x 600 @ 85	53.67	85.08			*
Macintosh16" (832 x 624)	49.73	74.55			*
1,024 x 768 @ 60	48.36	60.00			*
1,024 x 768 @ 70	56.48	70.07			*
1,024 x 768 @ 75	60.02	75.03			*
1,024 x 768 @ 85	68.68	85.00			*
Macintosh 21" (1,152 x 870)	68.68	75.06			*
1,280 x 1,024 @ 60	63.98	60.02			*
1,366 x 768 @ 60	48.36	60.00			*

Note

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

PC Input Terminals Connection

- Computer signals which can be input are those with a horizontal scanning frequency of 15 to 110 kHz and vertical scanning frequency of 48 to 120 Hz. (However, the image will not be displayed properly if the signals exceed 1,200 lines.)
- Some PC models cannot be connected to the set.
- There is no need to use an adapter for computers with IBM PC/AT compatible D-sub 15P terminal.
- The maximum resolution: 1,280 x 1,024
If the display resolution exceeds these maximums, it may not be possible to show fine detail with sufficient clarity.
- Signal Names for D-sub 15P Connector

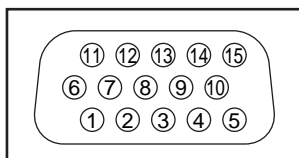

Pin Layout for PC Input Terminal

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
①	R	⑥	GND (Ground)	⑪	NC (not connected)
②	G	⑦	GND (Ground)	⑫	NC
③	B	⑧	GND (Ground)	⑬	HD/SYNC
④	NC (not connected)	⑨	NC (not connected)	⑭	VD
⑤	GND (Ground)	⑩	GND (Ground)	⑮	NC


Technical Information (Continued)

Side Bar

Do not display a picture in 4:3 mode for an extended period, as this can cause "Image retention" to remain on either or both sides of the display field. To reduce the risk of such "Image retention", change the brightness of the side bars.

See pages 30-31 for more information


- The side bar may flash (alternate black/white) depending on the picture. Using Cinema mode will reduce such flashing (See below).

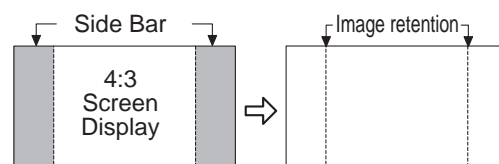

Scrolling bar

Scrolling bar: To prevent "Image retention", scrolls white horizontal bar from top to bottom on a black screen.

- Press any key except the POWER key to return to previous screen.
- You will return to the previous screen if no key operation has been performed for 15 minutes. See pages 30-31 for more information

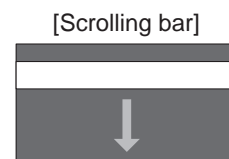

Care and Cleaning

First, unplug the Power cord plug from the wall outlet.

Display panel

The front of the display panel has been specially treated. Wipe the panel surface gently using only a cleaning cloth or a soft, lint-free cloth.

- If the surface is particularly dirty, soak a soft, lint-free cloth in diluted mild liquid dish soap (1 part mild liquid dish soap diluted by 100 times the amount of water) and then wring the cloth to remove excess liquid. Use this cloth to wipe the surface of the display panel, then wipe it evenly with a dry cloth of the same type until the surface is dry.
- Do not scratch or hit the surface of the panel with fingernails or other hard objects. Furthermore, avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the surface may be adversely affected.

Cabinet

If the cabinet becomes dirty, wipe it with a soft, dry cloth.

- If the cabinet is particularly dirty, soak the cloth in a weak mild liquid dish soap and then wring the cloth dry. Use this cloth to wipe the cabinet and then wipe it dry with a dry cloth.
- Do not allow any mild liquid dish soap to come into direct contact with the surface of the Plasma TV. If water droplets get inside the unit, operating problems may result.
- Avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the cabinet surface may be adversely affected or the coating may peel off. Furthermore, do not leave it for long periods in contact with articles made from rubber or PVC.

Pedestal

Cleaning

Wipe the surfaces with a soft, dry cloth. If the unit is particularly dirty, clean it using a cloth soaked with water to which a small amount of mild liquid dish soap has been added and then wipe with a dry cloth.


Do not use products such as solvents, thinner, or household wax for cleaning, as they can damage the surface coating. (If using a chemically-treated cloth, follow the instructions supplied with the cloth.)

- Do not attach sticky tape or labels, as they can make the surface of the pedestal dirty. Do not allow long-term contact with rubber, vinyl products, or the like. (Doing so will cause deterioration.)


Specifications

		TH-58PZ850U	TH-65PZ850U
Power Source		AC 120 V, 60 Hz	
Power Consumption	Maximum	742 W	792 W
	Standby condition	0.2 W	0.2 W
Plasma Display panel	Drive method	AC type	
	Aspect Ratio	16:9	
	Visible screen size (W x H x Diagonal)	58 " class (58.0 inches measured diagonally) 50.5 " x 28.4 " x 58.0 " (1,284 mm x 723 mm x 1,474 mm)	65 " class (64.7 inches measured diagonally) 56.4 " x 31.7 " x 64.7 " (1,434 mm x 807 mm x 1,646 mm)
	(No. of pixels)	2,073,600 (1,920 (W) x 1,080 (H)) [5,760 x 1,080 dots]	
Sound	Audio Output	Super Slim SP (2.5 W) x 2, Woofer (13 W) x 2	
PC signals		VGA, SVGA, XGA, WXGA, SXGA Horizontal scanning frequency 31 - 69 kHz Vertical scanning frequency 59 - 86 Hz	
Channel Capability (Digital/Analog)		VHF/UHF: 2 - 69, CATV: 1 - 135	
Operating Conditions		Temperature: 32 °F – 104 °F (0 °C – 40 °C) Humidity: 20 % – 80 % RH (non-condensing)	
Connection Terminals	VIDEO IN 1-2	VIDEO: RCA PIN Type x 1 1.0 V [p-p] (75 Ω) S-VIDEO: Mini DIN 4-pin Y: 1.0 V [p-p] (75 Ω) C: 0.286 V [p-p] (75 Ω) AUDIO L-R: RCA PIN Type x 2 0.5 V [rms]	
	COMPONENT INPUT 1-2	Y: 1.0 V [p-p] (including synchronization) PB, PR: ±0.35 V [p-p] AUDIO L-R: RCA PIN Type x 2 0.5 V [rms]	
	HDMI 1-4	TYPE A Connector x 4 ● This TV supports "HDAVI Control 3" function.	
	PC	D-SUB 15PIN: R,G,B/0.7 V [p-p] (75 Ω) HD, VD/1.0 - 5.0 V [p-p] (high impedance) AUDIO L-R: Stereo Mini Jack (Φ3.5 mm) x 1	
	RS232C (Serial)	D-sub 9pin for external control	
	LAN (for VIERA CAST IPTV)	RJ45 (10BASE-T/100BASE-TX)	
	Card slot	SD CARD slot x 1	
	AV PROG OUT	VIDEO: RCA PIN Type x 1 1.0 V [p-p] (75 Ω) AUDIO L-R: RCA PIN Type x 2 0.5 V [rms]	
	DIGITAL AUDIO OUT	PCM/Dolby Digital, Fiber Optic	
FEATURES		3D Y/C FILTER CLOSED CAPTION IPTV (VIERA CAST) V-Chip BBE VIVA 3D Photo viewer Movie player HDAVI Control 3	
Dimensions (W x H x D)	Including pedestal	56.9 " x 37.4 " x 16.2 " (1,445 mm x 949 mm x 409 mm)	---
	TV Set only	56.9 " x 35.4 " x 4.3 " (1,445 mm x 898 mm x 109 mm)	63.0 " x 39.1 " x 4.3 " (1,599 mm x 993 mm x 109 mm)
Mass	Including pedestal	137.4 lb. (62.3 kg)	---
	TV Set only	128.6 lb. (58.3 kg)	160.3 lb. (72.7 kg)

[TH-58PZ850U]

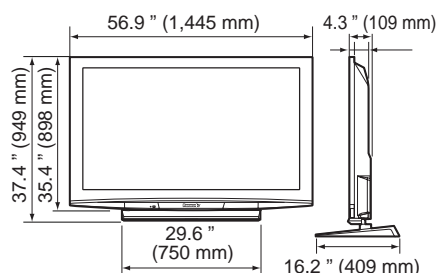

[TH-65PZ850U]

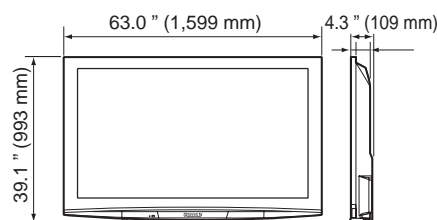


Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.

FAQ

Before requesting service or assistance, please follow these simple guides to resolve the problem.
If the problem still persists, please contact your local Panasonic dealer or Panasonic Service Center for assistance.
For details (p. 63, 64)
For additional assistance, please contact us via the website at:
www.panasonic.com/contactinfo
www.panasonic.ca

White spots or shadow images (noise)

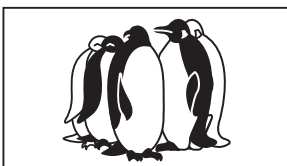


- Check the position, direction, and connection of the antenna.

Interference or frozen digital channels (intermittent sound)



- Change the direction of antenna for digital channels.
- Check "Signal meter" (p. 43). If the signal is weak, check the antenna and consult your local dealer.

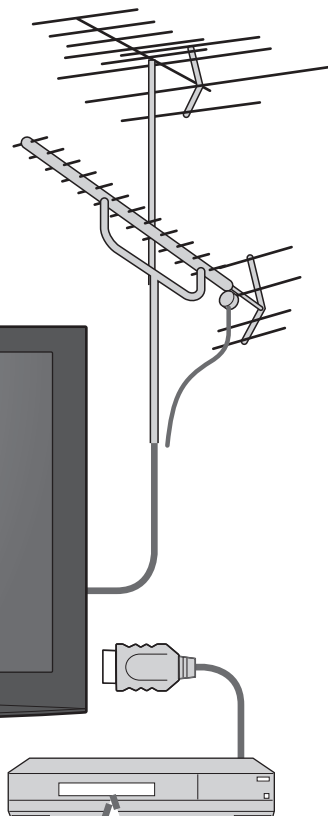

Pictures from external equipment are distorted when the unit is connected via HDMI

- Is the HDMI cable connected properly? (p. 48, 49)
- Turn Off the TV unit and equipment, then turn them On again.
- Check an input signal from the equipment. (p. 57)
- Use equipment compliant with EIA/CEA-861/861B.

Recording does not start immediately

- Check the settings of the recorder. For details, read the manual of the recorder.

The remote control does not work

- Are the batteries installed correctly? (p. 6)
- Are the batteries new?
- Select the correct remote control mode (p. 13, 22)

If there is a problem with your TV, please refer to the table below to determine the symptoms, then carry out the suggested check. If this does not solve the problem, please contact your local Panasonic dealer, quoting the model number and serial number (both found on the rear of the TV).

	Problem	Actions
Screen	“Press any key to return” moves on the screen	<ul style="list-style-type: none"> ● The function to prevent “Image retention” is activated. (Not a faulty symptom) ● The screen saver is activated if the TV unit is not operated for a certain time in SD mode. ● “Image retention” (p. 5)
	One spot remains dark	<ul style="list-style-type: none"> ● A pixel or luminescent spot can occasionally be missing in plasma displays. (Not a faulty symptom)
	Chaotic image, noisy	<ul style="list-style-type: none"> ● Check nearby electrical products (car, motorcycle, fluorescent lamp).
	No image can be displayed	<ul style="list-style-type: none"> ● Check Picture menu (p. 28) ● Check the cable connections. (p. 9-12) ● Check that the correct input has been selected. (p. 22)
	Only spots are displayed instead of images	<ul style="list-style-type: none"> ● Check the channel settings. (p. 42) ● Check the antenna cables.
	Neither image nor sound is produced	<ul style="list-style-type: none"> ● Is the AC power cord plugged into the outlet? ● Is the TV unit turned On? ● Check Picture menu (p. 28) and volume. ● Check the AV cable connections. (p. 9-12) ● Check that the correct input has been selected. (p. 22)
	Black Box appears	<ul style="list-style-type: none"> ● Change settings of Closed Caption (CC). (p. 44)
Sound	No sound is produced	<ul style="list-style-type: none"> ● Are the speakers' cables connected correctly? (p. 48) ● Is “Sound Mute” active? (p. 13) ● Is the volume set to the minimum? ● Is “Speaker output” set to “Off”? (p. 28) ● Change “SAP” settings. (p. 16) ● Check “HDMI 1 in”, “HDMI 2 in”, “HDMI 3 in” or “HDMI 4 in” settings. (p. 28)
	Sound is unusual	<ul style="list-style-type: none"> ● Set “SAP” setting to “Stereo” or “Mono.” ● Check the HDMI device connected to the unit. ● Set the audio setting of the HDMI device to “Linear PCM.” ● If digital sound connection has a problem, select analog sound connection.
	Whirring sound is heard	<ul style="list-style-type: none"> ● The sound is from the built-in cooling fan (not a sign of faulty operation).
TV set	Parts of the TV set become hot.	<ul style="list-style-type: none"> ● Even when the temperature of parts of the front, top and rear panels has risen, these temperature rises will not pose any problems in terms of performance or quality.

Limited Warranty (for U.S.A.)

PANASONIC CONSUMER ELECTRONICS COMPANY,
DIVISION OF
PANASONIC CORPORATION OF NORTH AMERICA
One Panasonic Way
Secaucus, New Jersey 07094

PANASONIC SALES COMPANY,
DIVISION OF
PANASONIC PUERTO RICO, INC.
Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

Panasonic Color Television Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Puerto Rico, Inc. (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

CATEGORIES	ALL PARTS EXCEPT GLASS PANEL OR CRT	LABOR	GLASS PANEL OR CRT	GLASS PANEL OR CRT LABOR	SERVICE
PLASMA DISPLAY	1 (ONE) YEAR	1 (ONE) YEAR	GLASS PANEL - 2 (TWO) YEARS	1 (ONE) YEAR	ON-SITE OR CARRY-IN

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" Limited Warranty period, there will be no charge for parts.

You must carry-in your product or arrange for on-site service during the Limited Warranty period. If non-rechargeable batteries are included, they are not warranted. This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of the original purchase date is required for Limited Warranty service.

On-Site or Carry-in Service

For On-Site or Carry-In Service in the United States call 1-877-95-VIERA (1-877-958-4372).

For assistance in Puerto Rico call Panasonic Puerto Rico, Inc. (787)-750-4300 or fax (787)-768-2910.

On-site service where applicable requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain on-site repairs will not be completed on-site, but will require that the product or parts of the product, at the servicer's discretion be removed for shop diagnosis and/or repair and then returned.

Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the picture tube resulting from viewing fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, bug infestation, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE LIMITED WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied Limited Warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have others rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE (INCLUDING COST OF AN ON-SITE SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

Customer Services Directory (for U.S.A.)

Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/help>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-877-95-VIERA (958-4372)

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

■ For hearing or speech impaired TTY users, TTY: 1-877-833-8855

Accessory Purchases

Purchase Parts, Accessories and Instruction Books on line for all Panasonic Products by visiting our Web Site at:

<http://www.pstc.panasonic.com>

or, send your request by E-mail to:

npcparts@us.panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday - Friday 9 am to 9 pm, EST.)

Panasonic Service and Technology Company

20421 84th Avenue South,

Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

■ For hearing or speech impaired TTY users, TTY: 1-866-605-1277

Service in Puerto Rico

Panasonic Puerto Rico, Inc.

Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park,

Carolina, Puerto Rico 00985

Phone (787)750-4300, Fax (787)768-2910

Limited Warranty (for Canada)

Panasonic Canada Inc.

PANASONIC PRODUCT - LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship and agrees to remedy any such defect for a period as stated below from the date of original purchase.

Plasma TV / Monitor	In-home service	One (1) year, parts (including Plasma Panel) and labour.
LCD TV (26 in & over)	In-home service	One (1) year, parts (including LCD Panel) and labour.

In-home Service will be carried out only to locations accessible by roads and within 50 km of an authorized Panasonic service facility.

LIMITATIONS AND EXCLUSIONS

This warranty does not apply to products purchased outside Canada or to any product which has been improperly installed, subjected to usage for which the product was not designed, misused or abused, damaged during shipping, or which has been altered or repaired in any way that affects the reliability or detracts from the performance, nor does it cover any product which is used commercially. Dry cell batteries are also excluded from coverage under this warranty.

This warranty is extended to the original end user purchaser only. A purchase receipt or other proof of date of original purchase is required before warranty service is performed.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES.

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable.

In-home service requires clear, complete and easy access to the product by the Authorized Servicentre and does not include removal or re-installation of an installed product. If removal is required to service the product, it will be at the discretion of the Servicentre and in no event will Panasonic Canada Inc. or the Servicentre be liable for any special, indirect or consequential damages.

WARRANTY SERVICE

For product operation and information assistance, please contact:

Our Customer Care Centre: 1-800 #: 1-866-330-0014
Email link: www.vieraconcierge.ca

FOR PRODUCT REPAIRS, please contact Viera Customer Care Agent using the above contact info.

IF YOU SHIP THE PRODUCT TO A SERVICENTRE

Carefully pack and send prepaid, adequately insured and preferably in the original carton.
Include details of the defect claimed, and proof of date of original purchase.

Customer's Record

The model number and serial number of this product can be found on its back cover. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number _____

Serial Number _____

Anotación del cliente

El modelo y el número de serie de este producto se encuentran en su panel posterior. Deberá anotarlos en el espacio provisto a continuación y guardar este manual, más el recibo de su compra, como prueba permanente de su adquisición, para que le sirva de ayuda al identificarlo en el caso de que le sea sustraído o lo pierda, y también para disponer de los servicios que le ofrece la garantía.

Modelo _____

Número de serie _____

**Panasonic Consumer Electronics
Company,
Division of Panasonic Corporation
of North America**
One Panasonic Way, Secaucus
New Jersey 07094 U.S.A.

Panasonic Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

Panasonic Canada Inc.
5770 Ambler Drive
Mississauga, Ontario
L4W 2T3 CANADA