



Twelve Hundred

User's Manual

Manuel de l'utilisateur

Anwenderhandbuch

Manuale per l'operatore

Manual del usuario

取扱説明書

中文使用手冊

At Antec, we continually refine and improve our products to ensure the highest quality. As such, your new case may differ slightly from the description in this manual. This isn't a problem; it's simply an improvement. As of the date of publication, all features, descriptions, and illustrations in this manual are correct.

Disclaimer

This manual is intended only as a guide for Antec's Computer Enclosures. For more comprehensive instructions on installing the motherboard and peripherals, please refer to the user's manuals that come with those components.

Twelve Hundred User's Manual

Twelve Hundred – Gaming Case

The Twelve Hundred comes without a power supply. Make sure you choose a power supply that is compatible with your computer components and has a long enough power harness to reach your motherboard and peripheral devices. We recommend our TruePower Quattro, TruePower Trio, or NeoPower power supplies for the latest ATX specification compliance, broad compatibility, and power savings capability.

Although care has been taken to prevent sharp edges in your Antec case, we strongly recommend taking the appropriate time and care when working with it. Avoid hurried or careless motions. Please use reasonable precaution.

Note: The Twelve Hundred comes with a top storage area. Antec does not recommend that users put any liquid-containing items (drinks, ice cream, candles, perfume dispensers, etc.) in this area. It was designed to hold your personal media player, digital camera, keys, coins, etc.

Setting Up

1. Place the case upright on a flat, stable surface so that the rear panel (power supply and expansion slots) is facing you.
2. Remove the panel thumbscrews from a side panel and open it by sliding it towards yourself.
Note: Place the panel thumbscrews carefully aside as they are NOT interchangeable with the HDD cage thumbscrews.
3. Remove the panel thumbscrews from the other side panel and open it by sliding it towards you. Place the screws carefully aside. Inside the case is the power supply mount at the lower rear of the case and the 5.25" drive bay area with three HDD cages inside the bays. You will also find some wiring with marked connectors (USB, PWR etc.), an installed I/O panel and a toolbox containing more hardware (screws, brass standoffs, etc.)
Note: Don't use your fingernail to pry or lift the panels.

Installing the Motherboard

This manual is not designed to cover CPU, RAM, or expansion card installation. Please consult the motherboard manual for specific mounting instructions and troubleshooting. Before proceeding, check the manual for your CPU cooler to find out if there are steps you must do before installing the motherboard.

1. Lay the case down so that the open side is up.



2. Make sure you have the appropriate I/O panel for the motherboard. If the panel provided is not suitable for the motherboard, please contact the motherboard manufacturer for the correct I/O panel.



3. Line up the motherboard with the standoff holes. Determine which holes line up and remember where they are. Not all motherboards will match with all of the provided screw holes, and this is not necessary for proper functionality. Some standoffs may be pre-installed for your convenience.

4. Lift up and remove the motherboard.


5. Screw in the brass standoffs to the threaded holes that line up with the motherboard.

6. Place the motherboard on the brass standoffs. Screw in the motherboard to the standoffs with the provided Phillips-head screws.



7. The motherboard is now installed.

8. If you are installing a water cooling system, then you may need to run some of the tubing outside the case through the hose ports with rubber grommets on the back of the case. Also, make sure to read about the pump/reservoir platform feature described near the end of the manual.

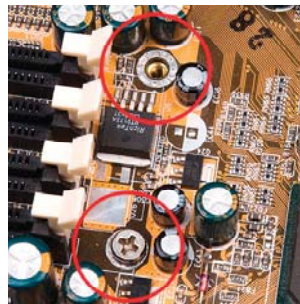

Installing the Power Supply

1. With the case upright, place the power supply on the four silicone pads on the bottom of the case.
Note: Power supplies with fans on the bottom of the power supply will need to be mounted so that the fan is facing the top of the case. Twelve Hundred provides mounting holes for power supplies with standard mounting layouts to be installed upside up or upside down.



2. Push the power supply to the back of the case and align the mounting holes.
3. Attach the power supply to the case with the screws provided.

Connecting the Ports and LEDs

 
Note: Please refer to your motherboard manual for specific pin outs or location of front panel connectors.

1. Connect the Reset switch (labeled RESET SW) to the motherboard at the RST connector. Polarity (positive and negative) does not matter for switches.
2. Power Switch (labeled POWER SW) connects to the PWR connector on the motherboard.
3. There is no Power LED in this case. Three illuminated case fans will turn on when there is power to the computer.
4. Hard Drive LED (labeled H.D.D. LED) connects to the IDE connector. For LEDs, colored wires are positive (+). White or black wires are negative (-). If the LED does not light up when the system is powered on, try reversing the connection. For more info on connecting LEDs to your motherboard, see your motherboard manual.

Connecting the USB Ports

Note: Please check the motherboard manual for the USB header pin layout and make sure it matches the table below.

Motherboard USB Pin Layout



Pin	Signal Names	Pin	Signal Names
1	USB Power 1	2	USB Power 2
3	Negative Signal 1	4	Negative Signal 2
5	Positive Signal 1	6	Positive Signal 2
7	Ground 1	8	Ground 2
9	Key (No Connection)	10	Empty Pin


Connecting the eSATA Port

You will find a SATA connector on a cable attached to the front ports. This internal SATA connector is designed to connect to a standard SATA connector on your motherboard. This will allow high speed external hard disk enclosures such as the Antec MX-1 to run at the same speeds as if the hard disk were installed inside the case.

Connecting the Audio Ports (AC'97 and HDA)

There is an Intel® standard 10-pin AC'97 connector and an Intel® 10-pin HDA (High Definition Audio) connector. You can connect either the AC'97 or the HDA connector, but not both at once, to your motherboard depending on the spec of the motherboard.

Pin Assignment for Audio Ports (HDA and AC'97)

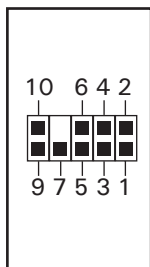

Pin	Signal Names (HDA)	Pin	Signal Names (AC'97)
1	MIC2 L	1	MIC In
2	AGND	2	GND
3	MIC2 R	3	MIC Power
4	AVCC	4	NC
5	FRO-R	5	Line Out (R)
6	MIC2_JD	6	Line Out (R)
7	F_IO_SEN	7	NC
8	Key (no pin)	8	Key (no pin)
9	FRO-L	9	Line Out (L)
10	LINE2_JD	10	Line Out (L)

Flexi Drive Bay System

The Twelve Hundred comes with twelve 5.25" external drive bays at the front of the case. There are three HDD cages preinstalled inside the bottom nine 5.25" bays. Each HDD cage occupies three consecutive 5.25" drive bays and can house three hard disk drives. For maximum flexibility you can mount the HDD cage anywhere within the external drive bays (i.e., you are not limited to the bottom six bays).

Possible Drive Bay combinations include but are not limited to:

- External 3 x 5.25" + internal 9 x HDD – default
- External 6 x 5.25" + internal 6 x HDD – by removing one HDD cage
- External 9 x 5.25" + internal 3 x HDD – by removing two HDD cages
- External 12 x 5.25" by removing all three HDD cages

Note: There is a middle fan bracket pre-installed on one of the HDD cages. Install a 120mm fan to the bracket so the air will be blown into the case, if you decide to use the HDD cage as a cooling duct to cool your graphics card or CPU. However, this will stop you from installing your hard drives into this cage. Remove the middle fan bracket from the HDD cage if you decide to mount your hard drives into this cage.

- External 3 x 5.25" + internal 6 x HDD + cooling duct – by adding the middle fan to one of the HDD cages (see Cooling System)
- External 6 x 5.25" + internal 3 x HDD + cooling duct – by adding the middle fan to one of the HDD cages (see Cooling System)

External 5.25" Device Installation

Note: The HDD cages each occupy three consecutive drive bays, and will block installation of larger devices such as optical drives, so please plan ahead before installing your drives.

1. Remove both side panels per the instructions in Setting Up.
2. Remove the screws fastening the appropriate metal drive bay cover(s) to the sides of the case.
3. Remove the cover(s).
4. If necessary, please remove the HDD cage that is preinstalled in the bay.
5. Slide the 5.25" device into the bay from the front of the case.
6. Fasten the drive using the screws that came with your drive.



7. Connect the appropriate power and interface connectors from the power supply and motherboard to the device. Make sure that you leave some slack in the connections so that you can easily access the fan filters for cleaning.
8. Mount the other devices accordingly.

3.5" Hard Drive Installation

1. Remove both side panels per the instructions in Setting Up.
2. Remove the cage thumbscrews fastening the HDD cage to the frame, and set them carefully aside.
Note: do not confuse the HDD cage thumbscrews with the side panel thumbscrews, as they are different.
3. Slide the HDD cage forward out of the front of the case to remove it from the case.
4. Mount the hard drive in the drive cage and fasten it using the long screws provided in the tool bag.
5. Repeat the same procedure for the other HDD(s) as necessary.
6. Slide the HDD cage back into the case and fasten it with thumbscrews.
7. Connect the appropriate connector(s) from the power supply to the device(s). Make sure to leave some slack in the connections so that you can easily access the fan filters for cleaning.
8. There is a 120mm fan preinstalled into the cage. Connect the 4-pin connector to the power supply.



Note: There is a middle fan bracket pre-installed on one of the HDD cages. Remove the middle fan bracket from the HDD cage if you decide to mount your hard drives into this cage.

External 3.5" Drive Installation

1. Remove both side panels per the instructions in Setting Up.
2. Remove the drive bay cover from the drive bay you wish to install an external 3.5" drive into.
3. Install your external 3.5" device into the adapter.



4. Slide the drive adapter/device assembly into the bay.



5. Screw the adapter to the drive cage.



6. Mount the faceplate and secure it with screws.

Cable Management

There is a cable management compartment between the motherboard and right side panel. You can tuck or route excess cables in this compartment.

1. Remove both side panels
2. Choose the cables you would like to pass through the holes behind the motherboard tray and pull them out of the power supply chamber towards the right side of the case.
3. Use the cable ties provided to hold them in place.
4. Feed the cables back through the insertion point nearest the destination of the cable. Connect the cable and then pull the slack back to the right side of the case.

Cooling System

The Big Boy 200mm fan:

Antec understands your desire for the coolest gaming system. That's why the Twelve Hundred comes with a Big Boy 200mm blue LED fan. This fan has a three-speed switch that lets you choose the speed best suited to your need and a switch to turn on or off the blue LED. The default fan speed setting is Low.



200mm Fan Specifications:

Size: 200 x 30mm three-speed fan
Rated Voltage: 12V DC
Operating Voltage: 10.8V ~ 13.2 V

Speed	Input Current	Air Flow	Static Pressure	Acoustical Noise	Input Power
High 800 RPM	0.3A	3.80 m ³ / min (134 CFM)	0.69mm-H ₂ O (0.027 inch-H ₂ O)	30 dBA	3.6 W
Medium 600 RPM	0.17A	3.07 m ³ / min (108 CFM)	0.40mm-H ₂ O (0.016 inch-H ₂ O)	27 dBA	2.04 W
Low 400 RPM	0.08A	2.34 m ³ / min (82 CFM)	0.2mm-H ₂ O (0.008 inch-H ₂ O)	24 dBA	1.0 W

The Front TriCool™ LED Intake Fans:

The Twelve Hundred comes with three 120 x 25mm TriCool™ blue LED fans which are pre-installed in front of each HDD cage to cool the hard drives. These fans are installed so the air will be blown into the case. Each fan comes with a speed control knob at the front of the faceplate. Turn the knob clockwise to increase the speed. The lowest speed is 1200 rpm while the highest speed is 2000 rpm. See the following chart to get appropriate specification.

The Rear TriCool™ LED Exhaust Fan

There are two 120 x 25mm TriCool™ blue LED fans preinstalled at the rear of the case. The fans are installed so the air will be blown out of the case. Each fan has a three-speed switch that lets you choose between quiet, performance, or maximum cooling. These switches are located at the rear of the case. The default fan speed setting is Low.

120mm Fan Specifications:

Size: 120 x 25mm TriCool™ Fan
Rated Voltage: 12V DC
Operating Voltage: 10.2V ~ 13.8V

Speed	Input Current	Air Flow	Static Pressure	Acoustical Noise	Input Power
High 2000 RPM	0.24A (Max.)	2.24 m ³ / min (79 CFM)	2.54mm-H ₂ O (0.10 inch-H ₂ O)	30 dBA	2.9 W
Medium 1600 RPM	0.2A	1.59 m ³ / min (56 CFM)	1.53mm-H ₂ O (0.06 inch-H ₂ O)	28 dBA	2.4 W
Low 1200 RPM	0.13A	1.1 m ³ / min (39 CFM)	0.92mm-H ₂ O (0.04 inch-H ₂ O)	25 dBA	1.6 W

Note: The minimum voltage to start a 120mm TriCool™ fan is 5V. We recommend that you set the fan speed switch to High if you choose to connect the fan(s) to a fan control device or to the Fan-Only connector found on some Antec power supplies. A fan control device regulates the fan speed by varying the voltage, which may start as low as 4.5V to 5V. Connecting a TriCool™ fan set on Medium or Low to a fan-control device may result in the fan not being able to start because the already lowered voltage from the fan control device will be further reduced by the TriCool™ circuitry below 5V.

The Optional Fans

There are two optional 120mm fan mounts—the side fan (on the left side panel) and the middle fan (at the rear end of the HDD cage). We recommend using Antec 120mm TriCool™ fans and setting the speed to Low. These two fans should be installed so that the air is blowing into the case.

The Side Fan — the side fan opening is there to enhance graphics card cooling. Just snap a fan into the bracket on the side panel so that it blows air into the case.

The Middle Fan — the middle fan is designed to cool the CPU, graphics card or the power supply, depending on which drive bays you install the HDD cage into. You can use the middle fan on any drive cage you do NOT install hard drives in. This design is especially useful in cooling dual graphics card implementations.

1. To remove the black middle fan mount, press in on the clips that secure the bay to its cage.
2. Place a 120mm fan inside the mount and press it into place so that the holes in the fan are secured to the mount.



3. Use the long screws provided to secure the fan to the mount. Do not overtighten.



4. Run the power (and control switch if using a TriCool™ fan) through the cable guide that runs along the side of the fan mount.

5. Clip the assembly onto the back of an empty HDD cage.
6. Connect the fan to the power supply.



The Washable Air Filters

Front Air Filters – There is a filter located behind the faceplate of each HDD cage faceplates. There is a total of three front air filters that come with the case by default.

To clean the filter:

1. Remove the cage thumbscrews fastening the HDD cage to the 5.25" drive bays and set them aside.
2. Slide the HDD cage forward about 1 or 2 inches. You will see the air filter behind the faceplate.

Note: There should be no need to disconnect the power or data connections from the HDD or the fan in order to remove the filters for cleaning. Just make sure that you have left about 2 inches of slack in the cables.

3. Lift the tab upwards to remove the filter.

Side Air Filter – There is a filter located in the side fan bracket. It is located on the inside of the side panel, so you must open the side panel to access it. Remove the filter by sliding it out of the bracket.

From time to time it will be necessary to wash the installed air filters. Not washing the air filter will result in high system temperatures and possible stability problems. We recommend checking the air filter at least once a month initially. The frequency will change depending on environmental conditions and system usage. Users who run their systems 24/7 will have to check their filters more often than those who don't use it every day.

Water Cooling Platform

This case comes with a 5.25" metal plate pre-installed in the 3rd 5.25" drive bay. This plate is designed to allow you to easily mount components of a water cooling kit such as a pump or reservoir. The plate can be mounted in any of the twelve 5.25" drive bays for maximum flexibility.

Note: The plate is not pre-drilled. You will need to drill the appropriate holes to be compatible with your water cooling kit.

Antec, Inc.

47900 Fremont Blvd.
Fremont, CA 94538
USA
tel: 510-770-1200
fax: 510-770-1288

Antec Europe B.V.

Stuttgartstraat 12
3047 AS Rotterdam
The Netherlands
tel: +31 (0) 10 462-2060
fax: +31 (0) 10 437-1752

Customer Support:

US & Canada

1-800-22ANTEC
customersupport@antec.com

Europe

+31 (0) 10 462-2060
europe.techsupport@antec.com

www.antec.com

© Copyright 2008 Antec, Inc. All rights reserved.

All trademarks are the property of their respective owners.

Reproduction in whole or in part without written permission is prohibited.

Printed in China.