
Copyright Notice:

No part of this installation guide may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc. Products and corporate names appearing in this guide may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this guide are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock. ASRock assumes no responsibility for any errors or omissions that may appear in this guide.

With respect to the contents of this guide, ASRock does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall ASRock, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock has been advised of the possibility of such damages arising from any defect or error in the guide or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.


"Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate"

ASRock Website: <http://www.asrock.com>

Published January 2009
Copyright©2009 ASRock INC. All rights reserved.


English

Motherboard Layout

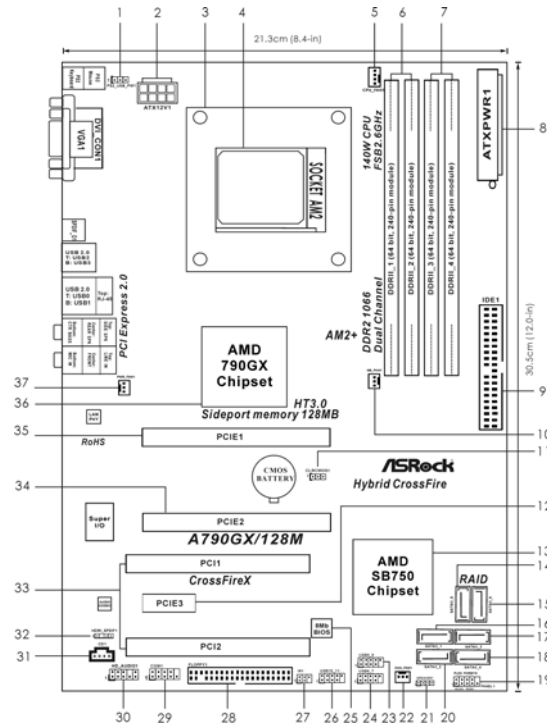

- | | |
|--|---|
| 1 PS2_USB_PW1 Jumper | 21 Chassis Speaker Header (SPEAKER 1, Purple) |
| 2 ATX 12V Power Connector (ATX12V1) | 22 Chassis Fan Connector (CHA_FAN1) |
| 3 CPU Heatsink Retention Module | 23 USB 2.0 Header (USB8_9, Blue) |
| 4 AM2 940-Pin CPU Socket | 24 USB 2.0 Header (USB6_7, Blue) |
| 5 CPU Fan Connector (CPU_FAN1) | 25 SPI Flash Memory (8Mb) |
| 6 2 x 240-pin DDR2 DIMM Slots (Dual Channel A: DDRII_1, DDRII_2; Yellow) | 26 USB 2.0 Header (USB10_11, Blue) |
| 7 2 x 240-pin DDR2 DIMM Slots (Dual Channel B: DDRII_3, DDRII_4; Orange) | 27 Infrared Module Header (IR1) |
| 8 ATX Power Connector (ATXPWR1) | 28 Floppy Connector (FLOPPY1) |
| 9 Primary IDE Connector (IDE1, Blue) | 29 Serial Port Connector (COM1) |
| 10 North Bridge Fan Connector (NB_FAN1) | 30 Front Panel Audio Header (HD_AUDIO1, Lime) |
| 11 Clear CMOS Jumper (CLRCMOS1) | 31 Internal Audio Connector: CD1 (Black) |
| 12 PCI Express x1 Slot (PCIE3; Green) | 32 HDMI_SPDIF Header (HDMI_SPDIF1, Yellow) |
| 13 Southbridge Controller | 33 PCI Slots (PCI1- 2) |
| 14 Fifth SATAII Connector (SATAII_5, Red) | 34 PCI Express 2.0 x16 Slot (PCIE2; Orange) |
| 15 Sixth SATAII Connector (SATAII_6, Red) | 35 PCI Express 2.0 x16 Slot (PCIE1; Green) |
| 16 Primary SATAII Connector (SATAII_1, Red) | 36 Northbridge Controller |
| 17 Third SATAII Connector (SATAII_3, Red) | 37 Power Fan Connector (PWR_FAN1) |
| 18 Fourth SATAII Connector (SATAII_4, Red) | |
| 19 System Panel Header (PANEL1, Orange) | |
| 20 Secondary SATAII Connector (SATAII_2, Red) | |

I/O Panel

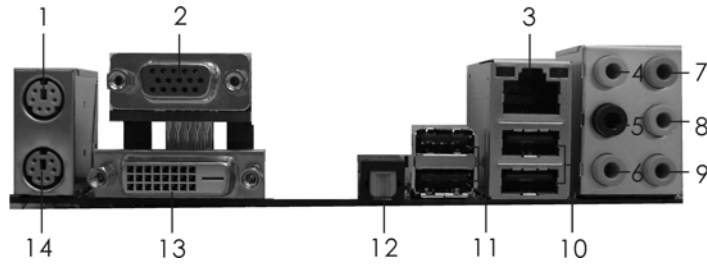

- | | |
|---------------------------|--------------------------------|
| 1 PS/2 Mouse Port (Green) | ** 8 Front Speaker (Lime) |
| 2 VGA/D-Sub Port | 9 Microphone (Pink) |
| * 3 LAN RJ-45 Port | 10 USB 2.0 Ports (USB01) |
| 4 Side Speaker (Gray) | 11 USB 2.0 Ports (USB23) |
| 5 Rear Speaker (Black) | 12 Optical SPDIF Out Port |
| 6 Central / Bass (Orange) | 13 VGA/DVI-D Port |
| 7 Line In (Light Blue) | 14 PS/2 Keyboard Port (Purple) |

* There are two LED next to the LAN port. Please refer to the table below for the LAN port LED indications.

LAN Port LED Indications

Activity/Link LED		SPEED LED		ACT/LINK LED SPEED LED LAN Port
Status	Description	Status	Description	
Off	No Activity	Off	10Mbps connection	
Blinking	Data Activity	Orange	100Mbps connection	
		Green	1Gbps connection	

** If you use 2-channel speaker, please connect the speaker's plug into "Front Speaker Jack".
See the table below for connection details in accordance with the type of speaker you use.

TABLE for Audio Output Connection

Audio Output Channels	Front Speaker (No. 8)	Rear Speaker (No. 5)	Central / Bass (No. 6)	Side Speaker (No. 4)
2	V	--	--	--
4	V	V	--	--
6	V	V	V	--
8	V	V	V	V

To enable Multi-Streaming function, you need to connect a front panel audio cable to the front panel audio header. After restarting your computer, you will find "VIA HD Audio Deck" tool on your system. Please follow below instructions according to the OS you install.

For Windows® XP / XP 64-bit OS:

Please click "VIA HD Audio Deck" icon , and click "Speaker". Then you are allowed to select "2 Channel", "4 Channel", "6 Channel" or "8 Channel". Click "Power" to save your change.

For Windows® Vista™ / Vista™ 64-bit OS:

Please click "VIA HD Audio Deck" icon , and click "Advanced Options" on the left side on the bottom. In "Advanced Options" screen, select "Independent Headphone", and click "OK" to save your change.

If you enable Multi-Streaming function, Side Speaker function will be disabled. You can only choose to enable either Multi-Streaming function or Side Speaker function.

1. Introduction

Thank you for purchasing ASRock **A790GX/128M** motherboard, a reliable motherboard produced under ASRock's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock's commitment to quality and endurance.

In this manual, chapter 1 and 2 contain introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contain the configuration guide to BIOS setup and information of the Support CD.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock website without further notice. You may find the latest VGA cards and CPU support lists on ASRock website as well. ASRock website <http://www.asrock.com>
If you require technical support related to this motherboard, please visit our website for specific information about the model you are using.
www.asrock.com/support/index.asp

1.1 Package Contents

- 1 x ASRock **A790GX/128M** Motherboard
(ATX Form Factor: 12.0-in x 8.4-in, 30.5 cm x 21.3 cm)
- 1 x ASRock **A790GX/128M** Quick Installation Guide
- 2 x ASRock **A790GX/128M** Support CD
- 1 x Ultra ATA 66/100/133 IDE Ribbon Cable (80-conductor)
- 2 x Serial ATA (SATA) Data Cables (Optional)
- 1 x Serial ATA (SATA) HDD Power Cable (Optional)
- 1 x I/O Panel Shield

1.2 Specifications

Platform	- ATX Form Factor: 12.0-in x 8.4-in, 30.5 cm x 21.3 cm - Solid Capacitor for CPU power
CPU	- Support for Socket AM2+ / AM2 processors: AMD Phenom™ FX / Phenom / Athlon 64 FX / Athlon 64 X2 Dual-Core / Athlon X2 Dual-Core / Athlon 64 / Sempron processor - AM3 CPU Ready - Supports CPU up to 140W - Supports AMD OverDrive™ with ACC feature (Advanced Clock Calibration) - AMD LIVE!™ Ready - Supports AMD's Cool 'n' Quiet™ Technology - FSB 2600 MHz (5.2 GT/s) - Supports Untied Overclocking Technology (see CAUTION 1) - Supports Hyper-Transport 3.0 (HT 3.0) Technology
Chipset	- Northbridge: AMD 790GX - Southbridge: AMD SB750
Memory	- Dual Channel DDR2 Memory Technology (see CAUTION 2) - 4 x DDR2 DIMM slots - Support DDR2 1066/800/667/533 non-ECC, un-buffered memory (see CAUTION 3) - Max. capacity of system memory: 16GB (see CAUTION 4)
Expansion Slot	- 2 x PCI Express 2.0 x16 slots (green @ x16 mode, orange @ x4 mode) - 1 x PCI Express 2.0 x1 slot - 2 x PCI slots - Supports ATI™ CrossFireX™ and Hybrid CrossFireX™
Graphics	- Integrated AMD Radeon HD 3300 graphics - DX10 class iGPU, Pixel Shader 4.0 - Max. shared memory 512MB (see CAUTION 5) - Integrated 128MB side port memory for iGPU - Dual VGA Output: support DVI-D and D-Sub ports by independent display controllers - Supports HDCP function with DVI-D port - Supports Full HD 1080p Blu-ray (BD) / HD-DVD playback (see CAUTION 6)
Audio	- 7.1 CH Windows® Vista™ Premium Level HD Audio (VIA® VT1708S Audio Codec)
LAN	- PCIE x1 Gigabit LAN 10/100/1000 Mb/s - Realtek RTL8111DL - Supports Wake-On-LAN

Rear Panel I/O	I/O Panel - 1 x PS/2 Mouse Port - 1 x PS/2 Keyboard Port - 1 x VGA/D-Sub Port - 1 x VGA/DVI-D Port - 1 x Optical SPDIF Out Port - 4 x Ready-to-Use USB 2.0 Ports - 1 x RJ-45 LAN Port with LED (ACT/LINK LED and SPEED LED) - HD Audio Jack: Side Speaker/Rear Speaker/Central/Bass/Line in/Front Speaker/Microphone (see CAUTION 7)
Connector	- 6 x Serial ATAII 3.0Gb/s connectors, support RAID (RAID 0, RAID 1, RAID 5, RAID 10 and JBOD), NCQ, AHCI and "Hot Plug" functions (see CAUTION 8) - 1 x ATA133 IDE connector (supports 2 x IDE devices) - 1 x Floppy connector - 1 x IR header - 1 x COM port header - 1 x HDMI_SPDIF header - CPU/Chassis/NB/Power FAN connector - 24 pin ATX power connector - 8 pin 12V power connector - CD in header - Front panel audio connector - 3 x USB 2.0 headers (support 6 USB 2.0 ports) (see CAUTION 9)
BIOS Feature	- 8Mb AMI BIOS - AMI Legal BIOS - Supports "Plug and Play" - ACPI 1.1 Compliance Wake Up Events - Supports jumperfree - SMBIOS 2.3.1 Support - CPU, DRAM, NB Voltage Multi-adjustment - Supports Smart BIOS
Support CD	- Drivers, Utilities, AntiVirus Software (Trial Version), AMD OverDrive™ Utility, AMD Live! Explorer, AMD Fusion
Unique Feature	- ASRock OC Tuner (see CAUTION 10) - Intelligent Energy Saver (see CAUTION 11) - Instant Boot - Hybrid Booster: - CPU Frequency Stepless Control (see CAUTION 12) - ASRock U-COP (see CAUTION 13) - Boot Failure Guard (B.F.G.)

	- ASRock AM2 Boost: ASRock Patented Technology to boost memory performance up to 12.5% (see CAUTION 14)
Hardware Monitor	- CPU Temperature Sensing - Chassis Temperature Sensing - CPU/Chassis/NB/Power Fan Tachometer - CPU Quiet Fan - Voltage Monitoring: +12V, +5V, +3.3V, Vcore
OS	- Microsoft® Windows® XP / XP Media Center / XP 64-bit / Vista™ / Vista™ 64-bit compliant
Certifications	- FCC, CE, Microsoft® WHQL Certificated

* For detailed product information, please visit our website: <http://www.asrock.com>

WARNING

Please realize that there is a certain risk involved with overclocking, including adjusting the setting in the BIOS, applying Untied Overclocking Technology, or using the third-party overclocking tools. Overclocking may affect your system stability, or even cause damage to the components and devices of your system. It should be done at your own risk and expense. We are not responsible for possible damage caused by overclocking.

CAUTION!

1. This motherboard supports Untied Overclocking Technology. Please read "Untied Overclocking Technology" on page 33 for details.
2. This motherboard supports Dual Channel Memory Technology. Before you implement Dual Channel Memory Technology, make sure to read the installation guide of memory modules on page 14 for proper installation.
3. Whether 1066MHz memory speed is supported depends on the AM2+ CPU you adopt. If you want to adopt DDR2 1066 memory module on this motherboard, please refer to the memory support list on our website for the compatible memory modules.
ASRock website <http://www.asrock.com>
4. Due to the operating system limitation, the actual memory size may be less than 4GB for the reservation for system usage under Windows® XP and Windows® Vista™. For Windows® XP 64-bit and Windows® Vista™ 64-bit with 64-bit CPU, there is no such limitation.
5. The maximum shared memory size is defined by the chipset vendor and is subject to change. Please check AMD website for the latest information.
6. 1080p Blu-ray (BD) / HD-DVD playback support on this motherboard requires the proper hardware configuration. Please refer to page 10 and 11 for the minimum hardware requirement and the passed 1080p Blu-ray (BD) / HD-DVD films in our lab test.

7. For microphone input, this motherboard supports both stereo and mono modes. For audio output, this motherboard supports 2-channel, 4-channel, 6-channel, and 8-channel modes. Please check the table on page 3 for proper connection.
8. Before installing SATAII hard disk to SATAII connector, please read the "SATAII Hard Disk Setup Guide" on page 36 of "User Manual" in the support CD to adjust your SATAII hard disk drive to SATAII mode. You can also connect SATA hard disk to SATAII connector directly.
9. Power Management for USB 2.0 works fine under Microsoft® Windows® Vista™ 64-bit / Vista™ / XP 64-bit / XP SP1 or SP2.
10. It is a user-friendly ASRock overclocking tool which allows you to surveil your system by hardware monitor function and overclock your hardware devices to get the best system performance under Windows® environment. Please visit our website for the operation procedures of ASRock OC Tuner. ASRock website: <http://www.asrock.com>
11. Featuring an advanced proprietary hardware and software design, Intelligent Energy Saver is a revolutionary technology that delivers unparalleled power savings. The voltage regulator can reduce the number of output phases to improve efficiency when the CPU cores are idle. In other words, it is able to provide exceptional power saving and improve power efficiency without sacrificing computing performance. To use Intelligent Energy Saver function, please enable Cool 'n' Quiet option in the BIOS setup in advance. Please visit our website for the operation procedures of Intelligent Energy Saver. ASRock website: <http://www.asrock.com>
12. Although this motherboard offers stepless control, it is not recommended to perform over-clocking. Frequencies other than the recommended CPU bus frequencies may cause the instability of the system or damage the CPU.
13. While CPU overheat is detected, the system will automatically shutdown. Before you resume the system, please check if the CPU fan on the motherboard functions properly and unplug the power cord, then plug it back again. To improve heat dissipation, remember to spray thermal grease between the CPU and the heatsink when you install the PC system.
14. This motherboard supports ASRock AM2 Boost overclocking technology. If you enable this function in the BIOS setup, the memory performance will improve up to 12.5%, but the effect still depends on the AM2 CPU you adopt. Enabling this function will overclock the chipset/CPU reference clock. However, we can not guarantee the system stability for all CPU/DRAM configurations. If your system is unstable after AM2 Boost function is enabled, it may not be applicative to your system. You may choose to disable this function for keeping the stability of your system.

1.3 Minimum Hardware Requirement for 1080p Blu-ray (BD) / HD-DVD Playback Support

1080p Blu-ray (BD) / HD-DVD playback support on this motherboard requires the proper hardware configuration. Please refer to below table for the minimum hardware requirement.

CPU	AMD Sempron Dual Core 2100
VGA	Onboard VGA with DVI-D port
Memory	Dual Channel DDR2 533, 1GB x 2
Suggested OS	Windows® Vista™ or Windows® Vista™ 64

* If you need to use CyberLink PowerDVD Ultra version 7.3, we suggest to disable Hardware Acceleration function for better playback performance and compatibility. After executing CyberLink PowerDVD Ultra program, please follow below steps to disable Hardware Acceleration function.

- A. Right-click the main page of CyberLink PowerDVD Ultra program.
- B. Click "Configuration".
- C. Select "Video".
- D. Click "Enable hardware acceleration (ATI Avivo)" to remove the "V" mark in this item.
- E. Click "OK" to save the change.

* Currently, 1080p Blu-ray (BD) / HD-DVD playback is only supported under Windows® Vista™ / Vista™ 64-bit OS. If you install Windows® XP / XP 64-bit OS, the function of 1080p Blu-ray (BD) / HD-DVD playback is not available, please visit our website for AMD 790GX VGA driver update in the future.

ASRock website <http://www.asrock.com>

1.4 Passed 1080p Blu-ray (BD) / HD-DVD Films in Our Lab Test

DVD Type	Film Name	Format	Producer
Blu-ray DVD	SWORDFISH	VC-1	WB
	UNDERWORLD EVOLUTION	MPEG-2	SONY
	THE LAST STAND	MPEG-4-AVC	FOX
	CASINO ROYALE	MPEG-4-AVC	SONY
	THE LEAGUE OF EXTRAORDINARY GENTLEMEN	MPEG-4-AVC	FOX
HD-DVD	KING KONG	VC-1	UNIVERSAL
	NEW ORLEANS CONCERT	MPEG-2	WEA
	THE INTERPRETER	MPEG-4-AVC	UNIVERSAL

* MPEG-4-AVC mentioned above refers to the same format of H.264.

* Above passed films are tested under below configuration.

Items	Configurations
CPU	AMD Sempron Dual Core 2100
VGA	Onboard VGA with DVI-D port
Memory	Dual Channel DDR2 533, 1GB x 2
OS	Windows® Vista™ or Windows® Vista™ 64
Playback Software	CyberLink PowerDVD Ultra (Version 7.3 or above)
DVD Player	Pioneer BDR-101A / LG GBW-H10N (BD)
	HP HD100 (HD-DVD)

2. Installation

This is an ATX form factor (12.0-in x 8.4-in, 30.5 cm x 21.3 cm) motherboard.

Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.

Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.



Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.

2.1 CPU Installation

- Step 1. Unlock the socket by lifting the lever up to a 90° angle.
- Step 2. Position the CPU directly above the socket such that the CPU corner with the golden triangle matches the socket corner with a small triangle.
- Step 3. Carefully insert the CPU into the socket until it fits in place.



The CPU fits only in one correct orientation. DO NOT force the CPU into the socket to avoid bending of the pins.

- Step 4. When the CPU is in place, press it firmly on the socket while you push down the socket lever to secure the CPU. The lever clicks on the side tab to indicate that it is locked.



STEP 1:
Lift Up The Socket Lever



STEP 2 / STEP 3:
Match The CPU Golden Triangle To The Socket Corner Small Triangle



STEP 4:
Push Down And Lock The Socket Lever

2.2 Installation of CPU Fan and Heatsink

After you install the CPU into this motherboard, it is necessary to install a larger heatsink and cooling fan to dissipate heat. You also need to spray thermal grease between the CPU and the heatsink to improve heat dissipation. Make sure that the CPU and the heatsink are securely fastened and in good contact with each other. Then connect the CPU fan to the CPU FAN connector (CPU_FAN1, see Page 2, No. 5). For proper installation, please kindly refer to the instruction manuals of the CPU fan and the heatsink.

2.3 Installation of Memory Modules (DIMM)

This motherboard provides four 240-pin DDR2 (Double Data Rate 2) DIMM slots, and supports Dual Channel Memory Technology. For dual channel configuration, you always need to install **identical** (the same brand, speed, size and chip-type) DDR2 DIMM pair in the slots of the same color. In other words, you have to install **identical** DDR2 DIMM pair in **Dual Channel A** (DDRII_1 and DDRII_2; Yellow slots; see p.2 No.6) or **identical** DDR2 DIMM pair in **Dual Channel B** (DDRII_3 and DDRII_4; Orange slots; see p.2 No.7), so that Dual Channel Memory Technology can be activated. This motherboard also allows you to install four DDR2 DIMMs for dual channel configuration, and please install **identical** DDR2 DIMMs in all four slots. You may refer to the Dual Channel Memory Configuration Table below.

Dual Channel Memory Configurations

	DDRII_1 (Yellow Slot)	DDRII_2 (Yellow Slot)	DDRII_3 (Orange Slot)	DDRII_4 (Orange Slot)
(1)	Populated	Populated	-	-
(2)	-	-	Populated	Populated
(3)*	Populated	Populated	Populated	Populated

* For the configuration (3), please install **identical** DDR2 DIMMs in all four slots.



1. If you want to install two memory modules, for optimal compatibility and reliability, it is recommended to install them in the slots of the same color. In other words, install them either in the set of yellow slots (DDRII_1 and DDRII_2), or in the set of orange slots (DDRII_3 and DDRII_4).
2. If only one memory module or three memory modules are installed in the DDR2 DIMM slots on this motherboard, it is unable to activate the Dual Channel Memory Technology.
3. If a pair of memory modules is NOT installed in the same Dual Channel, for example, installing a pair of memory modules in DDRII_1 and DDRII_3, it is unable to activate the Dual Channel Memory Technology .
4. It is not allowed to install a DDR memory module into DDR2 slot; otherwise, this motherboard and DIMM may be damaged.
5. If you adopt DDR2 1066 memory modules on this motherboard, it is recommended to install them on DDRII_3 and DDRII_4 slots.

Installing a DIMM



Please make sure to disconnect power supply before adding or removing DIMMs or the system components.

- Step 1. Unlock a DIMM slot by pressing the retaining clips outward.
- Step 2. Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot.



The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation.

- Step 3. Firmly insert the DIMM into the slot until the retaining clips at both ends fully snap back in place and the DIMM is properly seated.

2.4 Expansion Slots (PCI and PCI Express Slots)

There are 2 PCI slots and 3 PCI Express slots on this motherboard.

PCI Slots: PCI slots are used to install expansion cards that have the 32-bit PCI interface.

PCI Express Slots:

PCIE1 (PCI Express x16 slot; Green) is used for PCI Express x16 lane width graphics cards, or used to install PCI Express graphics cards to support CrossFireX™ function.

PCIE2 (PCI Express x16 slot; Orange) is used for PCI Express x1 lane width cards, such as Gigabit LAN card, SATA2 card, etc., or used to install PCI Express graphics cards to support CrossFireX™ function.

PCIE3 (PCI Express x1 slot; Green) is used for PCI Express cards with x1 lane width cards, such as Gigabit LAN card and SATA2 card.



1. If you plan to install only one PCI Express VGA card on this motherboard, please install it on PCIE1 slot (Green).
2. For the information of the compatible CrossFireX™ Mode PCI Express VGA cards and CrossFireX™ setup procedures, please refer to "CrossFireX™ Operation Guide" on page 20.

Installing an expansion card

- Step 1. Before installing the expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before you start the installation.
- Step 2. Remove the system unit cover (if your motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that you intend to use. Keep the screws for later use.
- Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 5. Fasten the card to the chassis with screws.
- Step 6. Replace the system cover.


2.5 Dual Monitor and Surround Display Features

Dual Monitor Feature

This motherboard supports dual monitor feature. With the internal dual VGA output support (DVI-D and D-Sub), you can easily enjoy the benefits of dual monitor feature without installing any add-on VGA card to this motherboard. This motherboard also provides independent display controllers for DVI-D and D-Sub to support dual VGA output so that DVI-D and D-sub can drive same or different display contents.

To enable dual monitor feature, please follow the below steps:

1. Connect DVI-D monitor cable to VGA/DVI-D port on the I/O panel, and connect D-Sub monitor cable to VGA/D-Sub port on the I/O panel.

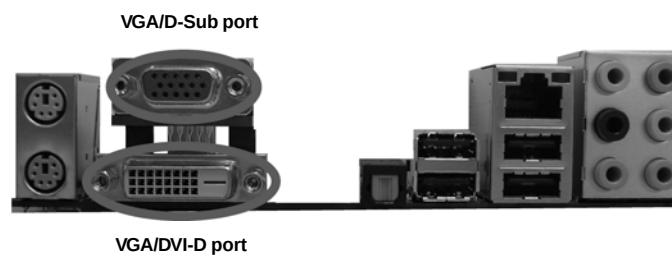

2. If you have installed onboard VGA driver from our support CD to your system already, you can freely enjoy the benefits of dual monitor function after your system boots. If you haven't installed onboard VGA driver yet, please install onboard VGA driver from our support CD to your system and restart your computer. Then you can start to use dual monitor function on this motherboard.



When you playback HDCP-protected video from Blu-ray (BD) or HD-DVD disc, the content will be displayed only in one of the two monitors instead of both monitors.

Surround Display Feature

This motherboard supports surround display upgrade. With the internal VGA output support (DVI-D and D-Sub) and external add-on PCI Express VGA cards, you can easily enjoy the benefits of surround display feature.

Please refer to the following steps to set up a surround display environment:

1. Install the ATI™ PCI Express VGA cards on PCIE1 and PCIE2 slots. Please refer to page 16 for proper expansion card installation procedures for details.
2. Connect DVI-D monitor cable to VGA/DVI-D port on the I/O panel. And connect D-Sub monitor cable to VGA/D-Sub port on the I/O panel. Connect other DVI-D monitor cables and D-Sub monitor cables to the corresponding connectors of the add-on PCI Express VGA cards on PCIE1 and PCIE2 slots.
3. Boot your system. Press <F2> to enter BIOS setup. Enter "Share Memory" option to adjust the memory capability to [32MB], [64MB], [128MB] [256MB] or [512MB] to enable the function of VGA/D-sub. Please make sure that the value you select is less than the total capability of the system memory. If you do not adjust the BIOS setup, the default value of "Share Memory", [Auto], will disable VGA/D-Sub function when the add-on VGA card is inserted to this motherboard.
4. Install the onboard VGA driver and the add-on PCI Express VGA card driver to your system. If you have installed the drivers already, there is no need to install them again.
5. Set up a multi-monitor display.

For Windows® XP / XP 64-bit OS:

Right click the desktop, choose "Properties", and select the "Settings" tab so that you can adjust the parameters of the multi-monitor according to the steps below.

- A. Click the "Identify" button to display a large number on each monitor.
- B. Right-click the display icon in the Display Properties dialog that you wish to be your primary monitor, and then select "Primary". When you use multiple monitors with your card, one monitor will always be Primary, and all additional monitors will be designated as Secondary.
- C. Select the display icon identified by the number 2.
- D. Click "Extend my Windows desktop onto this monitor".
- E. Right-click the display icon and select "Attached", if necessary.
- F. Set the "Screen Resolution" and "Color Quality" as appropriate for the second monitor. Click "Apply" or "OK" to apply these new values.
- G. Repeat steps C through E for the display icon identified by the number one, two, three, four, five and six.

For Windows® Vista™ / Vista™ 64-bit OS:

Right click the desktop, choose "Personalize", and select the "Display Settings" tab so that you can adjust the parameters of the multi-monitor according to the steps below.

A. Click the number "2" icon.

B. Click the items "This is my main monitor" and "Extend the desktop onto this monitor".

C. Click "OK" to save your change.

D. Repeat steps A through C for the display icon identified by the number three, four, five and six.

6. Use Surround Display. Click and drag the display icons to positions representing the physical setup of your monitors that you would like to use. The placement of display icons determines how you move items from one monitor to another.



HDCP Function

HDCP function is supported on this motherboard. To use HDCP function with this motherboard, you need to adopt the monitor that supports HDCP function as well. Therefore, you can enjoy the superior display quality with high-definition HDCP encryption contents. Please refer to below instruction for more details about HDCP function.

What is HDCP?

HDCP stands for High-Bandwidth Digital Content Protection, a specification developed by Intel® for protecting digital entertainment content that uses the DVI interface. HDCP is a copy protection scheme to eliminate the possibility of intercepting digital data midstream between the video source, or transmitter - such as a computer, DVD player or set-top box - and the digital display, or receiver - such as a monitor, television or projector. In other words, HDCP specification is designed to protect the integrity of content as it is being transmitted.

Products compatible with the HDCP scheme such as DVD players, satellite and cable HDTV set-top-boxes, as well as few entertainment PCs requires a secure connection to a compliant display. Due to the increase in manufacturers employing HDCP in their equipment, it is highly recommended that the HDTV or LCD monitor you purchase is compatible.

English

2.6 CrossFireX™ Operation Guide

This motherboard supports CrossFireX™ feature. CrossFireX™ technology offers the most advantageous means available of combining multiple high performance Graphics Processing Units (GPU) in a single PC. Combining a range of different operating modes with intelligent software design and an innovative interconnect mechanism, CrossFireX™ enables the highest possible level of performance and image quality in any 3D application. Currently CrossFireX™ feature is supported with Windows® XP with Service Pack 2 and Vista™ OS. Please check AMD website for ATI™ CrossFireX™ driver updates.



What graphics cards work with CrossFireX™?

A complete CrossFireX™ system requires a CrossFireX™ Ready motherboard, a CrossFireX™ Edition graphics card and a compatible standard Radeon (CrossFireX™ Ready) graphics card from the same series, or two CrossFireX™ Ready cards. This applies to cards from ATI™ or any of its partners. Please refer to below table for CrossFireX™ VGA card support list according to the OS you install.

For Windows® XP

Vendor	Chipset	Model	Driver
ATI	Radeon 4850	Gecube GC-HD485PG3-E3	Catalyst 8.7
	Radeon 3870	POWERCOLOR AX3870 512MD4-H	Catalyst 8.7
	Radeon 3850	Gigabyte GV-RX385256H-B	Catalyst 8.7
	Radeon 3650	POWERCOLOR AX3650 512MD3-XP	Catalyst 8.7
	Radeon HD 2600XT	Gigabyte GV-RX26T256HP-B	Catalyst 8.7
	Radeon HD 2600PRO	MSI RX2600PRO-T2D256EZ	Catalyst 8.7

For Windows® Vista

Vendor	Chipset	Model	Driver
ATI	Radeon 4850	Gecube GC-HD485PG3-E3	Catalyst 8.7
	Radeon 3870	POWERCOLOR AX3870 512MD4-H	Catalyst 8.7
	Radeon 3870	POWERCOLOR AX3870X2 1GBD3-H	Catalyst 8.7
	Radeon 3850	Gigabyte GV-RX385256H-B	Catalyst 8.7
	Radeon 3650	POWERCOLOR AX3650 512MD3-XP	Catalyst 8.7
	Radeon HD 2600XT	Gigabyte GV-RX26T256HP-B	Catalyst 8.7
	Radeon HD 2600PRO	MSI RX2600PRO-T2D256EZ	Catalyst 8.7



1. If a customer incorrectly configures their system they will not see the performance benefits of CrossFireX™. All three CrossFireX™ components, a CrossFireX™ Ready graphics card, a CrossFireX™ Ready motherboard and a CrossFireX™ Edition co-processor graphics card, must be installed correctly to benefit from the CrossFireX™ multi-GPU platform.
2. If you pair a 12-pipe CrossFireX™ Edition card with a 16-pipe card, both cards will operate as 12-pipe cards while in CrossFireX™ mode.

Enjoy the benefit of CrossFireX™



Different CrossFireX™ cards may require different methods to enable CrossFireX™ feature. For other CrossFireX™ cards that ATI™ has released or will release in the future, please refer to ATIX™ graphics card manuals for detailed installation guide.

- Step 1. Install one Radeon graphics card to PCIE1 slot. For the proper installation procedures, please refer to section "Expansion Slots".




- Step 2. Install the other Radeon graphics card to PCIE2 slot. For the proper installation procedures, please refer to section "Expansion Slots".




- Step 3. Connect two Radeon graphics cards by installing two CrossFire™ Bridge on CrossFire™ Bridge Interconnects on the top of Radeon graphics cards. (CrossFire™ Bridge is provided with the graphics card you purchase, not bundled with this motherboard. Please refer to your graphics card vendor for details.)



CrossFire™ Bridge

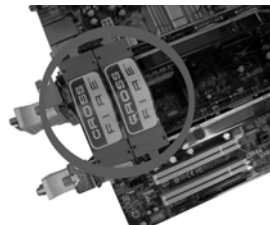

- Step 4. Connect the DVI monitor cable to the DVI connector on the Radeon graphics card on PCIE1 slot. (You may use the DVI to D-Sub adapter to convert the DVI connector to D-Sub interface, and then connect the D-Sub monitor cable to the DVI to D-Sub adapter.)

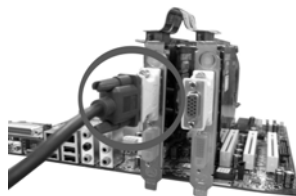

- Step 5. Power on your computer and boot into OS.
Step 6. Remove the ATI™ driver if you have any VGA driver installed in your system.



The Catalyst Uninstaller is an optional download. We recommend using this utility to uninstall any previously installed Catalyst drivers prior to installation. Please check AMD website for ATI™ driver updates.

- Step 7. Install the required drivers to your system.

For Windows® XP OS:

- A. ATI™ recommends Windows® XP Service Pack 2 or higher to be installed (If you have Windows® XP Service Pack 2 or higher installed in your system, there is no need to download it again):
<http://www.microsoft.com/windowsxp/sp2/default.msp>
B. You must have Microsoft .NET Framework installed prior to downloading and installing the CATALYST Control Center. Please check Microsoft website for details.

For Windows® Vista™ OS:


Install the CATALYST Control Center. Please check AMD website for details.

- Step 8. Restart your computer.
Step 9. Install the VGA card drivers to your system, and restart your computer. Then you will find "ATI Catalyst Control Center" on your Windows® taskbar.



ATI Catalyst Control Center

Step 10. Double-click "ATI Catalyst Control Center". Click "View", and select "Advanced View". Click "CrossFire™", and then set the option "Enable CrossFire™" to "Yes".

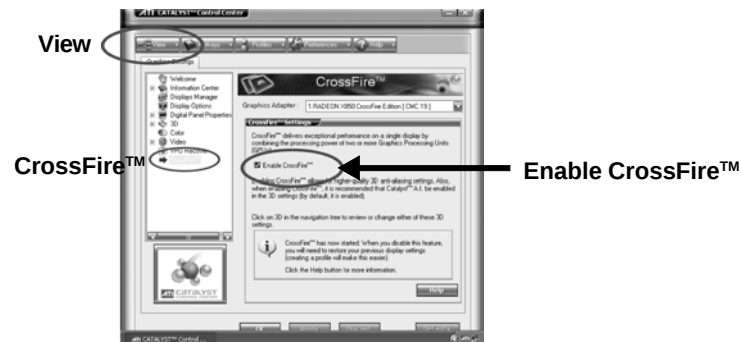

Although you have selected the option "Enable CrossFire™", CrossFire™ function may not work actually. Your computer will automatically reboot. After restarting your computer, please confirm whether the option "Enable CrossFire™" in "ATI Catalyst Control Center" is selected or not; if not, please select it again, and then you are able to enjoy the benefit of CrossFire™ feature.

Step 11. You can freely enjoy the benefit of CrossFireX™ feature.

- * CrossFireX™ appearing here is a registered trademark of ATI™ Technologies Inc., and is used only for identification or explanation and to the owners' benefit, without intent to infringe.
- * For further information of ATI™ CrossFireX™ technology, please check AMD website for updates and details.

2.7 ATI™ Hybrid CrossFireX™ Operation Guide

This motherboard supports ATI™ Hybrid CrossFireX™ feature. ATI™ Hybrid CrossFireX™ brings multi-GPU performance capabilities by enabling an AMD 790GX integrated graphics processor and a discrete graphics processor to operate simultaneously with combined output to a single display for blisteringly-fast frame rates. Currently, ATI™ Hybrid CrossFireX™ Technology is only supported with Windows® Vista™ OS, and is not available with Windows® XP OS. In the future, ATI™ Hybrid CrossFireX™ may be supported with Windows® XP OS. Please visit our website for updated information.



What does an ATI™ Hybrid CrossFireX™ system include?

An ATI™ Hybrid CrossFireX™ system includes an ATI™ Radeon™ 2400 or ATI™ Radeon™ 3450 series graphics processor and a motherboard based on an AMD 790GX integrated chipset, all operating in a Windows® Vista™ environment. Please refer to below PCI Express graphics card support list for ATI™ Hybrid CrossFireX™. For the future update of more compatible PCI Express graphics cards, please visit our website for further information.

Vendor	Chipset	Model	Driver
ATI	RADEON X2400PRO	MSI RX2400 PRO-TD256EH	Catalyst 8.7
	RADEON HD2400XT *	POWERCOLOR HD2400 XT 256MB DDR3	Catalyst 8.7
	RADEON HD3450	POWERCOLOR AX3450 256MD2-S	Catalyst 8.7

* Currently, RADEON HD2400XT series graphics cards are only supported with AMD Phenom CPU. Please visit our website for the future driver update and the latest information.

Enjoy the benefit of ATI™ Hybrid CrossFireX™

- Step 1. Install one compatible PCI Express graphics card to PCIE1 slot (green). For the proper installation procedures, please refer to section "Expansion Slots".
- Step 2. Connect the monitor cable to the correspondent connector on the PCI Express graphics card on PCIE1 slot.
- Step 3. Boot your system. Press <F2> to enter BIOS setup. Enter "Advanced" screen, and enter "Chipset Settings". Then set the option "Surround View" to [Enabled].
- Step 4. Boot into OS. Please remove the ATI™ driver if you have any VGA driver installed in your system.
- Step 5. Install the onboard VGA driver from our support CD to your system for both the onboard VGA and the discrete graphics card.
- Step 6. Restart your computer. Then you will find "ATI Catalyst Control Center" on your Windows® taskbar.



ATI Catalyst Control Center

Step 7. Double-click “ATI Catalyst Control Center”. Click “View”, click “CrossFire™”, and then select the option “Enable CrossFire™”.



Step 8. Click “Yes” to continue.



Step 9. Click “OK” to save your change.




Step 10. Reboot your system. Then you can freely enjoy the benefit of Hybrid™ CrossFireX™ feature.

- * Hybrid CrossFireX™ appearing here is a registered trademark of ATI™ Technologies Inc., and is used only for identification or explanation and to the owners' benefit, without intent to infringe.
- * For further information of ATI™ Hybrid CrossFireX™ technology, please check AMD website for up dates and details.

2.8 Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is "Short". If no jumper cap is placed on pins, the jumper is "Open". The illustration shows a 3-pin jumper whose pin1 and pin2 are "Short" when jumper cap is placed on these 2 pins.

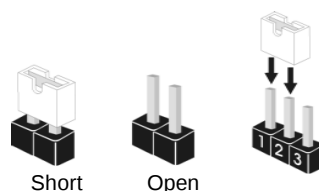

Jumper	Setting	
PS2_USB_PW1 (see p.2, No. 1)	 	Short pin2, pin3 to enable +5VSB (standby) for PS/2 or USB wake up events.
Note: To select +5VSB, it requires 2 Amp and higher standby current provided by power supply.		

Clear CMOS Jumper (CLRCMOS1) (see p.2, No. 11)	 
	Default Clear CMOS

Note: CLRCMOS1 allows you to clear the data in CMOS. The data in CMOS includes system setup information such as system password, date, time, and system setup parameters. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short pin2 and pin3 on CLRCMOS1 for 5 seconds. However, please do not clear the CMOS right after you update the BIOS. If you need to clear the CMOS when you just finish updating the BIOS, you must boot up the system first, and then shut it down before you do the clear-CMOS action.

2.9 Onboard Headers and Connectors

 


Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage of the motherboard!

Floppy Connector

(33-pin FLOPPY1)

(see p.2 No. 28)



Note: Make sure the red-striped side of the cable is plugged into Pin1 side of the connector.

Primary IDE connector (Blue)

(39-pin IDE1, see p.2 No. 9)



connect the blue end
to the motherboard



connect the black end
to the IDE devices

80-conductor ATA 66/100/133 cable

Note: Please refer to the instruction of your IDE device vendor for the details.

Serial ATAII Connectors

(SATAII_1: see p.2, No. 16)


(SATAII_2: see p.2, No. 20)

(SATAII_3: see p.2, No. 17)

(SATAII_4: see p.2, No. 18)

(SATAII_5: see p.2, No. 14)

(SATAII_6: see p.2, No. 15)

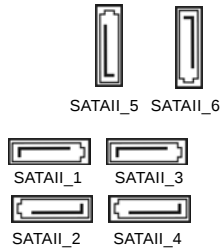

These six Serial ATAII (SATAII) connectors support SATAII or SATA hard disk for internal storage devices. The current SATAII interface allows up to 3.0 Gb/s data transfer rate.

Serial ATA (SATA)

Data Cable

(Optional)




Either end of the SATA data cable can be connected to the SATA / SATAII hard disk or the SATAII connector on this motherboard.

Serial ATA (SATA)

Power Cable

(Optional)

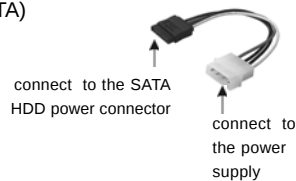


Please connect the black end of SATA power cable to the power connector on each drive. Then connect the white end of SATA power cable to the power connector of the power supply.


English

USB 2.0 Headers


(9-pin USB10_11)
(see p.2 No. 26)

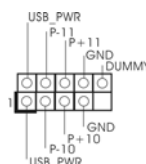

(9-pin USB8_9)
(see p.2 No. 23)

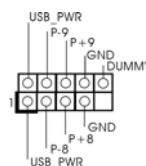


(9-pin USB6_7)
(see p.2 No. 24)

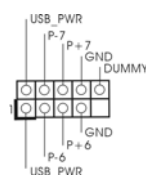

Besides four default USB 2.0 ports on the I/O panel, there are three USB 2.0 headers on this motherboard. Each USB 2.0 header can support two USB 2.0 ports.

Infrared Module Header

 
(5-pin IR1)
(see p.2 No. 27)



This header supports an optional wireless transmitting and receiving infrared module.

Internal Audio Connectors

 
(4-pin CD1)
(CD1: see p.2 No. 31)



This connector allows you to receive stereo audio input from sound sources such as a CD-ROM, DVD-ROM, TV tuner card, or MPEG card.

Front Panel Audio Header

(9-pin HD_AUDIO1)
(see p.2, No. 30)

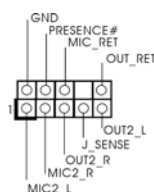

This is an interface for the front panel audio cable that allows convenient connection and control of audio devices.




1. High Definition Audio supports Jack Sensing, but the panel wire on the chassis must support HDA to function correctly. Please follow the instruction in our manual and chassis manual to install your system.
2. If you use AC'97 audio panel, please install it to the front panel audio header as below:
 - A. Connect Mic_IN (MIC) to MIC2_L.
 - B. Connect Audio_R (RIN) to OUT2_R and Audio_L (LIN) to OUT2_L.
 - C. Connect Ground (GND) to Ground (GND).

- D. MIC_RET and OUT_RET are for HD audio panel only. You don't need to connect them for AC'97 audio panel.
- E. Enter BIOS Setup Utility. Enter Advanced Settings, and then select Chipset Configuration. Set the Front Panel Control option from [Auto] to [Enabled].

System Panel Header


(9-pin PANEL1)
(see p.2 No. 21)

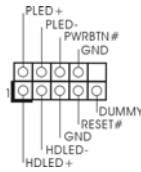

This header accommodates several system front panel functions.

Chassis Speaker Header

 
(4-pin SPEAKER 1)
(see p.2 No. 21)



Please connect the chassis speaker to this header.

Chassis, NB and Power Fan Connectors

 (3-pin CHA_FAN1)
(see p.2 No. 22)



Please connect the fan cables to the fan connectors and match the black wire to the ground pin.

(3-pin NB_FAN1)
(see p.2 No. 10)

 


(3-pin PWR_FAN1)
(see p.2 No. 37)



CPU Fan Connector

(4-pin CPU_FAN1)
(see p.2 No. 5)



Please connect the CPU fan cable to this connector and match the black wire to the ground pin.



Though this motherboard provides 4-Pin CPU fan (Quiet Fan) support, the 3-Pin CPU fan still can work successfully even without the fan speed control function. If you plan to connect the 3-Pin CPU fan to the CPU fan connector on this motherboard, please connect it to Pin 1-3.


Pin 1-3 Connected ←

3-Pin Fan Installation



English

 ATX Power Connector
(24-pin ATXPWR1)
(see p.2 No. 8)



Please connect an ATX power supply to this connector.



Though this motherboard provides 24-pin ATX power connector, it can still work if you adopt a traditional 20-pin ATX power supply. To use the 20-pin ATX power supply, please plug your power supply along with Pin 1 and Pin 13.



20-Pin ATX Power Supply Installation

ATX 12V Power Connector
(8-pin ATX12V1)
(see p.2 No. 2)



Please connect an ATX 12V power supply to this connector.




Though this motherboard provides 8-pin ATX 12V power connector, it can still work if you adopt a traditional 4-pin ATX 12V power supply. To use the 4-pin ATX power supply, please plug your power supply along with Pin 1 and Pin 5.



4-Pin ATX 12V Power Supply Installation

Serial port Header
(9-pin COM1)
(see p.2 No.29)

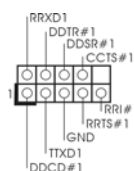


This COM1 header supports a serial port module.

HDMI_SPDIF Header
(3-pin HDMI_SPDIF1)
(see p.2 No. 32)



HDMI_SPDIF header, providing SPDIF audio output to HDMI VGA card, allows the system to connect HDMI Digital TV/projector/LCD devices. Please connect the HDMI_SPDIF connector of HDMI_VGA card to this header.

HDMI_SPDIFCable
(Optional)

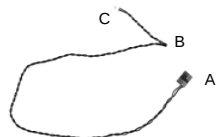


Please connect the black end (A) of HDMI_SPDIF cable to the HDMI_SPDIF header on the motherboard. Then connect the white end (B or C) of HDMI_SPDIF cable to the HDMI_SPDIF connector of HDMI VGA card.

A. black end



 B. white end (2-pin)



C. white end (3-pin)



2.10 Driver Installation Guide

To install the drivers to your system, please insert the support CD to your optical drive first. Then, the drivers compatible to your system can be auto-detected and listed on the support CD driver page. Please follow the order from up to bottom side to install those required drivers. Therefore, the drivers you install can work properly.

2.11 Installing Windows® XP / XP 64-bit / Vista™ / Vista™ 64-bit With RAID Functions

If you want to install Windows® XP / XP 64-bit / Vista™ / Vista™ 64-bit on your SATA / SATAII HDDs with RAID functions, please refer to the document at the following path in the Support CD for detailed procedures:

..\RAID Installation Guide

2.12 Installing Windows® XP / XP 64-bit / Vista™ / Vista™ 64-bit Without RAID Functions

If you want to install Windows® XP, Windows® XP 64-bit, Windows® Vista™ or Windows® Vista™ 64-bit OS on your SATA / SATAII HDDs without RAID functions, please follow below procedures according to the OS you install.

2.12.1 Installing Windows® XP / XP 64-bit Without RAID Functions

If you want to install Windows® XP or Windows® XP 64-bit on your SATA / SATAII HDDs without RAID functions, please follow below steps.

English

Using SATA / SATAII HDDs without NCQ and Hot Plug functions

STEP 1: Set up BIOS.

- A. Enter BIOS SETUP UTILITY → Advanced screen → IDE Configuration.
- B. Set the "SATA Operation Mode" option to [IDE].

STEP 2: Install Windows® XP / Windows® XP 64-bit OS on your system.

2.12.2 Installing Windows® Vista™ / Vista™ 64-bit Without RAID Functions

If you want to install Windows® Vista™ or Windows® Vista™ 64-bit on your SATA / SATAII HDDs without RAID functions, please follow below steps.

Using SATA / SATAII HDDs without NCQ and Hot Plug functions

STEP 1: Set up BIOS.

- A. Enter BIOS SETUP UTILITY → Advanced screen → IDE Configuration.
- B. Set the "SATA Operation Mode" option to [IDE].

STEP 2: Install Windows® Vista™ / Vista™ 64-bit OS on your system.

Using SATA / SATAII HDDs with NCQ and Hot Plug functions

STEP 1: Set Up BIOS.

- A. Enter BIOS SETUP UTILITY → Advanced screen → IDE Configuration.
- B. Set the "SATA Operation Mode" option to [AHCI].

STEP 2: Make a SATA / SATAII driver diskette.

- A. Insert the ASRock Support CD into your optical drive to boot your system.
(There are two ASRock Support CD in the motherboard gift box pack, please choose the one for Windows® Vista™ / Vista™ 64-bit.)
- B. During POST at the beginning of system boot-up, press <F11> key, and then a window for boot devices selection appears. Please select CD-ROM as the boot device.
- C. When you see the message on the screen, "Generate Serial ATA driver diskette [YN]?", press <Y>.
- D. Then you will see these messages,

**Please insert a blank
formatted diskette into floppy
drive A:
press any key to start**

Please insert a floppy diskette into the floppy drive, and press any key.
- E. The system will start to format the floppy diskette and copy SATA / SATAII drivers into the floppy diskette.

STEP 3: Install Windows® Vista™ / Vista™ 64-bit OS on your system.

Insert the Windows® Vista™ / Windows® Vista™ 64-bit optical disk into the optical drive to boot your system, and follow the instruction to install Windows® Vista™ / Windows® Vista™ 64-bit OS on your system. When you see “Where do you want to install Windows?” page, please insert the ASRock Support CD into your optical drive, and click the “Load Driver” button on the left on the bottom to load the AMD AHCI drivers. AMD AHCI drivers are in the following path in our Support CD:

(There are two ASRock Support CD in the motherboard gift box pack, please choose the one for Windows® Vista™ / Vista™ 64-bit.)

..\I386 (For Windows® Vista™ OS)

..\AMD64 (For Windows® Vista™ 64-bit OS)

After that, please insert Windows® Vista™ / Windows® Vista™ 64-bit optical disk into the optical drive again to continue the installation.

2.13 Untied Overclocking Technology

This motherboard supports Untied Overclocking Technology, which means during overclocking, FSB enjoys better margin due to fixed PCI / PCIE buses. Before you enable Untied Overclocking function, please enter “Overclock Mode” option of BIOS setup to set the selection from [Auto] to [CPU, PCIE, Async.]. Therefore, CPU FSB is untied during overclocking, but PCI / PCIE buses are in the fixed mode so that FSB can operate under a more stable overclocking environment.



Please refer to the warning on page 8 for the possible overclocking risk before you apply Untied Overclocking Technology.

3. BIOS Information

The Flash Memory on the motherboard stores BIOS Setup Utility. When you start up the computer, please press <F2> during the Power-On-Self-Test (POST) to enter BIOS Setup utility; otherwise, POST continues with its test routines. If you wish to enter BIOS Setup after POST, please restart the system by pressing <Ctl> + <Alt> + <Delete>, or pressing the reset button on the system chassis. The BIOS Setup program is designed to be user-friendly. It is a menu-driven program, which allows you to scroll through its various sub-menus and to select among the predetermined choices. For the detailed information about BIOS Setup, please refer to the User Manual (PDF file) contained in the Support CD.

4. Software Support CD information

This motherboard supports various Microsoft® Windows® operating systems: XP / XP Media Center / XP 64-bit / Vista™ / Vista™ 64-bit. The Support CD that came with the motherboard contains necessary drivers and useful utilities that will enhance motherboard features. To begin using the Support CD, insert the CD into your CD-ROM drive. It will display the Main Menu automatically if "AUTORUN" is enabled in your computer. If the Main Menu does not appear automatically, locate and double-click on the file "ASSETUP.EXE" from the "BIN" folder in the Support CD to display the menus.

1. 제품소개

ASRock의 A790GX/128M 메인 보드를 구매하여 주신것에 대하여 감사 드립니다. 이 메인보드는 엄격한 품질관리 하에 생산되어진 신뢰성 있는 메인보드입니다. 이 제품은 고품격 디자인과 함께 ASRock의 우수한 품질과 최고의 안정성을 자랑하고 있습니다. 이 빠른 설치안내서에는 마더보드에 대한 설명과 단계별 설치 방법이 실려 있습니다. 마더보드에 대한 보다 자세한 내용은 지원 CD의 사용 설명서에서 확인할 수 있습니다.



메인보드의 사양이나 바이오스가 업데이트 되기 때문에 이 사용자 설명서의 내용은 예고 없이 변경되거나 바뀔 수가 있습니다. 만일을 생각해서 이 사용자 설명서의 어떤 변경이 있으면 ASRock의 웹사이트에서 언제든지 업데이트를 하실 수 있습니다. 웹사이트에서 최신 VGA 카드와 CPU 지원 목록을 확인할 수 있습니다. ASRock의 웹사이트 주소는 <http://www.asrock.com> 입니다. 본 마더보드와 관련하여 기술 지원이 필요한 경우 당사 웹사이트를 방문하여 사용 중인 모델에 대한 특정 정보를 얻으십시오. www.asrock.com/support/index.asp

1.1 패키지 내용

ASRock A790GX/128M 마더보드
(ATX 폼 팩터: 12.0" X 8.4", 30.5 X 21.3 cm)
ASRock A790GX/128M 쿼 설치 가이드
ASRock A790GX/128M 지원 CD
80도체 울트라 ATA 66/100/133 IDE 리본 케이블 1개
시리얼 ATA(SATA) 데이터 케이블 2개(선택 사양)
시리얼 ATA(SATA) HDD 전원 케이블 1개(선택 사양)
I/O 차폐 1개

1.2 설명서

플랫폼	- ATX 폼 팩터: 12.0" X 8.4", 30.5 X 21.3 cm - CPU 전원용 솔리드 콘덴서
CPU	- 지원되는 Socket AM2+/AM2 프로세서: AMD Phenom™FX / Phenom / Athlon 64 FX / Athlon 64 X2 Dual-Core / Athlon X2 Dual-Core / Athlon 64 / Sempron 프로세서 - AM3 CPU가 준비됨 - 최대 140W까지 CPU 지원 - ACC 기능이 있는 AMD OverDrive™ 지원(고급 클럭 보정) - AMD LIVE!™ 작동 가능 - AMD의 Cool 'n' Quiet™ 기술 지원 - FSB 2600 MHz(5.2 GT/s) - 언타이드 오버클러킹(Untied Overclocking) 기술 지원 (주의 1 참조) - 하이퍼 트랜스포트 3.0 (HT 3.0) 기술 지원
칩셋	- 노스브릿지: AMD 790GX - 사우스 브릿지: AMD SB750
메모리	- 듀얼 채널 메모리 기술 지원 (주의 2 참조) - DDR2 DIMM 슬롯 4개 - DDR2 1066/800/667/533 비-ECC, 언버퍼드 메모리를 지원 (주의 3 참조) - 최대 시스템 메모리 용량: 16GB (주의 4 참조)
확장 슬롯	- 2개의 PCI Express 2.0 x16 슬롯 (x16 모드의 경우 녹색, x4 모드의 경우 주황색) - 1 개의 PCI Express 2.0 x1 슬롯 - 2개의 PCI 슬롯 - ATI™ CrossFireX™ 및 Hybrid CrossFireX™ 지원
온보드 VGA	- 통합 AMD Radeon HD 3300 그래픽 - DX10 클래스 iGPU, Pixel Shader 4.0 - 최대 공유 메모리 512MB (주의 5 참조) - iGPU의 경우 128MB의 사이드 포트 통합 메모리 - 더블VGA 수출: DVI-D 와 D-Sub 포트 독립 디스플레이 컨트롤러를 지원 - DVI-D 포트의 HDCP 기능을 지원 - 1080p Blu-ray (BD) / HD-DVD 재생을 지원 (주의 6 참조)
오디오	- 7.1CH Windows® Vista™ Premium 레벨 HD 오디오 (VIA® VT1708S 오디오 코덱)
랜	- PCIe x1 Gigabit LAN 10/100/1000 Mb/s - Realtek RTL8111DL - 웨이크-온-랜 지원

후면판 I/O	I/O Panel - 1개 PS/2 마우스 포트 - 1개 PS/2 키보드 포트 - 1개의 VGA/D-Sub - 1개의 VGA/DVI-D - 1개 광학 SPDIF 출력 포트 - 4개 디폴트 USB 2.0 포트 - 1개 LED (ACT/LINK LED 및 SPEED LED)가 있는 RJ-45 LAN 포트 - 오디오 잭: 측면 스피커 / 후방 스피커 / 중앙 / 저음 / 라인 인 / 전방 스피커 / 마이크 (주의 7 참조)
온보드 헤더 및 커넥터	- 6개의 Serial ATA II 3.0Gb/s 커넥터, RAID (RAID 0, RAID 1, RAID 5, RAID 10 및 JBOD) 기능 지원, NCQ, AHCI 및 “핫플러그” 기능 지원 (주의 8 참조) - ATA133 IDE 커넥터 1개 (최고 2개의 IDE 장치 지원) - 플로피 포트 1개 - 적외선 모듈 헤더 1개 - COM 포트 헤더 1개 - HDMI_SPDIF 헤더 1개 - CPU/새시/NB/전원 팬 커넥터 - 24 핀 ATX 전원 헤더 - 8핀 ATX 12V 파워 콘넥터 - 내부 오디오 콘넥터 - 전면부 오디오 콘넥터 - USB 2.0 헤더 3개 (6개의 추가 USB 2.0 포트를 지원하는 헤더 2개) (주의 9 참조)
BIOS	- 8Mb AMI BIOS - AMI에 따른 바이오스 - “플러그 앤 플레이” 지원 - ACPI 1.1 웨이크-업 이벤트와의 호환 - 점퍼 프리 지원 - 점퍼 프리 지원; SMBIOS 2.3.1 지원 - CPU, DRAM, NB 전압 멀티 조절 - Smart BIOS 지원
지원 CD	- 드라이버, 유틸리티, 안티 바이러스 소프트웨어 (트라이얼 버전), AMD OverDrive™ 유틸리티, AMD Live! Explorer, AMD Fusion
특점 및 특성	- ASRock OC 튜너 (주의 10 참조) - Intelligent Energy Saver (주의 11 참조) - Instant Boot - 하이브리드 부스터: - CPU 주파수의 단계적인 조절 (주의 12 참조) - ASRock U-COP (주의 13 참조)

	- B.F.G..(Boot Failure Guard) - AM2 Boost: 메모리 성능을 최대 12.5%까지 끌어올리는 ASRock 특허 기술 (주의 14 참조)
하드웨어 모니터	- CPU 온도 감지 - 마더보드 온도 감지 - CPU/새시/NB/전원 팬 회전 속도계:사시(케이스) 팬 회전 속도계 - CPU 소음팬 - 전압 감시 기능 : +12V,+5V,+3.3V,Vcore
OS	- 마이크로 소프트 Windows® XP/XP 미디어 센터/XP 64 비트/ Vista™/Vista™64-bit 와 호환
인증서	-FCC,CE,WHQL

* 상세한 제품정보는 당사의 웹사이트를 방문할수있습니다. <http://www.asrock.com>

경 고

오버클로킹에는 BIOS 설정을 조정하거나 Untied Overclocking Technology 를 적용하거나 타업체의 오버클로킹 도구를 사용하는 것을 포함하여 어느 정도의 위험이 따른다는 것을 유념하십시오. 오버클로킹은 시스템 안정성에 영향을 주거나 심지어 시스템의 구성 요소와 장치에 손상을 입힐지도 모릅니다. 오버클로킹은 사용자 스스로 위험과 비용을 감수하고 해야 합니다. 당사는 오버클로킹에 의해 발생할 수 있는 손상에 대해서 책임이 없습니다.

주의!

1. 이 마더보드는 언타이드 오버클러킹 기술을 지원합니다. 자세한 내용은 53 페이지의 “언타이드 오버클러킹 기술”을 읽으십시오.
2. 이 마더보드는 듀얼 채널 메모리 기술을 지원합니다. 듀얼 채널 메모리 기술을 구현하기 전에 올바른 설치를 위하여 42 쪽에 있는 메모리 모듈 설치 안내를 읽으십시오.
3. 1066MHz 메모리 속도의 지원 여부는 채택된 AM2+ CPU 에 따라 결정됩니다. 이 마더보드에 DDR2 1066 메모리 모듈을 채택하려는 경우 당사 웹사이트의 메모리 지원 목록에서 호환 가능한 메모리 모듈을 검색하십시오. ASRock 웹사이트 <http://www.asrock.com>
4. 운영 체제 한계 때문에 Windows® XP 및 Windows® Vista™ 에서 시스템 용도로 예약된 실제 메모리 크기는 4 GB 이하일 수 있습니다. 64 비트 CPU 와 Windows® XP 64 비트 및 Windows® Vista™ 64 비트의 경우 그런 한계가 없습니다.
5. 칩셋의 제조원이 정하였거나 그변화를 한계하게되는 최대 공유 메모리의 크기에 대하여, AMD 의 웹사이트를 방문하여 최신 정보를 받으십시오.
6. 본 마더보드를 지원하는 1080p Blu-ray (BD) /HD-DVD 재생은 적용되는 하드웨어의 구조를 요구합니다.최소 하드웨어에 대한 요구와 당사 실험실에서 패스된 1080p Blu-ray (BD) /HD-DVD 필립에 대하여, 10 페이지와 11 페이지를 참고하십시오.
7. 본 마더보드는 마이크 입력에 대해서 스테레오와 모노 모드 둘 다 지원합니다. 본 마더보드는 오디오 출력에 대해서 2 채널, 4 채널, 6 채널 및 8 채널 모드를 지원합니다. 올바른 연결을 위해 3 쪽에 나온 표를 확인하십시오.

8. SATAII 하드 디스크를 SATAII 커넥터에 연결하기 전에, 지원 CD의 "User Manual" (사용 설명서) 36 페이지에 나와 있는 "SATAII Hard Disk Setup Guide" (SATAII 하드 디스크 설치 설명서)에 따라 SATAII 하드 디스크드라이브를 SATAII 모드로 조정하십시오. 또한 SATA 하드 디스크를 SATAII 커넥터에 직접 연결할 수 있습니다.
9. 마이크로소프트 윈도우 Vista™ 64 비트/Vista™/XP 64 비트/XP SP1; SP2 상에서 USB 2.0의 구동을 위한 전원 관리 모드가 정상적으로.
10. 이것은 사용하기 쉬운 ASRock 오버클러킹 툴이며 당신으로 하여금, 하드웨어 모니터 기능으로 당신의 시스템을 감시하며 하드웨어 시계를 오버클러킹함으로서 Windows® 환경속에서 가장 우수한 시스템 작업을 실현합니다. 당사의 웹사이트를 방문하여 ASRock OC 튜너의 작업 절차를 이해할 수 있습니다.
ASRock 웹사이트: <http://www.asrock.com>
11. 자체 개발한 고급 하드웨어 및 소프트웨어 디자인을 특징을 하는 Intelligent Energy Saver (인텔리전트 에너지 세이버)는 혁신적인 기술로서 절전 효과가 타제품에 비해 월등합니다. CPU 코어가 유휴 상태일 때 전압 조정기가 출력 위상의 수를 줄여 효율을 높여줍니다. 즉, 탁월한 절전 효과와 함께 컴퓨터의 성능을 떨어뜨리지 않으면서 전원 효율을 높일 수 있습니다. Intelligent Energy Saver (인텔리전트 에너지 세이버) 기능을 사용하려면, 먼저 BIOS 셋업에서 콜앤콰이어트 옵션을 활성화하십시오. Intelligent Energy Saver (인텔리전트 에너지 세이버)의 사용법은 당사의 웹 사이트를 참조하십시오.
ASRock 웹 사이트: <http://www.asrock.com>
12. 본 마더보드는 직접 조절 기능을 제공하지만, 오버 클러킹을 하는 것은 권장되지 않습니다. 권장 CPU 버스 주파수가 아닌 주파수를 사용하면 시스템이 불안정해지거나 CPU가 손상될 수 있습니다.
13. 시스템을 다시 시작하기 전에 메인보드 위의 CPU 팬이 정상적으로 동작 또는 장착되어 있는지 확인하여 주십시오. 고온 방지를 위하여 PC 시스템을 설치할 때 CPU와 방열판 사이에 그리스를 발라 주셔야 합니다.
14. 이 마더보드는 AM2 Boost 오버클로킹 기술을 지원합니다. BIOS 설정에서 이 기능을 사용으로 설정하는 경우, 메모리 성능을 12.5%까지 높일 수 있으나 효과는 채택한 AM2 CPU에 따라 다릅니다. 이 기능을 사용으로 설정하면 칩셋/CPU 기준 클럭을 오버클로킹합니다. 그러나 모든 CPU/DRAM 구성에 대해 시스템 안정성을 보증할 수 없습니다. 기능을 사용으로 설정했을 때 시스템이 불안정한 경우, 이 기능이 현재 시스템에 적합치 않을 수 있습니다. 이 경우 이 기능을 사용안함으로 설정하여 시스템의 안정성을 유지하는 것이 좋습니다.

2. 설치하기

이것은 ATX 폼 팩터 (30.5x21.3 cm, 12.0x8.4 in.) 머더보드입니다.

머더보드를 설치하기 전에 머더보드가 새시에 꼭 들어맞는지 새시의 외형을 살펴
십시오.

설치전의 예방조치

메인보드의 셋팅을 변경하거나 메인보드에 부품을 설치하기 전에 아
래의 안전 수칙을 따라 주세요.



구성 요소를 설치하거나 제거하기 전에 전원 스위치를 끄거나 전원공급기에서
전원코드를 분리하십시오. 그렇지 않으면 머더보드, 주변 장치 및 / 또는 구성 요
소에 심각한 손상을 일으킬 수 있습니다.

1. 제품을 만지기 전에 먼저 시스템의 전원 코드를 빼주시기
바랍니다. 실수는 메인보드 주변장치 그리고 부품에 심한
손상을 야기시키는이유가 됩니다.
2. 메인보드의 손상을 피하기 위하여 정전기 방지를 해주시고, 카
펫이나 그와 유사한 장소에서의 취급은 절대 삼가 해 주시기 바
랍니다. 부품들을 취급하기 전에 반드시 정전기 방지용 손목 띠
를 착용하거나 안전하게접지된 장소에서 사용해야 한다는 것
을 잊지 마시기 바랍니다.
3. 날카로운 것으로 부품을 잡거나 IC를 만지지 마세요.
4. 부품들을 제거할 때에도 접지된 방전 패드나 백에 담으시기 바
랍니다.
5. 나사를 나사 구멍에 맞춰 마더보드를 샴시에 고정시킬 때, 나사
를 너무세게 조이지 않도록 하십시오. 너무 세게 조이면 마더보
드에 무리가 갈수 있습니다.

2.1 CPU 설치

- 단계 1. 소켓의 레버를 90도까지 들어 올려 잠금을 풀어주세요.
- 단계 2. 금색 삼각형 표시가 있는 CPU 모서리가 작은 삼각형 표시가 있는 소켓 모서리에 일치하도록 CPU를 소켓 위에 바로 올려놓습니다.
- 단계 3. CPU가 안착 될 때 까지 소켓에 CPU를 조심스럽게 삽입하여 주세요.




주의!

CPU 는 한쪽 방향으로만 맞도록 되어 있습니다. 핀이 휘는 것을 피하기 위하여
여리한 힘을 주어 CPU 를 소켓에 설치하지 마세요.

- 단계 4. CPU가 설치되었다면 CPU를 안전하게 보호하기 위하여 소켓레버를
내려 CPU를 소켓에 단단하게 고정하여 주세요. 레버가 바깥쪽의 탭에
고정되었다면 CPU가 잠긴 것입니다.



단계 1.
소켓 레버를 들어올립니다

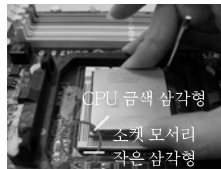

단계 2 / 단계 3.
CPU 금색 삼각형을 소켓
모서리 작은 삼각형과
일치시킵니다



단계 4.
소켓 레버를 밀어서
잠급니다

2.2 CPU 팬과 방열판 설치

본 머더보드에 CPU를 설치한 후에는 더 큰 방열판과 냉각팬을 설치하여 열을 분산시킬 필요가 있습니다. 또한, 열 분산을 향상시킬 수 있도록 CPU와 방열판 사이에 서멀 그리스를 뿌릴 필요가 있습니다. CPU와 방열판이 확실하게 고정되고 서로 잘 접촉되도록 하십시오. 그런 다음 CPU 팬을 CPU FAN 커넥터(CPU_FAN1, 2페이지, 5번 참조)에 연결하십시오. 올바른 설치를 위하여 CPU 팬과 방열판의 사용설명서를 참조하십시오.

2.3 메모리 모듈 설치하기

A790GX/128M 마더보드는 4개의 240핀 DDR2 (더블 데이터 레이트 2) DIMM 슬롯을 제공하고 듀얼 채널 메모리 기술을 지원합니다. 듀얼 채널 구성을 위해서는 반드시 같은 색깔 슬롯에 동일한 DDR2 DIMM 한 쌍(즉 동일한 브랜드, 속도, 크기 및 칩 유형)을 설치해야 합니다. 즉 동일한 DDR2 DIMM 한 쌍을 듀얼 채널 A(DDRII_1과 DDRII_2; 노란색 슬롯; 2쪽의 6번 참조)에 설치하거나 듀얼 채널 B(DDRII_3과 DDRII_4; 주황색 슬롯; 2쪽의 7번 참조)에 설치해야만 듀얼 채널 메모리 기술이 활성화됩니다. 이 마더보드에는 듀얼 채널 구성용으로 4개의 DDR2 DIMM을 설치할 수 있습니다. 듀얼 채널 구성을 위해 이 마더보드에 4개의 DDR2 DIMM을 설치할 수 있습니다. 이 경우 4개의 슬롯에 모두 동일한 DDR2 DIMM을 설치해야 합니다. 아래의 듀얼 채널 구성표를 참조하십시오.

듀얼 채널 메모리 구성

	DDRII_1 (노란색 슬롯)	DDRII_2 (노란색 슬롯)	DDRII_3 (주황색 슬롯)	DDRII_4 (주황색 슬롯)
(1)	장착됨	장착됨	-	-
(2)	-	-	장착됨	장착됨
(3)	장착됨	장착됨	장착됨	장착됨

* 구성(3)의 경우, 4개의 슬롯 모두에 동일한 DDR2 DIMM을 설치하십시오.



1. 최적의 호환성과 안정성을 위해 두 개의 메모리 모듈을 설치하려는 경우 같은 색깔의 슬롯에 설치할 것을 권장합니다. 즉 노란색 슬롯(DDRII_1과 DDRII_2)이나 주황색 슬롯(DDRII_3과 DDRII_4)에 설치하십시오.
2. 이 마더보드의 DDR2 DIMM 슬롯에 메모리 모듈 한 개나 세 개를 설치한 경우 듀얼 채널 메모리 기술은 활성화되지 않습니다.
3. 한 쌍의 메모리 모듈을 동일한 "듀얼 채널"(예를 들어 DDRII_1과 DDRII_3)에 설치하지 않은 경우 듀얼 채널 메모리 기술은 활성화되지 않습니다.
4. DDR을 DDR2 슬롯에 설치하거나 면 안됩니다. 잘못 설치하면 이 마더보드와 DIMM 메모리가 손상될 수 있습니다.
5. 이 메인보드에서 DDR2 1066 메모리 모듈을 채택한 경우, DDRII_3 및 DDRII_4 슬롯에 설치할 것을 권장합니다.

메모리의 설치



DIMM 이나 시스템 구성 요소를 추가 또는 제거하기 전에 전원 공급 장치의 연결을 해제해야 합니다.

단계 1. 메모리 소켓의 양쪽 끝 고정 클립을 가볍게 눌러 잠금을 풀어주세요.

단계 2. 메모리 소켓에 DIMM 모듈을 맞추어 끼워 주세요.



DIMM 은 바른 위치에 정확하게 삽입하여야 합니다. 만약 무리한 힘을 주어 잘못 삽입하면 DIMM 이나 메인보드에 치명적인 불량을 유발 시킵니다.

단계 3. DIMM 모듈을 삽입 시 바깥에 있는 손잡이 두개가 완전히 돌아올 때 까지 (끼워 질 때 까지) 눌러서 정확히 장착 될 수 있도록 하여야 합니다.

2.4 확장 슬롯 (PCI 슬롯, PCI Express 슬롯)

A790GX/128M 메인보드는 2개의 PCI 슬롯을, 및 3 PCI Express 슬롯 제공합니다.

PCI 슬롯: PCI 슬롯은 32bit PCI 인터페이스를 가지는 확장카드들을 설치하여 사용 합니다.

PCIe 슬롯: PCIE1 (PCIE x16 슬롯; 녹색)는 PCI Express x16 레인 쪽 그래픽 카드에 사용되거나, CrossFireX™ 기능을 지원하는 PCI Express 그래픽 카드를 설치하는 데 사용됩니다.

PCIE2 (PCIE x16 슬롯; 주황색)은 Gigabit LAN 카드, SATA2 카드 등과 같은 PCI Express x1 레인 쪽 카드에 사용되거나 됩니다. CrossFireX™ 기능을 지원하는 PCI Express 그래픽 카드를 설치하는 데 사용됩니다.

PCIE3 (PCIE x1 슬롯; 녹색)은 Gigabit LAN 카드, SATA2 카드와 같은 레인 쪽이 x1인 PCI Express 카드에 사용됩니다.



1. 이 메인보드에 PCI Express VGA 카드를 하나만 설치하려는 경우, PCIE1 슬롯(녹색)에 설치하십시오.
2. 호환되는 CrossFireX™ Mode PCI Express VGA 카드와 CrossFireX™ 설치 절차에 대해서는 20 페이지의 "CrossFireX™ 사용설명서"를 참조하십시오.

확장카드 설치하기

- 단계 1. 확장 카드를 설치하시기 전에 반드시 전원을 끄시고 전원 코드를 뽑은 다음 진행해 주시기 바랍니다. 그리고 설치하시기 전에 확장 카드의 사용자 설명서 등을 읽으시고, 카드에 필요한 하드웨어 셋팅을 하여 주시기 바랍니다.
- 단계 2. 사용하고자 하는 슬롯의 브라켓 덮개를 제거하여 주세요. 나사는 나중에 사용을 위하여 보관하여 주세요.
- 단계 3. 카드와 슬롯을 일치시키고 슬롯에 카드가 안착 될 때까지 부드럽게 눌러주세요.
- 단계 4. 케이스와 카드를 나사로 고정하여 주세요

2.5 CrossFireX™ 작동 가이드


이 메인보드는 CrossFireX™ 기능을 지원합니다. CrossFireX™ 기술은 여러 개의 고성능 GPU(Graphics Processing Unit)를 하나의 PC에 결합할 수 있는 방법 중 가장 이점이 많은 방법을 제공합니다. 서로 다른 광범위한 작동 모드를 지능형 소프트웨어 디자인과 혁신적인 상호연결 메커니즘과 결합시킨 CrossFireX™은 3D 애플리케이션에서 가능한 한 가장 높은 레벨의 성능과 이미지 품질을 제공합니다. 현재 CrossFireX™ 기능은 Windows® XP(서비스 팩 2)와 Vista™ OS에서 지원됩니다. ATI™ CrossFireX™ 드라이버 업데이트는 AMD 웹 사이트에서 확인하십시오. 자세한 작동 절차 및 호환 가능한 PCI Express 그래픽 카드는 지원 의 20페이지를 참조하십시오.

2.6 ATI™ Hybrid CrossFireX™ 사용 설명서

이 메인보드는 ATI™ Hybrid CrossFireX™ 기능을 지원합니다. ATI™ Hybrid CrossFireX™는 AMD 790GX 통합 그래픽 프로세서와 독립 그래픽 프로세서를 동시에 하나의 디스플레이에 결합된 출력으로 작동하게 함으로써 고속의 프레임률에서 멀티 GPU 성능이 가능합니다. 현재 ATI™ Hybrid CrossFireX™ 기술은 Windows® Vista™ OS에서만 지원되며, Windows® XP OS에서는 사용할 수 없습니다. 향후 ATI™ Hybrid CrossFireX™은 Windows® XP OS에서도 지원될 예정입니다. 업데이트된 정보는 당사의 웹사이트를 참조하십시오. 자세한 작동 절차 및 호환 가능한 PCI Express 그래픽 카드는 지원의 24페이지를 참조하십시오.

2.7 점퍼 셋팅

그림은 점퍼를 어떻게 셋업 하는지를 보여줍니다. 점퍼 캡이 핀 위에 있을 때, 점퍼는 “쇼트”입니다. 점퍼 캡이 핀 위에 없을 때 점퍼는 “오픈”입니다. 그림은 3개의 핀 중 1-2번 핀이 “쇼트”임을 보여주는 것이며, 점퍼 캡이 이 두 핀 위에 있음을 보여주는 것입니다.

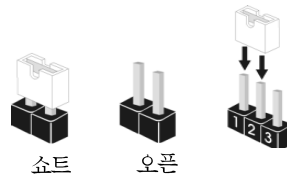

점퍼

세팅

PS2_USB_PW1

(2 페이지, 1 번 항목 참조)



PS/2 또는 USB를 깨어나게 하기 위해서는 2번과 3번 핀을 “쇼트” 하여야 합니다.

참고: +5VSB 선택할 경우 2암페어 정도 높은 전류 공급을 요구합니다.

CMOS 초기화

(CLRCMOS1, 3 핀 점퍼)

(2 페이지, 11 번 항목 참조)



참고: CLRCMOS1은 CMOS의 데이터를 삭제할 수 있게 합니다. CMOS의 데이터는 시스템 암호, 날짜, 시간 및 시스템 설정 매개 변수와 같은 시스템 설정 정보를 포함합니다. 시스템 매개 변수를 삭제하고 기본 설정으로 초기화하려면 컴퓨터를 끄고 전원 코드를 뽑은 후 점퍼 캡을 사용하여 CLRCMOS1의 2번과 3번 핀을 5초간 단락시키십시오. CMOS를 초기화 한 뒤, 반드시 점퍼 캡을 제거하여야 합니다. 바이오스 업데이트를 마친 후 CMOS를 삭제해야 하는 경우 CMOS 삭제 동작 전에 시스템을 먼저 부팅했다가 종료해야 합니다.

 
중
간
참
고

2.8 온보드 헤더 및 커넥터



주의!


이 콘넥터는 점퍼가 아닙니다. 이 콘넥터 위에 점퍼 캡을 사용하지 마세요. 커넥터에 점퍼 캡을 설치하면 마더보드가 영구적으로 손상됩니다!

콘넥터	그림	설명
FDD 콘넥터 (33핀 FLOPPY1) (2 페이지, 28 번 항목 참조)		 빨간색 줄무늬 쪽을 1 번 핀에

참고: 케이블의 빨간색 줄무늬가 있는 쪽을 커넥터의 1번 핀에 맞추어 연결하십시오.

IDE 콘넥터 1 (파란색) (39 핀 IDE1, 2 페이지, 9 번 항목 참조)		
파란색은 메인보드에 연결합니다		검정색은 IDE 디바이스에 연결합니다 80 도체 ATA 66/100/133 케이블

참고: 자세한 사항은 IDE 장치 벤더가 제공하는 사용 설명서를 참조하십시오.

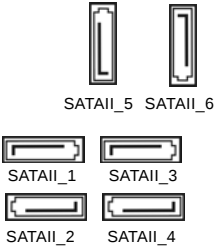시리얼 ATAII 커넥터 (SATAII_1: 2 페이지, 16 번 항목 참조) (SATAII_2: 2 페이지, 20 번 항목 참조) (SATAII_3: 2 페이지, 17 번 항목 참조) (SATAII_4: 2 페이지, 18 번 항목 참조) (SATAII_5: 2 페이지, 14 번 항목 참조) (SATAII_6: 2 페이지, 15 번 항목 참조)		6개의 직렬 ATA (SATAII) 커넥터가 내부 저장 장치용 SATA 또는 SATAII HDD를 지원합니다. 커넥터가 내부 기억 장치용 SATAII 케이블을 지원합니다. 현재의 SATAII 인터페이스는 최고 3.0 Gb/s의 데이터 전송 속도를 지원합니다.
---	---	--


시리얼 ATA(SATA) 데이터 케이블 (선택 사양)		SATA 데이터 케이블의 임의적인 측을 마더보드의 SATA / SATAII 하드 디스크 혹은 SATAII 커넥터에 연결합니다.
-------------------------------------	---	--

시리얼 ATA(SATA)
전원 케이블
(선택 사양)




SATA 전원 케이블의 검은색 끝부분을 드라이브의 전원 커넥터에 연결하십시오. 그 다음에 SATA 전원 케이블의 흰색 끝을 전원 공급장치의 전원 커넥터에 연결합니다.

USB 2.0 헤더
(9핀 USB10_11)
(2 페이지, 26 번 항목 참조)

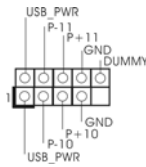


본 머더보드에는 I/O 패널에 있는 4개의 기본 USB 2.0 포트 외에도 USB 2.0 헤더가 3개 있습니다. 각각의 USB 2.0 헤더는 2개의 USB 2.0 포트를 지원할 수 있습니다.


(9 핀 USB8_9)
(2 페이지, 23 번 항목 참조)

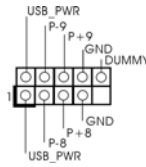

(9 핀 USB6_7)
(2 페이지, 24 번 항목 참조)

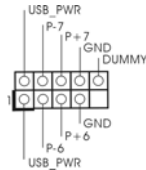


적외선 모듈 헤더
(5핀 IR1)
(2 페이지, 27 번 항목 참조)

 


이 헤더는 선택품목인 무선 적외선 송수신 모듈을 지원합니다.

 내부 오디오 콘넥터
(4핀 CD1)
(CD1: 2 페이지, 31 번 항목 참조)



이 콘넥터는 CD-ROM, DVD-ROM, TV 튜너, 또는 MPEG 카드의 사운드 소스로부터 스테레오 입력을 받기 위한 것입니다.

전면부 오디오 콘넥터
(9핀 HD_AUDIO1)
(2 페이지, 30 번 항목 참조)

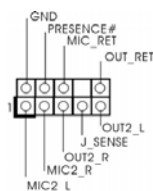

이 콘넥터는 오디오 장치를 편리하게 조절하고 연결할 수 있는 전면 오디오 인터페이스입니다.


5
4
3
2
1



1. High Definition Audio(고음질 오디오)는 잭 센스 기능을 지원하나, 제대로 작동하려면 새시의 패널 와이어가 HAD를 지원해야 합니다. 이 설명서 및 새시 설명서의 지침을 따라 시스템을 설치하십시오.
2. AC' 97 오디오 패널을 사용하는 경우, 이를 아래와 같이 프론트 패널의 오디오헤더에 설치하십시오.
 - A. Mic_IN (MIC)을 MIC2_L에 연결합니다.
 - B. Audio_R (RIN)을 OUT2_R에 연결하고, Audio_L (LIN)을 OUT2_L에 연결합니다.
 - C. Ground (GND)을 Ground (GND)에 연결합니다.
 - D. MIC_RET 및 OUT_RET는 HD 오디오 패널 전용입니다. 이들을 AC' 97 오디오 패널에 연결하지 않아도 됩니다.
 - E. BIOS 설정 유틸리티를 선택합니다. 고급 설정을 선택한 다음, 칩셋 구성을 선택합니다. 프론트 패널 제어를 [자동]에서 [사용]으로 설정합니다.

시스템 콘넥터


(9핀 PANEL1)
(2페이지, 19번 항목 참조)

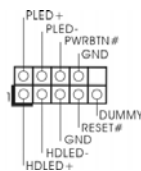

이 콘넥터는 시스템 전면 패널 기능을 지원하기 위한 것입니다.

새시 스피커 헤더

 
(4핀 SPEAKER1)
(2페이지, 21번 항목 참조)



새시 스피커를 이 헤더에 연결하십시오.

새시, NB 및 전원 팬 커넥터

 (3핀 CHA_FAN1)
(2페이지, 22번 항목 참조)




팬 케이블을 팬 커넥터에 연결하고 접지 핀에는 검은색 전선을 연결하십시오.

(3핀 NB_FAN1)
(2페이지, 10번 항목 참조)




 (3핀 PWR_FAN1)
(2페이지, 37번 항목 참조)



CPU 팬 커넥터

 (4핀 CPU_FAN1)
(2페이지, 5번 항목 참조)



CPU 팬 케이블을 이 커넥터에 연결하고 흑색 선을 접지 핀에 맞추십시오.



본 마더보드가 4핀 CPU 팬(저소음 팬) 지원을 제공하지는 않지만 팬 속도 제어 기능없이도 3핀 CPU 팬을 성공적으로 작동할 수 있습니다. 본 마더보드의 CPU 팬 커넥터에 3핀 CPU 팬을 연결하려면 1-3번 핀에 연결하십시오.

 
1-3번 핀에 연결됨 ←

3핀 팬 설치



ATX 전원 헤더

(24핀 ATXPWR1)
(2페이지, 8번 항목 참조)



ATX 전원 공급기를 이 헤더에 연결하십시오.



이 마더보드는 24핀 ATX 전원 커넥터를 제공하지만, 종래의 20핀 ATX 전원 공급장치를 사용해도 작동이 가능합니다. 20핀 ATX 전원 공급장치를 사용하려면, Pin 1과 Pin 13으로 전원 공급장치를 연결하십시오.

20핀 ATX 전원 공급장치 설치



ATX 12V 파워 콘넥터

(8핀 ATX12V1)
(2페이지, 2번 항목 참조)



ATX 12V 플러그가 달린 전원공급장치를 이 커넥터에 연결해야 충분한 전력을 공급할 수 있습니다. 그렇지 않을 경우 전원을 켤 수 없습니다.




비록 본 마더보드는 8-핀 ATX 12V 전원 연결기를 제공하지만 이것은 여전히 작업할 수 있습니다. 만약 전통적인 4-핀 ATX 12V 전원공급을 채용하여 4-핀 ATX 전력을 사용하는 경우, 반드시 전원 공급을 핀 1과 핀 5에 전원공급을 삽입해야 합니다.

4-핀 ATX 12V 전원공급장치



시리얼포트 컨넥터

(9핀 COM1)
(2페이지, 29번 항목 참조)

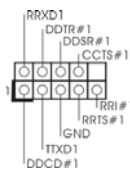

이 콘넥터는 시리얼 포트 모듈을 지원합니다.


하
단
참
조

HDMI_SPDIF 헤더
(3 핀 HDMI_SPDIF1)
(2 페이지, 32 번 항목 참조)



HDMI VGA 카드에 SPDIF 오디오 출력을 제공하는 HDMI_SPDIF 헤더는 시스템이 HDMI 디지털 TV/프로젝터/LCD 장치에 연결할 수 있게 합니다. HDMI VGA 카드의 HDMI_SPDIF 커넥터를 이 헤더에 연결하십시오.

HDMI_SPDIF 케이블
(선택 사양)

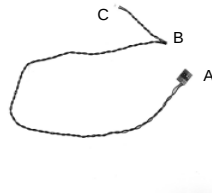

HDMI_SPDIF 케이블의 검은색 끝(A)을 마더보드의 HDMI_SPDIF 헤더에 연결하십시오. 그리고 나서 HDMI_SPDIF 케이블의 흰색 끝(B 또는 C)을 HDMI_SPDIF에 연결하십시오. HDMI VGA 카드의 커넥터.



2.9 드라이버 설치 가이드

시스템에 드라이버를 설치하려면 먼저 광 드라이브에 지원 CD를 넣으십시오. 그러면 시스템에 적합한 드라이버가 자동으로 검색되어 지원 CD 드라이버 페이지에 열거됩니다. 필요한 드라이버를 위에서 아래로 순서대로 설치하십시오. 그렇게 해야만 설치하는 드라이버가 올바르게 작동할 수 있습니다.

2.10 RAID 기능을 포함하여 Windows® XP / XP 64 비트 / Vista™ / Vista™ 64 비트 설치하기

RAID 기능이 있는 SATA / SATAII HDD에 Windows® XP / XP 64 비트 / Vista™ / Vista™ 64 비트 운영 체제를 설치하려는 경우, 자세한 절차는 지원 CD의 다음 경로에 있는 설명서를 참조하십시오.

.. \ RAID Installation Guide

2.11 RAID 기능이 지원되지 않는 Windows® XP / XP 64 비트 / Vista™ / Vista™ 64 비트

설치 SATA / SATAII HDD 및 eSATAII 에 RAID 기능을 지원하지 않는 Windows® XP, Windows® XP 64 비트, Windows® Vista™, Windows® Vista™ 64 비트 를 설치하거나, 설치한 운영 체제에 따라 아래의 절차를 따르십시오.

2.11.1 RAID 기능이 지원되지 않는 Windows® XP / XP 64 비트

설치 SATA / SATAII HDD 에 RAID 기능을 지원하지 않는 Windows® XP / XP 64 비트 를 설치하거나, 다음 단계를 따르십시오.

NCQ 와 핫 플러그 기능이 없는 SATA / SATAII HDD 장치의 사용

단계 1: BIOS 를 설정합니다.

- A. BIOS SETUP UTILITY (BIOS 설정 유틸리티) → Advanced screen (고급 화면) → IDE Configuration (IDE 구성) 을 선택합니다.
- B. "SATA 작동 모드" 옵션을 [IDE]로 설정합니다.

단계 2: 시스템에 Windows® XP / XP 64 비트 OS 를 설치합니다.

2.11.2 RAID 기능이 지원되지 않는 Windows® Vista™ / Vista™ 64 비트

설치 SATA / SATAII HDD 에 RAID 기능을 지원하지 않는 Windows® Vista™ / Vista™ 64 비트 를 설치하거나, 다음 단계를 따르십시오.

NCQ 와 핫 플러그 기능이 없는 SATA / SATAII HDD 장치의 사용

단계 1: BIOS 를 설정합니다.

- A. BIOS SETUP UTILITY (BIOS 설정 유틸리티) → Advanced screen (고급 화면) → IDE Configuration (IDE 구성) 을 선택합니다.
- B. "SATA 작동 모드" 옵션을 [IDE]로 설정합니다.

단계 2: 시스템에 Windows® Vista™ / Vista™ 64 비트 OS 를 설치합니다.

NCQ 와 핫 플러그 기능이 있는 SATA / SATAII HDD 장치의 사용

단계 1: BIOS 를 설정합니다.

- A. BIOS SETUP UTILITY (BIOS 설정 유틸리티) → Advanced screen (고급 화면) → IDE Configuration (IDE 구성) 을 선택합니다.
- B. "SATA 작동 모드" 옵션을 [AHCI]로 설정합니다.

종
료

단계 2: SATA / SATAII 드라이버 디스켓을 만듭니다.

- A. 지원 CD를 광 드라이브에 넣어 시스템을 부팅합니다. (이때 플로피 드라이브에 플로피 디스켓을 넣지 마십시오!) (마더보드의 중송품 박스 팩속에는 ASRock를 지원하는 두개의 CD가 있는데 그중에서 Windows® Vista™ / Vista™ 64-bit. 를 지원하는것을 선택합니다.)
- B. 시스템 부트업 초기 POST 동안 <F11> 키를 누르면 부트 장치를 선택하는 창이 나타납니다. 부트 장치로는 CD-ROM을 선택하십시오.
- C. "Generate Serial ATA driver diskette [Y/N]?" (시리얼 ATA 드라이버 디스켓을 만드시겠습니까? [Y/N])란 메시지가 화면에 나타 나면 <Y>를 누릅니다.
- D. 그러면 다음과 같은 메시지들이 나타납니다.
 Please insert a blank
 formatted diskette into floppy
 drive A:
 press any key to start
 (포맷된 빈 디스켓을 플로피 드라이브 A에 넣고 아무 키나 눌러 시작하십시오.)
 플로피 디스켓을 플로피 드라이브에 넣고 아무 키나 누르십시오.
- E. 시스템이 플로피 디스켓을 포맷하고 SATA / SATAII 드라이버를 디스켓에 복사합니다.

단계 3: 시스템에 Windows® Vista™ / Vista™ 64 비트 OS를 설치합니다.

Windows® Vista™ / Vista™ 64 비트 광디스크를 광드라이브에 삽입하여 시스템을 부트하고 지침에 따라 Windows® Vista™ / Vista™ 64 비트 운영체제를 시스템상에 설치합니다. "Windows를 어디에 설치하시겠습니까?" 페이지가 보이면, ASRock 지원 CD를 광드라이브에 삽입하고 하단 좌측에 있는 "드라이버 적재" 버튼을 클릭하여 AMD AHCI 드라이버를 적재합니다. AMD AHCI 드라이버는 당사 지원 CD에서 다음 경로에 있습니다:

(마더보드의 중송품 박스 팩속에는 ASRock를 지원하는 두개의 CD가 있는데 그중에서 Windows® Vista™ / Vista™ 64-bit.를 지원하는것을 선택합니다.)

..\I386 (Windows® Vista™ 사용자용)

..\AMD64 (Windows® Vista™ 64 비트 사용자용)

그런 다음에, Windows® Vista™ / Vista™ 64 비트 광디스크를 광드라이브에 다시 삽입하여 설치를 계속합니다.

2.12 언타이드 오버클러킹 기술

이 마더보드는 언타이드 오버클러킹 기술을 지원하며, 따라서 오버클러킹 동안 고정 PCI/PCIE 때문에 FSB의 여유가 훨씬 넉넉합니다. 언타이드 오버클러킹 기능을 사용으로 설정하기 전에, BIOS 설정의 “오버클럭 모드” 옵션으로 들어가 선택을 [자동]에서 [CPU, PCIE, Async.]로 변경합니다. 따라서 CPUFSB가 오버클러킹 동안 분리되나, FSB가 보다 안정적인 오버클러킹 환경에서 작동하도록 PCI 및 PCIE 버스는 고정 모드로 유지됩니다.



Untied Overclocking Technology를 적용하기 전에 가능한 오버클로킹 위험에 대해 38 페이지의 경고를 참조하십시오.

3. 시스템 바이오스 정보

메인보드의 플래쉬 메모리에는 바이오스 셋업 유틸리티가 저장되어 있습니다. 컴퓨터를 사용하실 때, “자가진단 테스트”(POST)가 실시되는 동안 <F2>키를 눌러 바이오스 셋업으로 들어가세요; 만일 그렇게 하지 않으면 POST는 테스트 루틴을 계속하여 실행할 것입니다. 만일 POST 이후 바이오스 셋업을 하기 원하신다면, <Ctrl>+<Alt>+<Delete>키를 누르거나, 또는 시스템 본체의 리셋 버튼을 눌러 시스템을 재 시작하여 주시기 바랍니다. 바이오스 셋업 프로그램은 사용하기 편하도록 디자인되어 있습니다. 각 항목은 다양한 서브 메뉴 표가 올라오며 미리 정해진 값 중에서 선택할 수 있도록 되어 있습니다. 바이오스 셋업에 대한 보다 상세한 정보를 원하신다면 보조 CD안의 포함된 사용자 매뉴얼(PDF 파일)을 따라 주시기 바랍니다.

4. 소프트웨어 지원 CD 정보

이 메인보드는 여러 가지 마이크로소프트 윈도우 운영 체계를 지원합니다:
XP/XP 미디어 센터/XP 64 비트/Vista™/Vista™ 64-bit. 메인보드에 필요한 드라이버와 사용자 편의를 위해 제공되는 보조 CD는 메인보드의 기능을 향상시켜 줄 것입니다. 보조 CD를 사용하여 시작하시려면, CD-ROM 드라이브에 CD를 넣어주시기 바랍니다. 만일 고객님의 컴퓨터가 “AUTORUN”이 가능하다면 자동으로 메인 메뉴를 모니터에 디스플레이 시켜 줄 것입니다. 만일 자동으로 메인 메뉴가 나타나지 않는다면, 보조 CD의 디스플레이 메뉴 안에 있는 BIN 폴더
ASSETUP.EXE 파일을 더블 클릭하여 주시기 바랍니다.
(D: \BIN\ASSETUP.EXE, D:는 CD-ROM 드라이브)

1. 主板简介

谢谢你采用了华擎 A790GX/128M 主板, 本主板由华擎严格制造, 质量可靠, 稳定性好, 能够获得卓越的性能。此快速安装指南包括主板介绍和分步安装向导。您可以查看支持光盘里的用户手册了解更详细的资料。



由于主板规格和 BIOS 软件将不断升级, 本手册之相关内容变更恕不另行通知。请留意华擎网站上公布的升级版本。你也可以在华擎网站找到最新的显卡和 CPU 支持表。

华擎网址: <http://www.asrock.com>

如果您需要与此主板有关的技术支持, 请参观我们的网站以了解您使用机种的规格信息。

www.asrock.com/support/index.asp

1.1 包装盒内物品

华擎 A790GX/128M 主板

(ATX 规格: 12.0 英寸 X 8.4 英寸, 30.5 厘米 X 21.3 厘米)

华擎 A790GX/128M 快速安装指南

华擎 A790GX/128M 支持光盘

一条 80-conductor Ultra ATA 66/100/133 IDE 排线

两条 Serial ATA (SATA) 数据线 (选配)

一条 Serial ATA (SATA) 硬盘电源线 (选配)

一块 I/O 挡板

1.2 主板规格

架构	- ATX 规格: 12.0 英寸 X 8.4 英寸, 30.5 厘米 X 21.3 厘米 - CPU 供电电路固态电容
处理器	- 支持 Socket AM2+/AM2 处理器: AMD Phenom™ FX/Phenom/Athlon 64 FX/Athlon 64 X2 Dual-Core/Athlon X2 Dual-Core/Athlon 64/Sempron 处理器 - AM3 CPU Ready - 支持高达 140W 的 CPU - 通过 ACC (高级时钟校准) 功能支持 AMD OverDrive™ 系统调节 - AMD LIVE!™ Ready - 支持 AMD Cool 'n' Quiet™ 冷静技术 - 支持 FSB 2600 MHz (5.2 GT/s) - 支持异步超频技术 (详见警告 1) - 支持 Hyper-Transport 3.0 (HT 3.0) 技术
芯片组	- 北桥: AMD 790GX - 南桥: AMD SB750
系统内存	- 支持双通道内存技术 (见警告 2) - 配备 4 个 DDR2 DIMM 插槽 - 支持 DDR2 1066/800/667/533 non-ECC、un-buffered 内存 (见警告 3) - 系统最高支持 16GB 容量 (见警告 4)
扩展插槽	- 2 x PCI Express 2.0 x16 插槽 (绿色 @ x16 模式, 橘色 @ x4 模式) - 1 x PCI Express 2.0 x1 插槽 - 2 x PCI 插槽 - 支持 ATI™ CrossFireX™ 和 Hybrid CrossFireX™
板载显卡	- 集成 AMD Radeon HD 3300 显卡 - DX10 级别 iGPU, Pixel Shader 4.0 技术 - 最大共享内存 512MB (见警告 5) - 集成 128MB 板载显存支持 iGPU - 双 VGA 输出: 通过独立显示控制器提供 DVI-D 和 D-Sub 接口 - 通过 DVI-D 接口支持 HDCP 功能 - 可播放 1080 线蓝光光盘 (BD) / HD-DVD 光盘 (见警告 6)
音效	- 7.1 声道 Windows® Vista™ Premium 级别高保真音频 (VIA® VT1708S 音频编解码器)
板载 LAN 功能	- PCIE x1 Gigabit LAN 10/100/1000 Mb/s - Realtek RTL8111DL - 支持网路唤醒 (Wake-On-LAN)

Rear Panel I/O (后面板输入/输出接口)	I/O 界面 - 1 个 PS/2 鼠标接口 - 1 个 PS/2 键盘接口 - 1 个 VGA/D-Sub 接口 - 1 个 VGA/DVI-D 接口 - 1 个光纤 SPDIF 输出接口 - 4 个可直接使用的 USB 2.0 接口 - 1 个 RJ-45 局域网接口与 LED 指示灯 (ACT/LINK LED 和 SPEED LED) - 高保真音频插孔: 侧置喇叭 / 后置喇叭 / 中置喇叭 / 低音喇叭 / 音频输入 / 前置喇叭 / 麦克风 (见警告 7)
连接头	- 6 x SATAII 3.0Gb/s 连接头, 支持 RAID (RAID 0, RAID 1, RAID 5, RAID 10 和 JBOD), NCQ, AHCI 和 “热插拔” 功能 (详见警告 8) - 1 x ATA133 IDE 插座 (最高支持 2 个 IDE 驱动器) - 1 x 软驱接口 - 1 x 红外线模块接头 - 1 X 串行接口连接器 - 1 x HDMI_SPDIF 接头 - CPU/ 机箱 / 北桥芯片 / 电源风扇接头 - 24 针 ATX 电源接头 - 8 针 12V 电源接头 - 内置音频接头 - 前置音频面板接头 - 3 x USB 2.0 接口 (可支持 6 个额外的 USB 2.0 接口) (详见警告 9)
BIOS	- 8Mb AMI BIOS - 采用 AMI BIOS - 支持即插即用 (Plug and Play, PnP) - ACPI 1.1 电源管理 - 支持唤醒功能 - 支持 jumperfree 免跳线模式 - 支持 SMBIOS 2.3.1 - CPU、DRAM (内存)、NB (北桥芯片) 电压多功能调节器 - 支持智能 BIOS
支持光盘	- 驱动程序, 工具软件, 杀毒软件 (测试版本), AMD OverDrive™ 工具, AMD Live! Explorer, AMD Fusion
独家功能	- 华擎超频调节器 (详见警告 10) - 智能节能器 (Intelligent Energy Saver) (见警告 11) - 即时开机功能

	- Hybrid Booster(安心超频技术): - 支持CPU 无级频率调控 (见警告 12) - ASRock U-COP (见警告 13) - Boot Failure Guard (B.F.G.,启动失败恢复技术) - ASRock AM2 Boost: 华擎专利技术,提供内存性能 12.5% (见警告 14)
硬件监控器	- CPU 温度侦测 - 主板温度侦测 - CPU/ 机箱 / 北桥芯片 / 电源风扇转速计 - CPU 静音风扇 - 电压范围: +12V, +5V, +3.3V, 核心电压
操作系统	- Microsoft® Windows® XP/XP 多媒体中心 /XP 64 位元 / Vista™/Vista™ 64 位元适用于此主板
认证	- FCC, CE, WHQL

* 请参阅华擎网站了解详细的产品信息: <http://www.asrock.com>

警告

请了解超频具有不可避免的风险,这些超频包括调节 BIOS 设置、运用异步超频技术或使用第三方超频工具。超频可能会影响您的系统稳定性,甚至会导致系统组件和设备的损坏。这种风险和代价须由您自己承担,我们对超频可能导致的损坏不承担责任。

警告!

1. 这款主板支持异步超频技术。请阅读第 70 页的“Untied Overclocking Technology”(自由超频技术)了解详情。
2. 这款主板支持双通道内存技术。在您实现双通道内存技术之前,为能正确安装,请确认您已经阅读了第 60 页的内存模组安装指南。
3. 1066MHz 内存频率是否支持在于您使用的 AM2+ CPU。如果您想在这款主板上使用 DDR2 1066 内存条,请查阅我们网站的内存支持列表了解兼容的内存。华擎网站 <http://www.asrock.com>
4. 由于操作系统的限制,在 Windows® XP 和 Windows® Vista™ 下,供系统使用的实际内存容量可能小于 4GB。对于 Windows® XP 64 位元和 Windows® Vista™ 64 位元搭配 64 位元 CPU 来说,不会存在这样的限制。
5. 最大共享内存大小由芯片组厂商定义并且可以更改。请查阅 AMD 网站了解最新资讯。
6. 在这款主板上播放 1080 线蓝光光盘(BD)/HD-DVD 光盘需要适当的硬件配置。请查阅第 10 页和第 11 页了解最低硬件要求和通过我们实验室测试的 1080 线蓝光光盘(BD)/HD-DVD 光盘电影。
7. 在麦克风输入方面,这款主板支持立体声和单声道这两种模式。在音频输出方面,这款主板支持 2 声道、4 声道、6 声道以及 8 声道模式。请查阅第 3 页的表格了解正确的连接方式。
8. 在将 SATA II 硬盘连接到 SATA II 接口之前,请阅读 CD 光盘中的“User Manual”(用户手册,英文版)第 36 页的“SATA II Hard Disk Setup Guide”(SATA II 硬盘安装指南)调整您的 SATA II 硬盘驱动器为 SATA II 模式。您也可以直接将 SATA 硬盘连接到 SATA II 接口。

9. USB2.0 电源管理在 Windows® Vista™ 64 位元 / Vista™ / XP 64 位元 / XP SP1 或 SP2 系统下可正常工作。
10. 这是一款具有友好使用界面的华擎超频工具, 让您通过硬件监控功能监控您的系统, 帮助您在 Windows® 环境下对硬件运行超频以获得最佳的系统性能。请访问我们的网站了解华擎超频调节器的使用方法。
华擎网站: <http://www.asrock.com>
11. 智能节能器 (Intelligent Energy Saver) 采用先进的软硬件专利设计, 这项革新技术带来极佳的节能效果。当 CPU 核心闲置时, 电压调节器可以简小输出电压的相数, 有助于提升能源效率。换句话说, 它可以在不牺牲性能的前提下, 让系统更省电, 并提高能源效率。为了使用智能节能器 (Intelligent Energy Saver) 的功能, 请在 BIOS 的高级设置里启用 Cool 'n' Quiet 选项。请访问我们的网站了解智能节能器 (Intelligent Energy Saver) 的使用方法。华擎网站: <http://www.asrock.com>
12. 尽管本主板提供无级频率调控, 但不推荐用户超频使用。不同于标准 CPU 总线频率的非标准频率可能会使系统不稳定, 甚至会损害 CPU 和主板。主板的处理器主频由跳线装置决定。
13. 当检测到 CPU 过热问题时, 系统会自动关机。在您重新启动系统之前, 请检查主板上的 CPU 风扇是否正常运转并拔出电源线, 然后再将它插回。为了提高散热性, 在安装 PC 系统时请在 CPU 和散热器之间涂一层导热胶。
14. 这款主板支持 ASRock AM2 Boost 超频技术。如果您在 BIOS 设置程序里启用该功能, 内存性能将提升 12.5%, 但是实际效果还与您所使用的 AM2 CPU 有关。启用这项功能将对芯片组 / CPU 进行超频。但是, 我们无法保证所有 CPU / 内存配置的系统稳定性。如果您启用 AM2 Boost 功能之后, 系统变的不稳定, 表明它可能不适合您的系统。您可以选择关闭该功能, 以保证系统的稳定性。

2. 主板安装

这是一款 ATX 规格的主板 (12.0 英寸 X 8.4 英寸, 30.5 厘米 X 21.3 厘米)。在安装主板之前, 了解您的机箱配置以确保主板的正确安装。

安全防范

安装主板时, 注意以下安全防范:



在您安装或者拆卸任何组件之前, 确保已关闭电源或者已拔掉电源线。错误的做法可能会导致主板、外围设备或组件严重受损。

- 1、设备要有良好的接地线, 避免静电损害, 进行安装前, 请先断开电源, 否则会损坏主板。
- 2、为了避免主板上的组件受到静电损害, 绝不要把主板径直放到地毯等类似的地方, 也要记住在接触主板前使用一个静电手腕带或接触金属。
- 3、通过边缘拿住整块主板安装, 切勿接触芯片。
- 4、在证明放掉静电后, 方可进行安装。
- 5、当把螺丝钉放入螺丝孔用来将主板固定到机箱上时, 请不要过度拧紧螺丝! 这样做很可能会损坏主板。

2.1 CPU 安装

步骤 1：移动固定杆 90° 角解除插槽锁。


步骤 2：将 CPU 直接放置在 CPU 插槽上方，让有金三角标记的 CPU 一角与插槽上有小三角标记的一角对齐。

步骤 3：谨慎地将处理器插入插槽直到它安装到恰当的位置。



CPU 安装都只有一个正确的方向, 为了避免损坏针脚, 请不要强迫将 CPU 插入插槽中。

步骤 4：处理器放置妥当后，按紧它并推下插槽固定杆来稳固处理器。推动固定杆到侧面的突起部分时会发出“答”的声响表明它被锁住了。

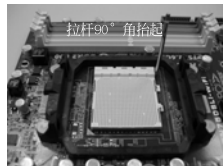

步骤 1：
抬起插座拉杆



步骤 2 / 步骤 3：
将 CPU 的金三角对准插座
边角上的小三角



步骤 4：
下推并锁住插座拉杆

2.2 安装 CPU 风扇和散热片

在主板上安装 CPU 之后，必须安装大尺寸散热片和散热风扇。同时，您还需要在 CPU 和散热片之间涂抹散热硅脂改进散热效果。确保 CPU 和散热片彼此接触稳固良好。接著将 CPU 风扇连接到 CPU_FAN 接口 (CPU_FAN，参看第 2 页 No. 5)。为了正确安装，请仔细查阅 CPU 风扇和散热器的使用说明。

2.3 内存安装

此主板提供四组 240-针 DDR2 (Double Data Rate 2, 双倍数据传输速率) DIMM 内存插槽, 并且支援双通道内存技术。为了配置双通道, 您必须在相同颜色的插槽安装一对同样的 (相同的牌子、速度、容量以及芯片类型) DDR2 DIMM 内存条。换句话说, 您要在双通道 A 安装同样的 DDR2 DIMM 内存条 (DDRII_1 和 DDRII_2; 黄色插槽; 参见 p.2 No.6) 或者在双通道 B 安装同样的 DDR2 DIMM 内存条 (DDRII_3 和 DDRII_4; 橘色插槽; 参见 p.2 No.7), 这样双通道内存技术就会被激活了。这款主板也允许您为了配置双通道功能安装四条 DDR2 DIMM 内存条。这种情况下, 您需要在所有的四组插槽上安装同样的 DDR2 DIMM 内存条。请查阅下面的双通道内存配置表。

双通道内存配置

	DDRII_1 (黄色插槽)	DDRII_2 (黄色插槽)	DDRII_3 (橘色插槽)	DDRII_4 (橘色插槽)
(1)	板上组装	板上组装	-	-
(2)	-	-	板上组装	板上组装
(3)	板上组装	板上组装	板上组装	板上组装

* 为了这个配置 (3), 请在这 4 个插槽上安装同样的 DDR2 内存。



1. 如果您打算安装两根内存条, 为了最佳的兼容性和可靠性, 我们推荐将它们安装到相同颜色的插槽上。换言之, 将它们安装到 DDRII_1 和 DDRII_2 或 DDRII_3 和 DDRII_4。
2. 如果仅仅在这款主板的 DDR2 DIMM 内存插槽上安装单条内存模组或者三条内存模组, 这将无法激活双通道内存技术。
3. 如果一对内存模组并未安装在相同的“双通道”上, 例如将一对内存模组安装在了 DDRII_1 和 DDRII_3, 这将不能激活双通道内存技术。
4. 不允许将 DDR 内存条插入 DDR2 插槽, 否则主板和 DIMM 有可能损坏。
5. 如果您在这款主板上使用 DDR2 1066 内存条, 推荐将内存条安装到 DDRII_3 和 DDRII_4 插槽。

安装步骤：



请确保在添加或移走 DIMM 内存或系统部件之前切断电源适配器。

- 1、 DIMM 插槽两端的起拔器向外扳开。
- 2、 将每个 DIMM 插槽的凹口与 DIMM 内存上凸出部分对应，使凹口与凸出部分吻合，内存即能正确安装。



DIMM 内存只能以正确的方向安装。如果你以错误的方向强行将 DIMM 内存插入插槽，那将会导致主板和 DIMM 内存的永久性损坏。

- 3、 将 DIMM 内存平稳地插入插槽直至两端卡子迅速而充分地归位以及 DIMM 内存完全就位。

2.4 扩展插槽 (PCI 插槽以及 PCI Express 插槽)

此主板配备 2 个 PCI 插槽和 3 个 PCI Express 插槽。

PCI 插槽： 此插槽可用于安插 32 位的扩展 PCI 卡。

PCIe 插槽： PCIe1 (PCIe x16 插槽；绿色) 支持 PCI Express x16 显卡，或者用于安装 PCI Express 显卡以支持 CrossFireX™ 交叉火力功能。

PCIe2 (PCIe x16 插槽；橘色) 用来安装 PCIe x1 显卡，例如千兆网卡，SATA2 卡等，或者用于安装 PCI Express 显卡以支持 CrossFireX™ 交叉火力功能。

PCIe3 (PCIe x1 插槽；绿色) 用来安装 PCIe x1 显卡，例如千兆网卡，SATA2 卡等。



1. 如果您仅计划在此主板上安装一张 PCI Express 显卡，请将它安装在 PCIe1 插槽 (绿色)。
2. 想要了解 CrossFireX™ 交叉火力模式 PCI Express 显卡的兼容信息和 CrossFireX™ 交叉火力设置方法，请查阅第 20 页的“CrossFireX™ Operation Guide”(CrossFire™ 交叉火力操作指南)。

安装步骤：

- 步骤 1、 在安装扩展卡之前，请确认已经关闭电源或拔掉电源线。在你安装之前，请阅读扩展卡的说明并完成必需的硬件设置。
- 步骤 2、 移动机箱挡板，以便使用扩展槽。
- 步骤 3、 选择一个扩展槽安装扩展卡，装进机箱并用螺丝固定。
- 步骤 4、 确定接触正确，没有单边翘起的现象。

2.5 交火技术(CrossFireX™) 操作指南


这款主板支持交火技术(CrossFireX™)。交火技术(CrossFireX™)可以在一台电脑上提供最有利的的方法来整合多个高性能显示处理器(GPU)。通过智能软件设计和创新的互连装置整合不同的运行模式,交火技术(CrossFireX™)使任何 3D 应用程序的画质和性能尽可能达到最高的水准。目前交火技术(CrossFireX™)仅支持 Windows® XP (Service Pack 2)和 Windows® Vista™ 操作系统,请检查 AMD 网站了解 ATI™ 交火技术(CrossFireX™)驱动程序更新情况。请参阅第 20 页了解详细的安装步骤和兼容的 PCI Express 显卡信息。

2.6 ATI™ Hybrid CrossFireX™ 混合交叉火力功能操作指南

这款主板支持 ATI™ Hybrid CrossFireX™ 混合交叉火力功能。ATI™ Hybrid CrossFireX™ 混合交叉火力功能提供多 GPU 性能,通过同时运行 AMD 790GX 集成显卡和外接独立显卡,并整合成单显示器输出,达到极高显示数。目前,ATI™ Hybrid CrossFireX™ 混合交叉火力技术仅支持 Windows® Vista™ 操作系统,不支持 Windows® XP 操作系统。将来 ATI™ Hybrid CrossFireX™ 混合交叉火力技术可能会支持 Windows® XP 操作系统,请随时访问我们的网站了解最新的消息。请参阅第 24 页了解详细的安装步骤和兼容的 PCI Express 显卡信息。

2.7 跳线设置

插图所示的就是设置跳线的方法。当跳线帽放置在针脚上时，这个跳线就是“短接”。如果针脚上没有放置跳线帽，这个跳线就是“开路”。插图显示了一个3针脚的跳线，当跳线帽放置在针脚1和针脚2之间时就是“短接”。

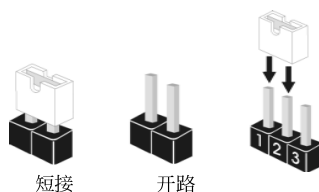

接脚	设定
PS2_USB_PW1 (见第2页第1项)	短接 pin2 和 pin3，就可以设置+5VSB(待机)，使 PS/2 或 USB 能唤醒系统。

注意：选择+5VSB，电源必须能提供+2 AMP 或更高的待机电流。

清除 CMOS (CLR_CMOS1, 3针脚跳线) (见第2页第11项)	默认设置 清除 CMOS
---	--------------------------

 
注意：CLR_CMOS1 允许您清除 CMOS 里的资料。在 CMOS 里的资料包括系统设置资讯，例如系统密码，日期，时间及系统设置参数。为了清除并重置系统参数到默认设置，请关闭电脑并拔掉电源线，然后用跳线帽短接 CLR_CMOS1 上的 pin2 和 pin3 五秒钟。如果您需要再完成 BIOS 刷新时清除 CMOS，您必须先启动系统，然后在您进行 CMOS 清除操作之前关闭系统。

2.8 板载接头和接口



板载接头和接口不是跳线。切勿将跳线帽放置在这些接头和接口上。将跳线帽放置在接头和接口上将会导致主板的永久性损坏！

软驱接头
(33针 FLOPPY1)
(见第2页第28项)



注意：请确保数据线标红色斑纹的一边插入连接器第1针脚(Pin1)的位置。

主 IDE 接头(蓝色)
(39针 IDE1, 见第2页第9项)




蓝色端接到主板上 黑色端接到硬盘驱动器上

80 针的 ATA 66/100/133 排线

注意：请查阅您的 IDE 驱动器供应商提供的说明书了解详细资料。

Serial ATAII 接口

(SATAII_1:
见第 2 页第 16 项)
(SATAII_2:
见第 2 页第 20 项)
(SATAII_3:
见第 2 页第 17 项)
(SATAII_4:
见第 2 页第 18 项)
(SATAII_5:
见第 2 页第 14 项)
(SATAII_6:
见第 2 页第 15 项)

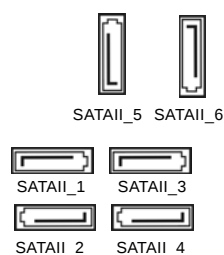

这里有六组 Serial ATAII (SATAII) 接口支持 Serial (SATA) 数据线作为内部储存设置。目前 SATAII 界面理论上可提供高达 3.0Gb/s 的数据传输速率。

Serial ATA (SATA) 数据线 (选配)



SATA 数据线的任意一端均可连接 SATA/SATAII 硬盘或者主板上的 SATAII 接口。


Serial ATA (SATA) 电源线 (选配)




请将 SATA 电源线黑色的一端连接到 SATA 驱动器的电源接口。然后将 SATA 电源线白色的一端连接到电源适配器的电源接口。

USB 2.0 扩展接头


(9 针 USB10_11)
(见第 2 页第 26 项)

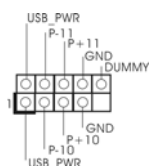

(9 针 USB8_9)
(见第 2 页第 23 项)

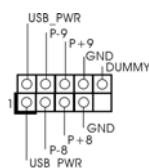

(9 针 USB6_7)
(见第 2 页第 24 项)

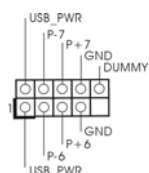


除了位于 I/O 面板的四个默认 USB 2.0 接口之外，这款主板有三组 USB 2.0 接针。这组 USB 2.0 接针可以支持两个 USB 2.0 接口。

红外线模块接头

(5 针 IR1)

 (见第 2 页第 27 项)



这个接头支持一个选配的无线发送和接受红外线的模块。

内置的音频接头

(4 针 CD1)

(见第 2 页第 31 项)




可以通过 CD-ROM, DVD-ROM, TV 调谐器或 MPEG 卡接收音频输入。

前置音频面板接头

(9 针 HD_AUDIO1)

(见第 2 页第 30 项)

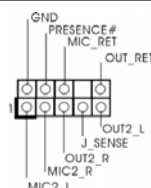

可以方便连接音频设备。




1. 高保真音频 (High Definition Audio, HDA) 支持智能音频接口检测功能 (Jack Sensing), 但是机箱面板的连线必须支持 HDA 才能正常使用。请按我们提供的手册和机箱手册上的使用说明安装您的系统。
2. 如果您使用 AC' 97 音频面板, 请按照下面的步骤将它安装到前面板音频接口:
 - A. 将 Mic_IN (MIC) 连接到 MIC2_L。
 - B. 将 Audio_R (RIN) 连接到 OUT2_R, 将 Audio_L (LIN) 连接到 OUT2_L。
 - C. 将 Ground (GND) 连接到 Ground (GND)。
 - D. MIC_RET 和 OUT_RET 仅用于 HD 音频面板。您不必将它们连接到 AC' 97 音频面板。
 - E. 进入 BIOS 设置程序。进入 Advanced Settings (高级设置) 并选择 Chipset Configuration (芯片组配置)。将 Front Panel Control (前面板控制) 选项由 Auto (自动) 设置为 Enabled (启用)。

系统面板接头

(9 针 PANEL1)

(见第 2 页第 19 项)

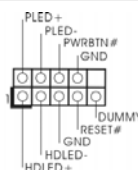


这个接头提供数个系统前面板功能。

机箱喇叭接头

(4 针 SPEAKER1)

 (见第 2 页第 21 项)




请将机箱喇叭连接到这个接头。

机箱, 北桥芯片, 电源风扇接头

(3 针 CHA_FAN1)

 (见第 2 页第 22 项)



请将风扇连接线接到这个接头, 并让黑线与接地的针脚相接。

(3 针 NB_FAN1)
(见第 2 页第 10 项)



(3 针 PWR_FAN1)
(见第 2 页第 37 项)



CPU 风扇接头
(4 针 CPU_FAN1)
(见第 2 页第 5 项)



请将 CPU 风扇连接线接到这个接头，并让黑线与接地的针脚相接。




虽然此主板支持 4-Pin CPU 风扇 (Quiet Fan, 静音风扇), 但是没有调速功能的 3-Pin CPU 风扇仍然可以在此主板上正常运行。如果您打算将 3-Pin CPU 风扇连接到此主板的 CPU 风扇接口, 请将它连接到 Pin 1-3。

Pin 1-3 连接
3-Pin 风扇的安装



 ATX 电源接头
(24 针 ATXPWR1)
(见第 2 页第 8 项)



请将 ATX 电源供应器连接到这个接头。



虽然此主板提供 24-pin ATX 电源接口, 但是您仍然可以使用传统的 20-pin ATX 电源。为了使用 20-pin ATX 电源, 请顺著 Pin 1 和 Pin 3 插上电源接头。

20-Pin ATX 电源安装说明



ATX 12V 电源接口
(8 针 ATX12V1)
(见第 2 页第 2 项)



请注意, 必需将带有 ATX 12V 插头的电源供应器连接到这个插座, 这样就可以提供充足的电力。如果不这样做, 就会导致供电故障。



虽然此主板提供 8-pin ATX 12V 电源接口, 但是您仍然可以使用传统的 4-pin ATX 12V 电源。为了使用 4-pin ATX 12V 电源, 请顺著 Pin 1 和 Pin 5 插上电源接头。


4-Pin ATX 12V 电源安装说明



简体中文

串行接口连接器

(9 针 COM1)
(见第 2 页第 29 项)

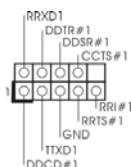

这个 COM1 端口支持一个串行接口的外设。


HDMI_SPDIF 接头

(3 针 HDMI_SPDIF1)
(见第 2 页第 32 项)



HDMI_SPDIF 接头，提供 SPDIF 音频输出至 HDMI 显卡，支持将电脑连接至带 HDMI 的数字电视 / 投影机 / 液晶显示器等设备。请将 HDMI 显卡的 HDMI_SPDIF 接口连接到这个接头。

HDMI_SPDIF 传输线 (选配)

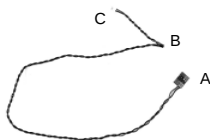


请将 HDMI_SPDIF 传输线的黑色接头 (A) 连接至主板的 HDMI_SPDIF 接针。然后将 HDMI_SPDIF 传输线的白色接头 (B 或 C) 连接至 HDMI 显卡的 HDMI_SPDIF 接口。


A. 黑色接头



 B. 白色接头 (2-pin)



 C. 白色接头 (3-pin)



2.9 驱动程序安装指南

要将驱动程序安装到您的系统，首先请您将支持光盘放入光驱里。然后，系统即可自动识别兼容的驱动程序，并在支持光盘的驱动程序页面里依次列出它们。请依此从上到下安装那些必须的驱动程序。如此您安装的驱动程序就可以正常工作了。

2.10 在带 RAID 功能的系统上安装 Windows® XP / XP 64 位元 / Vista™ / Vista™ 64 位元

如果您想在 SATA/SATAII 硬盘上使用 RAID 功能安装 Windows® XP，Windows® XP 64 位元，Windows® Vista™ 或 Windows® Vista™ 64 位元操作系统，请查阅随机支持光盘如下路径里的文件了解详细步骤：

..\ RAID Installation Guide

2.11 在不带 RAID 功能的系统上安装 Windows® XP / XP 64 位元 / Vista™ / Vista™ 64 位元

如果您打算在不带 RAID 功能的 SATA/SATAII 硬盘上安装 Windows® XP, Windows® XP 64 位元, Windows® Vista™, Windows® Vista™ 64 位元操作系统, 请根据您的安装的操作系统按如下步骤操作。

2.11.1 在不带 RAID 功能的系统上安装 Windows® XP / XP 64 位元

如果您打算在不带 RAID 功能的 SATA/SATAII 硬盘上安装 Windows® XP / Windows® XP 64 位元操作系统, 请按如下步骤操作。

Using SATA / SATAII HDDs without NCQ function (使用不带 NCQ 功能的 SATA / SATAII 硬盘)

步骤 1: 设置 BIOS。

- A. 进入 BIOS SETUP UTILITY (BIOS 设置程序)→Advanced Screen (高级界面)→IDE Configuration (IDE 配置)。
- B. 将”SATA Operation Mode”选项设置为[IDE]。

步骤 2: 在系统上安装 Windows® XP / XP 64 位元操作系统。

2.11.2 在不带 RAID 功能的系统上安装 Windows® Vista™ / Vista™ 64 位元

如果您打算在不带 RAID 功能的 SATA/SATAII 硬盘上安装 Windows® Vista™ / Windows® Vista™ 64 位元操作系统, 请按如下步骤操作。

Using SATA / SATAII HDDs without NCQ function (使用不带 NCQ 功能的 SATA / SATAII 硬盘)

步骤 1: 设置 BIOS。

- A. 进入 BIOS SETUP UTILITY (BIOS 设置程序)→Advanced Screen (高级界面)→IDE Configuration (IDE 配置)。
- B. 将”SATA Operation Mode”选项设置为[IDE]。

步骤 2: 在系统上安装 Windows® Vista™ / Vista™ 64 位元操作系统。

Using SATA / SATAII HDDs with NCQ function (使用带 NCQ 功能的 SATA / SATAII 硬盘)

步骤 1: 设置 BIOS。

- A. 进入 BIOS SETUP UTILITY (BIOS 设置程序)→Advanced Screen (高级界面)→IDE Configuration (IDE 配置)。
- B. 将”SATA Operation Mode”选项设置为[AHCI]。

步骤 2：制作一张 SATA/SATAII 驱动软盘。

- A. 在您的光驱里放入一张 ASRock 支持光盘引导系统开机。
(此时请勿将任何软盘插入软驱!)(在主板的包装盒内有两张华擎随机支持光盘,请选择其中一张支持 Windows® Vista™ / Vista™ 64 位元的光盘。)
- B. 在系统 POST 开机自检期间,按<F11>键,将会出现一个引导开机的驱动器选项窗口。请选择 CD-ROM 作为引开机的驱动器。
- C. 当您在屏幕上看到这条信息:”Generate Serial ATA driver diskette [Y/N]?”意即”您想制作 Serial ATA 驱动程序磁盘吗?”请按<Y>键。
- D. 然后您会看到这样的信息:

```
Please insert a blank
formatted diskette into floppy
drive A:
press any key to start
```

意即”请将空白软盘插入软驱 A:按任意键开始。

请将软盘插入软驱,按任意键。

- E. 系统将开始格式化软盘并将 SATA/SATAII 驱动程序复制到软盘。

步骤 3：在系统上安装 Windows® Vista™ / Vista™ 64 位元操作系统。

将 Windows® Vista™ / Windows® Vista™ 64 位元光盘放入光驱内启动系统,然后按提示安装 Windows® Vista™ / Windows® Vista™ 64 位元操作系统。当您看到”Where do you want to install Windows?”(您想安装 Windows 吗?)画面,请将 ASRock 支持光盘放入光驱,并点击左下角的”Load Driver”按钮载入 AMD AHCI 驱动程序。AMD AHCI 驱动程序位于支持光盘的如下路径:
(在主板的包装盒内有两张华擎随机支持光盘,请选择其中一张支持 Windows® Vista™ / Vista™ 64 位元的光盘。)

.. \ I386 (针对 Windows® Vista™ 用户)

.. \ AMD64 (针对 Windows® Vista™ 64 位元用户)

之后,请将 Windows® Vista™ / Windows® Vista™ 64 位元光盘再次放入光驱内继续安装。

2.12 Untied Overclocking Technology 异步超频技术

这款主板支持 Untied Overclocking Technology 异步超频技术。这意味著在超频时,由於固定了 PCI/PCIE 总线,前端总线的超频拥有更多富余的空间,在您启用 Untied Overclocking Technology 异步超频技术之前,请进入 BIOS 里的”Overclock Mode”(超频模式)选项,并将它从[Auto](自动)设置为[CPU,PCIE,Async.].经此更改之後,超频时 CPU 的前端总线将不再受约束,同时 PCI 和 PCIE 总线处于固定模式,因此前端总线可以在更稳定的超频环境下运行。



在您使用异步超频技术之前,请查阅第 57 页了解可能的超频风险。

3. BIOS 信息

主板上的 Flash Memory 芯片存储了 BIOS 设置程序。启动计算机，在机器开机自检 (POST) 的过程中按下 <F2> 键，就可进入 BIOS 设置程序，否则将继续进行开机自检之常规检验。如果须要在开机自检后进入 BIOS 设置程序，请按下 <Ctl> + <Alt> + <Delete> 键重新启动计算机，或者按下系统面板上的重启按钮。功能设置程序储存有主板自身的和连接在其上的设备的缺省和设定的参数。这些信息用于在启动系统和系统运行需要时，测试和初始化元器件。有关 BIOS 设置的详细信息，请查阅随机支持光盘里的用户手册 (PDF 文件)。

4. 支持光盘信息

本主板支持各种微软视窗操作系统：Microsoft® Windows® XP/XP 多媒体中心 /XP 64 位元 /Vista™/Vista™ 64 位元。主板附带的支持光盘包含各种有助于提高主板效能的必要驱动和实用程序。请将随机支持光盘放入光驱里，如果计算机的“自动运行”功能已启用，屏幕将会自动显示主菜单。如果主菜单不能自动显示，请查找支持光盘内 BIN 文件夹下的 ASSETUP.EXE 文件并双击它，即可调出主菜单。

电子信息产品污染控制标示

依据中国发布的「电子信息产品污染控制管理办法」及 SJ/T 11364-2006「电子信息产品污染控制标示要求」，电子信息产品应进行标示，藉以向消费者揭露产品中含有的有毒有害物质或元素不致发生外泄或突变从而对环境造成污染或对人身、财产造成严重损害的期限。依上述规定，您可于本产品之印刷电路板上看见图一之标示。图一中之数字为产品之环保使用期限。由此可知此主板之环保使用期限为 10 年。



图一

有毒有害物质或元素的名称及含量说明

若您欲了解此产品的有毒有害物质或元素的名称及含量说明，请参照以下表格及说明。

部件名称	有害物质或元素					
	铅 (Pb)	镉 (Cd)	汞 (Hg)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板及其电子组件	X	O	O	O	O	O
外部信号连接头及线材	X	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求，然该部件仍符合欧盟指令 2002/95/EC 的规范。

备注：此产品所标示之环保使用年限，系指在一般正常使用状况下。