



óóóóó  
**595**

---

# User Manual





## Thank you for purchasing the all new Windows Mobile™ Smartphone!

Microsoft, MS-DOS, Windows, Windows NT, Windows Server, Windows Mobile, ActiveSync, Excel, Internet Explorer, MSN, Outlook, PowerPoint, and Word are trademarks, or registered trademarks of Microsoft Corporation in the United States of America and/or other countries.

QuickMark and its icons are registered trademarks of SimpleAct, Inc.

MascotCapsule is a registered trademark of HI Corporation.

ClearVue Document, ClearVue PDF, ClearVue Presentation, ClearVue Worksheet are registered trademarks of WESTTEK.

Another World, Magic Puz are registered trademark of Magic Productions.

- 
- 
- Our company reserves the right to make modifications to this manual without further notice.
  -  **Warning:** This device is limited to indoor use, under the guaranteed conditions that it will not interfere with legal radio stations and will not be interfered with during operation.
- 



## Important Safety Precautions

Please adhere to the following safety precautions when using this product to avoid the risk of legal and monetary liabilities.

### Electrical Safety

This product is only operable when using battery supplied power. Using other power sources may cause harmful conditions and will void all guarantees for this product.

### Inflight Safety

As this product may interfere with the operation of inflight navigation system and navigation system communication networks, usage of this product in an aircraft is prohibited by law in several countries. If you are permitted by law to use this product in an aircraft, please switch to Inflight Mode to turn off radio wave transmissions.

### Environmental Restrictions

Do not use this product at a gas station or refueling station. Usage of this product is also prohibited at fuel storages, chemical factories, and locations with explosives.

### Environmental Safety

Do not use this product in the following locations: gas stations, fuel storages, chemical factories, demolition worksites, potentially hazardous explosive locations such as fuel areas under ship holds, transport and storage of fuel or chemical substance facilities, or locations with particles, dust, metal dust, chemical substances etc in the air. Please remember that sparks in these environments can cause explosions or fire hazards resulting in human casualties.

### Road Safety

Unless in an emergency, drivers in moving vehicles are prohibited from using handheld equipment for calls. In certain countries, it is permitted for drivers in moving vehicles to use hands-free devices for calls. Usage of this product may interfere with normal operations of medical instruments. Many hospitals and clinics prohibit use of these equipment.

### Non-Ionic Radiation

To ensure efficiency of radio wave transmissions and reduced interference, users should operate this product under the recommended normal environments. As with other similar mobile wireless communication equipment, in order to comply with the required operations and safety considerations for the user, it is recommended that the user maintains a safe distance from the antenna during the operation of the equipment.

## Dopod Defective Pixel Warranty Policy

As the LCD display on the handheld product is made up of high precision components, possible lit or dark pixels (Note) appearing on the display screen is a common occurrence from the product manufacturing process. However, if your purchased product meets the following conditions, you may request replacement of the LCD display module within seven days from the purchase date.

1. Total count of three or more malfunctioning pixels (lit or dark); or
2. Any two malfunctioning pixels (lit or dark) within 5mm of each other.



Lit Pixels: blue, red, white, or green dots on specific locations of LCD screen.

Dark Pixel: black dot on specific locations of the LCD screen.





# Table of Contents

1

**1**

## Familiarize Yourself with the Device

- 1. 1 Familiarize With the Handset and Accessories ..... 3
- 1. 2 Battery and SIM Card ..... 8
- 1. 3 Insert Micro SD Card ..... 9
- 1. 4 Familiarize With the Home Screen ..... 10
- 1. 5 Familiarize With the Application Program Menu..... 17
- 1. 6 Restore to Default (Hard Reset)..... 20

2

**2**

## Learning the Input Modes

- 2. 1 Switching Input Modes ..... 25
- 2. 2 Using Various Input Modes ..... 26
- 2. 3 Using the Back Button to Delete Characters ..... 37

3

**3**

## Using the Communication Functions

- 3. 1 Using the Phone..... 42
- 3. 2 Making Phone Calls..... 47
- 3. 3 Receiving Voice Calls ..... 54
- 3. 4 Video calls..... 57
- 3. 5 Call Options ..... 60
- 3. 6 Additional Information on Dialing..... 66
- 3. 7 Setting Up Speed Dial Entries..... 70





## Managing Personal Information



- 4. 1 Contacts ..... 76
- 4. 2 Calendar ..... 90
- 4. 3 Tasks ..... 101
- 4. 4 Voice Notes ..... 104

## View Messages



- 5. 1 Messaging ..... 112
- 5. 2 Text Messages ..... 114
- 5. 3 Outlook E-mail ..... 122
- 5. 4 MMS ..... 130
- 5. 5 POP3/IMAP4 E-mail Account .... 138
- 5. 6 Configure various settings in  
Messaging ..... 142

## Experiencing Multimedia Entertainment

 


- 6. 1 Camera and Video Recorder .... 153
- 6. 2 Viewing Pictures and Videos .... 164
- 6. 3 Windows Media Player ..... 171
- 6. 4 MP3 Player ..... 180

## Connecting With Wireless Communications



- 7. 1 Comm Manager ..... 186
- 7. 2 Bluetooth Connection ..... 191
- 7. 3 Modem Mode ..... 203
- 7. 4 GPRS Configuration ..... 219





# 8

## Experiencing Internet Entertainment

8

8.1	Internet Explorer.....	226
8.2	Pocket MSN .....	243

# 9

## Synchronizing Your Phone

9

9.1	About ActiveSync .....	258
9.2	Installing ActiveSync.....	259
9.3	Installing Microsoft Office Outlook .....	261
9.4	Initial Connection.....	264
9.5	Using ActiveSync.....	267
9.6	Sync with Multiple Computers...	268
9.7	Synchronize Through Bluetooth Connection .....	269
9.8	Sync with Exchange Server .....	272
9.9	Sync to Transfer and Manage Files .....	275
9.10	Advanced PC Sync Settings .....	278
9.11	Synchronize Music, Video, and Pictures.....	284
9.12	Installing Software.....	288
9.13	ActiveSync Connection Troubleshooting.....	290





## Setting the Phone Information

**10**

- 10.1 Home screen ..... 296
- 10.2 The Phone Settings ..... 299
- 10.3 Configure Video Calls ..... 300
- 10.4 Sounds ..... 302
- 10.5 Removing Programs ..... 307
- 10.6 Profiles ..... 309
- 10.7 Time and Location ..... 313
- 10.8 Display Time When Keypad is Locked ..... 315
- 10.9 Personal Information ..... 316
- 10.10 Protecting Your Phone ..... 318
- 10.11 Power Management ..... 323
- 10.12 Accessibility ..... 325
- 10.13 Search for Operating System Version Number ..... 327

10

11

12

## Using More Programs

**11**

- 11.1 Java (MIDlet Manager) ..... 332
- 11.2 File Explorer ..... 333
- 11.3 Task Manager ..... 334
- 11.4 Using ClearVue Suite ..... 335
- 11.5 SIM Manager ..... 340
- 11.6 QuickMark Mobile Barcode ..... 341
- 11.7 Calculator ..... 343
- 11.8 Games ..... 344
- 11.9 3D Menu ..... 348
- 11.10 Voice commander ..... 351

## Q&A

**12**

- 12.1 Q&A ..... 353





## About Action Icons



Every topic's content page includes icons that will assist the reader in operating the product and learning quickly. At the beginning of each action icon, the purpose of this action will be outlined in red background color. Each procedure will indicate the step sequence numbers, the action you will need to execute, the screen that appears for this procedure, and the descriptions for this procedure.

Name of current procedure — **Action: Switch Input Method**  
Procedure Number — 1 Press & hold  . 2 Select  <Input Mode>

Actions to take

Mobile phone or computer screen

Action descriptions

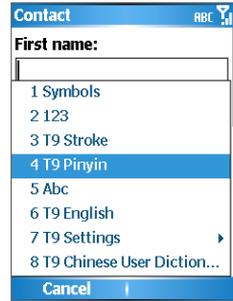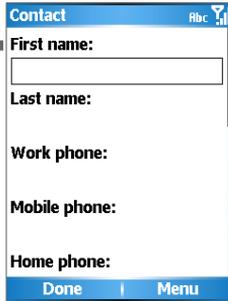

Switch input methods wherever the text entry fields can be located.

Example: T9 Pinyin spelling.

## Tip Symbols

This manual provides tip symbols to remind users of some pointers, notes, and precautions.



Tips



Caution





# Topic

# 1

## Familiarize Yourself with the Device

### In this topic, you will learn about...

1. Familiarize With the Handset and Accessories
2. Insert SIM Card
3. Insert Micro SD Card
4. Familiarize With the Home Screen
5. Familiarize With the Application Program Menu
6. Restore to Default (Hard Reset)





# Index Action


Familiarize With the Handset and Accessories .....	3
LED Indicator .....	5
Accessories .....	6
Remove the Battery .....	7
Insert SIM Card .....	7
Insert Micro SD Card .....	8
Familiarize with the Home Screen.....	9
Status Indicator and Program Icons .....	10
Switching from Home Screen to Comm Manager .....	13
Switching from Home Screen to Most Recently Used Program .....	13
Switching from Home Screen to Upcoming Appointments .....	14
Switching from Home Screen to Profiles .....	14
Switching from Home Screen to Text Messages.....	15
Themes and 3D Menu Screen .....	15
Using the Start Menu .....	17
Using the Menu .....	18
Using the Quick List.....	18
Using the Back Button.....	19
Return to the Home Screen.....	19
Using the Restore to Default.....	20
Hard Reset Restore to Default.....	21



# 1.1 Familiarize With the Handset and Accessories

Getting to know your handset buttons, LED indicators, and appropriate accessories.

## Familiarize With the Handset and Accessories

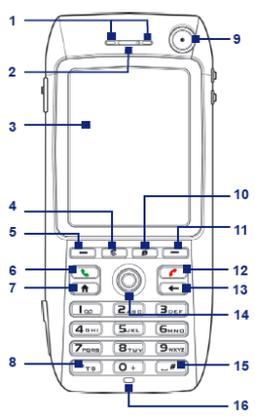

1

Familiarize Yourself with the Device

1	<b>LED indicator</b>	LED indicator displays the current device's status
2	<b>Speaker</b>	
3	<b>Screen</b>	
4	<b>Video Calls button</b>	After phone number is entered, press the Video Calls button, then you may start video calling.
5	<b>Left corresponding button</b>	Long press to open the Voice Command function.
6	<b>Talk button</b>	Press to perform dialing, talking, switch to another call, or hold. Press & hold to activate or turn off hands free mode.
7	<b>Home screen button</b>	Press to return to Home screen, press & hold to open Quick List.
8	<b>Star (*) button</b>	Press to switch between upper/lower case of text input, or press & hold to select Text Input Mode from the menu.
9	<b>Secondary camera</b>	You can use secondary camera to perform video calling, or to take pictures.
10	<b>Internet Explorer</b>	Open the Internet browser
11	<b>Right corresponding button</b>	Press to run the displayed function of "corresponding key label" above the button.
12	<b>End call button</b>	Press the end call button to end the call, or press & hold to lock the keypad.
13	<b>Back button</b>	Press to return to the previous page, or delete a character in the text column.
14	<b>Direction button</b>	Use to scroll the page up, down, left, and right. Or press the center round button for the OK button.


3





# Familiarize Yourself with the Device

1

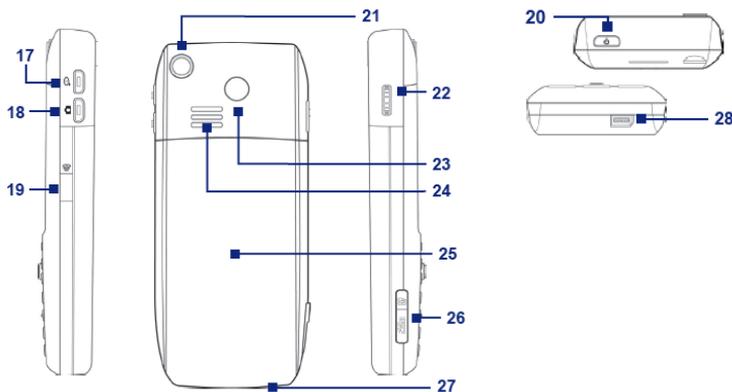

15	<b>Pound (#) button</b>	Press to insert a blank character, or press & hold to show the Symbols List.
16	<b>Microphone</b>	Used for making a call or recording.
17	<b>Voice command button</b>	Press to activate Voice Commander and long press to activate Voice Note.
18	<b>Camera keypad</b>	Press to activate camera function
19	<b>IR port</b>	Transmit data through the IR port.
20	<b>Power button</b>	Press to switch handset mode. Hold down to turn on/off handset.
21	<b>Primary camera</b>	
22	<b>Wheel</b>	Volume can be adjusted up or down. Alternatively, select an item on the screen and press on the scrollwheel to cycle through the available options.
23	<b>Car antenna connector</b>	Connect the mobile phone to the car antenna for better call quality. Just remove the rubber cap and connect the antenna to the antenna connector when in use. When not in use, please replace the rubber cap.
24	<b>Amplifier speaker</b>	Press to run the displayed function of "corresponding key label" above the button.
25	<b>Battery cover</b>	Open the battery cover to insert the battery, and SIM card.
26	<b>Micro SD socket</b>	
27	<b>Microphone</b>	Used for making a call or recording.
28	<b>Headset/Sync/Power Port connection</b>	Perform data sync or recharge using the USB cable; this port is also used to provide stereo headset for hands free calling, listening to music, or directly connects to the AC adapter for recharge.

4





## LED Indicator

The top double-colored LED indicator (orange/red/green) is used for indicating the phone battery and network status. The bottom LED indicator (blue) is used for indicating the Bluetooth status.

The table below explains what each of the different LED indicator colors represent:


<b>Top LED</b>	Status
<b>Solid green</b>	Battery charging is complete.
<b>Not lit</b>	Battery compartment is empty.
<b>Solid orange</b>	Battery is charging, or phone is being sync'ed with the computer using ActiveSync through USB cable.
<b>Flashing green</b>	Found telecom network.
<b>Flashing red</b>	Insufficient battery level (less than 4%).
<b>Flashing orange</b>	Battery temperature is higher than the specified operation range of 48°C or lower than 0°C and battery has been stopped from charging.
<b>Orange/green LED indicator</b>	Turn Off Malfunctioning Battery. Displays the "Battery Malfunctioning" message (  ). Unplug the AC adapter to resume flashing green LED.
<b>Dark/fading</b>	Disconnected from the network.
<b>Bottom LED</b>	Status
<b>Flashing blue</b>	Bluetooth mode is in "Activated" or "Detected" mode.



## Accessories

1

Familiarize Yourself with the Device

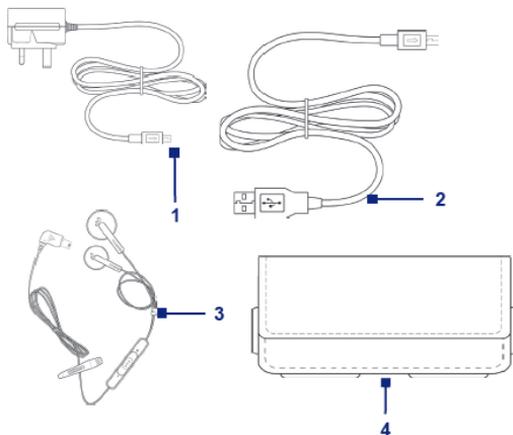

1	<b>AC adapter</b>	Recharges the phone battery.
2	<b>Sync cable</b>	Data synchronization with the computer.
3	<b>Headset</b>	The headset provides volume control buttons and Send/End buttons. You can use the button to answer or hang up incoming calls. Plug in the Headset/Sync connector to listen to music or make calls.
4	<b>Leather pouch</b>	For convenient carrying and protection of your phone.



## 1.2 Battery and SIM Card

The SIM (Subscriber Identity Module) card is provided by your telecom service provider. It contains your basic data, for example, the phone number and address book. Before inserting the card, make sure that the phone power is turned off.

1


**!** If the SIM card is not inserted, the communication functions cannot be used.

### Remove the Battery



Loosen upwards the battery in the direction as indicated in the illustration to remove the battery

### Insert SIM Card

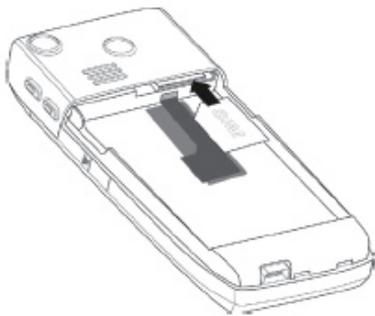

1. Insert the SIM card: Insert the SIM card into the SIM socket in the direction as indicated in the illustration
2. Remove the SIM card: Pull black plastic lever outwards to eject SIM card.

Familiarize Yourself with the Device



## 1.3 Insert Micro-SD Card

Insert Micro-SD card. You can store information such as pictures, documents, and program data on the Micro-SD card.

1

### Insert Micro-SD Card

Familiarize Yourself with the Device



1. Open protective plastic cover.
2. Insert Micro-SD card: Insert Micro-SD card as shown in picture and push in fully to the end.
3. Remove Micro-SD card: Push Micro-SD card to the end, it will be automatically ejected.

## 1.4 Familiarize with the Home Screen

The 595 mobile phone provides customized factory default themes and 3D menus. Further details are provided in Chapters 10 and 11. This manual uses the Windows default Home screen, themes and menus as sample instructions.

The Home screen will display the following important information: status indicator, telecom service provider, time and date, upcoming appointments, SMS, missed calls, as well as your recently used program icons. You can select the desired icon and then press the OK button to access the program. The icons located on the status bar include roaming, available UMTS/GPRS, battery status, missed calls, new messages, reception status, and UMTS/GPRS connection.

1. To switch back to the Home screen from various programs, press the  **Home page button** or the  **Hang up button**.
2. To customize the contents displayed on Home screen, including the background picture and settings, press **Start > Setup > Home Screen**.

For Home screen setup, please refer to 10.1 (Home Screen).

### Familiarize with the Home Screen



- 1 Choose the most recently used program, and access it directly from the Home screen.
- 2 Display telecom service provider name.
- 3 Display date, time, and alarm status.
- 4 View missed calls.
- 5 View next scheduled appointment.
- 6 Display profile contents. Press once to modify the profile contents.
- 7 Press to open the message folder.
- 8 Press to display the program menu.
- 9 Displays hints such as missed calls or new messages.
- 10 Display UMTS/GPRS or GSM network status.
- 11 Display battery status.
- 12 Display network signal strength.
- 13 Press to access contact list, call records, or message contents.



## Status Indicator and Program Icons

The table below explains what the most common status indicators represent:

	Available GPRS		New E-mail or text message (SMS, text message services)
	Connected GPRS		New instant message
	Available UMTS (3G)	abc	Multiple click text input mode, lower case
	Voice calls currently in use	Abc	Multiple click text input mode, with the first letter capitalized
	Data calls currently in use	ABC	Multiple click text input mode, upper case
	Call forwarding activated	t9	T9 text input mode, lower case
	Call waiting	T9	T9 text input mode, with the first letter capitalized
	Missed call	T9	T9 text input mode, locked
	Connect when SIM card is not inserted	123	Numeric input mode
	Speakerphone on	笔	T9 Stroke
	Battery level	拼	T9 Pinyin
	Insufficient battery level		Ring tone off
	Battery level extremely low		Vibrate on incoming calls
	Battery Charging		Mute microphone
	No battery or battery error		Bluetooth
	Signal strength		SIM card is not inserted
	Wireless connected or no signal		SIM error
	Wireless is off		Roaming
	Synchronization error	1/2	Line 1/2

The following are some of the program icons. These programs have already been installed on the phone.

	ActiveSync	Syncs data between the phone and the computer.
	Calculator	Runs simple math calculations such as addition, subtraction, multiplication, and division.
	Calendar	Schedules appointment(s) information and creates meeting requests.
	Call History	History of all dialed numbers and missed calls.
	Camera	Provides multiple photoshooting modes.
	Clear Storage (Note 1)	Clears data in memory, returns to factory default values, then restarts.
	ClearVue Document	Allows you to read Word files on the phone.
	ClearVue PDF	Allows you to read PDF files on the phone.
	ClearVue PPT	Allows you to read PowerPoint files on the phone.
	ClearVue Worksheet	Allows you to read Excel files on the phone.
	Comm Manager	Allows you to efficiently turn on/off your phone, sync with the computer, mute the phone, access Bluetooth, enable/disable Direct Push etc.
	Contacts	Records contact information.
	Download Agent	Provides download status and information such as the content of the downloaded material.
	File Explorer	Allows you to organize and manage files on the phone.
	Games	Four built-in games: Another World, MagicPuz, Bubble Breaker and Solitaire.
	Internet Explorer	For browsing the Internet / WAP websites and to download new programs / files from the Web.
	Messaging	Allows you to send and receive E-mail, text messages, and MMS.

1

Familiarize Yourself with the Device

11

	Midlet Manager	Allows you to install JAVA applications, such as games and tools.
	Pictures & Videos	Browse and manage pictures and videos stored on the phone or memory card. Default folder is My Pictures folder.
	Pocket MSN	For instant messaging with contacts in MSN Messenger.
	Settings	Allows you to configure the various phone settings.
	Speed Dial	Allows you to create the speed dial entry for frequently dialed numbers or accessed programs.
	SIM Manager	Allows you to manage the contacts stored on the SIM card as well as copy the contacts onto the phone.
	Task Manager	Records and manages the programs that are currently in use.
	Tasks	Manages your task items.
	Video Recorder	Records video clips of various modes and length.
	Voice Notes	Allows you to record brief voice reminders.
	Windows Media	Allows you to playback movies and sound files.
	Wireless Modem	Allows your phone to function as a modem through Bluetooth or USB.
	Network Wizard	Automatically detect your SIM card and correctly setup the appropriate GPRS/MMS configurations.
	Streaming Media	Play the Streaming Media on the web, such as broadcasting, etc.

(Note 1) The icons above are the Windows Default icons. Your mobile phone is pre-installed with Dopod 3D menus at the factory, therefore some of the icons may be different. To understand the 3D icon, please refer to 11.9.

(Note 2) Restore to default settings not only removes all memory data stored on 595, but will also remove any of your installed programs and Dopod plug-in programs (For example: QuickMark, MP3 Player, MagicPuz, and 3D menus). You can connect to the Dopod member's webpage through the Internet to download files and re-install them.

## Action: Switching from Home Screen to Comm Manager

- 1 Select  Service provider / time  
Press the  OK button
- 2



Choose the service provider / time column, press the OK button.



Opens the Comm Manager.

1


Familiarize Yourself with the Device

## Action: Switching from Home Screen to Most Recently Used Program

- 1 Select  <Program>  
Press the  OK button.
- 2



Choose the program you wish to switch to, then press the OK button.

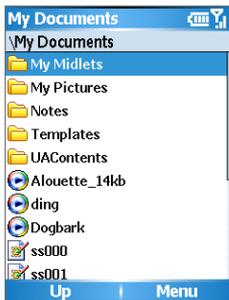

Goes to your Recent Programs.

13



## Action: Switching from Home Screen to Upcoming Appointments

- 1 Select **<Appointment>**  
Press the **OK** button
- 2

1

Familiarize Yourself with the Device



Choose the appointment items you wish to search for, then press the OK button.




Goes to your Upcoming Appointments.

## Action: Switching from Home Screen to Profiles

- 1 Select **Profiles**  
Press the **OK** button
- 2 Select **<Profiles>**  
Press the **OK** button



Choose Profiles, then press the OK button.

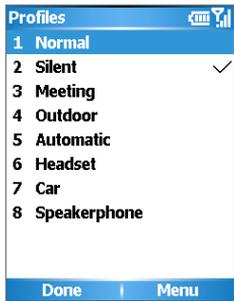

Choose the profile you wish to use, then press the OK button to confirm the switch.



## Action: Switching from Home Screen to Text Messages

- 1 Select **Text Messages**

Press the **OK** button

2



Select SMS, then press the OK button.



Goes to the SMS Home screen.

1

Familiarize Yourself with the Device

## Themes and 3D Menu Screen



▲ Default 3D menu screen.



▲ Default Dopod 3D menu.

- The default themes, Home screen, and the 3D menu on 595 can be changed (please refer to 10.1 Home screen section).

## Action: Use Device Lock

- 1 Press and hold



2

1




Device locked

## Action: Undo Device Lock

- 1 Select Unlock

- 2 Select

3

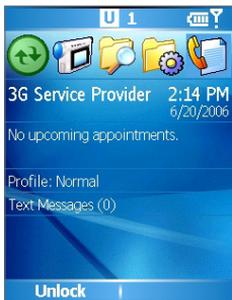

## 1.5 Familiarize with the Application Program Menu

The **Start** is located in the lower left corner of the Home screen. It can display various program icons on a single or multiple page screen.

At the Start Menu, you can:

- Press “More” or #  to switch to the next page.
- Press the Back button  or \*  to switch to the previous page.
- Press the Back button  to switch to the previous page.

Most of the programs on the phone provide function menus (**Right function button** ). You can use the directional button function or enter the icon’s number directly.

1

Familiarize Yourself with the Device

### Action: Using the Start Menu

- 1 Select  **Start**
- 2 Select  **<Program>**  
Then press the  **OK** button



At the Home screen, select **Start**.



To view more programs, select **More**.


 The phone has been pre-installed with multiple programs for your immediate access. You will also be able to install other application programs from the Windows Mobile™ Quick Operation CD, or download them from the Internet. In addition, you can also purchase other mobile phone software from retailers and install them onto the phone.



## Action: Using the Menu

- 1 Select Menu
- 2 Select <Menu> or press <Number Pad>

1

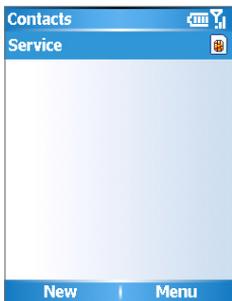

Open Menu.




Use the directional button to select the item and then press the OK button or enter the icon's number directly.


Familiarize Yourself with the Device

## Action: Using the Quick List

- 1 Press & hold the Home screen button
- 2 Select <Mode> Press the OK button

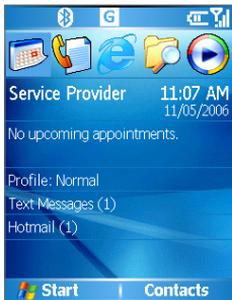

Open Quick List.

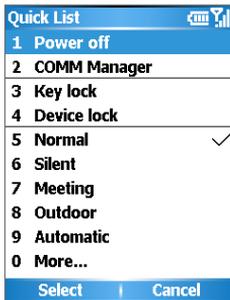

Select the option you wish to use. You can also press the corresponding number key to the left.

The Quick List provides convenient control functions such as phone lock, keypad lock, inflight mode, and selection of the phone's other operation modes (please refer to 10.4 Control Modes).



## Action: Using the Back Button

- 1 Press the  Back button
- 2



Press the Back button in the application that is currently running.



Returns to the previous application.

1

Familiarize Yourself with the Device

## Action: Return to the Home Screen

- 1 Press the  <Home screen button>
- 2



Pressing the Home screen button in any application that is currently running will return you to the Home screen.



Return to the Home screen.

19



## 1.6 Restore to Default (Hard Reset)

Restore to default settings will remove all settings such as contacts, tasks, calendar appointments, additionally installed programs, and setup values in the memory. The phone will be reset to factory default settings and restart. To avoid the loss of data, you can sync the data to your computer prior to restoring the default settings. When improper operations prevent your phone from functioning properly, you can try to restore to factory default settings.

For data synchronization, please refer to Chapter 9 Synchronizing Your Phone.

When the system is unable to startup, you can try to use Hard Reset to restore to default settings. We recommend that you contact our customer service representatives before using this function, in order to avoid damage to your phone and data. If you need to Hard Reset your phone, please register as a member at the Dopod website and download the 595 software installation files to reinstall the following software:

- Game: Another world, Magic Puz
- QuickMark
- MP3 Player
- 3D menu with Dopod Desktop Theme
- Cyberon Voice Commander

### Action: Using the Restore to Default

- 1 Select Start
- 2 Select Accessories  
Then press the OK button
- 3 Select Clear Storage



Open Accessories.



Go to the Restore to Defaults program.



- 4 Enter 1234  
Then select  Yes



After confirmation, enter 1234 and select Yes. The phone will restart after resetting.


1

Familiarize Yourself with the Device

## Action: Hard Reset Restore to Default

- 1 Press & hold  **Power button**
- 2 At the same time, press & hold the   **Left/Right Soft Key**, then press the  **Power button** once.
- 3 Press the  **number key 0** or **any other keys** to cancel

Power button

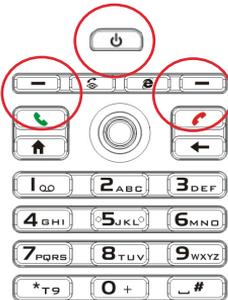

Press 0 to restore factory default, Other keys to quit.

First, turn off the phone.

Press & hold the Left/Right soft keys, then press the power button once. Wait for the screen to reappear, then release the soft keys.

Press the number key 0 to confirm restore to defaults, or press any other keys to cancel.

21



1

## Familiarize Yourself with the Device



22





# Topic

# 2

## Learning the Input Modes

**In this topic, you will learn about...**

1. **Switching Input Modes**
2. **Using Various Input Modes**
3. **Using the Back Button to Delete Characters**





# Index Action

---


2

Switching Input Modes .....	25
Switch to Symbol Input .....	26
Switching to numeric input.....	27
Enter Chinese characters using T9 Strokes.....	28
Entering complicated characters .....	29
Enter Chinese characters using T9 Pinyin .....	31
Entering T9 English .....	33
Adding T9 English words .....	34
T9 Preferences .....	35
T9 Chinese User Dictionary.....	35
T9 My Words .....	35
Entering English text.....	36
Deleting a single character .....	37
Deleting all characters.....	38



## 2.1 Switching Input Modes

You will be able to use the keypad to enter text such as Chinese, English, numbers, and symbols. Enter the characters through the English alphabets Pinyin, and keystroke symbols as indicated on the keypad.

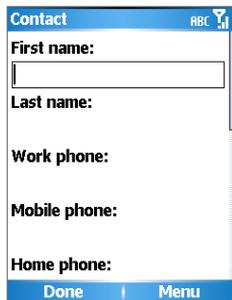

The screenshot shows a contact form titled "Contact" with a signal strength indicator and "ABC" in the top right corner. The form has several input fields: "First name:", "Last name:", "Work phone:", "Mobile phone:", and "Home phone:". At the bottom, there are "Done" and "Menu" buttons.


▲ Switching Input Modes.

2

Learning the Input Modes


### Action: Switching Input Modes

- 1 Press & hold 
- 2 Select  Input Mode
- 3

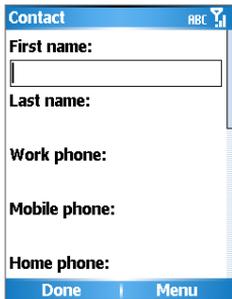

The screenshot shows the same contact form as before, but with "ABC" in the top right corner. The input fields are empty.

Input modes can be switched anywhere within the text entry fields.

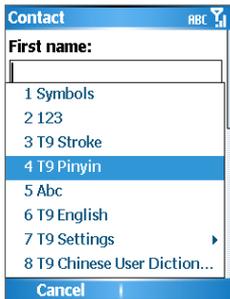

The screenshot shows the contact form with a list of input modes displayed over the "First name:" field. The list includes: 1 Symbols, 2 123, 3 T9 Stroke, 4 T9 Pinyin (highlighted), 5 Abc, 6 T9 English, 7 T9 Settings, and 8 T9 Chinese User Diction... At the bottom of the list are "Cancel" and "Menu" buttons.

For example: T9 Pinyin spelling.



The screenshot shows the contact form with "拼" (Pinyin) in the top right corner. The "First name:" field contains the text "yang wang zang". Below the field, there is a dropdown menu showing "1 样 2 杨 3 阳 4 央 5 养 6 洋". At the bottom, there are "Done" and "Menu" buttons.

You have successfully switched to T9 Pinyin mode.

25

## 2.2 Using Various Input Modes


Using various built-in input modes on the phone: character, T9, and numeric input modes.

2

-  To insert a line break under any input mode, press the  **OK** button.


### 2.2.1 Symbols

Using the phone to enter various punctuation and emotion symbols.

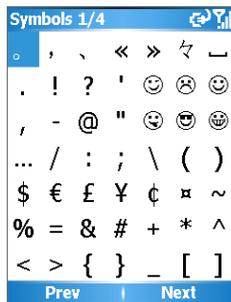

### Action: Switch to Symbol Input


- 1 Press & hold . Then select the  **Symbol**.
- 2 Select the  **Symbol**. Then select the  **OK** Button.
- 3

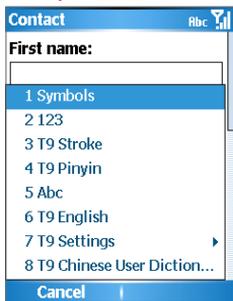

You can also hold the # key to activate the direct symbol input function.




Press Previous/Next Page to switch to other pages.

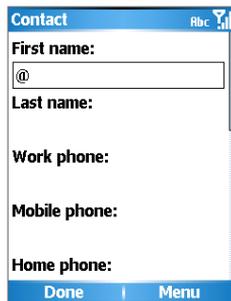

You have successfully entered the selected symbols.

## 2.2.2 Numbers

Using Numeric Input mode to enter numbers.

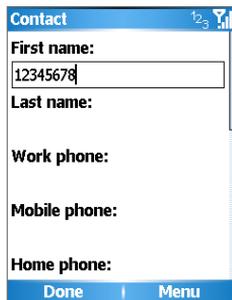

Contact 123

First name:  
12345678

Last name:

Work phone:

Mobile phone:

Home phone:

Done | Menu


▲ Entering numbers.

2

Learning the Input Modes

### Action: Switching to numeric input

- 1 Press & hold  Then select  123
- 2
- 3 Press  Number

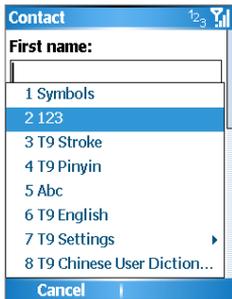


Contact 123

First name:

1 Symbols  
2 123  
3 T9 Stroke  
4 T9 Pinyin  
5 Abc  
6 T9 English  
7 T9 Settings  
8 T9 Chinese User Diction...

Cancel |

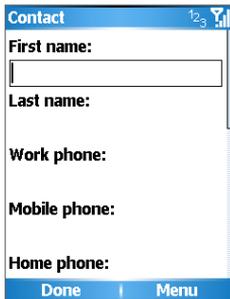

Contact 123

First name:


Last name:

Work phone:

Mobile phone:

Home phone:

Done | Menu

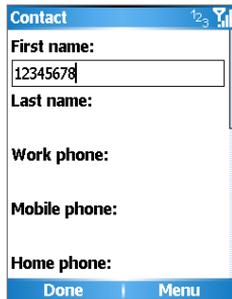

Contact 123

First name:  
12345678

Last name:

Work phone:

Mobile phone:

Home phone:

Done | Menu

The  located at the upper right corner indicates that you have switched to numeric input mode.

For example: 12345678.

27



## 2. 2. 3 T9 Strokes

Use the character strokes quick input mode to enter Chinese characters. If the character to be entered is complicated, it can be broken into two parts.

Corresponding button/character strokes:

— | } \ → ?  
1 2 3 4 5 6

▲ Strokes input.

### Action: Enter Chinese characters using T9 Strokes

- 1 Press & hold Then select T9 Strokes
- 2
- 3 Press T9 Strokes

The located at the upper right corner indicates that you have switched to T9 character stroke input mode.

For example: to enter “Wang”, press the number keys 9, 2, 6, 4 respectively.



- 4 Press & hold Selected Character Code

Contact 笔 信号

First name:  
[ ]

Last name:

Work phone:

Mobile phone:  
[ ]

1王 2王 3现 4理 5表 6玉

Done | Menu

Make sure the input is a complete character, then select the character without the underline.

- 5 Press Strokes

Contact 笔 信号

First name:  
王

Last name:

Work phone:

Mobile phone:

1子 2爷 3国 4府 5维 6朝

Done | Menu

You have successfully entered the character.

**Action: Entering complicated characters**

- 1 Press Strokes
- 2 Press & hold Selected Character Code
- 3 Press Strokes

Contact 笔 信号

First name:  
王小

Last name:

Work phone:

Mobile phone:  
日

1日 2月 3日 4日 5月 6明

Done | Menu

Contact 笔 信号

First name:  
王小

Last name:

Work phone:

Mobile phone:  
日

1日 2时 3是 4最 5题 6明

Done | Menu

Select the first part of the character. The underlined character is a part of another character.

Contact 笔 信号

First name:  
王小

Last name:

Work phone:

Mobile phone:  
日

1晚 2星 3易 4昨 5暖 6明

Done | Menu

Select the second part of the character.





2

Learning the Input Modes

- 4 Press & hold  
Selected Character  
Code



You have successfully entered your desired character.





## 2.2.5 T9 Pinyin



T9 pinyin can enable you to enter Chinese characters with Romanized pinyin. Please refer to 2.2.6 Entering Pinyin with English Input Method.

2

### Action: Enter Chinese characters using T9 Pinyin

- 1 Press & hold Then select
- 2 Press <Pinyin>
- 3 Select the <Correct pinyin>

Pinyin

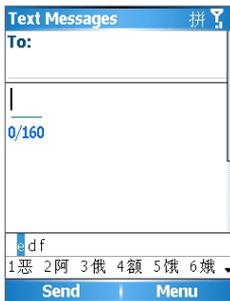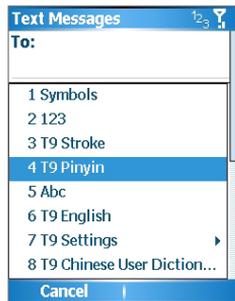


In the upper right hand corner indicates that you have switched to T9 Pinyin input mode.



- 4 Press & hold  
<Selected Character  
Code>

2

Learning the Input Modes

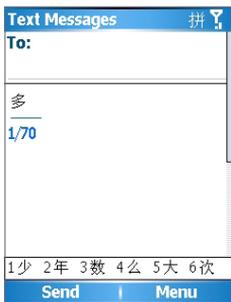



## 2. 2. 5 Entering English characters

There are two ways to enter English letters using 595.

T9 English – Use T9 English to key in English words faster. You can also add new words to the dictionary to increase typing speed.



English – Press the respective number key as indicated by the labeled alphabets to input English. English entering status:

-  First letter in upper case, followed by lower case letters.
-  All lower case.
-  All upper case.

2

### Action: Entering T9 English

- 1 Press & hold  Then select  T9 English
- 2
- 3 Press  The English to Enter

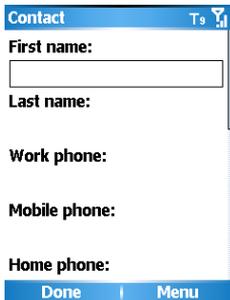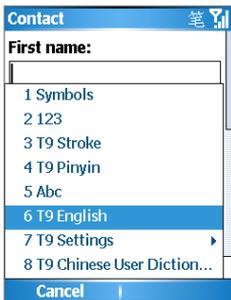

The  located at the upper right corner indicates that you have switched to T9 English input mode.

For example: to enter “John”, press the number keys 5, 6, 4, 6 respectively.




## Action: Adding T9 English words

- 1 Press **Any number key**
- 2 Select **Add Word?**
- 3 Enter **Add Word?**  
Press the **OK** button


2

Learning the Input Modes

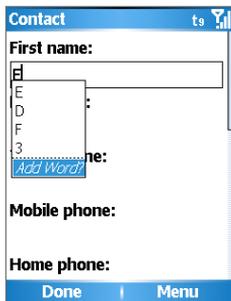

Enter the new word to add.


- 4
- 5 Press **English**

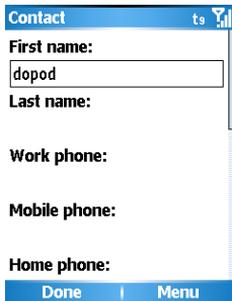

The entered word has been added to the dictionary.

## Action: T9 Preferences

- 1 Press & hold **+T9**  
Then select **T9 Settings**
- 2 Select **Preferences**
- 3

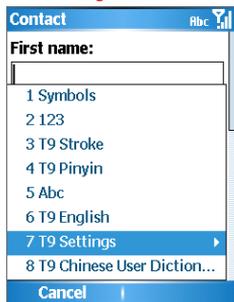

Setup T9 input preference settings.

You can configure the desired setup items here.

2

Learning the Input Modes

## T9 Chinese User Dictionary



You can use the Chinese User's Dictionary to set up shortcuts for phrases which will speed up text entering.

## T9 My Words



You can use My Words to set up English phrases for quick and convenient text input.



35

## Action: Entering English text


- 1 Press & hold  Then select  Abc
- 2
- 3 Press  The English to Enter

### Learning the Input Modes

2

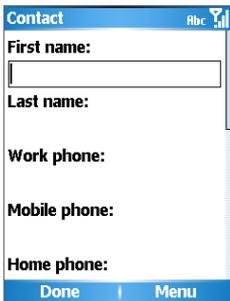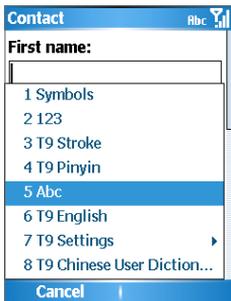

The  located at the upper right corner indicates that you have switched to English input mode.

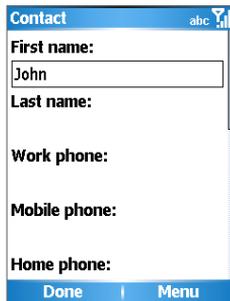

(Note 1) (Note 2)

(Note 1) If the letter to be entered is at the back, press the number key repeatedly. For example, to enter “L” press  number key three times.

(Note 2) Under English mode, you can press  to enter punctuation or  to insert a comma.




## 2. 3 Using the Back Button to Delete Characters

You can use the Back button to delete a single character, or press and hold the Back button to delete all characters.

2

### Action: Deleting a single character

- 1 Press the  Back button
- 2

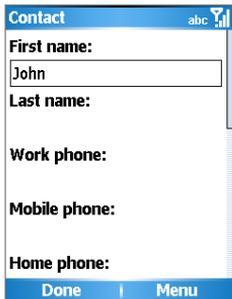

**Contact** abc [signal]

**First name:**  
John

**Last name:**


**Work phone:**

**Mobile phone:**

**Home phone:**

Done | Menu

To return to the previous character and delete it, press the Back button.

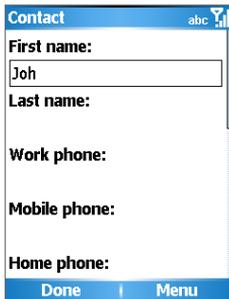

**Contact** abc [signal]

**First name:**  
Joh

**Last name:**

**Work phone:**

**Mobile phone:**


**Home phone:**

Done | Menu

You have successfully deleted a single character.

## Action: Deleting all characters

- 1 Press & hold  Back button
- 2

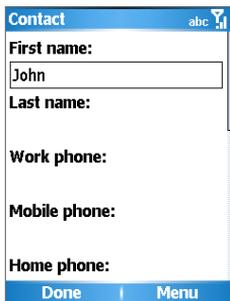

2

**Contact** abc [signal]

**First name:**

**Last name:**


**Work phone:**

**Mobile phone:**

**Home phone:**

Done | Menu

To delete the entire word or contents in the number field, press and hold the Back button.

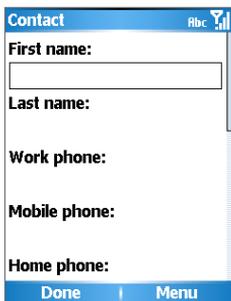

**Contact** abc [signal]

**First name:**

**Last name:**

**Work phone:**

**Mobile phone:**

**Home phone:**

Done | Menu

You have successfully deleted all characters.



# Topic

3

## Using the Communication Functions

**In this topic, you will learn about...**

1. Using the Phone
2. Making Phone Calls
3. Receiving Voice Calls
4. Video Calls
5. Call Options
6. Additional Information on Dialing
7. Setting Up Speed Dial Entries





# Index Action

Phone Home Screen .....	42
Turn Off the Phone Function .....	43
Turn on the Phone Functions .....	44
Enter PIN Code.....	45
Adjusting Headset Volume .....	46
Dialing from the Phone Screen.....	47
Dialing from Contacts List .....	48
Dialing from Contacts Details .....	49
Using Call History for Dialing .....	50
Use Speed Dialing from Home Screen .....	52
Use Speed Dial from Speed Dial Manager .....	53
Answering Incoming Calls .....	54
Reject Incoming Calls .....	55
Checking Missed Calls .....	55
End Call.....	56
Hold.....	60
Swap Calls.....	61
Creating Multi-Way Conferencing.....	62
Activate/Deactivate the Speakerphone.....	63
Activate Mute.....	64



Unmute .....	65
Dial to Voicemail .....	66
Dialing Emergency Calls .....	67
Dialing International Calls .....	68
Using SIM Card Services (STK) .....	69
Creating a Speed Dial .....	70
Editing a Speed Dial .....	71
Removing a Speed Dial.....	72





## 3. 1 Using the Phone

When you begin to use the 595 phone functions, you will need to enter the SIM card PIN number in order to connect to the GSM/UMTS mobile network. When using this device, you can control wireless functions, e.g. activate/deactivate the phone. You can also adjust the headset volume anytime during a call or when using the device.

### 3. 1. 1 Phone Functions


3

At the Phone screen, you can access, dial, search contacts, or save phone numbers to the contacts list. Under certain circumstances (such as on a plane), you may need to turn off the phone functions of the handset. You can use the Comm Manager to manually deactivate/activate the phone's communication functions. When the phone function is off, you will not be able to receive calls, send/receive messages, or use GPRS/UMTS by connecting to a wireless mobile network. But other phone functions such as browsing the calendar, listening to music, or playing games can still be used.

#### Action: Phone Home Screen

1 Press  **Call** button


2

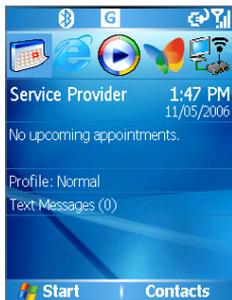

Switch to the phone screen.

## Action: Turn Off the Phone Function

- 1 Press  **Power** button
- 2 Select  **Comm Manager** and then press the  **OK** button
- 3 Select  **1** and then press the  **OK** button

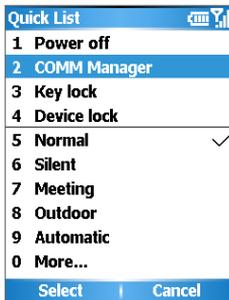

Use Up/Down buttons to select Comm Manager.



Phone functions are activated, and pressing the button will turn off the phone.

3

Using the Communication Functions


- 4 Select  **Exit**
- 5



Home screen will display  "Phone Off".

## Action: Turn on the Phone Functions


- 1 Press  **Power** button
- 2 Select  **Comm Manager** then press the  **OK** button
- 3 Select  **1** then press the  **OK** button

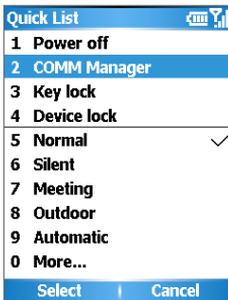

Use Up/Down buttons to select Comm Manager.

While turning off the phone functions, enter the PIN code (please refer to section 3.1.2).

- 4 Select  **Exit**
- 5

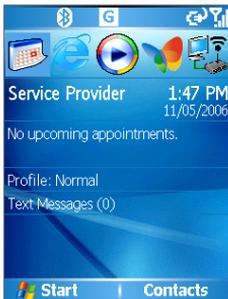

The Home screen displays your telecom service provider name.

### 3. 1. 2 Enter PIN Code

Each time you turn on the phone or activate the phone functions, you will need to enter the SIM card PIN code (personal identification number) provided by your account's telecom service provider.



▲ Enter SIM PIN code.

3


Using the Communication Functions

#### Action: Enter PIN Code

- 1 Enter <SIM PIN>
- 2 Select  Done
- 3



Enter the phone's SIM PIN code.

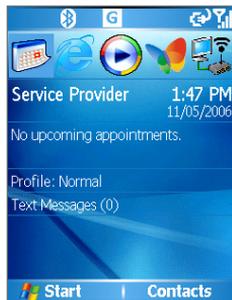

The  icon located at the upper right corner indicates that you have turned the phone on.

45




### 3. 1. 3 Adjust Handset Volume

During a call, you can adjust the headset volume to clearly hear the conversation.

For sound settings, please refer to section 10. 4; for control mode settings, please refer to section 10. 5.

3

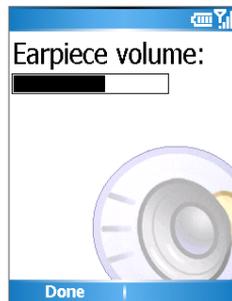


▲ Headset volume adjustment screen

#### Action: Adjusting Headset Volume

- 1 Scroll the  wheel
- 2 Scroll the  wheel



Press down on the scroll wheel on the left side of unit

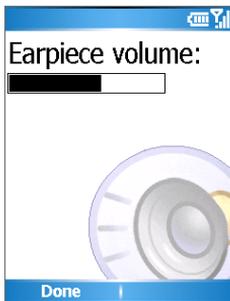


Scroll the wheel to adjust volume

## 3. 2 Making Phone Calls

You can dial calls directly from Home screen, phone screen, contacts, speed dial entries, call records, SIM Manager, or use the voice labels to dial your contacts by voice control.

### 3. 2. 1 Phone Screen


Enter the dialing screen by pressing the call button; you will then be able to enter the phone number and dial call.

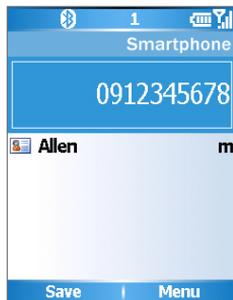

▲ Dialing from the phone screen.


#### Action: Dialing from the Phone Screen

1 Press  Call button

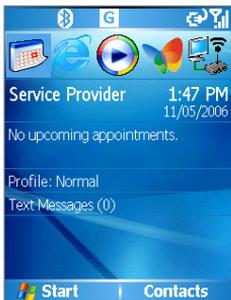


Press the Call button to open the phone screen.

2 Enter <the phone number you wish to dial> Press  Call button

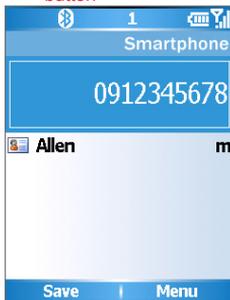

Automatically lists the contacts that apply.

3

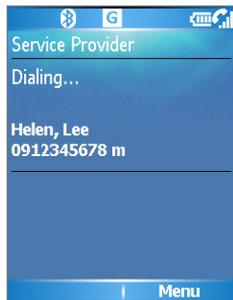

Dialing...




### 3. 2. 2 Dialing by Using Contacts

Choose the contact and the phone number in the Contacts List. You can use the Left/Right button to switch the contact's number.

To create a contact and to edit contacts, please refer to section 4. 1 Contacts Descriptions.

3

- Following each contact's entry or phone number, "M" stands for mobile number, "H" stands for home number, "W" stands for work number.

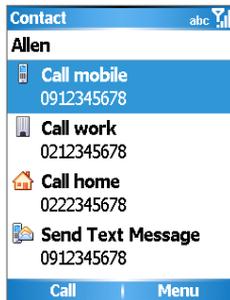


▲ Using Contacts application program to dial up the recipient.



#### Action: Dialing from Contacts List

- 1 Select Contacts
- 2 Select <the contact you want to dial>
- 3 Press Call button

Using the Communication Functions

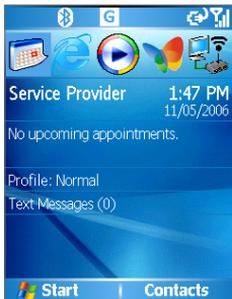

Opens Contacts list.

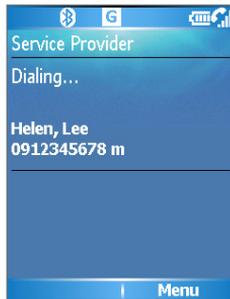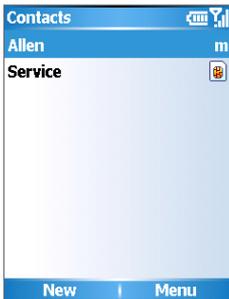


Dialing up the contact.

## Action: Dialing from Contacts Details


- 1 Select <Contacts> Then press the OK button
- 2 Select <the contact you want to dial>
- 3 Press Call button



Opens the person's Contact Details that you want to access.

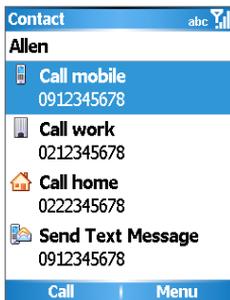

Select the contact's number you want to dial, for example: mobile number.

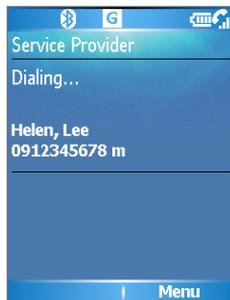

Dialing up the contact.

3

Using the Communication Functions

### 3. 2. 3 Dialing from Call History

Using Call History for dialing. The Call History includes incoming calls, missed calls, and outgoing calls.

 Call History icon:

-  Missed call
-  Answered incoming calls
-  Answered Video Calls
-  Outgoing calls
-  Outgoing video calls



▲ Dialing from Call History.

#### Action: Using Call History for Dialing

- 1 Select  Start
- 2 Select  Call History  
Then press the  OK button
- 3 Select  <Contacts>  
Then press  Call button



Opens the Application program menu.



Select the contact you want to dial.



4



Dialing up the contact.

3

Using the Communication Functions



### 3. 2. 4 Using A Speed Dial

You can set speed dial entries/shortcuts for frequently dialed contact numbers or frequently used application items. You will only need to press and hold the corresponding speed dial entry/shortcut button to dial your contacts or access application programs. If you set the corresponding number as two digits, such as 14, then you can first enter 1 and then hold 4 to activate the speed dial. For speed dial settings, please refer to section 3. 6.

3




▲ Using speed dial buttons to correspond to function dialing.

#### Action: Use Speed Dialing from Home Screen

1 Press and hold **4**   
<Speed dial corresponding button>



At the Home screen, press the speed dial button, for example: 4.

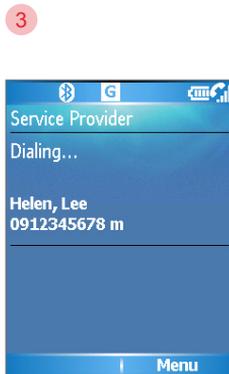

You have successfully dialed up the contact.

## Action: Use Speed Dial from Speed Dial Manager


- 1 Select  Start
- 2 Select  Speed Dial  
Then press the  OK button
- 3 Select  the contact you want to dial



Opens Start Menu.



Opens the Speed Dial Application program.

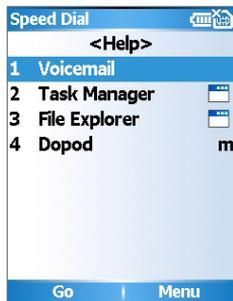


Speed Dial menu.

3

Using the Communication Functions

- 4 Press  Call button

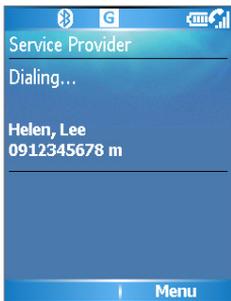


Dialing up the contact.



## 3. 3 Receiving Voice Calls

When you receive an incoming call, the phone will display the information on both the inner and outer screen for the user to decide on answering or ignoring the call. When you are in a call, you will still be able to press the Home button to return to the Home screen at any time, or operate other application programs.

3

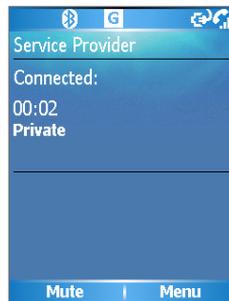


▲ Incoming call display screen.

### 3. 3. 1 Answer Incoming Calls


Using the phone to answer incoming calls from other contacts.

#### Action: Answering Incoming Calls

- 1 Press  Call button or select  Answer
- 2

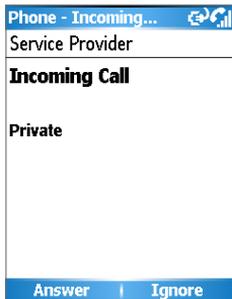

Incoming call information.

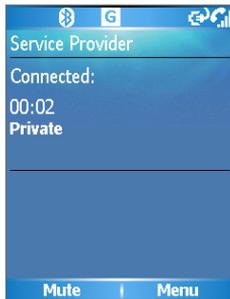


Answered incoming calls.



## Action: Reject Incoming Calls

- 1 Press Hang Up button or select Ignore
- 2

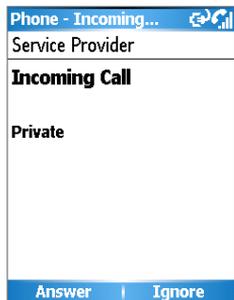

Incoming call information.



The located at the upper left hand corner indicates the missed calls (Note 1).

(Note 1) The Home screen will display "Number of missed calls". The outer screen will also show that you have missed calls.

3

Using the Communication Functions

## Action: Checking Missed Calls

- 1 Select Missed Calls
- 2 Press the OK button
- 3



At the Home screen, use the directional buttons to move to the Missed Calls item.



Displays the history of all incoming calls.



55

## Action: End Call

1 Press  Hang Up button

2

3

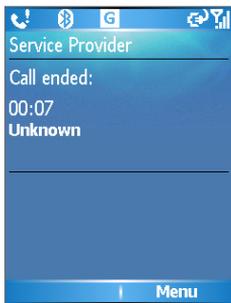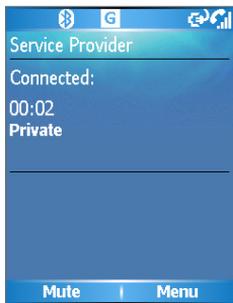

Call has ended.

## 3.4 Video Calls

You can use the phone application to make video calls to contacts. Before dialing or answering video calls, please make sure you are using a 3G mobile network supported USIM card and account. When the task bar at the top of the screen shows the appropriate icon , it means that you are already using a UMTS mobile network, and are able to dial/receive video calls.

When using the video call function, make sure both sides are:


- Using a phone and account that support 3G video functions
- Able to receive 3G signals on both sides during a call

3

Using the Communication Functions

### Action: Create/End Video Call

- 1 Press  Call button
- 2 Enter <phone number> Press  Video Call button
- 3

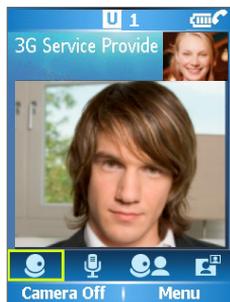

Video call in progress

57



4 Press  Hang Up button

5



End video call



End call

3

Using the Communication Functions

**Action: Answer Video Calls**

1 Press  Call button

2



## Video Call Options

During a video call, you can select the following options to adjust video settings:



: Adjust video brightness



: activate/deactivate video camera



: activate/deactivate microphone



: select the main (front of unit) lens or secondary (back of unit) lens



: select the image location




## 3. 5 Call Options

Setting up the “During Call” options You can choose to use Flash, activate mute, Speakerphone, or Conference etc.

### 3. 5. 1 Using Call Waiting

3

You can use call waiting to hold the current call. When you use call waiting you will still be charged for the minutes used.

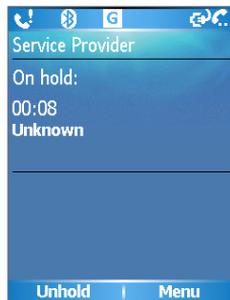


▲ Call Waiting screen.

#### Action: Hold

1 Select   
Menu > Hold


2

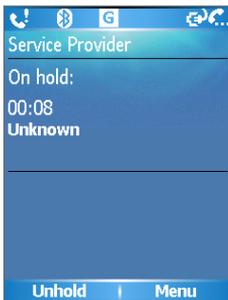

Call is held. To cancel, please select “Unhold”.

### 3. 5. 2 Swap Calls

You can swap between two calls.

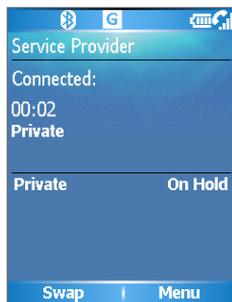


3

▲ Swap to another call during a multi-call connection.

#### Action: Swap Calls


1

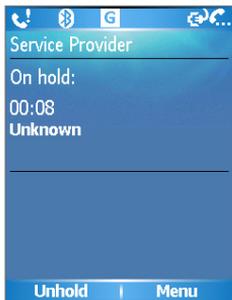

When a call is taking place, another call dials in.


2

Select  Answer

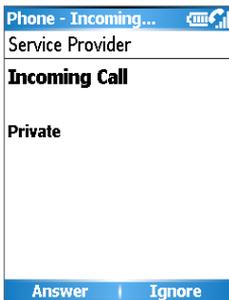

3

Select  Swap

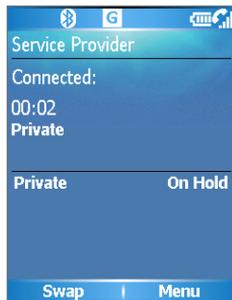

Swapping to the other call.

Using the Communication Functions

61



### 3. 5. 3 Create Multi-Way Conferencing

You can hold one call, then dial out the second phone number, or answer a new incoming call during the current one.

3



**!** Not all service providers support multi-way conferencing, please contact your service provider for more information.



▲ Activate multi-way conferencing function.

#### Action: Creating Multi-Way Conferencing

- 1 Select Menu
- 2 Select  Conference  
Then press the OK button

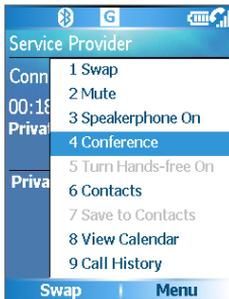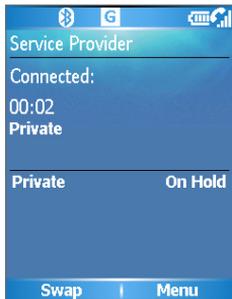


Create multi-way conferencing.



### 3. 5. 4 Activate/Deactivate the Speakerphone

Using the built-in speakerphone for conversation with callers without holding the handset. Using the speakerphone allows other people to listen in to the conversation.

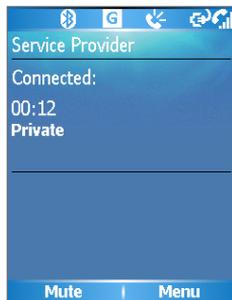

▲ Speakerphone activated screen.

#### Action: Activate/Deactivate the Speakerphone


1 Select Menu > Speakerphone On

2

3 Select Menu > Speakerphone Off



You can also press and hold Call button to activate the speakerphone function.

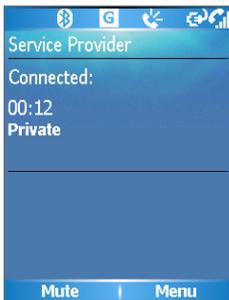


After speakerphone is activated, the upper right corner will display the icon.



You can also press and hold Call button to deactivate the speakerphone function.

### 3. 5. 5 Activate Mute

During a call, you can temporarily turn off the handset microphone to prevent the person on the other side from hearing your voice.

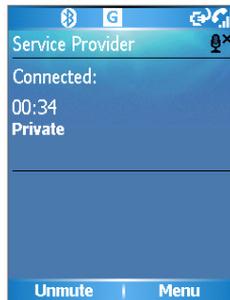


▲ Activate mute.

#### Action: Activate Mute

- 1 Select Menu > Mute
- 2



You can also select the Mute key directly on the screen.

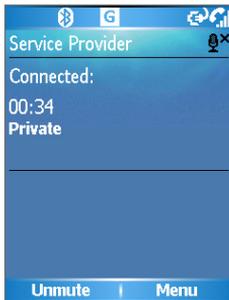


After Mute is activated, the upper right screen corner will display the icon.


## Action: Unmute

1 Select  Menu > Unmute

2

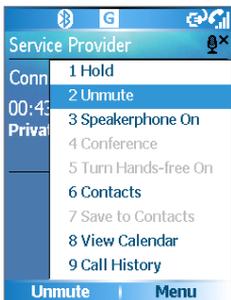

You can also select  Unmute directly on the screen.

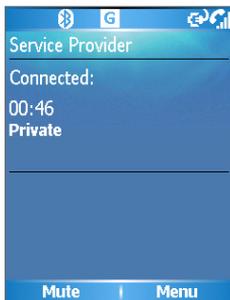

Mute is deactivated.

3


Using the Communication Functions

## 3. 6 Additional Information on Dialing

To listen to messages in the voicemail, you can dial the voicemail number (provided by the service provider) from the phone screen directly. The first slot of speed dial is usually set up as the voicemail number; you can also use other speed dials to call the voicemail. Your service provider will provide you with your voicemail number.

### 3. 6. 1 Dialing to Voicemail

When your phone cannot be reached, the telecom system will automatically connect the incoming call to the voicemail. You can dial up the voicemail to listen to your messages.

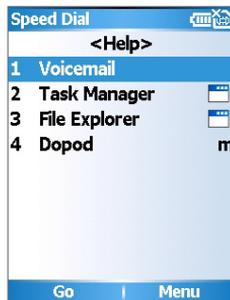

▲ Dial up the voicemail from the Speed Dial application program.

#### Action: Dial to Voicemail


- 1 Select Start
- 2 Select Speed Dial  
Then press the OK button
- 3 Select Voicemail  
Then press Call button



Opens Start Menu.



Opens Speed Dial.

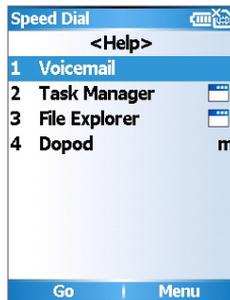


You can also press & hold the speed dial button 1 directly on the Home screen.

### 3. 6. 2 Dialing Emergency Calls

If you need to dial the local emergency help number, do so by dialing directly from the phone screen. When the phone functions are off or keypad is locked, you can still dial emergency calls.

**!** The SIM card may store other emergency help numbers, please ask your service provider for more information.

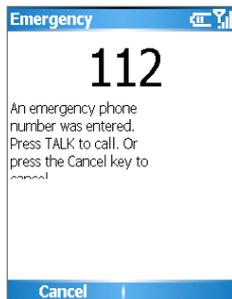


▲ Dialing emergency calls.

#### Action: Dialing Emergency Calls

- 1 Enter the emergency phone number. Then press  Call button.



It is possible to dial emergency numbers when the Home screen or keypad is locked.

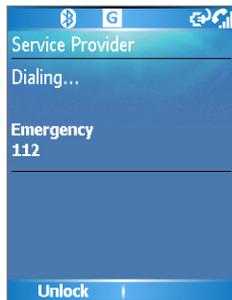

Dialing emergency calls.

3

Using the Communication Functions

67

### 3. 6. 3 Dialing International Calls


Using the phone for international dialing. International dialing code includes the country codes for both you and your recipient.

3



▲ Dialing International Calls.

#### Action: Dialing International Calls

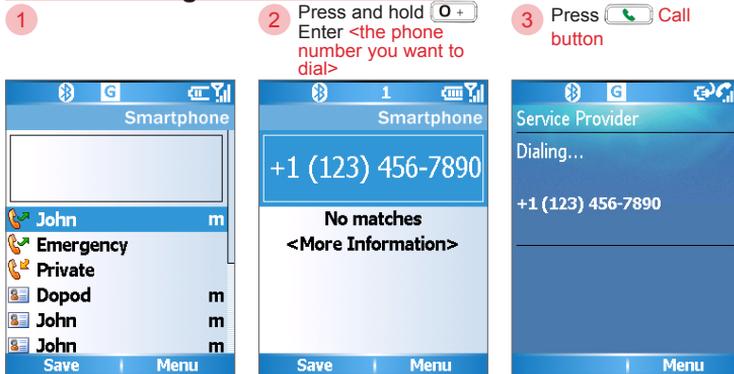

Dial from the Home screen or the phone screen.

“+” will replace the country code for your current location.

Dialing international calls.

### 3. 6. 4 Using SIM Card Services (STK)

You can use the various informational services, such as calling customer services and voicemail, built in the SIM card by the service provider. To use the SIM card services, please first insert your SIM card into the phone. SIM card informational services may vary depending on the different service providers.

3

Using the Communication Functions

#### Action: Using SIM Card Services (STK)

- 1 Select  **Start**
- 2 Select  **Accessories**  
Then press the  **OK**  
button
- 3 Select  (STK icon)  
Then press the  **OK**  
button



Opens Start Menu.



Opens Accessories.



The STK icon's displayed name is your service provider name.

69



### 3. 7 Setting Up Speed Dial Entries

You can create a speed dial entry (or shortcut) entries for frequently dialed numbers or accessed programs.

3




▲ Speed dial settings screen

#### Action: Creating a Speed Dial


- 1 Select **Contacts**
- 2 Select **<Contacts>**  
Then press the **OK** button
- 3 Select **<Contact information to set up>**



Opens Contacts list.

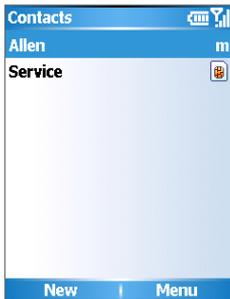


Choose the contact to set up for speed dialing.

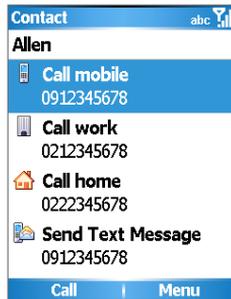

Choose the information item to set up, for example: mobile number.

- 4 Select  Menu >  
Add to Speed Dial

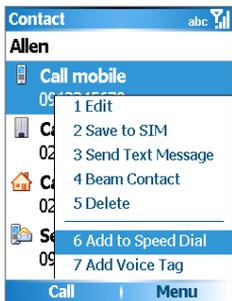

- 5 Select  Keypad assignment>  
Then select  Done



6



Use the Left/Right buttons to choose the corresponding number key.

You have successfully added the speed dial entry.

3


Using the Communication Functions

## Action: Editing a Speed Dial

- 1 Select  <Dialing item>  
Then press the  OK  
button
- 2 Select  Edit
- 3 Enter <the Field you want to edit>



Select the speed dial entry you want to edit.

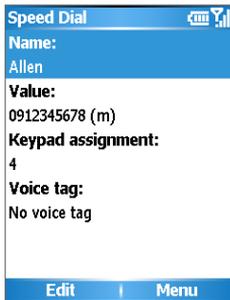

71

## Action: Removing a Speed Dial

- 1 Select <Dialing item>
- 2 Select Menu
- 3 Select Delete



3

Using the Communication Functions

- 4 Select Yes
- 5



Please note that the deletion cannot be restored.



You have successfully deleted the speed dial.



# Topic

# 4

## Managing Personal Information

**In this topic, you will learn about...**

1. **Contacts**
2. **Calendar**
3. **Tasks**
4. **Voice Notes**





# Index Action

Opening Contacts Application Program from Home Screen .....	77
Opening Contacts Application Program .....	77
Adding New Contacts to the Phone .....	78
Setting Up Contact's Extension Line Dialing .....	80
Adding New SIM Contacts .....	81
Copying SIM Contacts to the Phone .....	82
Copying Phone Contacts to SIM Card .....	82
Searching Contact by Name .....	83
Searching Contact by Phone Number .....	84
Dialing to Contacts .....	84
Viewing and Editing Contact .....	85
Using the Contacts Sorting Function .....	86
Setting Up Contacts Categories .....	87
Using MMS to Transfer Contacts .....	88
Transfer Contacts Via IR/Bluetooth .....	89
Opening Calendar Application Program .....	90
Opening Calendar Application Program from Home Screen .....	91
Adding New Appointments .....	92




Viewing and Editing Appointments .....	95
Switching the Calendar Display Mode .....	96
Appointment Reminder Screen.....	97
Using MMS to Transfer Appointments .....	98
Using Bluetooth to Transfer Appointments .....	99
Setting Up Calendar Options.....	100
Open the Tasks Application .....	101
Adding New Tasks.....	102
Setting Tasks as Complete.....	103
Open the Voice Notes Program .....	104
Adding a New Voice Note.....	105
Playback Voice Notes .....	106
Renaming Voice Notes.....	107
Deleting Voice Notes.....	107





## 4. 1 Contacts

You can add new contacts and information for contacts. Setting up all available communication information for the contact will allow you to connect with the person quickly or browse the contact's information. Contacts will be saved in the phone memory. You can also sync the contacts info with Microsoft Exchange Server ® or Microsoft Office Outlook ® on a personal computer through ActiveSync ®. In addition you can also fill out each informational field including category, e-mail, address, pictures, and ring tones. To sync your phone, please refer to Chapter 9.

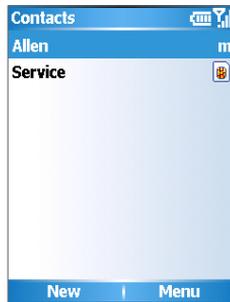

▲ Contacts application program

4

### 4. 1. 1 Adding New Contacts to the Phone

You can add new contacts and their information to the phone. Setting up the various communication methods for the contact will allow you to connect to the person quickly.

- ☑ On the contacts list entries, the display of “M” represents mobile number, “H” represents home number, and “W” represents work number.



▲ Enter various information for the contact




## Action: Opening Contacts Application Program from Home Screen

- 1 Select  **Contacts**
- 2



Opens Contacts application program.

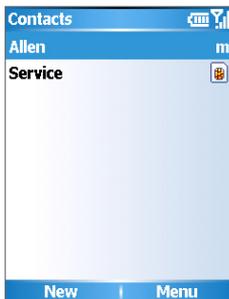

Contacts screen.

4

Managing Personal Information

## Action: Opening Contacts Application Program


- 1 Select  **Start**
- 2 Select  **Contacts**  
Then press the  **OK** button
- 3



Opens Program File.



Opens Contacts application program.

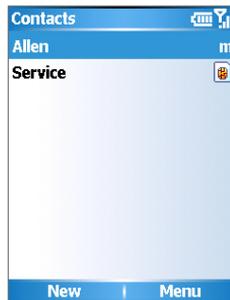


Contacts List screen.

77

## Action: Adding New Contacts to the Phone

- 1 Select  **Contacts**
- 2 Select  **New**
- 3 Go to  **Last name**, and **First name** respectively. Enter **<Contact's name>**

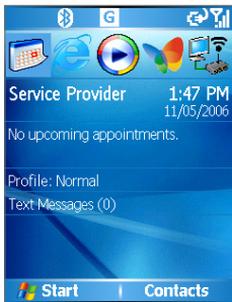

Opens Contacts application program.



Select Add New directly from the screen or select Add New Contact from the Menu.



Enter first and last name. For example: last name "Li", first name "Helen"

4

Managing Personal Information

- 4 Go to  **Mobile phone**, then enter **<Mobile phone>**
- 5 Go to  **Custom ring tone**, then Select  **<Ring tone>**
- 6 Go to  **Picture**. Then press the  **OK button**



Enter the contact's mobile number. For example, 0918123123.



Select a ring tone (Note 1). For example, Tremor.



Select a picture.



7 Select <Picture>  
Then select **Contacts**



Choose the picture for the incoming or outgoing calls of the contact you want to set up. (Note 2)

8 Go to **E-mail**  
Then select <E-mail>



Enter the contact's e-mail address.

9 Select **Done**



You have successfully created a new contact.

4

(Note 1) You can save custom ring tones under the \Application Data\Sounds folder on the phone.

(Note 2) You can also use Microsoft Office Outlook ® on a personal computer to set up the contact's picture, then sync the info to the phone via ActiveSync ®.


Contact's information fields:

Last Name	Picture	Work Fax	Company	Other address	Government ID
First Name	E-mail 1, 2, 3	Home Fax	Department	Notes	Account name
Work phone 1, 2	Instant Message 1, 2, 3	Assistant phone	Job title	Nickname	Customer ID
Mobile phone	Categories	Radio phone	Office Location	Birthday	Spouse
Home phone 1,2	Pager	Web page	Office address	Anniversary	Children
Custom ring tone	Car phone	File as	Home address	Manager	Assistant




## Action: Setting Up Contact's Extension Line Dialing

- 1 Select  Menu > Insert Pause
- 2 Enter <Extension number>

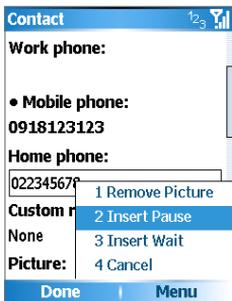

The contact's editing screen. Enter the pause symbol after the phone number.

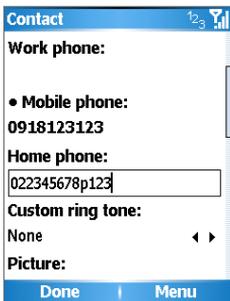

Enter the contact's extension number, for example: 123.

4

## 4. 1. 2 Managing SIM Contacts

Adding and saving new contacts onto your SIM card. When you replace the SIM card on the phone, the original contacts on the SIM card will change to the new SIM contacts. However the phone's contacts will not be changed. You can enter the name and phone number for SIM contacts. But you will not be able to specify other information fields such as category, e-mail, address, pictures, and ring tones. To use the SIM Card Manager, please refer to section 11. 5.

SIM Card Manager formats the contact names in the "First name", "Last Name" order. If the phone contacts name is "Smith, Roger", the name will be displayed as "Roger Smith".

**SIM Contact** Rbc

**Name:**  
Smith, Roger

**Number:**  
0912345678

Done | Menu

▲ Editing SIM Contact.

4

Managing Personal Information

### Action: Adding New SIM Contacts

- 1 Select Menu
- 2 Select  New SIM Contact
- 3 Enter <Name> and <Number>  
Then select Done

**Contacts** m

Allen m

Service

New | Menu

Opens Contacts menu.

**Contacts** m

Allen

Li, H

Serv

1 New Contact

2 New SIM Contact

3 Beam Contact

4 Copy Contact

5 Delete Contact

6 View By

7 Filter

8 Send as vCard

9 Send MMS to mobile

New | Menu

**SIM Contact** Rbc

**Name:**  
Daniel

**Number:**  
0912345678

Done | Menu

Saves the contact's information onto the SIM card.

81

## Action: Copying SIM Contacts to the Phone

- 1 Select **Menu** >  
<SIM Contact>
- 2 Select **Menu** >  
Add to Contacts



Choose the SIM contacts to copy to the phone. For example: Roger Smith.

4

Managing Personal Information

## Action: Copying Phone Contacts to SIM Card

- 1 Select **Menu** >  
Contacts to SIM
- 2 Check-mark **Menu** >  
<Contact to copy>
- 3 Select **Save**



SIM Manager's main screen.



Check the contacts to copy to SIM card. For example, Dopod.



Saves phone contacts to SIM card.

82

### 4. 1. 3 Search Contacts and Dial

You can perform a search by the contact's name and number(s). For example, when you press **9 WXYZ**, it will search for contact names with English letters and Pinyin spelling.


Using T9 Strokes input mode to search for contacts. Please refer to section 10. 10 Assistant Tools and choose the input mode to use for "Smartdial Settings"



▲ Searching contact by name.

#### Action: Searching Contact by Name

- 1 Enter  
<Words to search>
- 2 Enter  
<Words to search>
- 3

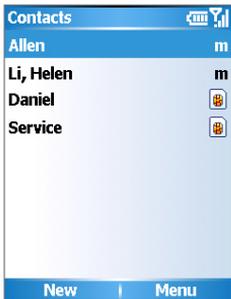

For example, to search for "Al", press **9 WXYZ** **6 MND** respectively (Note 1).



Found words are highlighted. You can continue to enter the next word.



You have successfully found the contact you were searching for.

## Action: Searching Contact by Phone Number

- 1 Enter <Numbers to search>
- 2



Search according to contact's phone number. For example, enter 0952



Contacts that have phone numbers starting with 0952 will be highlighted.

4

## Action: Dialing to Contacts


- 1 Select <the contact you want to dial>
- 2 Select  <Number> Then select  Call
- 3



You can follow the search methods introduced in this section to select the contact.




Select the contact's number. For example, Mobile Number.

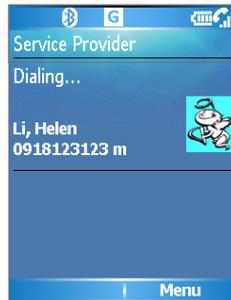

Dialing up the contact.

## 4. 1. 4 Viewing and Editing Contacts

You can view a contact's information, dial calls, send messages or e-mail, and update each contact's information to keep it accurate. To add a new contact, please refer to section 4.1.1.

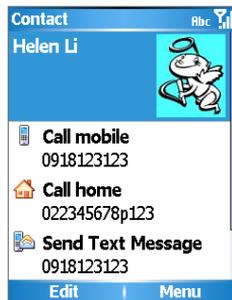

▲ Viewing contact information.

### Action: Viewing and Editing Contact

- 1 Go to **<contact to view>**  
Then press the **OK** button
- 2 Go to **<Contact name>**  
Then select **Edit**
- 3 Enter **<entry to edit>**  
Then select **Done**



Select the contact you want to view.



You can also edit the contact directly from Menu Edit.




For editing contacts, please refer to section 4.1.1.



## 4. 1. 5 Using Contacts Sorting

You can use category sorting to quickly search for contacts. For contacts sorting setup, please refer to section 4.1.4 Editing Contacts.

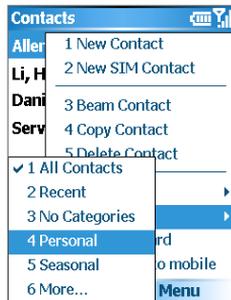

▲ Using category sorting to manage contacts.


4

### Action: Using the Contacts Sorting Function

- 1 Select Menu > Filter
- 2 Select <Category to switch>
- 3



Using Filter function to switch categories.

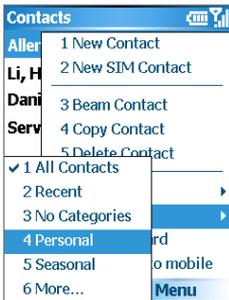

Select the category you want to switch to. For example, Personal.





Browse contacts under this category.



## Action: Setting Up Contacts Categories

- 1 Select **Categories**  
Then press the **OK** button
- 2 Select **Preferences**  
Then press the **OK** button
- 3 Select **Done**

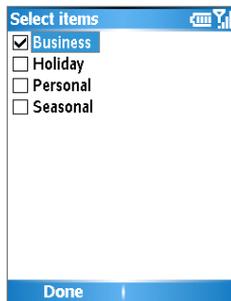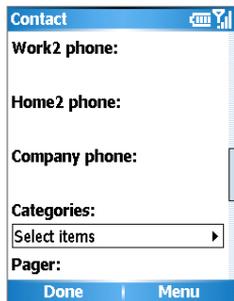


Choose the category you want to set up. For example, Business.

You can also select multiple categories.

4

- 4 Select **Done**

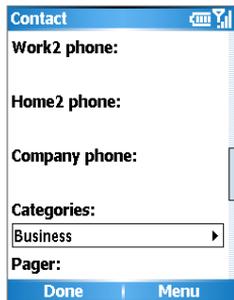

Category setup is complete.

- If you want to add or delete contacts category groups, please modify the category groups from Microsoft Office Outlook® on a personal computer, then sync to the phone. For sync information, please refer to Chapter 9.



## 4. 1. 6 Transmitting Contacts Information


You can transfer via vCard (Note 1), use MMS to share information with contacts, or use Bluetooth to transfer and share contacts information with other people. To use MMS, please refer to section 5. 3; to use Bluetooth connection, please refer to section 7. 2.

(Note 1) vCard: Electronic Business Card. Used to record your business card information or that of your contacts. You can send your own vCard to other phones or computers that have vCard compatibility.

4



To use your Bluetooth to transfer data, Bluetooth at the receiving end must be set to discoverable, or have been synchronized with your phone. For Bluetooth setup methods, please refer to section 7.2. To use IR to transfer data, please line up the IR ports on both devices.

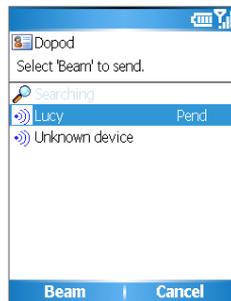

▲ Transfer contacts through Bluetooth.

## Using MMS to Transfer Contacts





▲ Using MMS for sharing.

You can use the following procedures to share contacts information via MMS.

- Under the Contacts List, choose the contacts you want to transfer, and then select **Menu** > **Send as vCard**.
- At the MMS Edit screen, select the **Recipient** or enter the **recipient phone number**.
- After editing is complete, select **Send**.

## Action: Transfer Contacts Via IR/Bluetooth


- 1 Select <contacts you want to transfer>
- 2 Select  Menu > Beam Contact
- 3 Select  <Device you want to exchange with> Then select  Beam Data

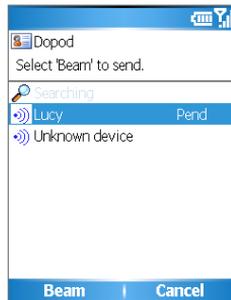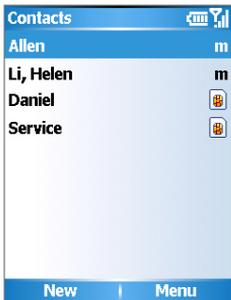

4

To cancel data transfer, select **Cancel**.

- 4 Press the  Back button

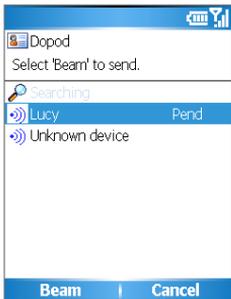

Return to Contacts screen. After transfer is complete, the screen will display "Done".



Return to Contacts List.



## 4. 2 Calendar

You can use the calendar to schedule appointments, including meetings and other events. Your appointments will be displayed on the Home screen just before the scheduled time.



▲ Calendar application program.

4

### Action: Opening Calendar Application Program

- 1 Select Start
- 2 Select Calendar  
Then press the OK button
- 3



Opens Start Menu.



Opens Calendar application program.



Calendar Home screen.



## Action: Opening Calendar Application Program from Home Screen

- 1 Select   
<Appointment item>  
Then press the  OK  
button



Choose the appointment entry from the Home screen. For example, no upcoming appointments.



Calendar Home screen.


4

Managing Personal Information

91

## 4. 2. 1 Adding New Appointments

Adding a new appointment, setting the start/end date(s), and appointment status information. You can customize your personal schedule and set up a reminder to display before the appointment start time.

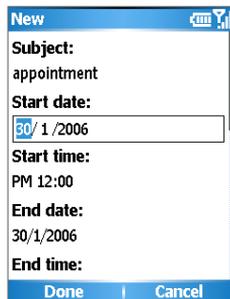

**New**

**Subject:**  
appointment

**Start date:**  
30/1/2006

**Start time:**  
PM 12:00

**End date:**  
30/1/2006

**End time:**

Done | Cancel

▲ Add new appointment and edit appointment information.

4

Managing Personal Information

### Action: Adding New Appointments

- 1 Select  Menu > New Appointment
- 2 Enter <Subject>
- 3 Enter <Start date>




**Wed 3/05/2006**

No appointments.

- 1 New Appointment
- 2 Delete Appointment
- 3 Week View
- 4 Month View
- 5 Go to Today
- 6 Go to Date
- 7 Options

Week | Menu

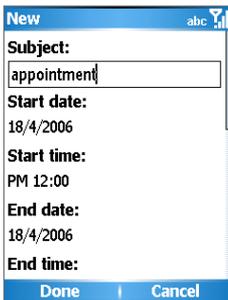

**New**

**Subject:**  
appointment

**Start date:**  
18/4/2006


**Start time:**  
PM 12:00

**End date:**  
18/4/2006

**End time:**

Done | Cancel

Enters the subject. For example, appointment (Note 1).

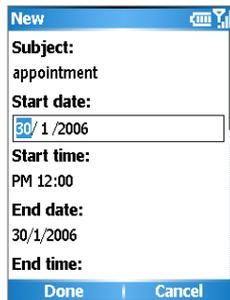

**New**

**Subject:**  
appointment

**Start date:**  
30/1/2006

**Start time:**  
PM 12:00

**End date:**  
30/1/2006

**End time:**

Done | Cancel

Enters the start date. For example, 30/1/2006.

4 Enter <Start time>

**New** abc 📶

**Subject:**  
appointment

**Start date:**  
30/1/2006

**Start time:**

**End date:**  
30/1/2006

**End time:**

**Done** | **Cancel**

Enters the start time. For example, PM 12:00.

5 Enter <End date>

**New** abc 📶

**Subject:**  
appointment

**Start date:**  
30/1/2006

**Start time:**  
PM 12:00

**End date:**

**End time:**

**Done** | **Cancel**

Enters the end date. For example, 31/1/2006.

6 Enter <End time>

**New** abc 📶

**Start date:**  
30/1/2006

**Start time:**  
PM 12:00

**End date:**  
31/1/2006

**End time:**

All day event

**Done** | **Cancel**

Enters the end time. For example, PM 01:00.

4

Managing Personal Information

7 Select <Reminder>

**New** abc 📶

All day event

**Location:**

**Reminder:**

**Occurs:**  
Once

**Status:**  
Busy

**Done** | **Cancel**

Configures the phone to set reminder before the appointment starts. For example, 15 minutes.

8 Select <Occurs>

**New** abc 📶

All day event

**Location:**

**Reminder:**  
15 minutes

**Occurs:**

**Status:**  
Busy

**Done** | **Cancel**

Sets the re-occurring number of times for the appointment. (Note 2). For example, once.

9 Select <Status>

**New** abc 📶

**Occurs:**  
Once

**Status:**

**Sensitivity:**  
Normal

**Notes:**

**Done** | **Cancel**

Selects the appointment status (Note 3).

93



10 Select

(Note 1) Appointment information field:

**New** abc

**Occurs:**  
Once

**Status:**  
Busy

**Sensitivity:**  
Normal

**Notes:**

Done | Cancel

<b>Subject</b>	Appointment subject
<b>Start Date</b>	Appointment start date
<b>Start Time</b>	Appointment start time
<b>End Date</b>	Appointment end date
<b>End Time</b>	Appointment end time
<b>All Day Event</b>	Displayed on top of calendar only and will not take up time slots
<b>Location</b>	Appointment location
<b>Reminder</b>	Appointment reminders
<b>Occurs</b>	Re-occurring number of times or frequency for appointment
<b>Status</b>	Appointment status
<b>Sensitivity</b>	Appointment confidentiality
<b>Notes</b>	Notes

You have successfully created a new appointment.

4

Managing Personal Information

(Note 2) The number of times the appointment re-occurs:

<b>Once</b>	Appointment occurs only once
<b>Every Tuesday</b>	Appointment occurs on same day of every week
<b>Day 2 of every month</b>	Appointment occurs on same day of every month
<b>Every May 2</b>	Appointment occurs on same day of every year

(Note 3) Appointment status:

<b>Busy</b>	Takes up this time slot.
<b>Free</b>	Will not take up this time slot. You can schedule other appointments for the same time slot.
<b>Tentative</b>	Unconfirmed appointment.
<b>Out of Office</b>	This Appointment will take place outside of the office.

When you set your operating mode to “Automatic” and if the appointment is in progress, the phone automatically switches to “Meeting” mode (mute/silent).



## 4. 2. 2 Viewing and Editing Appointments

You can view and edit appointment contents. To edit appointment contents, please refer to section 4. 2. 1 Adding New Appointments.

From the weekly view screen, the filled in blocks indicate the appointment time, while a line on the side indicates an all day event. Each appointment status is represented by a color block:

- Busy: deep blue
- Out of Office: Magenta
- Tentative: light blue
- Free: White

Monthly View date block icon:

-  : Indicates there are appointments in the morning on that day
-  : Indicates there are appointments in the afternoon on that day
-  : Indicates there are appointments both in the morning and afternoon on that day



▲ View appointment information.


### Action: Viewing and Editing Appointments

- 1 Select  <Appointment you want to view> Then press the  OK button




You can also use the Left/Right button to select the date.

- 2 Select  Edit

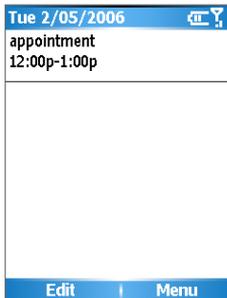

Edits the selected appointment.


- 3 Enter <Field you want to edit>

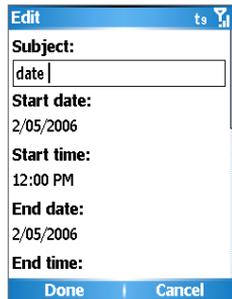

For example, modify the Appointment Subject as "Date".

4

4 Select  Done

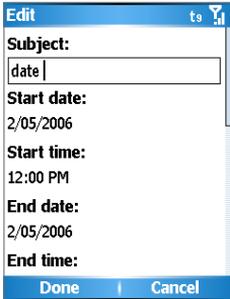

5



You have successfully modified appointment.


### Action: Switching the Calendar Display Mode

1 Select  Week



Agenda View. Switches to weekly display.

2 Select  Month

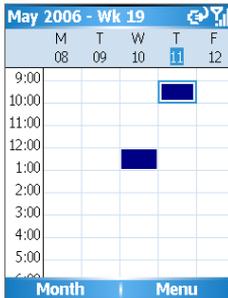

Weekly View. Switches to monthly display.

3 Select  Agenda




Monthly View. Switches back to Agenda display.

## 4. 2. 3 Appointment Reminders

A reminder screen will pop up before the scheduled appointment time on the phone.


- ✓ You can choose to “turn off” the reminder or use the “menu” to set the reminder on “Snooze” mode.

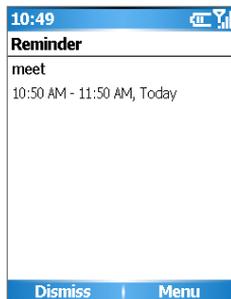

▲ Appointment reminder screen.

### Action: Appointment Reminder Screen


1

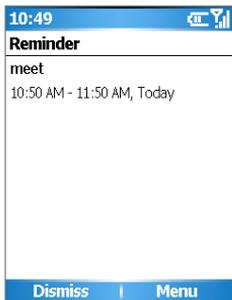

The reminder will be displayed when the scheduled appointment time is near.

2


Select  Menu > View Item

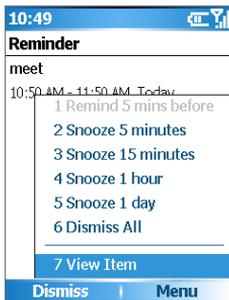

View the current appointment or set the reminder on a specific “Snooze” mode.

3

Select  Done

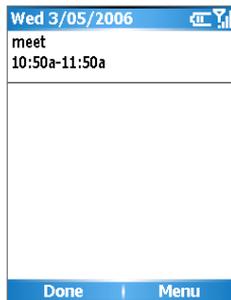

Upcoming appointment(s).

4



## 4. 2. 4 Transferring Calendar Information

You can exchange calendar information with others via vCalendar (Note 1), by MMS, or through IR/Bluetooth. To use MMS, please refer to section 5. 4; to use Bluetooth connection, please refer to section 7. 2.


(Note 1) vCalendar: electronic calendar. For records of your personal appointment schedule. You can send your own vCalendar to other phones or computers that have vCalendar compatibility.



▲ Using Bluetooth to transfer appointments.

4

## Using MMS to Transfer Appointments

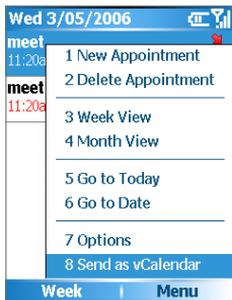


▲ Using MMS to share appointment information.

You can use the following procedures to share appointment information via MMS.

- Under the View Calendar screen, choose the appointment(s) you want to transfer, then select **Menu** > **Send as vCalendar**.
- At the MMS Edit screen, choose the **recipient** or enter the **recipient phone number**.
- After editing is completed, select **Send**.

## Action: Using Bluetooth to Transfer Appointments

- 1 Select <Appointment you want to send> Then press the OK button
- 2 Select Menu > Beam Appointment
- 3 Select <Device you want to exchange with> Then select Done

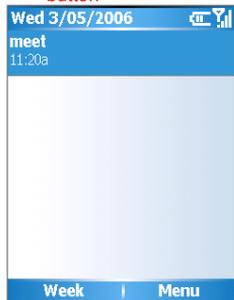


Agenda View screen.



To cancel data beaming, select **Cancel**.

4

- 4 Press the Back button

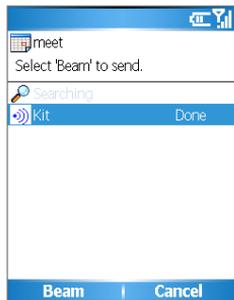

Returns to Contacts screen. After transfer is complete, the screen will display "Done".



Returns to Appointments screen.

## 4. 2. 5 Calendar Options

Set up what calendar options to display. For example, lunar calendar, first day of the week, number of days to view, and reminder time.

### Calendar Options

Options	Description
<b>First day of week</b>	Choose which day as the first day of the week
<b>Week View</b>	Choose how many days to display for the Weekly View
<b>Month View</b>	Choose whether you want to have the week numbers displayed in the Monthly View
<b>Set Reminders</b>	Sets up the reminder preset time period

**Options** abc [signal]

**First day of week:**  
Monday ◀ ▶

**Week view:**  
5-day week ◀ ▶

**Month view:**  
 Show week numbers

**Set reminders:**  
5 minutes ◀ ▶

Done | Cancel

▲ Calendar Options settings screen.

4

Managing Personal Information

### Action: Setting Up Calendar Options

- 1 Select Menu > Options
- 2 Select <options to configure>

Wed 3/05/2006 [signal]

meet 11:20a  
1 New Appointment  
2 Delete Appointment  
meet 11:20a  
3 Week View  
4 Month View  
5 Go to Today  
6 Go to Date  
7 Options  
8 Send as vCalendar

Week | Menu

Opens the Calendar options settings screen.

**Options** abc [signal]

**First day of week:**  
Monday ◀ ▶

**Week view:**  
5-day week ◀ ▶

**Month view:**  
 Show week numbers

**Set reminders:**  
5 minutes ◀ ▶

Done | Cancel

Configures the Calendar options.


## 4. 3 Tasks

The Tasks function can assist you in tracking the status of various tasks. Tasks can be a single task or re-occurring tasks. You can set up reminders for tasks, or manage by setting up different categories for the tasks. All of your entered tasks will be displayed in the Tasks List. Overdue tasks will display in red. If you need more detailed task information, you can first sync to computer by using ActiveSync®, then edit using Microsoft Office Outlook®. To sync your phone, please refer to Chapter 9.

4

### Action: Open the Tasks Application

- 1 Select  Start
- 2 Select  Tasks  
Then press the  OK button
- 3

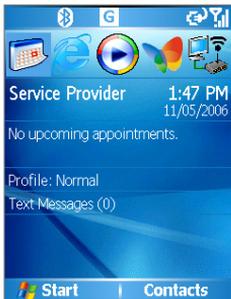

Opens the Application program menu.




Opens the Tasks application program.



The Tasks application program screen.

### 4. 3. 1 Adding New Tasks

Adding a new task.

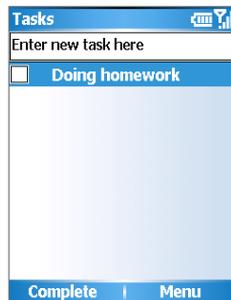

▲ Adding a new task entry.



4

#### Action: Adding New Tasks

- 1 Move with Up/Down buttons
- 2 Enter <Task subject> Then press the OK button
- 3




Goes to the "Enter new task here" field.

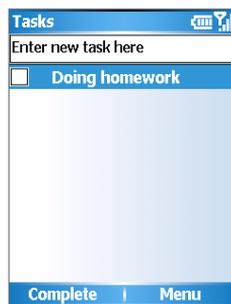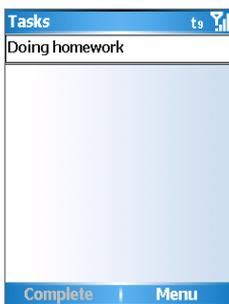

You have successfully created a new task.

### 4. 3. 2 Setting Tasks as Complete


If the task has been completed, you can set the task status as completed for proper assessment of current work progress and status.

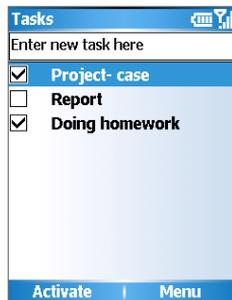


▲ Setting tasks as complete.

#### Action: Setting Tasks as Complete

- 1 Select <Task you want to complete>
- 2 Press the OK button

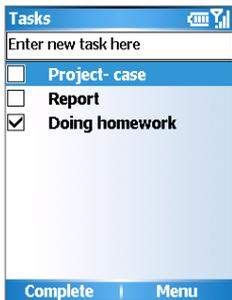

Use the directional button to set the tasks as complete.

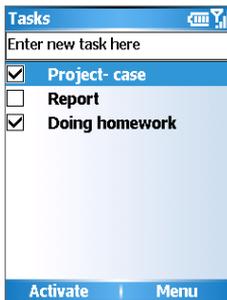

Tasks set as complete will be check-marked.



## 4. 4 Voice Notes

Using the voice notes can help you to quickly record your thoughts in the form of short recording contents. The voice notes are stored in the phone memory. If you have insufficient memory space, please try to remove some of the previous voice notes. If you want to setup voice notes as ring tones, please refer to section 10. 3.

4


**!** If you have insufficient memory space, please try to remove some of the voice notes.



▲ Voice Notes screen.

### Action: Open the Voice Notes Program

- 1 Select Start
- 2 Select Voice Notes  
Then press the OK button
- 3

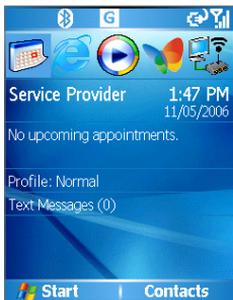

Opens the Application program menu.



Opens Voice Notes application program.



Voice Notes screen.



## 4. 4. 1 Adding New Voice Notes

Adding a new voice note.



▲ Voice Notes recording screen.

4


Managing Personal Information

### Action: Adding a New Voice Note

- 1 Select  Record
- 2 Say <Things you want to record>
- 3



Starts recording the voice note.

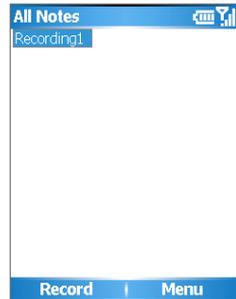

Voice notes will be listed in the All Notes list, and will be named in the order it was recorded.

105

## 4. 4. 2 Managing Voice Notes

To playback your recorded voice notes, rename original voice notes files, delete voice notes that are no longer needed to free-up the phone memory space.



▲ Playback Voice Notes.

4

### Action: Playback Voice Notes

- 1 Select  <Voice note you want to play> Then press the  OK button
- 2



Play Voice Notes. To stop, please press "Stop".

## Action: Renaming Voice Notes

- 1 Select <Voice note you want to rename>
- 2 Select Menu > Rename
- 3 Enter <File name you want to rename>  
Then select Done




4

Managing Personal Information

## Action: Deleting Voice Notes

- 1 Select <Voice note you want to delete>
- 2 Select Menu > Delete
- 3 Select Yes

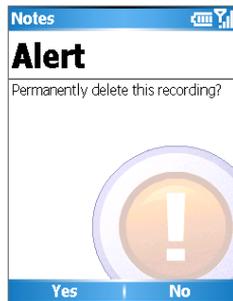

Confirms deletion of the Voice Note.



4

# Managing Personal Information





# Topic

# 5

## View Messages

**In this topic, you will learn about...**

1. **Messaging**
2. **Text Messages**
3. **Outlook E-mail**
4. **MMS**
5. **POP3/IMAP4 E-mail Account**
6. **Configure various settings in Messaging**





# Index Action

Using the Messaging.....	112
Switching Message Account Types.....	113
Using Text Message.....	114
Opening a Text Message from Home Screen.....	115
Quickly Switch between Messaging Center Accounts .....	115
Adding a New Message .....	116
Canceling Message Sending.....	117
Browsing Messages .....	118
Switching Message Folders under Text Message .....	119
Moving Messages .....	120
Deleting Messages.....	120
Using Outlook E-mail .....	123
Drafting and Sending E-mails.....	123
Inserting Pictures or Video into E-mails.....	124
Inserting Voice Notes into E-mails.....	125
Browsing E-mails .....	126
Download the Complete Mail Contents.....	127
Download Message Attachment Files.....	127
Setting Outlook E-mail Options .....	129
Using MMS .....	130



Adding a New MMS Message.....	131
Receiving MMS .....	134
Browsing MMS.....	136
Configuring POP3/IMAP E-mail Account.....	138
Downloading Mail from POP3/IMAP Server .....	141
Open Messaging Settings Screen .....	142
Messaging Account Configuration Options .....	144
MMS Account Configuration Options .....	145
Import SIM Messages .....	147



## 5. 1 Messaging

You can use Messaging to read and draft messages, e-mail, and MMS. You will also be able to send and receive e-mail for Microsoft Outlook® or general POP3/IMAP e-mail accounts through your ISP.



▲ Messaging Home Screen. You can choose the type of messages you want to send or receive from the various message categories.

5

View Messages

### Action: Using the Messaging


- 1 Select Start
- 2 Select Messaging Then press the OK
- 3 Select <Account type> Then press the OK



Opens the Start Menu.




Opens the Messaging.

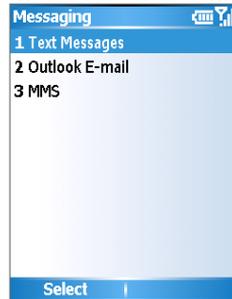


Choose the message account type to use. For example, Text Messages.

## Action: Switching Message Account Types

1 Select  Menu >  
Switch Accounts

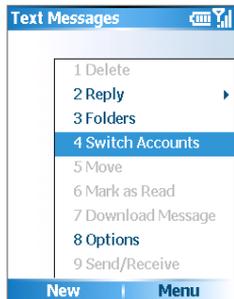

2 Select   
<Account type>  
Then press the  OK  
button

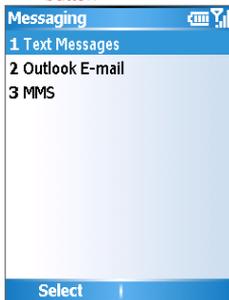

You can also use the Left/  
Right button to switch the  
message account type.

5

View Messages

## 5. 2 Text Messages

You can use Text Message to quickly exchange information with your contacts. The phone will ring and display a reminder that you have unread message(s) on the Home screen, and the onscreen task bar at the top of the screen. Your received messages and automatically backed-up sent messages are stored in the built-in memory space on the phone.

(Note 1) The Home screen unread message reminder:

-  : Indicates you have unread messages.
- **Text Messages (1)** : Messaging at Home screen item will display the number of unread messages. For example: one unread message will be displayed as "Text Messages (1)".



▲ Home screen message reminders.

### Action: Using Text Message

- 1 Select  **Text Messages**  
Then press the  **OK** button
- 2



Goes to Text Messages Home Screen.



Text Messages Home screen.

## Action: Opening a Text Message from Home Screen

- 1 Select  Text Messages. Then press the  OK button.
- 2



Selects and enters the Home screen Messaging (Text Message) item.



Text Messages Home screen.

5

View Messages

## Action: Quickly Switch between Messaging Center Accounts

- 1 Select  (Right)
- 2  You can select the  left and right at the Messaging Center to switch between SMS/MMS/e-mail



You are currently at the Messages main screen



You are currently at the Outlook e-mail main screen

## 5. 2. 1 Sending and Receiving Text Message

Edit the message you want to send. A single message can have up to 160 English characters or 70 Chinese characters. When your text count exceeds the character limitation, the phone will automatically split the text as two or more messages to send out. Your received messages will use the following icons to categorize the messages separately as read or unread:

-  : Unread message
-  : Read message



▲ Text Message editing screen.

5


View Messages

### Action: Adding a New Message

- 1 Select  **New**
- 2 Press the  **OK** button or enter  **<Recipient phone number>**
- 3 Press  **<To>** or enter the  **OK** button



To add a new message.

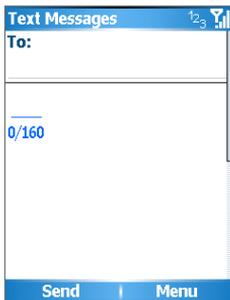

Press the OK button to choose the contacts or enter the phone number.



Select the contact you want to send the message to. For example, Allen.

- 4 Select <Contacts number location>  
Then press **Select**



Choose the contacts number location. For example, M (mobile number).

- 5 Enter <Message contents>  
Then press **Send**



Enter the text contents. For example, Hello World!

- 6 Press **OK**




You have successfully sent out the message.

5

View Messages

## Action: Canceling Message Sending

- 1 Select **Menu** >  
**Cancel Message**
- 2 Select **Yes**  
or **No**

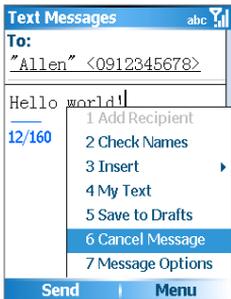

Cancels message sending.



Choose if the message should be saved as a draft. If "No" is selected, this message will be deleted.



If "Yes" is selected, the message will be saved to the Drafts folder.

117

## Action: Browsing Messages

- 1 Select <message you want to read> Then press the OK button
- 2



5

Selects the message you want to read.



Displays message content.

View Messages

## Action: Replying Messages

- 1 Select Reply
- 2 Enter <Message contents> Then select Send
- 3 Select Send



Select Reply when browsing messages.



Enter the reply message text. For example, ok.



Message is sent.

## 5. 2. 2 Managing Message Folders

Switch messages folders, moving messages to other folders or delete.

Messages folder:


Folder name	Description
<b>Inbox</b>	Stores all received messages.
<b>Deleted Items</b>	Your deleted messages will be saved here.
<b>Drafts</b>	Stores message drafts.
<b>Outbox</b>	Outgoing messages that are ready to be sent.
<b>Sent Items</b>	Sent Messages will be saved here as backup copies.

5

View Messages


### Action: Switching Message Folders under Text Message

1 Select  Menu > Folders

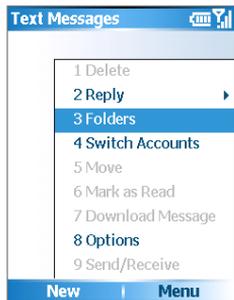

Opens the message folder list. For example, Folders.



2 Select  <folder to switch to>  
Then press the  OK button

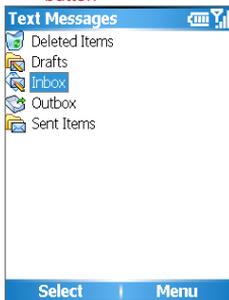

Switches to a different message folder. For example, Inbox.

## Action: Moving Messages

- 1 Select <Text Messages> Then select Menu > Move
- 2 Select <Destination folder> Then press the OK button

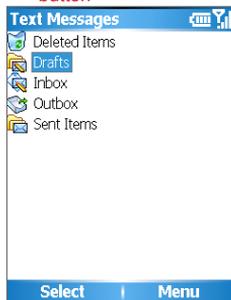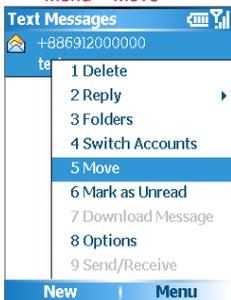

5


Inbox screen. Select the message you want to move.

Select the folder to move the message to. For example, Drafts.

Inbox screen. You have successfully moved the message to destination folder.

## Action: Deleting Messages

- 1 Select <Text Messages> Then select Menu > Delete

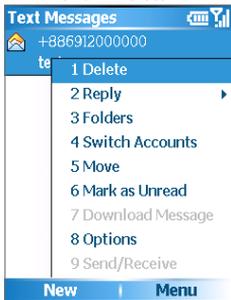

Select the message to delete.




Deleted messages will be moved to the "Deleted Items" folder.

## 5. 2. 3 Message Configuration Options

Configures message sending options. You can use the following procedures to set up requests for delivery notifications. When the message is delivered to the recipient's phone, an auto-reply message will be sent to you and confirm message has been sent.

- At the message editing screen, select  **Menu > Options**.
- Select  **Request message delivery notification**, then select  **Done**.

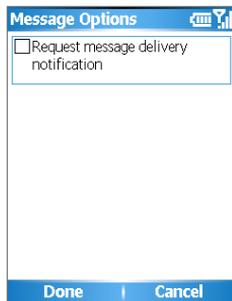

▲ Check-mark the box to choose delivery notification if needed.

5

View Messages



## 5. 3 Outlook E-mail

You can use Microsoft Office Outlook® e-mail account on a personal computer or remote Exchange Server® account to send and receive e-mail via Microsoft ActiveSync® sync connection. E-mails will be sent/received simultaneously when synchronizing between phone and computer or Exchange Server®. If you sync the phone with remote Exchange Server 2003® SP2, you will be able to use the Direct Push function. When a new e-mail arrives, your phone will automatically sync with the remote server through GPRS. This can help limit your connection fees and battery consumption. For activation and configuration methods of Direct Push®, please refer to section 7. 1. 1 Activate/Deactivating Microsoft Direct Push, and section 9. 10. 3 Sync Data and Options descriptions. To sync your phone using Microsoft ActiveSync®, please refer to Chapter 9.

5

View Messages

When a new Text Message is received, the phone will ring and display a reminder on the Home screen, and the onscreen task bar at the top (Note 1), indicating that you have unread messages. Your received messages and automatically backed-up sent messages are stored in the built-in memory space on the phone.

(Note 1) The Home screen unread message reminder:



: Indicates that you have unread messages.

Outlook-E-mail (1)

: Messaging Center item on Home screen will display the number of unread messages. For example, A single unread message will be displayed as "Outlook E-mail (1)".


### 5. 3. 1 Drafting and Sending E-mails

You can use the phone to draft or send e-mails, as well as insert pictures, video, or voice note attachments into the e-mail messages. The sent attachment files will be shown below the mail subject. The next time you sync the phone with Exchange Server® or Windows® PC, the e-mail in Outbox will be sent via Microsoft Office Outlook® e-mail account on the computer.



## Action: Using Outlook E-mail

- 1 Select Outlook E-mail Then press the OK button
- 2

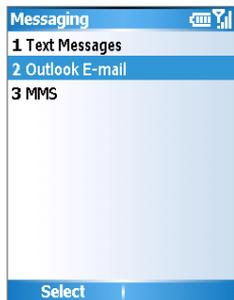

Opens Outlook E-mail main screen.



Outlook E-mail main screen.

5


View Messages

## Action: Drafting and Sending E-mails


- 1 Select New
- 2 Enter <To>  
Then enter <Subject>
- 3 Select Send



To add a new e-mail message.

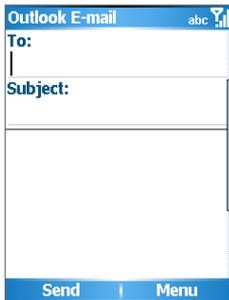


You can also go to "Menu > Add Recipient" to select the recipient.

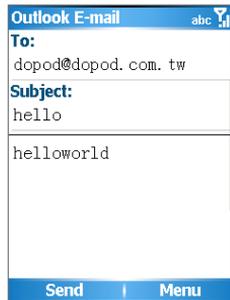

Enter the e-mail contents. For example, helloworld.

123

4

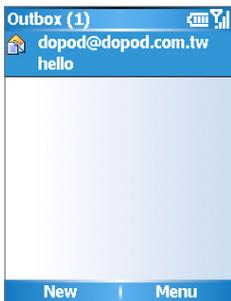


5

E-mail message is saved to the Outbox.

## View Messages

### Action: Inserting Pictures or Video into E-mails

- 1 Select Menu > Insert > Picture
- 2 Select <Picture> Then select Select
- 3

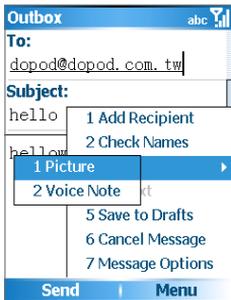

The e-mail editing screen.




Inserts the picture or video that is saved on the phone. You can also use the picture(s) taken by the phone's camera.



Picture is successfully attached to e-mail. For example, Angel.bmp.

## Action: Inserting Voice Notes into E-mails

- 1 Select  Menu > Insert > Voice Note

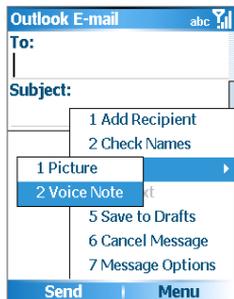

The e-mail editing screen.

- 2 Select  Record



To use voice notes, please refer to section 4. 4.

- 3 Record <the voice you want to say> Then select  Stop



Record your voice notes.

5

View Messages

- 4 Select  Done



Attaches the recorded voice notes to the e-mail.

5



You have successfully attached the recording to the e-mail. For example, Recording 1 .wav.

## 5.3.2 Browsing E-mails

Browsing Outlook E-mail. If the attached file or mail body text received exceeds the size limit allowed for a single e-mail, you will receive a reminder to download more attachments or body text in order to browse the entire content of the e-mail. When the e-mail includes attachment files, the files will be shown under the subject. If the attachment is completely downloaded to the phone, you will be able to select and open the attachment. If it is not completely downloaded yet, the attachment (when selected) will indicate that it will be downloaded to the phone during the next e-mail sync. Use Outlook e-mail or POP3/IMAP4 e-mail account to automatically download the attachments when the e-mail is downloaded.




▲ Outlook e-mail browsing screen.

### Action: Browsing E-mails

- 1A Select Outlook E-mail (1)
- 1B Select Outlook E-mail Then press the button
- 2 Select <Mail you want to browse> Then press the button



The Home screen will display the Outlook e-mail item when a new e-mail message arrives.

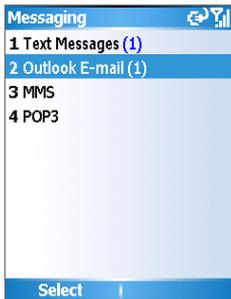

You will also be able to browse directly from the Messaging Center.



Select and open the e-mail.

## Action: Download the Complete Mail Contents

- 1 Select  Obtain remaining parts of this message



2




During the next e-mail sync, the remaining contents will be downloaded to the phone.

5

View Messages

## Action: Download Message Attachment Files

- 1 Select  <Attachment you want to download>

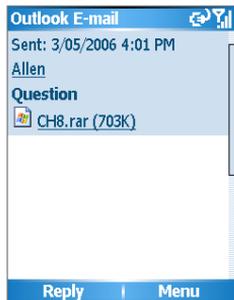

Select the attachment files to download. For example, CH8.rar.

2



During the next e-mail sync, the attachment files will then be downloaded to the phone.

127



### 5. 3. 3 Replying to E-mails

You can use the following procedures to reply to the sender:

- At Outlook e-mail screen, select <the mail that you want to reply>, then press the **OK button** to open the mail.
- Select **Reply**.
- Enter <the contents that you want to reply>, then select **Send**.



▲ E-mail reply screen

5

### 5. 3. 4 Managing Outlook E-mail Folders

You can use the following procedures to switch to different mail folders and manage mail in each data folder. For example, Inbox, Outbox, etc.

- At the Outlook e-mail screen, select **Menu > Folders**.
- Select **the folders you want to switch** (for example, Inbox), then select **Select**.



▲ Outlook E-mail folder




### 5. 3. 5 Setting Options

Configures Outlook e-mail options.

E-mail options:

Options	Description
Priority	Message Priorities
Encrypt message	Whether message requires encryption
Sign message	Whether signatures are to be added to mail
Languages	Set the mail message language

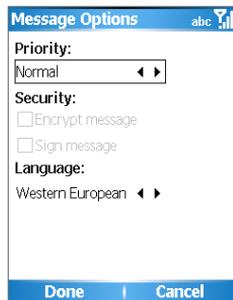

▲ Outlook message Options settings screen.

5

View Messages

#### Action: Setting Outlook E-mail Options

1 Select  Menu > Message Options



Configure the message options for sending the e-mail.

2 Select  <the items you want to configure> Then select Done



Outlook message Options settings screen.



# 5. 4 MMS

You can easily create or share MMS with friends and family. You can send or browse pictures, movies, audio, and text that have been integrated as MMS. To use MMS, you must first apply for GPRS services from your telecom service provider. Your messages will automatically be backed-up as sent messages and stored in the built-in memory space on the phone. For configuration of GPRS transfers, please refer to section 7. 4.

The phone will ring and display a reminder if you have unread message(s) on the Home screen, and the onscreen task bar at the top of the screen.

(Note 1) The Home screen unread message reminder:

- : Indicates you have unread MMS messages.
- : Messaging Center item on Home screen will display the number of unread messages. For example: one unread message will be displayed as "MMS (1)".

5


View Messages

## Action: Using MMS

- 1 Select  MMS  
Then press the  OK button
- 2



Opens the MMS Home screen.

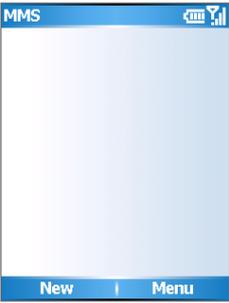


MMS Home screen.



## 5. 4. 1 Sending and Receiving MMS

Sending MMS to your contacts. MMS transmission fees will depend on the service provider.

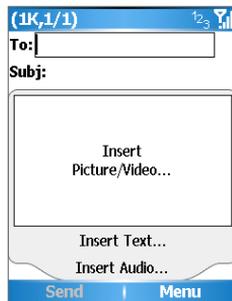

▲ MMS editing screen.


5

### Action: Adding a New MMS Message

- 1 Select New
- 2 Press the OK button or enter <Recipient phone number>
- 3 Select <Contact>  
Press the OK button



To add a new MMS message.

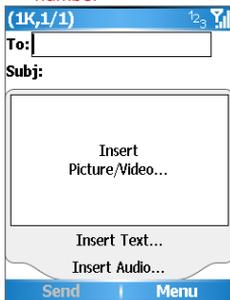

Find the contact's number. You can also enter the contact's number directly.



Select the contact you want to send the MMS to. For example, Allen.

View Messages


131



- 4 Select  <Contacts>  
Then select  Select
- 5 Go to  Subject  
Then enter <Subject>
- 6 Go to  Insert Picture/  
Video  
Then press the  OK  
button



Choose the contacts.  
For example, M (mobile  
number).

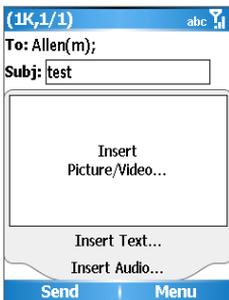

Enter the MMS subject. For  
example, test.



Insert picture or video.

5

View Messages

- 7 Select  <Picture>  
Then select  Select
- 8 Go to  Insert Text
- 9 Press the  OK  
button



Insert the picture or video  
that was saved the phone.



Enter text.




Go to the text editing  
screen.






- 10 Enter **<the text you want to send>**  
Then select   
**Done**

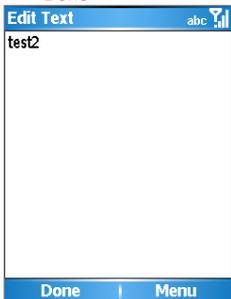

Enter the text you want to send. For example, test2.

- 11 Go to  **Insert Audio**  
Then press the  **OK**  
**button**

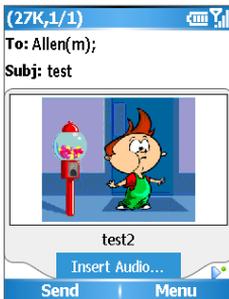

- 12 Select  **<Audio>**  
Then press the  **OK**  
**button**



Insert audio files that were saved on the phone. For example, Alouette\_14kb.

5

View Messages

- 13 Select  **Send**



Make sure MMS editing is complete, then select Send.

- 14



The Sending icon  will be displayed on the upper right hand corner of the screen.

- 15 Select  **OK**  
**button**



You have successfully sent out the MMS.




## Action: Receiving MMS

1A Select   
MMS (1)



1B Select  MMS  
Then press the  OK  
button

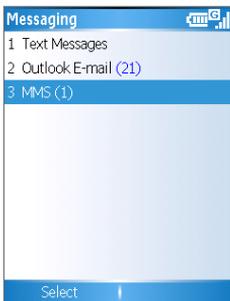

2 Select  <the  
message you want to  
browse>



5


When the new MMS message arrives, the Home screen will display the MMS item.

You can also choose to open the MMS Home screen at the Messaging Center.

For example: Roger Smith.

View Messages

3 Select   
Menu > Download  
Message

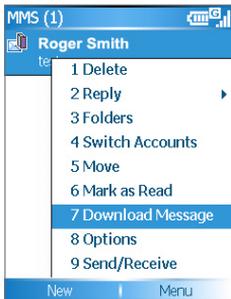


Downloads MMS message.

4



The downloading icon will be displayed at the upper right hand corner of the screen.

5 Select  View

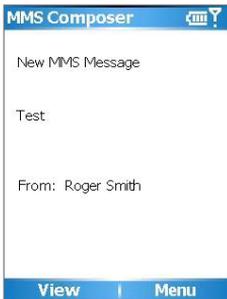

After downloaded the new MMS message, open Browse.

6



Plays the MMS. To pause the playback, select  **Pause** (Note 1).

(Note 1) If you want to return to the previous screen, press the  Back button.

5

View Messages

## 5. 4. 2 Browsing MMS


Browse your received MMS. If you want to delete messages, select  **Menu** > **Delete**. Deleted messages will be moved to the "Deleted Items" folder.



▲ Open and browse the downloaded MMS.

### Action: Browsing MMS

- 1 Select  **MMS**. Then press the  **OK** button
- 2 Select  **<the message you want to browse>**. Then press the  **OK** button
- 3

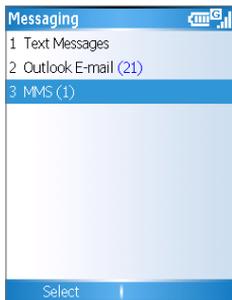

Select your MMS to browse. For example, Roger Smith.



Playing MMS.

### 5. 4. 3 Replying and Forwarding MMS

Reply or forward MMS sent from contacts. You can choose to reply by Text Message or MMS.

Replying an MMS message

- At the MMS playback screen, select  **Menu** > **Reply with SMS**, or **Menu** > **Reply with MMS**.
- Select  **<the message you want reply to>**, then select  **Menu** > **Reply**.
- Enter **<mail contents you want to reply>**, then select  **Send**. For replying SMS, refer to section 5. 2. 1.

Forwarding MMS

- At the MMS Home screen, select  **<message you want to forward>**, then select  **Menu** > **Reply** > **Forward**.
- Enter **<To>**, then select  **Send**.

5

View Messages

## 5. 5 POP3/IMAP4 E-mail Account

When the phone is connected to the Internet through UMTS, GPRS or ActiveSync®, you can connect to the remote POP3/IMAP4 mail servers to send/receive e-mail messages. You must have the account password for the remote mail servers and obtain the appropriate configuration information from the server administrator. POP3/IMAP4 mail editing, replying, and message forwarding methods are the same as that of Outlook mails. Please refer to section 5. 3. 1 Drafting and Sending E-mail Messages.

### 5. 5. 1 Configuring E-mail Account


You must setup a POP3/IMAP4 e-mail account in order to send/receive e-mails through the remote servers.

5

View Messages

#### Action: Configuring POP3/IMAP E-mail Account

- 1 Select  **Menu >**  
**Options**
- 2 Select  **New account**  
Then press the  **OK**  
**button**
- 3 Enter **<Your name>**

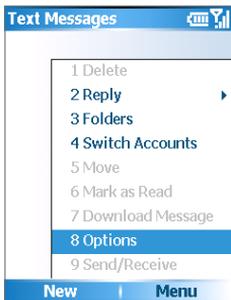

Opens the menu at the message folder screen.



Adds a new POP3/IMAP mail account.



Enter your custom user name. For example, Allen.

- 4 Enter <e-mail address>  
Select Next

**E-mail Setup** abc

Your name:  
Allen

E-mail address:

Automatic setup:  
 Attempt to obtain e-mail settings from the Internet.

Cancel | Next

Enter the e-mail address.  
For example,  
allen@example.com.

- 5 Select Next

**Auto Setup**

Attempting to obtain e-mail settings for example.com.

Select Next to skip this step and enter your settings manually (recommended for automatic email)

Previous | Next

To skip auto detect, please select Next.

- 6 Select Next

**Auto Setup**

Could not obtain e-mail settings.

Check the spelling of example.com.

Select Previous to correct if necessary or select Next to enter manually.

Previous | Next

If auto detect is not possible, please select Next to configure manually.

5

View Messages

- 7 Enter <User name> and <Password>

**E-mail Setup** abc

User name:  
allen

Password:

Domain (if necessary):  
 Save password

Previous | Next

Enter your user name and password.

- 8 Select  <Server type>  
Select Next

**E-mail Setup** abc

Server type:  
POP3

Account name:  
POP3

Network:

Previous | Next

Select POP3 or IMAP4 server.

- 9 Enter <Server information>  
Select Next

**E-mail Setup** abc

Incoming Server:  
pop3.example.com  
 Require SSL connection

Outgoing Server:  
  
 Outgoing server requires authentication

Outgoing Server Settings

Previous | Next

Please contact the mail server administrator and enter the server IP address.



5

View Messages

- 10 Select  <Download the following messages>  
Select  Next

**E-mail Setup** abc [signal]

Download the following messages:

Last 3 days of e-mail: ◀ ▶

First 500 bytes ◀ ▶

Previous | Next

Sets the e-mail to download within specified time period, as well as the e-mail size.

- 11 Select  <Connect automatically and check for>  
Select  Next

**E-mail Setup** abc [signal]

Note that connecting automatically may result in higher connection charges.

Connect automatically and check for

Never ◀ ▶

Previous | Next

Select whether automatically you want to connect or not.

- 12 Select  Finish

**E-mail Setup** [signal]

Setup complete.

To begin using e-mail, select Finish and select Send/Receive from the Menu.

Previous | Finish

Finish adding the new account.

## 5. 5. 2 Downloading New Mail


Download the latest POP3/IMAP account e-mail via connection to the Internet. After you download the latest e-mail to the phone, the e-mail will still be retained on the remote server.

5

View Messages

### Action: Downloading Mail from POP3/IMAP Server


- 1 Select  **Menu** >  
Send/Receive
- 2 Select  **<mail you want to read>**  
Then press the  **OK** button
- 3

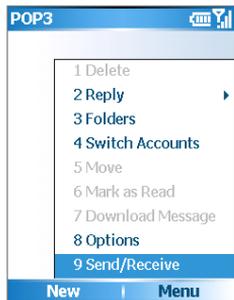

Opens the menu from your preset e-mail Inbox.



The downloaded e-mail will be displayed. For example, Allen; subject: Hello.

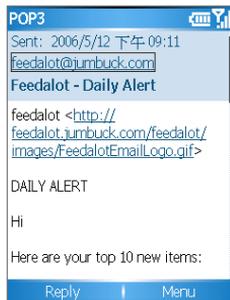

Open and browse the e-mail.

## 5. 6 Configure Various Settings in Messaging

Perform configuration settings under Messaging Center.

5




▲ Configuring Messaging

View Messages

### Action: Open Messaging Settings Screen

- 1 Select  Menu > Options
- 2 Select  <Configuration options> Then press the  OK button

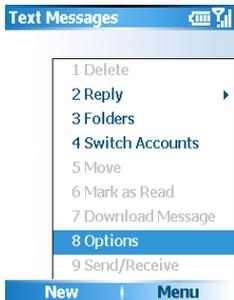

Opens the menu from the message folder.





## 5. 6. 1 Settings Options

### 1. Display

Sets up the message display and sorting methods in the message list, for you to conveniently manage the messages in your list.

Display options:

Show date and time in the message list	Choose if date and/or time will be displayed in the message list
Sort messages by	Choose which column to sort and the sorting order
After deleting or moving a message	Choose the action to perform after deleting or moving a message

### 2. Sending

Sending options:

Include a copy of original message when replying to e-mail	When you reply to e-mail, the original message will be included.
Save copies of sent items	Keep a backup copy of the sent items

### 3. Signatures

Adds a personal signature at the end of messages. For example, end greetings, name, and contact methods.



Signature options:

Select an account	Select the account you want to set.
Use signature with this account	Choose whether the signature should be used with your selected account.
Include when replying and forwarding	Choose whether the signature should be included when replying or forwarding e-mail.
Signature	Enter your signature here.

## Action: Messaging Account Configuration Options

- 1 Select **Text Messages**. Then press the **OK** button.

- 2 Select **<Options>**.

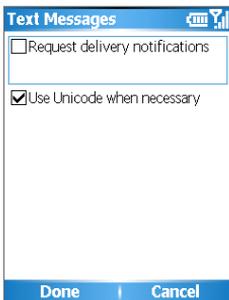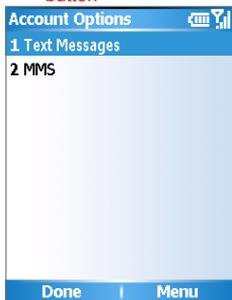

5

View Messages

-  Messaging Account Options settings

**Request delivery notifications**


After a message is sent, choose whether you want to receive a delivery notification when the recipient receives the message.

**Use Unicode when necessary**


Choose whether you want to activate Unicode SMS (Unicode is a character encoding method).

## Action: MMS Account Configuration Options

- 1 Select **MMS**  
Then press the **OK** button
- 2 Select **<Options>**
- 3 Select **Menu >**  
**MMSC settings**

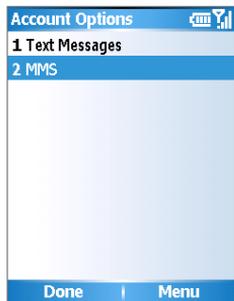

Preference setup (Note 1).

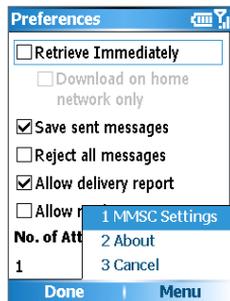

Setup MMSC.

5


View Messages

- 4 Select **<items you want to edit>**  
Then press the **OK** button



You can select **Menu > New** (Note 2).

- 5 Select **<Options>**  
Then select **Menu**

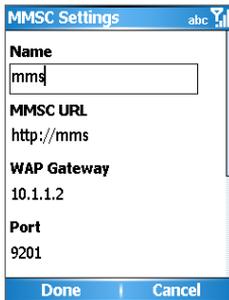

MMSC setup (Note 3).



## MMS Account Options settings

(Note 1) MMS Preference settings:

<b>Retrieve Immediately</b>	Immediately downloads after a MMS message is received
<b>Save sent messages</b>	Saves a backup copy of the sent message
<b>Reject all messages</b>	Reject reception of all MMS messages
<b>Allow delivery report</b>	Choose whether you want to receive the delivery status reports
<b>Allow read report</b>	Choose whether you want to receive MMS read reports
<b>No. of Attempts</b>	Set up number of attempts to download MMS messages
<b>Photo Resolution</b>	Set up the picture resolution to use when sending MMS messages

5

(Note 2) Please check with your service provider for the MMSC configuration information.

(Note 3) MMSC setup

<b>Name</b>	MMSC setup name
<b>MMSC URL</b>	The MMSC address. This option will differ depending on the service provider.
<b>WAP Gateway</b>	The WAP gateway address. This option will differ depending on the service provider.
<b>Port</b>	The WAP connection port. This option will differ depending on the service provider.
<b>Connect Via</b>	Configures the connection type as secure WAP network, WAP network, company (VPN), or Internet.
<b>Max. Sending Size</b>	Maximum outgoing size. Can be set as 100k, 200k, or 250k
<b>WAP Version</b>	Can be set as WAP 1.2 or WAP 2.0.

## 5. 6. 2 Importing SIM Messages

You can import the information stored on the SIM card to the phone.




5

▲ Importing SIM messages to the phone.

### Action: Import SIM Messages

- 1 Select  Import SIM Messages. Then press the  OK button.

2

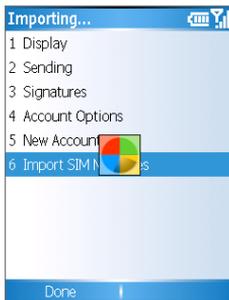

SIM messages are being imported. The imported messages will be stored to the Messages folder.

View Messages



5

**View Messages**



**148**





# 6

## Topic

# Experiencing Multimedia Entertainment

**In this topic, you will learn about...**

1. **Camera and Video Recorder**
2. **Viewing Pictures and Videos**
3. **Windows Media Player**
4. **MP3 Player**



# Index Action



Opening the Camera Application Program .....	153
Open the Video Recorder Application Program.....	154
Camera Function Screen.....	154
Change the Save Location to the Memory Card .....	155
Camera Idle Screen.....	155
Zoom In/Out.....	156
Using Camera Functions .....	156
Switch to Capture Mode .....	157
Capturing .....	157
Recording a Movie.....	158
Using Sports Capturing .....	158
Continue to Capture after Capturing .....	159
Deleting Files after Capture is Complete .....	159
Sending Files after Capture is Complete .....	160
Viewing Images after Capture is Complete.....	160
Save to Contacts when Capture is Complete .....	161
Headshot Capturing Example .....	161
Setting Up Continuous Shot Frequency.....	161
Setting Up Number of Continuous Shots .....	161
Self Timer Setup.....	162





Zoom Setup .....	162
White Balance Setup .....	162
Image Size, Location, and Quality Settings .....	162
Switch Cameras.....	163
Advanced Camera Settings.....	163
Open Pictures and Videos Application Program.....	164
View Picture .....	165
Play Video.....	165
Delete Pictures or Videos .....	166
Play Slide Show .....	166
Change Storage Folder to Memory Card .....	167
Send Image by E-mail .....	168
Send Images through MMS.....	168
Send Images through Bluetooth.....	169
Setting Picture Display Options.....	169
Setting Size and Rotation Methods for Picture Sending .....	170
Setting up slide shows.....	170
Using Windows Media Player.....	171
Open Library .....	172
Update Library .....	173
Switch Library Location .....	173
Using the Library .....	174
Opening File .....	175





Playing Media File from Network.....	180
Operations .....	181
Use the Menu.....	182
Windows Media Options settings .....	182
Adding a New MP3 Player Playlist .....	185
Adding a New Track as Alarm Ring Tone.....	185
Play Streaming Media .....	186



## 6. 1 Camera and Video Recorder

Simply use the built-in camera on the phone to take pictures and movies with sound, then e-mail or MMS the pictures/movies to other contacts.

The filming modes include photo shoot mode, movie mode, MMS movie mode, picture contacts mode, headshot mode, and sports continuous mode. The photo shoot mode captures normal photographs. The movie mode records video with sound. The picture contacts mode captures pictures that are suitable for Contacts use in the phone. The headshot mode will automatically add frames to the picture. And the sports mode can continuously capture a moving object.

After filming is complete, you can choose to continue photo shooting, delete, send, view, and/or save to contacts. Different modes will have different actions available.

6

### Action: Opening the Camera Application Program

- 1 Select  **Start**
- 2 Select  **Camera**  
Then press the  **OK** button
- 3



Opens the Application program menu.




Opens the camera. You can also press the Camera button  to open the program.



The camera capturing screen.

## Action: Open the Video Recorder Application Program

- 1 Select  Start
- 2 Select  Video Recorder  
Then press the  OK button
- 3

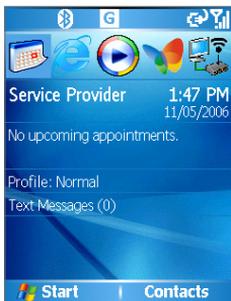

Opens the Application program menu.



Using the video recorder.



The camera capture screen.

6

## Camera Function Screen

You can obtain the following information from the camera function screen.



- |                          |   |
|--------------------------|---|
| 1 <b>Capture Mode</b>    | The current camera mode.  |
| 2 <b>Zoom</b>            | The current zoom distance. Press Up/Down directional button to increase or decrease the zoom distance.            |
| 3 <b>Resolution</b>      | The current photo image size.   |
| 4 <b>Storage</b>         | The current location to save the captured images to.  |
| 5 <b>Remaining shots</b> | The remaining shots or video time available according to your current settings.                                   |
| 6 <b>Exposure</b>        | The current exposure settings. Use the Left/Right directional buttons to decrease or increase the exposure level. |
| 7 <b>White Balance</b>   | The current white balance setting.  |
| 8 <b>Self Timer</b>      | You can configure the timer settings from <b>Menu &gt; Self Timer</b> .   |
| 9 <b>Camera</b>          | Shows the currently used selected camera as (primary or secondary)  |

## Action: Change the Save Location to the Memory Card

- 1 Select  Menu > Capture Settings > Storage



Current Save Location is on the phone memory .

- 2



The  located at the top of the screen indicates the switch to the memory card.

 Saving large amounts of pictures on the phone and not on the memory card will cause insufficient storage memory on the phone. Therefore, we recommend that you set up the photos to be saved to the memory card.

6

## Action: Camera Idle Screen

- 1 Press  Camera button



Press the CAMERA button to activate the camera.

**Action: Zoom In/Out**


- 1 Press  Up/Down button
- 2 Press  Up/Down button



Use the Up/Down button to zoom in or out. For example, press the Up directional button to zoom in.



The zoom distance increases by 0.2x increment. Press Up to zoom in and Down to zoom out.

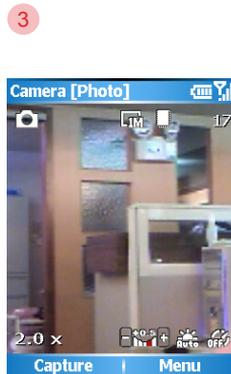

Maximum zoom distance is 2.0x.

6

**Action: Using Camera Functions**

- 1 Select  Capture or press the  Camera button
- 2 Select  <Complete capturing> Then press the  OK button




Move the Up/Down button to zoom and Left/Right to adjust the exposure level.



For actions to take after capturing is complete, please refer to the follow-up actions section.

## Action: Switch to Capture Mode

- 1 Select  Menu > Capture Mode

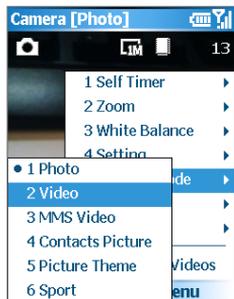


You can switch to different capture modes from the menu.

6

## Action: Capturing

- 1 Select  Menu > Capture Mode > <Photo>
- 2 Select  Capture or press the  Camera button
- 3 Select  <Complete capturing> Then press the  OK button

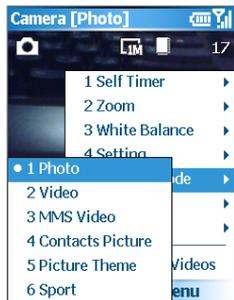

Switches to general capture modes: Photo, Contacts Picture, or Picture Theme, etc.



Move the Up/Down button to zoom and Left/Right to adjust the exposure level.



For actions to take after capturing is complete, please refer to the follow-up actions section.

**Action: Recording a Movie**

- 1 Select Menu > Capture Mode > Video
- 2 Select Capture Press Camera button
- 3 Select Stop



Switches to video mode or MMS video mode.



Move the Up/Down button to zoom. You can also press the Camera button or the OK button to record.



Select Stop to end filming.

6

**Action: Using Sports Capturing**

- 1 Select Menu > Capture Mode > Sport
- 2 Select Capture Press Camera button
- 3 Select <Complete capturing>. Then press the OK button



Use the menu to switch to Sports Mode.



Move the Up/Down button to zoom. You can also press the Camera or the OK button to capture.



For actions to take after capturing is complete, please refer to the following actions section.

## Action: Continue to Capture after Capturing

- 1 Select  Continue  
Then press the  OK  
button

2



Continues to capture the next photo.

6

## Action: Deleting Files after Capture is Complete

- 1 Select  Delete  
Then press the  OK  
button

- 2 Select  Yes  
Then press the  OK  
button



Deletes this image.



Confirm if the image should be deleted.


**Action: Sending Files after Capture is Complete**

- 1 Select  **Send File**  
Then press the  **OK**  
**button**




Sends the file through MMS or e-mail.

- 2 Select  **<Send method>**  
Then press the  **OK**  
**button**

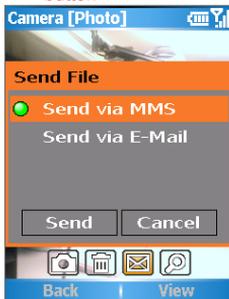

Choose the send method. For example, send via MMS.

3

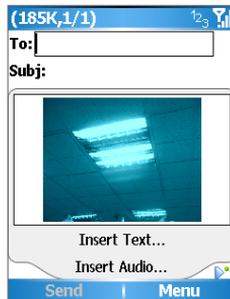

For sending via MMS or E-mail, please refer to Chapter 5.

6

**Action: Viewing Images after Capture is Complete**

- 1 Select  **View**  
Then press the  **OK**  
**button**



Views the image that was just captured.

- 2 Press  **Back**  
**button**




Press the Back button to go back.

## Action: Save to Contacts when Capture is Complete

- 1 Select Save to Contacts. Then press the OK button.
- 2 Select <Contacts>. Then press the OK button.



Save contacts picture to Contacts. This option is only available in the Contacts Picture mode.

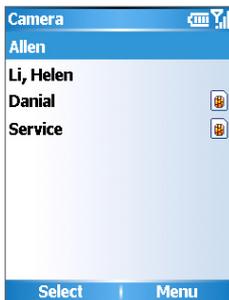

Choose the contact to save.

6

## Headshot Capturing Example

- Select Menu > Template > <Frame>



Selects the frame for headshot.

## Setting Up Continuous Shot Frequency


- Select Menu > Options > Capture Frequency > <Frequency>



Set up the capturing frequency in Sports mode.

## Setting Up Number of Continuous Shots

- Select Menu > Options > Sport Count > <Number>

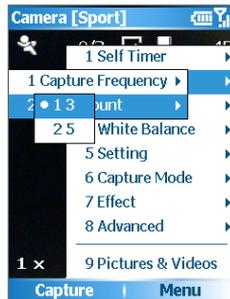


Set up the sport count in Sports mode.



## Self Timer Setup

- 1 Select Menu > Self Timer > <Time>

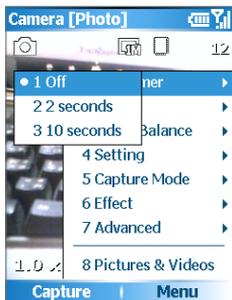

Sets up the timer's duration. This option cannot be used in the Video mode.

## Zoom Setup


- 1 Select Menu > Zoom > <zoom>



Chooses the zoom distance for capturing. You can also use the directional button to select.

## White Balance Setup

- 1 Select Menu > White Balance > <Options>

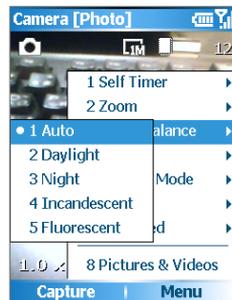


Sets up the white balance option.

6


## Action: Image Size, Location, and Quality Settings

- 1 Select Menu > Setting > Resolution > <Resolution>

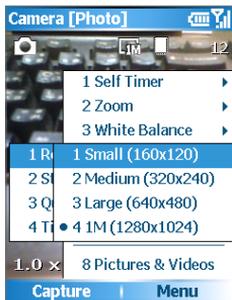


Sets up the image size.

- 2 Select Menu > Storage > <Location>

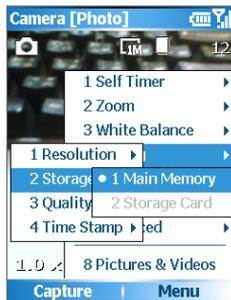

Sets up the image save location.

- 3 Select Menu > Quality > <Options>

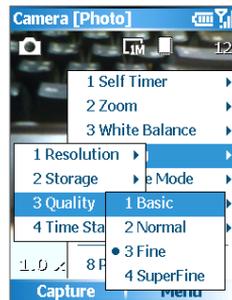

Sets up the image quality.



## Action: Switch Cameras

- 1 Select  Menu > Capture Settings > Camera > <Camera>
- 2



6

## Advanced Camera Settings



<b>Format</b>	Sets the capturing format: JPEG for images and M-JPEG, MPEG-4, and H.263 for movies.
<b>Shutter sound</b>	Turn shutter sound on/off.
<b>Review Duration</b>	Time duration for capture results browsing.
<b>Flicker Adjustment</b>	Adjusts the monitor flicker frequency to auto, 50Hz, or 60Hz.
<b>View</b>	Sets the viewpoint as full screen or full scene.
<b>Show control</b>	Choose whether you wish to display the control options on the screen.
<b>Prefix type</b>	The character string format for the file header.
<b>Counter</b>	Resets the counter number.
<b>Adjust</b>	Use the directional button to adjust saturation, Gamma, and colors.
<b>Include sound when recording</b>	Choose whether you wish to have the sound to be included when recording movies.
<b>Recording limitations</b>	Sets the size limitation when recording movies.



## 6. 2 Viewing Pictures and Videos

You can use the Pictures & Videos function to view, delete, edit photos and movies on the phone. You can also send the pictures to other devices by various methods.

6

### Action: Open Pictures and Videos Application Program

- 1 Select Start
- 2 Select Pictures and Video  
Then press the OK button
- 3



Opens the Application program menu.



Opens Pictures & Videos



Pictures & Videos screen. You can also enter Pictures and Videos directly from the Camera menu.



## Action: View Picture

- 1 Select <picture you want to view>
- 2 Then select View



For example, Angel.



Displays your selected pictures.


6

## Action: Play Video

- 1 Select <Video you want to play>
- 2 Then select Playback



For example, Open-count.

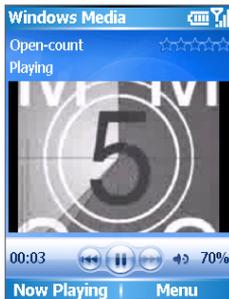

Plays selected movie. Press the OK button to stop playing.

## Action: Delete Pictures or Videos

- 1 Select <Picture or video you want to delete>
- 2 Select Menu > Delete
- 3 Select Yes



Select the picture or movie you want to delete. For example, IMAGE\_020.jpg.



Select the Delete option from the menu.



Confirm file delete.

6

## Action: Play Slide Show

- 1 Select <Picture you want to play>
- 2 Select Menu > Play Slide Show
- 3



Pictures will play in Full screen mode.



Selects Play Slide Show.



Start to play in full screen mode from the selected picture.

## Action: Change Storage Folder to Memory Card

1 Select   
Menu > Folders

2 Select   
Storage Card

3



Changes the file storage location to the memory card.


6

**Action: Send Image by E-mail**


- 1 Select  <File>  
Then select  **Menu** > **Send**
- 2 Select  <E-mail Inbox you want to use>
- 3 Enter <To, Subject, and Attached>  
Then select  **Send**



Send pictures as E-mail attachments.

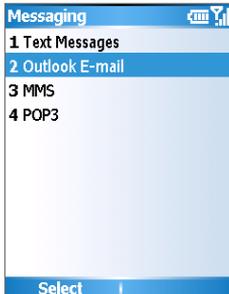

Select the e-mail address you wish to use. For example, via Outlook E-mail.

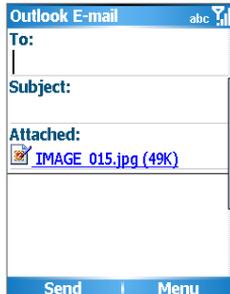



For E-mail related usages, please refer to section 5. 3 Outlook E-mail.

**Action: Send Images through MMS**

- 1 Select  <File>  
Then select  **Menu** > **Send**
- 2 Select  <MMS>
- 3 Enter <To, Subj, and Attached>  
Then select  **Send**




Send pictures via MMS.

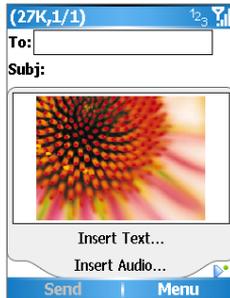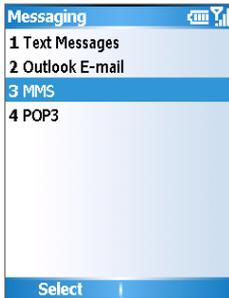


For MMS related usages, please refer section to 5. 4 MMS.

## Action: Send Images through Bluetooth


- 1 Select  <File>  
Then select  Menu > Beam
- 2 Select  <Device you want to transfer>  
Select  Beam
- 3 Select  Cancel

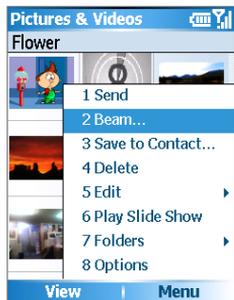

Send pictures via MMS.

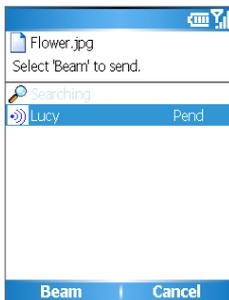

Select the device you want to send. For example, Lucy.

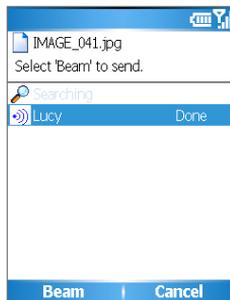

Done. Select **Cancel** or press the **Back button** to return to the previous screen.

6

## Action: Setting Picture Display Options

- 1 Select  Menu > Options
- 2 Select  <Items you want to configure>  
Then press the  OK button




Opens Options menu.



For options, please refer to the following descriptions.

## Setting Size and Rotation Methods for Picture Sending

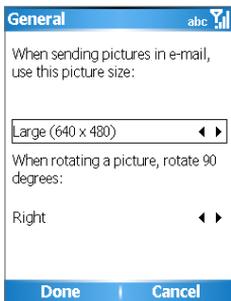

**When sending pictures in e-mail, use this picture size.**


Picture size for e-mail use. Picture can be set as original size, large (640x480), med (320x240), or small (160x120).

**When rotating a picture, rotate 90 degrees.**

Choose if the rotation should be right or left.

6

## Setting up slide shows

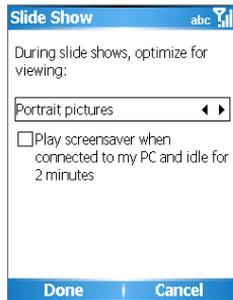

**During slide show, optimize for viewing**

Select optimization for portrait or landscape oriented pictures during slide show.

**Play screensaver when connected to my PC and idle for 2 minutes.**

Select to automatically playback pictures when connected to PC and idle for 2 minutes.

## 6. 3 Windows Media Player

You can use the Microsoft® Windows Media™ Mobile for Smartphone version media player to playback digital audio or video files stored on the phone or network. If you need to transfer the media files (including music, video movies, or TV programs) to your device, please use Windows Media Player® 10 on a Windows® PC to sync the media. For more information on synchronizing media files, please refer to Chapter 9.


Windows Media™ Mobile® for Smartphone can playback the following file extensions and encoded files:

- Microsoft Windows Media® Audio encoder version 1.0, 2.0, 7, 8, and 9
- MP3
- 3GP
- Microsoft Windows Media® Audio, various encoders
- Microsoft Windows Media® Video 7, 8, and 9
- Microsoft Windows Media® Video 9 Image encoder version 1.0 and 2.0
- Microsoft MPEG-4® encoder version 2.0 and 3.0

6

### Action: Using Windows Media Player

1 Select  Start

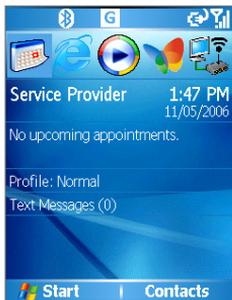

Opens the Application program menu.

2 Select  Windows Media  
Then press the  OK button



Opens Windows Media.

3



Windows Media home screen.

### 6. 3. 1 Using the Library


The Library allows you to quickly find your audio files, movie files, and the play list. You can save the audio files and movie files to the memory card. When you update the Library, the files will be found and added automatically.

For music, video, and picture synchronization, please refer to section 9. 11.


6

#### Action: Open Library

- 1 Select  **Menu > Library**
- 2

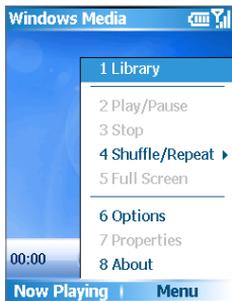




Opens Library.

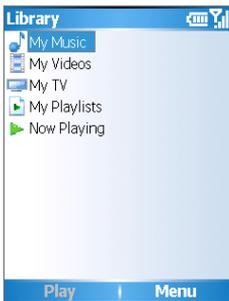

The Library home screen.

## Action: Update Library

- 1 Select  Menu > Update Library
- 2
- 3 Select  Done

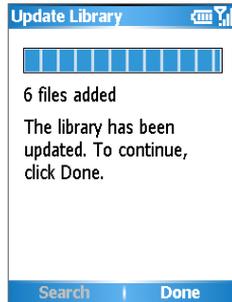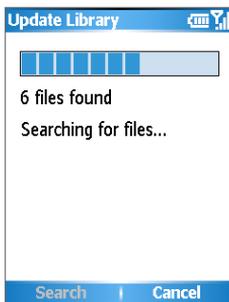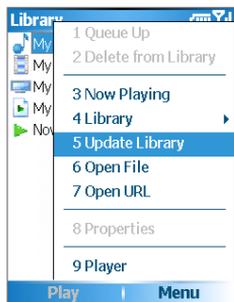


The Library will search the phone and the memory card for media files, then add them to the Library.

Library update is completed.


6

## Action: Switch Library Location

- 1 Select  Menu > Library
- 2 Select  <Library you want to switch to>

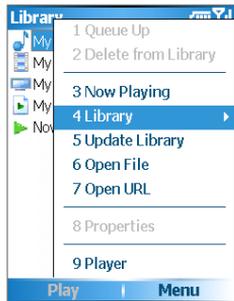

Opens Library menu.

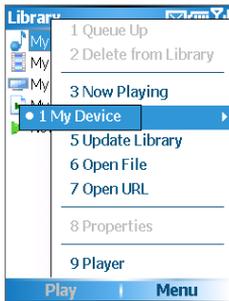


Choose the Library you wish to switch to. For example, My Device.



## Action: Using the Library

- 1 Select **<Category>**  
Then press the **OK** button
- 2 Select **<Music category>**  
Then press the **OK** button
- 3 Select **<Artist>**  
Then press the **OK** button

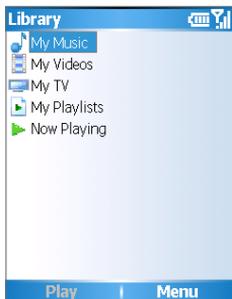

The Library is categorized into Music, Video, TV, and Playlist.




You can choose the category according to the music Artist, Album, and Genre. For example, Artist.




For example: ExampleArtist1.

6

- 4 Select **<Album>**  
Then press **Play**
- 5 Select **<Music>**  
Then press **Play**
- 6

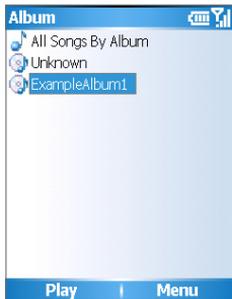

Select the album you want to play. For example, ExampleAlbum1.

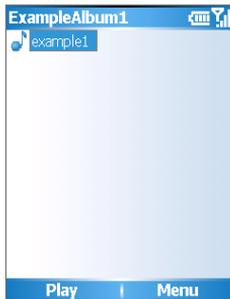

Select the music you want to play. For example, example1.




Music is now playing.




## Action: Opening File

- 1 Select  Menu > Open File
- 2 Select  <Folder> Then press the  OK button
- 3 Select  <File> Then press  Play button

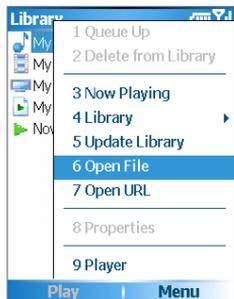

Opens the media from the file.

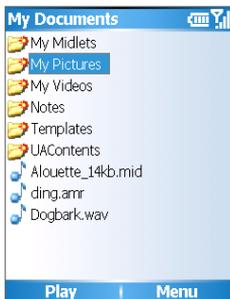

Selects the folder that stores the media file.



Selects the file you want to play.

6


4



File is now playing.

## Action: Playing Media File from Network

- 1 Select  Menu > Open URL
- 2 Enter <URL>  
Then select  OK button
- 3

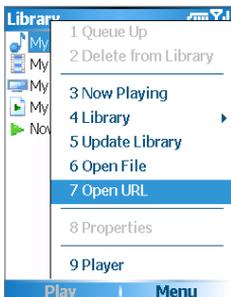

Opens the multimedia file URL.



Enter the MMS file URL.  
For example, <http://www.example.com/1.wmv>.



Multimedia file is now playing.

## 6. 3. 2 Operations and Options

Various settings for Windows Media®. Select **Menu > Options** to enter the Options settings. The option contents are detailed as follow.

### Operations



Function	Button
Play/Pause	OK button
Go to previous file	Left directional button
Go to next file	Right directional button
Increase volume	Up directional button
Decrease volume	Down directional button
Turn on or off sound (mute)	# [Mute Icon]
Switch to full screen during movie playback	0 [Full Screen Icon]
Modify rating	* [Rating Icon]
Fast forward to the next file	Right directional button (press & hold)
Rewind to the previous file	Left directional button (press & hold)

## Use the Menu

Select  Menu




<b>Library</b>	Switches to Library.
<b>Play/Pause</b>	Play or pause the multimedia file.
<b>Stop</b>	Stops playback.
<b>Shuffle/Repeat</b>	Choose if you wish to use random playback or repeat playback.
<b>Full Screen</b>	Use full screen playback.
<b>Options</b>	Opens the Settings Options.
<b>Properties</b>	Properties information of the multimedia files.
<b>About</b>	About Windows Media.

6

## Action: Windows Media Options settings

1 Select  Menu > Options

2 Select  <Selected option>  
Then press the  OK button

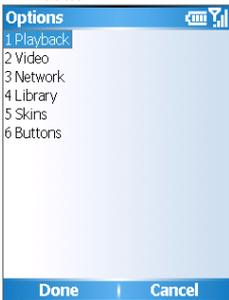



## Playback

<b>Show time as</b>	Choose if the Home screen displayed time should be time elapsed or time remaining.
<b>Pause playback when using another program</b>	Choose if playback should be paused when switching to other programs.
<b>Resume playback after a phone call</b>	Choose if playback should be resumed after a phone call ends.

## Video

<b>Play the video as in full</b>	Choose if full screen mode should be used for video playbacks. You can choose the setting as never use fullscreen, use only when movie is larger than fullscreen, or always use full screen for playbacks.
<b>Scale to fit window</b>	Choose if the video size should be scaled to fit the window size when the video size is too big.

## Library

Check-mark the option to choose whether the Library screen should be displayed when the media player is started.

## Skin

Use the Left/Right directional button to choose the skin you wish to use.

To download new skins, please go to the WMplugins.com website (<http://www.wmplugins.com>). After downloading the skins to your computer, please uncompress the file (if necessary). Use ActiveSync® to copy the . skin and . bmp files to the phone (if the path on the phone is: Smartphone\Program Files\Windows Media). To make sure the skins will appear in the skins labels, do not save the skins files in the Windows folder on the phone.

## Buttons

Select your Options settings and set them as your customized hot keys.

## 6. 4 MP3 Player

You can open the MP3 Player application to play music from **Start > MP3 Player**, or set a MP3 file as your Alarm ring tone.


This MP3 Player is a Dopod plug-in application. It will provide you with an even quicker user interface and functions. After the MP3 Player is started, the program will automatically search your phone and memory card for all recognized music files and add them to the playback list. At the same time the Library will playback your favorite music at a specific time as an alarm function setting. You will even be able to directly edit your play list here.

Function	Button
Play/Pause	OK  or the number key 5 
Go back to the previous file	Left directional button  or the number key 4 
Go to next file	Right directional button  or the number key 6 
Increase volume	Up directional button  or the number key 2 
Decrease volume	Down directional button  or the number key 8 
Repeat	The Number key 1 
Shuffle	The Number key 3 

6



▲ MP3 Player home screen

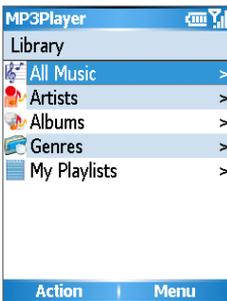


▲ Library home screen

## Action: Adding a New MP3 Player Playlist


- 1 Select Library
- 2 Select <Track>  
Select Menu >  
Add to My Playlist
- 3 Select Add to New Playlist



Opens the MP3 Player Library.

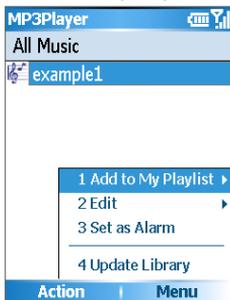

Please select the media library tracks first.  
For example, example1.

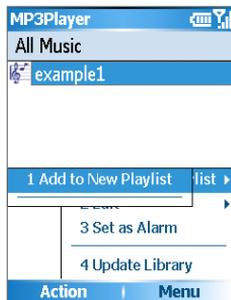

Add to New Playlist.


6

## Action: Adding a New Track as Alarm Ring Tone


- 1 Select Library
- 2 Select <Track>  
Select Menu  
Set as Alarm
- 3 Select <Alarm Time>, <Alarm>, and <Play Options>



Opens the MP3 Player Media Library.

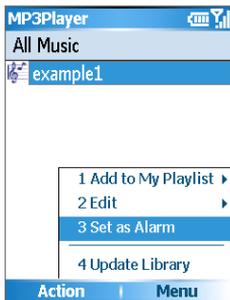

Please select the media library tracks first.  
For example, example1.

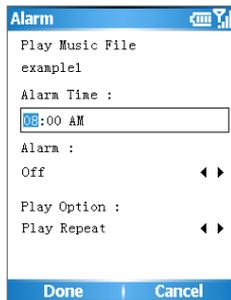

Activates the alarm function. Please first set the "Alarm" as "On".

## 6. 6 Streaming Media

You can open the Streaming Media Player from **Start > Streaming Media**.



6

Experiencing Multimedia Entertainment

### Action: Play Streaming Media

- 1 Select  **Connect**
- 2 Enter **<Streaming Media Web Location >**  
Select  **Go**

3

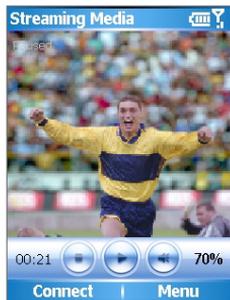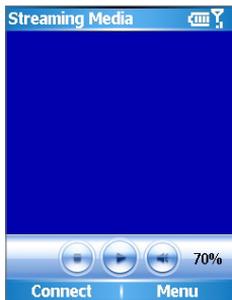



# Topic

# 7

## Connecting With Wireless Communications

**In this topic, you will learn about...**

1. **Comm Manager**
2. **Bluetooth Connection**
3. **Modem Mode**
4. **GPRS Configuration**





# Index Action

Open the Comm Manager .....	186
Activate/Deactivate Microsoft Direct Push.....	187
Stop the Connection .....	188
Setting the Ring Tone as Vibrate .....	188
Using the Comm Manager to Activate ActiveSync .....	189
Activate/Deactivate Bluetooth.....	190
Open the Bluetooth Settings Screen .....	191
Open the Bluetooth Setting Screen From the Settings Menu.....	192
Use Bluetooth/IR to Send Files .....	193
Adding a New Bluetooth Device .....	194
Activate Windows Bluetooth Search.....	196
Enter the Computer and Bluetooth Password .....	197
Configuring Connection Port .....	198
Using the Bluetooth Headset.....	200
Editing Profiles.....	202
Using Modem Mode .....	203
Setting the Phone as an USB Modem.....	205
Install the USB Modem.....	206
Using the USB Modem Connection.....	209
Setting the Phone as a Bluetooth Modem .....	210



Using the Network Wizard .....	219
Manual Proxy Configuration .....	220



## 7.1 Comm Manager

The Comm Manager enables you to perform the most commonly used controls and connection controls, including:

1. Activate/Deactivate Phone Functions
2. Activate/Deactivate Bluetooth Functions
3. Activate/deactivate Direct Push
4. Disable GPRS Data Connection
5. Activate/deactivate Ring Tone
6. Switch to ActiveSync Program

7

### Action: Open the Comm Manager

1 Select  Start

2 Select  Comm Manager  
Then press the  OK button

3

Connecting with Wireless Communications



Opens the Start Menu.



Opens the Comm Manager.



The Comm Manager main screen.

## 7. 1. 1 Using the Comm Manager

Use the Comm Manager to activate/deactivate Microsoft Direct Push, stop GPRS connection, set phone to mute, and activate ActiveSync® program.

For using Microsoft Direct Push, please refer to Chapter 9.

### Action: Activate/Deactivate Microsoft Direct Push

- 1 Select  Direct Push icon  
Then press the  OK button



You can also press the  to adjust the setting.

- 2



Microsoft Direct Push is deactivated. Press the OK button again to reactivate.

## Action: Stop the Connection

- 1 Select . Then press the  **OK** button.
- 2



You can also press the  to adjust the setting.



Connection is stopped.

7

## Action: Setting the Ring Tone as Vibrate

- 1 Select . Then press the  **OK** button.
- 2



You can also press the  to adjust the setting.



The ring tone has been set as vibrate. Press the OK button again to cancel.

## Action: Using the Comm Manager to Activate ActiveSync

- 1 Select  sync icon  
Then press the  OK button
- 2



You can also press the  to adjust the setting.



Activates ActiveSync.

## 7. 1. 2 Activate/Deactivate Bluetooth

Use the Comm Manager to activate/deactivate the Bluetooth connection. When the Bluetooth connection is off, there will be no data transfer through Bluetooth. When Bluetooth is on, the indicating LED on the phone will flash in blue color.

7

### Action: Activate/Deactivate Bluetooth

- 1 Select  Bluetooth  
Then press the  OK  
button

2



You can also press the  to adjust the setting.

Bluetooth has been activated. Press the OK button again to deactivate.



## 7. 2 Bluetooth Connection

The phone supports Bluetooth wireless communication technology. The Bluetooth technology provides close range (around 10 meters), low power wireless connection functions. You can use Bluetooth to perform the following functions:

- Transfer data such as files, appointments, tasks, and contacts to other Bluetooth equipped devices and phones.
- Use Bluetooth to create a modem connection. Use the phone as a dialup modem, and use the Bluetooth for data transactions.
- Use Bluetooth hands-free devices.
- Integrate Bluetooth GPS device for instant navigation.

### Action: Open the Bluetooth Settings Screen

- 1 Select Settings > Bluetooth Settings
- 2

7

Connecting with Wireless Communications



Opens Bluetooth settings screen from Comm Manager.



The Bluetooth settings screen.

## Action: Open the Bluetooth Setting Screen From the Settings Menu

- 1 Select  Start
- 2 Select  Settings  
Then press the  OK button
- 3 Select  Connections  
Then press the  OK button



Opens the Start Menu.



Opens the Settings menu.




Selects the connections setting.

7

## Connecting with Wireless Communications

- 4 Select  Bluetooth  
Then press the  OK button

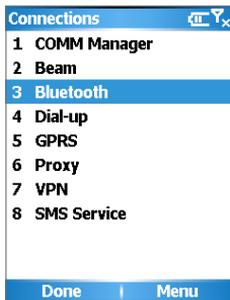

Opens the Bluetooth settings screen.

5




The Bluetooth settings screen.

Setting options:


<b>Bluetooth</b>	Sets the Bluetooth for: <ul style="list-style-type: none"><li>- On</li><li>- Off</li><li>- Discoverable.</li></ul>
<b>Device name</b>	Sets the name of the device.

## Action: Use Bluetooth/IR to Send Files

- 1 Select **<File>**  
Then press   
Menu
- 2 Select **Beam Data...**  
Then press the **OK** button
- 3 Select **<Device>**  
Then press   
Beam Data

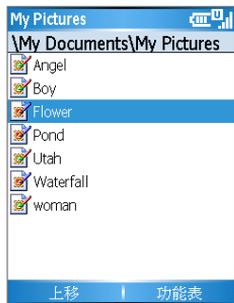


The File Explorer screen

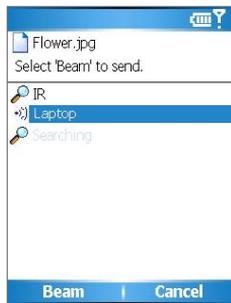

(Note 1)

4

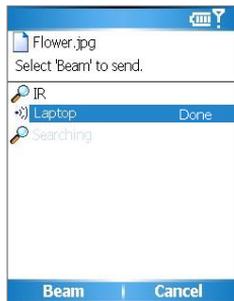

Send completed.

(Note 1)

You must wait for a period of time while the phone searches for available devices for connection. If you use IR transmission, you must line up the devices IR ports.

- ! The device receiving files may require manual agreement to file transfers.



## 7. 2. 1 Adding a New Bluetooth Device

To connect with other Bluetooth devices (such as Bluetooth headset, Bluetooth GPS, etc), you must first create the connection between the phone and Bluetooth device.

The set up process is as follows:

- Activate the Bluetooth functions of the phone and the device
- Search for nearby Bluetooth device
- Enter the verification password for the phone and Bluetooth device respectively
- Select the Bluetooth service to use

7

### Action: Adding a New Bluetooth Device

1 Select Menu > Devices


2

3 Select Menu > New

Connecting with Wireless Communications



Opens the Menu.

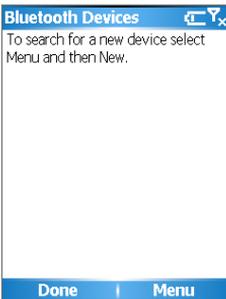

If a device has already been set up, it will be displayed here.



Add a new device.






4



Before searching for the Bluetooth device, please first activate the "Search" and "Discover" functions for the Bluetooth device(s).

5A Select  Yes

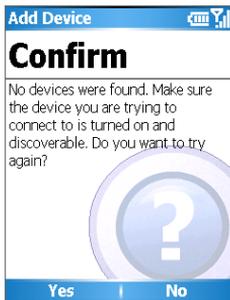


Cannot find the device. Select **Yes** to search again or select **No** to end (Note 1).

5B Select  Next



You have successfully found the device. For example, Lucy.

6 Enter <Passkey>  
Select  Next

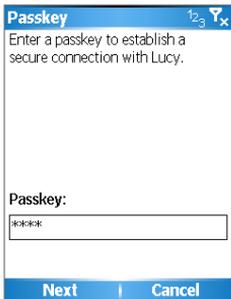


Enter the passkey you want to set (Note 2).

7 Select  OK



You have connected with the device successfully.

8 Enter <Display name>  
Select  Next

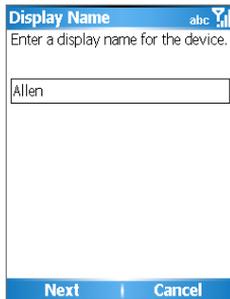

Sets the device name you wish to display.

7


Connecting with Wireless Communications

195



9 Select  Done

10 Select  Done

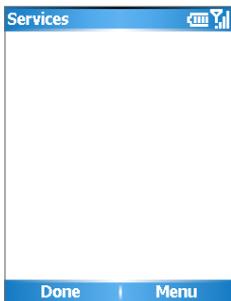

(Note 1) If the device cannot be found, the Bluetooth device may not be set to "Discover" mode. Please refer to the action: Activate Windows Bluetooth search.

(Note 2) You can customize the password. Both the phone and the device being connected with must have the password entered.




7

## Action: Activate Windows Bluetooth Search

1 Select **Activate Search**

Connecting with Wireless Communications

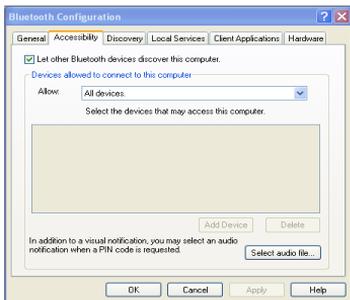


You must select "Activate Search" under Windows XP to allow Bluetooth to find this computer.

196



## Action: Enter the Computer and Bluetooth Password

 - 1 Select the **Bluetooth** pop-up message
- 2 Enter the **Bluetooth PIN Code**  
Then select **Next**



Opens the Bluetooth PIN Code window.

Enter the Bluetooth PIN Code on the phone.

- 3 Select **OK**



Bluetooth device connection on the computer end is completed.

## 7. 2. 2 Configuring Connection Port


The Bluetooth connection port allows the phone to have incoming/outgoing connections with other Bluetooth devices. When you need to create a Bluetooth GPS, you will need to create an incoming COM port.

### Action: Configuring Connection Port


- 1 Select  Menu > COM Ports
- 2 Select  Menu > New Outgoing Port
- 3 Select  <Port> Select  Done



Opens the Menu.

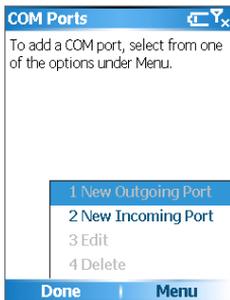

Adds a new incoming or outgoing port.

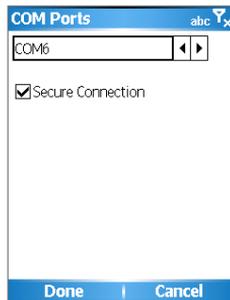

Use the Left/Right button to select your connection port.

4 Select  Done



You have successfully  
created connection port.

7

Connecting with Wireless  
Communications

199



## 7. 2. 3 Using the Bluetooth Headset

The Bluetooth headset is an optional accessory, please contact your retailer about purchasing the device.




7

### Action: Using the Bluetooth Headset

- 1 Press the **Bluetooth headset communication button**
- 2 Select  **Next**
- 3


Connecting with Wireless Communications

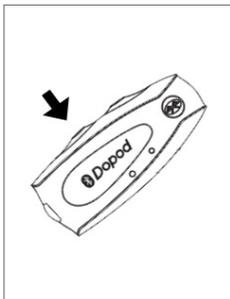

Activate the Bluetooth headset power and press the communication button. The Bluetooth headset will automatically be found by the phone.



Select "Yes" to add it to the device list.

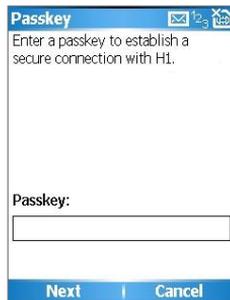


Bluetooth earphone has a preset access code, please refer to its user manual for details.

200



- 4 Enter **<Passkey>**  
Select **Next**

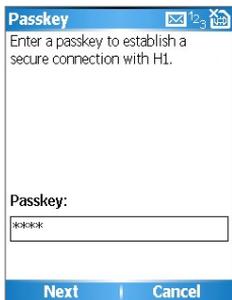


Enter the Bluetooth headset passkey. For example, 0000.

- 5 Select **OK**



Select OK to complete the connection.

- 6 Enter **Device name**  
Select **Next**

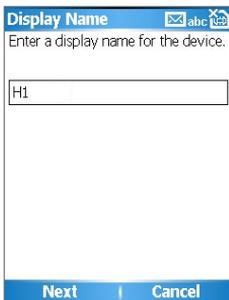

**<Enter device name>** and then select "Next".

- 7 Select **Done**



- 8



When the headset is activated, the operation profile will automatically be changed to Headset.

7

Connecting with Wireless Communications

201

## Action: Editing Profiles


- 1 Select  **Start**
- 2 Select  **Settings**  
Then press the  **OK** button
- 3 Select  **Profiles**  
Then press the  **OK** button



Opens the Start Menu.



Opens the Settings screen.

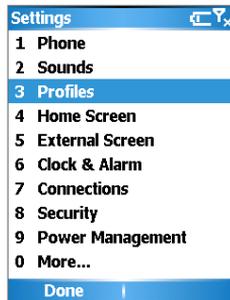


Goes to the Profiles setting.


## 7

### Connecting with Wireless Communications

- 4 Select  **Headset**
- 5 Select  **Menu** > **Edit**
- 6 Select  **<Auto-answer in>**

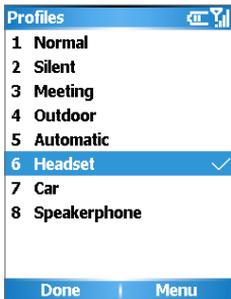

Selects the Headset mode.

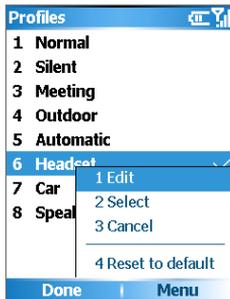

Edits the Headset mode.



Select how many rings before the phone automatically picks up. To edit other profiles, please refer to section 10. 4.

## 7. 3 Modem Mode

The phone can use either the USB or Bluetooth connection to connect with the computers or other devices such as a PDA. The phone can also be used as an external modem. This will allow other devices such as computer or PDA to connect online through GPRS on the phone.

**!** When you use the Bluetooth connection modem mode, the Bluetooth status of your phone must be set to discoverable mode.

### Action: Using Modem Mode

- 1 Select  **Start**
- 2 Select  **Accessories**  
Then press the  **OK** button
- 3 Select  **Wireless Modem**  
Then press the  **OK** button



Opens the Start Menu.



Opens the Accessories application menu from the Start Menu.




Opens the modem connection program.

7

Communications with Wireless

203

4

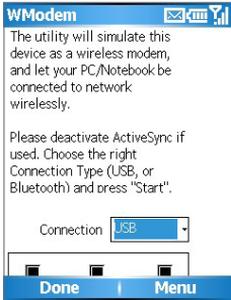

The modem connecting home screen.

7

## Connecting with Wireless Communications

204

### 7. 3. 1 Setting the Phone as an USB Modem


In order to use the USB connection to connect with the mobile modem on the phone, you must first use the USB cable to connect the computer and phone. Please set the phone to use the USB connecting modem and setup the USB modem on the computer respectively. Before configuring the USB modem, please insert the phone's user CD into the CD-ROM drive of the computer. Locate the folder "OEM\APPS\Drivers\GSM USB Modem" on the CD to find the following files:

- USBMDM.INF
- USBModem\_Dialer.exe


**!** Before using the modem, please make sure the GPRS supported SIM card is inserted into the phone, the phone and computer are connected through USB, and that ActiveSync® is deactivated.

#### Action: Setting the Phone as an USB Modem


- 1 Select  Connection Type Then Select  USB
- 2 Select  Menu > Start
- 3

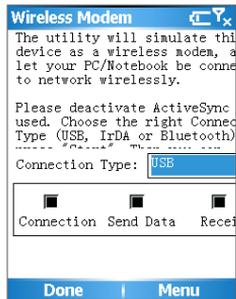

Use the directional button to move to the connection. Then use the Left/Right directional button to select the connection as USB.

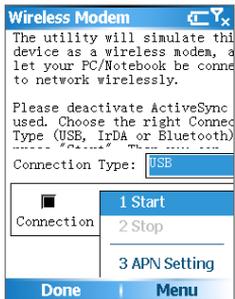

Use the Left/Right button to select which GPRS access point to use.

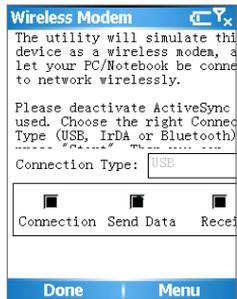

The USB modem mode is in operation. To stop, press "Stop".

## Action: Install the USB Modem


- 1 Select **"No, not this time"** and then select **Next**
- 2 Select **Install from a list or specific location (Advanced)**  
Then select **Next**



Connects the phone to the computer. The computer will search for the new device and automatically opens this window.

7

- 3 Select **"Don't search, I will choose the driver to install"**  
Then select **Next**
- 4 Select **Modem**  
Then select **Next**

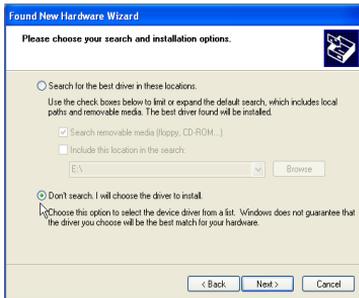

5 Select **Have Disk**




6 Select **Browse...**




Please insert the user's CD into the computer CD-ROM.

7 Select **<File installation location>**

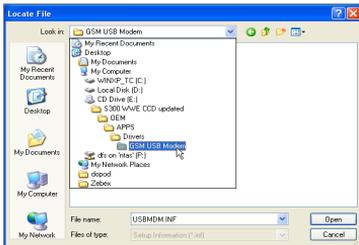

8 Select **USBMDM.INF**  
Then select **Open**

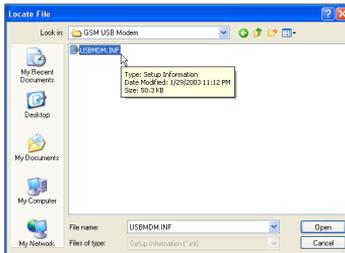

Please select to open the "OEM\APPS\Drivers\GSM USB Modem" folder in the CD-ROM.

9 Select OK



10 Select Next



Please make sure that the "HTC USB Modem" option has been automatically selected.

7

11 Select Continue




12 Select Finish




USB modem has been installed successfully.

## Action: Using the USB Modem Connection

- 1 Select and open  
USBModem\_Dialer.exe
- 2 Enter <APN> field  
Then select Dial

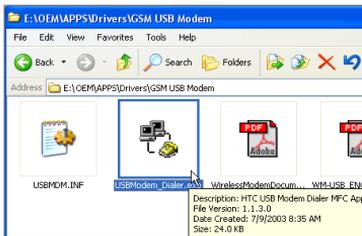

Please open this program from the "OEM\APPS\Drivers\GSM\_USB\_Modem" folder on the user's CD.

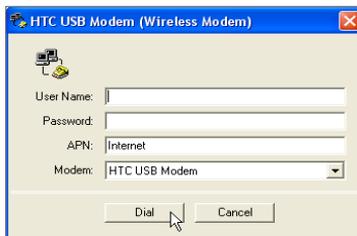

Please insert your service provider's APN address in the APN field. For example, Internet. Please ask your service provider for their APN address.

## 7. 3. 2 Setting the Phone as a Bluetooth Modem

You can set the phone as a Bluetooth modem to connect with the computer.

**!** Bluetooth modem configuration methods may differ with the different Bluetooth device driver. You can inquire with your computer hardware manufacturer for the Bluetooth modem configuration control methods.

7

### Action: Setting the Phone as a Bluetooth Modem

- 1 Select **Start > Control Panel**
- 2 Select **Printers and Other Hardware**

Connecting with Wireless Communications



Opens the Control Panel.



Opens the hardware settings window.

- 3 Select the **Phone and Modem options**




Opens the modem settings window.

- 4 Enter **<Your Area code>**  
Then press the **OK** button




Enter the area code information.

- 5 Select the **Modems** tab

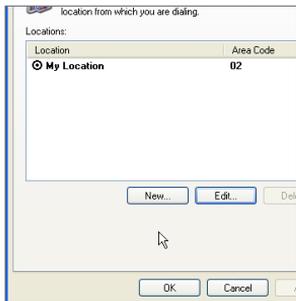

Opens the modem list.

- 6 Select **Add...**

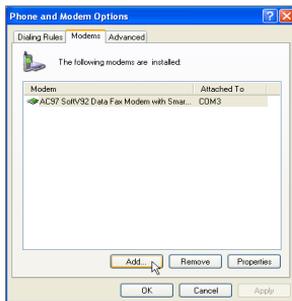

Add a new modem.

7

Connecting with Wireless  
Communications

211

7 Select **Next**



8



Make sure the Bluetooth connection of the phone is discoverable to allow the computer to detect the modem.

The computer will now search for the Bluetooth modem.


7

9 Select **<Phone>**  
Then press the **OK** button



Select your phone and then press OK.

10 Select the **<Modems>**  
Then press the **Properties**

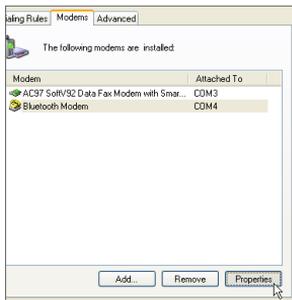


Configures the installed modem's detailed settings.

11 Select the **Advanced** tab




Enter the advanced settings.

12 Enter the **Extra initialization commands**

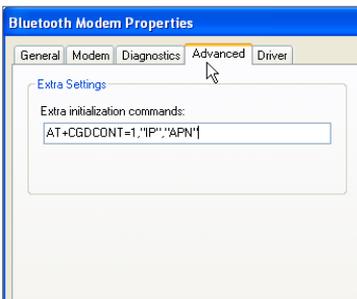


Enter the extra initialization commands. The APN is your service provider's APN address. For example, Internet.

13 Select **OK**

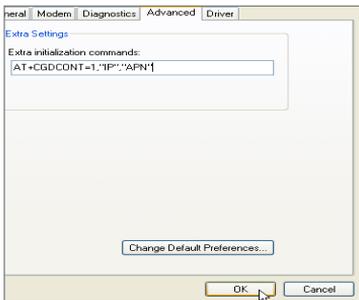


14 Select **OK**

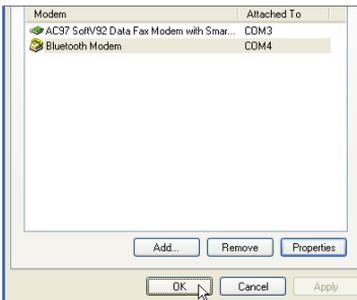

7

Connecting with Wireless Communications

- 15 Select **Start > Control Panel**

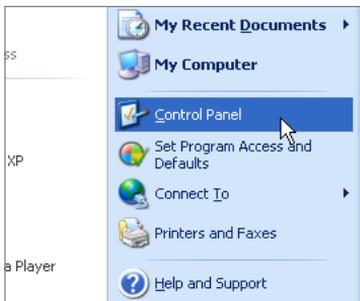

Enters the Control Panel configuration window.

- 16 Select **Network and Internet Connections**



Configures the network options.


7

- 17 Select **Network Connections**



Enters the Network Connections configuration window.

- 18 Select **Create a new connection**

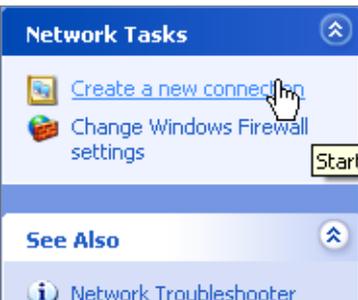

Select "Create a new connection" located at the upper left hand corner of the screen.




### 19 Select **Next**




Opens the Welcome to the new Connection Wizard to configure the network connection.

### 20 Select **Connect to the Internet** Then select **Next**

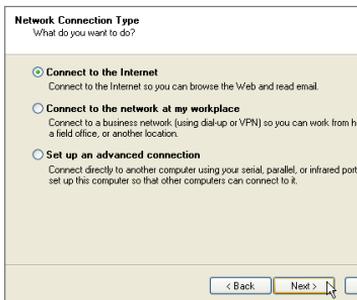


Select **Connect to the Internet** directly.

### 21 Select **Set up my connection manually** Then select **Next**

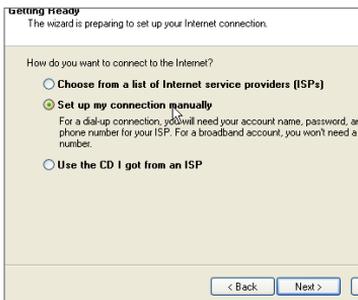

Manually setup the connection.

### 22 Select **Connect using a dial-up Modem** Then select **Next**

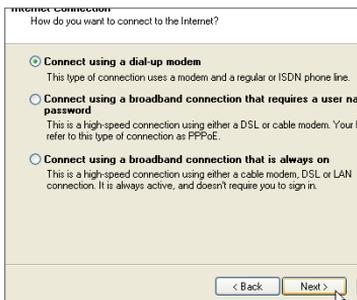

Uses the modem as the dial-up connection.

23 Enter <ISP name>  
Then select **Next**

**Connection Name**  
What is the name of the service that provides your Internet connection?

Type the name of your ISP in the following box.

ISP Name

GPRS

The name you type here will be the name of the connection you are creating.

Set the ISP name for this connection. For example, GPRS.

24 Enter <phone number>  
Then select **Next**

**Phone Number to Dial**  
What is your ISP's phone number?

Type the phone number below.

Phone number:

\*99#

You might need to include a "1" or the area code, or both. If you are not sure you need the extra numbers, dial the phone number on your telephone. If you hear a modem sound, the number dialed is correct.

GPRS connection phone number may be different depending on the service provider. For example, \*99#.

7

25 Enter <User name>  
Then select **Next**

**New Connection Wizard**  
**Internet Account Information**  
You will need an account name and password to sign in to your Internet account.

Type an ISP account name and password, then write down this information and store it in a safe place. (If you have forgotten an existing account name or password, contact your ISP.)

User name: catch

Password:

Confirm password:

Use this account name and password when anyone connects to the Internet on this computer

Make this the default Internet connection

< Back Next > Cancel

User name may be different depending on the service provider. For example, catch.

26 Select **Finish**

**New Connection Wizard**  
**Completing the New Connection Wizard**

You have successfully completed the steps needed to create the following connection.

**GPRS**

- Share with all users of this computer

Add a shortcut to this connection to my desktop

To create the connection and close this wizard, click Finish.

< Back Finish Cancel


Finishes adding the new connection.

27 Select **Dial**



Dials to the connection through the phone dialup. Please make sure the phone's Bluetooth connection has been activated.

28

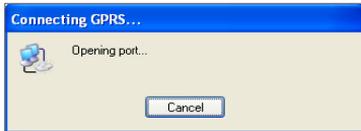


Connection is opening the Bluetooth port.

29



Confirming user name and password.

30

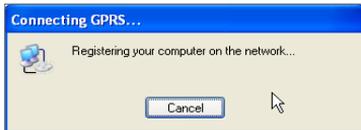


Logging in to the computer.

7

Communications with Wireless

217

31

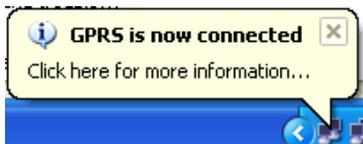

You have successfully been connected using the phone's Bluetooth modem.

7

Connecting with Wireless Communications

218

## 7. 4 GPRS Configuration

Your system provider's GPRS and MMS transfer configurations will be detected and configured automatically after you insert the SIM card. Therefore, you will not need to manually perform the configuration. You can still use the Network Wizard to manually configure the GPRS/MMS connection.

### Action: Using the Network Wizard

- 1 Select  **Start**
- 2 Select  **Accessories**  
> **Network Wizard**
- 3 Select  **<Country>**  
Then press the  **OK**  
**button**



Opens the Start Menu.



Open Network Wizard.




Select the system provider you wish to use.

7

Communications with Wireless

219

- 2 Select  <Network>  
Then press the   
OK

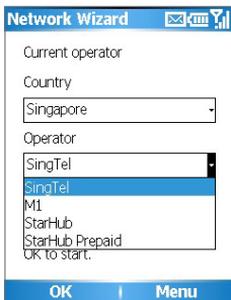

Selects your service provider / network.

- 3 Select  Yes



After system restart, your service provider configuration will be updated.

7

## Action: Manual Proxy Configuration

- 1 Select   Start
- 2 Select  Settings  
Then press the  OK button
- 3 Select  Connection  
Then press the  OK button



Opens the Start Menu.




Opens the Settings window from the Start Menu.




Selects the connection setting.

4 Select **Proxy**

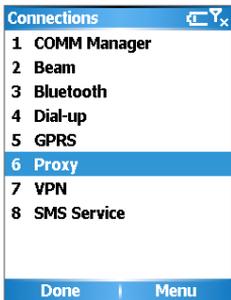


Opens the Proxy settings window.

5 Select **Add**

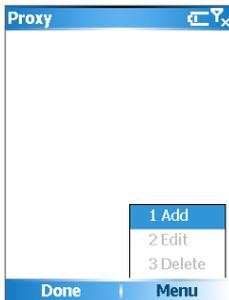

The Proxy settings screen.  
Selects a new setting.

6 Setup **<Options>**

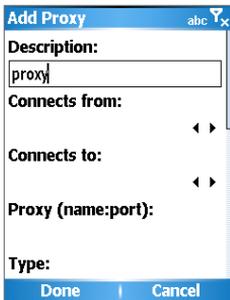

For configuration details,  
please check with your  
service provider.

7

Connecting with Wireless  
Communications

221



7

## Connecting with Wireless Communications

222





# Topic

# 8

## Experiencing Internet Entertainment

In this topic, you will learn about...

1. Internet Explorer
2. Pocket MSN





# Index Action

---



Open the Internet Explorer .....	226
Opening Web Pages from Favorites .....	227
Opening Web Pages from the Address Bar .....	228
Browsing Web Pages .....	229
Go to the Previous Page .....	230
Refresh .....	231
View History .....	231
Add to Favorites .....	232
Switch to the Single Column View .....	233
Switch to the Desktop View .....	234
Switch to the Default View .....	234
Switch to the Full Screen View .....	235
Turn off Show Pictures .....	235
Zoom In on Web Pages .....	236
Setting Internet Explorer Options .....	237
Internet Explorer General Settings .....	238
Internet Explorer Connection Settings .....	239
Clear Temporary Files .....	240
Clear Cookies .....	241



Clear History .....	241
Using D-Service .....	242
Using Pocket MSN .....	243
Logging onto MSN Messenger .....	244
Logging Out of MSN Messenger.....	245
Sending Messages.....	246
Chat Room Invitation.....	247
Return to My Contacts .....	247
Adding New Contacts.....	248
Deleting Contacts.....	248
Changing Online Status .....	249
Changing the Display Name.....	249
Composing Hotmail.....	250
Setting Up Pocket MSN General Options .....	251
SMS Service .....	252
Switching the User.....	253



## 8. 1 Internet Explorer

You can use Internet Explorer® to browse the majority of the websites. Some web pages may not be displayed properly as some specific web page technologies, such as Flash, are not supported by the phone. Your phone will automatically create the UMTS/GPRS connection for you when browsing web pages. You can also use Internet Explorer® to browse websites when you use ActiveSync® to connect to the computer.

### Action: Open the Internet Explorer

1 Select  Start



Opens the Start Menu.

2 Select   
Internet Explorer  
Then press the  OK button



Opens Internet Explorer.


3



Internet Explorer  
"Favorites" screen.

## 8. 1. 1 Opening Web Pages

You can open web pages from the Favorites tab, or enter the web address directly in the address bar.

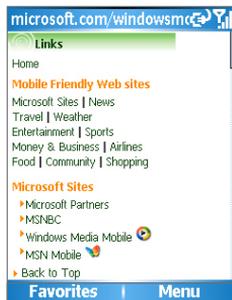

▲ Open web pages.

### Action: Opening Web Pages from Favorites


- 1 Select Web Site
- 2 Select Go
- 3



Use the directional button to select the web page you wish to browse. You can also select the page from the sub-folder.



Opens your selected web page.

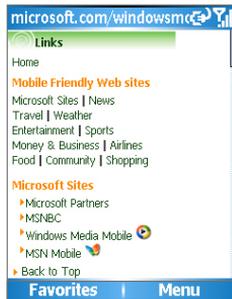

Browsing the web page.

**Action: Opening Web Pages from the Address Bar**

- 1 Choose  Menu > Address Bar
- 2
- 3 Enter <Address> Then press the  OK button



Opens the Menu.



You can enter the address directly, or use the directional button to select your previously browsed pages.



Enter the address you wish to browse. For example, [www.microsoft.com](http://www.microsoft.com).

4



The web page has been opened successfully.

## 8. 1. 2 Browsing Web Pages

When you use Internet Explorer® to browse web pages, you can use the directional buttons to move around the screen. Press the OK button on a link to jump to another page. When you use 3G/GPRS mobile network to browse websites, the phone will automatically set up your data connection. If you wish to interrupt the data connection, please stop the data connection by using the “Comm Manager” program.

For information on Comm Manager, please refer to the description in Chapter 9.



You can press

 to scroll the screen up  
 to scroll the screen down



▲ Browsing web pages.

8

### Action: Browsing Web Pages


- 1 Enter <Text>
- 2 Press the  OK button
- 3 Select  Yes



You can enter the text directly in the field when the cursor is in the text field. For example, Mobile.



Press the OK button to send the entered text.

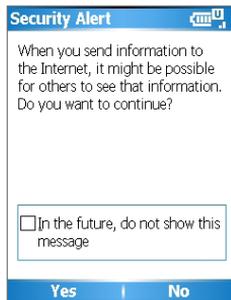

A security warning will remind you that you are about to send the information to the Internet.

8

4



The result from page switch. You can use the directional button to move around the screen.

5

Move <Directional button>  
Press the OK button



Move the directional button to the hyperlink you need, press the OK button to link to the web page.

6

Move <Directional button>




Use the directional button to move around the screen. Browse the web page you wish to view.

## Action: Go to the Previous Page


1

Press the Back button

2

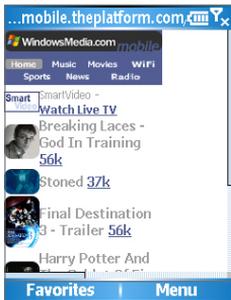


Goes back to the previous page.

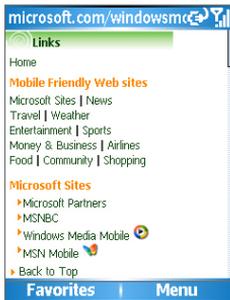

You have successfully returned to the previous page.

## Action: Refresh

- 1 Select  Menu > Refresh

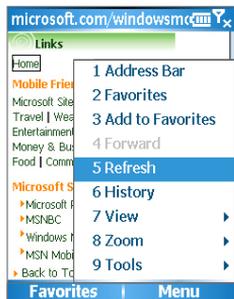

Refreshes the current web page.

2



Web page has been refreshed.

8

## Action: View History

- 1 Select  Menu > History



Views the browsed web page history.

2



The current browsed web page history.

- 3 Select  <History> Select  Go



Move the directional button to the web page you wish to browse, then press Go and jump to this web page.

### 8. 1. 3 Adding a Web Page to Favorites

Add the current web page to Favorites. You can also sync with the computer to retrieve the contents from Favorites. To sync with computer, please refer to section 9. 4.



▲ Add to Favorites.

#### Action: Add to Favorites

- 1 Select Menu > Add to Favorites
- 2 Enter <Name/URL/ Folder>  
Then select Add
- 3



Adds the current web page to Favorites for future browsing.




Enter the name you wish to save. If necessary, you can also modify the web address and save the folder.



The web page has been successfully added to Favorites.

## 8. 1. 4 Web Page Display Options

Switch web page viewing modes. You can use the fit-to-screen viewing mode, or view the web page in its original size.

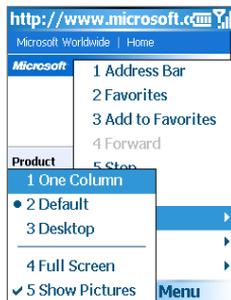

▲ Change the web page display.

### Action: Switch to the Single Column View

1 Select  Menu > View > One Column

2

(Note 1) The contents are sorted in a single column. The column width is the same as screen width. You would rarely need to scroll horizontally.



Switches to single column view.



(Note 1)



8

**Action: Switch to the Desktop View**

- 1 Select Menu > View > Desktop
- 2

(Note 1) Retains the same layout and size as the Desktop. When browsing web pages, it requires both horizontal and vertical scrolling of the page.




Switches to the Desktop view.

(Note 1)

**Action: Switch to the Default View**

- 1 Select Menu > View > Default
- 2

(Note 1) Retains the similar layout as the Desktop, but the screen may shrink the items and edited contents. You will not need to scroll horizontally and can still view the majority of the page.

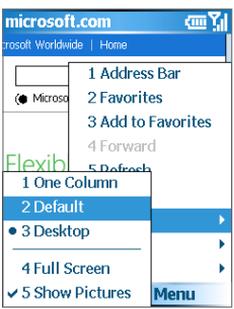

Switches to default view.

(Note 1)

## Action: Switch to the Full Screen View

- 1 Select  Menu > View > Full Screen

2



Opens the Full Screen view.



(Note 1)

(Note 1) To exit the Full Screen mode, please press either the left or right soft keys and cancel Full Screen from the menu.

8

## Action: Turn off Show Pictures

- 1 Select  Menu > View > Show Pictures

2



Does not show pictures on web pages.




(Note 1)

(Note 1) To open Show Pictures, please follow the first step to re-select the picture to display.

## Action: Zoom In on Web Pages

- 1 Select  Menu > View > Smallest
- 2

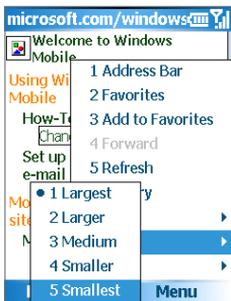

Selects the zoom size according to your needs.



Switched to the minimal zoom display.

## 8. 1. 7 Setting Up Internet Explorer Options

Set up Internet Explorer® options.



▲ The settings screen.

8

### Action: Setting Internet Explorer Options

1 Select Menu >  
Options

2



Opens Internet Explorer options.





## Action: Internet Explorer General Settings

- 1 Select  General  
Then press the  OK button
- 2 Select  <Options you want to set>  
Select  Done

8



Opens the General settings window




## Options settings


<b>Play sounds</b>	Choose if the sound should be played from the web page.
<b>Warn when changing to an unsecure page</b>	Choose if a warning prompt should be displayed when connecting an insecure web page.
<b>Allow Cookies</b>	Choose if Cookies should be allowed.
<b>Encoding</b>	Sets the web page default character encoding.
<b>Warn when page content is blocked by security settings</b>	When you browse a web page that is blocked due to security settings.

## Action: Internet Explorer Connection Settings

- 1 Select **Connections**  
Then press the **OK**  
button
- 2 Select **<Contents**  
you want to set>  
Select **Done**

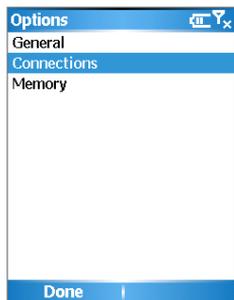

Opens the Connections settings window

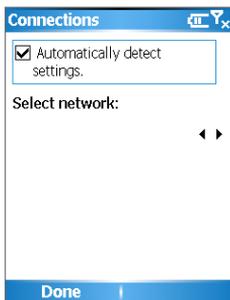


### Options settings

<b>Automatically detect settings</b>	Choose if you wish to automatically detect the network settings.
<b>Select network</b>	Select the network connection you wish to use.

- When using the automatic detection, it will decide the connection method according to your browsed web page. Otherwise, it will follow the contents in **Start > Settings > Connections** and use the corresponding connection methods.

**Action: Clear Temporary Files**


- 1 Select  **Memory**  
Then press the  **OK** button
- 2 Select  **Temporary Files**  
Select  **Clear**
- 3 Select  **Yes**

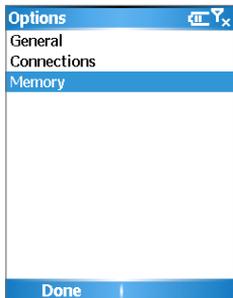

Opens the Memory settings screen



Select Clear Temporary Files.

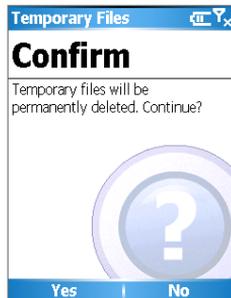

Confirm clearing of the temporary files.

- 4 Select  **Done**



Temporary Files have been cleared from the memory.

- ✓ When you browse the Internet, the web pages and pictures will be saved in your phone's storage space. This will allow quick access in the future and reduces transfer fees. These are temporary files. Deleting these files can effectively increase the storage space on the phone.

## Action: Clear Cookies

- 1 Select  Cookies  
Then press the  Clear
- 2 Select  Yes



Selects to clear Cookies.



Confirms to delete Cookies.

 Cookies are files on personal information and actions taken that have been recorded by the website.

 Deleted cookies cannot be restored.


8

## Action: Clear History

- 1 Select  History  
Then press  Clear
- 2 Select  Yes
- 3 Select  Done



Select to clear history.

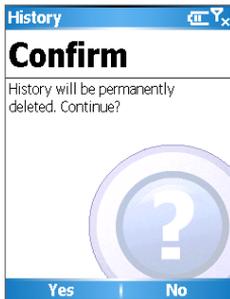

Confirms deletion of the web page browsing history. Deleted history cannot be restored.



History has been cleared.



## 8. 1. 8 Using D-Service

You can use Internet Explorer® Favorite links to select Dopod Service.

Open the D-Service website. The D-Service web page will periodically perform updates to provide the latest service information for the phone.



▲ D-Service website.

### Action: Using D-Service

1 Select  Dopod Service  
Press the  OK button

2



Opens the D-Service website.



D-Service website.

## 8. 2 Pocket MSN

Pocket MSN® provides MSN related services. You can send and receive instant messages and browse/draft Hotmail® e-mail through Pocket MSN®. To create the Internet connection, please refer to Chapter 7 Connecting to Wireless Communications.



▲ Pocket MSN.

8

### Action: Using Pocket MSN


- 1 Select  Start
- 2 Select  Pocket MSN  
Then press the  OK button
- 3



Opens the Start Menu.



Opens Pocket MSN.

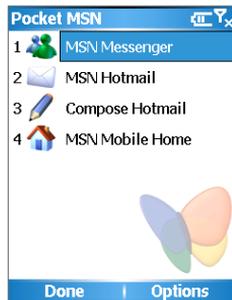

The Pocket MSN home screen.



## 8. 2. 1 MSN Messenger

You can use MSN Messenger® to view friends' status and communicate instantly. If you log into MSN Messenger® on the phone, other people will see you as logged into using mobile device. MSN Messenger® on the phone is only capable of sending text messages and cannot perform voice communications or file exchange.

8

You must have the Microsoft Passport® or a Hotmail® account. If you already have a hotmail.com or msn.com e-mail account, you already have a Passport®. To obtain a Microsoft Passport®, please go to <http://www.passport.com>. To obtain a Hotmail account, please go to <http://www.hotmail.com>.

- Logging out of MSN Messenger® will effectively reduce the power consumption and transfer fees.

### Action: Logging onto MSN Messenger

- 1 Select  2 3 Enter <e-mail address/ password> Then select



Sign in MSN Messenger.



If you have never used MSN Messenger before, the account login password window will appear.



Enter your e-mail address and password.



4




Your nickname and status will be displayed on top. Friends will be categorized and displayed as online and offline on the bottom.

8

### Action: Logging Out of MSN Messenger

1 Select  Menu >  
Sign out

2

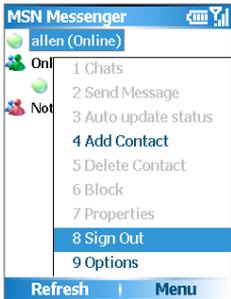


After logging out of MSN Messenger, your friends will not be able to send messages to you.

**Action: Sending Messages**


- 1 Select <Contacts>  
Select Menu >  
Send Messages
- 2
- 3 Enter <Text>  
Select Send



You can also press the OK button directly to send messages to the contacts.

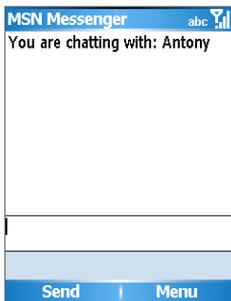


The Chat message window.

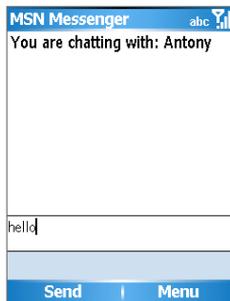

Enter the conversation text. For text entering, please refer to Chapter 2.


- 4
- 5
- 6 Select Menu >  
End Chat

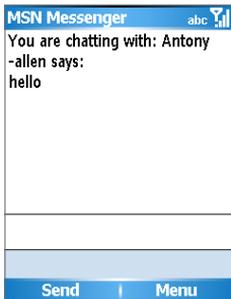

The entered message text has been sent successfully.



The returned message from recipient will also be shown on the screen.

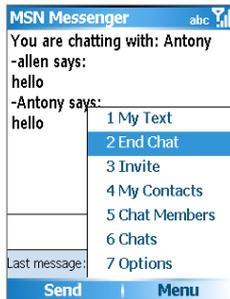

To end the conversation, please select End Chat in the **Menu**.

## Action: Chat Room Invitation

- 1 Select  Menu > Invite



In Chat, invite other contacts to join the conversation.

- 2 Select  <Contacts> Then press the  OK button



Select the contacts you wish to invite. For example, Kit.

- 3




Performing chat room conversation.

8

## Action: Return to My Contacts

- 1 Select  Menu > My Contacts

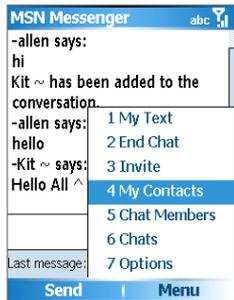

Switches back to Contacts list.


- 2



Return to My Contacts list without closing the chat window.

**Action: Adding New Contacts**

- 1 Select  **Menu** > **Add Contact**
- 2 Enter <Sign-in name>  
Select  **Next**
- 3 Select  **Done**

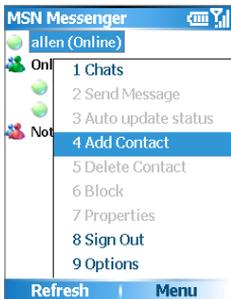


Select to add a new contact.




For example,  
allen@hotmail.com.

**Action: Deleting Contacts**

- 1 Select  **Menu** > **Delete Contact**
- 2 Select  **Yes**
- 3

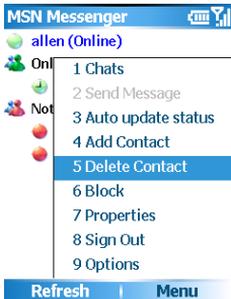

Deletes the contact.  
Warning: after deletion, you will not be able to obtain the contact's status.

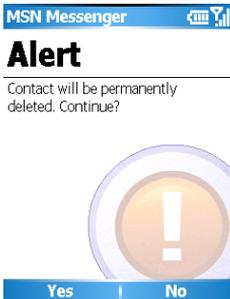

Confirm deletion of the contact.



Contact has been deleted.

## Action: Changing Online Status

- 1 Select **<Your account>**  
Then press the **OK** button
- 2 Select **<Status>**  
Then press the **OK** button
- 3



Press the OK button on the account to switch the status.



You can change your status according to your needs.




You have successfully changed your status. For example, phone in use.

8

## Action: Changing the Display Name

- 1 Select **Menu > Options**
- 2 Select **<My display name>**  
Then select **Done**
- 3

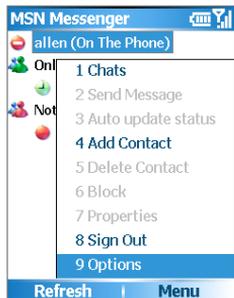

Opens the MSN Messenger Options settings.



Sets the displayed name seen by your contacts. For example, rogersmith@home.



You have successfully changed the display name.

## 8. 2. 2 MSN Hotmail


Use MSN Hotmail® on the phone to send and receive Hotmail e-mail messages. You can view and download the latest version of Hotmail, send and receive e-mail, or move and delete e-mail messages. To view messages, please refer to Chapter 5.




▲ MSN Hotmail.

### Action: Composing Hotmail

- 1 Select  **Compose Hotmail**  
Then press the  **OK** button
- 2

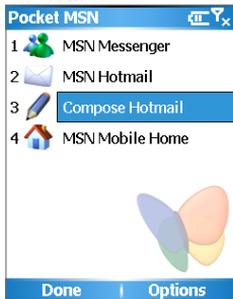

Opens MSN Hotmail.

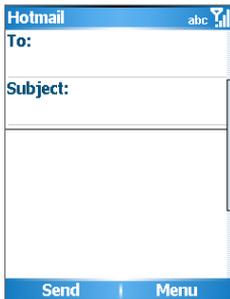

To use e-mail, please refer to Chapter 5 View Messages.

## 8. 2. 3 Pocket MSN Options

Set Pocket MSN® options.



▲ Switch User.

8

### Action: Setting Up Pocket MSN General Options

- 1 Select  Options > General
- 2



Opens the General settings window.



The General Options settings screen.

**Clear saved password**

If you saved the password during the log-in, press this button to clear the password.

**Display Pocket MSN at the Home screen**


At the Home screen, show the Pocket MSN® related buttons. If you have a new Hotmail or Messenger message, it will be displayed on the Home screen. The number indicates the number of new messages.




Please refer to the figure above: Pocket MSN®, MSN Mobile® Home screen, MSN Messenger®, and MSN Hotmail® respectively.

**Action: SMS Service**

- 1 Select  **Options** > **SMS**
- 2 Press the  **OK** button  
Select  **Done**

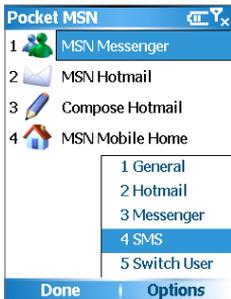

Opens the SMS settings.

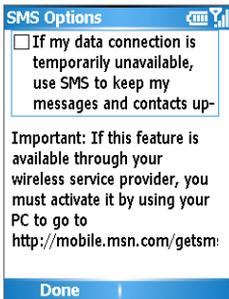

(Note 1)


(Note 1) When you cannot connect with the network, your contacts can contact you via SMS. Please go to <http://mobile.vmsn.com/getsms> to activate this function.

## Action: Switching the User

- 1 Select  Options > Switch User
- 2 Press the  OK button



Switches the user.

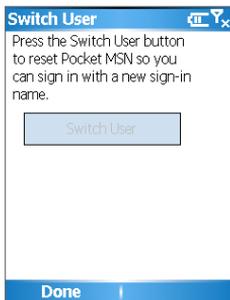

Switches the user so you can use other login names to sign in.



8

## Experiencing Internet Entertainment





# 9

# Topic

## Synchronizing Your Phone

### In this topic, you will learn about...

1. About ActiveSync
2. Installing ActiveSync
3. Installing Microsoft Office Outlook
4. Initial Connection
5. Using ActiveSync
6. Sync with Multiple Computers
7. Synchronize Through Bluetooth Connection
8. Sync with Exchange Server
9. Sync to Transfer and Manage Files
10. Advanced PC Sync Settings
11. Sync Music, Video, and Pictures
12. Installing Software
13. ActiveSync Connection Troubleshooting



# Index Action

Installing ActiveSync to the Computer .....	259
Installing Microsoft Office Outlook .....	261
Connecting with the Phone for the First Time .....	264
Activating ActiveSync on the Phone .....	267
Setting the Phone to Sync with Multiple Computers....	268
Setting Bluetooth Sync Connection .....	269
Using Bluetooth to Connect to the Computer.....	271
Setting Exchange Server Synchronization.....	272
Configuring the Phone's Scheduled Synchronization ..	274
Using the Windows File Manager to Browse Internal Folders on the Phone.....	275
Using the Windows File Manager to Sync and Transfer Files.....	276
Opening the Computer's Connection Settings Window.....	278
Configuring the Sync Connection Serial Port on the Computer.....	279
Desktop Computer Settings.....	280
Setting Sync Data Type on the Computer .....	282
Setting Calendar Sync Options on the Computer.....	283



Setting Multimedia Sync Data Type on the Computer .284

Sync Multimedia Files to the Phone .....285

Sync Multimedia Files Play List to the Phone .....286

Installing Software through ActiveSync.....288

Setting ActiveSync as Firewall Exception .....290

Turn Off Windows Firewall .....292





## 9. 1 About ActiveSync

Use Microsoft ActiveSync® to synchronize and exchange phone/computer information. You must install ActiveSync® on the computer in order to sync information and exchange data with the computer. Through the close integration with Microsoft Office Outlook®, you can easily send personal information in Microsoft Office Outlook® to the phone or computer. If the Microsoft Exchange Server® in your company supports Exchange ActiveSync®, your phone can sync information with the remote Microsoft Exchange Server® via GPRS connection. When synchronizing, ActiveSync® will compare the information between the computer and Exchange Server®, then add the new data to the old folder to update information on the phone and the computer.

Using Microsoft ActiveSync®, you can:

- Sync the phone and computer data. For example, personal information such as Microsoft Office Outlook® contacts, task, calendar, and e-mail, etc. You can also sync pictures, movies, and music multimedia data.
- Sync the phone and Exchange Server®. Sync with the remote server via Exchange Server® to update personal information such as Outlook contacts, task, calendar appointments, and e-mail, etc.
- Directly exchange data between phone and computer without synchronization.
- Setting sync options. Select the sync data types and specific amount of data to sync. For example, sync calendar information specified by a certain number of weeks from the past only.
- Create backups of your contacts, calendar, and task information on the computer. If data on the device is lost, you can restore the data using an ActiveSync connection between Outlook on the PC and the mobile device; the same connection can be used to install software to your Windows Mobile™ device.

You can obtain the ActiveSync® installation program from the included user CD. In addition, you can also download the latest version of ActiveSync® installation program from Dopod or the Microsoft® website Download Center (<http://www.microsoft.com/windowsmobile>).





## 9. 2 Installing ActiveSync

To use ActiveSync® sync, you must install Microsoft ActiveSync 4.1® version or above on the personal computer. The phone should also have ActiveSync® installed on it as well. You can follow the instructions from the User CD instruction to install. If your ActiveSync® installation program is downloaded from the Internet, please execute the installation program from the folder it was downloaded to.

9

Synchronizing Your Phone

### Action: Installing ActiveSync to the Computer

1 Select Next

2 Select Next



Insert the User CD into the CD-ROM drive to automatically execute this program.


Installs Microsoft ActiveSync®.

259






- 3 Enter **<User Name>** and **<Organization>**  
Then select **Next**

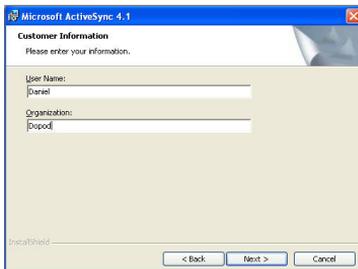


Enter your name and group information. For example: for the user name, enter Daniel; for the organization, enter Dopod.

- 4 Select **Change...** (if you wish to customize the installation destination folder)  
Then select **Next**

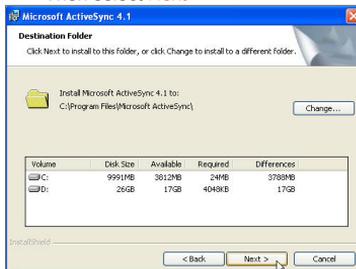


Select the installation destination folder. Select "Next" if no change is necessary.

- 5 Select **Install**

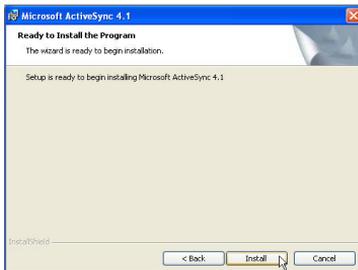

Beginning the installation process.

- 6 Select **Finish**

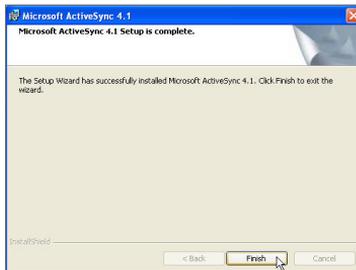

ActiveSync® has been installed successfully.





## 9. 3 Installing Microsoft Office Outlook

ActiveSync® can be used to sync and manage personal information for the Microsoft Office Outlook® application program on the phone and computer; however, it cannot exchange information with Microsoft Outlook Express®. You can obtain the Microsoft Office Outlook 2002® installation program and Product Key from the included User CD. If you are installing using the User CD instructions, please install Microsoft Office Outlook® after Microsoft ActiveSync® is installed. If your computer is already installed with Microsoft Office Outlook 2002® versions or above, you do not need to install it again.

### Action: Installing Microsoft Office Outlook


- 1 Select **Repair or Install Necessary Programs**
- 2 Select **Microsoft Outlook** Then select **Next**



Insert the User CD into the CD-ROM drive to automatically execute this program.

Installs Microsoft Office Outlook®.

- 3 Enter **<Product Key>**  
Then select **Next**

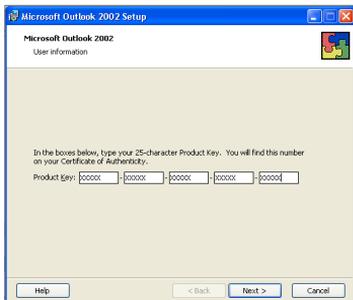


- 4 Select **Install Now**  
Then select **Next**




Select the installation type. You can also modify the installation directory and type.

- 5 Select **Install**

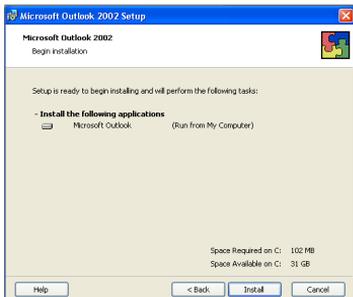

Confirm to install Microsoft Office Outlook®.

- 6

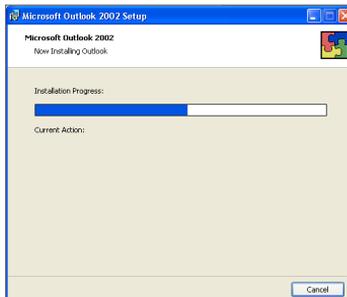

Installing Microsoft Office Outlook®.

7 Select **OK**



You have successfully installed Microsoft Office Outlook®.

9

Synchronizing Your Phone



## 9. 4 Initial Connection

When you use the phone and computer to connect via USB cable, Bluetooth, or IR for the first time, the ActiveSync® application program on the personal computer will automatically detect if your device is already connected to the computer. It will then execute the sync configuration wizard to create the ActiveSync® connection between the phone and computer. Before establishing the connection, you must make sure the phone has been turned on and connected with the computer through the transfer cable. To obtain connection through Bluetooth, please refer to section 9. 7.

9

Synchronizing Your Phone

### Action: Connecting with the Phone for the First Time

- 1 Select **Next**
- 2 Check-mark **<Data type>**



After phone is connected with the computer, ActiveSync will automatically run the sync wizard. If synchronization is not required, please press Cancel.

Select the data type you wish to sync. For example, contacts, calendar, e-mail types, etc.

264

- 3 Select **<Data type>**  
Then select **Setting...**



You can set the sync options for the data types (for example, Calendar).

- 4 Select **Next**




Completing the sync options settings.

- 5 Select **Finish**




- 6

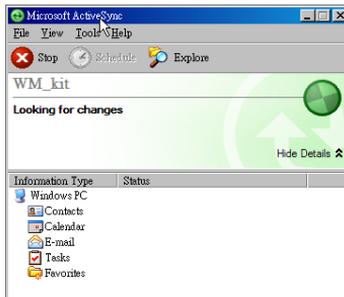

Searching for modified items on the phone/computer.


9

- 7 Select <Combine the items on my device with the items on this computer>Then Select OK

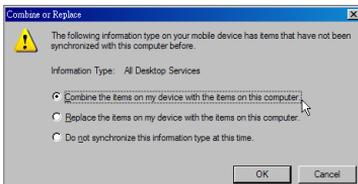


Decide whether to keep the information on the phone.(Note1)

8

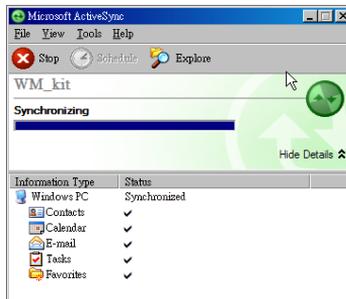

Begin executing sync operation. For example, computer (such as Windows PC) status displays as “Synchronizing”.

9

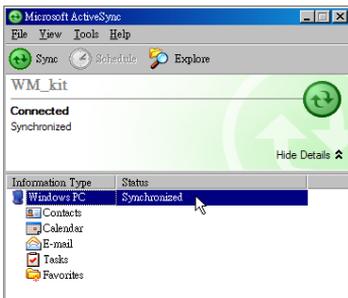

Sync is now completed. Computer (such as Windows PC) status displays as “sync completed”.

(Note 1) If your phone contains past items that has not been sync-ed with the computer, ActiveSync® will ask if you wish to combine or replace the data on the device with that on the computer. If you wish to keep the sync information on the phone, please select “combine items on device with items on computer”. Selecting “replace items on device with items on computer” will lose the original sync information on the phone.

## 9. 5 Using ActiveSync

After connecting the phone with the computer, the computer through USB cable or Bluetooth and phone will automatically activate ActiveSync® sync. You can also manually control ActiveSync® sync operation on the phone or personal computer. After the connection is removed from the phone or computer, ActiveSync® will automatically stop the sync operation. You can inspect the sync connection status on a Windows® operating system from the ActiveSync® icon on the taskbar located on the lower right, ActiveSync® program on the phone, or on the computer.


9

### Action: Activating ActiveSync on the Phone

- 1 Select  **Start**
- 2 Select  **ActiveSync**  
Then press the  **OK** button
- 3



Opens ActiveSync program.

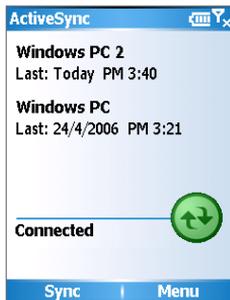

The ActiveSync screen.



## 9. 6 Sync with Multiple Computers

If your phone has already established an ActiveSync® sync connection with any single computer, when the phone establishes initial connection (please refer to section 9.4) with other ActiveSync® installed computers, the ActiveSync® sync configuration wizard will ask you to enter the other computer's name in order to differentiate it from the original computer. When the phone performs sync with multiple computers, you will know clearly which computer is in synchronization with the phone.

9

### Action: Setting the Phone to Sync with Multiple Computers

- 1 Select **Next**
- 2 Enter **<Computer name>**  
Then select **Next**



Plug in the USB cable to the other computer and the phone's USB socket. ActiveSync will automatically run the sync configuration wizard.

If your phone is already being synchronized with a computer, please enter the other computer's name. For example, enter Windows PC 2.

## 9. 7 Synchronize Through Bluetooth Connection

You can create the connection between the phone and computer using Bluetooth and use ActiveSync® to sync information. To use Bluetooth for synchronization, please first activate the Bluetooth function on the computer. ActiveSync® will automatically activate the Bluetooth function on the phone. During the initial use of this function, you must first set the Bluetooth connection with the computer. For Bluetooth usage, please refer to section 7. 2.


9

### Action: Setting Bluetooth Sync Connection

- 1 Select  Menu >  
Connect via Bluetooth
- 2 Select  Yes
- 3 Select  Menu >  
New



After selecting Yes, the Bluetooth function of the phone will be automatically activated.

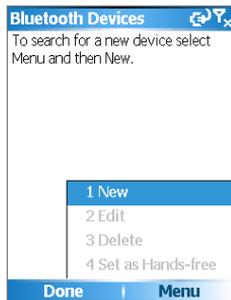

4



Scanning nearby Bluetooth device.

5


Select  <Device to connect>  
Select  Next



Please select the connecting device. For example, Lucy.

6

Enter <Passkey>  
Select  Next

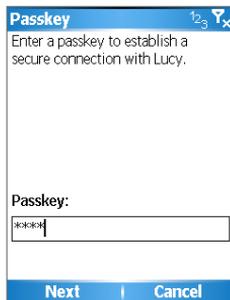

Enter custom Bluetooth headset passkey. For example, 0000.

7

Enter <Bluetooth PIN Code>  
Then select OK



Please enter the Bluetooth PIN Code for the phone on the computer. For example, 0000. This screen may differ depending on the different Bluetooth drivers.

8

Select  OK





- 9 Enter <Display name for the devices>  
Select Next



Please enter your custom connection device name. For example, Allen.

- 10 Check-mark   
ActiveSync  
Then Select Done



Make sure the ActiveSync option is checked.

- 11 Select Done




You have completed Bluetooth connection settings.

9


Synchronizing Your Phone

## Action: Using Bluetooth to Connect to the Computer

- 1 Select Menu >  
Connect via Bluetooth

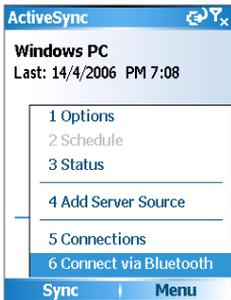


2

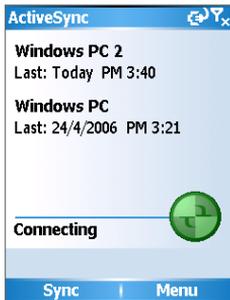

Using the Bluetooth connection.

3

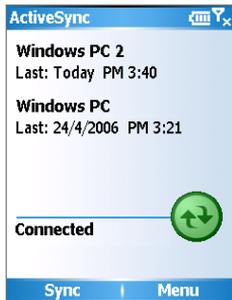

Successfully Connected.

271

## 9. 8 Sync with Exchange Server


If your company provides Microsoft Exchange Server® sync information functions, you can use the phone to sync information with the remote server. To use this function, you must obtain the server information such as user name, password, and network name from the server administrator. You can choose to use ActiveSync® to sync with the computer and remote server through the Internet. You can also connect to the Internet using GPRS to sync with the remote server through Microsoft Direct Push (Note 1) instantaneously. To use Direct Push®, you must first configure the GPRS connection, please refer to section 7. 4.

(Note 1) Direct Push keeps your device in constant connection with an Exchange Server. When new mail reaches the Exchange Server, the server will notify your mobile device to perform a sync. This reduces power consumption and transmission fees when compared to using periodic scheduling. Specifying the "As item arrives" option for sync scheduling enables Direct Push.


Before using Direct Push, you must first configure the phone to sync with remote Microsoft Exchange Server 2003 Service Pack 2 ® versions and above and complete the initial sync operation with the Exchange Server®.

### Action: Setting Exchange Server Synchronization

- 1 Select  Menu > Add Server Source
- 2 Select and check-mark  This server requires an encrypted (SSL) connection.
- 3 Select  OK

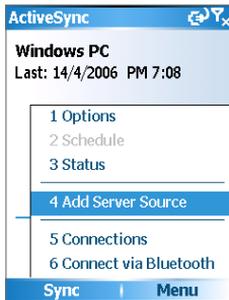

Please check with your system administrator if an SSL encrypted connection should be used.

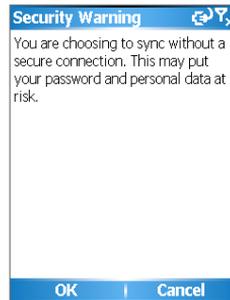

If you cancel the SSL encrypted connection, please go over the security warning.



- 4 Enter <Server address>  
Select Next

Enter Outlook Web Access address.

- 5 Enter <User Name/ Password/Domain>

Please check with your system administrator for the user name, password, and network to enter these information.

- 6 Select and check-mark  Password  
Select Next

If you wish to perform auto-sync in the future, please check-mark "save password".

9

Synchronizing Your Phone

- 7 Check-mark  <Data you want to synchronize> Then Select Finish


Select the data type you wish to sync with the computer. For example, contacts (Note 1)

(Note 1) You can also select "Settings" on the screen to set the sync data type options. To set the sync data type options, please refer to section 9. 10. 3.


If your phone uses remote Exchange Server sync functions, you can set the phone and remote server to automatically perform scheduled sync operations.

**Action: Configuring the Phone's Scheduled Synchronization**


- 1 Select  Menu > Schedule
- 2 Select  <Peak times> and <Off-peak times>
- 3 Select  Menu > Peak times

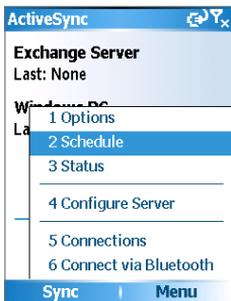

Opens the Schedule settings screen.

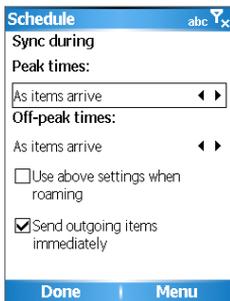


If you select "when new items arrive", it will perform sync when the server receives new items.

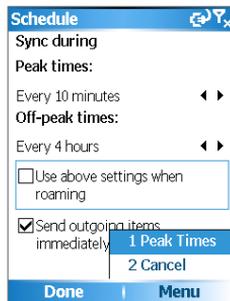


Sets the peak time period.

- 4 Select  <Peak times> and <Off-peak times>
- 5 Select  Done

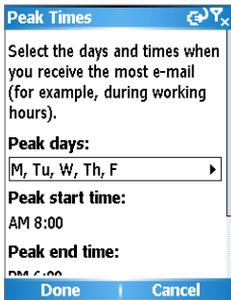

Select your custom peak dates. For example, Monday to Friday AM 8:00 to PM 6:00

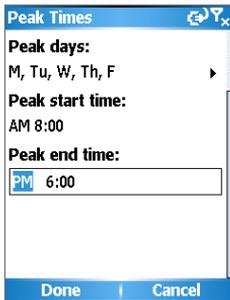



## 9. 9 Sync to Transfer and Manage Files

 
When using ActiveSync® sync connection, you can use the Windows® file manager to easily transfer files to the phone, as well as move, copy, rename, or delete all files in the phone. To use this function, you must first establish the ActiveSync® connection between the phone and computer, then activate the ActiveSync® application program on the computer.

You can place your document files in the “Mobile device” location, which corresponds to the **My Documents folder** on the device; or place them in the **Storage Card folder**, which corresponds to the memory card.


If you are saving ring tone files, please place MP3, WMA, MIDI, AMR, or WAV format files in the “**My Windows Mobile DeviceApplication Data Sounds**” folder.

You cannot directly access the documents, pictures, or files on the mobile device from the computer. If you wish to view documents or pictures on the mobile device, please first copy the files to the PC, where they can be viewed or edited.


### Action: Using the Windows File Manager to Browse Internal Folders on the Phone



2

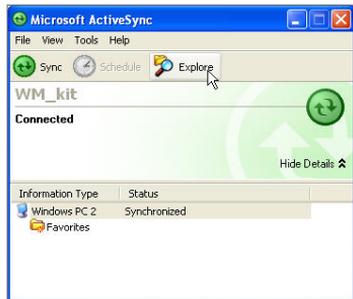


Opens My Document folder after the selection.

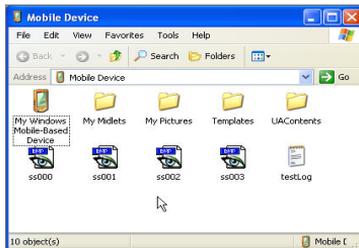

My Document folder on the phone.




- 3 Select and open  
My Windows Mobile-Based Device

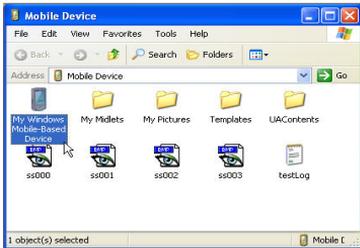

Open and browse the top folder on the phone.



- 4

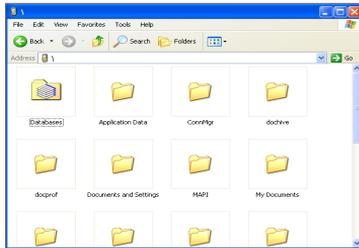

Top folder of the phone. Select "Storage Card" to open the memory card folder.

## Action: Using the Windows File Manager to Sync and Transfer Files

- 1 Select <Files on computer>  
Then right-click on the mouse
- 2 Select Copy

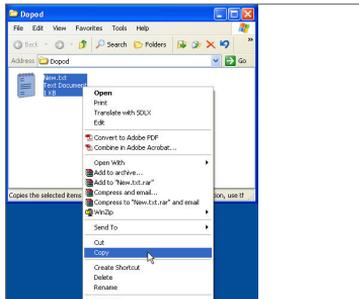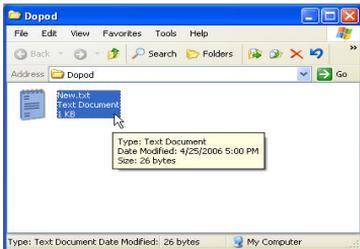


Select the files to be sent to the phone from the computer folders (for example, New.txt), then open the File Operation option.



3 Right-click on the mouse  
Then Select Paste

4 Select OK

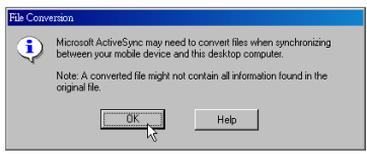

9

Paste the files to the "Mobile Device"  
(phone) directory.

5



The files on computer are now sent to the  
My Document folder on the phone.



## 9. 10 Advanced PC Sync Settings

You can set the connection, sync conflict processing policy, sync data, and options scheduling with the phone using ActiveSync® program on the personal computer. When configuring ActiveSync®, please do not connect the phone with the computer.

9

### 9. 10. 1 Connecting


Setting the ActiveSync® sync connection method and serial port. You can also manually obtain the connection and phone connection. If you have set the phone's USB connection as serial mode or customized the Bluetooth serial port number from the computer Bluetooth driver program, you may need to manually select the sync connection serial port.

#### Action: Opening the Computer's Connection Settings Window

- 1 Select **Files > Connection Settings...**
- 2



Opens the Connection Settings window.

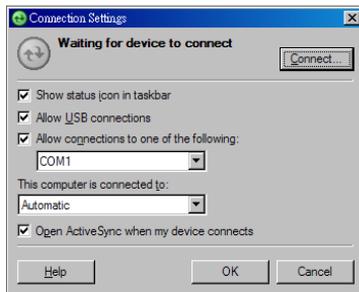

The Connection Settings window.




## Action: Configuring the Sync Connection Serial Port on the Computer

- 1 Check-mark  
Allow connections to one of the following:
- 2 Select <Serial port location>



Uses the serial port connection.

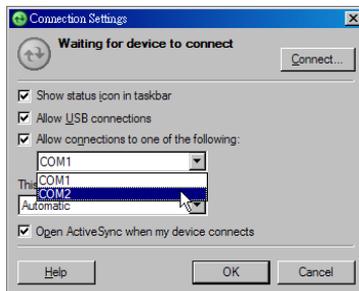

Select the serial port to connect with the phone. For example, COM2.

9

### Options settings descriptions:

- Check for the status icon displayed on the taskbar: you can view the connection status from the Windows lower right screen taskbar  
For example: Connected , connecting/sync , and disconnected .
- Check-mark to allow USB connection: to use USB cable to establish connection, please check this option.
- Choose to have this computer connect to: Auto / company network / Internet.
- Check activate ActiveSync® when my device is connected; when you connect the phone with the computer, ActiveSync® will automatically activate and establish the connection.




## 9. 10. 2 Sync Conflict Processing Rules

When sync conflict happens, you can select from two processing methods:


- Replace items on the device: the phone's sync information contents will be the same as on the computer.
- Replace items on the desktop computer: the computer sync information contents will be the same as on the phone.

### Action: Desktop Computer Settings

- 1 Select <Computer name>  
Then right-click on the mouse
- 2 Select Settings...

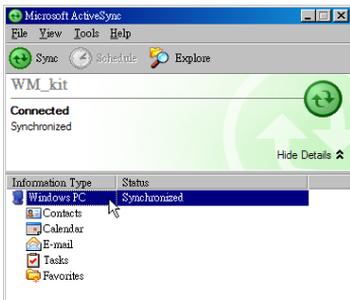


The name of the computer you wish to configure while the phone is connected. For example, Windows PC.

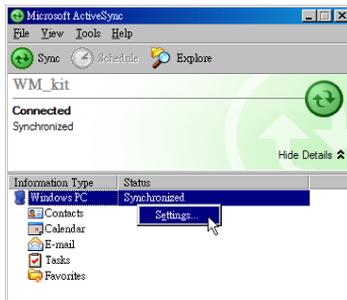

Opens "Desktop Computer Settings" window.

- 3 Select <If there is a conflict> menu  
Then Select OK

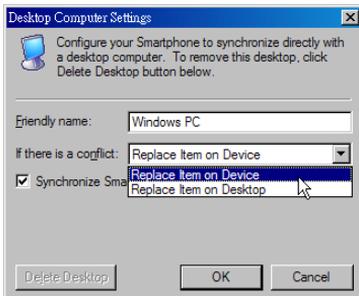

Select the sync conflict processing option.  
For example, Replace Item on Device.



## 9. 10. 3 Sync Information and Options


When you first establish the connection, the sync configuration wizard will ask you for the sync data options. For example, contacts, calendars, etc. You can establish the connection on the phone, then modify the sync option types. You can also set the calendar sync time schedule and sync to the phone's My Favorite links.

9



### Action: Setting Sync Data Type on the Computer

- 1 Select **Tools > Options ...**
- 2 Check-mark **<Data you want to synchronize>**

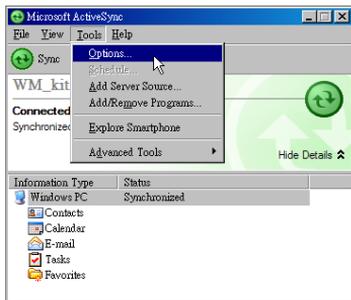

Opens the options Settings window.




Select the data type you want to synchronize. For example, Contacts.




## Action: Setting Calendar Sync Options on the Computer

- 1 Select **Calendar**  
Then Select **Settings...**
- 2 Select **<Synchronize only the past...>**  
option  
Then Select **OK**

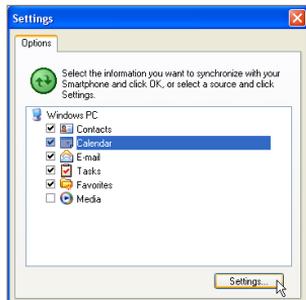

Opens the option "Calendar Synchronization Settings" window.

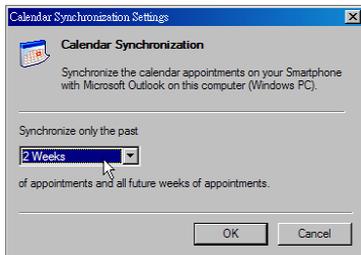

The phone will only sync the specified past time period and information type. For example, appointments, from the past 2 weeks only.

9

Synchronizing Your Phone

## 9. 11 Synchronize Music, Video, and Pictures

If you wish to mobilize personal music or other multimedia files, you can sync the music, video, and picture files on the computer and phone through Active Sync<sup>®</sup> and Windows Media Player<sup>®</sup>. You must first set the sync data type on the computer's ActiveSync<sup>®</sup> program and configure the sync connection for the computer's Microsoft Windows Media Player<sup>®</sup>. To set the sync data type, please refer to section 9. 10. 3; to use Windows Media<sup>®</sup>, please refer to section 6. 3.

**!** Prior to performing multimedia data sync, you must execute the following actions:

- Install Windows Media Player 10<sup>®</sup> version (or above) on the computer.
- Use a USB cable to establish connection between the phone and computer for ActiveSync<sup>®</sup> sync connection. Please stop the phone's Bluetooth or IR connection operation.
- Insert 32 MB (or above) memory card into your phone.
- Set the memory card and Windows Media<sup>®</sup> player sync connections, then perform the sync.

### Action: Setting Multimedia Sync Data Type on the Computer

1 Check-mark **Media**

2 Select **OK**



The sync option Settings window. To set the sync data types, please refer to section 9. 10. 3.



Please read the instructions in the window carefully.







5 Select <sync to memory card folder>

6 Select <Begin Synchronization>

9

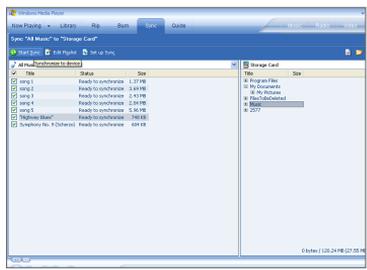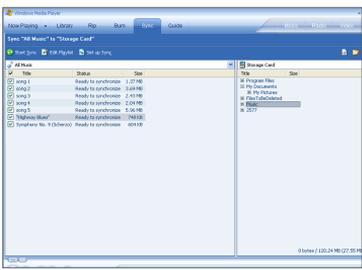


Selects the file sync to the memory card folder. For example, music.

Begins the synchronization process.

Action: Sync Multimedia Files Play List to the Phone

1 Select Synchronization Settings


2 Select and check-mark <play list to sync> Then Select OK

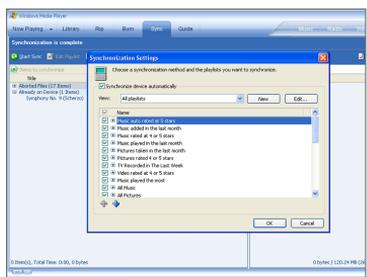

The Windows Media Player sync process tab screen.

Select the play list to sync to the phone. For example, Music. When running the sync, the play list and media files in the list will be sent to the phone.



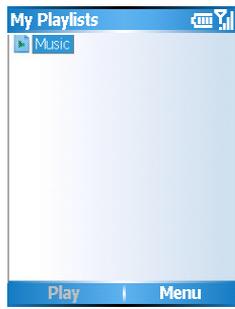

- ▲ After sync is complete, you can playback the play list "My Playlists" in the Windows Media library on the phone.



## 9. 12 Installing Software

To install software to the phone, you must first obtain Windows Mobile® (Smartphone version). Installer is provided by the software company. Please refer to the software installation manual and execute the installer on Windows®. The software will be copied to the phone automatically during the next ActiveSync® sync operation between the phone and computer. You will then need to select the software installation location and complete the software installation process.

9

Synchronizing Your Phone



▲ Installing software on the phone

### Action: Installing Software through ActiveSync


- 1 Select OK
- 2 Select <Location>  
Then Select Install
- 3



Confirm if you want to install this program.



Select the software installation location. For example, device (phone) or Storage card (memory card).

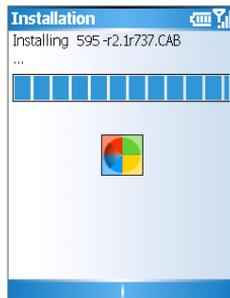

Installs the software to the phone.



4 Select  Done



Software installation process is now complete.

9

Synchronizing Your Phone



## 9. 13 ActiveSync Connection Troubleshooting

The ActiveSync® program on the computer may be affected by the Microsoft Windows XP Service Pack 2® built-in firewall or some anti-virus software, causing you to have problems with establishing the sync connection between the phone and computer. You can try to turn off the Windows® built-in firewall or anti-virus software to resolve the connection issues.

**Windows firewall** - The Windows XP Service Pack 2® built-in firewall function may cause the phone and computer to have problems with establishing the ActiveSync® connection. If your phone cannot connect to the computer properly, and the Windows XP® firewall is activated, we recommend that you set ActiveSync® as an exception in the Windows XP® built-in firewall. You may also turn off the firewall function, then re-establish the ActiveSync® connection.

**Anti-virus software** - Some of the anti-virus software may cause the phone and computer to have problems with establishing the ActiveSync® connection. If your phone cannot establish a connection with the computer properly, and the Windows built-in firewall has not been activated, we recommend that you refer to the anti-virus software user's manual to turn off the anti-virus scanning memory process or remove the anti-virus software, then re-establish the ActiveSync® connection.

### Action: Setting ActiveSync as Firewall Exception


- 1 Select **Start > Control Panel**
- 2 Select **Network Connections**



3 Select **Change Windows Firewall settings**



4 Cancel the **Don't allow exceptions**

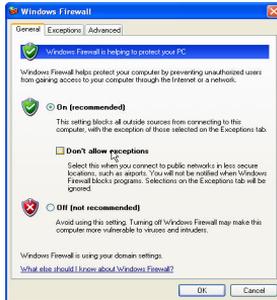

Windows firewall main screen. Please cancel this option when the firewall is activated.


9

Synchronizing Your Phone

5 Select **Exceptions tab**



6 Check-mark **<ActiveSync Application>**  
Then select **OK**

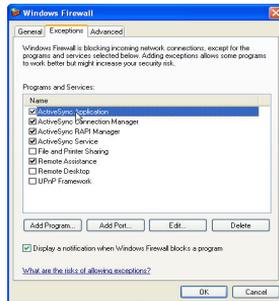

Allows ActiveSync® as an exception.

## Action: Turn Off Windows Firewall

- 1 Select **Off (not recommended)**  
Then Select



Windows firewall main screen.  
Turns off Windows XP built-in  
firewall function.



# Topic

# 10

## Setting the Phone Information

**In this topic, you will learn about...**

1. Home screen
2. The Phone Settings
3. Configure Video Calls
4. Sounds
5. Removing Programs
6. Profiles
7. Time and Location
8. Display Time When Keypad is Locked
9. Personal Information
10. Protecting Your Phone
11. Power Management
12. Accessibility
13. Search for Operating System Version Number





# Index Action

Setting the Layout .....	296
Setting the Color Scheme .....	298
Setting the Background Picture .....	298
Entering Phone Settings .....	299
Setting the Sounds .....	302
Playing and Deleting Sounds .....	303
Setting Voice Notes as Ring Tones .....	304
Setting Custom Ring Tones .....	305
Specified Event Sounds .....	306
Removing Programs .....	307
Choosing Profiles .....	309
Selecting Profiles from Quick List .....	310
Editing profiles .....	311
Resetting to Default .....	312
Setting Up Time and Date .....	313
Setting Up the Alarm .....	314
Setting Up Personal Information .....	316
Security Settings .....	318
Enable the PIN Code .....	319
Disable the PIN Code .....	320



Modifying the PIN Code.....	320
Setting the Phone Locking Code .....	321
Disable Phone Locking .....	321
Manually Perform Phone Locking.....	322
Disable Phone Locking .....	322
Setting Power Management .....	323
Accessibility Options.....	325
Search for Operating System Version Number .....	327





## 10.1 Home Screen

The Home screen is the first place to start most of the phone operations. You can access all functions and programs from the Home screen.

Your most frequently used program icons will be displayed along the top of the Home screen. The Home screen will display your next appointment, new message count (voice mail, text message, e-mail, or MMS messages), and other important information. When you select any single icon or item from the Home screen, it will open the appropriate application.

10

The factory-preset skin for your phone is Dopod 3D default. The default color scheme is black. You can also switch to other color schemes through the 3D Menu options.

You can set the layout, color scheme, and background picture for the Home screen. If you wish to install the color scheme by yourself, please install the scheme file to \Application Data\Home.

### Action: Setting the Layout

- 1 Select Start
- 2 Select  Settings  
Then press the  OK button
- 3 Select  Home screen  
Then press the  OK button




Opens the Settings screen



Opens the Home screen settings.



- 4 Select  **<Home screen layout>**

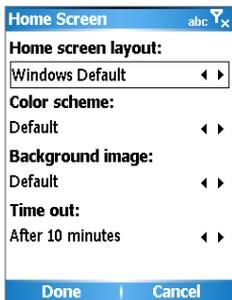


Layout consists of default, large font, and Dopod 3D layout, etc.

Home screen layout:



Windows Default.

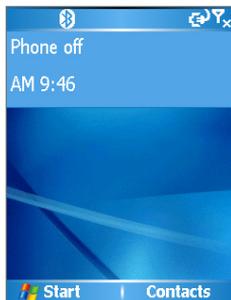

Large font.

10


Setting the Phone Information



Windows Simple.



Dopod 3D Default.

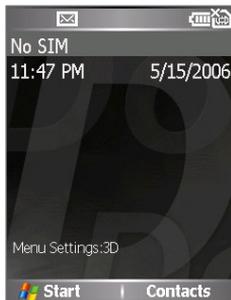


Dopod 3D simple.

For 3D menu, please refer to Chapter 11. 9


297

**Action: Setting the Color Scheme**

- 1 Select <Color scheme> Then Select Done
- 2

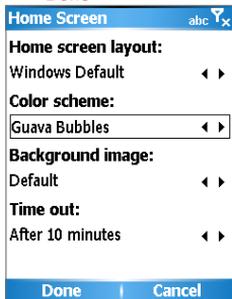

Select the Home screen color scheme. For example, Guava Bubbles.

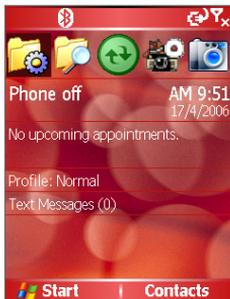


The Home screen color scheme is set to Guava Bubbles style.

**Action: Setting the Background Picture**

- 1 Select <Background image> Then Select Done
- 2



Selects the background image you want to use. For example, Waterfall.

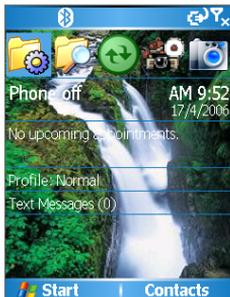

The background image has been changed successfully.



## 10.2 The Phone Settings


Performs settings for the phone functions. Select whether to display the caller ID, set call forwarding, call transfer, and call waiting functions, etc. At the Phone Settings, you can:

- Choose if you wish to display the caller ID of the party calling you.
- Choose if you wish to use call forwarding when you are busy, when you miss the call, or cannot pick up the phone, etc.
  - ❗ Using this service may require connection fees. Please check with your service provider for more information.
- Set up fixed dialing and fixed dialing mode. Using fixed dialing can limit your dialing recipients and avoid unintentionally high cost telephone bills.
- By restricting the incoming and outgoing calls, you can save your connection fees when roaming.
- Choose if you wish to be reminded of call waiting.
- Manually configure the mobile network connection to the service provider.

10

### Action: Entering Phone Settings


- 1 Select Start  
Select Settings
- 2 Select Phone  
Then press the OK button
- 3

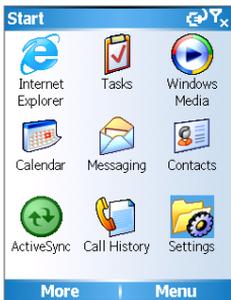

Opens the Settings screen.



Opens Phone Settings.

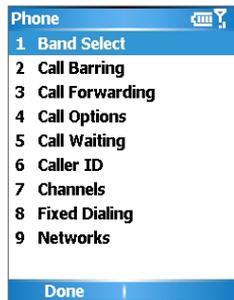

You can view the items available for you to set up.

## 10.3 Configure Video Calls

You can configure settings for video calls.


Option settings:

Display static image	When the video camera is off, a static image is displayed to the other side
Camera option	
Rotate secondary camera video	The image captured on the camera is reversed from left to right; select this option to adjust the secondary camera to correct the image
Turn off camera when answering video calls	Camera will not show video to incoming callers
Show information	
Display call timer	Display the call timer during video calls

10

### Action: Configure Video Calls


- 1 Select  **Start**
- 2 Select  **Settings**
- 3 Select  **Video Call**  
The press the  **OK** button

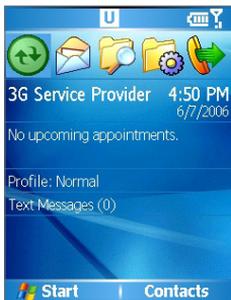

Open the start menu



Opens the Settings screen

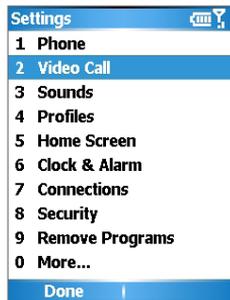

Select the Video Call Settings



- 4 Select **General**  
Then press the **OK** button



- 5



10

Setting the Phone Information




## 10. 4 Sounds

You can select ring tones, alarm rings, and other event sound effects for the phone. Sound settings can only change the ring tone and cannot change the ring tone playback mode. To change the ring tone mode, such as vibrate or vibrate with ring tone, please refer to section 10. 6 Profiles.

10

### Action: Setting the Sounds

- 1 Select  Start
- 2 Select  Settings
- 3 Select  Sounds  
Then press the  OK button

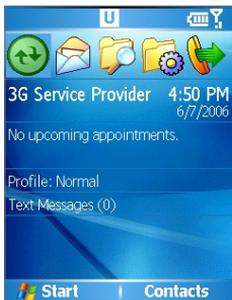

Opens the Start Menu.




Opens the Settings screen



Selects the Sound Setting.



- 4 Select <Events>
- Then Select <Tones>
- Then Select Done

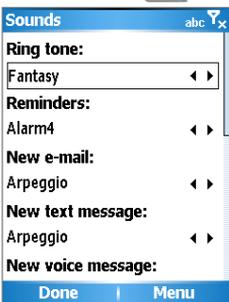

Move the Up/Down button to select the event, Left/Right to select the tone. Press Done when setting is complete.

**Action: Playing and Deleting Sounds**

- 1 Select Menu > Play
- 2 Select Menu > Delete Sounds



Plays the currently selected sound.



Deletes the currently selected sound.

## Action: Setting Voice Notes as Ring Tones

- 1 Select  Start    2 Select  Voice Notes    3 Select  <Events>



Opens the Start Menu.



Opens the Voice Notes.



Select the voice note you wish to use. For example, Recording1.

- 4 Select  Menu > Set as Ringtone



Sets the selected Voice Note as ring tone.

- 5 Select  OK



- 6



You will see that the ring tone has been set as the voice note once you return to the Sound Settings screen.

## 10. 4. 1 Setting Custom Ring Tones


You can use MP3, WAV, MIDI, or WMA audio file formats as the phone's ring tones. We recommend ring tone files to be smaller than 300KB. Please place the sound file at \Application Data\Sounds or directly on the memory card. To send files to your phone, you can refer to section 9. 9 ActiveSync® to Transfer and Manage Files and section 11. 2 File Manager.

10

Setting the Phone Information

### Action: Setting Custom Ring Tones

1

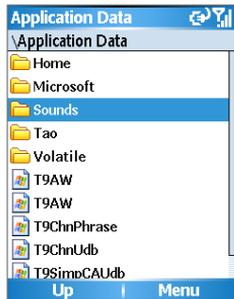

Make sure your audio files are located in the correct folder.

2



Place your audio files under the folder\Application Data\Sounds.

3

Select  <Custom ring tones>



Your file will be shown directly in the Sound Settings screen.

305



## 10. 4. 2 Specific Event Sounds

Set each event reminder sound on the phone. For example, alarm, voice mail, MSN instant messages, etc. Event sounds that can be set up:

Line 1 ring tone	The ring tone to playback with line 1 incoming calls	Internal network broadcasted new message	Received new message broadcast from internal network
Line 2 ring tone	The ring tone to playback with line 2 incoming calls	Received internal network broadcasted new message	Alarm ring tone
Reminder	Appointment reminder sounds	SIM Toolkit message	SIM toolkit message sounds
New e-mail	Received new e-mail	Exclamation	When operation error occurs
New messages	Received new messages	Question	When an inquiry occurs during operation
New voice message	Received new voice message	Warning	When operation error occurs
MSN Messenger new message	Received new MSN Messenger message	Keypad control	Sounds played when pressing phone buttons

10

Setting the Phone Information

### Action: Specified Event Sounds

- 1 Select <Events> Then Select <Tones>
- 2 Select Done



Select the event sound you want to set. For example, Alarm set to trill ring.



Set up is now complete.



## 10.5 Removing Programs

Removing the programs that are currently installed on the phone. Removing programs can increase storage space on the phone. If you have insufficient storage space, try to remove any unnecessary software from the phone.

10

Setting the Phone Information

### Action: Removing Programs

- 1 Select  **Start**
- 2 Select  **Settings**
- 3 Select  **Remove Programs**



Opens the Start Menu.



Opens the Settings screen.



Select the program to remove.

307

## Continue: Removing Programs

- 4 Select  <Programs> Then press the  OK button
- 5 Select  Yes
- 6 Select  OK



Select the program you wish to remove. Your installed programs will be listed here.



Confirm if the program should be removed.



Program has been removed.

## 10. 6 Profiles

Use the Profiles to select the notification methods for events or actions. You can set the ring tone, alarm, notification, and system sounds volume or vibration level.

Edit the profiles to use different settings in different situations/locations.

! If you feel the ring tone volume is too low, you can adjust the volume as Loud or set to Outdoor mode at the profile.

10

### Action: Choosing Profiles

- 1 Select  Start
- 2 Select  Settings
- 3 Select  Profiles



Opens the Start Menu.



Enter the Settings screen.



Select the profiles.

**Continue: Choosing Profiles**

4 Select    
 <Profiles>

5



Select the profile you want to use. For example, Meeting.




Check the Home screen to see that the profile has been changed.


**Action: Selecting Profiles from Quick List**

1 Press & hold    
 Home screen button

2 Select    
 <Profiles>

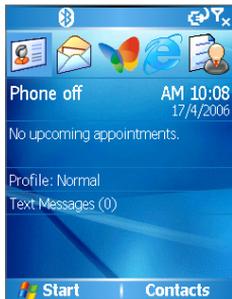


Opens the Quick List.

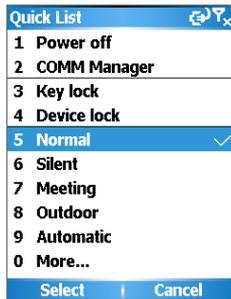


Select the profile you want to use.

## Action: Editing profiles


- 1 Select <Profiles>  
Then Select Menu > Edit
- 2 Select <Ring volume>  
Then Select <Volume>
- 3 Select Done

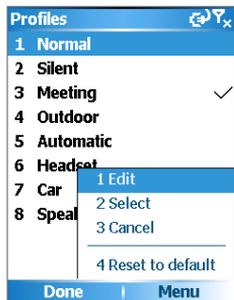

Select the profile you want to edit. For example, Normal.

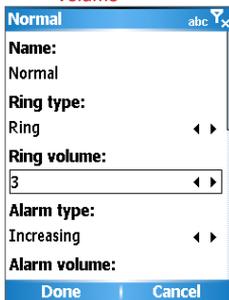

Select other event notification methods and ring tones (Note 1). Press Done when complete.

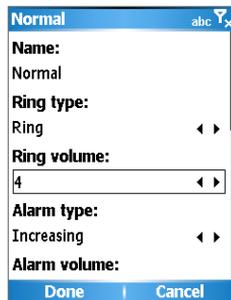


10

(Note 1) Profiles settings


Name	Profile name
<b>Ring type</b>	Ring tone type. Can be set as ring tone or vibrate: Ring, Ring once, Increasing ring, Vibrate, Vibrate then ring, Vibrate and ring, and Silent.
<b>Ring volume</b>	Sets the ring tone volume. Select as Off, 1~4, or Loud.
<b>Alarm type</b>	The alarm playback types: Play sound, Vibrate, Vibrate then sound, Vibrate and sound, and Increasing.
<b>Alarm volume</b>	Sets the alarm ring tone volume. Select as Off, 1~4, or Loud.
<b>Notification type</b>	Set the notification playback types: Play sound, Vibrate, Vibrate then sound, and Vibrate and sound.
<b>Notification volume</b>	Sets the notification ring tone volume. Select as Off, 1~4, or Loud.
<b>System sound volume</b>	Sets the system sound volume. Select as Off, 1~4, or Loud.

## Action: Resetting to Default

- 1 Select  <Profiles>
- 2 Select  Menu >  
Reset to default

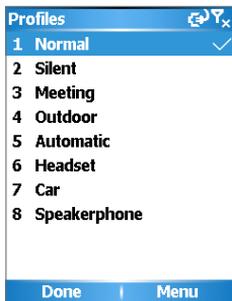

Select the profile you wish to set.

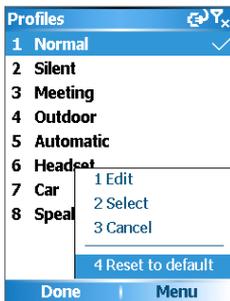

Returns the profile to default value.



## 10. 7 Time and Location

Set the time zone along with current time and date. The time and date information will affect the calendar reminders and the alarm ring time. When you change the time, you can change the time zone here as well. Your selected time zone will affect the corresponding schedules on the calendar.

Set the alarm on/off and the time to go off. For alarm ring tones, please refer to section 10. 3. 2.


10

### Action: Setting Up Time and Date


- 1 Select  **Clock & Alarm**
- 2 Select  **Date and Time**
- 3 Select  **Time Zone**  
Enter <date/time>  
Then select



Enters the Clock & Alarm settings.

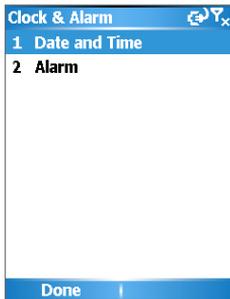

Sets the time and date.

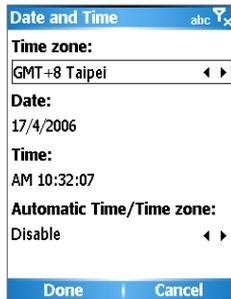

Selects the time zone and use the number keys. Enter the current date and time.

## Action: Setting Up the Alarm

- 1 Select **Clock & Alarms**
- 2 Select **Alarm**
- 3 Select **<Alarm time>**  
Select **<Alarm On/Off>**  
Then select **Done**

Settings

- 1 Phone
- 2 Video Call
- 3 Sounds
- 4 Profiles
- 5 Home Screen
- 6 **Clock & Alarm**
- 7 Connections
- 8 Security
- 9 Remove Programs
- 0 More...

Done

Enters the Clock & Alarm settings.

Clock & Alarm

- 1 Date and Time
- 2 **Alarm**

Done

Setting the alarm.

Alarm

Alarm time:

8:00

Alarm:

Off

Done

Cancel

Enters the alarm ring time, and selects the alarm on/off (Note 1).

10

Setting the Phone Information

(Note 1) When selecting **AM/PM**, use any number key to switch between AM/PM time.

## 10.8 Display Time When Keypad is Locked

When the keypad on the phone is locked, you can configure the screen to display the time. This allows you to check the current time without unlocking the keypad.

Please select  Enable display of digital clock in the "Unlock" message screen. ) activate this function. If you have not activated this function, the keypad locking screen will only remind you to press  to undo the keypad lock.




▲ Keypad Locked Screen

10

Setting the Phone Information

### Action: Configure Screen to Display Time When Keypad is Locked

- 1 Select  More...
- 2 Select  Unlock Screen Clock

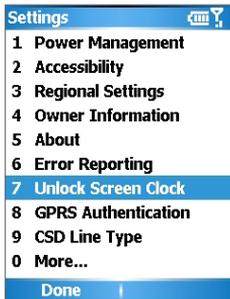

## 10. 9 Personal Information

In the case where the phone is mis-placed, entering the owner information may help with getting the phone back as quickly as possible.

10

Setting the Phone Information

### Action: Setting Up Personal Information


- 1 Select  Start
- 2 Select  Settings
- 3 Select  More...



Enter the Settings screen.

Selects more settings.

- 4 Select  **Owner Information**

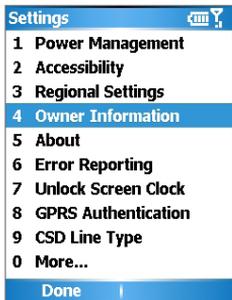

Goes to the Owner Information screen.

- 5 Enter <Name>



Enter your name (Note 1). For example, allen.

- 6 Select  **Telephone number**  
Then enter <phone number>



Enter the phone number at the phone number field. For example, 0988168168.

10

Setting the Phone Information

- 7 Select  **E-mail Address**  
Enter <E-mail address>



Goes to the e-mail field for text entering. For example, allen@example.com.

- 8 Select  **Notes**  
Then enter <Notes>  
Then select  **Done**



Go to the notes field and enter the notes. For example, "If any should pick up this phone, please contact me".

(Note 1) Some third party software requires you to enter the name here in order to be used as the registration serial number.

317

## 10. 10 Protecting Your Phone

There are multiple security protection measures for your phone. You can set the PIN password to prevent others from unauthorized dialing. The initial PIN code is provided by your service provider. In addition, you can also use the phone lock code to automatically lock the phone after a period of time. You must enter the correct pass code to be able to continue the use of the phone, preventing others from unauthorized dialing.

10

Setting the Phone Information

- ! If your mobile phone is syncing with the Exchange Server, your phone may be required to security policies applied by the server, forcing activation of phone automatic locking or remote cleanup. Please inquire with your network administrator for more information.
- ! When you try to enter the incorrect SIM card PIN code more than three times, the SIM card will be locked automatically. Please contact your service provider to obtain the PUK code (PIN unlocking key) to unlock the SIM card.

### Action: Security Settings

- 1 Select  Start
- 2 Select  Settings
- 3 Select  Security



Opens the Start Menu.




Enter the Settings screen.



Enters the Security settings screen.

4

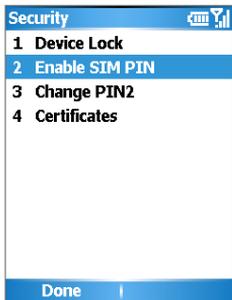


The Security Settings screen.


10

### Action: Enable the PIN Code

- 1 Select  Enable SIM PIN
- 2 Enter <PIN code>  
Then select

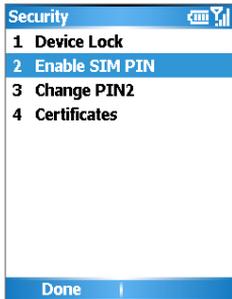

Select to activate PIN code.

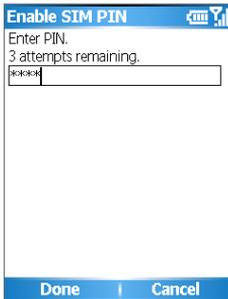


Please remember your PIN code. The PIN code is required for access each time the phone function is activated.




## Action: Disable the PIN Code

- 1 Select **Disable SIM PIN**
- 2 Enter **<PIN code>**  
Then select **Done**

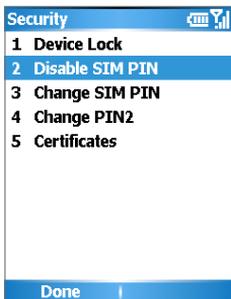

Select to deactivate PIN code.

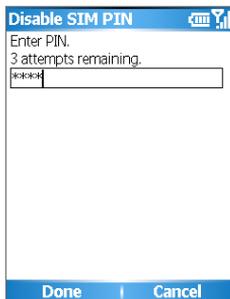


Enter the original PIN code to confirm deactivating PIN code.

10

## Action: Modifying the PIN Code


- 1 Select **Change SIM PIN**
- 2 Enter **<Old PIN code>**
- 3 Enter **<New PIN code>**  
Then select **Done**

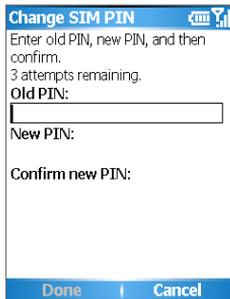

Please remember your PIN code.

## Action: Setting the Phone Locking Code

- 1 Select Device Lock
- 2 Select <Prompt if device unused for>
- 3 Enter <Password> twice  
Then select Done

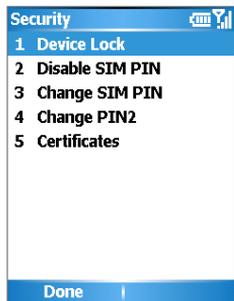

10

Setting the Phone Information

## Action: Disable Phone Locking

- 1 Select Device Lock
- 2 Enter <Password>  
Then select Done



321

**Action: Manually Perform Phone Locking**

- 1 Press & hold  Home screen button
- 2 Select  Device lock
- 3



Opens the Quick List.




Select device lock to perform locking.



The phone has been locked.

**Action: Disable Phone Locking**

- 1 Select  Unlock
- 2 Enter <Password>  
Then select  Done

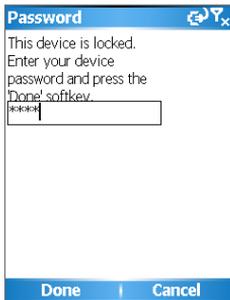

Enter your password to undo locking.

## 10. 11 Power Management

Set the power management for the phone. Select the idle time to automatically turn off the screen in order to save battery power.

Power management settings options:

<b>Backlight time out on battery</b>	Backlight time of the screen when using the battery.
<b>Backlight time out on AC</b>	Backlight time of the screen when charging the phone.
<b>Display time out</b>	Set the display timeout time to automatically turn off the screen after timeout.
<b>Light sensor Enable</b>	Choose whether you wish to activate light sensory mode. If there is insufficient light, the keypad backlight will be activated.

10

### Action: Setting Power Management

- 1 Select  **Start**
- 2 Select  **Settings**
- 3 Select  **More...**



Opens the Start Menu.



Enter the Settings screen.



Enters the Power Management screen.





4 Select **Power Management**

5 Select **Options**  
Then select **Done**

10

Setting the Phone Information

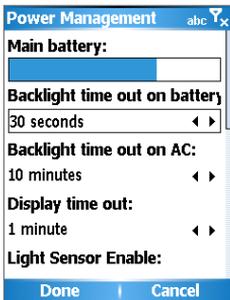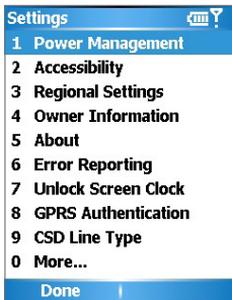

Select the item you want to set.



## 10. 12 Accessibility

Set the repeated keypad enter time, confirmation time, incoming notification volume, and smartdial settings.

Accessibility options:

<b>Multipress time out</b>	Determine the number of seconds it takes for multiple button presses to be considered as multipress.
<b>Confirmation time out</b>	Set the confirmation timeout time.
<b>In-call alert volume</b>	Select the volume for incoming call alerts.
<b>Smartdial setting</b>	The input method of the Smartdial mode during filtering of Contacts or History lists.

10

### Action: Accessibility Options

- 1 Select  **Start**
- 2 Select  **Settings**
- 3 Select  **More...**



Opens the Start Menu.




Enter the Settings screen.




Selects more settings.

4 Select  Accessibility

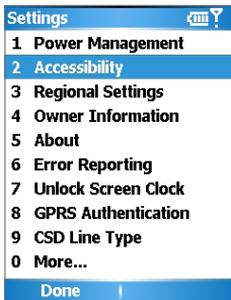

Enters the Accessibility settings screen.

5 Select  <Items>  
Then select  <Options>  
Then select

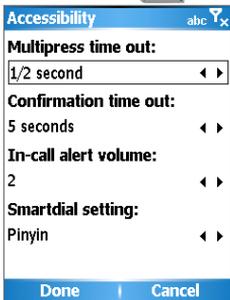

Selects the Accessibility options.

## 10. 13 Search for Operating System Version Number

To view the operating system version installed on the phone, and manufacturer copyright information. You can view the operating system version, manufacturer copyright information, available storage, available memory, storage card space, and ROM version, etc.

10

Setting the Phone Information

### Action: Search for Operating System Version Number

- 1 Select  Start
- 2 Select  Settings
- 3 Select  More...



Opens the Start Menu.



Enter the Settings screen.



Selects other settings.

327




4 Select About


5 Select Done

10

Setting the Phone Information

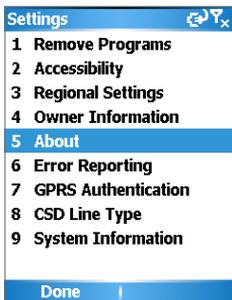

Opens the About screen.

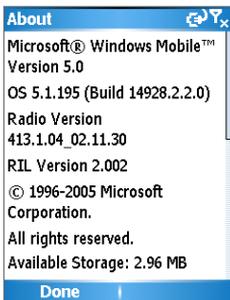

You can see the available storage space on the screen. 2.96 MB is shown in screenshot.





# Topic

# 11

## Using More Programs

**In this topic, you will learn about...**

1. **Java (MIDlet Manager)**
2. **File Explorer**
3. **Task Manager**
4. **Using ClearVue Suite**
5. **SIM Manager**
6. **QuickMark Mobile Barcode**
7. **Calculator**
8. **Games**
9. **3D Menu**
10. **Voice commander**





# Index Action

Using MIDlet Manager .....	332
Using File Explorer.....	333
Using Task Manager .....	334
Using ClearVue PPT .....	336
Using ClearVue Worksheet .....	337
Using ClearVue Document .....	338
Using ClearVue PDF .....	339
Using SIM Manager .....	340
Using QuickMark Mobile Barcode .....	341
Using QuickMark to store contacts.....	342
Using the Calculator .....	343
Solitaire screen .....	344
Bubble Breaker screen.....	345
Another World Main Screen.....	346
Magic Puz Main Screen .....	347
3D Menu Introduction.....	348
Switching to Dopod 3D Menu .....	349
Change color themes .....	349
Adding Other Application Shortcuts .....	350
Activate voice commander.....	351





Say the voice commander ..... 352

Number training..... 352



## 11. 1 Java (MIDlet Manager)

You can select **Start > MIDlet Manager** to open the program.

MIDlet Manager is a Java application run on mobile devices.

Your phone's supported Java version is J2ME. MIDlet Manager allows you to download Java applications such as specially designed games and tools for mobile devices.

In addition to installing the Java programs from the files on the local unit directly, you can also download and install Java programs from the Internet. You can look for websites that provide Java program downloads.

If you have insufficient space on the phone, try to delete some of the Java programs.

For installation of Java programs from files, please refer to Chapter 9 Synchronize Your Phone.

11



Please place the files in the following folders:

- Phone: /My Documents/My MIDlets
- Memory card: /Storage Card

Using More Programs

### Action: Using MIDlet Manager

- 1 Select **MIDlet Manager**  
Then press the **OK** button

2



The MIDlet Manager home screen.



## 11. 2 File Explorer

You can select **Start > File Explorer** to open programs.

File Explorer provides many file and folder functions for easy management. You can copy and delete files or folders, as well as send files from the phone to other users. You can use File Explorer to browse files and folders on the phone. In addition, you can press the OK button on the file directly to execute the file.

When browsing, you can press the Back button or choose Up to return to the previous level. Or you can press the OK button from the directory to enter the directory.

You can also rename, delete, cut, and paste files or folders to other folders. When moving a folder that contains a file, the file will also be moved. Deleted files cannot be restored.

In addition to file browsing, you can also use Bluetooth, MMS, or e-mail to send files to other users.

11


- To use the messaging center, please refer to Chapter 5 Viewing Messages.
- To use Bluetooth, please refer to section 7. 2 Bluetooth Connection.

### Action: Using File Explorer

- 1 Select  **File Explorer**  
Then press the  **OK** button
- 2



Opens the File Explorer.

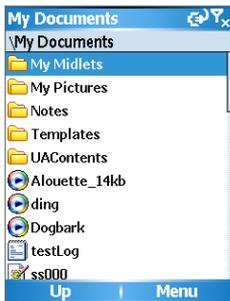

The File Explorer screen.

## 11. 3 Task Manager

You can select **Start > Task Manager** to open the program.

Task Manager will allow you to view all programs that are currently running on the phone as a list. You can switch, activate, or end any currently running tasks. You can also view the memory status and battery information on the phone.

When the system reports insufficient memory, you can close programs from the Task Manager.

Under most circumstances, you will not need to manually close programs from the Task Manager.


(Note 1) When you use the Back button to back out from a program, the program is only switched to background operation and is not terminated.

11

Using More Programs

### Action: Using Task Manager

- 1 Select **Task Manager**. Then press the **OK** button.
- 2

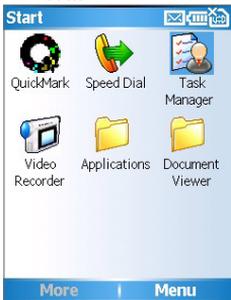

Opens Task Manager.



The Task Manager screen.



## 11. 4 Using ClearVue Suite

ClearVue Suite® includes four applications for you to view Word®, PowerPoint®, Excel®, and Adobe PDF documents on your phone.

- ClearVue Presentation® (views PowerPoint® files)
- ClearVue Worksheet® (views Excel® files)
- ClearVue Document® (views Word® files)
- ClearVue PDF® (views Adobe PDF files)

 ClearVue Suite® does not support all fonts, colors, functions and document versions. However, it will use the closest match to the original documents.



## 11. 4. 1 ClearVue Presentation

ClearVue Presentation® can view PowerPoint® documents as well as the animations and special effects in the document.

You can select from summary mode, slides browsing mode, and memo mode, then start the slideshow from the menu.

During the slideshow, press the directional buttons to select the slide, or press #  # key to open the slideshow menu to select the next slide, previous slide, and jump to a specific slide.

 ClearVue Presentation® only supports Microsoft Office PowerPoint 97® or newer version documents.

11


Using More Programs

### Action: Using ClearVue PPT


- 1 Select  Start > Document Viewer
- 2 Select  ClearVue PPT  
Then press the  OK button
- 3



Opens Program Files.

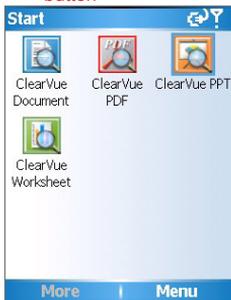

Opens ClearVue PPT.

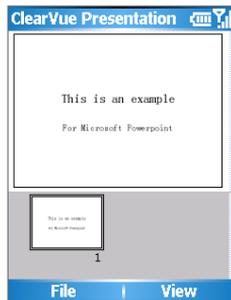

ClearVue Presentation home screen.

## 11. 4. 2 ClearVue Worksheet

ClearVue Worksheet® allows you to view Excel® spreadsheets and its tables and graphs.

You can use the directional buttons to view the spreadsheet cell contents and switch between different spreadsheets from the menu.

- ClearVue Worksheet® only supports Microsoft Office Excel 97® or newer version documents.
- Excel® macros will not be loaded.
- 3D table/graphs will be projected as 2D view.
- Spreadsheets in Autoshape will not display the background pictures.
- Cannot open spreadsheets with passwords.

11

Using More Programs


### Action: Using ClearVue Worksheet

1 Select  **Start** >  
**Document Viewer**




Opens Program Files.

2 Select  **ClearVue Worksheet**  
Then press the  **OK** button

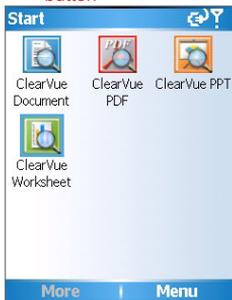

Opens  
ClearVue Worksheet.

3

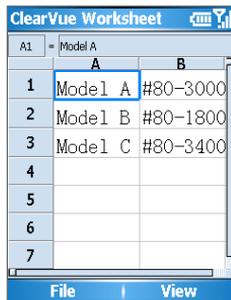

ClearVue Worksheet home screen.

337

### 11. 4. 3 ClearVue Document

ClearVue Document® can view Word® documents and document contents such as tables, pictures, columns, and symbols, etc.

You can use the directional buttons to move and view document contents.

**!** ClearVue Document® only supports Microsoft Office Word 97® or newer version documents.

11


Using More Programs

#### Action: Using ClearVue Document


- 1 Select  Start > Document Viewer
- 2 Select  ClearVue Document Then press the  OK button
- 3



Opens Program Files.

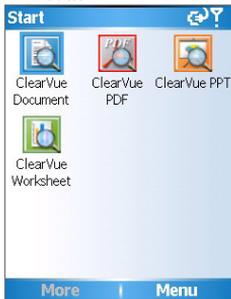

Opens ClearVue Document.

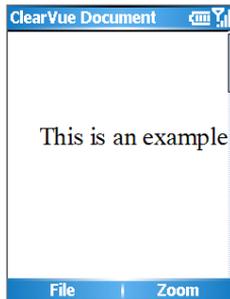

ClearVue Document home screen.

## 11. 4. 4 ClearVue PDF

ClearVue PDF® allows you to view PDF documents on your phone.

You can use the directional buttons to view document contents. Use the Up/Down directional buttons to switch pages.

11


Using More Programs

### Action: Using ClearVue PDF


- 1 Select  **Start > Document Viewer**
- 2 Select  **ClearVue PDF**  
Then press the  **OK** button
- 3



Opens Program Files.

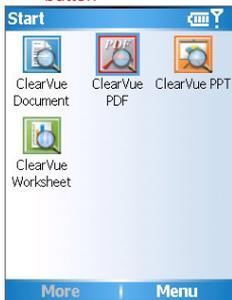

Opens  
ClearVue Document.

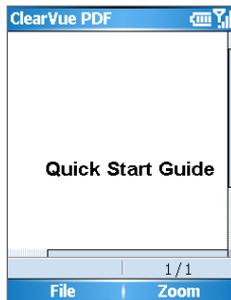

ClearVue Document home  
screen.

339

## 11. 5 SIM Manager

You can select **Start > Accessories > SIM Manager** to open the program.

Manage your SIM card contact information and perform actions such as add new, edit, copy, delete, save to phone memory, etc.

11

Using More Programs


### Action: Using SIM Manager

- 1 Select **SIM Manager**  
Then press the **OK** button

2



Opens SIM Manager.

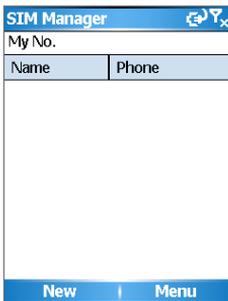

SIM Manager main screen.

(Note 1) You can select **Menu > Select All** to select all SIM card contacts to perform the action.



## 11. 6 QuickMark Mobile Barcode

You can select **Start > QuickMark**.

QuickMark® is a 2D bar code system specially designed for mobile electronics devices (mobile phone, PDA, smart phone, etc.) that are equipped with camera modules. It provides coding, encoding, and decoding tool application services. It also has features such as compact size, fast recognition, and easy operation. It will greatly simplify the various procedures for phone operations. Aim the camera lens to the product's specific barcode. Through the barcode connection and software decoding, QuickMark will automatically recognize the barcode contents in two seconds.

QuickMark scanner recognizes both QuickMark® and QR Code barcode standards.

You can experience the QuickMark and QR Code generator immediately from the [www.dopodasia.com/quickmark](http://www.dopodasia.com/quickmark)

11

### Action: Using QuickMark Mobile Barcode

- 1 Select  QuickMark  
Then press the  OK  
button



Opens QuickMark.

2



Aim the camera lens to the barcode for auto-scan.

- When the software successfully recognizes the barcode, a sound will be made and the information contained in the barcode will be displayed.

## Action: Using QuickMark to store contacts

1



2

Select  OK



3

Select  OK




11

Using More Programs

Aim at the QuickMark barcode.

4

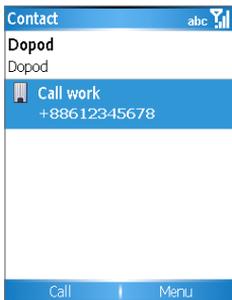

You have successfully added a new contact.




## 11.7 Calculator

Runs simple math calculations such as addition, subtraction, multiplication, and division using the calculator. Use the number pad to enter numbers and the directional buttons to enter the math symbols addition, subtraction, multiplication, division. Press the OK button for the calculation result.

You can use the calculator from the Accessories menu.

### Using the Calculator

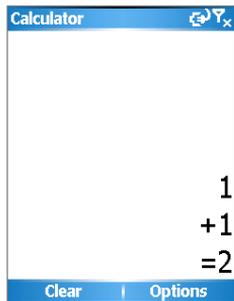

Use the directional buttons to enter the math symbols.

Up	Add	+
Down	Subtract	-
Right	Multiply	x
Left	Divide	/
OK button	Equals	=

## 11. 8 Games

The phone has four exciting built-in games: Bubble Breaker, Solitaire, Another World, and MagicPuz. You can install more games on the phone.

### 11. 8. 1 Solitaire


You can access the program from **Start > Games > Solitaire**.

Use the number keys to specify corresponding columns. Use alternating card colors to line the cards. Select Deal will flip three cards from the deck. To win the game, you need all cards returned to the completed area at the top.

11

Using More Programs

#### Solitaire screen

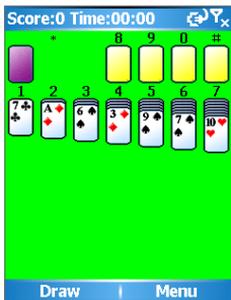


## 11. 8. 2 Bubble Breaker

You can access the program from **Start > Games > Bubble Breaker**.

Use the directional buttons to move the cursor, then press the OK button to confirm popping the bubble.

Cancel two connecting bubbles of the same color. The bubble(s) above will also drop. Use this strategy to link multiple bubbles of the same color to pop them at the same time and gain more points.

### Bubble Breaker screen

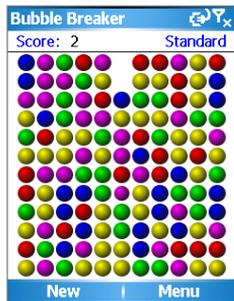



## 11.8.3 Another World

You can access the program from **Start > Games > Another World**.


Game introduction: A young scientist was brought to another world during a lightning strike in his particle experiment lab. The goal of the game is to rescue the young scientist from this alien planet and bring him back to his original world.

- Right button: walks right. Press the Right button twice to run towards the right side.
- Left button: walks left. Press the Left button twice to run towards the left side.
- Up button: jumps up. Down button: ducks down.
- OK button: to kick (bare hands: kicks; with weapon: shoots; press for 1 second: shoots out energy beam; press for 3 seconds: shoots out particle beam).
- OK button + Right button: low right kick.
- OK button + Left button: low left kick.
- Press the Right button twice + Up button: leaps right.
- Press the Left button twice + Up button: leaps left.

11

Using More Programs

### Another World Main Screen

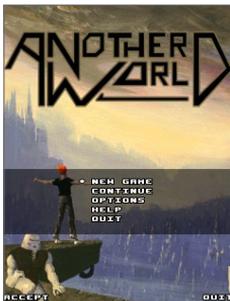

To quit the game:

1. Select  **Left confirmation button**
2. Select  **Exit**
3. Select  **Quit**

## 11. 8. 4 Magic Puz

You can access the program from **Start > Games > Magic Puz**.

Game introduction: Connect two or more of the same colored balls, horizontal or vertical, in a limited amount of time to make them disappear.

- Up button: moves the cursor up.
- Down button: moves the cursor down.
- Right button: moves the cursor right.
- Left button: moves the cursor left.
- OK button: Select/Cancel the selected colored balls.
- Back button: Pause/Restart/Save/Exit.

11

Using More Programs

### Magic Puz Main Screen



To quit the game:

1. Select  **Left confirmation button**
2. Select  **Quit**
2. Select  **Exit**

347



## 11. 9 3D Menu

595 has already been installed with Dopod 3D menus at the manufacturer. Your "Start" menu will be replaced with the Dopod 3D menu over the Windows Mobile 5® default menu (Note 1). Besides the preset program items, you can also add your own application shortcuts (Note 2) in the "Other Applications" for convenient program launch.

(Note 1) You can select  **Menu Switch** to perform the switch between Windows default menu and the 3D menu.

(Note 2) If the program you want to add to "Applications" is not under Windows\Start menu, you can copy the executable or shortcut icon on the phone to the Windows\Start Menu\Applications folder after connecting to the computer via ActiveSync®.

The Dopod 3D menu's built-in MascotCapsule® 3D engine is the property of Japan HI company.



11

Using More Programs


### 3D Menu Introduction



▲ First page



▲ Second page

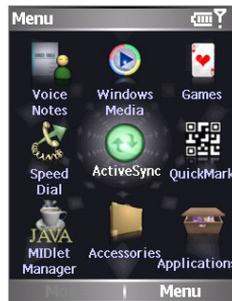


▲ Third page

## Action: Switching to Dopod 3D Menu


- 1 Select Menu Settings: 3D
- 2 Select <Menu type>
- 3 Select OK



Please use the Up/Down directional buttons at the Home screen to select "Menu Settings: 3D".

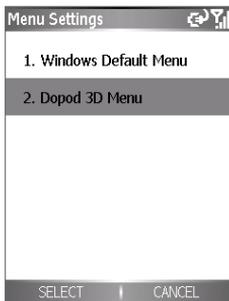

Please select the menu type you wish to switch to. For example, Dopod 3D Menu.

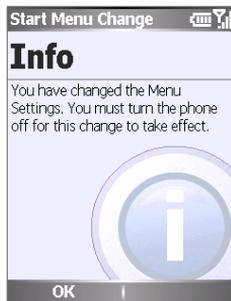

Menu has been switched successfully. Please restart for the changes to take effect.

11

Using More Programs

## Action: Change color themes

- 1 Select Menu > Color settings > Blue
- 2



You can choose your preferred color theme .



349

## Action: Adding Other Application Shortcuts

- 1 Select  Applications
- 2 Select  Menu > Add All Shortcuts



11

Using More Programs

Opens the "Applications" folder.

Select **Add All Shortcuts** to add all the program shortcuts.

## 11. 10 Voice commander

Voice commands allow you to issue simple commands by voice, thereby saving time searching through the contacts or application lists. This program provides the following voice recognition functions:

- Dial to contacts
- Search contacts
- Number dialing
- Open applications
- Control Windows Media music playback
- Playback music file
- Browse calendar
- Open messages screen

11

Using More Programs

### Action: Activate voice commander

- 1 Press the **Voice commander button**
- 2 Say the **<commander>**



351



## Say the voice commander

Please refer to the example on the screen and speak out your command to execute.

For example say:

Phone call to Roger Smith

Open file explorer

Points to take note:

- Say the command in your normal conversational voice.
- Finish the command before the progress bar completes.
- No pause is required in between spoke command sentences. For example: "call to" and "Roger Smith" does not require an pause in between.

11

## Number training

You can perform number training from the voice command settings. By using number training you can improve the phone number recognition rate.

To access number training, please select from the voice command main screen **options** > **settings** > **options** > **number training**



# Topic

12

## Q&A



The Dopod website will be updated periodically. Please visit the Dopod website at

[www.dopodasia.com](http://www.dopodasia.com)

Register your phone to receive more information and services.

## Registering your phone


1. Open the Internet browser and connect to the Dopod website. Click on the **Members** from the home page.



12


Q&A

2. Select the **Sign up as Member** link on the left side of the screen. Then click on **I agree** at the bottom of the page.

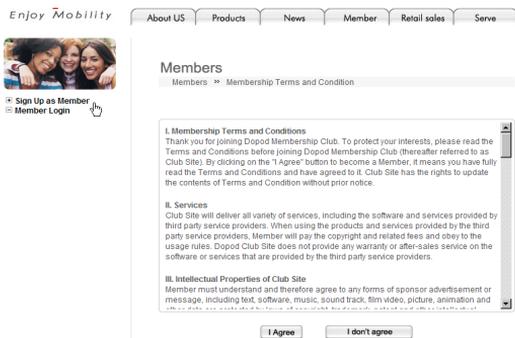

354

3. Select **"I have already purchased."**  
Then press **Send**.

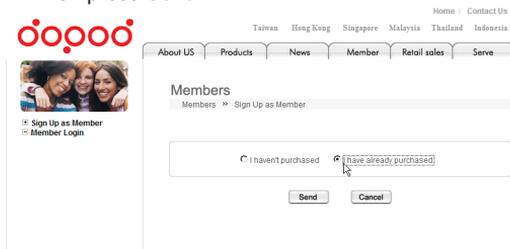


Home | Contact Us  
Taiwan Hong Kong Singapore Malaysia Thailand Indonesia

About US Products News Member Retail sales Serve

**Members**  
Members > Sign Up as Member

I haven't purchased  I have already purchased

4. Enter the **Hardware S/N** (please refer to the S/N on the back of the phone), **Name**, and **Date of Birth**. Then press **Send**.

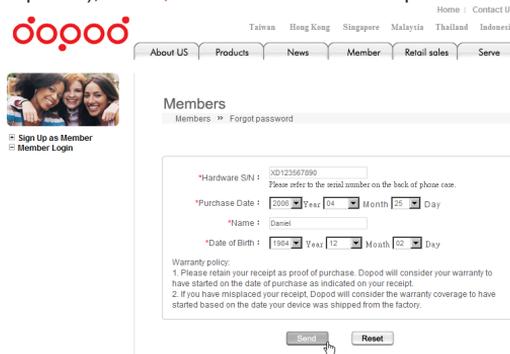

Home | Contact Us  
Taiwan Hong Kong Singapore Malaysia Thailand Indonesia

About US Products News Member Retail sales Serve

**Members**  
Members > Forgot password

\*Hardware S/N :   
Please refer to the serial number on the back of phone case.

\*Purchase Date :  Year  Month  Day

\*Name :

\*Date of Birth :  Year  Month  Day

Warranty policy:  
1. Please retain your receipt as proof of purchase. Dopod will consider your warranty to have started on the date of purchase as indicated on your receipt.  
2. If you have misplaced your receipt, Dopod will consider the warranty coverage to have started based on the date your device was shipped from the factory.


12

08A

355



1. How do I sync the phone with the computer? How do I backup the information on the phone?

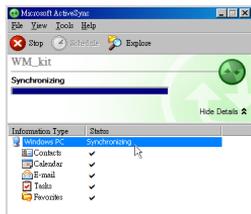

▲ Using Microsoft ActiveSync® to sync information between the phone and computer.

1. Install the Microsoft ActiveSync® and Microsoft Office Outlook® applications from the User's CD. Please refer to sections 9. 2 and 9. 3 for detailed descriptions.
2. Connect the USB cable to the phone and computer.
3. After ActiveSync starts the synchronization, the contacts, calendar, tasks, and e-mail will be sync-ed from the phone to the personal computer.

If the information on the phone is accidentally deleted after the synchronization with the computer is completed, you can use ActiveSync to sync the original information back onto your phone. For configuring ActiveSync, please refer to the detailed descriptions in Chapter 9.

2. What should I do when the computer freezes or cannot connect to the phone when using USB cable connection?

As Microsoft ActiveSync 4® utilizes the latest RNDIS transfer technology, it may conflict with the firewall or anti-virus software installed on your computer. You can:

- Turn off the firewall or anti-virus software's auto-protection functions. For detailed information, please refer to section 9. 13.
- Set ActiveSync as exceptions in the firewall configuration options. For detailed information, please refer to section 9. 13.
- Contact your anti-virus software provider for solutions. For detailed information, please refer to section 9. 13.

### 3. How to use ActiveSync Bluetooth synchronization?

1. During the initial use, please select ActiveSync on the phone from  **Menu** > **Connect via Bluetooth**.
2. Activate the phone and computer's Bluetooth function.
3. Select  **Menu** > **Add Server Source** to set Bluetooth synchronization between the personal computer and phone.
4. Configure the Bluetooth sync, and match the personal computer with the phone.
5. At the phone's ActiveSync screen, select **Menu** > **Connect via Bluetooth** to Activate ActiveSync Bluetooth Sync.



- ▲ Using ActiveSync Bluetooth Synchronization.

For detailed information, please refer to section 9. 7 Synchronize Through Bluetooth Connection.

### 4. What is the operating system version on my phone? Can I change the interface to Simplified Chinese?

- The operating system on your phone is Microsoft Windows Mobile 5.0®.
- You can change the interface to English:
  1. At the Home screen, select  **Start** > **Settings** > **Regional Settings**.
  2. Select  **Language** set the option as “中文（标准）”.



- ▲ Setting the user interface as Simplified Chinese.

12

08A

357




5. Does the phone's built-in MSN Messenger® support voice chat?

MSN Messenger® only supports text message communications.

6. How do I equip the phone with GPS instant navigation functions?

- You must obtain a Bluetooth GPS device.
- To establish the Bluetooth connection between Bluetooth GPS and the phone; please refer to section 7. 2. 1 Adding a new Bluetooth device.
- Configure the corresponding COM port for the Bluetooth GPS device; please refer to section 7. 2. 2 Configuring Connection Port.
- Before you purchase and install the GPS navigation software, please make sure you have sufficient memory space on the phone for the installation of the program.
- As navigation programs generally require more space, we recommend that you install the program to the Micro SD memory card.

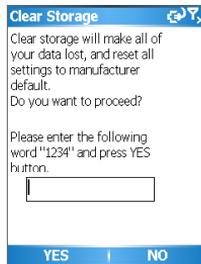

▲ Returning the phone to factory default settings.

7. How do I use the Return to Default (Hard Reset) function?

You can use the Clear Storage program or the hard reset button to return the phone to factory default settings. All data on the phone will be deleted. Please be cautious when using this function.

- For detailed operation procedures, please refer to section 1. 6.

8. How do I connect to D-Service?

You can connect to the D-Service website to obtain periodic updated services. Please register for an account and password from the Dopod website.

1. At the Home screen, select  **Start** > **Internet Explorer**
2. At Internet Explorer, under My Favorites folder, select  **Dopod Service**



▲ Internet Explorer My Favorites screen.

12

Q&A





### 9. Why does the alarm not go off when the phone is off?

You must turn on the phone for the alarm to go off. If you wish to turn off the phone functions, turn it off at the Comm Manager.

Using Comm Manager to turn off phone:

Press and hold the **Home button** at the Home screen to open the Quick List.

Select **Comm Manager** to open the Comm Manager screen.

Select the **Phone** icon to turn off the phone functions.



▲ Using Comm Manager to turn off phone functions.

### 10. Where can I download the User's Manual, program updates, or other Dopod-provided software applications for the phone?

You can visit the Dopod website: <http://www.dopodasia.com/> to download the latest versions of the Quick User Guide, User's Manual, program updates, and other software application for the phone. Please register your phone to receive more services.

12

### 11. How do I configure and use the Bluetooth headset?

- Activate the Bluetooth headset.
- Activate the phone's Bluetooth function.
  1. Hold the **Home button** at the Home screen to open the Quick List.
  2. Select **Comm Manager** to open the Comm Manager screen.
  3. Select the **Bluetooth** icon to activate Bluetooth.
- Establishing Bluetooth connection.
  1. At Comm Manager, select **Settings > Bluetooth Settings**.
  2. Select **Menu > Device**.
  3. Select **Menu > Add New**.
  4. After the Bluetooth headset is found, select **Bluetooth headset** and then Select **Next**.
  5. Please refer to the **Bluetooth headset** manual to enter the password, then select **Next**.
  6. Make sure the "hands free speakers" item is selected, then select **Finish**.

After setup is complete, you may begin to use the Bluetooth headset for the hands free speakers operation. For detailed configuration procedures, please refer to section 7. 2. 3 Using the Bluetooth Headset.

359

Q&A



12



**Q&A**



**360**





# Topic

**A**

## Appendix

- A.1 Specification Disclosure**
- A.2 Basic computer specifications for  
executing ActiveSync 4.x**
- A.3 Product Specifications**
- A.4 Accessories Information**
- A.5 Customer Service Information**





## A.1 Specification Disclosure

### Specification Agent Authorization Number

For the purpose of specification authorization, your product (595) will have the specific model name as BREE100. The battery module will have the specific model name as BREE160.

To ensure that you will be able to safely operate this smart phone in the future, please use only the accessories listed in this document.

This product uses a certified class 2 limited power source, 5V DC, and 1A max power supply.

### European Union Notice

Products marked with CE, must comply with the European Community Council announced R&TTE specification (99/5/EC), EMC specification (89/336/EEC), and Low Voltage specification (73/23/EEC). Complying with these specifications indicates that our products comply with the following European standards (meaning these specifications are equal to national specifications):

- EN 60950-1 (IEC 60950-1) – Safety of informational technology equipments.
- ETSI EN 300 328 – Electromagnetic compatibility and Radio spectrum Matters (ERM); wideband transmission system; data transmission equipment operating in the 2.4 GHz ISM band and using wide band modulation techniques.
- ETSI EN 301 511 – Global System for Mobile communications (GSM); Harmonized EN for mobile stations in the GSM 850 - 1800 bands covering essential requirements of article 3.2 of the R&TTE directive (1999/5/EC).
- ETSI EN 301 489- 1 – Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements.
- ETSI EN 301 489- 7 – Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 7: Specific conditions for mobile and portable radio and ancillary equipment of digital cellular radio telecommunications systems (GSM and DCS).
- ETSI EN 301 489- 17 – Electromagnetic compatibility and Radio spectrum Matters (ERM); EMC standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems.
- EN 301 489- 24 – Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 24: Specific conditions for





- IMT-2000 CDMA Direct Spread (UTRA) for Mobile and portable (UE) radio and ancillary equipment.
- EN 301 908-1 &-2 – Electromagnetic compatibility and Radio spectrum Matters (ERM); Base Stations (BS), Repeaters and User Equipment (UE) for IMT-2000 Third-Generation cellular networks; Part 1: Harmonized EN for IMT-2000, introduction and common requirements, covering essential requirements of article 3.2 of the R&TTE Directive.
  - EN 50360 - 2001 – Product standard to demonstrate the compliance of mobile phones with the basic restrictions related to human exposure to electromagnetic fields (300 MHz - 3 GHz).

## Safety Precautions for Radio Frequency Energy Exposure

For use of manufacturer authorized accessories, or accessories that contain no metal parts only.

Please avoid the use of any other accessories not approved by the manufacturer as they may violate your local radio frequency energy exposure standards.

## Maintenance Warning

With the exception of the mentioned sections in the operation or maintenance manual, please do not attempt to repair this product by yourself. Repair and maintenance needs should be handled by certified maintenance personnel or by the manufacturer.

## Damages in Need of Repair

If the following should happen, please unplug the product power source and return to a certified maintenance personnel or the manufacturer:

- Liquid spills onto the product or foreign objects falling into the product.
- The product has been in the rain or soaked in water.
- The product has been dropped or damaged.
- Unit overheating warning appears.
- Not operated under proper procedures.

## Radio Frequency Energy Exposure

Your wireless phone is the transmitter and receiver of radio frequencies. It is designed and manufactured with low emission restrictions to prevent excessive radio frequency energy exposure to the human body. These regulations created a complete guideline, as well as establishing radio frequency energy classifications that are permissible for the general public as part of the content. This guideline is based on the safety standards set by ISO:

- American National Standards Institute (ANSI), Institute of Electrical and Electronics Engineers (IEEE) C95.1-1992
- National Council on Radiation Protection (NCRP) Report No.86, 1986
- International Commission on Non-Ionizing Radiation Protection



- (ICNIRP) 1996
- (Canada) Department of Health safety regulations 6. These standards include sufficient safety limitations to ensure safety to all personnel regardless of age or health condition.

Exposure level is measured in SAR units for wireless mobile phones. This standard includes sufficient safety limitations, to provide extra protection to the general public and to create different usage methods. General conditions can only ensure the safety of radiation characteristics and interference. As with other similar mobile wireless communication equipments, in order to comply with required operations, and for the safety of the person, we recommend the user to stay away from the antenna while using the device.

## SAR Information

- SAR Value:

CE: Body: 0.985 W/Kg@10g

Head: 1.03 W/Kg@10g

**CE 0889**

A

Appendix

## Telecommunications Industry Association (TIA) Safety Information

### Pacemaker

The Medical Equipment Industry Association recommends that: when using the handheld wireless phone, maintain at least a 6-inch distance to avoid the potential risk of interference with the pacemaker. The contents of these recommendations and other independent research are identical to those suggested by the wireless technology research units. Pacemaker users:

- When the phone is on, the phone should be kept at least a 6-inch distance from the pacemaker.
- Do not place the phone in front pocket of the shirt.
- In order to limit potential interference with the pacemaker, use the ear that is at the opposite side from the pacemaker to answer the phone. If you notice any interference, please turn the phone off immediately.

### Hearing Aids

Some digital wireless phones may interfere with certain hearing aids. Should these types of situations occur, please contact your service provider or call the customer service hotline to discuss other replacement solutions.



### Other Medical Devices

If you are using any other personal medical devices, please consult with the device manufacturer(s) to understand if these devices take measures to block out external radio frequencies.

Your physician can assist you in obtaining this information. Please follow the regulations when being requested to turn off your phone in places such as hospitals. Hospitals and medical centers may be in use of medical equipments that are sensitive to outside radio frequencies.

### Other Reminders and Notice

Avoid using the phone near a metal building (such as the steel frames of the building).

Avoid using the phone near places with strong electromagnetic sources such as microwave ovens, audio speakers, televisions, and radios.

Avoid using the phone after a sudden change of temperature.

### Waste Electrical and Electronic Equipment (WEEE)

#### Regulations Guidance Notes

The WEEE was adapted and enforced as a regulation of the EU as of 13th February of 2003, with a major impact on handling discarded electronic equipments.

The goal of this regulation is to prevent the main concerns of WEEE, while promoting reusing, recycling, and other forms of restorations of the specific type of waste material in order to reduce the amount of material wastes.

The WEEE symbol (  ) listed on the product or packaging indicates that this product cannot be discarded along with your other household wastes. You are responsible for bringing all of your electronics and electrical wastes to specified location(s) for recycling and processing of hazardous materials. Separate collections and proper re-

manufacturing of these electrical equipment wastes can assist in conserving natural resources. Furthermore, properly recycled electrical equipment wastes will also ensure health of the human population and environmental safety. To learn more about information on electrical equipment recycling and collection locations, please contact your local governing agencies, household waste management centers, the store where you purchased the device(s) from, or the device manufacturer.

This product includes a lithium battery. If the battery set is not properly stored, it may cause fire hazards. Do not compact or pierce the battery, or drop the battery into fire or water. Avoid touching the battery that may have caused a short circuit. Please do not attempt to disassemble or repair the battery. Use the specified battery for replacement. Please properly recycle or dispose of the battery. Please do not discard the

A

Appendix



## A.2 Basic computer specifications for executing ActiveSync 4.x

After connecting this device to the computer, you must install Microsoft® ActiveSync® application onto the computer end. The ActiveSync 4.x application has been included in the installation CD and is compatible with the following operating systems and applications:

- Microsoft® Windows 2000 Service Pack 4®
- Microsoft® Windows Server 2003 Service Pack 1®
- Microsoft® Windows Server 2003 IA64 Edition Service Pack 1®
- Microsoft® Windows Server 2003 x64 Edition Service Pack 1®
- Microsoft® Windows XP Professional Service Packs 1 and 2®
- Microsoft® Windows XP Home Service Packs 1 and 2®
- Microsoft® Windows XP Tablet PC Edition 2005®
- Microsoft® Windows XP Media Center Edition 2005®
- Microsoft® Windows XP Professional x64 Edition®
- Microsoft® Outlook 98®, Microsoft Outlook 2000®, Microsoft Outlook XP®, and Microsoft Outlook 2003® Messages and CPC version
- Microsoft® Office 97®, excluding Outlook®
- Microsoft® Office 2000®
- Microsoft® Office XP®
- Microsoft® Office 2003®
- Microsoft® Internet Explorer 4.01® or later version (required)
- Microsoft® Systems Management Server 2.0®



A

Appendix





## A.3 Product Specifications

### System Information

<b>CPU</b>	<ul style="list-style-type: none"><li>• Qualcomm MSM6275</li><li>• Samsung 2442M stacked CPU with 300 MHz</li></ul>
<b>Memory</b>	<ul style="list-style-type: none"><li>• ROM-Nand Flash: 128 MB (standard)</li><li>• RAM: 64 MB SDRAM (standard)</li></ul>
<b>Operation System</b>	Microsoft Windows Mobile™ Version 5.0 for Smartphone

### Display

<b>Main display</b>	2.2" TFT-LCD, 240 x 320, 65535 colors
---------------------	---------------------------------------

### UMTS/GSM/GPRS/EDGE

<b>GSM 900</b>	880 ~ 915, 925 ~ 960 MHz
<b>GSM 1800</b>	1710 ~ 1785, 1805 ~ 1880 MHz
<b>GSM 1900</b>	1850 ~ 1910, 1930 ~ 1990 MHz
<b>UMTS 2100</b>	1920~1980, 2110~2170 MHz

### Camera Module

<b>Type</b>	<ul style="list-style-type: none"><li>• Main Camera: 1.3 Mega Pixels CMOS</li><li>• Secondary Camera: CIF CMOS</li></ul>
<b>Resolution</b>	<ul style="list-style-type: none"><li>• SXGA: 1280 x 1024</li><li>• VGA: 640 x 480</li><li>• QVGA: 320 x 240</li><li>• QQVGA: 160 x 120</li></ul>

### Connection

<b>I/O port</b>	11-pin adapter (audio, USB and power source)
<b>Bluetooth</b>	V2.0, Class 2 transmission rating



## Audio

**Mic/  
speaker** Built-in microphone/ 3-in-1 speaker

**Headset** AAC/AMR/WMA/WAV/MP3 codec

## Physical Specifications

**Dimensions** 112.4 mm (L) x 49 mm (W) x 14.8mm (T)

**Weight** 120g (including battery)

## Controls and LED Indicators

**Navigation  
button** 5-way directional / OK buttons

- 2 application buttons: Voice Commander/Voice Note and camera (Upper right side)
- Volume increase button (upper left side)
  - Press to increase volume
- Volume decrease button (lower left side)
  - Press to decrease volume

### Buttons

- Two function menu buttons (left/right)
- Home button
- Back button
- Call button (activate talk/answer calls)
- Power/hang up button (power on/off/end calls)
- 12 number keys

### LED

- Event notification
- Charging status
- GSM/GPRS signal
- Bluetooth connection

## Expansion Slot

**SD slot** Micro SD memory card

## Power Supply

**Battery**

- 1190mAh (typical) removable Li-Ion rechargeable battery
- Standby: Up to 220 hrs
- Talk Time: Up to 5 hrs

**AC adapter**

- AC input/frequency: 100 ~ 240 VAC, 50/60Hz
- Output capacity: 5VDC, 1A (typical)

## A.4 Accessory Information

If you would like to know more about the optional accessories available for our handsets, please visit the Dopod website and go to Products > Accessories:

<http://www.dopodasia.com>

to get more information.

## A.5 Customer Service Information

We thank you for choosing the 595. This phone will bring you a complete new experience. Should you need any further information about using the phone, you are most welcomed to contact our customer service center.

We welcome you to log on and register as a member immediately and e-mail us if you have any suggestions.

### Singapore:

Customer Service	1800 238 7788
Website	<a href="http://www.dopodasia.com">www.dopodasia.com</a>
e-mail	<a href="mailto:SEAservice@dopodasia.com">SEAservice@dopodasia.com</a>

### Malaysia:

Customer Service	+603 5569 8878
Website	<a href="http://www.dopodasia.com">www.dopodasia.com</a>
e-mail	<a href="mailto:SEAservice@dopodasia.com">SEAservice@dopodasia.com</a>

### Thailand :

Customer Service	+66 2640 3000
Website	<a href="http://www.dopodasia.com">www.dopodasia.com</a>
e-mail	<a href="mailto:SEAservice@dopodasia.com">SEAservice@dopodasia.com</a>

### Indonesia:

Customer Service	+62 21 380 7668/ 350 5668
Website	<a href="http://www.dopodasia.com">www.dopodasia.com</a>
e-mail	<a href="mailto:SEAservice@dopodasia.com">SEAservice@dopodasia.com</a>

Thank you and please enjoy our product.



A



# Appendix

