

óóóóó*C730*

User Manual





Thank you for your purchase of this all new Windows Mobile™ Smart Phone!

Please read carefully before continue:



The battery in the box has not been fully charged.

While being charged, the battery should not be removed.

If you are trying to disassemble the body of the mobile phone, the warranty of your mobile phone will void.

Microsoft, MS-DOS, Windows, Windows NT, Windows Server, Windows Mobile, ActiveSync, Excel, Internet Explorer, MSN, Outlook, PowerPoint and Word are trademarks, or registered trademarks of Microsoft Corporation in the United States of America, or in other countries.

Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

microSD is a trademark of SD Card Association.

Java, J2ME and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.



Dopod will not be held responsible for resulting damages, technical or editorial errors from this section. This information is provided “as-is” and does not come with any guarantees. All information will be subject to change and Dopod reserves the right to modify contents contained herein this document. No further notifications will be available.



This device is limited for indoors use, under the guaranteed conditions that it will not interfere with legal radio stations and will not be interfered during operation.



Important Safety Precautions

Please adhere to the following safety precautions when using this product to avoid risk of legal and monetary responsibilities.

Electrical Safety

This product is only operable when using battery supplied power. Using other power sources may cause harmful conditions and will void all guarantees for this product.

Aviation Safety

As this product may interfere with the operation of the aviation navigation system and communication networks of the navigation system, usage of this product in an aircraft is prohibited by law in several countries. If by **law permits you** using this product in an aircraft, please switch to **Inflight Mode to turnoff radio wave transmissions**.

Environmental Restrictions

Do not use this product at a gas station or refueling station. Usage of this product is also prohibited at fuel storages, chemical factories, and locations with explosives.

Environmental Safety

Do not use this product in the following locations: gas station, fuel storages, chemical factories, demolition worksites, potentially hazardous explosive locations such as fuel area under ship holds, transport and storage of fuel or chemical substance facilities, or locations with particles, dust, metal dust, chemical substances etc in the air. Please remember that sparks in these environments can cause explosions or fire hazards resulting in human casualties.

Road Safety

Unless in an emergency, drivers in moving vehicles are prohibited from using hand held equipments for calls. In certain countries, it is permitted for drivers in moving vehicles to use hands-free devices for calls. Usage of this product may interfere with normal operations of medical instruments. Many hospitals and clinics prohibit use of these equipments.

Non-Ionic Radiation

To ensure efficiency of radio wave transmission and reduce interference, user should operate this product under the recommended normal environments. As with other similar mobile wireless communication equipments, in order to comply with required operations and for the safety of the users, it is recommended that the user maintains a safe distance from the antenna during the operation of the equipment.

Dopod Defective Pixel Warranty Policy

As the LCD display on the handheld product is made up of high precision components, possible lit or dark pixels (Note) appearing on the display screen is a common occurrence from the product manufacturing process. If your purchased product meets the following conditions, you may request replacement of the LCD display module within seven days from the purchase date.

1. Total count of three or more malfunctioning pixels (lit or dark); or
2. Any two malfunctioning pixels (lit or dark) within 5mm of each other.



Lit Pixels: blue, red, white, or green dots on specific locations of LCD screen.

Dark Pixel: black dot on specific locations of the LCD screen.

 


Table of Contents

1

1

Getting to know your phone

1.1 Phone and Accessories.....	3
1.2 Insert the USIM/SIM Card	8
1.3 Insert the microSD Card.....	9
1.4 Home Screen.....	10
1.5 Frequently used functions	15
1.6 Clear Storage (Hard Reset)	21

2

2

Input Methods

2.1 Changing Input Methods	25
2.2 Input Modes.....	26
2.3 Deleting Texts by Using Back Button.....	30
2.4 Clipboard	31

3

3

Phone Functions

3.1 Phone Function.....	40
3.2 Making Phone Calls.....	45
3.3 Receiving Voice Calls.....	52
3.4 Call Options.....	54
3.5 Additional Information on Dialing	59
3.6 Speed Dial.....	63



Managing Personal Information

4.1 Contacts	68
4.2 Calendar	82
4.3 Tasks	93
4.4 Voice Notes.....	96

4

Exchanging Messages

5.1 Messaging.....	102
5.2 Text Message.....	104
5.3 Outlook E-mail.....	111
5.4 MMS.....	120
5.5 POP3/IMAP4 E-mail Account	126
5.6 Configuring Messaging	129

5

Experiencing Multimedia

6.1 Camera and Recorder.....	139
6.2 Pictures and Videos	150
6.3 Windows Media Player	157
6.4 Audio Manager	168
6.5 Streaming Media.....	170

6

Getting Connected

7.1 Comm Manager.....	173
7.2 Bluetooth	174
7.3 WiFi network	183
7.4 Internet Sharing	187
7.5 Network Wizard.....	193

7

5



8

9

8

Experiencing Internet

8.1 Internet Explorer	199
8.2 Windows Live	217

9

Synchronizing Your Phone

9.1 Windows Mobile Device Center and Office Outlook 2007	234
9.2 Establishing Connection	239
9.3 Using ActiveSync	241
9.4 Synchronizing with a Computer installed with Windows XP	242
9.5 Synchronize through Bluetooth Connection	244
9.6 Sync with Exchange Server	248
9.7 File Transfer and Management	251
9.8 Advanced PC Sync Settings	254
9.9 Sync Music, Video, and Pictures	257
9.10 Import pictures and video clips	259
9.11 Installing Software	261
9.12 ActiveSync Connection Troubleshooting	263



Settings

10

10.1 Home Screen	268
10.2 The Phone Settings	271
10.3 Sound	273
10.4 Removing Programs	277
10.5 Profiles.....	279
10.6 Time and Zone.....	283
10.7 Unlock Screen Clock	285
10.8 Personal Information.....	286
10.9 Protecting Your Phone	287
10.10 Power Management	291
10.11 Accessibility	292
10.12 Find Operating System Version	293
10.13 JOGGR	294

10

11

12


A

More Applications

11

11.1 Java (MIDlet Manager)	297
11.2 File Explorer	298
11.3 Task Manager	299
11.4 Office Mobile	300
11.5 SIM Manager	304
11.6 Calculator	305
11.7 Games.....	306
11.8 Voice Commander	308
11.9 Cyberon Talking Dictionary	310
11.10 Info Feed	311
11.11 Adobe Reader LE	313
11.12 Quick Notes	314
11.13 Windows Update	315

 7



How to Use This Manual

After purchasing this product, please carefully read through the user's manual before operating. For your reading convenience, this manual is designed with many tips and services in order to help you to find information quickly.

Page Format

Generally, each page is separated into upper and lower areas, regardless of the left or right half of the page. Browsing is made from left to right and then from up to down in a Z shape, continuing on the next pages. There are small red boxes on the outer edges of the contents page to assist you in finding specific chapter topics.

Topic Format

The beginning of each topic always starts from the right page: The topic (first) page will explain what features you will learn from the specific topic. The **Actions Index** will assist you to quickly search for how to perform certain actions. The last part is the contents page. The contents page is separated into three levels. For example, in Chapter 3, there are 3.1, 3.2, 3.3 as the second level; 3.1 is then further divided into 3.1.1 Phone screen and 3.1.2 Input PIN number. Similar types of functions may be further subdivided to reduce confusion.

Tip Symbols

This manual provides tip symbols to remind users of some concepts, notes, and precautions.



Tips



Caution

 
3.1 Using the Phone Function

When you begin to use the Compact 7100 phone function, you will need to enter the default PIN number to allow access to the GSM network. When using the phone, you can control various functions such as, activate Bluetooth and phone book, and also adjust the speaker volume or gain. After a call when using the phone.

3.1.1 Phone Screen

In the Phone screen, you can view the phone screen, activate the phone screen, and also adjust the speaker volume or gain. When you use the phone, you can control various functions such as, activate Bluetooth and phone book, and also adjust the speaker volume or gain. After a call when using the phone.





About Action Icons


Every topic's content page includes icons that will assist the reader in operating the product and learning quickly. At the beginning of each action icon, the purpose of this action will be outlined in **red background color**. Each procedure will indicate the numbering, the action you will need to execute, the screen that appears for this procedure, and the descriptions for this procedure.

Name of current procedure — **Action: Switch input method**


Procedure Number — **1** Press  **FN key**
then press  **Space key**


Actions to take — **2** Select  **Language**

Mobile phone or computer screen

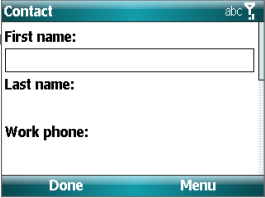

  Action descriptions — **Switch input methods** anywhere that text can be entered. — **Select the input language.**






Topic

1

Getting to know your phone


In this topic, you will learn to...

 1. **Phone and Accessories**
2. **Insert the USIM/SIM card**
3. **Insert a microSD card**
4. **Home Screen**
5. **Frequently used functions**
6. **Clear Storage (Hard Reset)**



Action Index


Familiarize Yourself with the Phone and Accessories.....	3
Accessories	6
LED indicator.....	7
Insert the USIM/SIM card.....	8
Insert the microSD card	9
Familiarize Yourself With the Home Screen	10
Status indicator and program icons	11
Using the Start Menu	15
Return to the Home screen.....	16
Go back to the previous page.....	16
Switch to a Different Profile.....	17
Use the menu.....	17
Using the keypad lock.....	18
Unlock keypad	184
JOGGR tutorial.....	19
Use Voice Commander to control the phone.....	20
Using the Clear Storage	21

 

1.1 Phone and Accessories

Get to know the handset buttons, LED indicators, and related accessories.

 
Familiarize Yourself with the Phone and Accessories

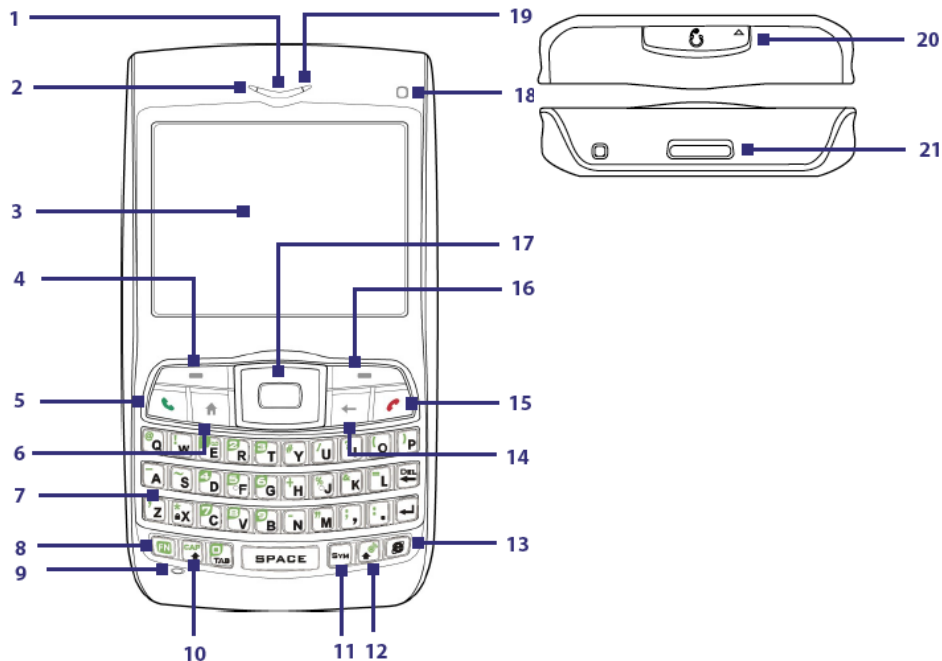


1

Getting to know your phone

 3



1	Speaker	Listen to a phone call.
2	LED Indicator	This indicator (green/red/amber) notifies you of the battery and network status of your phone.
3	Display Screen	
4	Left Soft Key	Press to perform the command shown in the label above the button.
5	Talk Button	Press to dial a phone number, answer a call, switch to another call, or put a call on hold. Press and hold to activate/deactivate speakerphone mode.
6	Home Button	Press to go to the Home Screen.
7	Qwerty Keyboard	This is similar to a standard keyboard on a PC. Use Qwerty keyboard to enter alphanumerical characters, and symbols.
8	 Button	Press once to let you type symbols (characters in green) and enter numbers in text fields. Press two more times for continuous symbol or number entries.
9	Microphone	Speak into the microphone when receiving or making a phone call or during voice recording.
10	 Button	Press to type a single capital letter. Press the FN key, then this key to type in all caps.
11	 Button	Press to open the Symbol table.
12	 Button	Press the  key and this key to open Comm Manager.
13	 Button	Press to open Internet Explorer Mobile.
14	Back Button	Press to go to the previous screen, or backspace over characters.
15	Hang Up Button	Press to end a call, or press and hold to lock the phone.
16	Right Soft Key	Press to perform the command shown in the label above the button.
17	Navigation Control Buttons/Center OK Button	Use to scroll left, right, up, or down. Press the center to use as the CENTER OK button.
18	Light Sensor	Dark conditions sensed here will activate a backlight under the keyboard.

 

19 LED indicator


This indicator (blue/green/amber) notifies you of Bluetooth and Wi-Fi connectivity status.

 
20 Sync Connector/
Earphone Jack

Pry open the plastic cover to connect the USB cable to synchronize data or recharge the battery. You can also connect the earphone to listen to audio media or use the phone's hands-free kit.

21 Release Lock


Press to release the back cover lock.

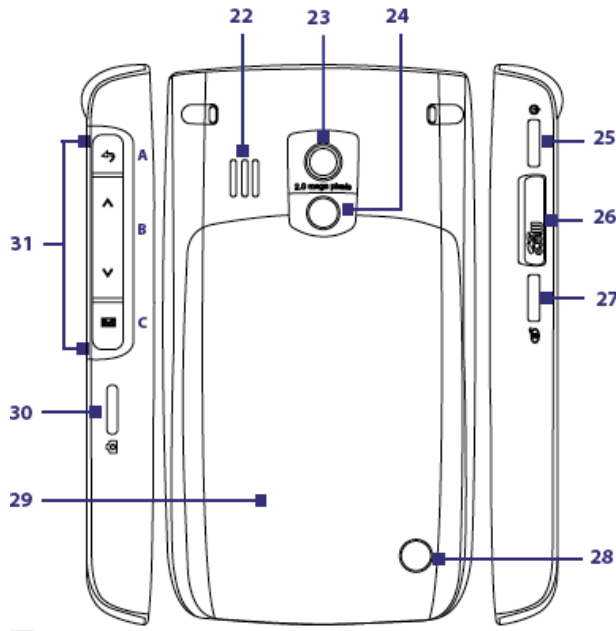



22 Amplifier speaker	When using the amplifier speaker, you can listen to system sounds, communication, and music.
23 Camera lens	CMOS lens with 2.0 megapixels.
24 Self-photo Mirror	Helps you take a photo of yourself by aligning your reflection in this mirror.
25 Power Button	Hold for 2 seconds to turn the phone on/off.
26 microSD Slot	Pry open the rubber cover to install microSD card.
27 Voice Recognition Button	Press to open the voice recognition program; Press and hold to open Voice Notes.
28 Car Antenna Connector	Lets you attach your phone to the car antenna for better network reception. Remove the back cover, then peel off the rubber cap and connect the antenna jack.
29 Battery Cover	Open the battery cover to install the battery, USIM/SIM card.
30 Camera Button	Press to open the Camera program.
31 JOGGR	Slide the JOGGR up/down to scroll the page, press twice to select an item, return to the previous page, or open the Messaging Center.

Accessories

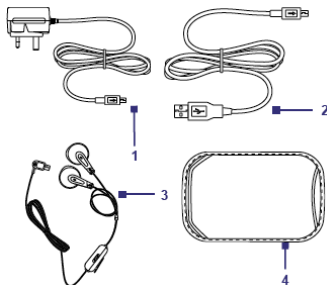

1 AC Adapter	Recharge the phone battery.
2 USB Cable	Connect your phone to a PC and synchronize data.
3 Stereo Headset	Provide a volume control slider and a TALK/END button. You can press the button to pick up a call or put a call on hold or press and hold the button to end the call. Plug into earphone jack to listen to audio files.
4 Pouch	Store your phone in the pouch to keep it away from dust and prevent scratches.



LED indicator

The left LED indicator (orange/red/green) is used for indicating the phone battery and network status.

The right LED indicator (blue) is used for indicating the Bluetooth status.

The table below is the representative meaning for each different LED indicator color:

Left LED	Status
Solid green	Battery is fully charged.
Blank	Battery case is empty, no USIM/SIM card inserted or phone is off.
Solid amber	Battery is charging or the phone is using ActiveSync to synchronize with a PC.
Solid red	Battery is not installed or battery is over discharged.
Blinking green	Connected to the network.
Blinking red	Battery very low (less than 10%).
Blinking amber	Battery temperature is higher or less than the functional limits of 0 to 48 degrees Celsius (32 to 118 degrees Fahrenheit), and has stopped charging.
Amber/Green LED off	Battery fault. The "Battery Fault" indicator (⚡) is displayed. In this case, the blinking green LED can be recovered by unplugging the AC adapter.
Right LED	Status
Blinking blue	Bluetooth mode set to "On" or "Visible" mode.
Blinking green	Connected to Wi-Fi network.



1.2 Insert the USIM/SIM Card



Your USIM/SIM (subscriber identity module) card is provided by your telecom service provider, it contains your basic data. For example the phone number and address book.

1




You will not be able to access/use any telecom services without a USIM/SIM. (Please contact the telecom service provider for more information regarding telecom services and USIM/SIM)

Insert the USIM/SIM card

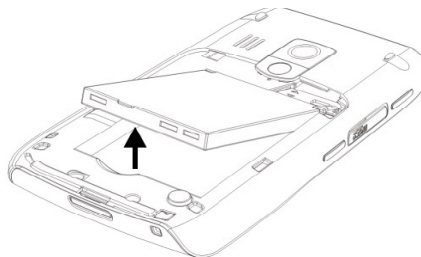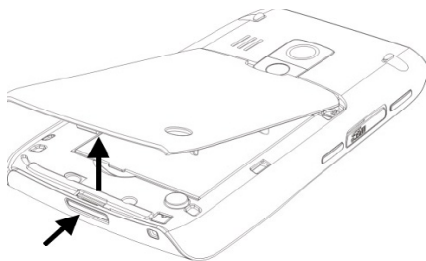


Procedures:

1. Open the USIM/SIM card lock, by pulling it down slightly and then towards you, at the top-right corner of the battery compartment.
2. Insert the USIM/SIM card into the slot at the top-right corner with its gold-plated contacts facing down. Push the USIM/SIM card all the way in until the USIM/SIM card locks into place.
3. Close the USIM/SIM card lock.

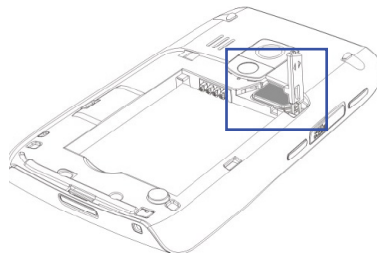

The USIM/SIM card slot.

 
8



1.3 Insert the microSD Card

Insert the microSD card. You can store information such as pictures, documents, and program data on the microSD card.

Insert the microSD card

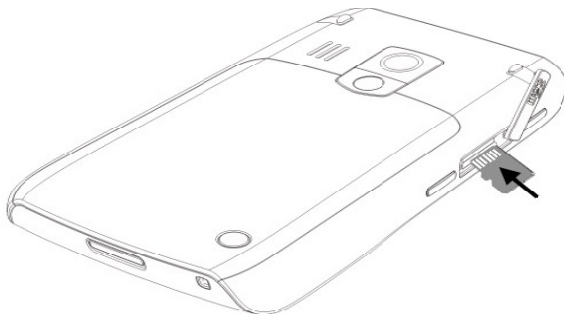


Procedures:

1. With the keyboard facing down, pry open the microSD cover on the right side of the phone.
2. Insert the microSD card into the slot with its gold contacts facing up, then replace the cover.



 To remove, press the microSD card to pop it out of the slot.




1.4 Home Screen


Familiarize Yourself with the Home Screen

Getting to know your phone

1

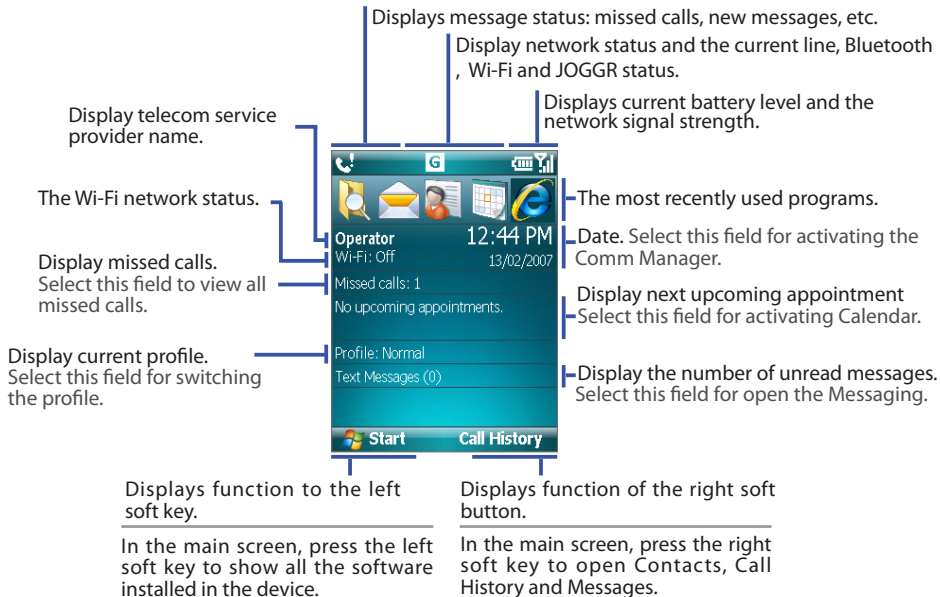

This picture above shows all items of the Home screen. When you use your phone, please press  **Navigation Control Buttons** to scroll the Home screen and view all items.

 

Status indicator and program icons

The following table lists common status indicators with their description.


ABC	Uppercase text input		GPRS available		Connecting to wireless network
abc	Lowercase text input		GPRS in use		Wi-Fi function enabled, but phone not connected to a wireless network yet
ABC	Continuous uppercase English letter input		3G available		Wi-Fi connected
12#	Numeric or symbol input (labeled in blue color)		3G in use		Speakerphone on
12#	Numeric or symbol input, locked		EDGE available		Dialing while no USIM/ SIM card is inserted
拼	PinYin input method		EDGE in use		Call on hold
	Ringer off		Signal strength		Calls forwarded
	Battery charging		Radio connected or no signal		Missed call
	Battery level		Radio off		Voice call in progress
	Low battery		Roaming		JOGGR disabled
	Very low battery		Sync error		JOGGR turned as scroll
	No battery or battery fault		Bluetooth on or visible mode		JOGGR turned as volume controller



	USIM/SIM card with fault		New Windows Messenger message		New text-message
	No USIM/SIM card installed		Microphone muted		New Message
	Vibrate call alert				

The following are some of the program icons. These programs have already been installed on the phone.


	ActiveSync	Synchronize data between the phone and the computer.
	Adobe Reader LE	Allows you to read PDF files on the phone.
	Audio Manager	Allows you to organize and manage the voice message files.
	Bluetooth Explorer	Allows you to search and browse for devices that have activated file sharing function.
	Calculator	Runs simple math calculations such as addition, subtraction, multiplication, and division.
	Calendar	Schedules appointment(s) information and creates meeting requests.
	Word Mobile	Allows you to view/edit Word documents.
	PowerPoint Mobile	Allows you to view PowerPoint documents.
	Excel Mobile	Allows you to view/edit Excel documents.
	Comm Manager	Allows you to efficiently turn on/off your phone, sync with the computer, mute the phone, access Bluetooth, enable/disable Direct Push, etc.
	Contacts	Records contact information.

 

	File Explorer	Allows you to browse and manage the files stored in your phone.
	Call History	Keeps track of all phone calls made, received, and missed.
	Internet Explorer	Browse the Internet and WAP webpages.
	Internet Sharing	Share the GPRS connection through USB or Bluetooth.
	Messaging	You can send/receive messages, e-mail and MMS.
	Messenger	Allows you to connect to the Microsoft Live Messenger Services for you to communicate with your Messenger contacts.
	MIDlet Manager	Download and install application programs in Java.
	Pictures & Videos	Organize and sort your media files.
	Quick Notes	Allows you to record frequently used text messages.
	Speed Dial	Allows you to create the dial entries for frequently dialed numbers or accessed programs.
	Settings	Configure the settings in your phone.
	SIM Manager	Allows you to manage contacts stored on the SIM card as well as copy the contacts onto the phone.
	Task Manager	Display and close the application program.
	Tasks	Used for tracing your working activities.
	Video camera	Records video clips of various modes and length.
	Voice Notes	Allows you to make a voice memo quickly using voice recording.



	Network Wizard	Detect the SIM card you are using and auto apply the appropriate settings for data services (MMS, Internet, etc)
	STK Services	Allows access to SIM Tool Kit(STK) services. For more information on STK services please contact the service provider.
	Audio Recorder	Allows you to record an audio clip and send it through MMS.
	Windows Live	Allows you to connect and use Windows Live Services.
	Windows Media Player	Play back the audio and video files in the phone.
	Windows Update	Connect to Microsoft website for updating your Windows Mobile.

 

1.5 Frequently used functions

In this chapter, several basic operating functions of the C730 mobile phone will be described. If you are using Windows Mobile™ products for the first time, please read the contents of this chapter carefully.


Action: Using the Start Menu

1 Select  **Start**

2




At the Home screen, select **Start**.

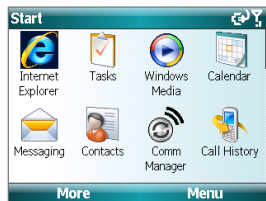

You can use

-  Switch application program.
-  Run application program.

 
Start Menu The Start menu is located at the bottom-left corner of the Home screen and displays various program icons that are spread across one or more screens. The shortcuts for the software bundled with the phone and the application programs installed by the user will be placed in the Start Menu.



Action: Return to the Home screen

- 1 Press Home Screen button

2

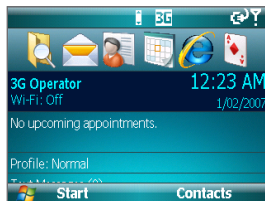

You can go back to the Home screen at any screen to run other tasks.

- You can press End Call button to return to the Home screen. However, if you are making a call, the call will be ended.

Action: Go back to the previous page

- 1 Press Back button

2



In the File Explorer, press **Back** to go back to the previous folder.

You can use the **Back button** to go back to the previous screen of a program.

- If you are editing text, the **back button** is used for deleting text.




Action: Switch to a Different Profile

- 1 Press **Power** button **Please do not [Press &hold]**



2

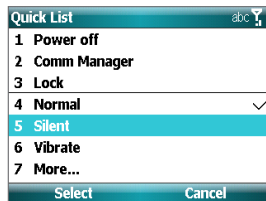

Use

- Switch the items in the quick list.
- Select the items in the quick list.

While in different situations, you can choose a different profile, for example, change the ringtone mode to vibrate mode.

Please refer to 10.5 Switch and Edit Profiles.

1

Getting to know your phone


Action: Use the menu

- 1 Select **Menu**



File Explorer window.

2

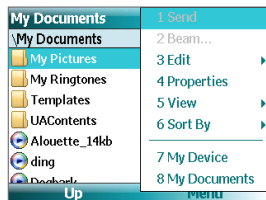

You can use



- Switch the items in the Menu.
- Select the items in the Menu.

There are many application programs having **Menu** that allow you to perform additional functions (such as open a file, save a file, etc). Press correct Left/Right corresponding button to activate the Menu.

Action: Using the Keypad Lock

- 1 Press and hold * or  Hang Up button

2

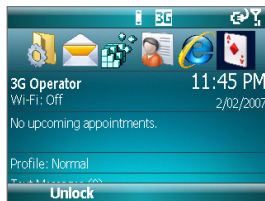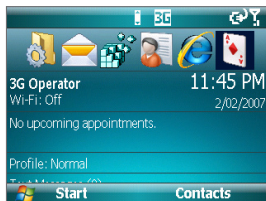


Keypad is locked.

Action: Unlock Keypad


- 1 Select  Unlock

- 2 Press *

3

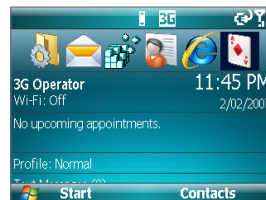


Keypad has been unlocked.

 

Action: JOGGR tutorial

1 Select  **Next**

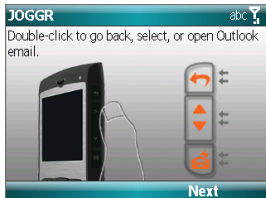

Double-click to go back, select, or open Outlook email. (Note 1)

2 Select  **Next**



Slide the scroll bar up or down to set the volume control or move the cursor. (Note 2)

3 Select  **Next**




To scroll continuously, quickly slide twice then hold the JOGGR.

1

Getting to know your phone

4 Select  **Done**

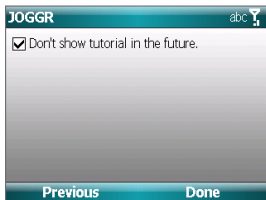

Mark the checkbox "**Don't show tutorial in the future**" to disable automatically run this tutorial during startup.

(Note 1)


Tapping the Back icon twice is the same as pressing the **Back button**.

Tapping the scrollbar twice is the same as pressing the **OK button**. Tap the Mail icon twice to open the **Messaging**.

(Note 2) Slide the scroll bar up or down to set the volume control or move the cursor.

When the phone starts up for the first time it will run the JOGGR tutorial. You can select **Settings > JOGGR** and mark the checkbox "**Open tutorial after 3 clicks within 10 seconds**". You can configure JOGGR operation by selecting **Configuration > JOGGR**, including:

- Scroll bar
- Adjust volume
- Adjust volume (only applicable to incoming calls and Windows Media)

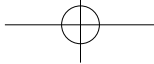


Action: Use Voice Commander to control the phone


- 1 Press  
Voice Recognition button

2

Getting to know your phone

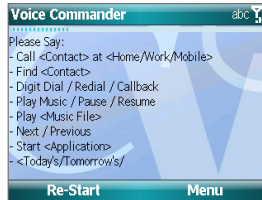

 Voice commander screen.
Follow the onscreen tips to
use voice control .



1

Getting to know your phone

1.6 Clear Storage (Hard Reset)

Clear Storage will remove all information from the memory, such as contacts, tasks, calendar appointments etc. Additionally installed applications and settings will also be cleared. You can sync the data to the computer prior to restoring to the default settings to avoid loss of data. When your phone is not functioning properly, you can try to restore the factory default settings. For data synchronization, please refer to Chapter 9 Synchronizing Your Phone. We recommend that you contact our customer service before using this function in order to avoid damage to your phone or data. Please go to the Dopod website member registration area and download the C730 2577 software installation files, then reinstall the following software:


- Cyberon Voice Commader/Talking Dictionary
- Info Feed
- Color themes.



The third-party softwares with the system may different according to the phone you purchased. Please contact customer service or visit Dopod website to download the latest software.


Action: Using the Clear Storage

1 Select **Start**

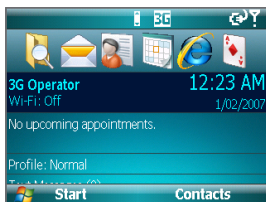


Open the Start Menu.

2 Select **Settings** > **Clear Storage**. Then press the **OK** button

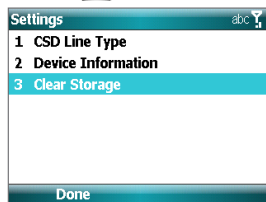


3 Enter **1234**
Then select **Yes**

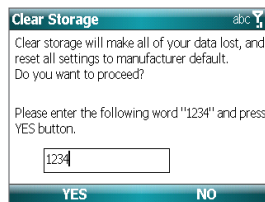

Enter 1234 and select **Yes**.
The phone will restart after resetting.

21

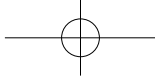



2

Topic

Learning Input Methods

In this topic, you will learn about...

1. Change Input Modes
2. Enter Texts
3. Deleting Texts by using Back Button
4. Clipboard



Action Index


Change Input Method	25
Enter Symbols	26
Enter Number	27
English texts	28
Using PinYin to input characters	29
Deleting characters	30
Using Editing Modes	31
Select text	32
Copy text	32
Cut text	33
Paste text	33
Undo	34
Move the cursor to prefix/suffix of text	34
Delete text in front of cursor	35
Delete text behind cursor	35



2.1 Changing Input Methods

Use the keypad to enter text such as Chinese and English characters, numbers, and symbols. Enter the characters through the English and PinYin as indicated.

 ! Chinese PinYin input method availability varies by countries.

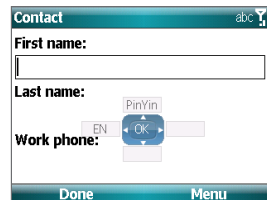


▲ Switching Input Methods.

2

Learning Input Methods

Action: Change Input Method

1 Press **FN key**
then press **SPACE** **Space**
key

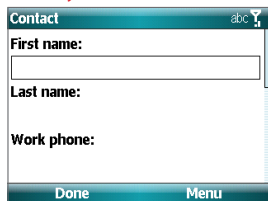

Switch input methods anywhere that text can be entered.

2 Select **Language**



 
Select the input language.

3 Select **<Input Method>**



Select the input methods, for example: EN (English).

25



2.2 Input Modes

This describes how to use the phone's built-in English, PinYin, and number input modes to input characters.

2

 To insert a new line break while in any input mode, press  **OK button**.

2.2.1 Symbols

Using the phone to enter various punctuation symbols.



 
 
 Symbol input method.

Action: Enter Symbols


1 Press  **SYM key**

2 Select  **<Symbol>**


3

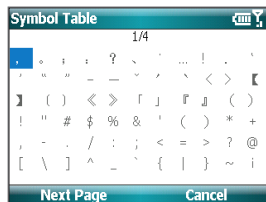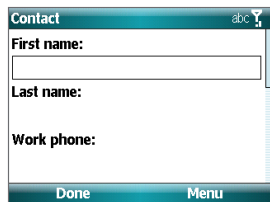

Press next page to switch to other pages.

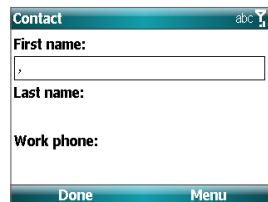

 Successfully entered the selected symbols.



2.2.2 Numbers

Using Numeric Input mode to enter numbers:



Numeric input illustration:

	Press FN key	Enter a single number
	Press FN key twice	Continuously enter numbers

▲ Entering numbers.

2

Learning Input Methods

Action: Enter Number

1 Press FN key twice

2

 
3 Press <Numbers>

If you only press once, entering a number will return to the original input method.

The icon located at the upper right corner indicates that you have switched to numeric input mode.

E.g. 022345678

27



2.2.3 English

This describes how to use the keyboard to quickly input English letters. To see how to switch to English input mode, please refer to the instructions in chapter 2.1.



English entering status:




First letter in upper case, followed by lower case letters.



All lower case.



All upper case.

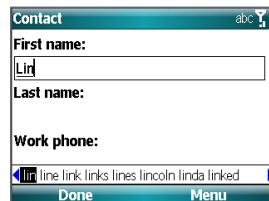


▲ English input method.

Action: English texts


1 Press <English>

2 Select <Word>


3 Press OK button

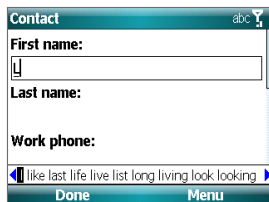


Please press the corresponding English keys on the keyboard to input letters.

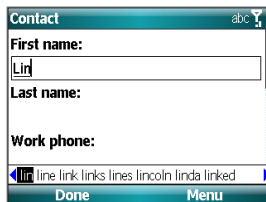

You can use the left/right keys to select words.

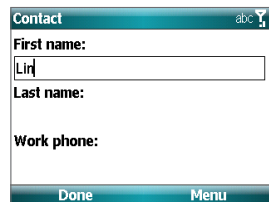

English word successfully entered.

 

2.2.4 PinYin

This describes how to use the PinYin quickly input mode to enter Simplified Chinese characters. To see how to switch to character stroke input mode, please refer to the instructions in chapter 2.1.



Enter the corresponding pinyin characters to input Simplified Chinese character. For example: to enter “王”, press the characters W, A, N, G.



▲ PinYin input.

2

Learning Input Methods

Action: Using PinYin to input characters

1 Press **W**

<PinYin characters>

2 Select <Characters>

3 Press **OK button**



For example: to enter “王”, press the keys W, A, N, G respectively.



Use the left/right keys to select the character.



Text successfully entered.

29



2.3 Deleting Texts by Using Back Button

You can use  **Back button** to delete a single character, or press and hold the Back button to delete all characters.


2

Learning inout Methods

Action: Deleting characters

1 Press  **Back button**

2

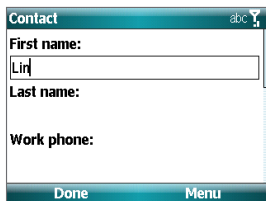

Contact abc


First name:
Lin

Last name:

Work phone:

Done Menu

You can use the left/right keys to move the cursor to the character to delete, then press the Back button to delete the character.

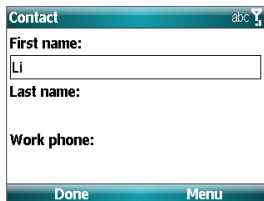

Contact abc

First name:
Li

 
Last name:

Work phone:

Done Menu

Successfully deleted a character. Hold the Back button to delete all characters.

30



2.4 Clipboard

You can use the clipboard to select characters, and then copy, paste or delete them.



There are two edit modes build in the clipboard:

Menu	Function
Edit1	Copy, paste, cut and select.
Edit2	Back, undo, delete and Hm/End.

2

Learning Input Methods

Action: Using Editing Modes

- 1 Press **FN key**
then press **Space**
key

Switch input methods anywhere that text can be entered.

- 2 Select **<Edit Mode>**

Select a edit mode, for example: Edit1

- 3 Select **<Edit Function>**

Select a edit function, for example: Select.

31

Action: Select text

 
- 1 Select  Select
- 2 Select  <Characters>
- 3 Press the  OK button

2

Learning Input Methods



Switch input methods anywhere that text can be entered.

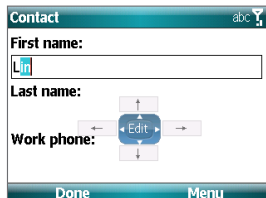


Select characters that you want to edit.



Characters selected.

Action: Copy text

 - 1 Select  Copy
- 2

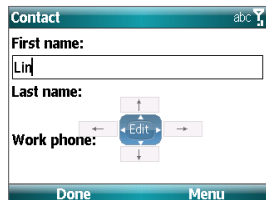

Characters saved in clipboard.

 


Action: Cut text

1 Select Cut



2

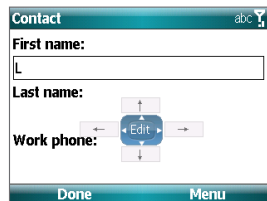


Characters saved in clipboard.

2

Learning Input Methods

Action: Paste text

 1 Select <Paste Place>

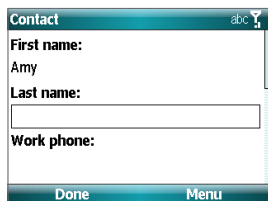


Use Navigation Control buttons to select the place you want to paste characters.

2 Press FN key then press SPACE, and then select **Edit1**



Select characters that you want to edit.

 3 Select Paste

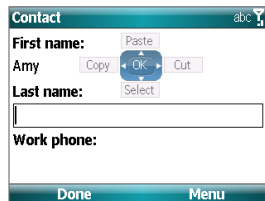

Characters pasted.

33

Action: Undo

- 1 Press **FN** key then press **SPACE**, and then select **Edit2**

2

Contact abc

First name: Amy

Last name: L

Work phone:

Done Menu

- 2 Select **Undo**

Contact abc

First name: Amy

Last name: L

Work phone:

Done Menu

Undo the previous operation.

- 3

Contact abc

First name: Amy

Last name: L

Work phone:

Done Menu

Already back to previous operation.

Action: Move the cursor to prefix/suffix of text

- 1 Press **FN** key then press **SPACE**, and then select **Edit2**

Contact abc

First name: Amy

Last name: L

Work phone:

Done Menu

- 2 Select **Hm/End**

Contact abc

First name: Amy

Last name: L

Work phone:

Done Menu

- 3

Contact abc

 
First name: Amy

Last name: L

Work phone:

Done Menu

The cursor moved to the end of text.



Action: Delete text in front of cursor

- 1 Press **FN** key
then press **SPACE** , and
then select **Edit2**

Use Navigation Control buttons to move the cursor after the character deleted.

- 2 Select **Back**

- 3 Select **Paste**

Characters deleted.

2

Learning Input Methods

Action: Delete text behind cursor

- 1 Press **FN** key
then press **SPACE** , and
then select **Edit2**

 
Use Navigation Control buttons to move the cursor before the character deleted.

- 2 Select **DEL**

- 3

Characters deleted.

35




3

Topic

Phone Functions


In this topic, you will learn about

 1. Phone Function
2. Making Phone Calls
3. Receiving Voice Calls
4. Call Options
5. Additional Information on Dialing
6. Setting Up Speed Dial Entries



Action Index

Phone Home screen	40
Disable Phone Function	41
Enable phone functions	42
Enter SIM PIN	43
Adjust Earpiece Volume	44
Dial from the phone screen	45
Dial from Contacts list	46
Dial from Contacts Details	47
Dial from Call History	48
Use speed dialing from Home screen	49
Use speed dial from Speed Dial Manager	50
Dial Contacts from Voice Commander	51
Answer Incoming Calls	52
Check missed calls	53
End call	53
Hold the call	54
Swap calls	55
Create Multi-party Conferencing	56

 

Enable/Disable speakerphone	57
Enable mute	58
Dial up voicemail	59
Make emergency calls	60
Make international calls	61
Use SIM card services (STK)	62
Create a speed dial	63
Edit a speed dial	64



3.1 Phone Function

When you begin to use the Dopod C730 phone functions, you will need to enter the SIM PIN in order to connect to the GSM mobile network. When using this phone, you can control wireless functions such as enable/disable the phone. You can also adjust the headset volume during a call or when using the device.

3

Phone Functions



3.1.1 Phone Functions

At the Phone screen, you can access, dial, search contacts or save phone numbers to the contacts list. Under certain circumstances (such as on a plane), you may need to turn off the phone functions. You can use the Comm Manager to enable/disable the phone's communication functions. When the phone function is off, you will not be able to receive calls, send/receive messages, or use HSDAP/3G/GPRS to connect to wireless mobile network. But other hand set functions such as browsing the calendar, listening to music, or playing games can still be used.


Action: Phone Home screen

1 Press  Call button

2

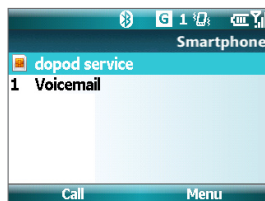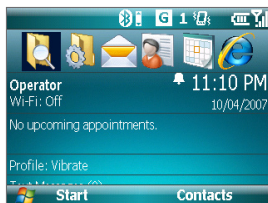


Switch to the Phone screen

 


Action: Disable Phone Function

- 1 Press **Power button**

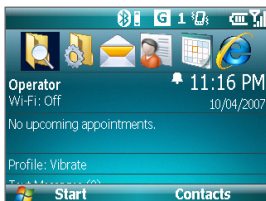

Press the Power button to activate the quick list.

- 2 Select **Comm Manager**
Then Press **OK**

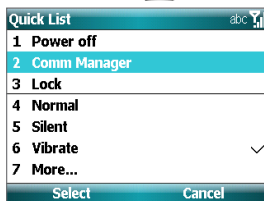

Use the Up/Down directional button to select the Comm Manager.

- 3 Select **2**
Then Press **OK**



Phone functions enable. Press to turn off the phone.

3


Phone Functions

- 4 Select **Exit**



You can also press End Call button to return to the previous screen.

- 5

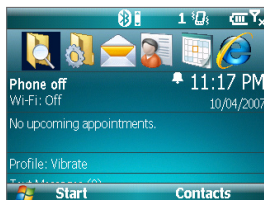


Home screen will display "Phone Off".




Action: Enable phone functions

- 1 Press **Power Button**

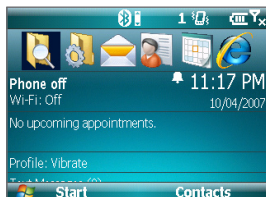

Press the Power button to activate the quick list.

- 2 Select **Comm Manager**
Then Press **OK**

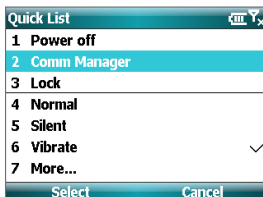

Use the Up/Down directional button to select the Comm Manager.

- 3 Select **Phone**
Then Press **OK**




While turning off the phone functions, enter the PIN code (please refer to section 3.1.2).

- 4 Select **Exit**




You can also press End Call button to return to the previous screen.

- 5

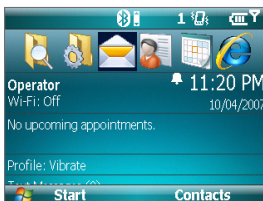


 The Home screen displays and your telecom service provider's name.



3.1.2 Enter SIM PIN

Each time you turn on the phone or activate the phone functions, you will need to enter the SIM card PIN (personal identification number) provided by your account's telecom service provider.

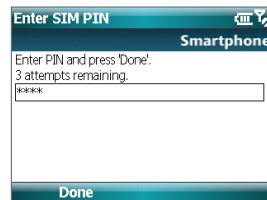


▲ Enter SIM PIN.

3

Phone Functions


Action: Enter SIM PIN

1 Enter <SIM PIN code>

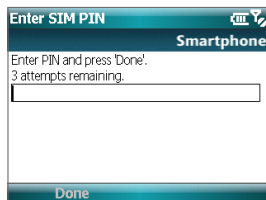


Enter the phone's SIM PIN code.

2 Select  Done

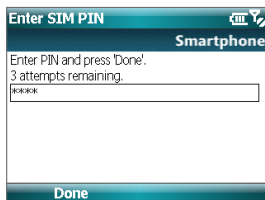

Please wait for the phone to verify the PIN code.

3

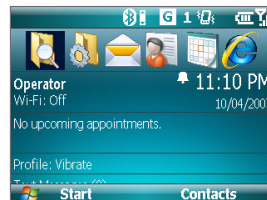

The  icon locate at the upper right corner indicates that you have turned the phone on.

43

3.1.3 Adjust Earpiece Volume

Adjust the earpiece volume, including headset, music, games, and ring tone sound tests. This does not include adjustments of the incoming call ring tones and reminders. You can also adjust earpiece volume during a call.



For sound settings, please refer to section 10.3; for profile settings, please refer to section 10.5.



▲ Earpiece volume adjustment screen

Action: Adjust Earpiece Volume

- 1 Scroll JOGGR
- 2 Scroll JOGGR

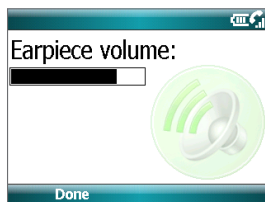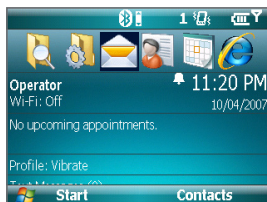




3.2 Making Phone Calls

You can dial calls directly from Home screen, phone screen, contacts, speed dial entries, call records, SIM Manager, or use the voice labels to dial to contacts by voice control.

3.2.1 Phone Home screen

Enter the dialing screen by pressing the call button; you will then be able to enter the phone number and make a call.

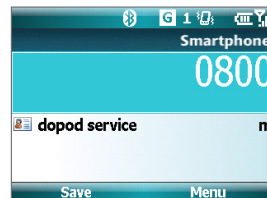

▲ Dialing from the phone screen.


3

Phone Functions


Action: Dial from the phone screen

- 1 Press  Call button
- 2 Enter <Phone Number>
Then Press  Call Button


3

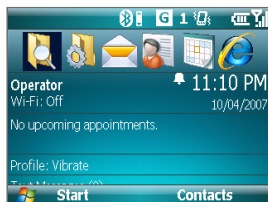

Press the Call button to open the phone screen.

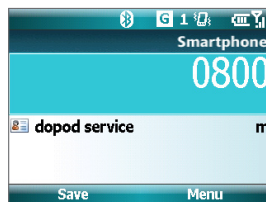

Automatically list the matched contacts.

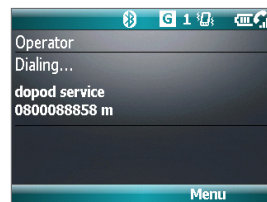

Making a call .

45



3.2.2 Dialing by Using Contacts

Choose the contact and the phone number in the Contacts List. You can use the Left/Right button to switch the contact's number.


To create a contact and to edit contacts, please refer to section 4.1 Contacts Descriptions.

3

Phone Functions

Following each contact's entry or phone number, "M" stands for mobile number, "H" stands for home number and "W" stands for work number.

In the Phone screen, you can perform search operation; for example, press the keypad button 3 for searching Contacts whose name begins with DEF.

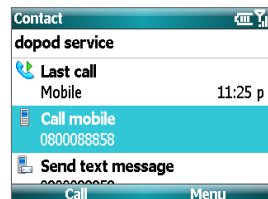


▲ Using Contacts application program to dial up recipients.

Action: Dial from Contacts list



1 Select Contacts

2 Select <the contact you wish to dial up>


3 Press Call button

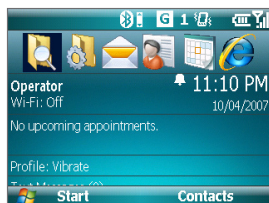

Open Contacts list.

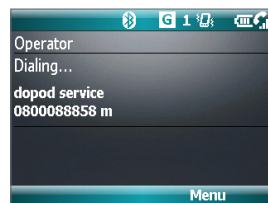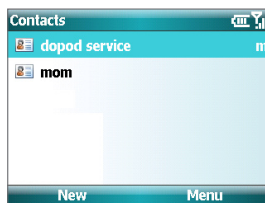


Dial the default number of the contact.

 


Action: Dial from Contacts Details

- 1 Select <Contacts>
Then Press OK

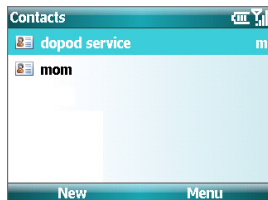


Open the contact's Contact Details that you wish to dial up.

- 2 Select <the contact you wish to dial up>

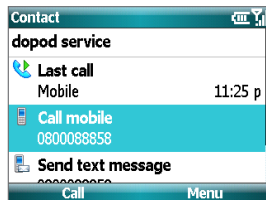

Select the contact's number you wish to dial up, for example: mobile number.


- 3 Press Call button

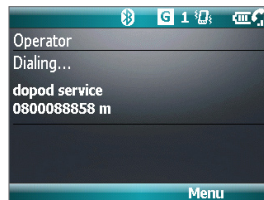

Dialing up the Contact.

3

 Phone Functions




3.2.3 Call History

Using Call History for dialing. The Call History includes incoming calls, missed calls, and outgoing calls.



Call History icon:


- : Missed calls
- : Received Calls
- : Outgoing calls

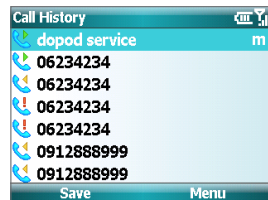

▲ Dialing from Call History.


Action: Dial from Call History

1 Select **Start**

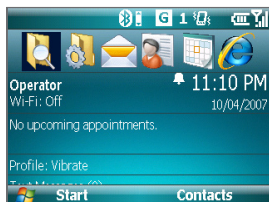


Open the Application program menu.

2 Select **Call History**
Then Press **Enter**

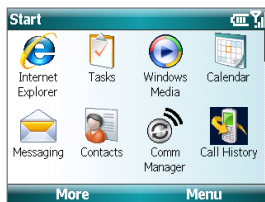

3 Select **<Contacts>**
Then Press **Call**
Button

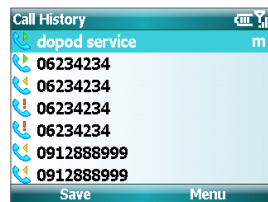


Select the contact you wish to dial up.



3.2.4 Speed Dial

You can set speed dial entries/shortcuts for the frequently dialed contact numbers or frequently used application items. You will only need to press and hold the corresponding speed dial entry/shortcut button to dial up the contact or access the application program.

If you set the corresponding number as two digits, such as 14, then you can first enter 1 and then hold 4 to activate the speed dial. For speed dial settings, please refer to section 3.6.

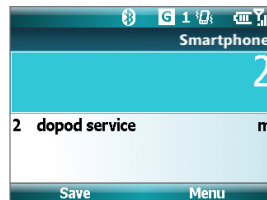


▲ Using speed dial buttons to correspond to function dialing.

3

Phone Functions


Action: Use speed dialing from Home screen

- 1 Press and hold <Speed dial corresponding button>

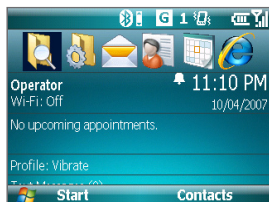


At the Home screen, press the speed dial button.

2

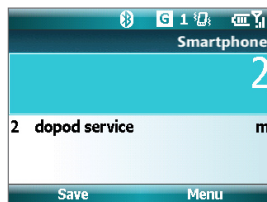

3

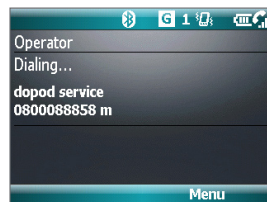


You have successfully dialed up the contact.

Action: Use speed dial from Speed Dial Manager

- 1 Select  **Start**
- 2 Select  **Speed Dial**
Then Press  **OK**
- 3 Select  **<the contact you wish to dial to>**

Phone Functions


3

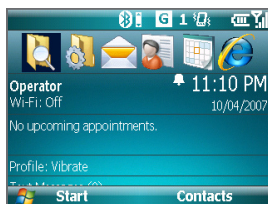

Open the Start Menu.




Open Speed Dial Application program.

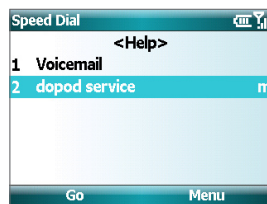

Speed Dial menu.

- 4 Press  **Call button**

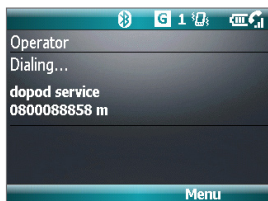


Dialing to the Contact.



3.2.5 Voice Commander for Dialing

The voice tags voice control dialing function will allow you to quick dial using the pre-recorded voice tags.

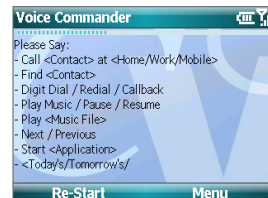


▲ Message screen for voice tags voice control dialing.

3

Phone Functions


Action: Dial Contacts from Voice Commander

1 Press Voice Commander button

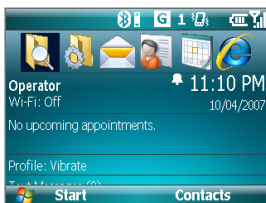


Press the Voice Commander button on the left side of the handset.

2 Say **Call <Contact>**
<Home/Work/Mobile>

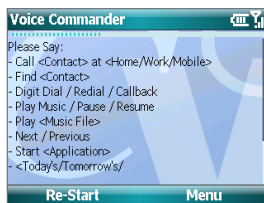


Say the voice tag after the prompt.

3

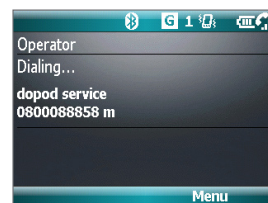

Dialing the Contact.

 51




3.3 Receiving Voice Calls

When you receive an incoming call, the phone will display the information on the screen for the user to decide whether to answer or ignore the call. When you are already taking a call, you will still be able to press the Home button to return to the Home screen at any time, or operate other application programs.

3

3.3.1 Answering Incoming Calls

Use the phone to answer incoming calls from other contacts.

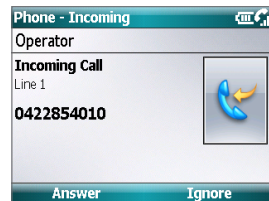


▲ Incoming call display screen.


Action: Answer Incoming Calls

- 1 Press Call button or select Answer


2

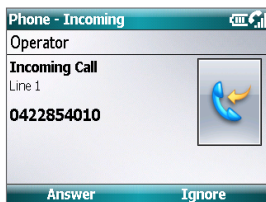

Incoming call information.

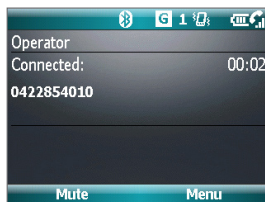


Answered incoming calls.

 

Action: Check missed calls

1 Select Missed Calls

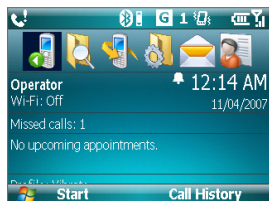


At the Home screen, use the directional buttons to move to the Missed Calls item.

2 Press OK button



3

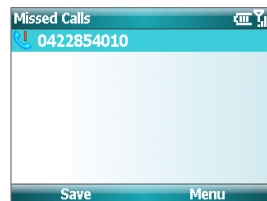


Display the history of all incoming calls.

3


Phone Functions

Action: End call

1 Press Hang UP button

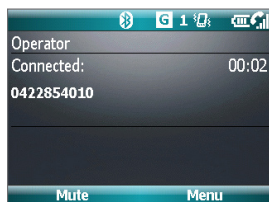

2

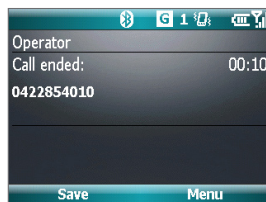

Call ends.




3.4 Call Options

Set up the “During Call” options. You can choose to use Flash, activate mute, Speakerphone, or Conference etc.

3.4.1 Call Waiting

You can use call waiting to hold the current call. When you use call waiting you will still be charged for the minutes used.


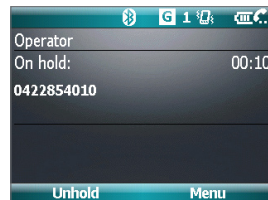


▲ Swap to another call during a conference connection.

Action: Hold the call

1 Select  **Menu** >
Hold

2

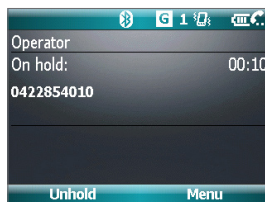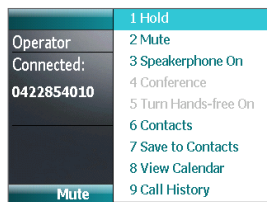


Call is held. To cancel, please select “Unhold”.



3.4.2 Swap calls

You can swap between two calls.

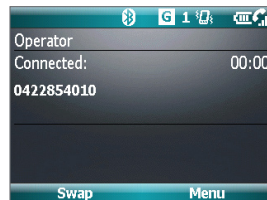


▲ Swap to another call during a conference connection.

3

Phone Functions

Action: Swap calls


1

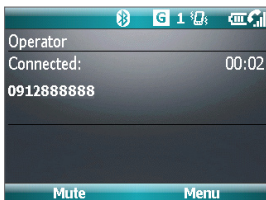

While you are taking a call , another caller is received.


2

Select  Answer

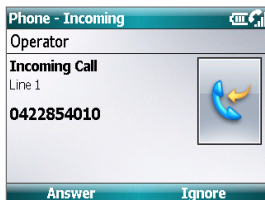

3

Select  Swap

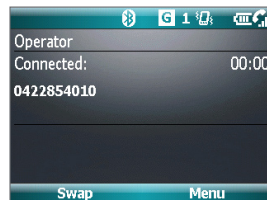

Swapping to the other call.


55



3.4.3 Conference Call

You can hold one call, then dial up a second phone number, or answer a new incoming call during the current one.

! Not all service providers support multi-party conferencing, please contact your service provider for more information.



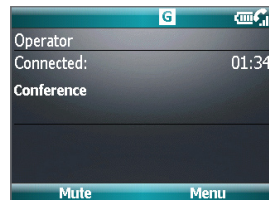


▲ Speakerphone activated screen.


Action: Create Multi-party Conferencing

- 1 Select Menu
- 2 Select Conference Then Press OK

3

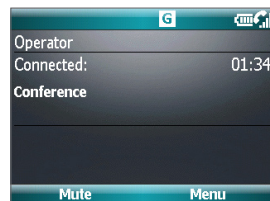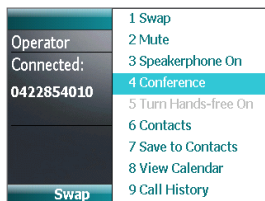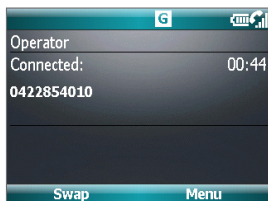

Multi-party Conferencing is created.

 


3.4.4 Enable/Disable speakerphone

Use the built-in speakerphone for conversation with callers without holding the handset. Using the speakerphone allows other people to listen in to the conversation.



While using the speakerphone, please do not place the handset close to your ears to avoid damaging your hearing.

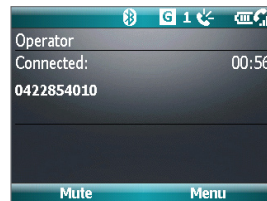

▲ Speakerphone activated screen.

3


Phone Functions

Action: Enable/Disable speakerphone


1 Select **Menu** > **Speakerphone On**

2


3 Press **Menu** > **Speakerphone off**

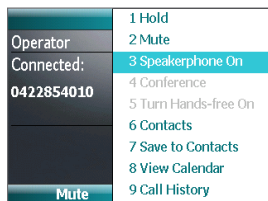

You can also press and hold **Call button** to activate the speakerphone function.

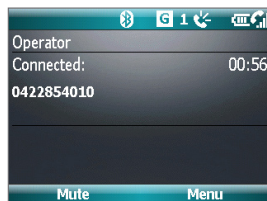


After speakerphone is activated, the upper right screen corner will display .

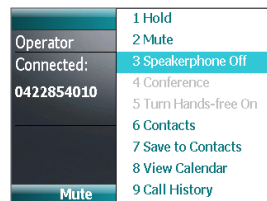


You can also press and hold **Call button** to deactivate the speakerphone function.

 57



3.4.5 Mute

During a call, you can temporarily turn off the handset microphone to prevent the person on the other side from hearing your voice.

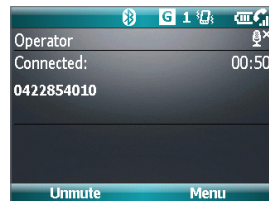


▲ Enable mute.


Action: Enable mute

- 1 Select  **Menu** > **Mute**

2

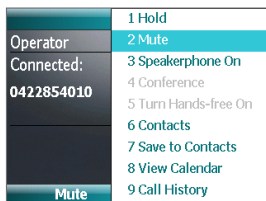

You can also select the Mute key directly on the screen.

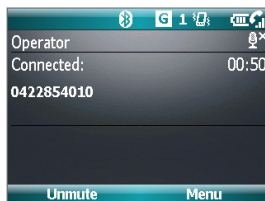

After Mute is activated, the upper right screen corner will display  icon.




3.5 Additional Information on Dialing

To listen to voicemail messages, you can dial directly to the voicemail number (provided by the service provider) from the phone screen. The first slot of speed dial is usually setup as the voicemail number; you can also use other speed dials to call voicemail. Your service provider will provide you with your voicemail number.

3.5.1 Voicemail

When your phone cannot be answered, the telecom system will automatically connect the incoming call to voicemail. You can dial up voicemail to listen to your messages.

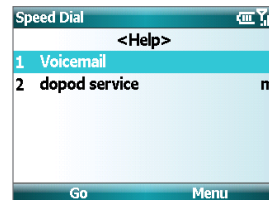


▲ Dial up voicemail from the Speed Dial application program.

3

Phone Functions

Action: Dial up voicemail

1 Select Start

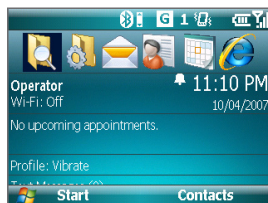


Open the Start Menu.

2 Select Speed Dial
Then Press OK button



Activate Speed Dial.

3 Select Voicemail
Then Press Call button

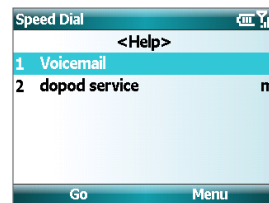

You can also press and hold the speed dial button 1 directly on the Home screen.


59



3.5.2 Emergency calls

If you need to dial the local emergency number, do so by dialing directly from the phone screen. When the phone functions are off or keypad is locked, you can still make emergency calls.


! SIM card may store other emergency help numbers, please ask your service provider for more information.

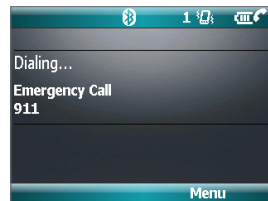

▲ Making emergency calls.


Action: Make emergency calls

1 Enter <the emergency phone number> Then Press Call Button

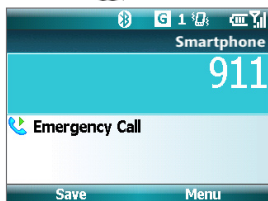


It is possible to dial emergency numbers when the Home screen or keypad is

2

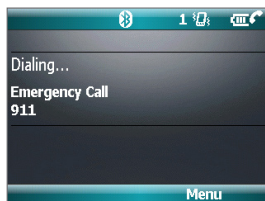


Making emergency calls.

 

3.5.3 International calls

Use the phone for international dialing. International dialing code includes the country codes for both you and your recipient.

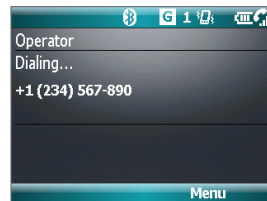


▲ Making international calls.

3

Phone Functions

Action: Make international calls


1

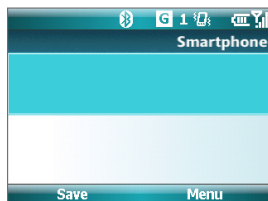

Dial from the Home screen or the phone screen.

2


Press and hold Enter **<phone number>**

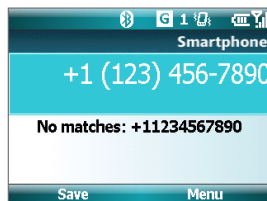

"+" will replace the country code for your current location.

3

Press **Call button**

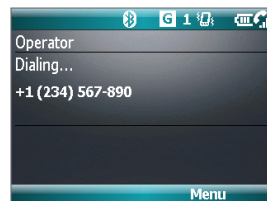

Make international calls.

61



3.5.4 SIM card services (STK)


You can use the various information services, such as calling customer services and voicemail, built into the SIM card by your service provider. To use the SIM card services, please first insert your SIM card into the phone. SIM card information services may vary depending on different service providers.

3

Phone Functions


Action: Use SIM card services (STK)

1 Select  **Start**

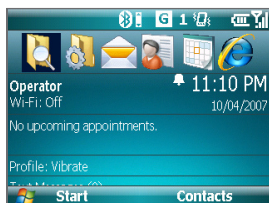

Open the Start Menu.

2 Select  
(STK Service)
Then Press  **OK button**

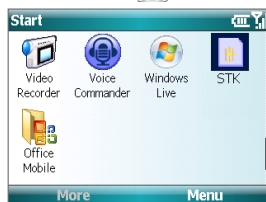


The displayed name on the STK Service is your service provider's name.

62



3.6 Speed Dial

You can create a speed dial entry (or shortcut) entries for frequently dialed numbers or accessed programs.

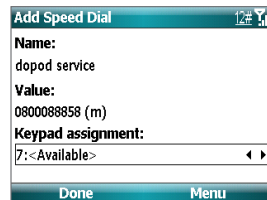


▲ Speed dial settings screen.

3

Phone Functions


Action: Create a speed dial

1 Select **Contacts**

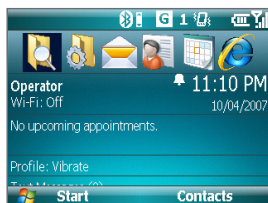


Activate Contacts list.

2 Select **<Contacts>**
Then Press **OK**

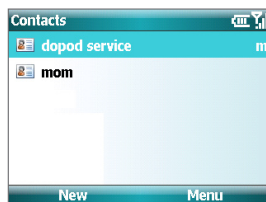

Choose the contact to set up for speed dialing.

3 Select **<the contact information to setup>**

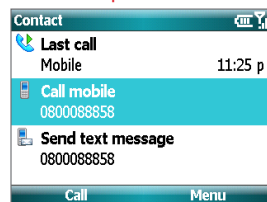


Choose the information item to set up, for example: mobile number.


63



- 4 Choose **Menu** >
Add to Speed Dial

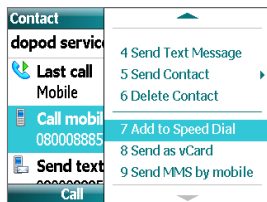


- 5 Select **<keyboard assignment>** Then select
 Done

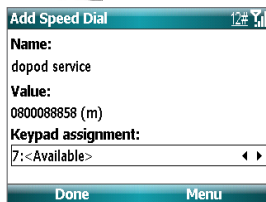

Use the Left/Right directional buttons to choose the corresponding numeric key.


- 6

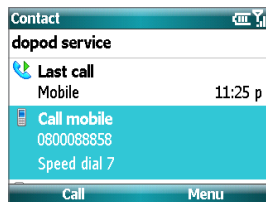

You have successfully added the speed dial entry.


Action: Edit a speed dial

- 1 Select **<Dial entry>**
Then Press **OK**

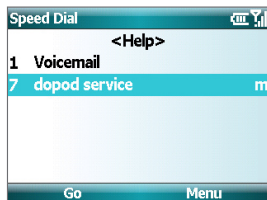



Select the speed dial entry you wish to edit.

- 2 Enter
<field you wish to edit>

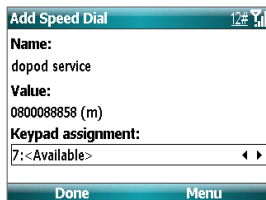

- 3 Select **Done**

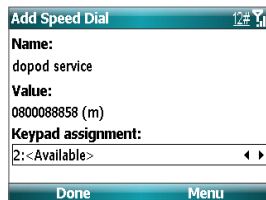

 

4

Topic


Manage Personal Information

In this topic, you will learn about...

1. Contacts
2. Calendar
3. Tasks
4. Voice notes

Action Index

Open Contacts from Home screen.....	69
Open Contacts application program	69
Add new Contact to Outlook	70
Set up contact's extension number dialing	71
Add new SIM card contacts	72
Copy SIM card contacts to the phone.....	73
Copy phone contacts to SIM card	73
Search contact by name	74
Search contact by phone number	75
Dial the Contact	75
View and editing contact	76
View the contact's call history.....	77
Use the contacts filter.....	78
Set up contacts categories.....	79
Use MMS to send contacts.....	80
Send contacts via Bluetooth	81
Send contacts via Text Message	81
Open Calendar	82

 

Open Calendar from Home Screen.....	83
Add new appointments.....	83
View and editing appointments	85
Switch the calendar view.....	86
Appointment reminder screen.....	87
Send Appointment via MMS.....	88
Beam appointment via Bluetooth.....	89
Configure Calendar options	90
Send Invitation to Attendess of an Appointment.....	91
View Attendess of an Appointment.....	92
Open the Tasks	93
Add new tasks	94
Edit a task	94
Set task as complete.....	95
Open voice notes	96
Add a new voice note	97
Play a Voice Note	97
Rename voice note	98
Delete voice note	98



4.1 Contacts

You can add new contacts and information for contacts. Setting up communication information for the contact will allow you to connect with the person quickly or browse the contact's information. Contacts will be saved in the phone memory. You can also sync the contacts info with Microsoft Exchange Server® or Microsoft Office Outlook® on a personal computer through ActiveSync®. In addition you can also fill out each information field including category, e-mail, address, pictures, and ring tones. To sync your phone, please refer to Chapter 9.

4


4.1.1 Adding new contacts to the phone

You can add new contacts to Outlook and their information to the phone. Setting up the various communication methods for the contact will allow you to connect to the person quickly.


In the contacts list entries, "M" represents mobile number, "H" represents home number, and "W" represents work number.



The  icon in front of the Contact's name indicates that the data entry is stored in the internal memory (Outlook contacts);  icon indicates that the data entry is stored in SIM card;  icon indicates that the data entry represents a contact in Windows Live.

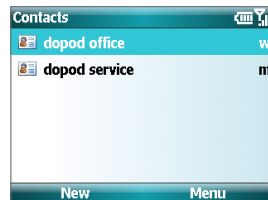

▲ Contacts application progra

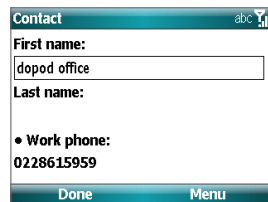


▲ Enter various information for the contact




Action: Open Contacts from Home screen

1 Select  **Start**

2

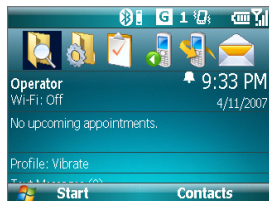

Open Contacts application program

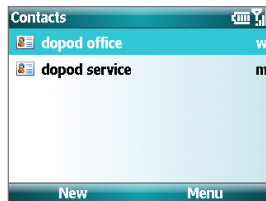

Contacts screen

4


Manage Personal Information

Action: Open Contacts application program

1 Select  **Start**

2 Select  **Contacts**
Then Press  **OK**


3

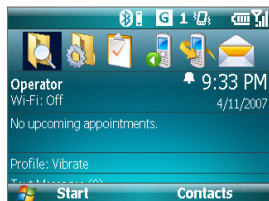

Open Program Files




Open Contacts application program

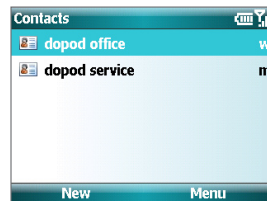

Contacts screen

 69




Action: Add new Contact to Outlook

1 Select **Contacts**


2 Select **Outlook Contact**
Then Press **OK**

3 Move to **last name**
and **first name**. Enter
<Contact's name>

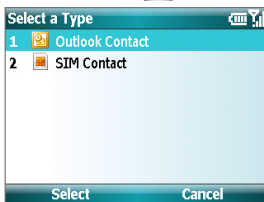

4

4 Select **Done**

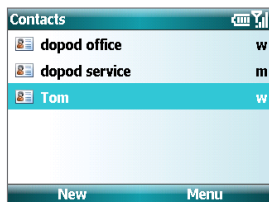

Managing Personal Information




You can also use Microsoft Office Outlook® on a personal computer to set up the contact's picture, then sync the info to the phone via ActiveSyncR or the Windows Mobile™ Device Center in Windows Vista™.

Contact's information fields:

Last Name	First Name	Office phone number 1, 2	Mobile Number 1, 2
Picture	E-mail 1, 2, 3	Instant Message 1, 2, 3	Work phone number
Car Phone Number	Work Fax Number	Home Fax Number	Assistant Phone Number
File As	Company	Department	Job Title
Home Address	Other Addresses	Notes	Nickname
Manager	Government ID	Account Name	Customer ID
Assistant	Home number 1, 2	Category	Radio Phone Number
Office Location	Birthday	Spouse	Custom ring tone
Pager	Web Page	Work Address	Anniversary
Children			


Action: Set up contact's extension number dialing

1 Select  Menu >
Insert Pause

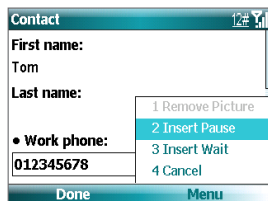

In the contacts editing screen, enter the pause symbol after the phone number.

2 Input
<extension number>

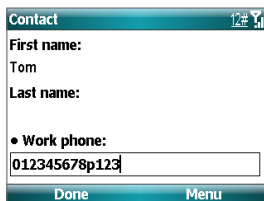


Enter the contacts extension number, for example: 123.

4.1.2 SIM Card Contacts

You can use “Contacts” and “SIM Manager” to browse, add, delete and edit the contact information stored on your SIM card.

When you replace the SIM card in the phone, the original contacts on the SIM card will change to the new SIM card contacts. However the phone’s Outlook contacts will not be changed. You can enter the name and phone number for SIM card contacts. But you will not be able to specify other information fields such as category, e-mail, address, pictures, and ring tones. To use the SIM Card Manager, please refer to section 11.5.

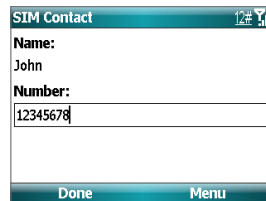

▲ Editing SIM card contacts.

Action: Add new SIM card contacts


1 Select  Menu

2 Select  SIM Contact
Then Press  OK

3 Enter <contact's name>
and <number>. Then
Select  Done



Contacts screen.

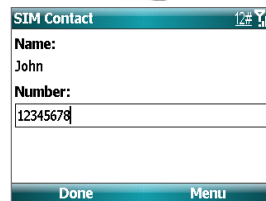

Saves the contacts
information onto the SIM
card.

 


Action: Copy SIM card contacts to the phone


1 Select Menu > Sim Manager



2 Select <SIM Contact>

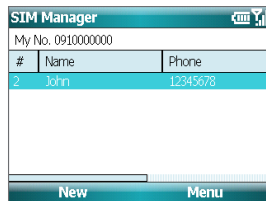

3 Select Menu > Save to Contacts

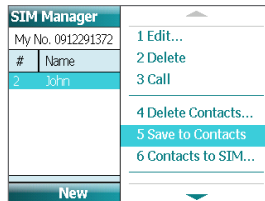 


4


Manage Personal Information

Action: Copy phone contacts to SIM card

 
1 Select Menu > Save to SIM

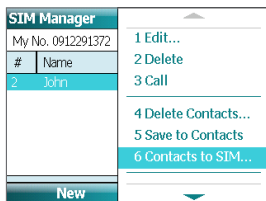

2 Select <the number to be copied>

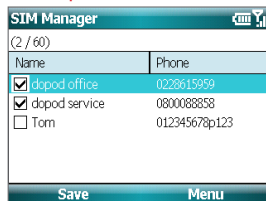 

3 Select Done

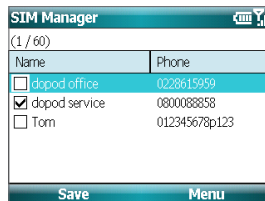 

Select contacts you want to copy to SIM.

Save to SIM.


73



4.1.3 Search Contacts and Dial

You can perform search by contact's name and number(s). For example, when you press **9 wxyz**, it will search for contacts names with English letters wxyz.


Using T9 predictive text input mode to search for contacts. Please refer to section 10.10 Assistant Tools and choose the input mode to use for "Smartdial Settings"

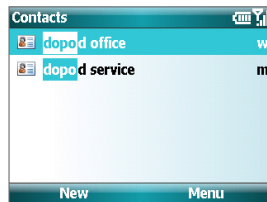

▲ Searching contact by name.


Action: Search contact by name

- 1 Enter <word to search>
- 2 Enter <word to search>

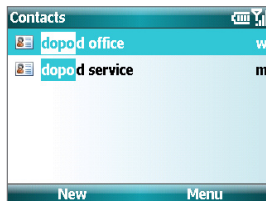

Found words are highlighted. You can continue to enter the next word.

3

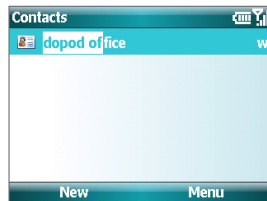


You have successfully found the contact you were searching for.




Action: Search contact by phone number

1 Enter <word to search>

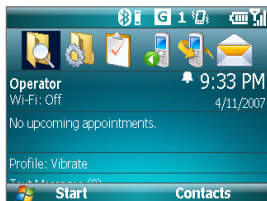

Search according to contact's phone number. For example, enter 0912.

2

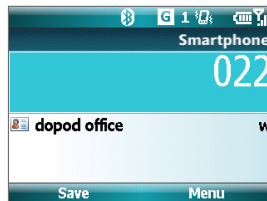

Contacts that have phone numbers starting with 0912 will be highlighted.

4

Manage Personal Information


Action: Dial the Contact

1 Select <the contact you wish to dial to>



You can follow the search methods introduced in this section to select the contact.

2 Select <number> Then select Call

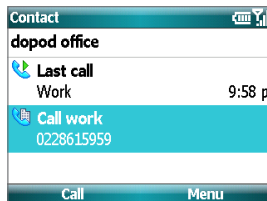

Select the contact's number. For example, Mobile Number.

3




Dialing the Contact.

75



4.1.4 View & Edit Contacts

You can view a contact's information, make calls, send messages or e-mail, and update each contact's information to keep the contact's information correct and up-to-date. To add a new contact, please refer to section 4.1.1.

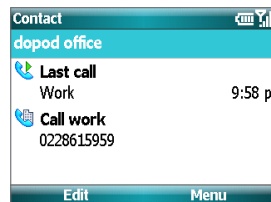


▲ Viewing contact information .

4

Managing Personal Information


Action: View and editing contact

- 1 Move to **<contact to view>**
Then Press **OK**

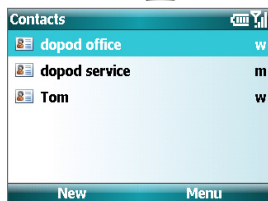


Select the contact you wish to view.

- 2 Select **<Contact>**
Then Press **Edit**

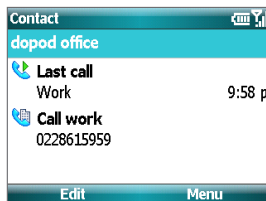


You can also edit the contact directly from Menu > Edit.

- 3 Edit **<Item>**
Then Press **Done**

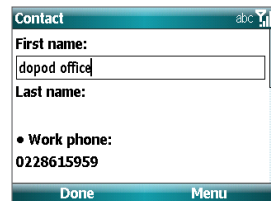

 For editing contacts, please refer to section 4.1.1.




Action: View the contact's call history

- 1 Move to 
<contact to view>
Then Press  OK



Select the contact you wish to view.

- 2 Move to 
<Phone number>
Then Press  Dial

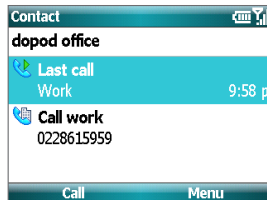

If you have ever called the contact, the call history item will appear in the View contact's information screen.

3




4

Manage Personal Information

4.1.5 Contacts Filter


You can use category sorting to quickly search for contacts. For contacts sorting setup, please refer to section 4.1.4 Editing Contacts.

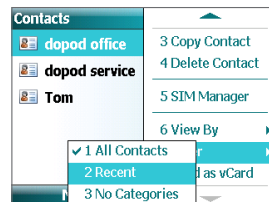

▲ Using category sorting to manage contacts.

Action: Use the contacts filter

1

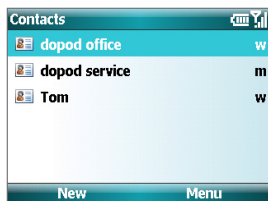

In the Contacts screen, use the sorting function to switch category.

2

Select 
Menu > Filter >
<category to switch>

 


Choose the category you wish to switch to.

3




Browse contacts under this category.




Action: Set up contacts categories

- 1 Select **Menu** > **Edit**

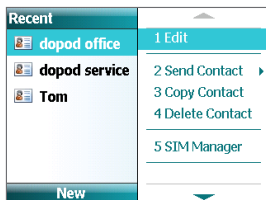


Contacts information edit screen.

- 2 Select **Categories**
Then Press **OK**

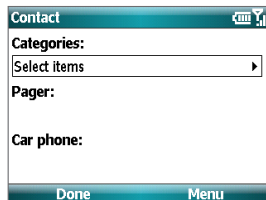


- 3 Select **<Categories>**
Then Press **OK**

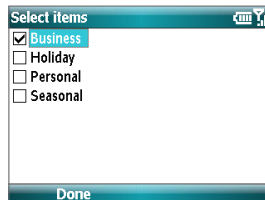

Choose the category you wish to set up.

- 4 Select **Done**

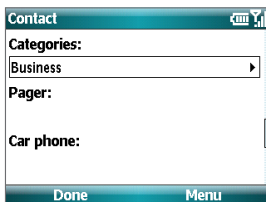

Category setup is complete.

- If you wish to add or delete contacts category groups, please modify the category groups from Microsoft Office Outlook® on a personal computer, then sync to the phone. For sync information, please refer to Chapter 9.

4

Manage Personal Information




4.1.6 Send Contacts Information

You can transfer contacts information via vCard (Note 1), MMS or use Bluetooth with other people. For use SMS, please refer to Section 5.2; for use MMS, please refer to Section 5.3; for Bluetooth connection, please refer to Section 7.2.

(Note 1) vCard: Electronic Business Card. Used to record your contacts' information. You can send your own vCard to other phones or computers that have vCard compatibility.

If you want to use Bluetooth to transfer the data, the Bluetooth on the receiver side must be set as searchable or it must have been matched with your handset. For setting of Bluetooth, please refer to section 7.2.

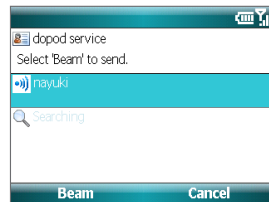


▲ Transfer contacts through Bluetooth.

Use MMS to send contacts

You can use the following procedures to share contacts information via MMS:

- Under the Contacts List, choose the contacts you wish to transfer, and then select  **Menu > Send as vCard**
- At the MMS Edit screen, choose the **recipient** or enter the **recipient phone number**
- After editing is completed, select  **Send**.

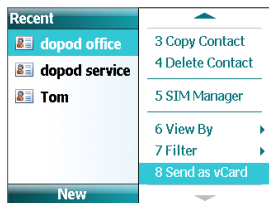


▲ Category setup is complete.




Action: Send contacts via Bluetooth

1 Select **<Contact to send>**

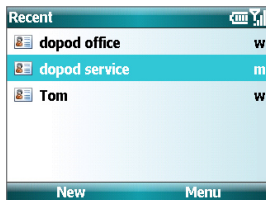


2 Select **Menu > Send Contact > Beam**

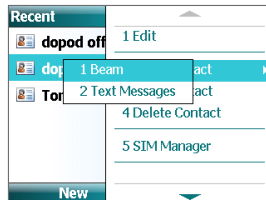

Please confirm both transmitter and receiver have activated the Bluetooth function.

3 Select **<device to switch>**. Then Select **Beam**

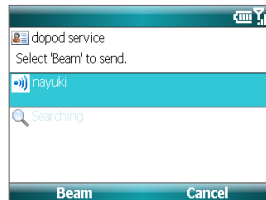


To cancel exchange, select **Cancel**. After the transfer is completed, press **Back** button to exit.

4


Manage Personal Information

Action: Send contacts via Text Message


1 Select **<contacts to transfer>**

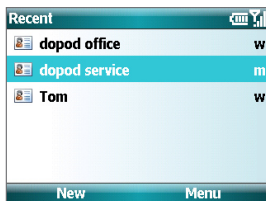

2 Select **Menu > Send Contact > Message**

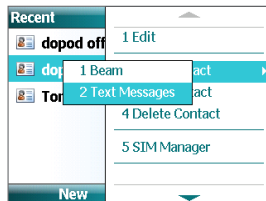

3 Select **<the number to be sent>**. Then Press **Done**

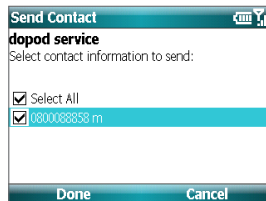

For the following SMS transmission procedure, please refer to Section 5.2 Sending SMS.

81




4.2 Calendar

You can use the calendar to schedule appointments, including meetings and other events. Your appointments will be displayed on the Home screen just before the scheduled time.

4.2.1 Use Calendar


You can add a new appointment and set the Start/End date and appointment status information. You can customize your personal schedule and set up a reminder to display before the appointment start time.

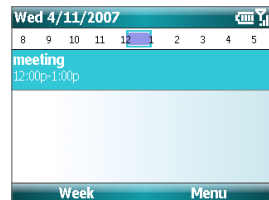

▲ Calendar application program.

Action: Open Calendar

1 Select Start

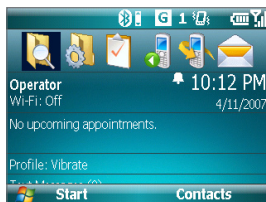


Open Start Menu.

2 Select Calendar
Then Press OK



Open Calendar application
program.

3

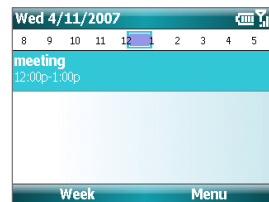


Calendar Home screen.



Action: Open Calendar from Home Screen

- 1 Select 
<appointment item>
Then Press  OK

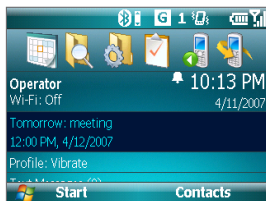

2




Calendar screen.

4


Manage Personal Information

Action: Add new appointments


- 1 Select 
Menu > New
Appointment

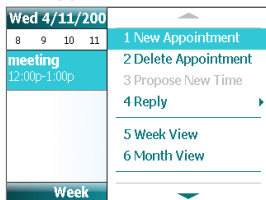

- 2 Enter <appointment
subject>

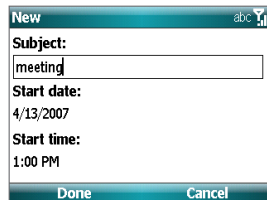

- 3 Enter <other details>
Select  Done

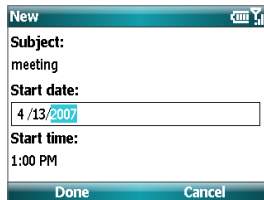


(Note 1, 2, 3)

83



4

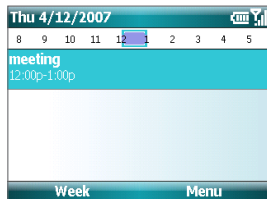

(Note 1) Appointment information field:

Subject	Appointment subject
Start Date	Appointment start date
Start Time	Appointment start time
End Date	Appointment end date
End Time	Appointment end time
All Day Event	Displayed on top of calendar only and will not take up time slots
Location	Appointment location
Attendee	Appointment attendee
Reminder	Appointment reminders
Occurrence	Appointment re-occurring number of time or frequency
Status	Appointment status
Sensitivity	Appointment confidentiality
Notes	Notes

(Note 2) The number of times the appointment re-occurs


Once	Appointment occurs only once
Same day every week	Appointment occurs on same day of every week
Same day every month	Appointment occurs on same day of every month
Same day every year	Appointment occurs on same day of every year

(Note 3) Appointment status:

Busy	Takes up this time slot
Free	Will not take up this time slot. You can schedule other appointments for the same time slot.
Tentative	Unconfirmed appointment
Outside	This Appointment will take place outside of the office



 When you set your operating mode to "Automatic" and if the occurring appointment is set as "Busy", the phone automatically switches to "Vibrate" mode.



4.2.2 Viewing and editing appointments

You can view and edit appointment contents. To edit appointment contents, please refer to section 4.2.1 Adding New Appointments.

From the weekly view screen, the filled in blocks indicates the appointment time, line on the side indicates an all day event. Each appointment status is represented with a color block:

- Busy: deep blue
- Out of Office: Magenta
- Tentative: light blue
- Free: White

Monthly View date block icon:


-  :Indicates there are appointments in the morning on that day
-  :Indicates there are appointments in the afternoon on that day
-  :Indicates there are appointments both in the morning and afternoon on that day

4

Manage Personal Information


Action: View and editing appointments

- 1 Select 
<appointment to view>
Then Press  OK

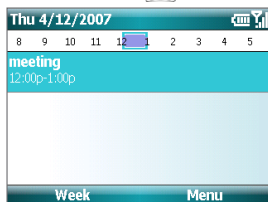


Use the Left/Right directional button to select the date.

- 2 Select  Menu >
Edit

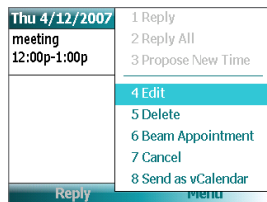

Edit the selected appointment.

- 3 Enter <the field to modify>. Then Press  Done

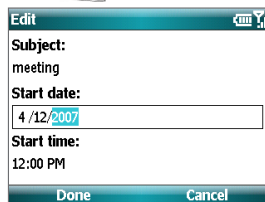

For example, modify the Appointment Subject as "Dinner".

85

Action: Switch the calendar view

 
1 Select  Week

2 Select  Month

3 Select  Agenda

4

Managing Personal Information

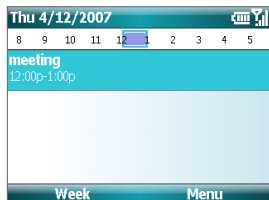


Agenda View. Switch to weekly display.



Weekly View. Switch to monthly display.



 Monthly View. Switch back to Agenda display.




4.2.3 Reminder

A reminder screen will popup before the scheduled appointment time on the phone.



 You can choose to "Dismiss" the reminder or use the "menu" to snooze the reminder.

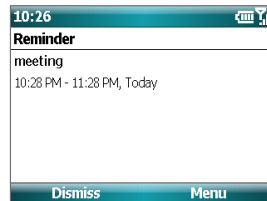


4

▲ Reminder screen.

Action: Appointment reminder screen

 
1

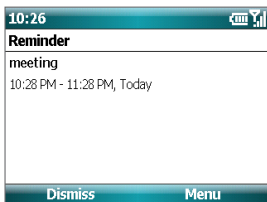

Reminder will be displayed when the scheduled appointment time is near.

2

 Select  Menu >
View Item

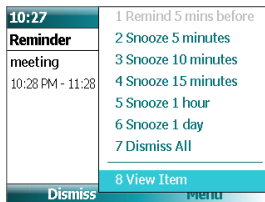

View the current appointment or snooze the reminder.

3

Select  Replay



Upcoming appointment(s).

Manage Personal Information


87



4.2.4 Send Calendar Information

You can exchange calendar information with others via vCalendar (Note 1), by MMS, or through Bluetooth. To use MMS, please refer to section 5.4; to use Bluetooth connection, please refer to section 7.2.

 (Note 1) vCalendar: electronic calendar. For recording your personal appointment schedule. You can send your own vCalendar to other phones or computers that have vCalendar compatibility.

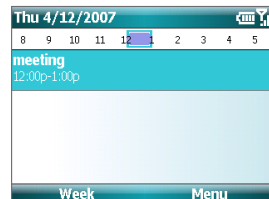


▲ Calendar application program.

4

Managing Personal Information

Send Appointment via MMS

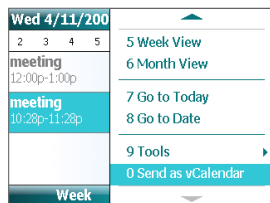

▲ Use MMS to send your appointment

You can use the following procedures to share appointment information via MMS

- Under the View Calendar screen, choose the appointment(s) you wish to transfer, then select **Menu > Send as vCalendar**
- At the MMS Edit screen, choose the **recipient** or enter the **recipient phone number**
- After editing is completed, select **Send**.

88




Action: Beam appointment via Bluetooth


- 1 Select **<appointment to send>**
Then Press **OK**



- 2 Select **Menu >**
Beam Appointment

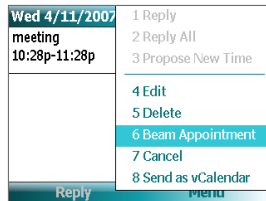


- 3 Select **<device to exchange>**. Then Press **Beam**

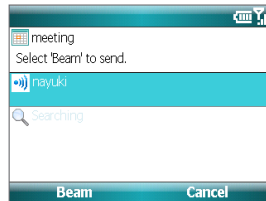


4

Manage Personal Information

- 4 Press **Back**

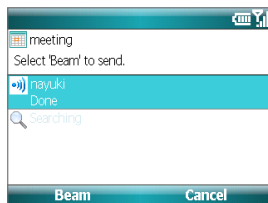

5

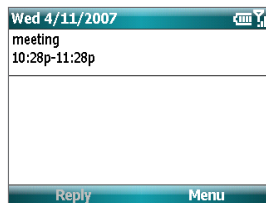

89



4.2.5 Calendar Options


Set up the calendar options to display. For example, lunar calendar, first day of the week, number of days to view, and reminder time.

Calendar Options


Options	Description
Start in	Set the default view option for calendar.
First day of week	Choose which day as the first day of the week
Week View	Choose how many days to display for the Weekly View
Month View	Choose whether you wish to have the week numbers displayed in the Monthly View
Set reminders	Sets up the reminder preset time period
Respond to meetings via	Set the default response to the appointment.

Action: Configure Calendar options

- 1 Select  **Menu** > **Tools** > **Options**
- 2 Select  <the item to set up>

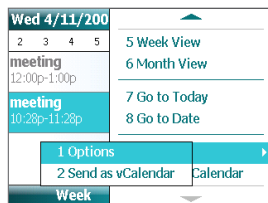

Open the Calendar options settings screen.

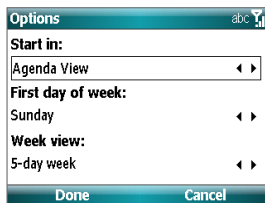

Configure the Calendar options.



4.2.6 Appointment invitation

You can make an appointment, send the invitation to the attendee and reply to an appointment invitation sent by others. While using this function, please confirm that the appointment item information contains the "Attendee" or "Attendant" that has been configured with the e-mail address.

4

Manage Personal Information

Action: Send Invitation to Attendess of an Appointment

- 1 Select <Attendee>
Then Press OK

Appointment edit screen.

- 2 Select Add Required Attendee.. or Add Optional Attendee

Set the contact or company contact as the attendee (attendant).


- 3 Select <Contacts>
Then Press Select

If the Company contact is to be selected, please select <Company contacts>.


91




4 Select Done

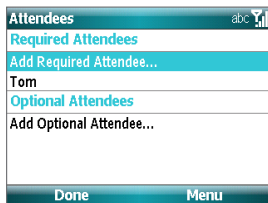

5 Select Done

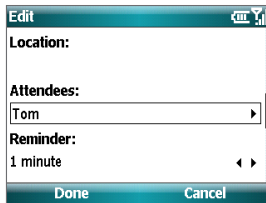

6 Select Yes

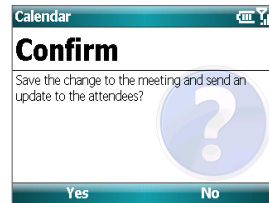

4

Managing Personal Information


Action: View Attendess of an Appointment

1 Select **<Appointment>**
Then Press **OK**





Calendar Agenda View.

2 Select Attendees

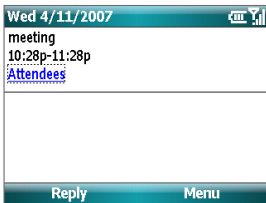

3 Select Reply

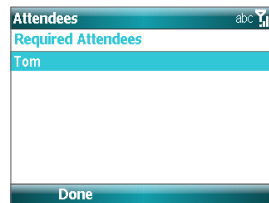

 

4.3 Tasks

The Tasks function can assist you in tracking the status of various tasks. Tasks can be a single task or re-occurring tasks. You can set up reminders for tasks, or manage by setting up different categories for the tasks.


All of your entered tasks will be displayed in the Tasks List. Overdue tasks will display in red. If you need more detailed task information, you can first sync to computer by using ActiveSync®, then edit using Microsoft Office Outlook®. To sync your phone, please refer to Chapter 9.

4

Manage Personal Information

Action: Open the Tasks

1 Select Start

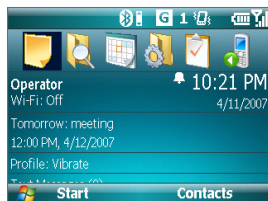


Open the Application program menu.

2 Select Tasks
Then Press OK



Open the Tasks application program.

3

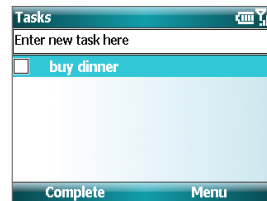


Tasks program screen.


93

Action: Add new tasks


- 1 Move  the Up/Down directional button
- 2 Enter <task subject>
Then Press  OK

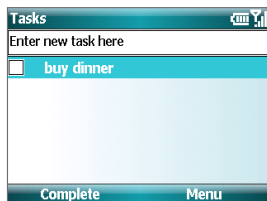

Go to the "Enter new task here" field.

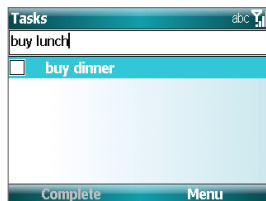


3

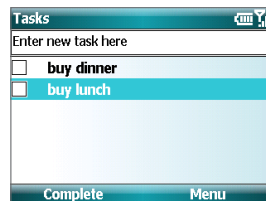


You have successfully created a new task.

Action: Edit a task


- 1 Select  <the task to modify>
Then Press  OK
- 2 Select  Edit
- 3 Enter <the field to edit>.
Then Press  Done

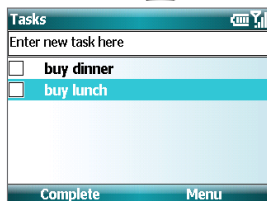

Use the direction buttons to select the task item to be edited, for example: training.


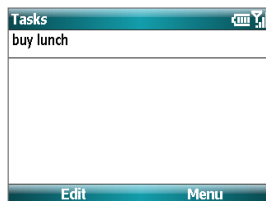


 Edit the field you want to modify (Note 1).



Action: Set task as complete

- 1 Select  <the completed task>
- 2 Select  Complete

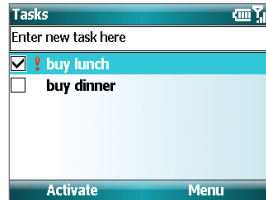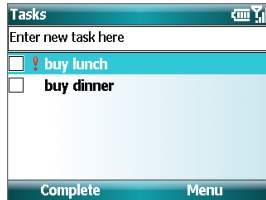

It is convenient to set jobs as complete that can easy to manage the current jobs progress and status.

4

Manage Personal Information

(Note 1) Task information field

Subject	The subject of the Task
Priority	The priority level of the Task
Status	The task is completed or not
Start Date	The start date of the task
End Date	The end date of the task
Occurrence	Task re-occurring number of time or frequency
Reminder	The time period before the task starts for the reminder
Category	Category of the tasks
Sensitivity	Degree of the privacy of the task
Notes	Related notes

95



4.4 Voice Notes

Using the voice notes can help you to quickly note your thoughts and create short recording contents. The contents of the voice notes are stored in your phone, in case you want to set a voice note as a ring-tone (see Using Voice Notes).

! If the storage of your phone is running out, please remove some voice notes.


Please refer to Section 10.3 to set a voice note as the ring-tone.

4

Managing Personal Information

Action: Open voice notes

1 Select **Start**

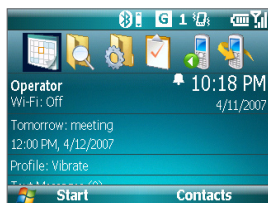


Open the Application program menu.

2 Select **Voice Note**
Then Press **OK**




Open Voice Notes.

3

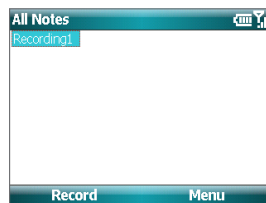


Voice Notes screen.

 

Action: Add a new voice note

1 Select **Record**

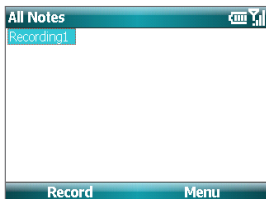


Start recording the voice note.

2 Say <something to record>. Then Press **Stop**



3

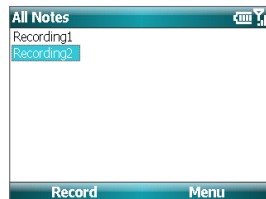


Voice notes are listed in the All Notes list, and are named in the order they were recorded.

4

Manage Personal Information

Action: Play a Voice Note


1 Select <voice note to playback>
Then Press **OK**

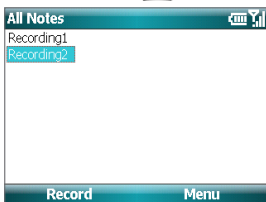

2






 Playback Voice Notes. To stop, please press **Stop**.



Action: Rename voice note



- 1 Select <voice note to rename>
- 2 Select Menu > Rename
- 3 Enter <file name to rename>. Then Press Done

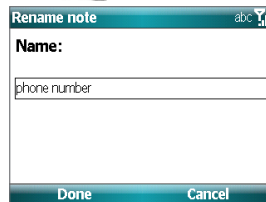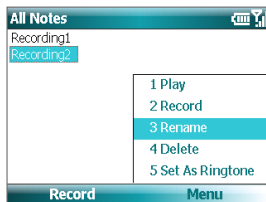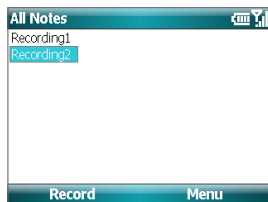


4

Action: Delete voice note

- 4 Select <voice note to delete>
- 5 Select Menu > Delete
- 6 Select Yes

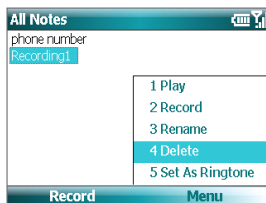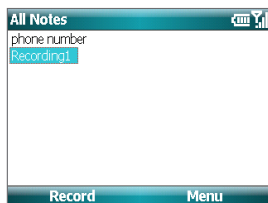

Confirm deletion of the Voice Note.

 

5

Topic

Exchanging Messages

In this topic, you will learn about...

1. **Messaging**
2. **Text Message**
3. **Outlook E-mail**
4. **MMS**
5. **POP3/IMAP4 E-mail Account**
6. **Configuring Messaging Center**

Action Index

Use the Messaging.....	102
Switch accounts	103
Use SMS	104
Add new SMS messages.....	105
Cancel message sending	106
Read Text Messages.....	107
Reply SMS messages.....	107
Switching SMS messages folders	108
Move Message.....	109
Delete Message.....	109
Use Outlook E-mail	112
Drafting and Sending E-mails.....	112
Inserting pictures or video into e-mails.....	113
Insert a file into the e-mail	113
Insert a file into the e-mail	114
Read E-mail	115
Download the complete mail contents	116
Download message attachment files	116



Searching E-mail	117
Setting Outlook E-mail Options	119
Use MMS	120
Add a new MMS message	121
Receiving MMS	124
Browsing MMS	125
Configuring POP3/IMAP E-mail Account	126
Download mails from POP3/IMAP server	128
Open Messaging Center settings screen	129
Messaging Account Options	131
Copy the SMS message from SIM card to phone	133
Copy SMS message from phone to SIM card	134

5.1 Messaging


You can use the Messaging to read and draft messages, e-mail, and MMS. You will also be able to send and receive e-mail with Microsoft Outlook ® or general POP3/IMAP e-mail accounts through your ISP.

5

Exchanging Messages

Action: Use the Messaging

1 Select  **Start**

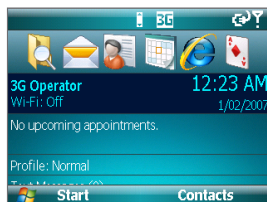


Open the Start Menu.

2 Select  **Messaging** and then press  **OK**




Open messaging.

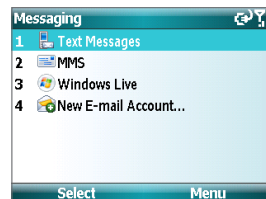


▲ **Messaging screen.**
Choose a account to use.

3 Select  **< Account type >** and then Press  **OK**

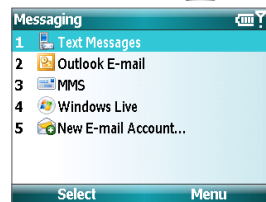


 Choose the message account type to use, for example, Text Messages.



Action: Switch accounts

- 1 Select  **Menu** > **Tools** > **Switch Accounts**

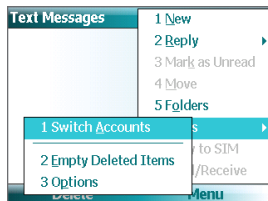

- 2 Select  **<Account type>** and then Press  **OK**



Open the messaging screen.



You can move  with the **Left** and **Right direction buttons** in the Messaging Center to switch between SMS/MMS/e-mail.

5

Exchanging Messages

5.1.1 Shortcuts

You can use the Qwerty keyboard to quickly perform parts of the functions in Messaging to help you accelerate the speed of handling to a messages, for example press and hold key  **2** to reply the message.

Description of operation of shortcut buttons:

- Enter any account in the Messaging Center. (For example: SMS, Outlook e-mail)
- Press and hold key  **0**

Using a shortcut key:

- Enter any account in the Messaging Center. (For example: SMS, Outlook e-mail)
- Press and hold **Shortcut key** (For example: **numeric key**  **7**) to delete the message.




5.2 Text Message

You can use SMS to quickly exchange information with your contacts. A ringtone will sound and a  will be displayed to alert you that you have unread message(s) in the onscreen task bar at the top of the screen (Note 1). Your received messages and automatically backed up outgoing messages are stored in the built-in memory space on the phone.

(Note 1) The Home screen unread message reminder:


- : Indicates you have unread messages
- **Text Messages (1)**: Messaging in Home screen item will display the number of unread messages. For example: one unread message will be displayed as “Message (1)”.

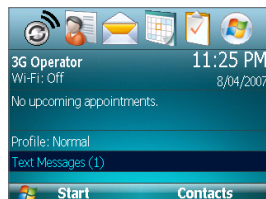

▲ Home screen message reminders.


Action: Use SMS

- 1 Select  **Text Messages**, and then press  **OK**

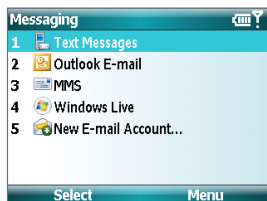

Go to SMS Home Screen.

2

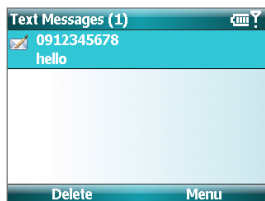


SMS Home screen.



5.2.1 Sending and Receiving SMS messages

Edit your SMS messages to send out. A single message can have up to 160 English characters. When your text count exceeds the character limitation, the phone will automatically split the text as two or more messages to send out. Your received messages will use the following icons to categorize the messages as read or unread:

-  : Unread message
-  : Read message

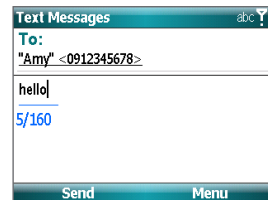


▲ Message editing screen.

5


Action: Add new SMS messages

- 1 Select  **Menu** > **New**

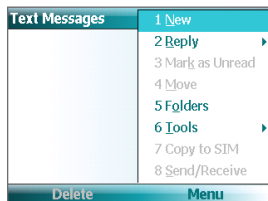

Add a new message.

- 2 Press  **OK** button or enter <recipient phone number>

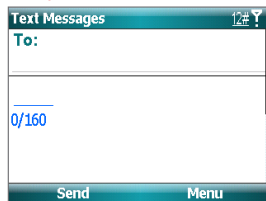

Press OK button to choose the contacts or enter the phone number.

- 3 Select  <Reciver> then press  **Select**




Select the contact you wish to send the MMS to. For example, Amy.

Exchanging Messages

105




- 4 Select <contacts number location>, then press **Select**

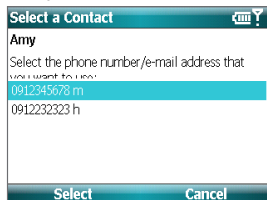

Choose the contacts number location. For example, M (mobile number).

- 5 Enter <your message> then select **Send**

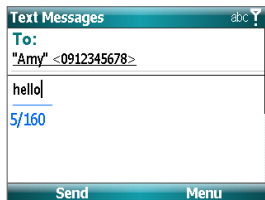


Enter the text contents.
For example, Hello.

If you want to send messages to multiple recipients, please select **Menu> Add New Contact** to add a receiver into the Recipients.


Action: Cancel message sending

- 1 Select **Menu** > **Cancel Message**

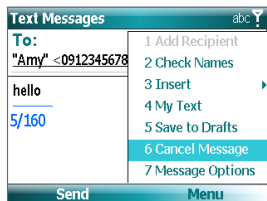


Cancel message sending.

- 2 Select **Yes** or **No**

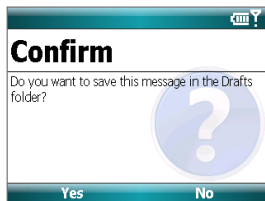


Choose "yes" to save the message as a draft. Choose "No" to discard the message.

- 3

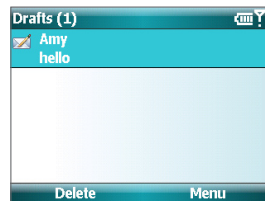

 
If "Yes" is selected, the saved message will be saved to the Drafts folder.




Action: Read Text Messages

- 1 Select  <the SMS that you want to read> then press  OK

2

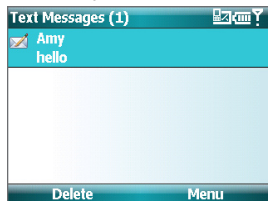

Select the message you want to read.

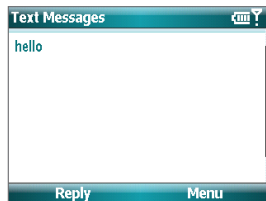


Read the message.


Action: Reply SMS messages

- 1 Select  Reply

- 2 Enter <your message> , then select  Send

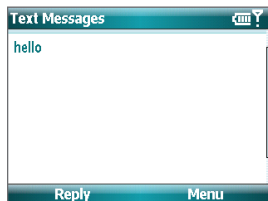

Choose Reply when browsing messages.

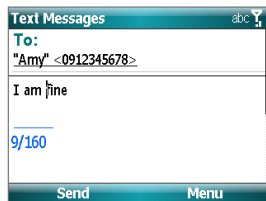

Enter the message contents to be replied to, for example, I am fine.

5

Exchanging Messages

107



5.2.2 Managing Messages Folder

Switch messages folders, move messages to other folders or delete them.

Messages folder:


Folder name	Description
Inbox	Stores all received messages.
Deleted Items	Your deleted messages will be saved in the Deleted Items.
Draft	Stores message drafts
Outbox	Outgoing messages that are ready to be sent
Sent Items	Sent messages will be saved in Sent Items as backup copies

5

Exchanging Messages


Action: Switching SMS messages folders

- 1 Select  Menu > Folders

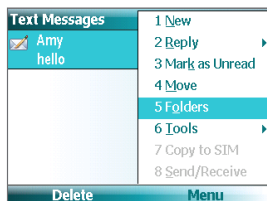


Open the messages folder list, for example, SMS folder.

- 2 Select  <the folder to be switched to> then press  OK

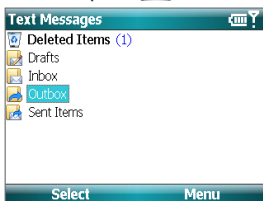


Switch to a different messages folder, for example, Outbox.

 108




Action: Move Message

- 1 Select <Message> then select Menu > Move

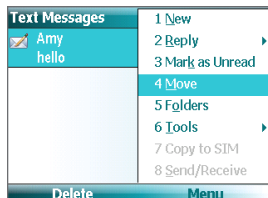


Inbox screen. Select the message you wish to move.

- 2 Select <the folder to be switched to> then press OK

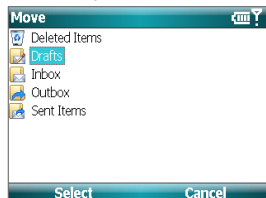

Select the folder to move the message to. For example, Draft.

3

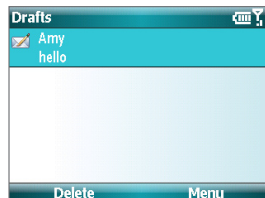


Inbox screen. You have successfully moved the message to destination folder.

5

Exchanging Messages


Action: Delete Message

- 1 Select <Message> then select Delete

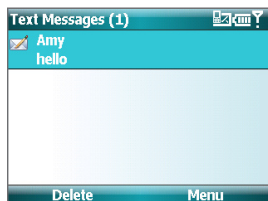


Select the message to be deleted.

- 2 Select Yes

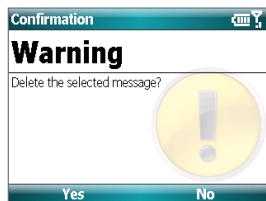

Deleted messages will be moved to the "Deleted Items" folder.

3

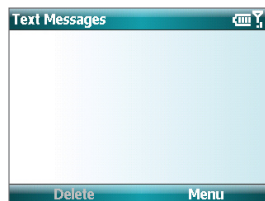


Deleted messages will be moved to the "Deleted Items" folder.

109

5.2.2 Message Options

Configures message sending options. You can use the following procedures to set up requests for delivery notifications. When the message is delivered to the recipient's phone, an auto-reply message will be sent to you to confirm message has been received.


- At the SMS editing screen select  **Menu** > **Message Options**
- Choose  **Request message delivery notification**, then select  **Done**

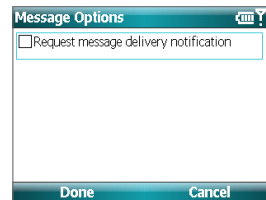

▲ Tick the box if delivery confirmation notice is needed.

5

 Exchanging Messages



5.3 Outlook E-mail

You can use “Outlook e-mail” to synchronize with the Outlook e-mail in your PC or with Microsoft Exchange Server. If you use Microsoft Exchange Server and the version is 2003 SP2 or 2007, you can activate the Direct Push function to receive e-mail instantly.

When a new SMS is received, a ringtone will sound and a reminder will be displayed in the onscreen task bar at the top (Note 1), indicating that you have unread messages. Your received messages and automatically backed up outgoing messages are stored in the built-in storage on the phone.

(Note 1) The Home screen unread message reminder:



Indicates that you have unread messages.

Outlook E-Mail (1) : Messaging Center item on Home screen will display the number of unread messages. For example: a single unread message will be displayed as “Outlook e-mail (1)”.

Please refer to Section 7.1.1 Use Direct Push and Chapter 9 Synchronize with PC or Exchange.

 
5.3.1 Drafting and Sending E-mails

You can write or send e-mail with your phone, and attach pictures, videos, voice notes, etc. to the e-mail. The next time you synchronize with your PC or Exchange server, the mails in the Outbox will be sent through the Outlook account in the PC or directly through the Exchange server.

The sent attached files will be beneath the subject of the e-mail. The next time you sync the phone with Exchange Server or a Windows PC, the e-mail in Outbox will be sent via the Microsoft Office Outlook e-mail account on the computer.



Outlook E-mail can be synchronized only with Office Outlook, but not with the Windows Mail in Windows Vista or Outlook Express in Windows XP.




Action: Use Outlook E-mail

- 1 Select Outlook E-mail
Then Press OK

2



Open Outlook E-mail main screen.

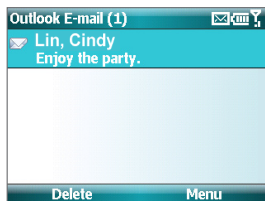


Outlook E-mail main screen.

Exchanging Messages


Action: Drafting and Sending E-mails

- 1 Select Menu > New

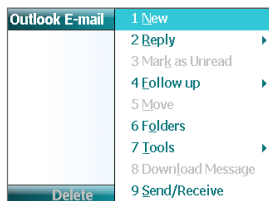


Add a new e-mail message.

- 2 Enter <recipient>
and then enter <subject>

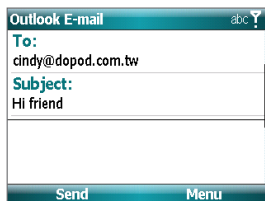


You can also select "Menu> Add New Recipient" to select the recipient.

- 3 Select Send

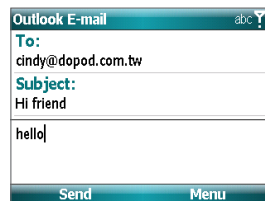


 Enter the e-mail content.
For example, hello.



Action: Inserting pictures or video into e-mails

- 1 Select 
Menu > Insert > Picture

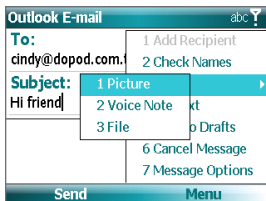


The e-mail editing screen.

- 2 Select  <picture>
and then press 
Select



Insert a picture or video. You can also use the camera to take picture.

3

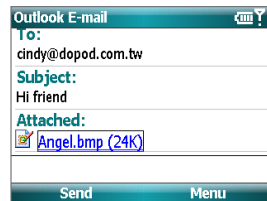


Picture is successfully attached to the e-mail. For example, Angel.bmp

5

Exchanging Messages


Action: Insert a file into the e-mail

- 1 Select 
Menu > Insert > File

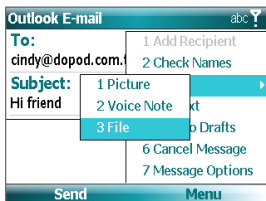


The e-mail editing screen.

- 2 Select  <file>
and then press 
Select

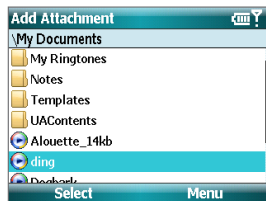


Insert the file from the phone.

3

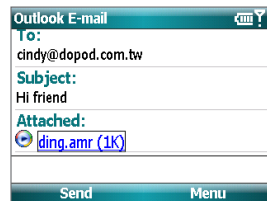


File is successfully attached to the e-mail. For example: ding.amr

 113




Action: Insert a file into the e-mail


1 Select Menu > Insert > Voice Note

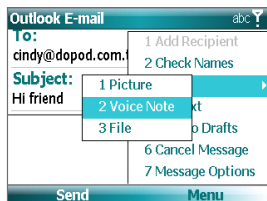

2 Select Record

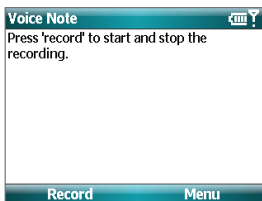

3 Say <the speech to record> then select Stop

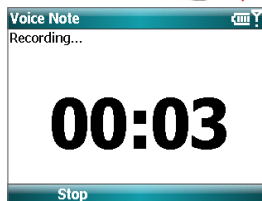

5


The e-mail editing screen.

To use voice notes, please refer to Section 4.4.

Record your voice notes.


Exchanging Messages

4 Select Done

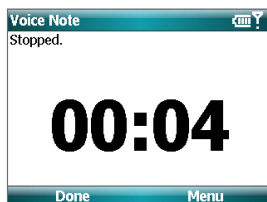

Attach the recorded voice notes to the e-mail.

5

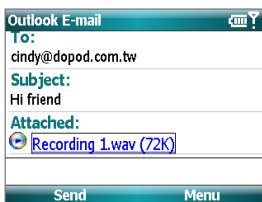


You have successfully attached the recording to the e-mail. For example, recording1.wav



5.3.2 Read E-mail

Read e-mail in text or HTML format. If the attached file or mail body text received exceeds the size limit allowed for a single e-mail, you will receive a reminder to download more body text or attachments in order to browse the entire content of the e-mail. When the e-mail includes attachment files, the files will be shown under the subject. If the attachment is completely downloaded to the phone, you will be able to select and open the attachment. If it is not yet downloaded completely, the attachment (when selected) will indicate that it will be downloaded to the phone during the next e-mail sync. Use Outlook e-mail or POP3/IMAP4 e-mail account to automatically download the attachments when the e-mail is downloaded.

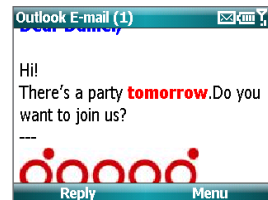


▲ Outlook e-mail browsing screen.

Action: Read E-mail


1A Select

Outlook E-Mail (1)

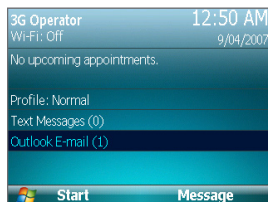


The Home screen will display the Outlook e-mail item when a new e-mail message arrives.

1B Select Outlook E-mail then press OK

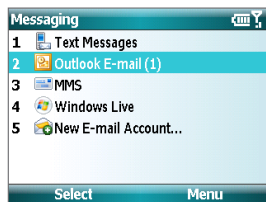

You will also be able to browse directly from the Message.

2 Select <the e-mail to be browsed> then press OK

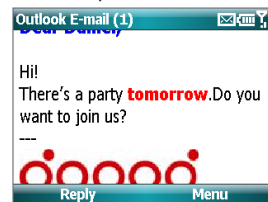

Select and open the e-mail.

5

Exchanging Messages



115



Action: Download the complete mail contents

- 1 Select  Get the rest of this message

2

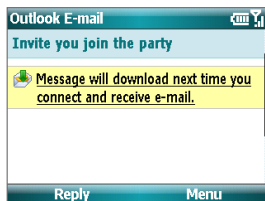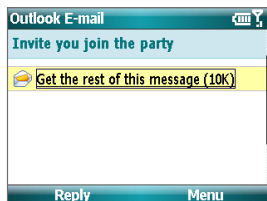


During the next e-mail sync, the remaining contents will be downloaded to the phone.


Action: Download message attachment files

- 1 Select  <attachment file contents to download>

2

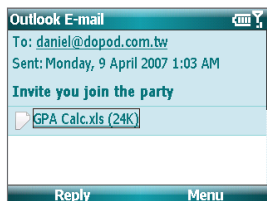

Select the attachment files to download. For example, GPA Calc.xls

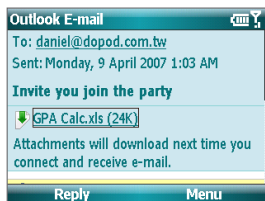


During the next e-mail sync, the attachment files will then be downloaded to the phone.




Action: Searching E-mail

1 Enter <words to search>

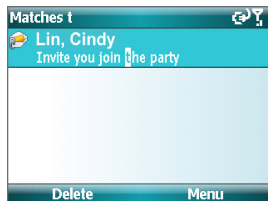

Search in the e-mail list screen, for example, to search for "t", please press **t**.


2 Enter <words to search>

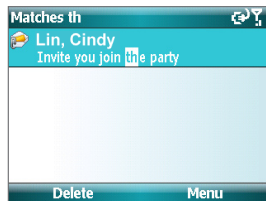

Found words are highlighted. You can continue to enter the next word.

5


Exchanging Messages

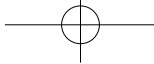

5.3.4 Replying E-mails

You can use the following procedures to reply to the sender:

- At Outlook e-mail screen, select <the mail to you want to reply to> then press the OK button to open the mail.
- Select Reply
- Enter <mail contents to reply> , then press Send.

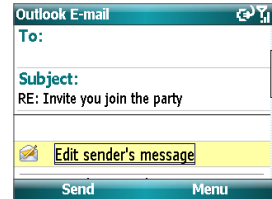

▲ E-mail reply screen.


5

Exchanging Messages


5.3.5 Managing Outlook E-mail Folders

You can use the following procedures to switch to different mail folders and manage the mail in each data folder. For example, Inbox, Outbox, etc.

- In the Outlook e-mail screen, select Menu> Folders.
- Select the folder to be switched to (for example: Inbox) then press OK button

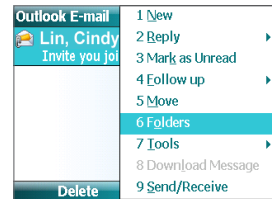

▲ Outlook e-mail folder.

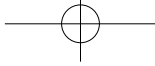


5.3.6 Options

Configures Outlook e-mail message options.

E-mail options:

options	Description
Priority	Message Priorities, shown by an "!" or "↓" icon
Security	Whether message requires encryption or signature
Privilege	Whether the e-mail is permitted for access to protect confidential information
Languages	Set the mail message encoding

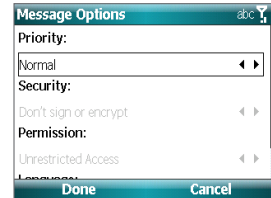


▲ Outlook message Options settings screen.

5

Exchanging Messages


Action: Setting Outlook E-mail Options

1 Select  Menu > Message Options

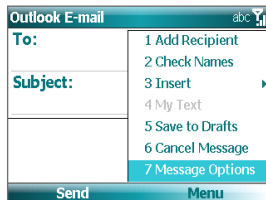

Configure the message options for sending the e-mail.

2 Select  <the item to be configured> then select  Done

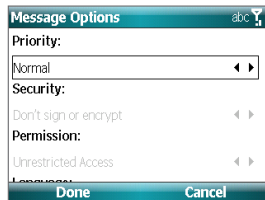

Outlook message Options settings screen.



5.4 MMS

You can easily create or share MMS with friends and family. You can send or browse pictures, movies, audio, and text that have been integrated as MMS. To use MMS, you must first apply for GPRS services from your telecom service provider. Your received messages will automatically be backed up as outgoing messages and stored in the built-in memory space on the phone. For configuring GPRS transfers, please refer to section 7.4.

A ring tone will be heard and a reminder displayed that you have unread message(s) on the the onscreen task bar at the top of the screen (Note 1).

(Note 1) The Home screen unread message reminder:

-  : Indicates you have unread MMS messages.
- **MMS (1)** : Messaging Center item on Home screen will display the number of unread messages. For example: one unread message will be displayed as "MMS (1)".


Action: Use MMS

- 1 Select  **MMS**, and then press  **OK**

2



Go to MMS Home Screen.

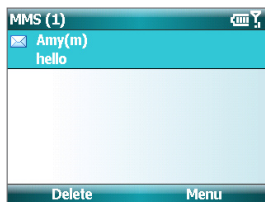


MMS Home screen.



5.4.1 Sending and Receiving MMS

Sending MMS message to your contacts. MMS transmission fees will depend on your service provider.

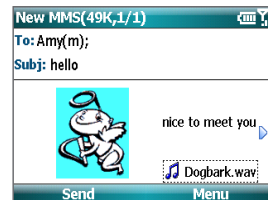


▲ MMS editing screen.

5

Exchanging Messages


Action: Add a new MMS message

- 1 Select Menu > New

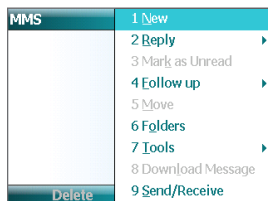

Adds a new MMS message.

- 2 Press OK or enter <recipient's phone number>

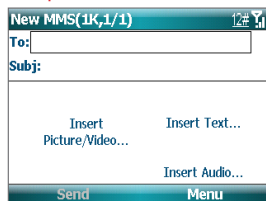

Find the contact's number. You can also enter the contact's number directly.

- 3 Select <contact> then press OK




Select the contact you wish to send the MMS to. For example, Amy.

121



- 4 Select <contacts number location> then press Select

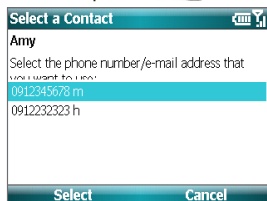


Choose the contacts number location. For example, M (mobile number).

- 5 Move to Subject and then enter <subject>



Enter the MMS subject.
For example, hello.

- 6 Move to Insert Picture/Video and then press OK

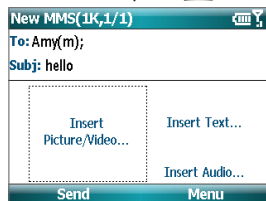


Insert pictures or videos.

- 7 Select <picture> and then press Select




Insert picture or video saved in the phone.

- 8 Move to Insert Text

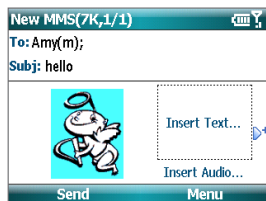

Insert Text.


- 9 Press OK

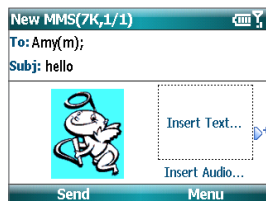

Go to the text editing screen.



- 10 Enter <the text to be sent>
then select Done

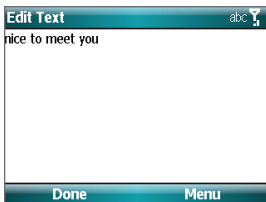


Enter the text you wish to send. For example, nice to meet you.

- 11 Move to Insert Audio
and then press OK




- 12 Select <the audio to be inserted>
then press OK

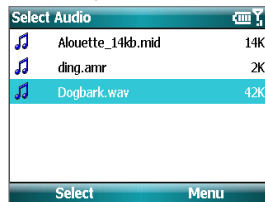


Insert audio files saved on the phone. For example, Dogbark.wav.

- 13 Select Send

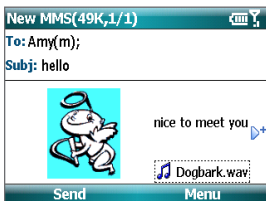

Make sure MMS editing is complete, then select Send.


- 14

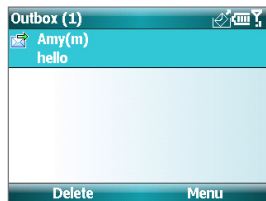


The Sending icon will be displayed on the upper right hand corner of the screen.

Action: Receiving MMS


1A Select 
MMS (1)

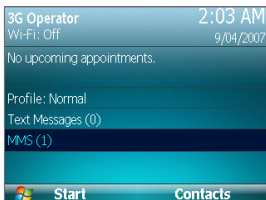

1B Select  MMS
then press  OK

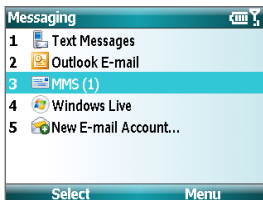

2 Select 
<message to browse>

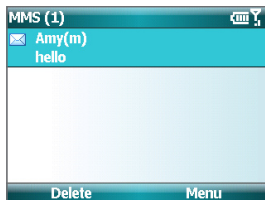


You can also choose to open the MMS at the Messaging.

For example: Amy.

5


Exchanging Messages

3 Select 
Menu > Send/Receive

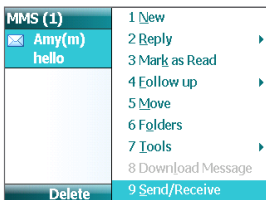

Download MMS message.

4 Select  <the e-mail to be browsed>
then press  OK

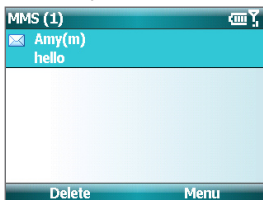

5




Play MMS message. To pause the playback, please select  Pause.



5.4.2 Browsing MMS

Browse received MMS. If you wish to delete messages, select  **Delete**. Deleted messages will be moved to the "Deleted Items" folder.

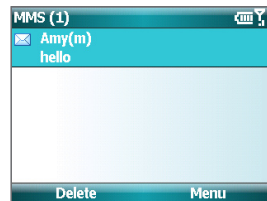

▲ Read received MMS.


5

Action: Browsing MMS

1 Select  **MMS**
then press  **OK**



2 Select  **<message to browse>**
then press  **OK**

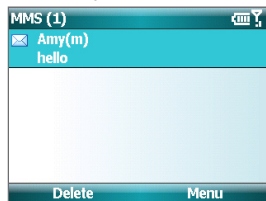

Select your MMS to browse.
For example, Amy.

 
3



Play MMS message.

Exchanging Messages

125



5.5 POP3/IMAP4 E-mail Account


When the phone is connected to the Internet through HSDAP/3G/GPRS or ActiveSync®, you can connect to the remote POP3/IMAP4 mail servers to send/receive e-mail messages. You must have the account password for the remote mail servers and obtain the appropriate configuration information from the server administrator. POP3/IMAP4 mail editing, replying, and forwarding messages methods are the same as Outlook mails. Please refer to section 5.3.1 Drafting and Sending E-mail Messages

5.5.1 Configuring E-mail Account


You must setup a POP3/IMAP4 e-mail account in order to send/receive e-mails through the remote servers.

Action: Configuring POP3/IMAP E-mail Account


- 1 Select **New E-mail Account...**
then press **OK**
- 2 Enter **<E-mail address>**
then select **Next**
- 3 Wait for the automatic detection, and then select **Next**

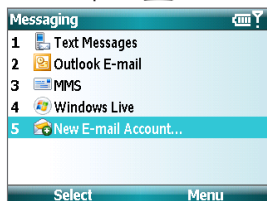


Open the E-mail Setup Wizard.

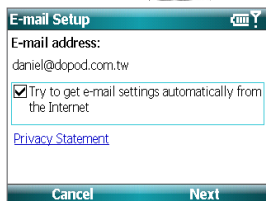

Enter e-mail address.

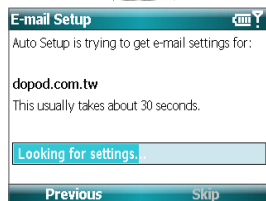

Please wait for perform the automatic detection and setting for you.

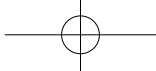


- 4 Enter <your name> and <Account display name> then select  Next




Enter your name and account display name.

- 5 Enter <Incoming mail server> and then select  <Account type>

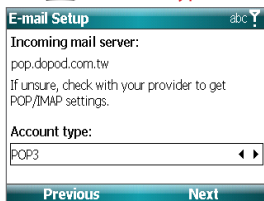

Enter Incoming mail server address, and choose POP3 or IMAP4 server.


- 6 Select  Next

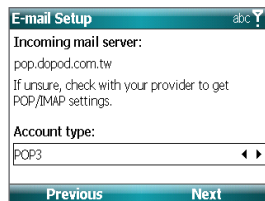

5


Exchanging Messages

- 7 Enter <User name> and <Password> then select  Next

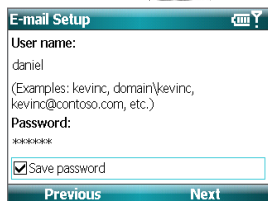


Enter user name and password of mail account.

- 8 Enter <Outgoing (SMTP) mail server> then select  Next

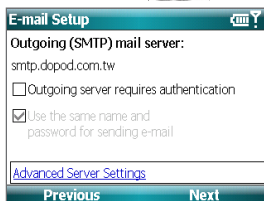

Enter Outgoing (SMTP) mail server address.

- 9 Select <Automatic Send/Receive period> then select  Finish

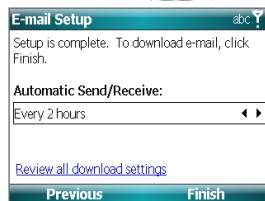

Choose automatic send/receive period, and finish the configuration.

127



5.5.2 Downloading New Mail


Download the latest POP3/IMAP account e-mails via connection to the Internet. After you download the latest e-mails to the phone, the e-mails will still be retained on the remote server.

5

Exchanging Messages


Action: Download mails from POP3/IMAP server

- 1 Select 
Menu > Send/Receive

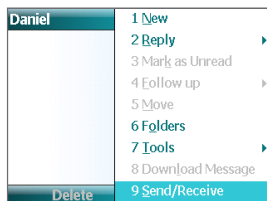


Open the menu from your preset e-mail Inbox.

- 2 Select 
<the e-mail to read>
then press  OK

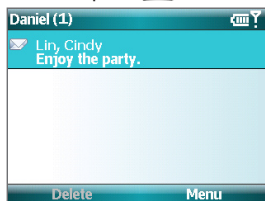


Display the downloaded e-mail.

3

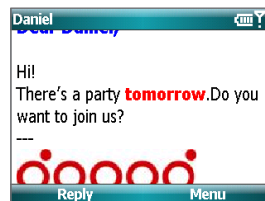

Open and browse the e-mail content.

 

5.6 Configuring Messaging

Configure various settings in Message.




▲ Configuring Message.

5

Exchanging Messages


Action: Open Messaging Center settings screen

1 Select 
Menu > Tools > Options

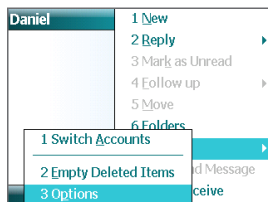

Open the menu from the messages folder.

2 Select 
<Configure Options>
then press  OK

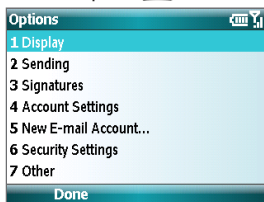



5.6.1 Settings

1. Display

Set up the message display and sorting methods in the messages list for you to conveniently manage the messages in your list.

Display options:

Show date and time in the message list	Choose if date and/or time will be displayed in the message list.
Sort Messages By	Choose which column to sort and the sorting order.
After deleting or moving a message	Choose the action to perform after deleting or moving a message.

2. Send

Send options:

Include copy of original message when replying to e-mail	When you reply to e-mail, the original message will be included.
Save copies of sent items	Keep a backup copy of sent items.


3. Signature

Add a personal signature at the end of messages. For example, end greetings, name, and contact information.

Signature options:

Select an account	Select the account you wish to set.
Use signature with this account	Choose whether the signature should be used with your selected account.
Include signature while replying and forwarding	Choose whether the signature should be included when replying or forwarding e-mail.
Signature	Enter your signature here.

 4. Security settings



Options

Warn before navigating to a URL or file link that is not on my device

While browsing a URL or a file link in an e-mail or in the contents of an SMS that is not located in the phone, the system will send a warning message.

5. Other settings

Set whether to display the account selector while opening the Messaging Center and whether to show a warning while deleting a message.

5


Exchanging Messages

 
Action: Messaging Account Options

- 1 Select 
Account Settings
then press  OK



- 2 Select  <the option you wish to set or use>

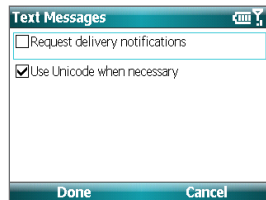



Messaging Account Options settings

Request delivery notifications After a message is sent, choose whether you wish to receive a delivery notification when the recipient receives the message.

Use Unicode when necessary Choose whether you wish to activate Unicode SMS (Unicode is a character encoding method).

5

Exchanging Messages


132



5.6.2 Import/Export the text messages

You can import the text messages stored on SIM card to the phone, or copy the SMS on the phone into the SIM card.

 : The icon indicates that the message is stored on the SIM card, or the message in the phone is imported onto the SIM card.

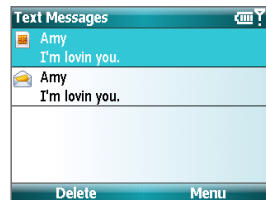


▲ Text messages could be stored on SIM or your phone.

5


Exchanging Messages

Action: Copy the SMS message from SIM card to phone

1 Select  <the messages stored in the SIM card>

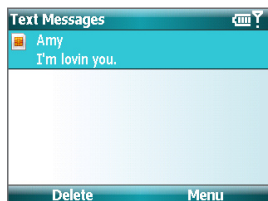


2 Select  Menu > Copy to Phone

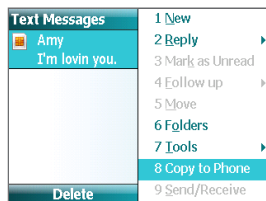


The messages stored on the SIM card will be copied into the phone memory.

3

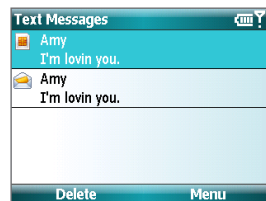


The message on the SIM card has been copied into the phone memory.

 133




Action: Copy SMS message from phone to SIM card

1 Select  <the messages stored in the memory of phone>

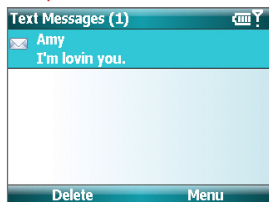


2 Select  Menu > Copy to SIM

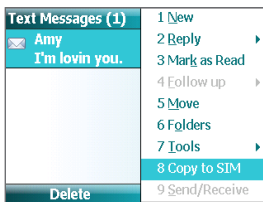


The messages stored on the memory of phone will be copied into the SIM card.

3

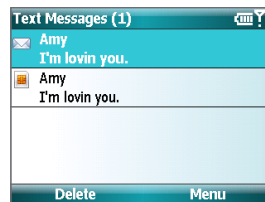

 The message on the memory of phone has been copied into the SIM card.




Topic

6

Experiencing Multimedia


In this topic, you will learn about...

 1. Camera and Video Camera
2. Pictures and Videos
3. Windows Media Player
4. Audio Manager
5. Streaming Media



Action Index

Opening the Camera.....	139
Opening the Video Recorder application program	140
Camera Function Screen.....	140
Change Storage Location to Storage Card.....	141
Camera idle screen	142
Adjust zoom distance	142
Switch to capture mode	143
Change resolution	143
Timer setup.....	143
White balance setup	143
Shooting photos.....	144
Recording the movie.....	144
Using Sports mode to capture images.....	145
Continuous image capture	145
Deleting Files after Capture.....	146
Sending Files after Capture	146
Viewing files after Capture.....	147
Save to Contacts after Capture.....	147

 

Camera setting	148
Camera configuration	148
Open pictures and video application	150
View a Picture	151
Play a Video	151
Deleting pictures or videos	152
Play slide show	152
Change location to storage card	153
Send images by e-mail	153
Send image via MMS	154
Send image via Bluetooth	154
Setting picture display options	155
Setting size and rotation methods for picture sending ..	155
Setting up slide shows	156
Using Windows Media Player	157
Open Media Library	158
Update Media Library	159
Switch Media Library location	159
Using the Media Library	160
Search the Media Library	161
Save the playlist	162

Opening file playback.....	163
Playing media files from the Internet.....	164
Controls.....	165
Windows Media Options	166
Audio Manager main screen	168
Set music as ringtone	169
Trim MP3 Ringtone	169
Play streaming media	170



6.1 Camera and Recoder

Simply use the built-in camera on the phone to take pictures and videos with audio, and send e-mail or MMS messages with pictures / videos to other contacts.

The filming modes include photo shoot mode, video mode, MMS video mode, picture contacts mode, headshot mode, and sports continuous mode. The photo shoot mode captures normal still images. The video mode records video with sound. The picture contacts mode captures images that are suitable for contacts use in the phone. The headshot mode will automatically add frames to the picture. And the sports mode can continuously capture a moving object.


After filming is complete, you can choose to continue shooting, delete, send, view, and/or save to contacts. Different modes will have different available actions.



If you want to take videos and share with friends by sending MMS, please choose the MMS video mode.

Action: Opening the Camera

1 Select  **Start**

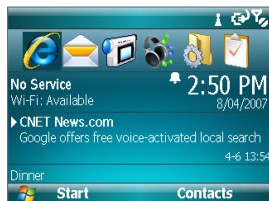

Open the Application program menu.

2 Select  **Camera**,
Then Press  **OK**



You can also press the Carema button  directly to open the program.




The image capturing screen.



Action: Opening the Video Recorder application program

1 Select **Start**

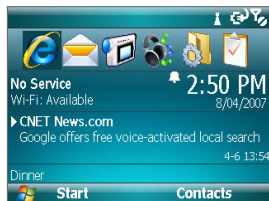


Open the Application program menu.

2 Select **Video Recorder**,
Then Press **OK**



Use the Video Recorder.


3

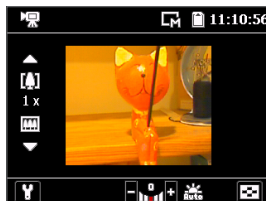


The image capturing screen.

6

Camera Function Screen

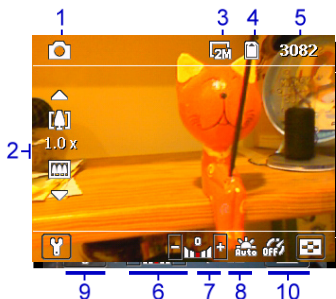


1	Camera Mode	The current camera mode.	9	Settings
2	Zoom	Press Up/Down to increase or decrease the zoom distance.	10	Pictures & Videos
3	Resolution	Set the image resolution of the picture.		
4	Storage	The current location to save the captured images to.		
5	Remaining shots	The available remaining shots or video time.		
6	Exposure value	Use Left/Right to decrease or increase the exposure level.		
7	White balance	The current white balance setting.		
8	Timer	Configure the timer settings from Menu > Timer .		

 


Action: Change Storage Location to Storage Card


1 Select

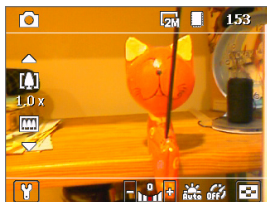


2 Select Storage > Storage

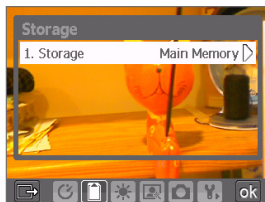

3 Select Storage Card, then press OK button

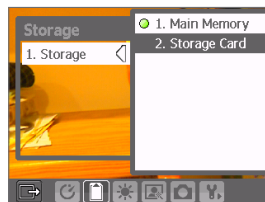

4 Press OK button

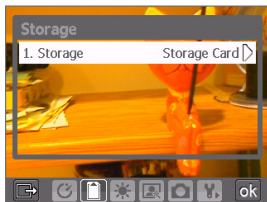

5

 


Saving large amounts of pictures on the phone but not on the memory card will cause insufficient storage memory on the phone. Therefore, we recommend that you set up the photos to be saved to the storage card.

6


Experiencing Multimedia

141



Action: Camera idle screen

 - 1 Press  Camera button

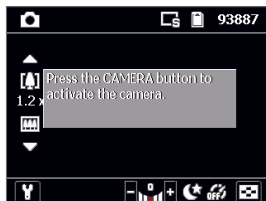

6

 
Action: Adjust zoom distance

- 1 Press  Up/Down directional buttons

2



Use Up/Down to zoom in or out. For example, press Up button to zoom in.

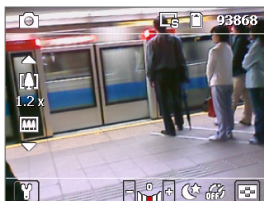


The zoom distance increases by 0.2x. Maximum zoom distance is 2.0x.




Action: Switch to capture mode

1 Press 1

 2

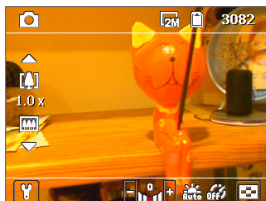

 You can switch different capturing mode. For example, headshot mode.

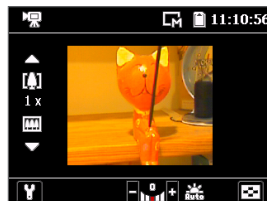

Switch to video mode.



Mode icon description:



Image



Movie



Contact picture



Sports



MMS video



Picture theme

Action: Change resolution

 
1 Press 2



You can adjust the image resolution.

Action: Timer setup


1 Press 5

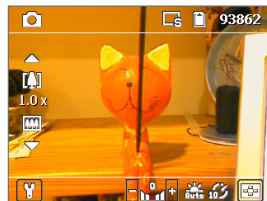

You can select a timer setting of 2 seconds, 10 seconds or Off.

Action: White balance

 1 Press 3

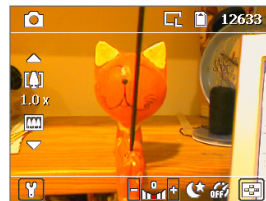

You can adjust the white balance, for example: sunlight, night modes, etc.

6

 
Experiencing Multimedia

143




Action: Shooting photos


- 1 Aim the lens at the object/scene
- 2 Press OK button
- 3 Select <Capture complete>, then press OK button

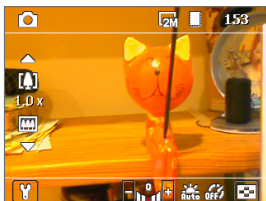

 Use Up/Down directional button to zoom and Left/Right button to adjust the

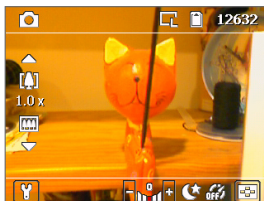

Begin shooting.

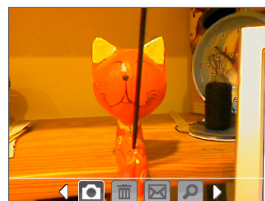 


For actions after capturing , please refer to the follow-up actions section.


6

Action: Recording the movie

 
- 1 Press OK button
- 2 Press OK button
- 3 Select <Capture complete>, then press OK button

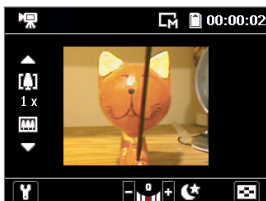

 Aim the lens at the object/scene and begin recording.

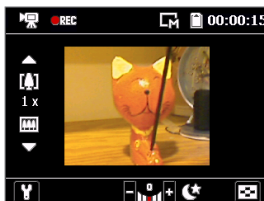


End recording.

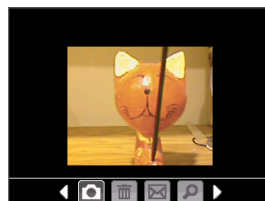 


For actions after capturing, please refer to the follow-up section.

 144




Action: Using Sports mode to capture images

 
- 1 Aim the lens at the object/scene
- 2 Press OK button
- 3 Select <Capture complete>, then press OK button

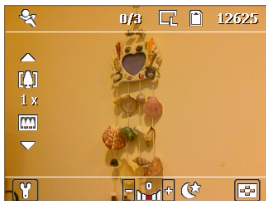

 Use Up/Down button to zoom and Left/Right button to adjust exposure level.

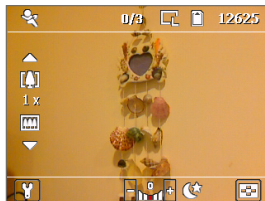



Begin shooting.

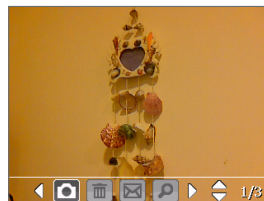 

For actions after capturing, please refer to the follow-up section.

Action: Continuous image capture

  - 1 Select Continuous capture, then press OK button
- 2 Press OK button

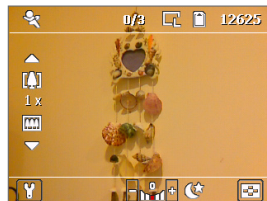
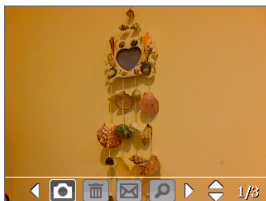


Continuously captures photos.



Action: Deleting Files after Capture

  - 1 Select **Delete file**, then press **OK button**
- 2 Select **Yes**, then press **OK button**

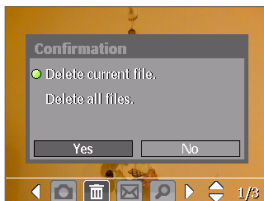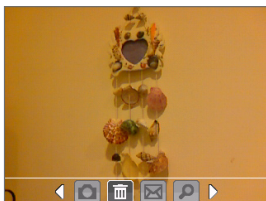


Confirm file deletion.


6

Action: Sending Files after Capture

 - 1 Select **Send file**, then press **OK button**
- 2 Select **<Send method>**, then Select **Send**

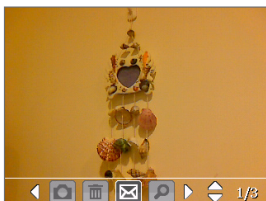


Sends the file through MMS or e-mail.

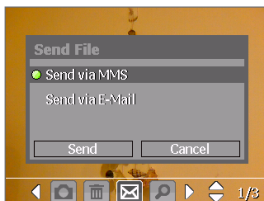 


Choose the send method. For example: send via MMS.

 3

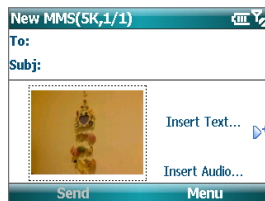

 
For sending via MMS or e-mail, please refer to Chapter 5.




Action: Viewing files after Capture

- 1 Select View file, then press OK button

 2

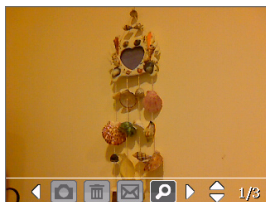

Views the image that was just captured.

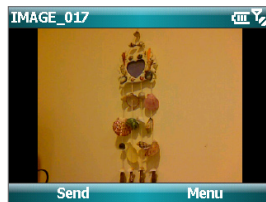 


Press Back button to return to the camera capture screen.

Action: Save to Contacts after Capture

- 1 Select Save Contacts, then press OK button

 - 2 Select <Contacts>, then press OK button

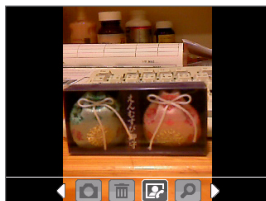


Save picture to Contacts. This option is only available in the Contacts Picture mode.



Choose the contact to save to.

 
6




Action: Camera setting

1 Press Left Confirmation button

 2

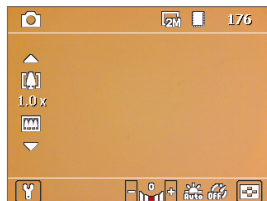

Camera capturing screen.

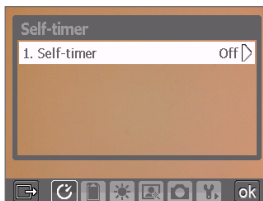 

Use Directional button to adjust each setting. Press Right button to end.

6

Camera configuration

Timer:

Timer Timer setup

Save Location:

Save Location Sets the image save location.

Environment setup:

White balance White balance mode setup

Effects Select image capture special effects

Capture setup:

Image resolution Set image resolution

Quality Configure capture quality

Timestamp Select whether to add timestamps to images

Capture mode:

Mode Choose capture mode




Advanced:

Capture format	Set the capture format: JPEG for images; M-JPEG, MPEG-4, and H.263 for movies.
Shutter sound	Turn shutter sound on/off.
Browsing time	Time duration for browsing capture results.
Monitor refresh rate adjustment	Sets the monitor refresh rate to auto, 50Hz, or 60Hz.
Display control	Choose whether you wish to display the control options on the screen.
Header character string format	The character string format for the file header.
Reset counter number	Resets the counter number.
Advanced adjustment	Use the directional button to adjust saturation, Gamma, and color.
Keep backlight on	Keeps the LCD backlight on continuously.

6.2 Pictures and Videos

 You can use the Picture & Videos function to view, delete and edit photos and videos on the phone. You can also send the pictures to other devices by various methods.

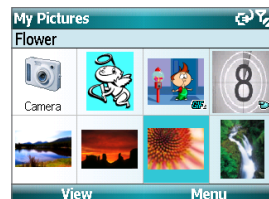


▲ The Pictures & Videos main screen.


6

Action: Open pictures and video application


- 1 Select  **Start**
- 2 Select  **Pictures & Videos** and then Press  **OK** button

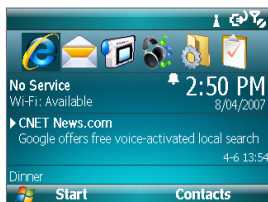


Open the Application program menu.

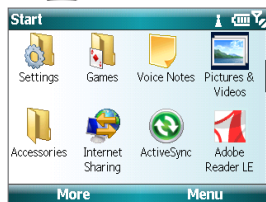

Open Pictures & Videos.

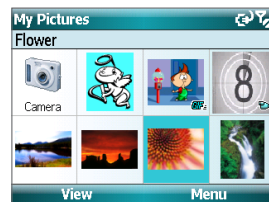


Pictures & Videos screen.

 


Action: View a Picture

- 1 Select the <picture you want to view>
Then select View.

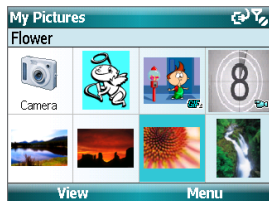

For example: Flower.

2

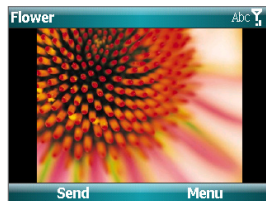


Display your selected picture.

Action: Play a Video

- 1 Select <the video to be played> Then select Play.



2

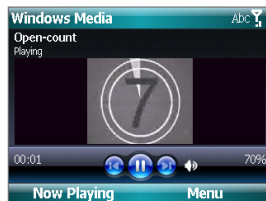


Play your selected video. Press the OK button to stop playback.

6

Experiencing Multimedia

 151




Action: Deleting pictures or videos

- 1 Select the <picture or video you wish to delete>




Select the picture or video you want to delete. For example, Waterfall.

- 2 Select Menu > Delete

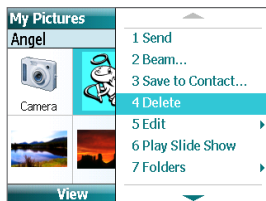

Select the Delete Option from the menu.

- 3 Select Yes

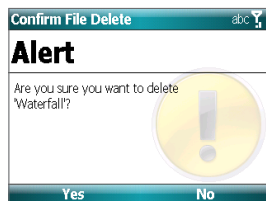

Confirm the deletion.

6


Action: Play slide show

- 1 Select the <picture for the slide show>




Full screen playback of the pictures as slides.

- 2 Select Menu > Play Slide Show

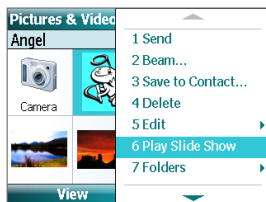

Select slides to play.

- 3

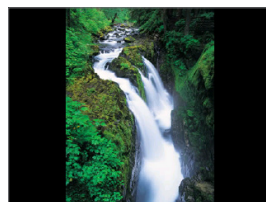


Begin full screen playback from the selected slides.



Action: Change location to storage card

- 1 Select the  Menu
> Folders

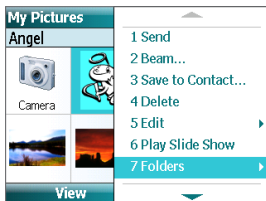

Change the storage location to the storage card.

- 2 Select  Storage Card




- 3



The storage card folder.


Action: Send images by e-mail

- 1 Select the  <file>
then select  Menu > Send

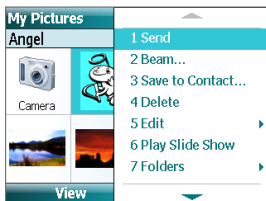


Send the picture as an e-mail attachment.

- 2 Select the  <e-mail address to use>

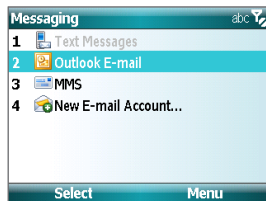

Select the e-mail address you wish to use. For example, via Outlook E-mail.

- 3 Enter the <recipient, subject and contents>
then select  Send.

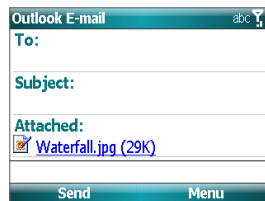


For e-mail related usages, please refer to section 5.3 Outlook E-mail.

6


Experiencing Multimedia

 153




Action: Send image via MMS

- 1 Select the <file>
then select **Menu > Send**

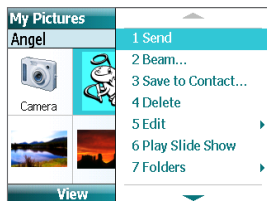


Send pictures via MMS.

- 2 Select the <MMS>

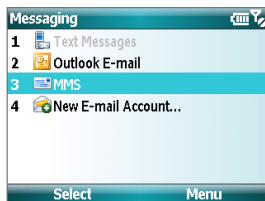

- 3 Enter the <recipient, subject and contents>
then select **Send**

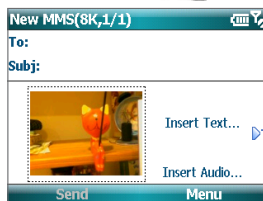


For MMS related usages,
please refer to section 5.4
MMS.

6


Action: Send image via Bluetooth

- 1 Select the <file>
then select **Menu > Beam**

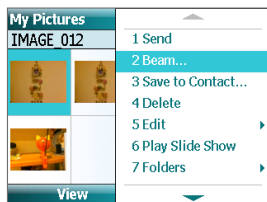


Send pictures via Bluetooth.

- 2 Select <device you wish to transfer to> Select **DataExchange**

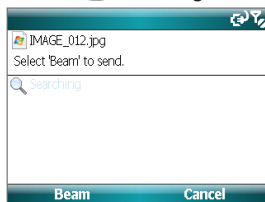


Select the device to send to.

- 3 Select **Cancel**

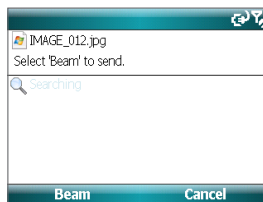


 Send is completed. You can
go back to the previous
screen.




Action: Setting picture display options

1 Select  **Menu** > **Options**

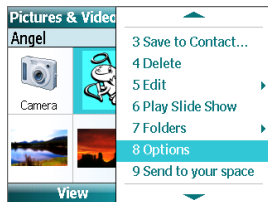


Open Options menu.

2 Select  **<Configure Options>** then press  **OK button**

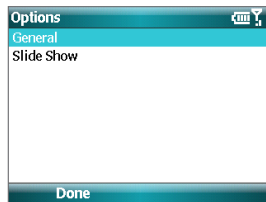

For option configurations, please refer to the following descriptions.

Setting size and rotation methods for picture sending

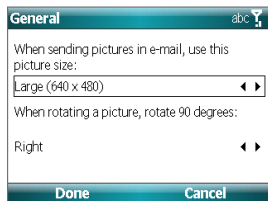


When sending pictures with e-mail, use the following picture size.


Picture size for e-mail use. Picture can be set as original size, large (640x480), med (320x240), or small (160x120).

When rotating a picture, rotate 90 degrees.

 Choose if the rotation should be right or left.



Setting up slide shows

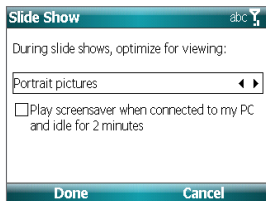

Optimize viewing when playing slides

Select optimization for vertical or horizontal oriented pictures during slide show.

Playback screen saver when connected to PC and the connection has been idled for 2 minutes.

Select to automatically playback pictures when connected to PC and idle for 2 minutes.

6



6.3 Windows Media Player


You can use the Microsoft® Windows Media Mobile for Smartphone version media player to playback digital audio or video files stored on the phone or Internet. If you need to transfer media files (including music, video, movies or TV programs) to your device, please use Windows Media Player® 11 on a Windows® PC to sync the media. Please refer to Chapter 9 Synchronizing multimedia files.

Windows Media Mobile® for Smartphone can playback the following file extensions and encoded files:

- Microsoft Windows Media® Audio encoder version 1.0, 2.0, 7, 8, and 9
- MP3, 3GP
- Microsoft Windows Media Audio, various encoders
- Microsoft Windows Media Video 7, 8, and 9


Action: Using Windows Media Player

1 Select  **Start**

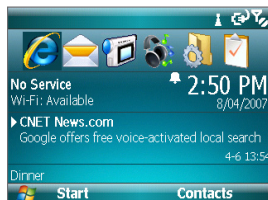


Open the Application program menu.

2 Select the  **Windows Media** then press the  **OK button**

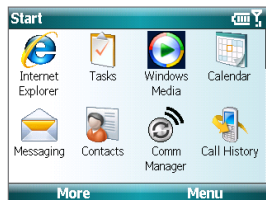

Open Windows Media.

3

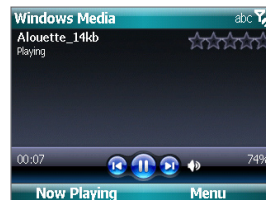

The Windows Media main screen.



6.3.1 Media Library

The Media Library allows you to quickly find your audio files, video files, and play-lists. You can save the audio files and video files to the memory card. When you update the Media Library, the files will be found and added automatically.

If you manually transfer music media files into the phone through the File explorer, a card reader, etc., you have to update the Media Library manually.

It is recommended to use Windows Media Player 11 in your PC to transfer music and videos into the phone.


For music, video, and pictures synchronization, please refer to section 9.11.

6


Action: Open Media Library

- 1 Select  Menu > Library


2

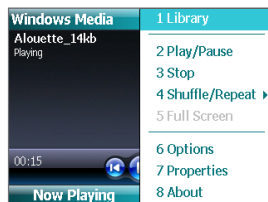

Open Media Library.

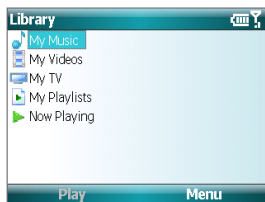


The Media Library home screen.

 


Action: Update Media Library

- 1 Select  **Menu >**
Update Library

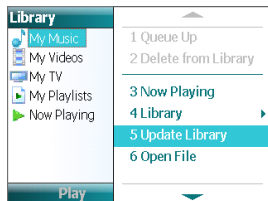


Open Media Library menu.

2

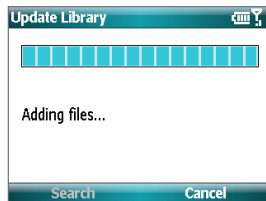

Search phone and storage card for media files, and add them to the media library.


- 3 Select  **Done**

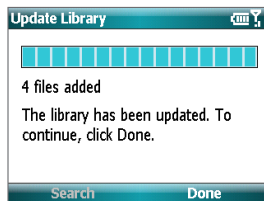

Media Library update is completed.


Action: Switch Media Library location

- 1 Select  **Menu >**
Library

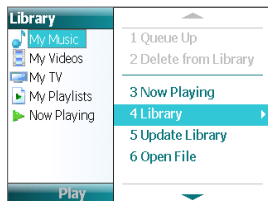

Open Media Library menu.

- 2 Select the  **<media library you wish to switch to>**

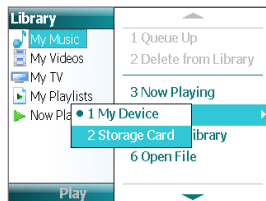

Choose the media library you wish to switch to. For example, Storage Card

6

 
Experiencing Multimedia

159




Action: Using the Media Library


- 1 Select the **<Category>** and then press **OK button**
- 2 Select **<Music category>** and then press **OK button**
- 3 Select **<Artist>** and then Press **OK button**

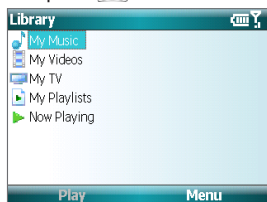

The Media Library is divided into music, videos, TV, and play-lists.


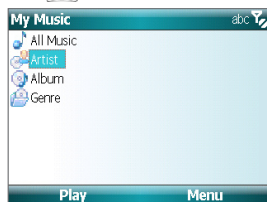


Choose the category according to the music artist, album, and Genre.

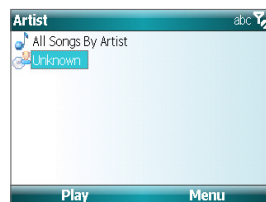


6


- 4 Select the **<Album>** then press **OK button**
- 5 Select **<Music>** then press **Play**

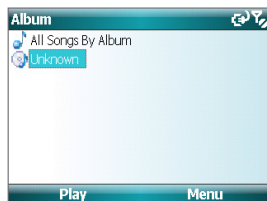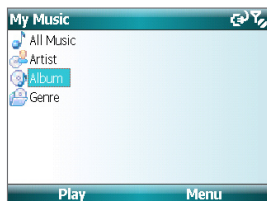

6

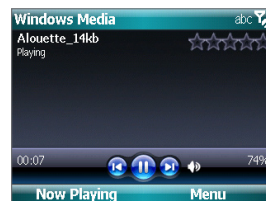


Music is now playing.

 


Action: Search the Media Library

- 1 Select the  **<Category>** and then press the  **OK button**
- 2 Select the  **<Music category>** and then press the  **OK button**

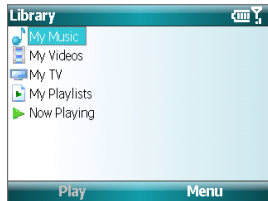


The Media Library is divided into music, videos, TV, and play-lists.

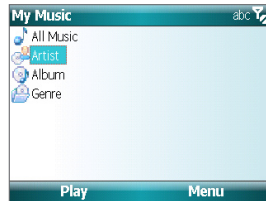

Choose the category according to the music artist, album, and Genre.

- 3 Enter **<Artist name>**

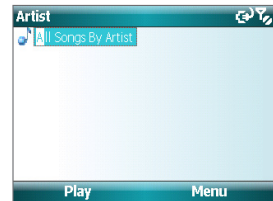


For example, enter a to search for music starting with the letter a.


-  If you have a large amount of media files, you can use this convenient and time-saving method to search for files.

Action: Save the playlist


1 Select  Menu >
Now Playing

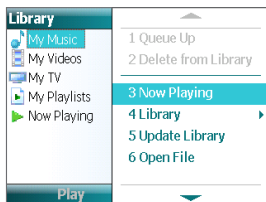

2 Select  Menu >
Save Playlist

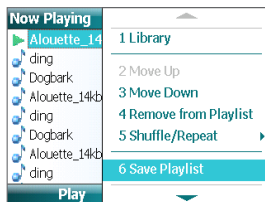


3 Enter <the name of the
playlist>

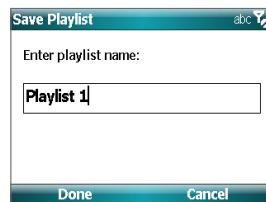


6

4 Select  My Playlist

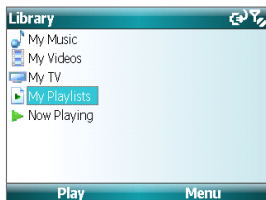


5

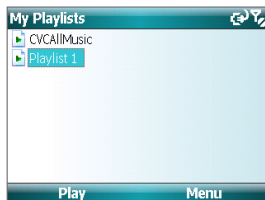



Action: Opening file playback

- 1 Select Menu > Open File

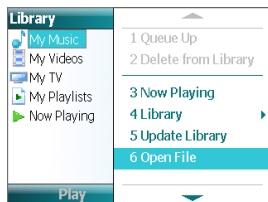


Opens the media from the file.

- 2 Select <Folder> then press OK button




Select the folder that stores the media file.

- 3 Select the <File> then press Play

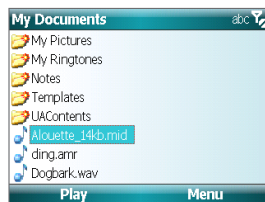

Select the file you wish to play.

4

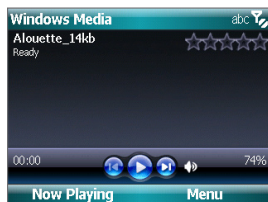

File is now playing.


6

Experiencing Multimedia

163


Action: Playing media files from the Internet

- 1 Select  Menu >
Open URL

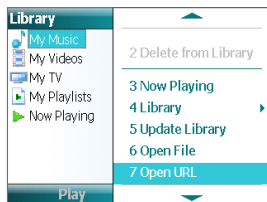


Opens the multimedia file URL.

- 2 Enter the <URL of the
Media file> then select
 OK

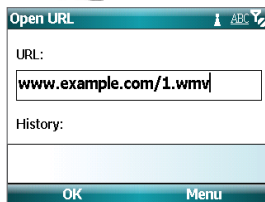


Enter the Media file URL.
For example, <http://www.example.com/1.wmv>

- 3

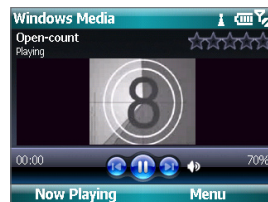

Multimedia file is now playing.

 
6




6.3.2 Controls

Various preset control buttons and options for Windows Media.

Controls

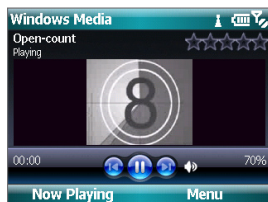

Function	Button
Play/Pause	OK button 
Previous Track	Left directional button 
Foreard Track	Right directional button 
Volume Up	Up directional button 
Volume Down	Down directional button 
Mute	#
Toggle full screen	0
Modify rating	*
Fast forward	Right directional button  (press & hold)
Rewind	Left directional button  (press & hold)

 


6.3.3 Options

Various settings for Windows Media®. Select **Menu > Options** to enter the Options settings. The option contents are detailed as follow.

6

Action: Windows Media Options

- 1 Select  **Menu > Options**

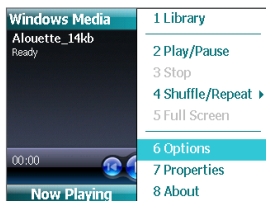

- 2 Select  **<Configure Options>** then press 





Playback Options

Show time as	Choose if the screen displayed time should be time elapsed or time remaining.
Pause playback when using other programs	Choose if playback should be paused when switching to other programs.
Resume playback after a phone call ends	Choose if playback should be resumed after a phone call ends.

Video Options

Play the video as full screen	Choose if full screen mode should be used for video playbacks. You can choose the setting as never use fullscreen, use only when video is larger than full screen, or always use full screen for playback.
Scale to fit window	Choose if the video size should be scaled to fix the window size when the video size is too big.

Media Library Options

Tick for media library screen to be displayed when the media player is started.

Skin Options

Use the Left/Right directional button to choose the skin you wish to use.

To download new skins, please go to the WMplugins.com website (<http://www.wmplugins.com>). After the skin is downloaded into your PC, use ActiveSync® to copy the .skn and .bmp files into your phone. (For example: the path in the phone, Program Files\Windows Media). Do not save skins in the windows folder in mobile for sure skins appear in skin lable.

Button Options

Select your Options settings and set them as your customized hot keys.




6.4 Audio Manager

 
You can play music by accessing **Start > Audio Manager**. Whenever you launch "Audio Manager", the program will automatically search for all the music on your handset and memory card. These will be added to the play list so they can be accessed in a more convenient manner. You can also use music for your ringtones by converting them to MP3 ringtones using Audio Manager.

6

Audio Manager main screen

Experiencing Multimedia

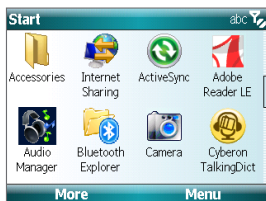



Action: Set music as ringtone

- 1 Choose **Menu** > **Set as Ring Tone**




Set as handset's ringtone.

- 2 Select **<Set as the default ringtone>** then press **OK** button



You can also choose "Save to Ringtone Folder" to set it as a contact's ringtone.

- 3 Select **OK**

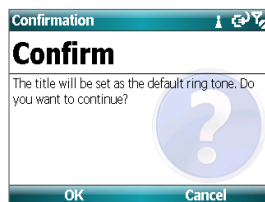


Action: Trim MP3 Ringtone

- 1 Select **Trim**




Extract MP3 format segment from music file.

- 2 Select **Mark in** and **Mark out** then press **OK** button

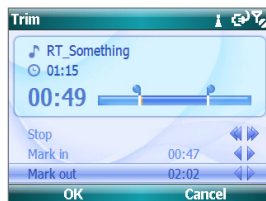

Select starting point and ending time of ringtone.

- 3 Select **YES**

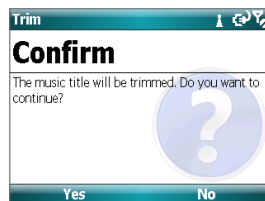


Complete ringtone extraction.

6

Experiencing Multimedia

 169



6.5 Streaming Media

The streaming media built-in the mobile can play the streaming video support the RTSP(Real Time Streaming Protocol) in Internet. It usually open the streaming media program automatically in Internet Explorer when you use the video service provide by service provider.

6

 
 
Action: Play streaming media

1 Select  **Connect**

2 Enter <Streaming site>
Select  **Go**

3

Experiencing Multimedia

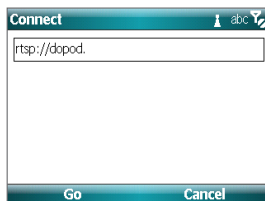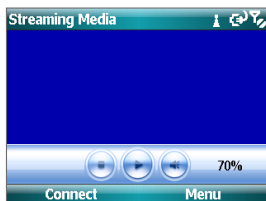



7

Topic

Getting Connected

In this topic, you will learn how to...

1. Comm Manager
2. Bluetooth connection
3. WiFi wireless network
4. GPRS Settings

Action Index

Open the Comm Manager	173
Open Bluetooth Settings	174
Turn on/off Bluetooth Visibility	175
Pair a Bluetooth Headset	176
Enter the password on the PC for Bluetooth matching	178
Activate Windows Bluetooth Discovery	178
Setup Bluetooth FTP	179
Open the Bluetooth FTP function	180
Using a Bluetooth headset	181
Search for wireless network access points	183
Connect to a wireless network access point.	184
WLAN settings	185
Configure the power mode of the WLAN	185
View the status of the WLAN wireless network	186
Activate Internet Sharing via USB connection	187
Activate Internet Sharing via Bluetooth	188
Add computer to the Phone's Personal Area Network(PAN)	189
Using the Network Wizard	193



7.1 Comm Manager

Comm Manager acts like a central switch that lets you enable or disable phone features below:


- Phone
- Bluetooth
- Wireless LAN
- Microsoft Direct Push
- Ringtone/Vibrate
- ActiveSync

Please refer to

- 1.4 Quick start the Comm Manager from the Home screen
- 9.1 - 9.4 Install, configure and use ActiveSync
- 9.8 Sync with Exchange Server to use Microsoft Direct Push

Action: Open the Comm Manager

1 Select **Start**

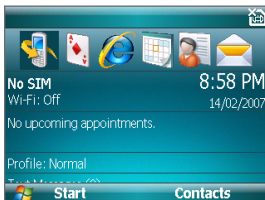

Open the Start Menu.

2 Select **Comm Manager**
Then Press **OK**



Open the Comm Manager.

3



The Comm Manager main screen.

7

Getting Connected

173



7.2 Bluetooth

The phone supports Bluetooth wireless communication technology.

Bluetooth technology provides close range (around 10 meters), low power consumption wireless connection functions. You can use Bluetooth to perform the following functions:

- Transfer data such as files, appointments, tasks, and contacts with other Bluetooth equipped devices and phones.
- Use Bluetooth to create a modem connection. Use the phone as a dialup modem, and use Bluetooth for data transactions.
- Use Bluetooth hands-free devices.

7.2.1 Pair the Bluetooth devices


The Bluetooth devices must be paired before the communication is performed. For more about paired Bluetooth devices (for example: Bluetooth headset) please refer to the user's manual of the Bluetooth product.

Action: Open Bluetooth Settings

7

Getting Connected

1 Select  **Start**

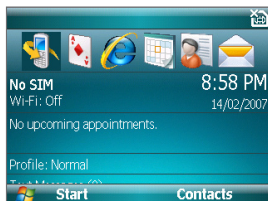


2 Select  **Setting**
Then Press  **OK**



Open the Settings screen.

3 Select  **Connections**
Then Press  **OK**

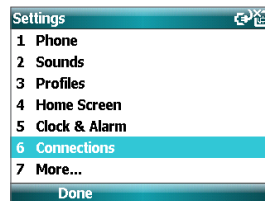



- 4 Select **Bluetooth**
Then Press **OK**

5




Action: Turn on/off Bluetooth Visibility

- 1 Select **Bluetooth**
Then Press **OK**

- 2 Press **Menu**


- 3 Select **Turn on**
Visibility or **Turn off the**
Visibility

7

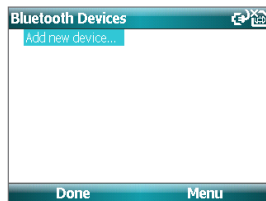


Getting Connected

 Open the Settings screen.




Action: Pair a Bluetooth Headset

1 Select **Bluetooth**

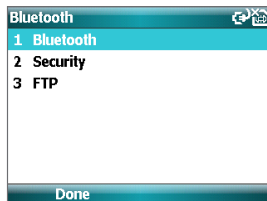

Open the Menu.

2 Select **Add new device**

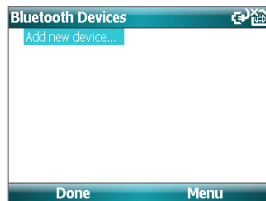

If a device has already been set up, it will be displayed here.


3



Wait for the phone to search for new devices.


7

4 Select **<the new device to be added>**

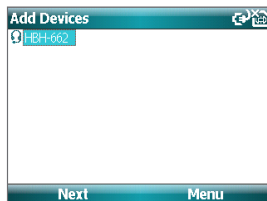


If the handset can not find the device, please refer to (Note 1)

5 Enter the **<Passcode>**

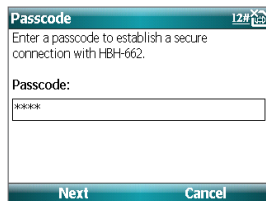

You must enter the same password on the pairing device to complete the matching procedure (Note 2).

6 Select **OK**

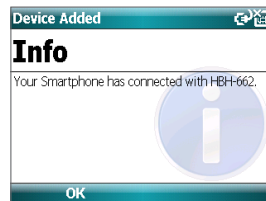




7 Select Next




Use the default name or enter an easily recognized name for the device by yourself.


8 Select Done

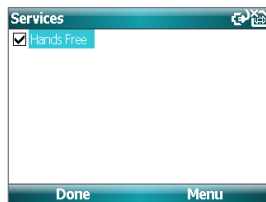

9

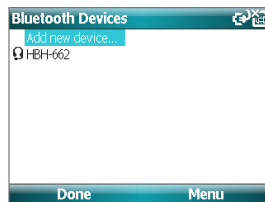

Open the device name you wish to display.

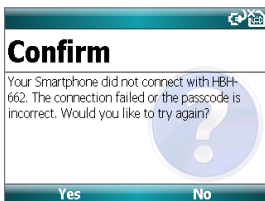

(Note 1) If your phone displays that no device is found, it means that the Bluetooth port of the paired device is not activated or is not configured as **discoverable**.

Please refer to **Action: Activate Windows Bluetooth**

search For other Bluetooth devices, please refer to the User's Manual of the product to configure the Bluetooth as **searchable**.


(Note 2) While you are using your phone to match with your PC, please refer to **Action: Enter the password on the PC for Bluetooth matching**




Action: Enter the password on the PC for Bluetooth matching

- 1 Enter the **Password Key**
Then click **Next**

- 2 Select **Done**

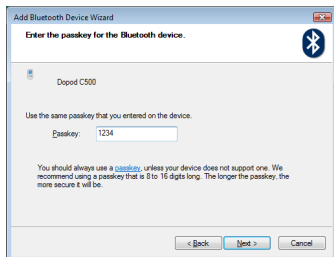


Enter the set password on the phone.

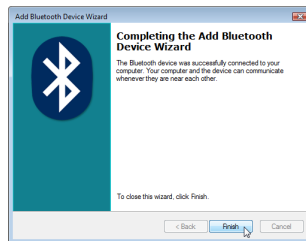

Bluetooth device connection at the computer end is completed.

Action: Activate Windows Bluetooth Discovery

- 1 Select **Activate Search**

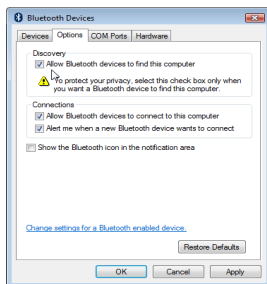

Check "Allow Bluetooth devices find this computer" to allow devices discover the computer.




7.2.2 Bluetooth FTP

Bluetooth FTP is the standard specification in Bluetooth communication. You can use your phone to browse mobile phone devices, computers or other file storage devices that support Bluetooth functions, or allow other devices to browse the files stored in your phone.

Action: Setup Bluetooth FTP


1 Select **Start**

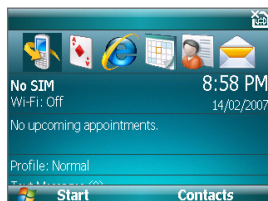

2 Select **Settings**
Then Press **OK**



3 Select **Connections**
Then Press **OK**

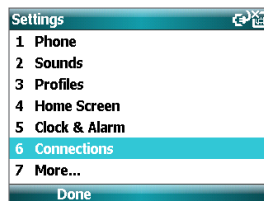


7


Getting Connected



- 4 Select FTP
Then Press OK

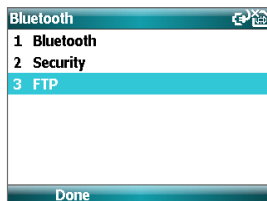

- 5 Select
Open Bluetooth Sharing

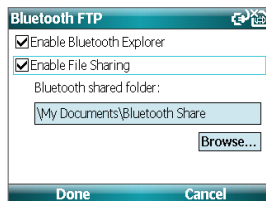

! You can customize the sharing folder for FTP. Please note that the remote user can have the privilege to View/Add/Delete the files in your sharing folder.


Action: Open the Bluetooth FTP function

7


- 1 Select Bluetooth Explorer
Then Press OK



- 2 Select <Device to browse>
Then Press OK

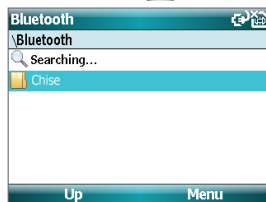

3

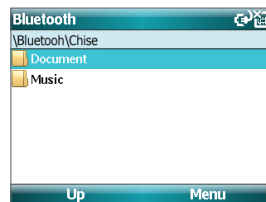




7.2.3 Bluetooth headset

You can talk or use voice tags through a Bluetooth headset. The Bluetooth headset is an optional accessory, please contact your retailer to purchase the device.

For voice commander, please refer to section 3.2.5; for setting up phone profiles, please refer to section 10.5.


Action: Using a Bluetooth headset

- 1 Press **Bluetooth headset communication button**

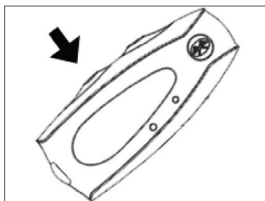

Press the talk button. The Bluetooth headset will automatically connect to the phone.

- 2 Select 
Add new device

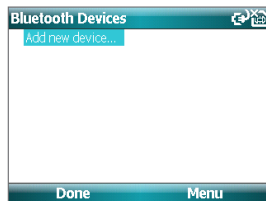

If a device has already been set up, it will be displayed here.

- 3

 


Wait for the phone to search for new devices.


7

Getting Connected


181



- 4 Select  **Next**

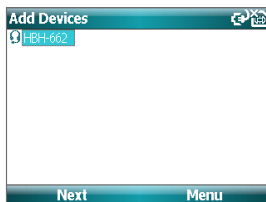


- 5 Enter **<Password for Matching>**
Select  **Next**

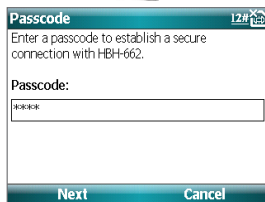

Enter the same password
in the paired device.

- 6 Select  **OK**

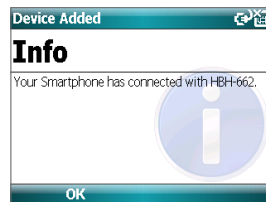


7

- 7 Select  **Next**




Use the default name or enter
an easily recognized name
for the device by yourself.

- 8 Select  **Hands Free**
Select  **Done**

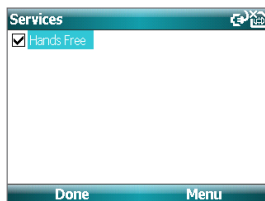

9

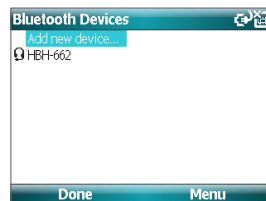



7.3 WiFi network

The phone supports IEEE 802.11b/g wireless network. You can use the phone to connect to the access points of public wireless networks and private wireless networks, and other computers or devices that support WiFi function. WiFi is the default network connection setting. If the phone's WiFi function is not activated, or the phone is not successfully connected to the wireless access point, HSDAP/3G/GPRS will be used as the default connection setting instead.



Public wireless networks include the wireless networks that are provided in public locations, such as railway stations, airports, restaurants, etc. Some of the public wireless networks might charge for the connection.

Action: Search for wireless network access points


- 1 Select **WLAN Settings**
Then Press **OK**



- 2 Select **Wi-Fi**
Then Press **OK**




3

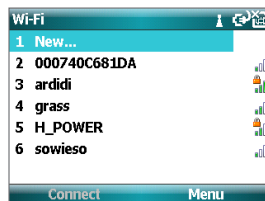


7

 Getting Connected




Action: Connect to a wireless network access point.


- 1 Select <WLAN Settings>
Select Connection

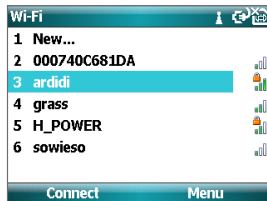

- 2 Select <Network type>
Select Next

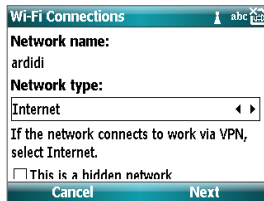 


- 3 Enter the <Network key>
Select Next

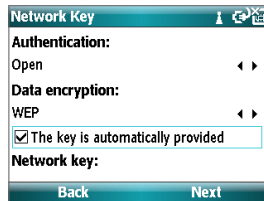 


7

- 4 Select Next

  Getting Connected

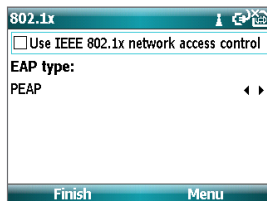



Action: WLAN settings

- 1 Select  **Menu** >
Wi-Fi Settings

 
2



Action: Configure the power mode of the WLAN

- 1 Select  **Power Mode**
Then Press  **OK**


2

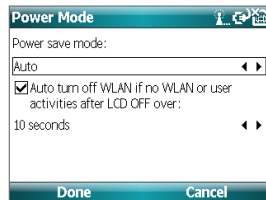

7

Getting Connected

 185




Action: View the status of the WLAN wireless network

- 1 Select  **Connection Status**

2

 Then Press  **OK**

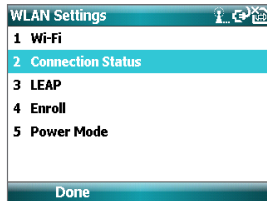

7

Getting Connected

186



7.4 Internet Sharing


The handset can use USB or Bluetooth to connect to a personal computer or other devices (e.g. PDA) to act as an external modem. This allows other devices such as a PC or PDA to access the Internet through the handset's HSDAP/3G/GPRS.

If you want to use USB for Internet Sharing, please make sure that the ActiveSync 4.5 or above has been activated in the computer.


To use Bluetooth PAN to share the Internet, please make sure that the computer's Bluetooth supports Personal Area Networking (PAN) service. If your Bluetooth management interface does not match the user manual, please ask your computer vendor for help with its use.

Action: Activate Internet Sharing via USB connection


1 Select **Start**

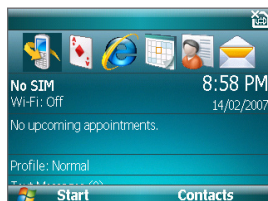

2 Select **Internet Sharing**
Then Press **OK**

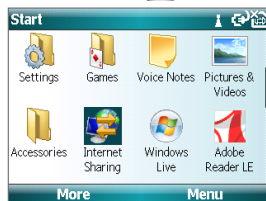


3 Select **USB, <Network Connection>**
Select **Connect**

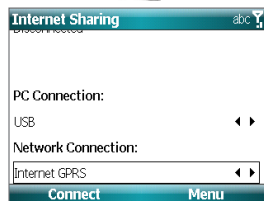

7

Getting Connected

 
187



4 Select  **Disconnect**




5

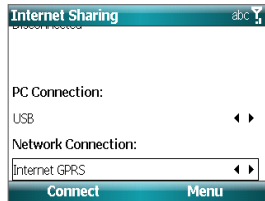

Action: Activate Internet Sharing via Bluetooth

7


1 Select  **Bluetooth PAN**
Choose  **<Network Connections>**

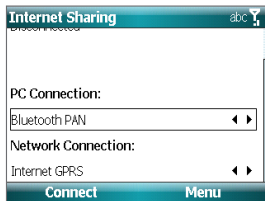

2 Select  **Yes**




 Getting Connected




Action: Add computer to the Phone's Personal Area Network(PAN)


1 Click **Start > Connect To**

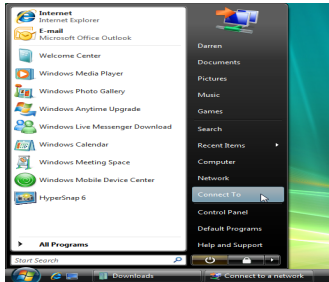


2 Click **Setup a connection or network**

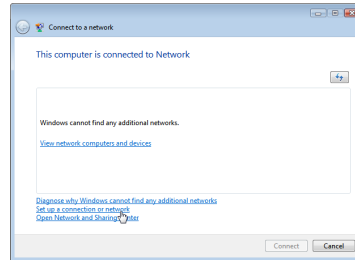

3 Choose **<Connect to a Bluetooth personal area network>**

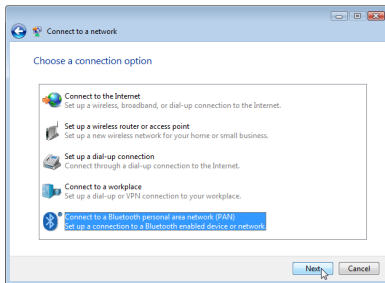

4 Click **Add**

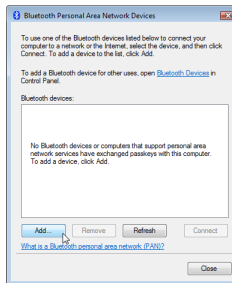

7

Getting Connected


189




5 Click **Next**



6 Select **<Dopod 730>**
Click **Next**

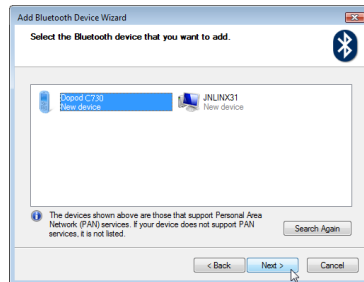

7 Enter **Password**
Then click **Next**

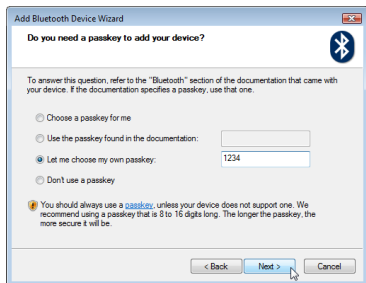


8 Click **Finish**







- 9 Select **Dopod C730**
Then click **Connect**

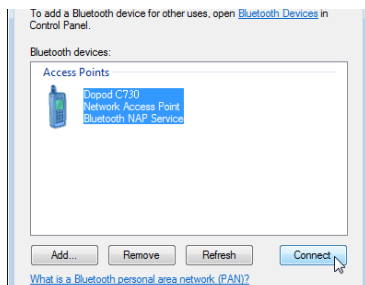

- 10 Select  **Done**

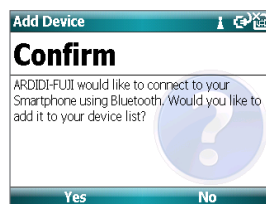

- 11 Set the **Connection Password**

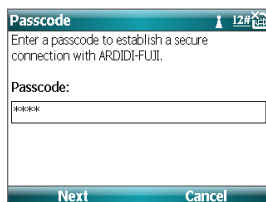


- 12 Select  **Next**



use the default name or
enter an easily recognized
name for the device by yourself.


- 13 Select  **OK**

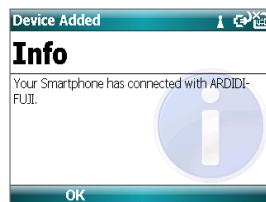


7

Getting Connected

 
191



14 Select  Done

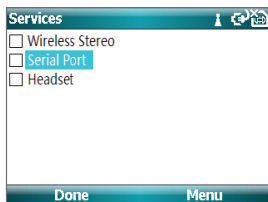 

15 Begin Internet Sharing via Bluetooth

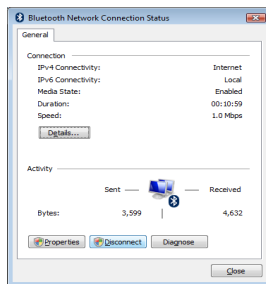 

7

Getting Connected

192

 


7.5 Network Wizard

Network Wizard will detect the SIM card you are using and auto configure the appropriate network and data service settings (MMS, Internet, etc) of your service provider. Therefore, you will not need to manually perform the configuration. You can still use Network Wizard to manually set up the network and data service connection.

Action: Using the Network Wizard

- 1 Select **Start**

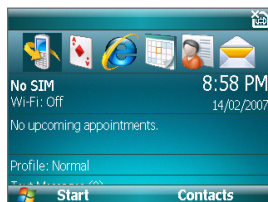

Open the Start Menu.

- 2 Select **Accessories**
Then Press **OK**



Open Network Wizard

- 3 Select **Network Wizard**
Then Press **OK**

 


Select the system provider you wish to use.

7

Getting Connected

193




- 4 Select  <country>
and <Operator>
Then Press  OK



Selects your service provider / network.

 5

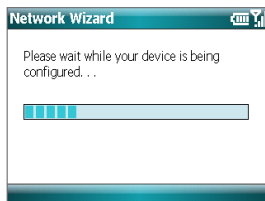

- 6 Select  OK



After system restart, your service provider configuration will be updated.

7

Getting Connected



 
8

Topic

Experiencing Internet

In this topic, you will learn about...

1. Internet Explorer
2. Windows Live




Action Index


Using Internet Explorer	199
Opening Web Pages from Favorites	200
Opening web pages from the address bar	201
Open a web page from History	202
Search for a web page in the Internet	202
Browsing web pages.....	203
Go to the previous page.....	204
Reload the web page contents	205
View history	205
Add to Favorites	206
Switch to single column view.....	207
Switch to the Desktop view	208
Switch to the Fit to Screen view.....	208
Browsing the web page in full screen mode	209
Turn off Show Pictures.....	209
Adjust the scale for displaying text.....	210
SetupInternet Explorer.....	211
Internet Explorer General settings	212



Internet Explorer Connection settings	213
Clear temporary files.....	214
Clear Cookies	215
Clear history	215
Using Dopod Service	216
Using Windows Live	217
Log in Windows Live for the first time	218
Use Live Search to search the Internet	219
Data synchronization with Windows Live Service.....	219
Logging in Windows Live Messenger	220
Logging out of Windows Live Messenger	221
Sending messages	222
Chat room invitation.....	223
Send File	224
Send pictures.....	224
Sending a voice message	225
Receive files	225
Adding New Contacts.....	226
Removing a contact	226
Changing online status	227
Change the displayed name, personal information and displayed picture	227

 

Use Messaging Center to send/receive Window Live Mail	228
Configure general options in Windows Live™	229
Switch the Windows Live account.....	230

 


8.1 Internet Explorer

You can use Internet Explorer® to browse the most of websites. Some web pages may not be displayed properly as some specific web page technologies, such as Flash®, are not supported by the phone. Your phone will automatically create a HSDPA, 3G or GPRS connection for you while browsing web pages. You can also use Internet Explorer® to browse websites when you use a Wi-Fi wireless network, ActiveSync® or Windows Mobile™ Device Center in Windows Vista™ to connect to a computer.

 GPRS available	 Wi-Fi function enabled, but phone not connected to a wireless network yet
 GPRS in use	 Wi-Fi connected
 3G available	 Connecting to wireless network
 3G in use	


Action: Using Internet Explorer

 1 Select  **Start**

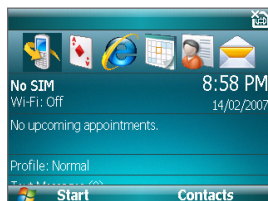


Open the Start Menu.

2 Select  **Internet Explorer**
Then Press  **OK**

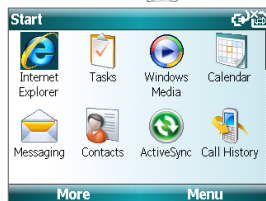

Open Internet Explorer.

3

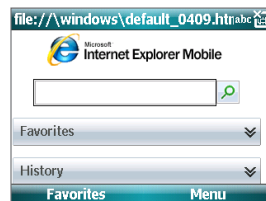


Internet Explorer Homepage.

8.1.1 Open web pages

You can open web pages from “Favorites” or “History” on the Internet Explorer® Homepage, or enter the web address directly in the address bar. You can also use the Search bar on the homepage to search for Internet web pages.

8


Experiencing Internet Entertainment

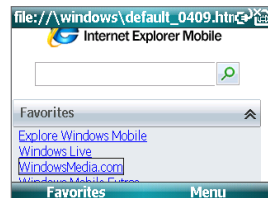

▲ Internet Explorer Homepage.


Action: Opening Web Pages from Favorites

- 1 Select 
Then Press  OK

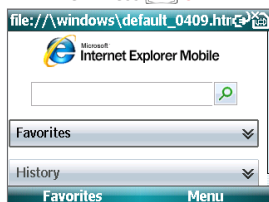


Expand My Favorites list in the Internet Explorer Homepage.

- 2 Select 
<Favorites>
Then Press  OK

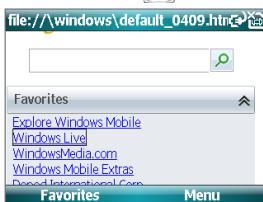


Open the web site you selected, for example: MSN Mobile.

3

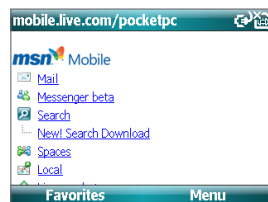


Browse web pages.

 


Action: Opening web pages from the address bar

1 Choose  **Menu** >
Address Bar

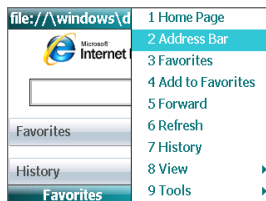


Open the Menu within the Internet Explorer Homepage.

2 Enter <address>

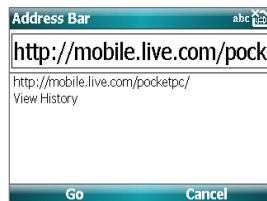

Enter the address directly, or select your previously browsed pages.


3 Select  **Go**

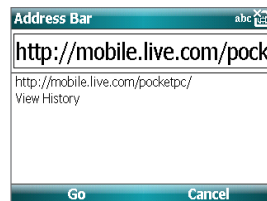

8

Experiencing Internet Entertainment


4

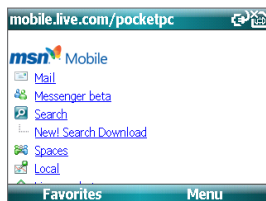


The web page has been opened successfully.

Action: Open a web page from History


- 1 Select  Then Press  OK
- 2 Select  History Then Press  OK

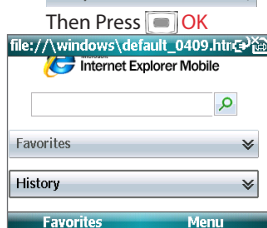

Expand the History list within the Internet Explorer Mobile.

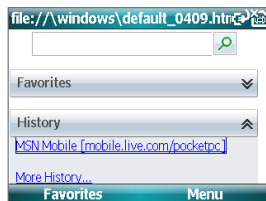


Open the web site you selected, for example: MSN Mobile.

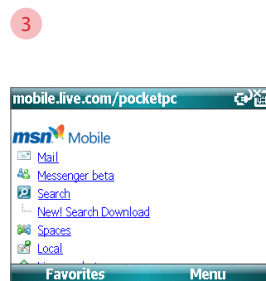


Browsing web pages.

Action: Search for a web page in the Internet


- 1 Select  Search bar
- 2 Enter <Search string> Then Press  OK

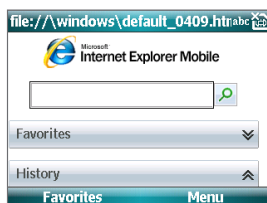

Move the cursor to the Search bar within the Internet Explorer.

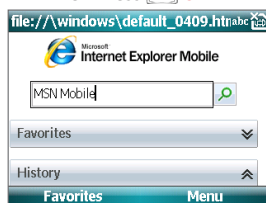

Please enter the string that you want to search, for example, MSN Mobile.

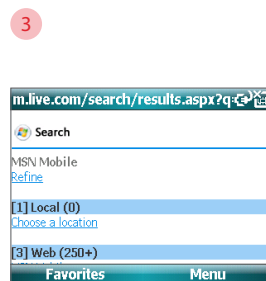


Browsing web pages.



8.1.2 Browsing web pages

When you use Internet Explorer® to browse web pages, you can use the directional buttons to move around the screen. Press the OK button on a link to jump to another page. When you use HSDPA, 3G or GPRS mobile network for browsing web pages, the phone will automatically make data connections. If you want to interrupt the data connection, please stop the data connection in the Comm Manager.

For more about the Comm Manager, please refer to the description in Chapter 7.

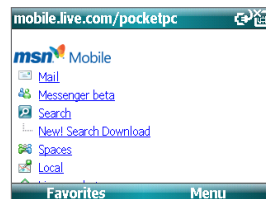

▲ Browsing web pages.

Action: Browsing web pages

1 Entering <text>




Enter the text directly in the field when the cursor is in the text field. For example, mobile.

2 Press the  OK button



Press the OK button to send the entered text.

3 Select  Yes

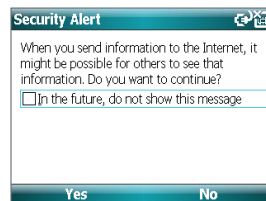

Security warning remind you that you are about to send information to the Internet.

8

4



Scroll the results of the page. Use the directional button to move down the screen and view one search result.

Action: Go to the previous page

1 Press Back button



Go back to the previous page.

5

Move
<directional button>
Press the OK button



Move the directional button to the hyperlink you need, press the OK button to link to the web page.

6

Move
<directional button>



Use the directional button to move around the screen. Browse the web page you wish to view.

2




You have successfully returned to the previous page.

Action: Reload the web page contents

- 1 Select 
Menu > Refresh

2

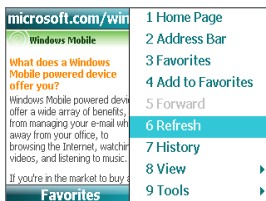

Refresh the current web page.



Web page has been refreshed.


Action: View history

- 1 Select 
Menu > History

2




View the browsed web page history.

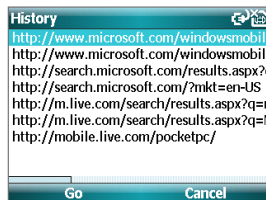

The current browsed web page history.

- 3 Select  History
Select  Go

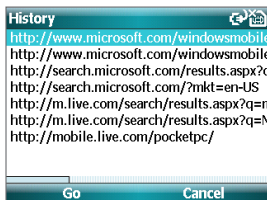

Move the directional button to the web page you wish to browse then press Go and jump to this web page.

8.1.3 Adding a Web Page to Favorites


Add the current web page to Favorites. You can also sync with the computer to retrieve the contents from Favorites. To sync with computer, please refer to section 9.4.



▲ Add to Favorites.


Action: Add to Favorites

- 1 Select  Menu >
Add to Favorites

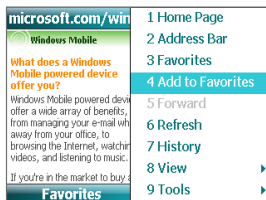


Add the current web page to Favorites for future browsing.

- 2 Enter <name/web address/folder>
Then select  Add

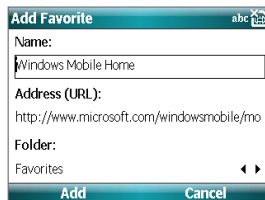

Enter the name you wish to be saved. If necessary, you can also modify the web address and save the folder.

- 3

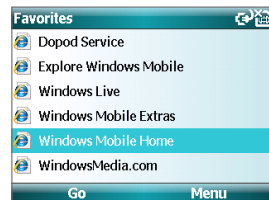

The web page has been successfully added to Favorites.



8.1.4 Web Page Display Options

Switch web page viewing modes. You can use the fit-to-screen viewing mode, or view the web page in its original size.




▲ Change the web page display.

Action: Switch to single column view

1 Select  Menu > View > One Column

2

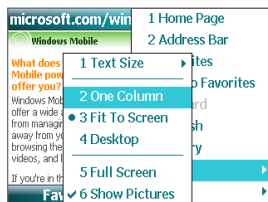

Switch to single column view.




(Note 1)

(Note 1) The contents are sorted in a single column. The column width is the same as screen width. You will rarely need to do a horizontal scroll.

Action: Switch to the Desktop view

- 1 Select  Menu > View > Desktop

2

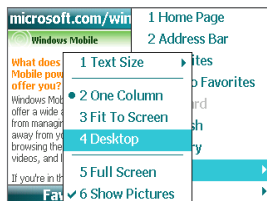

Switch to the Desktop view.



(Note 1)

(Note 1) Retains the same layout and size as the Desktop. When browsing web pages, it requires both horizontal and vertical scrolling of the page.

Action: Switch to the Fit to Screen view

- 1 Select  Menu > View > Full Screen

2



Switch to default view.



(Note 1)

(Note 1) Retain the similar layout as the Desktop, but the screen may shrink the items and edited contents. You will not need to scroll horizontally and can still view the majority of the page.




Action: Browsing the web page in full screen mode

- 1 Select  Menu >
View > Full Screen

2



Select the Full Screen view.

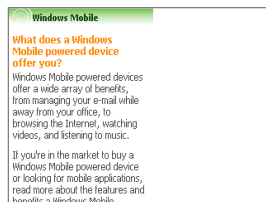

(Note 1)

(Note 1) To exit the Full Screen mode, please press either the left or right soft keys and cancel Full Screen from the menu.


Action: Turn off Show Pictures

- 1 Select  Menu >
View > Show Pictures

2



Do not display pictures on web pages.

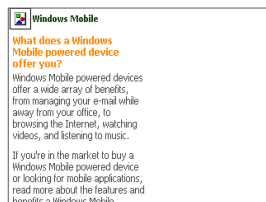

(Note 1)

(Note 1) To open Show Pictures, please follow the first step to re-select the picture to display.


Action: Adjust the scale for displaying text

- 1 Select  Menu >
View > Text size >
<zoom size>

2

8

Experiencing Internet Entertainment

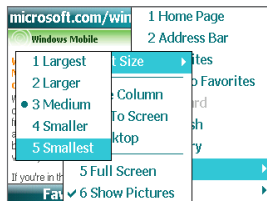

Select the zoom size according to your needs.




Switch to the minimal zoom display.



8.1.7 Internet Explorer Options

Set up Internet Explorer® options.

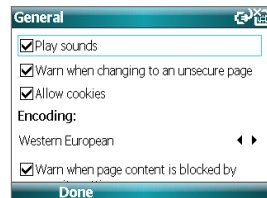

▲ The settings screen.


Action: SetupInternet Explorer

1 Select  Menu > Tools > Options


2



Open Internet Explorer options.

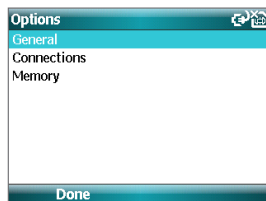


Internet Explorer Setting Options List.

 

8


Action: Internet Explorer General settings

1 Select General
Then Press Done

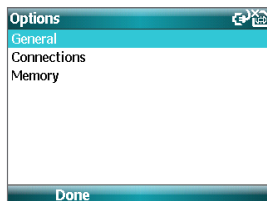

Open the General settings window.

2 Select the <option you wish to configure>
Then select Done

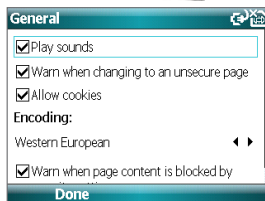


(Note 1)

(Note 1) General Setting Options

Play sounds	Choose if the sound should be played from the web page.
Warn when changing to a page that is not secure	Choose if a warning prompt should be displayed when connecting to an insecure web page.
Accept Cookies	Choose if Cookies should be accepted.
Encoding	Sets the web page default character encoding.
Prompt warning message when the security settings is set to block web page contents	When you browse to a web page that is blocked due to security settings.


**Action: Internet Explorer Connection settings**

- 1 Select  **Connections**
Then Press  **Done**

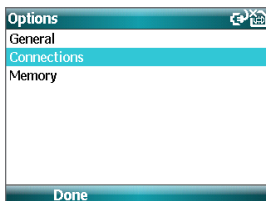

Open the Connection settings window.

- 2 Select the  **<option you wish to configure>**
Then select  **Done**

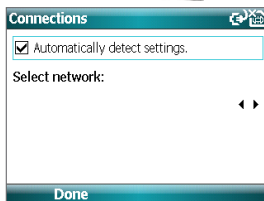

(Note 1)

(Note 1) Connection Setting Options.

Automatic detection settings

Choose if you wish to automatically detect the network settings. While using Wi-Fi network connection, please check the automatic detection setting. While you are not connected to the WiFi network, or disconnected from the WiFi connection, the system will automatically connect to the network using HSDPA, 3G or GPRS.

Select Network

Select the network connection you wish to use.




When using the automatic detection, it will decide the connection method according to the web page that you want to browse. Otherwise, it will follow the contents **Start > Settings > Connection** and use the corresponding connection methods.

Action: Clear temporary files

8

Experiencing Internet Entertainment

- 1 Select  **Memory**
Then Press  **Done**

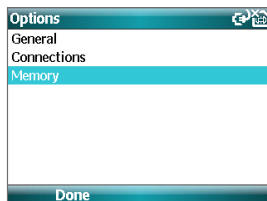


Open the Memory settings screen.

- 2 Select  **Temporary Files**
Select  **Clear**




Select Clear Temporary Files.

- 3 Select  **Yes**

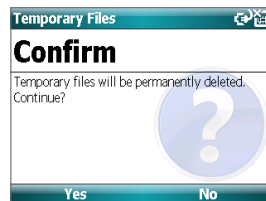

Confirm clearing of the Temporary files.

- 1 Select  **Done**

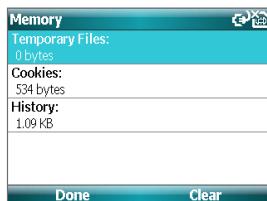

Temporary Files have been cleared from the memory.




When you browse the Internet, web pages and pictures will be cached in your phone's storage space. This will allow quick access in the future and reduces transfer cost. These are temporary files. Deleting these files can effectively increase the storage space on the phone.



Action: Clear Cookies

- 1 Select  **Cookies**
Then press  **Clear**

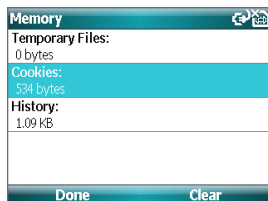

Select to clear Cookies.

- 2 Select  **Yes**




Confirm to delete Cookies.

 Cookies are files on personal information and actions taken that have been recorded by the website.

 Deleted cookies cannot be restored.

Action: Clear history

- 1 Select  **History**
Then press  **Clear**

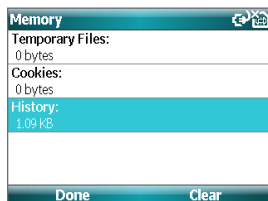


Select to clear history.

- 2 Select  **Yes**



Confirm the deletion of the web page browsing history.

- 3 Select  **Done**

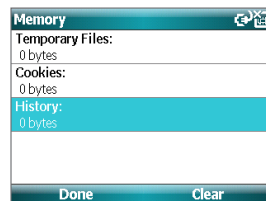

History has been cleared.

8.1.8 Dopod Service

You can use the link in Internet Explorer® or enter <http://www.dopod.com.tw/PDA/> in the address bar to open the Dopod Service web page. The Dopod Service web page will be periodically updated to provide the latest service information for the phone.




▲ Dopod Service website.

Action: Using Dopod Service

- 1 Select Favorites


Favorites

Then Press OK

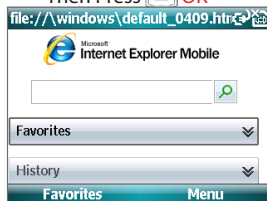

Expand Favorites list in the Internet Explorer Homepage.

- 2 Select Dopod Service
Then Press OK

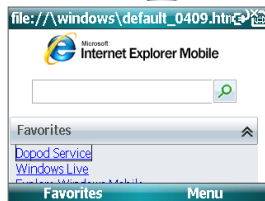


Open Dopod Service.

3



 
Browse Dopod Service Web page.



8.2 Windows Live

Windows Live™ integrates several Internet-related services including Live.com, Live Search, Windows Live Mail, Windows Live Messenger and Windows Live Spaces. You can send and receive instant messages and browse/draft Hotmail® e-mail through Windows Live™. To create an Internet connection, please refer to Chapter 7 Connecting to Wireless Communications.


For using Windows Live™ service, you must have Microsoft Passport®, Hotmail® or Windows Live™ account. If you already have a Hotmail or msn e-mail account, it means that you already have a Passport®. If you do not have an account, please go to <http://login.live.com> to apply for a Windows Live ID.

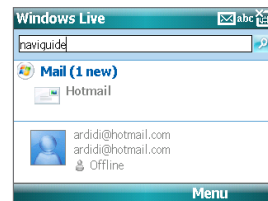

▲ Windows Live Homepage.

Action: Using Windows Live

1 Select **Start**

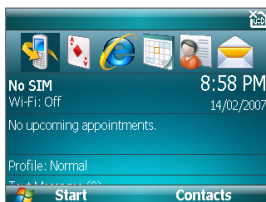


Open the Start Menu.

2 Select **Windows Live**
Then Press **OK**



Open Windows Live.

3

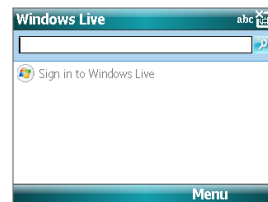


Windows Live Log in page.




Action: Log in Windows Live for the first time

- 1 Select Log Windows Live
Then Press OK

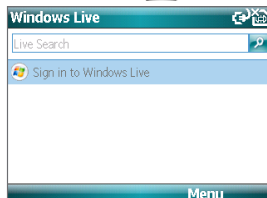


Log in Windows Live. Please make sure that your phone can connect to the Internet correctly.

- 2 Select Accept

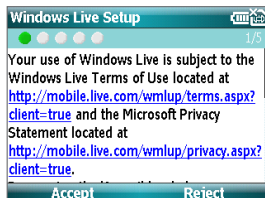


Accept the user agreement for Windows Live.

- 3 Enter <e-mail address> and <password>
Then select Next

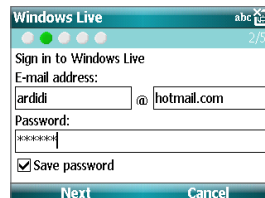

Please enter your Windows Live account and password.

- 4 Select Windows Live Service
Then Select Next

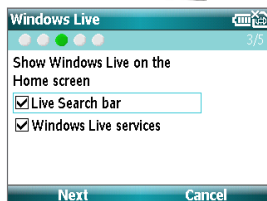


Select whether to display Windows Live Service on the screen or not.

- 5 Select <the contents to be synchronized with the phone> Then Select Next



Select the contents to be synchronized with the phone, for example: e-mail.

- 6 Select Done

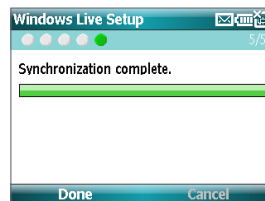


Configuration is completed.



Action: Use Live Search to search the Internet

1 Select Live Search


Live Search

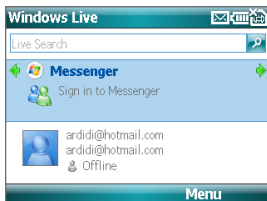

Windows Live Homepage.


2 Enter <Search string>

Then Press OK

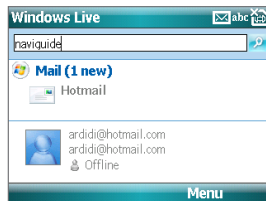

Enter the key words for searching the web pages, for example, NaviGuide.

3

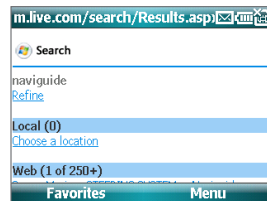

Search results of Live Search.


8

Experiencing Internet Entertainment

Action: Data synchronization with Windows Live Service

1 Select


Messenger

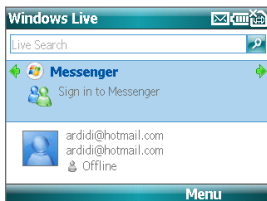

Windows Live Homepage.


2 Select Synchronize

(Left/Right directional buttons) Then Press OK

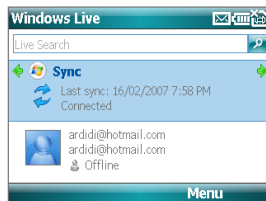

To perform the synchronization. Please make sure that your phone can connect to the Internet orrectly.

3

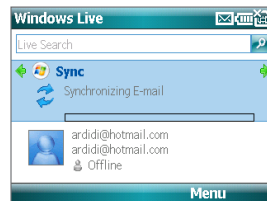

Synchronizing.

219

8.2.1 Live Messenger

8


You can use Windows Live Messenger® for instant communication with your friends. If you log in Windows Live Messenger® on your phone, other people will see you as logged in by mobile device. The built-in Live Messenger® in the phone supports Sending/Receiving of text messages, emoticons, sending/receiving files/pictures/voice messages and viewing pictures and personal information, but it does not support voice conversation.



Logging out of Windows Live Messenger® will effectively reduce power consumption and data transfer fees.

Action: Logging in Windows Live Messenger

1 Select **Start**

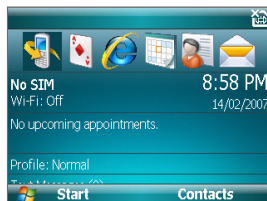

Open the Start Menu.

2 Select **Messenger**
Then Press **OK**



Open Messenger. You can also open Live Messenger within Windows Live.



3 Select **Log in**




Live Messenger Log in screen. You need to use Windows Live to configure the log-in account.

4 Select  OK

5

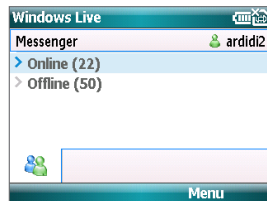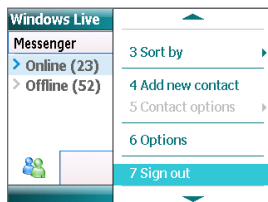**Action: Logging out of Windows Live Messenger**1 Select  Menu >
Sign out

2

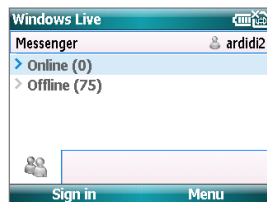


After logging out of MSN Messenger, your friends will not be able to send messages to you.

8


Action: Sending messages

- 1 Select  **Contacts**
Then select  **Send IM**

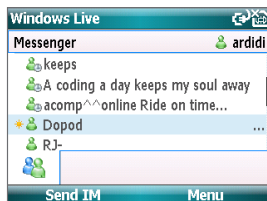


You can also press the OK button directly to send messages to contacts.

2

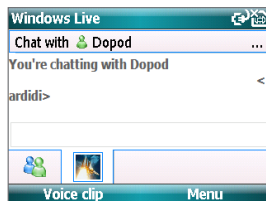


Chat window.

- 3 Entering **<text>**
Select  **Send**

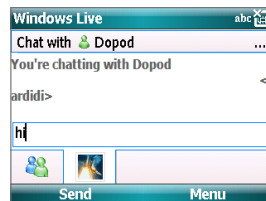

Enter the conversation text.
To enter text, please refer to Chapter 2.

- 4 Select  **Contacts**
Then select  **Send IM**

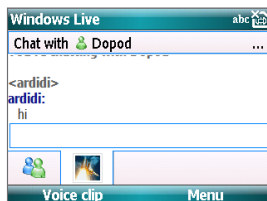


The entered message text has been sent successfully.

5




The returned message from recipient will also be shown on the screen.

- 6 Select  **Menu** > **End conversation**

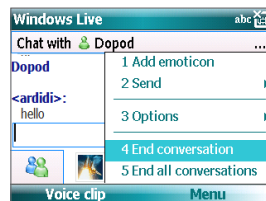


Close the Chat window.

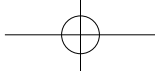

Action: Chat room invitation

- 1 Select **Menu**
> **Options** >
Add Participant

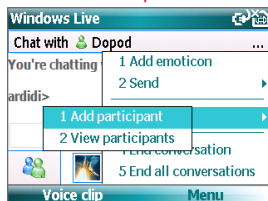


In Chat, invite other contacts to join the conversation.

- 2 Select **<Contacts>**
Then select **Add**



Select the contact you wish to invite.

- 3

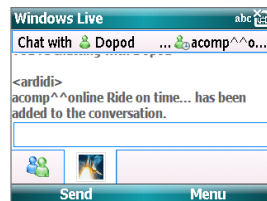


Performing chat room conversation.

8

Experiencing Internet Entertainment


Action: Return to My Contacts

- 1 Select **Left**
directional button

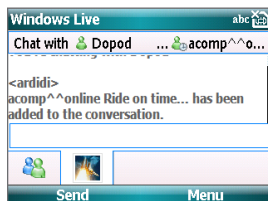

Switch back to Contacts list.


- 2

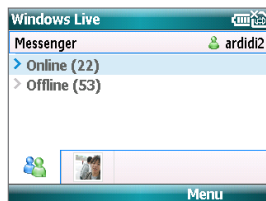

Return to My Contacts list without closing the chat window.

Action: Send File


- 1 Select  Menu > Send > File
- 2 Select  <file> Then press  Select
- 3

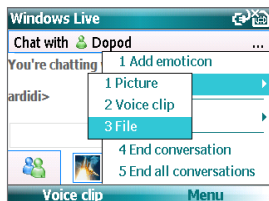

Chat window with a Live Messenger Contact.




Select the file to be sent.

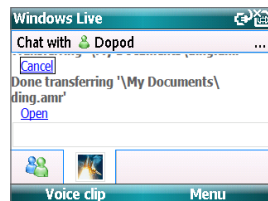


Wait for the recipient to accept your file and then start sending.

Action: Send pictures


- 1 Select  Menu > Send > Picture
- 2 Select  <Picture> Then press  Select
- 3

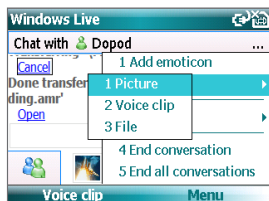


Chat window with a Live Messenger Contact.

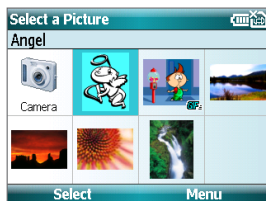

Select the picture to be sent.

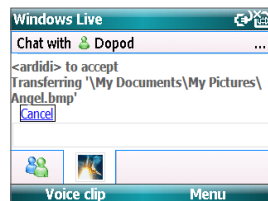


 Wait for the recipient to accept your picture and then start sending.

**Action: Sending a voice message**

- 1 Select  Voice clip
- 2 Select  Send


3

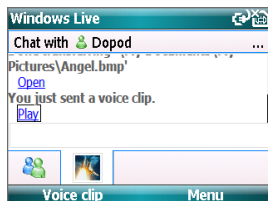

Chat window with a Live Messenger Contact.



While recording a voice message, select Send to stop the recording and then send the message out.

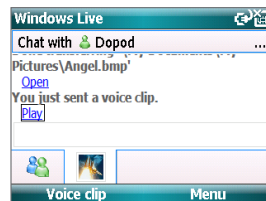


The Voice message has been sent to the receiver.


Action: Receive files

- 1 Select  Accept
Or  Reject

2

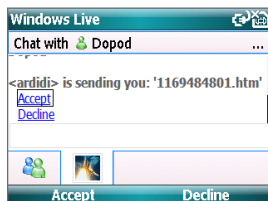


While your contact is sending files or pictures, you can select to accept or reject the transmission.

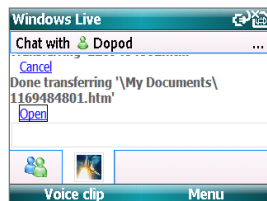


After the transmission is completed, select Open to browse the file.

Action: Adding New Contacts

- 1 Select  **Menu** >
Add New Contact
- 2 Enter <contact account>
Then press the  **OK**
button

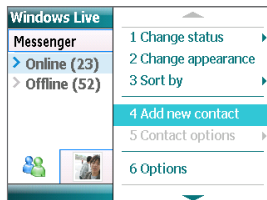


Adding a New Contact.

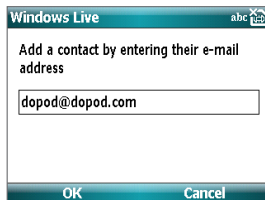


For example, dopod@dopod.com

Action: Removing a contact


- 1 Select  <the contact you wish to remove>
- 2 Select  **Menu** >
Contact Options >
Remove contact
- 3 Select  <Remove Options>
Then press the  **OK**

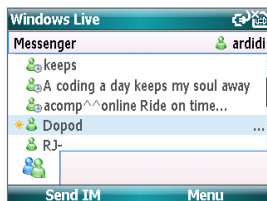

Select the contact you wish to remove

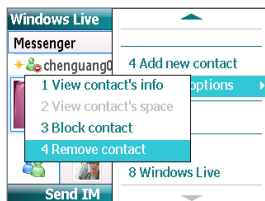

Remove contacts.

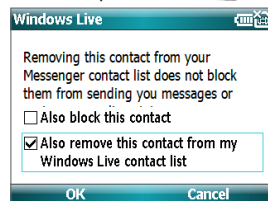


You can block the contact or remove it from the Windows Live Contacts List at the same time.




Action: Changing online status

1 Select **Menu** >
Change Status

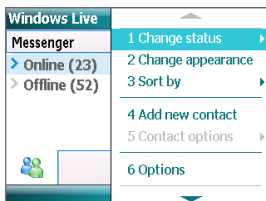


Live Messenger Contact List screen.

2 Select <status>
Then Press OK

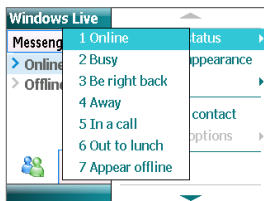

You can change your status according to your needs.


3

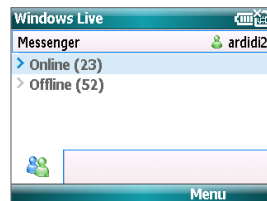

You have successfully changed your status. For example, Online.


Action: Change the displayed name, personal information and displayed picture

1 Select **Menu** >
Change appearance

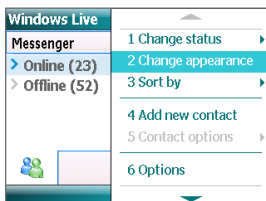


Live Messenger Contact List screen.

2 Edit <displayed name/
personal information/
displayed picture>

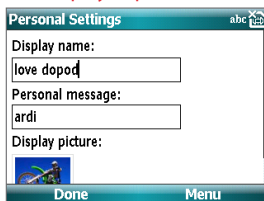

Set the displayed name that your contacts will see.


3

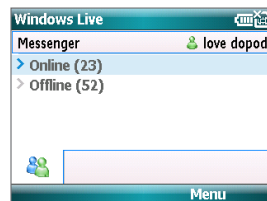

Successfully change the displayed name, personal information and displayed pictures.

8.2.2 Windows Live Mail


Use the Windows Live™ in the phone to synchronously send/receive e-mail in Windows Live Hotmail. You can view and download the latest e-mail, send/receive, reply or move and delete e-mail from the built-in “Messaging Center” For using this service, please set up a Windows Live account (refer to section 8.2). For editing, sending, browsing e-mail, please refer to Chapter 5.

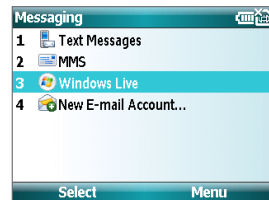

▲ Windows Live Mail.


Action: Use Messaging Center to send/receive Window Live Mail

1 Select **Start**

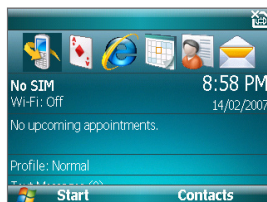


Open the Start Menu.

2 Select **Messaging Center**
Then Press **OK**

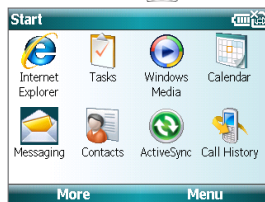


Opens the Messaging Center.

3 Select **Windows Live**
Then press **Select**

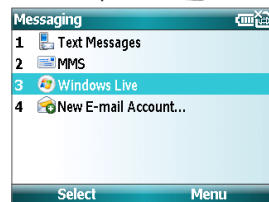


 For editing, sending, browsing e-mail, please refer to Chapter 5.



8.2.3 Windows Live Options

Configure the related options in Windows Live™

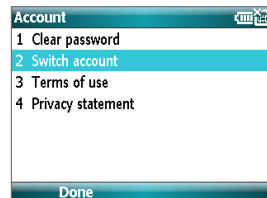


▲ Switch the user account.


Action: Configure general options in Windows Live™

1 Select  Menu > Options

2

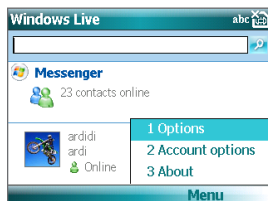

Windows Live Homepage.

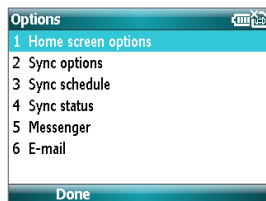


In the setting screen for General Options (Note 1), please select the option to be configured.

(Note 1) Description of Windows Live General Options

Home screen option	Select whether to display Windows Live Service on the Home screen or not.
Sync Option	Configure the contents that the phone will synchronize with Windows Live Service.
Sync schedule	Configure the frequency or time that the phone will synchronize with Windows Live Service.
Sync Status	View the synchronization status and time with Windows Live
E-mail	Set the text size for previewing e-mail and whether to send the e-mail immediately.
Messenger	Set Live Messenger to automatically play voice messages, the type of message notification and the text size in the chat window.


Action: Switch the Windows Live account

- 1 Select 
Menu > Options

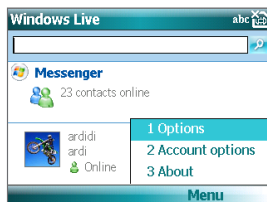

Windows Live Homepage.

- 2 Select 
Switch account
Then Press  OK

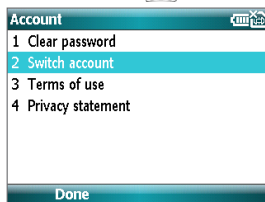


Switch the user and use other log-in names to sign in.

- 3 Select  Yes



 Confirm to switch the account.



9

Topic

Synchronizing Your Phone


In this topic, you will learn how to...

1. Windows Mobile Device Center and Office Outlook 2007
2. Initial Connection
3. Using ActiveSync
4. Synchronize with the Computer with Windows XP
5. Synchronize via Bluetooth
6. Sync with Exchange Server
7. Synchronization transfer and file management through ActiveSync
8. Advanced PC Sync Settings
9. Sync Music, Video, and Pictures
10. Import pictures and videos to the computer
11. Installing Software
12. ActiveSync troubleshooting



Action Index

Install Windows Mobile Device Center into the computer ...	5
Install Microsoft Office Outlook	7
Connecting to the phone for the first time.....	9
Activate ActiveSync on the phone.....	11
Configure the phone to sync with Windows XP.....	12
Opening the computer's Connection Settings window	14
Setting Bluetooth sync cooperation relationship	15
Sync with computer via Bluetooth	17
Setting Exchange Server Synchronization	18
Setting the phone's scheduled synchronization.....	19
Using Windows file explorer to browse internal folders on the phone	21
Using Windows file explorer to sync and transfer files	22
Manage the cooperation relation with the computer	24
Change the items for synchronization	25
Transfer the music and video clips to your phone	27
Set the automatic sync play list.....	28
Import pictures and videos to the computer.....	29

 

Installing software through ActiveSync.....	31
Add or remove a program to/from the mobile phone	32
Use the advanced network connection function.....	33



9.1 Windows Mobile Device Center and Office Outlook 2007

9.1.1 About Windows Mobile Device Center and ActiveSync

You must install ActiveSync® on a computer in order to sync information and exchange data with the computer. Through the close integration with Microsoft Office Outlook®, you can easily send personal information in Microsoft Office Outlook® to the phone or computer. If the Microsoft Exchange Server® in your company supports Exchange ActiveSync®, your phone can sync information with the remote Microsoft Exchange Server® via a HSDPA, 3G or GPRS connection.

Using Microsoft ActiveSync®, you can:

- Sync phone and computer data. For example: personal information such as Microsoft Office Outlook® contacts, tasks, calendar, and e-mail, etc., as well as syncing pictures, movies, and music multimedia data.
- Sync the phone with an Exchange Server®. Sync with a remote server via Exchange Server® to update personal information such as Outlook contacts, tasks, calendar appointments, e-mail, etc.
- Directly exchange data between the phone and a computer without synchronization.
- Configure sync options. Select the sync data types and specific amount of data to sync. For example, sync calendar information for a specified number of weeks in the past.
- Create backups on the computer for your contacts, calendar, and task information. If data on your device is lost, you will be able to install software to your Windows Mobile™ device from the Data Restoration to Mobile Device feature of Office Outlook on the computer through ActiveSync.
- Install ring-tones and themes to your handset.
- Install software to your handset.

You can obtain the ActiveSync® installation program from the included Getting Started Disc. In addition, you can also download the latest version of the ActiveSync® installation program from Dopod or Microsoft® Download Center website (<http://www.microsoft.com/windowsmobile>).

9.1.2 Install Windows Mobile Device Center



If you want to synchronize your phone with your computer, you will need to install a synchronization program such as Windows Mobile Device Center in Windows Vista or Microsoft ActiveSync 4.5 (or above) in Windows XP.



You can install the Windows Mobile Device Center from the CD-ROM according to the Instruction in the User CD or from **Control Panel > System and Maintenance > Windows Update**.

If your ActiveSync® installation program is downloaded from the Internet, please execute the installation program from the folder it was downloaded to.

Action: Install Windows Mobile Device Center into the computer

1 Click **Setup and Installation**

2 Click **Install**

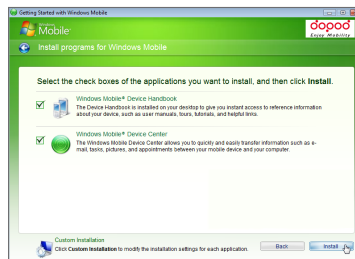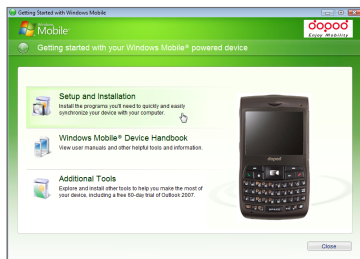





9

Synchronizing Your Phone

3 Installing the Windows Mobile Device Center

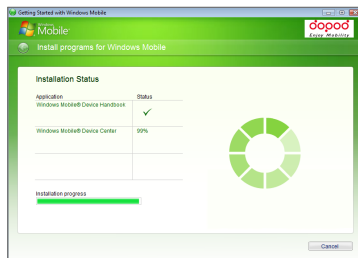

4 Click Done

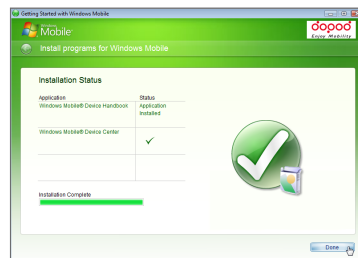

9.1.3 Install Microsoft Office Outlook 2007 (60-day trial version)

You can synchronize and organize personal information in the phone with the Microsoft Office Outlook® application program.

You can install Microsoft Office Outlook® 2007 60-day trial version using the CD-ROM delivered with the phone. If your computer is installed with Microsoft Outlook 2002 or above, it is not required to install it again.


! You can not perform data exchange with Windows Mail (Contacts, Calendar) in Windows Vista or Outlook Express® in Windows XP.

After the 60-day trial, you can go to the following link for further information:


<http://www.microsoft.com/windowsmobile/outlooktrial.mspx>

Action: Install Microsoft Office Outlook


1 Click **Additional Tools**

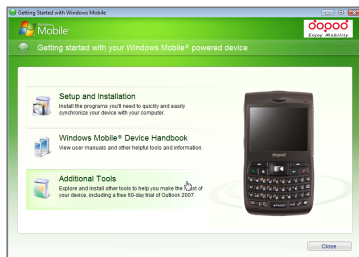


2 Select **Microsoft Outlook 2007 (60-day trial)** -
Install from the disc
Then click **Done**

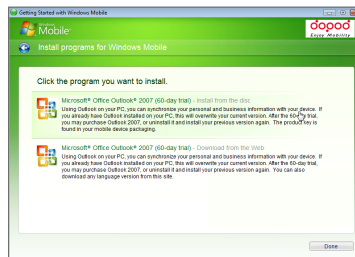

3 Enter the **<Product key>**
Then click **Continue**

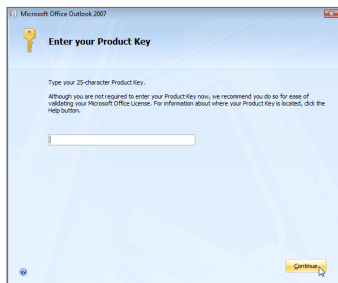


4 Select **I accept the terms of this agreement**
Then click **Continue**

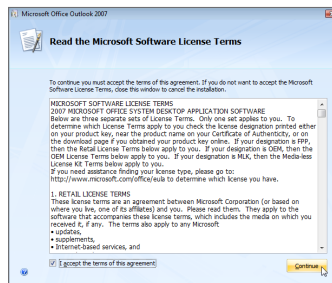

9

Synchronizing Your Phone

 
237




9


Synchronizing Your Phone

5 Click **Install Now**

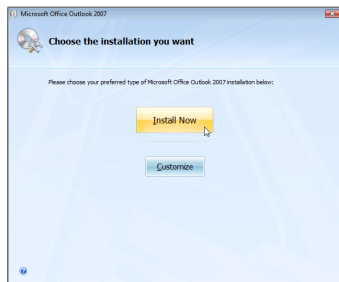

 6 Click **Close** or **Go to Office Online**

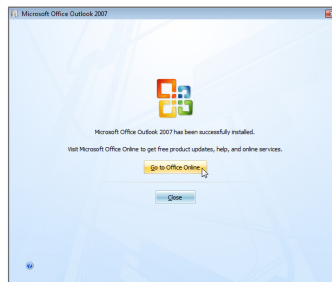



9.2 Establishing Connection

When you connect the phone to a computer with a USB cable, the Windows Mobile Device Center will automatically run the Synchronization Setup Wizard to guide you through the installation.

Before establishing a connection, you must make sure the phone power is on and connected to the computer by the transfer cable. To obtain connection through Bluetooth, please refer to section 9.7.

If your computer is already installed with Office OneNote 2007, you can use the OneNote Mobile software installed in the phone to synchronize the OneNote notes in your computer to the mobile phone.

You can create Partnership relationships with two computers at most, however the e-mail can be synchronized with only one computer.


9

Synchronizing Your Phone

Action: Connecting to the phone for the first time

1 Click **Set up your Device**


2 Select **<Type of content>**
Then click **Next**

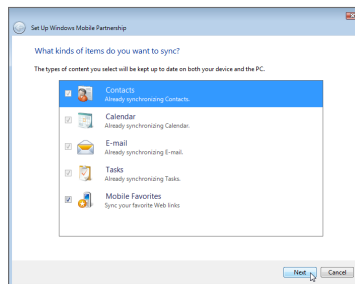


239



- 3 Enter <Device name>
Then click **Set Up**

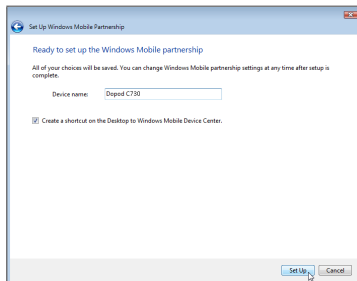


- 4 Select <Type of content>
Then click **Next**

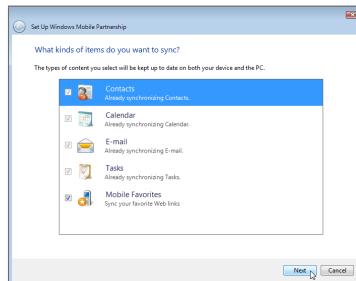

 - 5 Synchronization is completed. You can now perform various tasks in the Windows Mobile Device Center.





9.3 Using ActiveSync

After connecting to a computer with USB cable or Bluetooth, the computer and phone will automatically activate ActiveSync®. You can also manually control sync operation on the phone or computer. After the connection is removed from the phone or computer, ActiveSync® will automatically stop the sync operation.


If you have already configured Microsoft Exchange, you can activate ActiveSync on the phone to synchronize with Exchange.

9

Synchronizing Your Phone

Action: Activate ActiveSync on the phone

1 Select Start

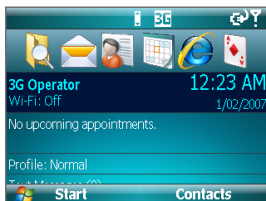


2 Select ActiveSync
Then Press OK
button



Opens ActiveSync.

3

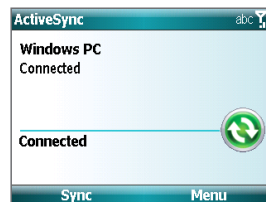

The ActiveSync screen.

241



9.4 Synchronizing with a Computer installed with Windows XP

If the operating system in your computer is Windows XP, please upgrade it to Service Pack 2 and install ActiveSync 4.5 or above.


9

When you connect the phone to the computer, the Synchronization Setup Wizard will automatically appear. Please complete configuring of the synchronization relation according to the instructions.

Action: Configure the phone to sync with Windows XP


1 Click **Next**

2 Check **<Items to Sync>**
Then click **Next**

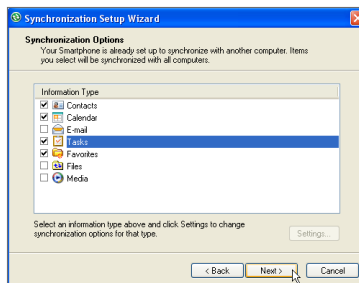



3 Click **Next**

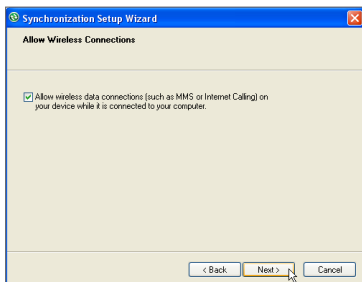


4 Click **Finish**



6

Synchronizing Your Phone

5

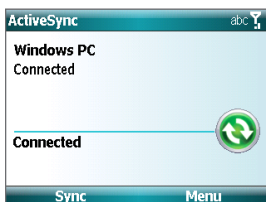

After the synchronization wizard is completed, the ActiveSync window will appear.



9.5 Synchronize through Bluetooth Connection

You can create a connection between the phone and computer using Bluetooth and use ActiveSync® to synchronize information.

9

If you want to synchronize through Bluetooth, please activate the Bluetooth function in your computer and then create a connection through the ActiveSync in the mobile phone. During the initial use of this function, you must first set the Bluetooth cooperation relation with the computer. For using Bluetooth, please refer to section 7.2.


Synchronizing Your Phone

Action: Make Connection Settings

- 1 Click **Mobile Device Settings > Connection Settings**




- 2 Select
<Allow connection to the following devices>
Then select **Bluetooth**

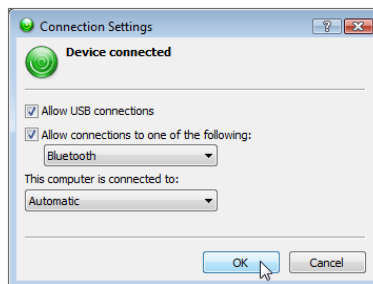



Action: Setting Bluetooth sync cooperation relationship

1 Select **Menu** > **Connection via Bluetooth**

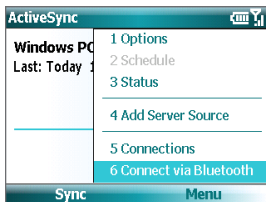


2 Select **Yes**



After selecting Yes, the Bluetooth function of the phone will be automatically activated.

3 Select **Add new device**
Then Press **OK**

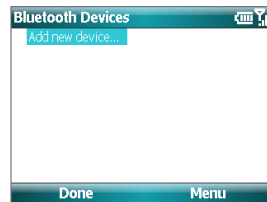

The ActiveSync screen.

4




Scanning nearby Bluetooth device.

5 Select **<the new device to be added>**



6 Input <Passcode>

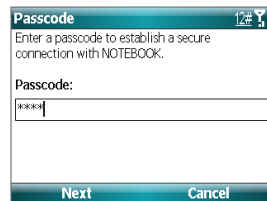

You must enter the same password on the matched device to complete the matching procedure.

9


Synchronizing Your Phone

245




9

- 7 Enter **<Bluetooth password>**
Then click **Next**

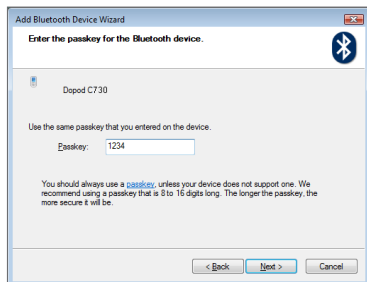

- 8 Select  **OK**

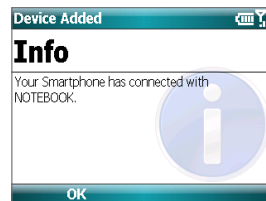


- 9 Select  **Next**




You can use the default name or enter an easily recognized name for the device by yourself.

- 10 Select  **ActiveSync**
Then select  **Done**

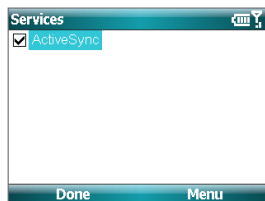


Make sure the ActiveSync option is checked.

11

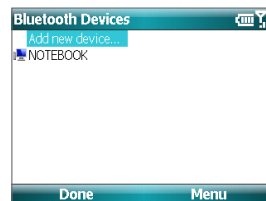


 
Set the device name you wish to display.



Action: Sync with computer via Bluetooth

1 Select  Menu >
Connection via Bluetooth

2

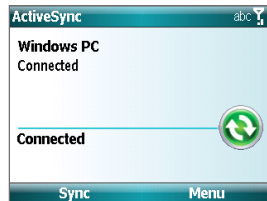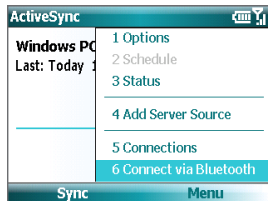

Connection is successful.

9

Synchronizing Your Phone



9.6 Sync with Exchange Server


If your company or the telecom service provider provides Synchronization function with Exchange, you can configure the phone to synchronize the data with Exchange. By synchronizing with Exchange, it will be much easier for you to maintain the agreement of the data in your computer, phone and Exchange.

Synchronizing with Exchange will give some additional functions: for example, Direct Push (Note 1), remote data clearing, enhanced security and additional functions for Messaging Center. The synchronization with Exchange is not limited to connection with the computer. You can also use Internet connections such as Wi-Fi or HSDPA/3G/GPRS to synchronize with Exchange.

(Note 1) Direct Push allows you to keep connection with Exchange, when a new e-mail item arrives in Exchange, the server will inform you to synchronize your phone to save the power consumption and transmission cost. When you configure for scheduled synchronization as "When new items arrive", it means using the Direct Push function. To use Direct Push®, you must first configure the HSDPA/3G/GPRS connection, please refer to section 7.4.

Action: Setting Exchange Server Synchronization

- 1 Select  **Menu** >
Add Server Source

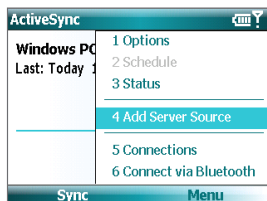

- 2 Enter <server address>
Select  **Next**



Please ask the system administrator for the server address.


- 3 Enter <user name/
password/network
domain>



Please check with your system administrator for the user name, password, and network domain



- 4 Select **<sync data type>**
Then select **Finish**

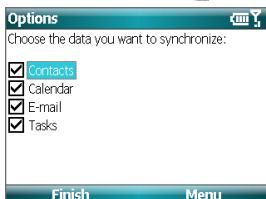


Select the data type you wish to sync with the computer. For example, Contacts. (Note 1)

(Note 1) You can also select “Settings” on the screen to set the sync data type options. To set the sync data type options, please refer to section 9.8.2.


If your phone is connected to Exchange Server, you can configure the phone to automatically synchronize with Exchange at the specific time slot.

Action: Setting the phone's scheduled synchronization


- 1 Select **Menu > Schedule**

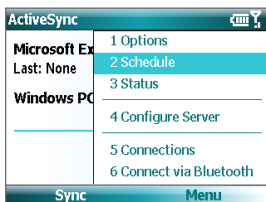


- 2 Select the time period for **<peak time>** and **<off peak time>**

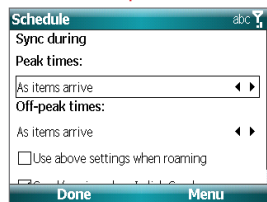

- 3 Select **Menu > Peak Times**

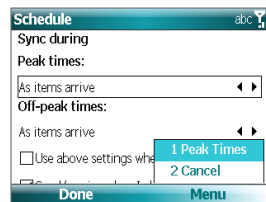

 If you select <when new items arrive>, it will perform sync when the server receives new items.




9


Synchronizing Your Phone

- 4 Select  **<peak time>**
and **<off peak time>**

- 5 Select  **Done**

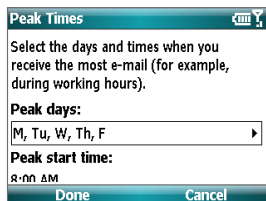

Select your custom peak dates.

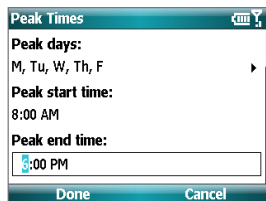



9.7 File Transfer and Management

When the phone is connected with your computer, you can use the File Explorer in the computer to manage the files in the phone.

You can put your documents in “My Documents”, i.e., My Documents folder in the device, or in Storage Card folder, i.e., your memory card.

If you want to place ringtone files, please put the files in MP3, WMA, MIDI, AMR or WAV format in Device\My Documents\My Ringtones folder.

You can open but cannot edit the documents, pictures or files in the mobile device.

 
If you want to browse the documents or pictures in the mobile device, please copy the files into the folder in your personal computer first and then edit.

9


Synchronizing Your Phone

Action: Using Windows file explorer to browse internal folders on the phone


1 Click



2 Click \

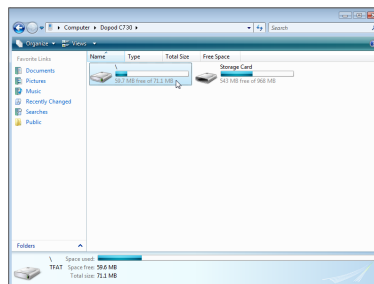


251

 


9

Synchronizing Your Phone

3 Click and open **My Documents**

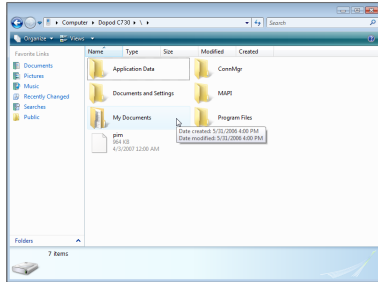


4 You can put documents, ringtones or other files here.

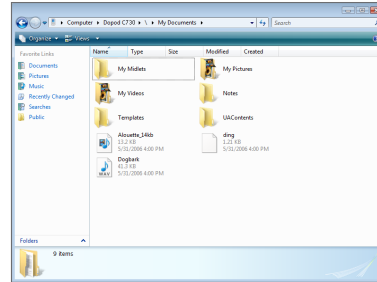


Action: Using Windows file explorer to sync and transfer files


1 Click <files on the computer>
Then click **Organize** > **Paste**

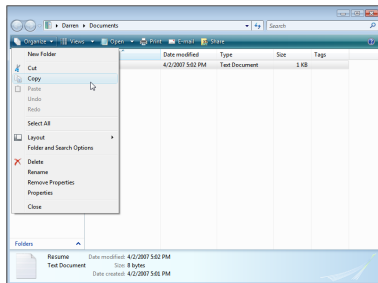


2 Click **Organize** > **Paste**

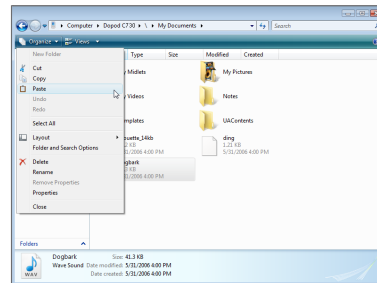


252

 

3 Click **Yes**

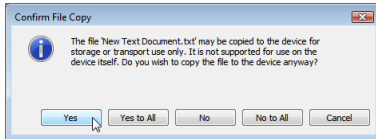

4 The file on the computer is now sent to My Documents folder on the phone.

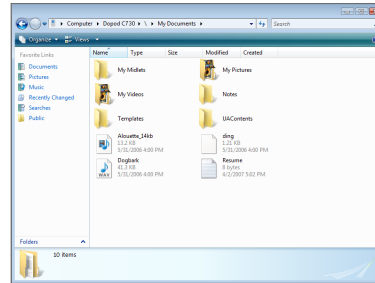

9

Synchronizing Your Phone



9.8 Advanced PC Sync Settings

You can set the connection, sync conflict processing policy, sync data, and options scheduling with the phone using ActiveSync® program on the personal computer. When configuring ActiveSync®, please do not connect the phone to the computer.

9


9.8.1 Sync Conflict Processing Rules

 
When sync conflict happens, you can select two processing methods:

- Replace items on the device: the phone's sync information contents will be the same as on the computer.
- Replace items on the desktop computer: the computer sync information contents will be the same as on the phone.

Action: Manager a Partnership with the computer

- 1 Click **Mobile Device Settings > Manage a Partnership**
- 2 Select **<If there is a conflict>** menu
Then click **Save**

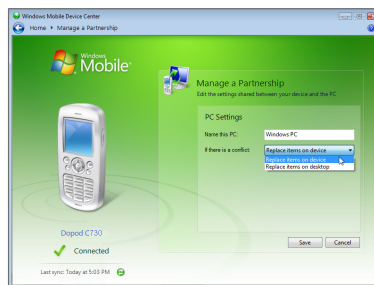



9.8.2 Sync Information and Options

When you first establish a connection, the sync configuration wizard will ask you for the sync data options. For example, Contacts, Calendar, etc. You can establish the connection on the phone and then modify the sync option types.

Action: Change the items for synchronization

- 1 Click **Mobile Device Settings** > **Change** content sync settings
- 2 Select **<Sync data type>**





- 3 Select **e-mail**
Then click Sync Settings



- 4 Select **<Sync the past...>** option item
Then click Save





9.9 Sync Music, Video, and Pictures

If you want to carry music, videos, pictures or recorded TV programs with you, use Windows Media Player to synchronize the multimedia files stored in the computer into (the storage card in) the mobile phone.


! Prior to performing multimedia data sync, you must execute the following actions:

 
- Install Windows Media Player 11 or above in your computer (Windows Vista has a latest version Windows Media Player built-in).
- Use USB cable to establish connection between the phone and computer for ActiveSync® sync connection. Please stop the phone's Bluetooth connection operation.
- Insert a memory card with a capacity of more than 128 MB into your phone.

Action: Transfer the music and video clips to your phone


1 Click **Add new media to your device** from Windows Media Player.

2 Click **Sync**

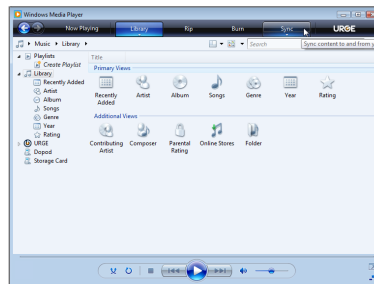




- 3 Drag <music> into the sync list


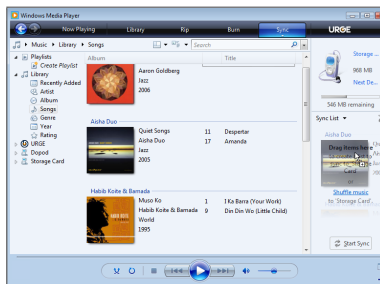


- 4 Click Start Sync

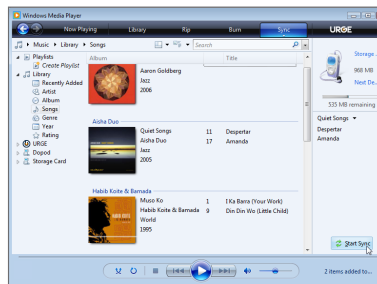

Action: Set the automatic sync play list

- 1 Click Sync > Storage Card > Set Up Sync
- 2 Drag the <play list> to the play list to be synchronized

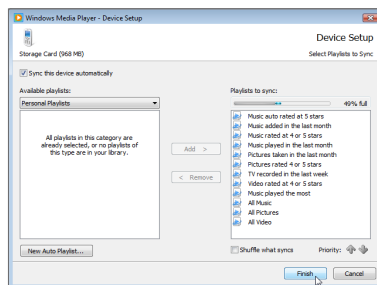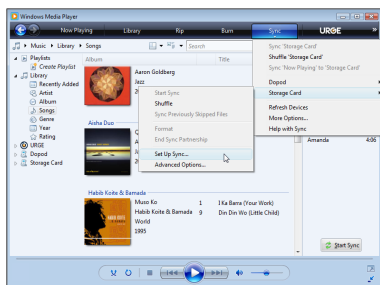



9.10 Import pictures and video clips


You can import pictures and video clips captured by the phone into the computer to keep the pictures in the computer. Afterwards, you can perform post-process, slide show viewing, or share with a friend via e-mail.

9

Synchronizing Your Phone

Action: Import pictures and videos to the computer

- 1 Click **Pictures, Music and Videos** > New picture/video clip is available for import
- 2 Importing pictures and video clips.

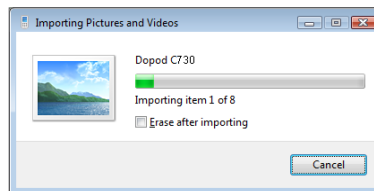


259




9

Synchronizing Your Phone

3 Enter <Picture tag>

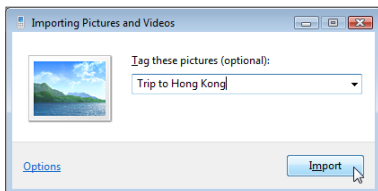

4 The pictures and the video clips have been successfully imported into your computer.

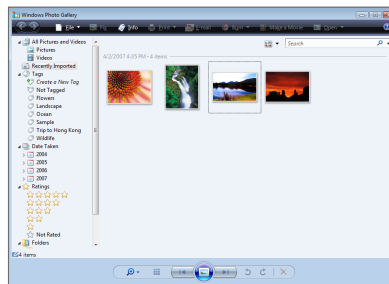




9.11 Installing Software

To install software on your phone, you must first obtain the installation program of Windows Mobile Standard version provided by the software development company.

Please refer to the software installation manual and execute the installer on your computer. The software will be automatically installed to the phone while the phone is connected to the computer. You will then need to select the software installation location and complete the software installation process.

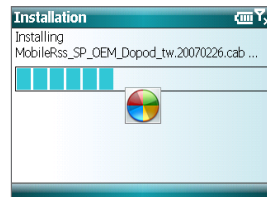


▲ Installing software on the phone.

9

Synchronizing Your Phone


Action: Installing software through ActiveSync

1 Select <location> then select Install

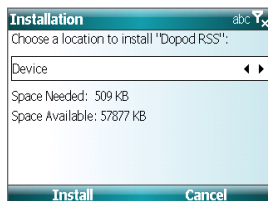

Select the software installation location, for example, Device (mobile phone) or Storage Card (memory card).

2

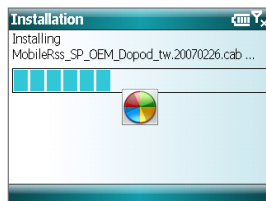

Install the software to the phone.

3 Select Done



Software installation process is now complete.

261



Action: Add or remove a program to/from the mobile phone


- 1 Click **Programs and Services > More**
- 2 Click **Add/Remove programs**

9


Synchronizing Your Phone



- 3 Check **<Programs to Install>** and then click **OK**

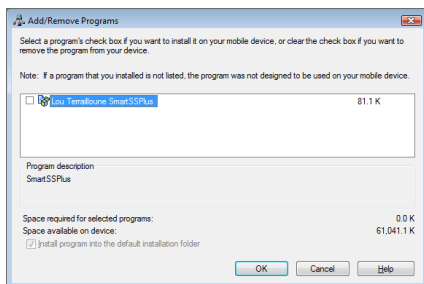

262

 

9.12 ActiveSync Connection Troubleshooting


The synchronization connection on the computer might be affected by anti-virus or firewall software so that you can not successfully create a synchronization connection between the phone and the computer. You may try to solve the problem by canceling **Advanced Network Function** in **Start > Settings > Connection > USB to PC**.




It is strongly recommended to enable advanced network functionality when you are going to transfer a large amount of files.

Action: Use the advanced network connection function


- 1 Select **Settings > Connections**
Then press **OK**

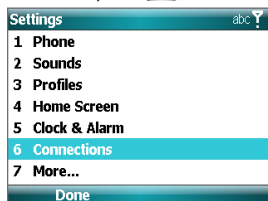

- 2 Select **More > USB to PC**
Then press **OK**

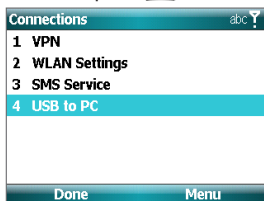

- 3 Uncheck **Enable advanced network functionality**

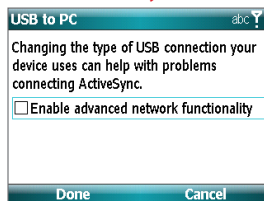


If it is unchecked, the speed of transfer might be slower as a result.



9

Synchronizing Your Phone

 264



Topic

Settings

10


In this topic, you will learn about...

1. Home Screen
2. Phone Settings
3. Sounds
4. Removing Programs
5. Profiles
6. Time and Location
7. Personal Information
8. Protecting Your Phone
9. Power Management
10. Accessibility
11. Finding the Operating System Version Number
12. JOGGR



Index Action

Setting the layout.....	234
Setting the color scheme	236
Setting the background picture	236
Enter Phone Settings	237
Enter Band Select	238
Setting the sounds.....	239
Set the voice notes as ring tones.....	240
Playing and deleting sounds.....	241
Specified event sounds	241
Setting custom ring tones.....	242
Removing Programs.....	243
Choosing Profiles.....	245
Selecting profiles from Quick List.....	246
Editing profiles	247
Reset the profile to default	248
Setting up time and date.....	249

 

Setting the alarm.....	250
Enable display of clock in the unlock message screen	251
Setting up personal information	252
Security settings	253
Enable the PIN code	254
Disable the PIN code.....	254
Modifying the PIN code	255
Encrypt the contents in the storage card	255
Set the password of the phone	256
Change/Disable phone password.....	256
Setting power management.....	257
Accessibility options.....	258
Search for Operating System Version Number	259
JOGGR options	260



10.1 Home Screen

Your most frequently used program icons will be displayed along the top of the Home screen. The Home screen will display your next appointment, new message count (voice mail, text message, e-mail, or MMS messages), and other important information. When you select any single icon or item from the Home screen, it will open the appropriate application.


10

Settings

You can set the layout, color scheme, and background picture for the Home screen. Please install the Theme .HME files into the phone, or put the wallpaper and the layout .XML files into \Application Data\ Home folder.

Action: Setting the layout

1 Select  **Start**

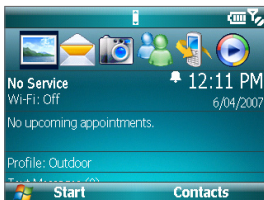


2 Select  **Settings**
Then Press  **OK**



Open the Settings screen.


3 Select  **Home screen**
Then Press  **OK**

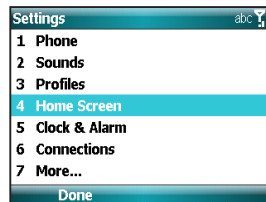

Open the Home screen settings.




- 4 Select  <Home screen layout>

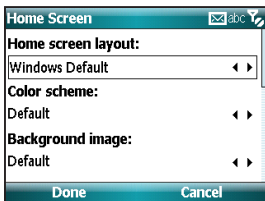


Layout consists of Default, Large font, and Dopod 3D layout, etc.

Home screen layout:

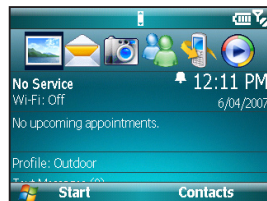


Windows Default layout.

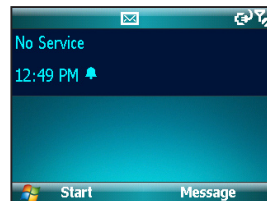


Large font.

10

Settings

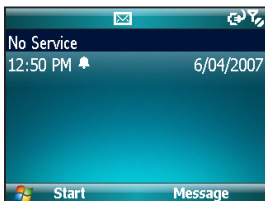


Windows Simple

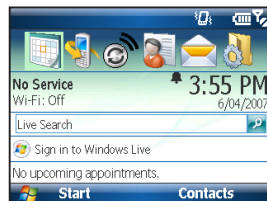

Windows Live Default

 269




Action: Setting the color scheme

1 Select


<color scheme>

Then Select Done

2

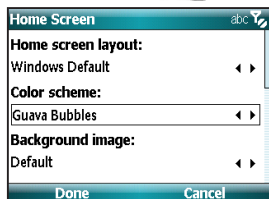

Select the Home screen color scheme. For example, Guava Bubbles.

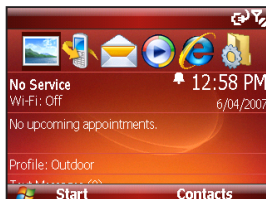

The Home screen color scheme is set to Guava Bubbles style.


Action: Setting the background picture

1 Select


<Background image>

Then Select Done

2

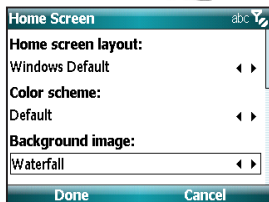


Select the background image you wish to use. For example, Waterfall.

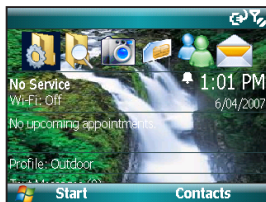

The background image has been changed successfully



 Please store the theme files in \Application Data\Home folder to allow them to be set as background images.



10.2 The Phone Settings

Perform the settings for the phone functions. Select whether to display the caller ID, set call forwarding, call transfer, and call waiting functions, etc. At the Phone Settings, you can:

- Choose if you wish to display your caller ID to the party calling you.
- Choose if you wish to use call forwarding when you missed the call, where busy, or cannot pick up the phone, etc.



Using this service may require connection fees. Please check with your service provider for more information.

- Set up fixed dialing and fixed dialing mode. Using fixed dialing can limit your dialing recipients and avoid high cost and unknown telephone bills.
- By restricting incoming and outgoing calls, you can save your connection fees when roaming.
- Choose if you wish to use call waiting.
- Manually configure the mobile network connection to the service provider.


Action: Enter Phone Settings

- 1 Select  **Start**
Select  **Settings**




Open the Phone Settings screen.

- 2 Select  **Phone**
Then Press  **OK**

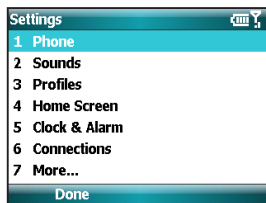


Select Phone Setting.

3

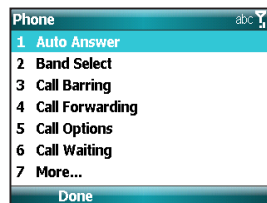

View the items available for you to set up.

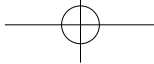

10.2.1 Band Select(3G/GSM setup)

Select the network type and band type .


- 0 : Auto
- 1 : GSM
- 2 : WCDMA

10

Settings

Action: Enter Band Select

1 Select  Band Select

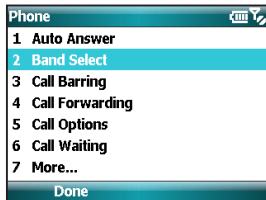


Select the Band Select.

2 Select  <Network Type>
Then Press  OK




Select phone network.

3

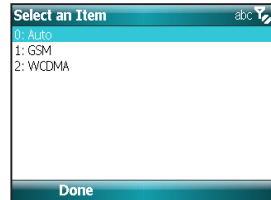

Band select done.

 

10.3 Sound

You can modify the ringtones, alarms and the sounds played for various events in the sound settings.



Please store the custom ring tones in the **\\My Documents\\My Ringtones** folder.

Please refer to 10.5 for switching, modifying, deleting the operating mode to set the mode for the ring tone, such as vibrate or vibrate with ring tone, and the volume.

Action: Setting the sounds

- 1 Select **Start**
Select **Settings**



Open the Start Menu.

- 2 Select **Sound**
Then Press **OK**



Select the Settings screen.

- 3 Select **<Ring tone>**
Then Press **OK**



Select the sound setting.



Action: Set the voice notes as ring tones


1 Select **Start**

2 Select **Voice Notes**

3 Select **<Notes>**

10


Settings

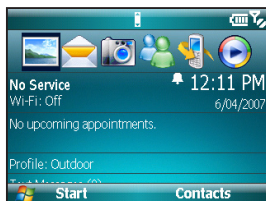

Open the Start Menu.




Open the voice notes.

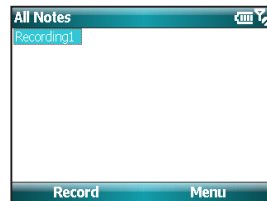


Select the voice note you wish to use. For example, record1.

4 Select **Menu > Set as Ringtone**


5 Select **OK**

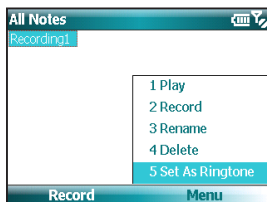

Set the selected voice note as ring tone.

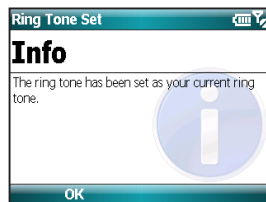


 Ring tone has been set as the voice note once you return to Sound Settings screen.




Action: Playing and deleting sounds

Select  Menu > Play

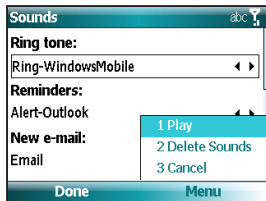

Play the currently selected sound.

Select  Menu > Delete Sounds

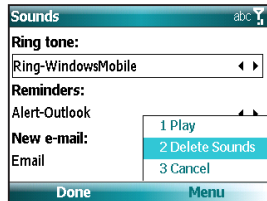


Delete the currently selected sound.

10

Settings


Action: Specified event sounds

1 Select  <Event>
Then Select  <Tones>

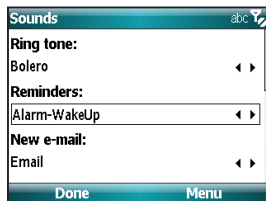


Select the sound assigned for the specific event, for example the reminders is set to Alarm-WakeUp.

2 Select  Done

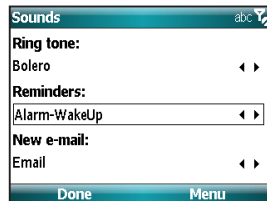

Set up is now complete.

 275






Action: Setting custom ring tones

Select 

<Custom Ring Tones>

10

Settings

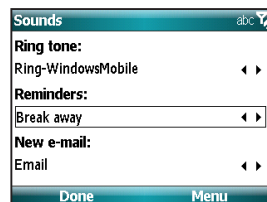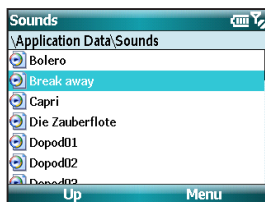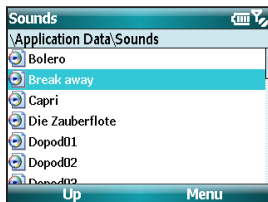


Your file will be shown directly in the Sound Settings screen.

You can use MP3, WAV, MIDI, or WMA audio file formats as the phone's ring tones. It is recommended that the ring tone files should be smaller than 300KB.

Please place the sound files of the phone in any one of the following folders, the setting program will automatically search the following folders:

- \My Documents\My Ringtones
- \Application Data\Sounds
- \Storage card
- \My Documents

 Please refer to section 9.9 to transfer files through ActiveSync® and section 11.2 File Explorer




10.4 Removing Programs

Removing the programs that are currently installed on the phone. Removing programs can increase storage space on the phone. If you have insufficient storage space, try to remove any unnecessary software from the phone.

Action: Removing Programs

1 Select  **Start**

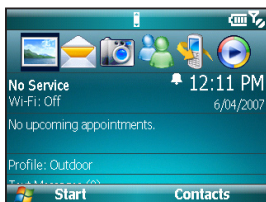

Open the Start Menu.

2 Select  **Settings**
Then Press  **OK**



Open the Settings screen.

3 Select  **Remove Programs**



Select the Remove Programs.



10


Settings

- 4 Select <Program>
Then Press OK




Select the program you wish to remove. You installed programs will be listed here.

- 5 Select Yes

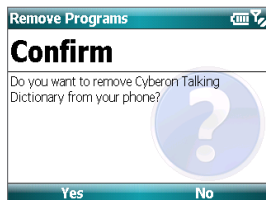


Confirm if the program should be removed.

- 6 Select OK

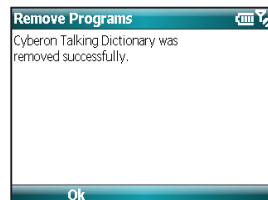

Program has been removed.

 


10.5 Profiles

Use the Profiles to select the notification methods for events or actions. You can set the ringtone, alarm, notification, and system sounds volume or vibrate function.

Edit the profiles to use different settings in different situation/ locations.

If  you feel the ringtone volume is too low, you can adjust the volume as Loud or set to Outdoor mode in the profile

 You can choose the automatic profile. Your phone will automatically switch Normal and vibrate according to busy/free status in your calendar.

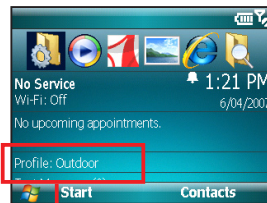


Get to know the currently profile from the Home screen.

10

Settings

Action: Choosing Profiles

1 Select  **Start**

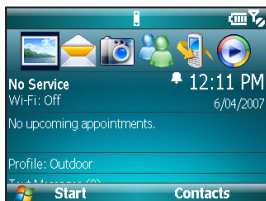


Open the Start Menu.

2 Select  **Settings**



Open the Settings screen.

3 Select  **Profiles**

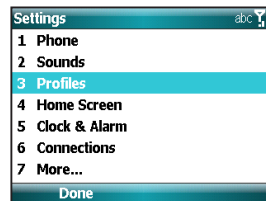




10


Settings

- 4 Select  <profiles>

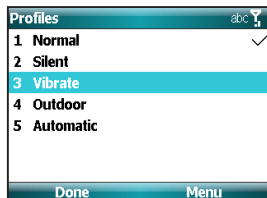

Select the profile you wish to use. For example, Vibrate.


5

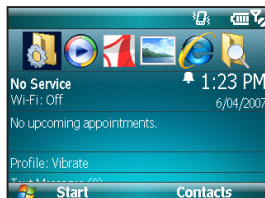

The currently profile will be displayed in Home screen.


Action: Selecting profiles from Quick List

- 1 Press  Power button

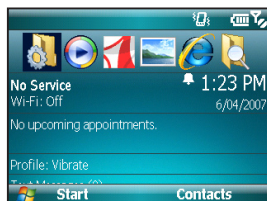


Open Quick List.


- 2 Select  <profiles>
Then Press  OK

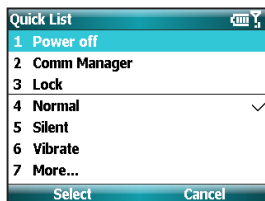

Select the profile you wish to use.


3

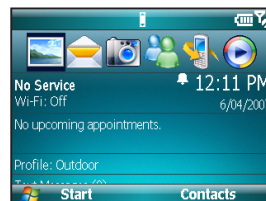

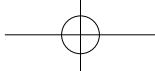

Action: Editing profiles

1 Select **Start**

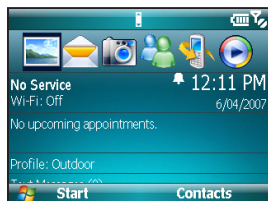


Open the Start Menu.

2 Select **Settings**



Open the Settings screen.

3 Select **profiles**

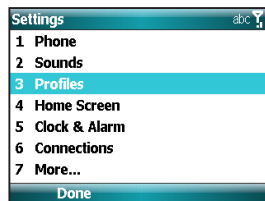


Choosing Profiles.

10


Settings

4 Select **Menu > Edit**

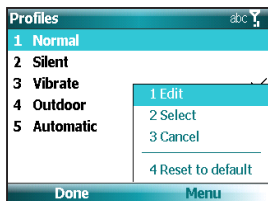


Select the profile you wish to edit. For example, Normal.

5 Edit **<profiles>**
Then Select **Done**

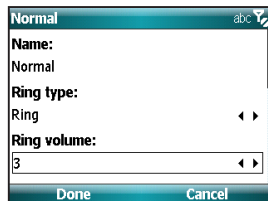

Select other event notification methods and ring tones.

 281




Action: Reset the profile to default


- 1 Select  <Profiles>
- 2 Select  Menu >
Reset to Default

10


Settings

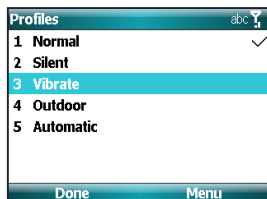

Select the profile you wish to set.

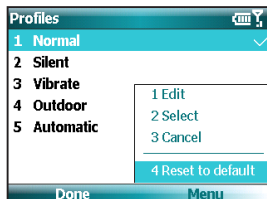

Return the profile to default value.

 


10.6 Time and Zone

Set the time zone along with the current time and date. The time and date information will affect the calendar reminders and the alarm ring time. When you change the time, you can change the time zone here as well. Your selected time zone will affect the corresponding schedules on the calendar.

Set the alarm on/off and the time to go off. For alarm ring tones, please refer to section 10.3.2.

Action: Setting up time and date

1 Select  **Start**

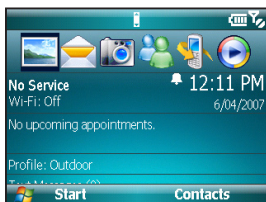


Open the Start Menu.

2 Select  **Settings**



Open the Settings screen.

3 Select  **Clock & Alarm**

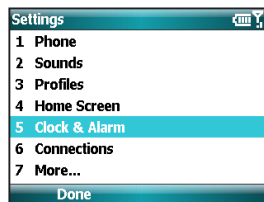


Select the clock and alarm settings.



10


Settings

- 4 Select **Date and Time**

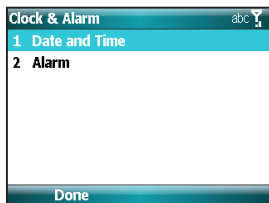

Sets the time and date.


- 5 Select **Time zone**
Enter **<Date/Time>**
Then Select **Done**

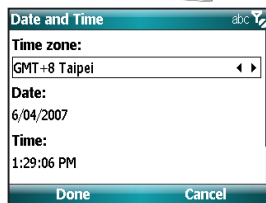

Select the time zone and then use the numeric buttons to enter the current date and time.


Action: Setting the alarm

- 1 Select **Alarm**

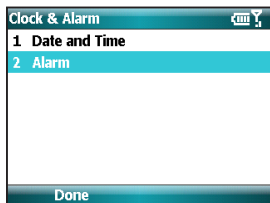

Setting the alarm.


- 2 Select **<Alarm time>**
Select **<Alarm Date>**
Then Select **Done**

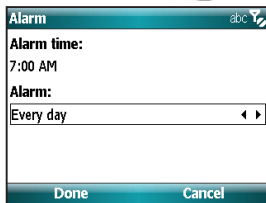

Enter the alarm ring time, and select the alarm as on/off (Note 1).

(Note 1) When selecting AM/PM, use any numeric key to switch between AM/PM time.

 
(Note 2) The alarm will not ring when the handset is off. If you wish to turn off the phone functions, please do so from the Comm Manager.



10.7 Unlock Screen Clock

When the phone keypad has been locked, you can configure the screen to show the current time. You can check the current time without undoing the keypad lock by using this feature.

Please check mark ☒ Enable display of digital clock in the "Unlock" message screen. If the function is disabled, then the screen will only display the message for the user to press "  Undo keypad lock."

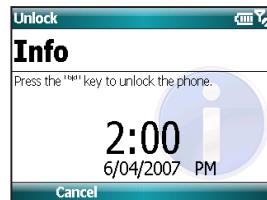

Keypad unlock screen

10

Settings

Action: Enable display of clock in the unlock message screen



1 Select  Settings

2 Select  Unlock Screen
Clock

3



Open the Settings screen.

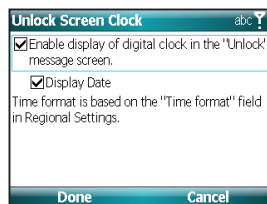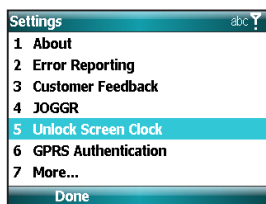

285



10.8 Personal Information

In case your phone is misplaced, entering the owner information may help with getting the phone back as quickly as possible.

! For some third-party software, the name you enter here will be required as a part of registering the serial number. Please pay attention when you buy third-party software.

10

Settings


Action: Setting up personal information

1 Select  **Settings**



Open the Settings screen.


2 Select  **More >**
Owner information

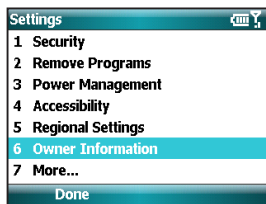

Go to the Owner Information screen.

 3 Enter **Personal Information**





10.9 Protecting Your Phone

There are multiple security measures for your phone. You can set the PIN password (Personal Identification Number) to prevent others from making unauthorized calls. The initial PIN code is provided by your telecom service provider. In addition, you can also use the phone lock code to automatically lock the phone after a period of time. You must enter the correct pass code to be able to continue using the phone, preventing others from unauthorized dialing.

If your mobile phone is synchronizing with an Exchange Server, it may have to be applied with the server security policies, enforcing activation of phone auto locking or remote wipe clearing. Please contact your network administrator for more information.

When you try to enter an incorrect SIM card PIN code more than three times, the SIM card will be locked automatically. Please contact your service provider to obtain the PUK code (PIN unlocking key) to unlock the SIM card.


Action: Security settings

1 Select  **Settings**



Open the Settings screen.

2 Select  **Security**

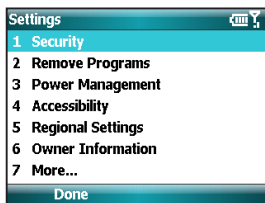


Select the Security settings screen.

3



 
The Security Settings screen.



10


Settings

Action: Enable the PIN code

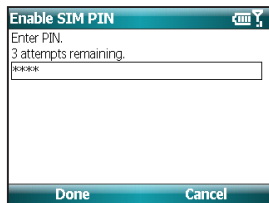

After the PIN code is activated, each time you turn on the phone, you have to enter the PIN code, otherwise you can not use the functions of the phone. For the modification or canceling of the PIN code, it is required to enter the PIN code. If you forget the PIN code, please ask you telecom service provider.

Action: Disable the PIN code

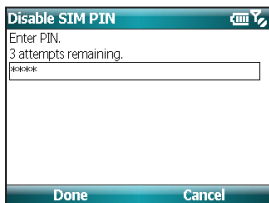


It is required to enter the correct PIN code to disable the use of the PIN code. After the use of PIN code is disabled, each time you turn on the phone, you will not be asked to enter the PIN code.

288

**Action: Modifying the PIN code**

Use  Up/Down button to select the **<field>**
Enter The **Old PIN code/New PIN code**
Press  **Done**

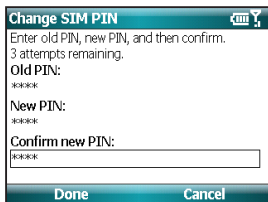

Change SIM PIN

Enter old PIN, new PIN, and then confirm.
3 attempts remaining.

Old PIN:

New PIN:

Confirm new PIN:

Done Cancel

Action: Encrypt the contents in the storage card

Select **Encrypt files placed on storage cards**.

Then Select  **Done**

 Please deactivate **Encrypt files placed on storage cards** before the Hard Reset, otherwise you will not be able to access the data stored in the Storage Card!

 


Encryption

Select this check box to encrypt files as they are placed on a storage card. Such files are readable only by this Windows Mobile-based device.


☒ Encrypt files placed on storage cards

Done Cancel



10

Settings

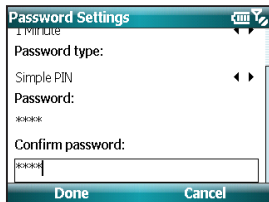

Action: Set the password of the phone

Check <Prompt if device unused for>

Use Up/Down button to select the <field>

Use Left/Right button to select <setting value> or use the numeric buttons to enter the <password>

Press Done

After activating the password, you have to enter the password to unlock the phone lock.


For security reasons, after the phone password is activated, you will no longer be able to use the function of unlocking the lock of the screen clock.

If you can not uncheck the box, it is possible that you are applying security policies of Exchange Server. Please ask your network administrator for more information.

Action: Change/Disable phone password

Enter <Phone Password>

Select Unlock

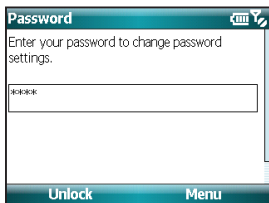

Disable the phone password:

 
Uncheck <if the device is not used for more than the following duration, password prompt will appear>

Change the phone password settings:

Use Up/Down button to select the <field>

Use Left/Right button to select <setting value> or use the numeric buttons to enter the <password>

Press Done



10.10 Power Management

Set the power management system for the phone. Select the idle time to automatically turn off the screen in order to save battery power.

Power management settings options:

Backlight time out on battery	Backlight time of the screen when using the battery.
Backlight time out when charging	Backlight time of the screen when charging the phone.
Display timeout	Set the display timeout time to automatically turn off the screen after timeout
Keypad light sensory mode	Choose whether you wish to activate light sensory mode. If there is insufficient light, the keypad backlight will be activated.


Action: Setting power management

1 Select  **Start** > **Settings**




Open the Settings screen.

2 Select  **More** > **Power Management**

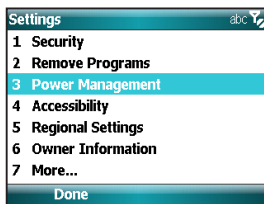

3

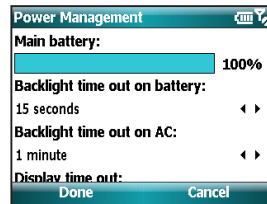



10


Settings

10.11 Accessibility

Set the repeated keypad enter time, confirmation time, incoming notification volume, and Smartdial settings.

Accessibility options:

Multipress time out	Select how many seconds of the button presses are considered as multipress.
Confirmation timeout	Set the confirmation timeout time.
Incoming call alert volume	Select the volume for incoming call alerts.

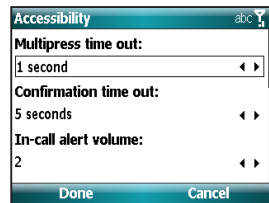


Action: Accessibility options


- 1 Select **Start**
Select **Settings**
- 2 Select **More >**
Accessibility



Open the Settings screen.

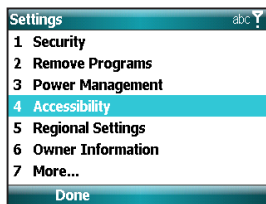


Select the Accessibility.

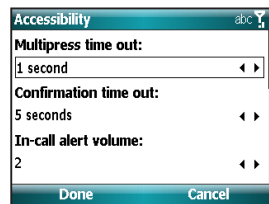



10.12 Find Operating System Version

To view the operating system version installed on the phone, and manufacturer copyright information. You can view the operating system version, manufacturer copyright information, available storage, available memory, storage card space, and ROM version, etc.

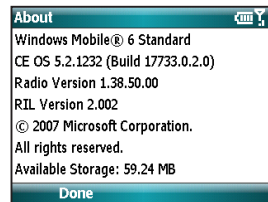

You can see the available storage space on the screen.

10

Settings


Action: Search for Operating System Version

1 Select  **Start**
Select  **Settings**




Open the Settings screen.

2 Select  **More > About**

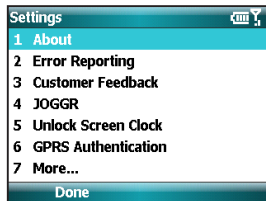

Select the About screen.

3

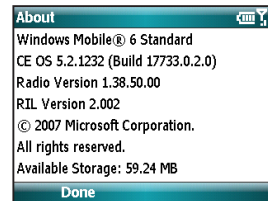



10.13 JOGGR

Configure the JOGGR on the left side of the unit to set the activation status, functions, and double click speeds.

JOGGR options:

Enable JOGGR	Choose whether to activate the side JOGGR.
Function	Configure applicable JOGGR functions, scroll bar, adjust volume, adjust volume (only applicable to incoming calls and Windows Media)
Double-click speed	Select the double click speed.
Scroll speed	Choose the scroll bar scrolling speed.
Enable scrolling sound	Choose whether to activate the scroll bar scrolling sound.

10

Settings


Action: JOGGR options

- 1 Select **Start**
Select **Settings**




Open the Settings screen.


- 2 Select **More > JOGGR**

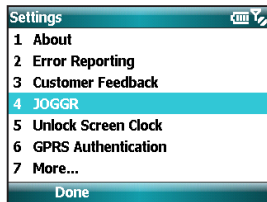

- 3 Select **<Items>**
Then Select **<Options>**
Then Select **Done**

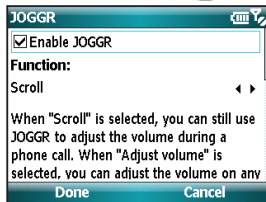

Select options.

 


Topic

11

More Applications


In this topic, you will learn about...

 1. Java Application Programs
2. File Explorer
3. Task Manager
4. Office Mobile
5. SIM Card Manager
6. Calculator
7. Voice Commander
8. Cyberon Talking Dictionary
9. Info Seed
10. Adobe Reader LE
11. Quick Note



Action Index

Using MIDlet Manager.....	264
Using File Explorer	265
Using Task Manager.....	266
Using PowerPoint Mobile.....	268
Using Excel Mobile.....	269
Using Word Mobile	270
Using SIM Card Manager	271
Use the keypads to enter math operators.....	272
Solitaire main screen.....	273
Bubble Breaker main screen.....	274
Launch Voice Commander.....	275
Say Voice Command.....	276
Digit Training.....	276
Look up a word in dictionary	277
Read news headlines from Home screen	278
Update RSS news channel manually	279
Use Adobe Reader LE.....	280
Quick Notes	281

 

11.1 Java (MIDlet Manager)

You can select **Start** > **MIDlet Manager** to open the program.

MIDlet Manager is a Java application run on mobile devices.

Your phone's supported Java version is J2ME. MIDlet Manager allows you to download Java applications such as specially designed games and tools for mobile devices. In addition to installing the Java programs from the files on the local unit directly, you can also download and install Java programs from the Internet.

Please store the downloaded Java programs (JAR) in the My Documents folder in the phone or on the Storage Card. Complete the installation procedure of the Java Application program from the Menu.

For more about transferring files from the computer into the phone, please refer to Chapter 9.


11

More Application

Action: Using MIDlet Manager


- 1 Select 
MIDlet Manager
Then Press  OK

2

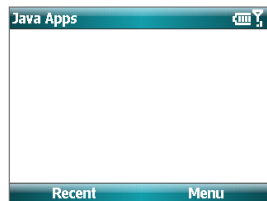

The MIDlet Manager Main screen.

 297



11.2 File Explorer

You can select **Start** > **File Explorer** to open programs.

File Explorer provides many file and folder functions for easy management.

You can move, copy and delete files or folders.

From **Menu** > **Send**, you can also use e-mail to send files.

From **Menu** > **Beam**, you can also use Bluetooth to send files to other Bluetooth device.

11

More Application

You can put files in My Documents folders or storage card. In My Documents folders, it can synchronize files with your computer.

Action: Using File Explorer

- 1 Select **File Explorer**
Then Press **OK**

2


3



Open the File Explorer.



The File Explorer screen.

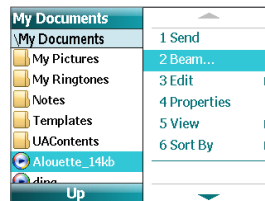



11.3 Task Manager

You can select **Start > Task Manager** to open the program.

Task Manager will allow you to view all programs that are currently running on the phone as a list. You can switch, activate, or end any currently running tasks. You can also view the memory status and battery information on the phone.

When the system reports insufficient memory, you can close programs from the Task Manager.

Under most circumstances, you will not need to manually close programs from the Task Manager.



When you use the Back button to quit from a program, the program is only switched to background operation and is not terminated.

11

More Application

Action: Using Task Manager

- 1 Select **Task Manager**
Then Press **OK**




Open Task Manager.

- 2 Select **Manu > System Info**
Info




The Task Manager screen.

- 3

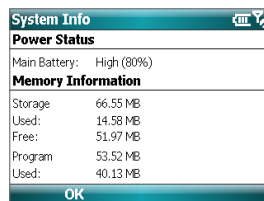

View the Memory Information and Flash Information.

 299



11.4 Office Mobile

Office Mobile includes three applications for you to view or edit Word, PowerPoint and Excel documents on your phone.

 
- PowerPoint Mobile (View PowerPoint® files)
- Excel Mobile (View and edit Excel® files)
- Word Mobile (View and edit Word® files)

11

! Office Mobile does not support all fonts, colors, functions and document versions. However, it will use the closest match to the original documents.

! Office Mobile does not support Office 2007 Open XML file format.

More Application



11.4.1 PowerPoint Mobile

PowerPoint Mobile can view PowerPoint® documents as well as animations and special effects in the document.

While the slide show is being displayed, you can press the directional buttons to select the next or the previous slide.

! PowerPoint Mobile only supports Microsoft Office PowerPoint® 97 or newer version documents. However, documents in PowerPoint® 2007 format are not supported.

11

More Application


Action: Using PowerPoint Mobile

1 Select  **Start** >
Office Mobile




Open Program Files.

2 Select 
PowerPoint Mobile
Then Press  **OK**

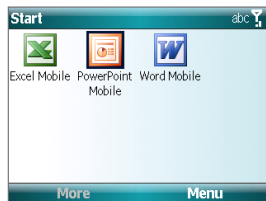

Open PowerPoint Mobile.

3

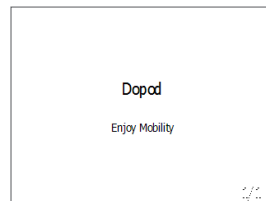

It is now playing the slide show of the PowerPoint file.

301



 
11

302

- 3D table/graphs will be projected as 2D view.

3





11.4.3 Word Mobile

Word Mobile can view Word® documents and the document contents such as tables, pictures, columns, and symbols, etc.

You can use the directional buttons to move and view the document contents.


! Word Mobile only supports Microsoft Office Word® 97 or newer version documents. However, Word 2007 format documents are not supported.

11

More Application


Action: Using Word Mobile

1 Select  **Start** > **Office Mobile**

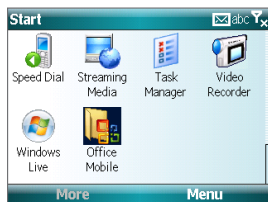


Open Program Files.

2 Select  **Word Mobile**
Then Press  **OK**

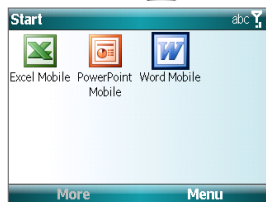


Open Word Mobile.

3

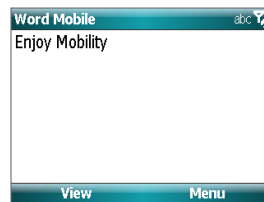

Word Mobile main screen.

 303



11.5 SIM Manager

You can select **Start** > **Accessories** > **SIM Manager** to open the program.

Manage the contacts information in your SIM card and perform actions such as add new, edit, copy, delete, save to phone memory, etc.

You can select **Menu** > **Select All** to select all SIM card contacts to perform the action.

11

More Application

Action: Using SIM Card Manager

- 1 Select **Accessories**
Then Press **OK**
- 2 Select **SIM Manager**
Then Press **OK**

3



Open SIM Card Manager.



SIM Card Manager's main screen.



11.6 Calculator

Perform simple math calculations such as addition, subtraction, multiplication, and division using the Calculator.

Use the number pad to enter numbers and the directional buttons to enter the math symbols addition, subtraction, multiplication, division. Press the OK button for the calculation result.

You can also use the Menu to perform more complicated calculations, for example, percentage, square root, inverse, etc.

You can use the calculator from Accessories menu.

11

More Application

Use the keypads to enter math operators



Use the keypads to enter the math symbols.

Up	Add	+
Down	Subtract	-
Right	Multiply	x
Left	Divide	/
OK button	Equals	=
# button	Negative	
button	Decimal point	.

305



11.7 Games

The phone has four exciting built-in games: Bubble Breaker, Solitaire. You can install more games on the phone.

11.7.1 Solitaire

You can access the program from **Start > Games > Solitaire**.

Use the number keys to specify the corresponding columns. Use alternating card colors to line up the cards. Select Deal will flip three cards from the deck. To win the game, you need to return all cards to the completed area at the top.

 
11

More Application

Solitaire main screen



306



11.7.2 Bubble Breaker

You can access the program from **Start > Games > Bubble Breaker**.


Use the directional buttons to move the cursor, then press the OK button to confirm popping the bubble.

Cancel two connecting bubbles of the same color. The bubble(s) above will also drop. Use this strategy to link multiple bubbles of the same color to pop them at the same time and gain more points.

11

More Application

Bubble Breaker main screen

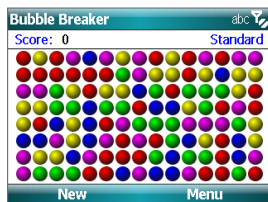

307



11.8 Voice Commander

Voice Commander allows you to give some simple commands vocally to save the time spent in searching through the Phonebook or applications list. This program provides the following voice recognition functions:

Call contacts

Look up contacts

Numeric dialing

Launch application

Control Windows Media music playback


Play music file

More Application

11

Action: Launch Voice Commander

- 1 Press  Voice Commander
- 2 Say <Command>

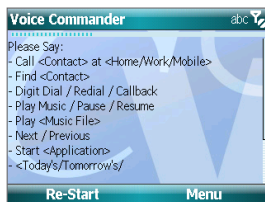



Say Voice Command

Please refer to the sample on the screen to say the command you wish to execute.

For example, say:

Call Wang Ming

Open File Explorer.

Note:

Say command as if in a call with someone else.

Say the command in full before the progress bar lower down reaches full.

No pause required when saying command. For example, no pause is required between "Call" and "Wang

Digit Training

You can access the Digit Training function in Voice Commander's configuration options in order to improve the accuracy of telephone number recognition.

To access Digit Training, at the Voice Commander menu select
Options > Configuration > Options > Digit Training



▲ The Digit Training screen.

11

More Application

309



11.9 Cyberon Talking Dictionary

You can select **Start** > **Cyberon TalkingDict** to open the Talking Dictionary program.

The talking dictionary is a True Voice E/C C/E dictionary. You can use this software to enter English words and their Chinese meanings, or enter Chinese for the corresponding English phrases.

Under E/C mode, you can use the  **Direction Keys** to move the cursor up/down to the  icon, then press the  **OK button** to listen to the English pronunciation.

11

More Application

Action: Look up a word in dictionary


- 1 Select  **Cyberon TalkingDict**
Then Press  **OK**
- 2 Enter <Words to search>
- 3



Open Talking Dictionary.




Talking Dictionary home screen.
Enter Chinese or English phrases.

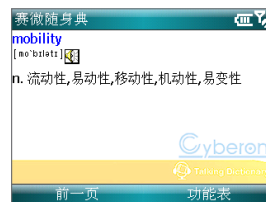

Read definitions. Use  **Direction Key** to move cursor up/down to  and then press  **OK button** to hear the voice.

 310



11.10 Info Feed

C730 is built-in with Info Feed, a online real-time RSS reader. You can use this program to subscribe and instantly read the RSS news channel built into the phone or on the Internet.

Before reading the news, please connect to the Internet through WiFi, HSDPA/3G/GPRS, or ActiveSync connections to download the latest RSS news manually or automatically. In addition to the built-in news channels in the phone, you can also subscribe various RSS channels on the Internet by yourself.


If the main screen of the phone uses the Dopod RSS layout, you can read the news topics in the Home screen and open this program to read the news contents from the Home screen.

11

More Application

Action: Read news headlines from Home screen

- 1 Select 
< RSS News List >
Then Press  OK

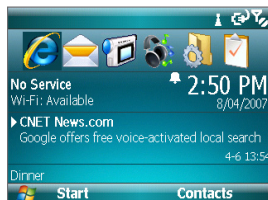

In the Home screen, select the news topics that you want to browse (Note 1)


2



News browsing screen. Select **Online reading** at the end of to view entire article.

(Note 1) If your Home screen does not use Info Feed layout, the RSS news list will not be displayed. Please select **Start > Info Frrd** to open the program to browse news.

 311




Action: Update RSS news channel manually

1 Select < News channel>

2

Then Press Update

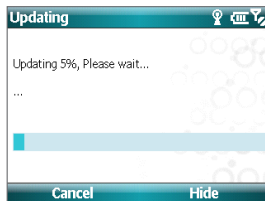

News channel is being updated.



News channel has been successfully updated.

11

More Application

(Note 1) Select **Start > Info Feed** to open Info Feed and then enter the channel list. If you are in the News Contents browsing screen, please click **Back button** twice continuously to return to the channel list.



11.11 Adobe Reader LE

You can use the built-in Adobe Reader® LE to browse the documents in Adobe PDF® format.

11

More Application


Action: Use Adobe Reader LE

- 1 Select 
Adobe Reader LE
Then Press  OK

2



Open Adobe Reader LE.

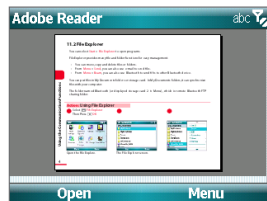

Adobe Reader LE PDF file viewing screen.

313

11.12 Quick Notes

You can select **Start > Quick Notes** to open the program to use the quick notes to add new text notes.

You can use **Menu > Font size** to change the font size in Quick Notes.

Through email, MMS, and message to send note.


11

More Application


Quick Notes




Open Quick Notes.

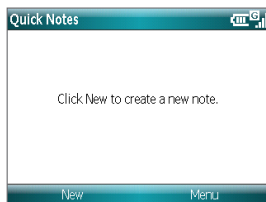

Quick Notes main screen.

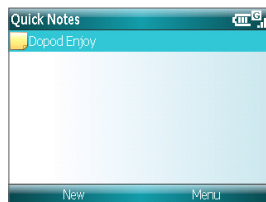

Send note.

 

11.13 Windows Update

Windows Update is a new feature designed to provide a foundation to help keep your device more secure. The feature is designed to support rapid distribution of critical security fixes to respond to urgent security issues.

You can select **Start** > **Settings** > **More** > **Windows Update** to launch the WindowsUpdate application.

Windows Update connects to the server and checks if there are new updates for your phone. You can set Windows Update to automatically check and update the file.

To ensure that your phone is always optimized, it is recommended that you enable automatic update.

 
11

More Application

Windows Update main screen



315



Topic

Q&A

12






The Dopod website will be updated periodically. Please visit the Dopod website at:

- <http://www.dopodasia.com/>


Register your phone to receive more information and services.

Registering Your Phone


1. Open the Internet browser and connect to Dopod website. Click on the **Members** page from the home page.
2. Select the **Member** link on the left side of the screen. Then click on **I Agree** at the bottom of the page.

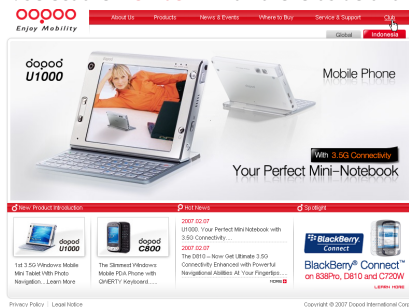


Step 1

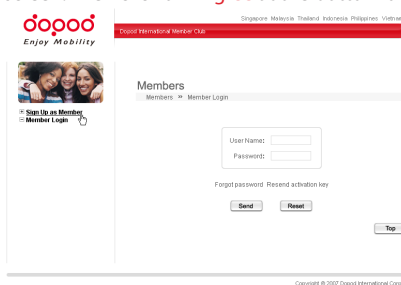

 
Step 2



3. Select **I Agree** to Dopod member license agreement.
4. Select **I have already purchased**. Then press the **Send** button.

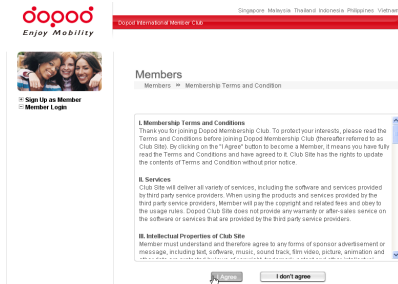


Step 3

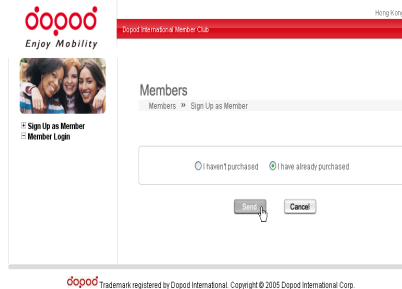

Step 4

5. Enter the **hardware serial number** (please refer to the S/N on back of the phone), **purchaser name**, and **date of birth**. Then press the **OK** button.

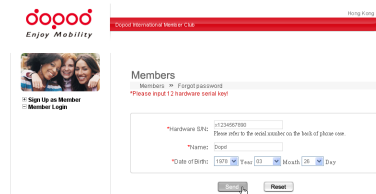

Step 5

12

Q&A

319



1. How do I sync the phone with the computer? How do I backup the information on the phone?


Using Microsoft ActiveSync® to sync information between the phone and computer.

1. Install the Windows Mobile Device Center and Microsoft Office Outlook® applications from the User's CD. Please refer to sections 9.1 for detailed descriptions.

2. Connect the USB cable to the phone and computer.

3. After ActiveSync starts the synchronization, the contacts, E-mail, tasks, Favorites and Media will be synchronized from the phone to the personal computer.

If the information on the phone was accidentally deleted after the synchronization with the computer is completed, you can use ActiveSync to sync the original information back onto your phone. For configuring ActiveSync, please refer to the detailed descriptions in Chapter 9.

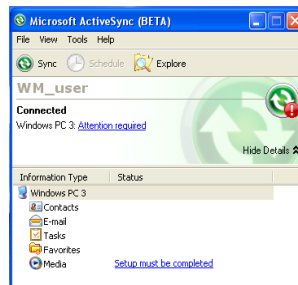

12

 
Q&A

2. What should I do when the computer freezes or cannot connect to the phone when using USB cable connection?

As Microsoft ActiveSync 4® utilizes the latest RNDIS transfer technology, it may conflict with the firewall or anti-virus software installed on your computer. You can:

- In the phone, select **Start** > **Settings** > **Connection** > **USB to PC** to cancel the Advanced Connection Functions.
- Turn off the firewall or anti-virus software's auto-protection functions.
- Set ActiveSync as an exception in the firewall configuration options.
- Contact your anti-virus software provider for solutions.

Please refer to section 9.13 for detailed information.



3. How to use ActiveSync via Bluetooth for synchronization?

1. During the initial use, please select  ActiveSync on the phone from **Menu > Connect via Bluetooth** to Configure Bluetooth Cooperation relationship for the synchronization.
 2. Activate the phone and computer's Bluetooth function.
 3. Select  **Menu > Add New** to set Bluetooth synchronization relationship between the personal computer and the phone.
 4. Configure the Bluetooth synchronization relation, and match the personal computer with the phone.
 5. At the phone's ActiveSync screen, select **Menu > Use Bluetooth Connection** to Activate ActiveSync Bluetooth Sync.
- For detailed information, please refer to section 9.7 Synchronize Through Bluetooth Connection.




▲ Using ActiveSync via Bluetooth for the Synchronization.

4. How do I do a Hard Reset to restore default settings?

You can use the Return to Default program or the hard reset button to return the phone to factory default settings. All data on the phone will be deleted. Please be cautious when using this function.

For detailed operation procedures, please refer to Section 1.6.

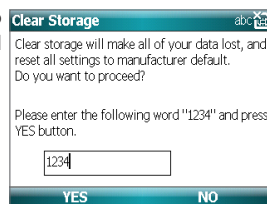

▲ Returning the phone to factory default settings.

12

Q&A

321




4. Why does the alarm not go off when phone is off?

You must turn on the phone for the alarm to go off. If you wish to turn off the phone functions, turn them off at the Comm Manager.

Using Comm Manager to turn off the phone:

- Hold the **Home button**  at the Home screen to open the Quick List.
- Select  **Comm Manager** to open the Comm Manager screen.
- Select the  **2**  Phone icon to turn off the phone functions.

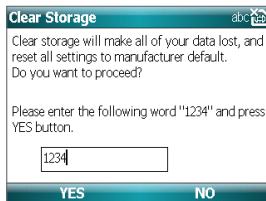

▲ Using Comm Manager to turn off phone functions.

12

Q&A

6. Where can I download the User's Manual, program updates, or other Dopod provided software applications for the phone?

You can visit the Dopod website: <http://www.dopod.com.tw/> to download the latest versions of the Quick User's Guide, User's Manual, program updates, and other software application for the phone. Please register your phone to receive more services.




7. How do I configure and use the Bluetooth headset?

- Activate the Bluetooth headset.
- Activate the phone's Bluetooth function.
 1. Press the **Power Button**  at the Home screen to open the Quick List.
 2. Select  **Comm Manager** to open the Comm Manager screen.
 3. Select the  **Bluetooth** icon to activate Bluetooth.
- Establishing Bluetooth cooperation relationship.
 1. At Comm Manager, select  **Settings > Bluetooth Settings**.
 2. Select  **Add New Device**.
 3. After the Bluetooth headset is found, select  **Bluetooth** headset and then select  **Next**.
 4. Please refer to the Bluetooth headset manual to enter the password, then select  **Next**.
 5. Make sure the "hands free" item is selected, then select  **Finish**.

After setup is complete, you may begin to use the Bluetooth headset for the hands free speakers operation. For detailed configuration procedures, please refer to section 7.2.3 Using the Bluetooth Headset.

12


Q&A

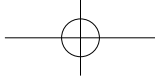

12

Q&A

 324



A

Appendix

1. Regulatory Notices
2. Specifications
3. Optional accessory information
4. Service information



A.1 Regulatory Notices

Regulatory Agency Identifications

For the purpose of specification authorization, your product (C730) will have the specific model name CAVA100. The battery module will have the specific model name LIBR160.

To ensure that you will be able to safely operate this smart phone in the future, please use only the accessories listed in this document.

This product uses a certified class 2 limited power source, 5V DC, and 1A max power supply.

European Union Notice

Products marked with CE, must comply with the European Community Council announced R&TTE specification (99/5/EC), EMC specification (89/336/EEC), and Low Voltage specification (73/23/EEC). Complying to these specifications indicates that the product complies with the following European standards (meaning these specifications are equal to national specifications):

- EN 60950-1 (IEC 60950-1) – Safety of informational technology equipments.
- ETSI EN 300 328 – Electromagnetic compatibility and Radio spectrum Matters (ERM); wideband transmission system; data transmission equipment operating in the 2.4 GHz ISM band and using wide band modulation techniques.
- ETSI EN 301 511 – Global System for Mobile communications (GSM); Harmonized EN for mobile stations in the GSM 850 - 1800 bands covering essential requirements of article 3.2 of the R&TTE directive (1999/5/EC)
- ETSI EN 301 489-1 – Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: General technical requirements.
- ETSI EN 301 489-7 – Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 7: Specific conditions for mobile and portable radio and ancillary equipment of digital cellular radio telecommunications systems (GSM and DCS).
- ETSI EN 301 489-17 – Electromagnetic compatibility and Radio spectrum Matters (ERM); EMC standard for radio equipment and services; Part 17: 2.4 GHz wideband transmission systems.
- EEN 50360 - 2001 – Product standard to demonstrate the compliance of mobile phones with the basic restrictions related to human exposure to electromagnetic fields (300 MHz - 3 GHz).



- ETSI EN 301 489-24 Electromagnetic compatibility and Radio spectrum Matters (ERM); Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 24: Specific conditions for IMT-2000 CDMA direct spread (UTRA) for mobile and portable (UE) radio and ancillary equipment.
- ETSI EN 301 908-1 & -2 Electromagnetic compatibility and Radio spectrum Matters (ERM); Base Stations (BS), Repeaters and User Equipment (UE) for IMT-2000 Third Generation cellular networks; Part 1: Harmonized EN for IMT-2000, introduction and common requirements, covering essential requirements of article 3.2 of the R&TTE Directive.
- EN 50392:2004 Generic standard to demonstrate the compliance of electronic and electrical apparatus with the basic restrictions related to human exposure to electromagnetic fields (0 Hz - 300 GHz)

Safety Precautions for Radio Frequency Energy Exposure

Only the accessories authorized by the manufacturer or the accessories without any metal materials are allowed.

Using any accessory that is not authorized by the manufacturer may violate the local radio exposure standard regulations, please avoid using it.

Maintenance Warning

With the exception of the mentioned sections in the operation or maintenance manual, please do not attempt to repair this product by yourself. Repair and maintenance should be handled by certified maintenance personnel or by the manufacturer.

Damage in Need of Repair

If the following situations happen, please unplug the product power source and return the product to a certified maintenance personnel or the manufacturer:

- Liquid spills onto the product or foreign objects fall into the product.
- The product has been in the rain or soaked in water.
- The product has been dropped or damaged.
- Unit overheating warning appears.
- Not operated under proper procedures.

Radio Frequency Energy Exposure

Your wireless phone is a transmitter and receiver of radio frequency. It is designed and manufactured with low emission restrictions to prevent excessive radio frequency energy exposure to the human



body. These regulations created a complete guideline, as well as establishing radio frequency energy classifications that is permissible for the general public as part of the content. This guideline is established based on the safety standards previously set by ISO:

- American National Standards Institute (ANSI), Institute of Electrical and Electronics Engineers (IEEE) C95.1-1992
- National Council on Radiation Protection (NCRP) Report No.86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996
- (Canada) Department of Health safety regulations 6. These standards include sufficient safety limitations to ensure safety of all personnel regardless of age or health condition.

Exposure level is measured as the SAR of the electromagnetic wave for wireless mobile phones.

This standard includes sufficient safety limitations, to provide extra protection to the general public and to create different usage methods. General conditions can only ensure the safety of radiation characteristics and interference. As with other similar mobile wireless communication equipment, in order to comply with required operations, and for the safety of the user, we recommend the user to stay away from the antenna while using the device.

A

Appendix

SAR Information


- SAR Value:
0.924W/kg@10g (body)
0.713 W/kg@10g (head)

CE 1177

Telecommunications Industry Association (TIA) Safety Information Pacemaker

The Medical Equipment Industry Association recommends that: when using the handheld wireless phone maintain at least a 6-inch distance to avoid the potential risk of interference with pacemakers. The contents of these recommendations and other independent researches are identical to those suggested by the wireless technology research units. For pacemaker users:

 - When the phone is on, the phone should be kept at least a 6-inch distance from the pacemaker.
- Do not place the phone in front pocket of shirt.
- In order to limit potential interference with the pacemaker, use the ear that is at the opposite side



from the pacemaker to answer the phone. If you notice any interference, please turn the phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with certain hearing aids. Should these types of situation occur, please contact your service provider or call the customer service hotline to discuss other replacement solutions.

Other Medical Devices

If you are using any other personal medical devices, please consult with the device manufacturer(s) to understand if these devices take measures to block out external radio frequencies. Your physician can assist you in obtaining this information. Please follow the regulations when being requested to turn off your phone in places such as hospitals. Hospitals and medical centers may be using medical equipment that are sensitive to outside radio frequencies.

Other Reminders and Notice

Avoid using the phone near a metal building (such as steel frames of the building).
Avoid using the phone near places with strong electromagnetic sources such as microwave ovens, audio speakers, televisions, and radios.
Avoid using the phone after a sudden change of temperature.

Waste Electrical and Electronic Equipment Directive (WEEE)

Waste Electrical and Electronic Equipment Directive (WEEE) has been included in European Law and came into force since Feb. 13, 2003. It has enormous effect on the processing of waste electronic equipment.

The purpose of the directive is to avoid the generation of WEEE as its object. In addition, it promotes the reuse, recycling and reparation in other form of such kind of waste in order to reduce the amount of the waste.

The WEEE sign () on the product or package box represents that the product can not be thrown away along with other household waste. You are responsible for bringing your electrical appliances or electronic waste to the specified location for the recycling and the processing of hazardous materials.



Separate collection and suitable reproduction of the waste electrical and electronic equipment can help to save natural resources. In addition, the suitable recycling of electrical and electronic equipment can ensure the health of the human body and the safety of the environment. For more information about the recycling of electrical and electronic equipment and the collection locations, please contact local government agencies, household waste service centers, the shop where you bought the equipment or the equipment manufacturer.

This product contains a Li-ion battery. If the battery unit is not appropriately stored, there may be a danger of fire. Do not squeeze or pierce the battery or drop the battery into fire or water; avoid contacting the battery with other electric conducting materials to cause short circuits. Please do not try to open or repair the battery unit. While replacing the battery, it is necessary to use the specified battery. Please recycle or throw away the battery in a suitable manner. Please do not process the battery as ordinary waste.

European Environmental Protection Law (RoHS Directives)

This product complies with the No. 2002/95/EC Directive established on Jan. 27, 2003 by the European Parliament and European Council for the Restriction of Hazardous Substances (RoHS) in electrical and electronic equipment.

A

Appendix



A.2 Product specifications

System information

Chipset/Processor Speed	Chipset: Qualcomm® MSM 6275
	Processor: Samsung® 2442 400 MHz
	• ROM-Nand Flash: 128 MB
	• RAM: 64 MB

Memory	Figures are the total ROM and RAM memory available for use and storage. Since the memory is shared by the Operating System, applications, and data, the actual available memory is less than what is written.
---------------	---

Operating System	Microsoft Windows Mobile™ Version 6 Standard
-------------------------	--

Display


Type	2.4" Transmissive LCD with white LED backlight
Resolution	320 x 240 dots resolution at 65K Colors (Landscape view)

Cellular Radio module

Functionality	HSDPA/UMTS (2100 for Europe/Asia, 850/1900 for USA)
	GSM/GPRS/EDGE (850, 900, 1800, and 1900)
	(The device will operate on frequencies available from the cellular network.)
Internal Antenna	Yes

A

 Appendix



Camera module

Type	2 Mega-pixel CMOS Camera module
	•UXGA: 1600 x 1200
	•SXGA: 1280 x 1024
Resolution	•VGA: 640 x 480
	•QVGA: 320 x 240
	•QQVGA: 160 x 120

Connection

I/O Port	HTC ExtUSB™ : an 11-pin mini-USB and audio jack in one (ExtUSB is a proprietary connection interface that is trademarked by HTC)
Bluetooth	V2.0, without EDR, Class 2 transmission power
Wi-Fi	IEEE 802.11b/g compatible, Internet WLAN antenna

A

Appendix

Audio


Microphone/Speaker	Built-in microphone/3-in-1 speaker
Headset	AAC/AMR/WMA/WAV/MP3 codec

Physical

Dimension	112.5 mm(L) x 62.5 mm(W) x 13.5 mm(T)
Weight	120g with battery pack

Expansion slot

SD socket	microSD memory card
-----------	---------------------

 

Control and Indication light

Navigation button	5-direction navigation button/OK button
--------------------------	---

Button	• Power on/off (left) • JOGGR • Left and Right Soft keys • Home screen • Back to previous screen • Talk (start call/answer call) • End call/Lock keypad • 10 Column QWERTY keyboard • Internet Explorer Mobile button • Function button • Camera • Voice Recorder/Voice Recognition
---------------	---

Indication Light	• Event notification • Charge status • GSM/GPRS signals • Bluetooth/Wi-Fi connection
-------------------------	--

Power supply

Battery	Li-Ion Polymer 1050 mAh
----------------	-------------------------


AC Battery charger	• Voltage range/Frequency: 100~240 AC 50/60Hz • DC output: 5V and 1A
---------------------------	--

Talk time	GSM: Up to 5.9 hours UMTS: Up to 3.6 hours
------------------	---

Standby	GSM: Up to 200 hours UMTS: Up to 209 hours
----------------	---

A

 Appendix



A.4 Optional accessories information

If you want to know more about the optional accessories, please visit the Dopod Website and select **Products > Accessory** for obtaining more related information.

<http://www.dopodasia.com/>

A.5 Customer Service information

For further user information, or if you have any questions about using the phone, you are welcome to contact our customer service. We welcome you to log-on to the members website and e-mail us with any suggestions.

Country/Territory	Customer Service	Website URL
Singapore	1800-238-7788	http://www.dopodasia.com/global/SEA/index.html
Malaysia	+603-5569-8878	http://www.dopodasia.com/global/SEA/index.html
Thailand	+66-2640-3000	http://www.dopodasia.com/global/SEA/index.html
Indonesia	+62-21-380-7668 350-5668	http://www.dopodasia.com/global/SEA/index.html
Philippines	+632-728-3388	http://www.dopodasia.com/global/SEA/index.html
Vietnam	+84-88624700	http://www.dopodasia.com/global/SEA/index.html
Australia	1300-769-669	http://www.dopodasia.com/global/au/index.html
India	+91-1800-11-33-77	http://www.dopodasia.com/global/in/index.html

Thank you for using our product. Hope you have a great experience.