# **FUJIFILM**

BL00835-200

DIGITAL CAMERA

FINEPIX J20 FINEPIX J25 **Before You Begin** 

**First Steps** 

**Basic Photography and Playback** 

More on Photography

More on Playback

Movies

Connections

Menus

Technical Notes

Troubleshooting

**Appendix** 

# Owner's Manual

Thank you for your purchase of this product. This manual describes how to use your FUJIFILM FinePix J20 or J25 digital camera and the supplied software. Be sure that you have read and understood its contents before using the camera.











# Camera Q & A

Find items by task.

# **Camera Setup**

Question	Key phrase	See page
How do I set the camera clock?	Date and time	12
Can I set the clock to local time when I travel?	Time difference	77
How do I keep the monitor from turning off automatically?	Auto power off	76
How do I stop the camera beeping and clicking?	Silent mode	25
	Operation and shutter volume	72
What are the parts of the camera called?	Parts of the camera	2
What do the icons in the monitor mean?	Monitor	3
How do I use the menus?	Menus	55
What's behind that flashing icon or error message in the monitor?	Messages and displays	86
How much charge is left in the battery?	Battery level	13

# **Taking Pictures**

Question	Key phrase	See page
How many pictures can I take?	Memory capacity	91
Is there a quick and easy way to take snapshots?	mode	13
How can I make good portraits?	Intelligent Face Detection	18
Can the camera automatically select the most suitable mode?	mode	29
Is there a simple way to adjust settings for different scenes?	Shooting mode	28
How do I shoot close-ups?	Macro mode (Close-ups)	23
How do I keep the flash from firing?		
How do I stop my subjects' eyes glowing red when I use the flash?	Flash mode	24
How do I "fill-in" shadows on back-lit subjects?		
How do I take a group portrait that includes the photographer?	Self-timer mode	26

Question	Key phrase	See page
How do I frame pictures with the subject off to one side?	Focus lock	21
How do I shoot movies?	Recording movies	38

## **Viewing Pictures**

Question	Key phrase	See page
How do I view my pictures?	Single-frame playback	32
Is there a simple way to delete one image?	Deleting pictures	17
How do I delete one or all images at once?	Erase	36
Can I zoom in on pictures during playback?	Playback zoom	33
How do I view a lot of pictures at once?	Multi-frame playback	34
How do I view all pictures taken on the same day?	Sort by date	35
Can I protect my pictures from accidental deletion?	Protect	66
Can I hide the icons in the monitor when viewing my pictures?	Choosing a display format	32
How do I view my pictures on TV?	Viewing pictures on TV	41

# **Sharing Pictures**

Question	Key phrase	See page
Can I print pictures on my home printer?	Printing pictures	42
Can I copy my pictures to my computer?	Viewing pictures on a computer	48

# **Table of Contents**

Camera Q & A       ii         Camera Setup       ii         Taking Pictures       ii         Viewing Pictures       iii         Sharing Pictures       iii         About This Manual       vi
Before You Begin
Introduction1
Symbols and Conventions1
Supplied Accessories1
Parts of the Camera2
The Monitor3
First Steps
Charging the Battery4
Inserting the Battery6
Inserting a Memory Card8
Turning the Camera on and Off11
Shooting Mode11
Playback Mode11
Basic Setup12
Basic Photography and Playback
Taking Pictures in (Auto) Mode13
Viewing Pictures17
More on Photography
Intelligent Face Detection and Red-Eye Removal
Focus Lock21
Macro mode (Close-ups)23
<b>\$</b> Using the Flash24

🖒 Using the Self-Timer	26
<b>⊙</b> Shooting Mode	28
Selecting a Shooting Mode	
Shooting Modes	29
SCENE RECOGNITION	29
More on Playback	
Single-Frame Playback	32
Playback Zoom	33
Multi-Frame Playback	34
Sort by Date	35
Deleting Pictures	36
Movies	
Recording Movies	38
▶ Viewing Movies	40
Connections	
Viewing Pictures on TV	41
Printing Pictures via USB	
Connecting the Camera	42
Printing Selected Pictures	42
Printing the DPOF Print Order	43
Creating a DPOF Print Order	45
Viewing Pictures on a Computer	48
Installing FinePixViewer	
Installing FinePixViewer S: Windows	
Installing FinePixViewer: Macintosh	
Connecting the Camera	53

Menus	
The Shooting Menu	55
Using the Shooting Menu	55
Shooting Menu Options	
® ISO	57
QUALITY	
EXP. COMPENSATION	59
WHITE BALANCE	60
CONTINUOUS (Continuous shooting)	61
The Playback Menu	62
Using the Playback Menu	62
Playback Menu Options	
RED EYE REMOVAL	
SLIDE SHOW	
♠ PROTECT	
@ COPY	
<b>⊘</b> IMAGE ROTATE	
TRIMMING	
The Setup Menu	
Using the Setup Menu	
Setup Menu Options	
☑ IMAGE DISP	
FRAME NO	
Q DIGITAL ZOOM	
LCD POWER SAVE	
PLAYBACK VOLUME	
LCD BRIGHTNESS	
FORMAT	
auto power off	
TIME DIFFERENCE	77

Technical Notes	
Optional Accessories Accessories from Fujifilm	
Troubleshooting	
Troubleshooting	80
Warning Messages and Displays	86
Appendix	
Glossary	90
Internal Memory/Memory Card Capacity	9
Specifications	92
Caring for the Camera	9

## **About This Manual**

This manual is for use with the following FinePix cameras: the J20 and J25. The J20 has a 2.7-inch monitor; the J25 has a 3.0-inch monitor. All operations are identical; save where otherwise noted, the illustrations in this manual show the J25. Before using the camera, read this Owner's Manual and the other supplied documents. For information on specific topics, consult the sources below.

✓ Camera Q & A ......pg. ii

Know what you want to do but don't know the

Know what you want to do but don't know the name for it? Find the answer in "Camera Q & A."

✓ Troubleshooting ......pg. 80
Having a specific problem with the camera?
Find the answer here.

✓ Glossary ......pg. 90
The meanings of some technical terms may be

found here.

✓ Table of Contents .....pg. iv

The "Table of Contents" gives an overview of the entire manual. The principal camera operations are listed here.

✓ Warning Messages and Displays .....pg. 86
Find out what's behind that flashing icon or error message in the monitor.

**✔** Restrictions on Camera Settings

See another supplied document for restrictions on the options available in each shooting mode.

### Memory Cards

Pictures can be stored in the camera's internal memory or on optional SD and SDHC memory cards. In this manual, SD memory cards are referred to as "memory cards." For more information, see page 8.

# Introduction

# **Symbols and Conventions**

The following symbols are used in this manual:

**\( \) Caution**: This information should be read before use to ensure correct operation.

**← Note**: Points to note when using the camera.

國 **Tip**: Additional information that may be helpful when using the camera.

Menus and other text in the camera monitor are shown in bold. In the illustrations in this manual, the monitor display may be simplified for explanatory purposes.

# **Supplied Accessories**

The following items are included with the camera:



NP-45 rechargeable battery



BC-45A battery charger (with power cable or built-in plug)



USB cable



 
FinePix software CD (IMPORTANT: read the End User License Agreement before opening.)



Attaching the Strap

Attach the strap as shown.


Strap



Owner's Manual (may be distributed on CD in some countries or regions)

### Parts of the Camera

For more information, refer to the page listed to the right of each item.

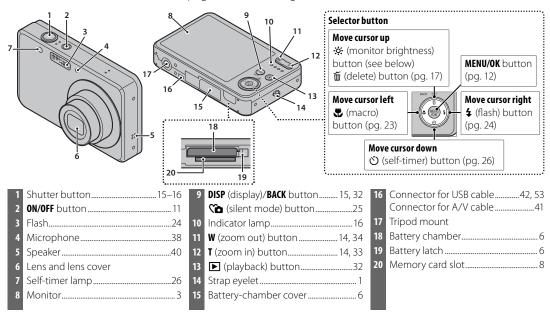


#### ■ Tip: Monitor Brightness

Pressing the 🌣 button briefly increases monitor brightness, making the display easier to see in bright light. Normal brightness is restored when a photograph is taken.

### **The Monitor**

The following indicators may appear in the monitor during shooting and playback:


### **■** Shooting

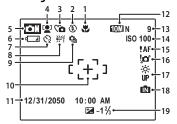

1	Macro (close-up) mode23	11	Date and time12
2	Flash mode24	12	Quality38, 58
3	Silent mode25	13	Number of available frames91
4	Intelligent Face Detection	14	Sensitivity57
	indicator18	15	Focus warning15
5	Shooting mode28	16	Blur warning24
6	Battery level13	17	Bright monitor indicator2
7	Self timer indicator26	18	Internal memory indicator*8
8	White balance60	19	Exposure compensation59
9	Continuous mode61		
10	Focus frame15		

<sup>\*</sup> Indicates that no memory card is inserted and that pictures will be stored in the camera's internal memory (pg. 8).

## **■** Playback

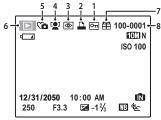

1	Protected image66
	DPOF print indicator45
3	Red-eye removal indicator 64
4	Intelligent Face Detection
	indicator18, 64


5	Silent mode indicator	25
6	Playback mode indicator	32
7	Gift image	32
8	Frame number	74

# **Charging the Battery**

The battery is not charged at shipment. Charge the battery before use.


**1** Place the battery in the charger.

Insert the battery into the supplied battery charger as shown, making sure that the battery is in the correct orientation. The battery charger comes in one of two types, depending on the country or region of sale: one with a built-in plug that plugs directly into the power outlet (A), and another that connects to the power outlet via a power cable (B).

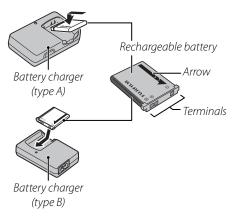

# **2** Plug the charger in.

 Plug the charger into a power outlet. The charging indicator will light.



## The Charging Indicator

The charging indicator shows battery charge status as follows:

Charging indicator	Battery status	Action
Off	Battery not inserted.	Insert the battery.
	Battery fully charged.	Remove the battery.
Glows	Battery charging.	_
Blinks	Battery fault.	Unplug the charger and remove the battery.

# **3** Charge the battery.

#### **∑** Cautions: Caring for the Battery

- Do not affix stickers or other objects to the battery.
   Failure to observe this precaution could make it impossible to remove the battery from the camera.
- Do not short the battery terminals. The battery could overheat.
- Use only NP-45 batteries. Failure to observe this precaution could result in product malfunction.
- Do not remove the labels from the battery or attempt to split or peel the outer casing.
- The battery gradually loses its charge when not in use. Charge the battery one or two days before use.
- Read the supplied documentation for additional cautions concerning battery use.

#### **N** Caution: Battery Life

A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life and should be replaced.

### **№** Cautions: Using the Battery Charger

- Unplug the charger when it is not in use.
- Remove dirt from the battery terminals with a clean, dry cloth. Failure to observe this precaution could prevent the battery from charging.
- Charging times increase at low temperatures.

# **Inserting the Battery**

After charging the battery, insert it in the camera as described below.

# **1** Open the battery-chamber cover.



#### **★** Note


Be sure the camera is off before opening the battery-chamber cover.

#### **\** Cautions

- Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could result in damage to image files or memory cards.
- Do not use excessive force when handling the battery-chamber cover.

# **2** Insert the battery.

Check the label in the battery-chamber. Face the gold contacts downward and insert the battery into the battery-chamber, pressing the battery latch with the battery in the direction shown below. Confirm that the battery is securely latched.

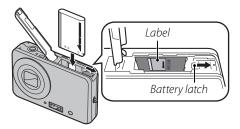

#### **\** Caution

 
Insert the battery in the correct orientation. **Do** NOT **use force or attempt to insert the battery upside down or backwards.** The camera will not function if the battery is inserted backwards or upside down.

# **3** Close the battery-chamber cover.



## Removing the Battery

After turning the camera off, open the batterychamber cover, press the battery latch to the top, and slide the battery out of the camera as shown.



### **\** Caution

Turn the camera off before removing the battery.

# **Inserting a Memory Card**

Although the camera can store pictures in internal memory, SD memory cards (sold separately) can be used to store additional pictures.

When no memory card is inserted, \( \bar{\text{l}} \) appears in the monitor and internal memory is used for recording and playback. Note that because camera malfunction could cause internal memory to become corrupted, the pictures in internal memory should periodically be transferred to a computer and saved on the computer hard disk or on removable media such as CDs or DVDs. The pictures in internal memory can also be copied to a memory card (see page 67). To prevent internal memory from becoming full, be sure to delete pictures when they are no longer needed.

 
When a memory card is inserted as described below, the card will be used for recording and playback.

### ■ Compatible Memory Cards

SanDisk SD and SDHC memory cards have been tested and approved for use in the camera. A complete list of approved memory cards is available at <a href="http://www.fujifilm.com/products/digital\_cameras/index.html">http://www.fujifilm.com/products/digital\_cameras/index.html</a>. Operation is not guaranteed with other cards. The camera can not be used with MultiMediaCard (MMC) or <a href="https://www.fujifilm.com/products/digital\_cameras/index.html">https://www.fujifilm.com/products/digital\_cameras/index.html</a>. Operation is not guaranteed with other cards. The camera can not be used with MultiMediaCard (MMC) or <a href="https://www.fujifilm.com/products/digital\_cameras/index.html">https://www.fujifilm.com/products/digital\_cameras/index.html</a>.

#### **\** Caution

Memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting a memory card, slide the write-protect switch to the unlocked position.




Write-protect switch


### Inserting a Memory Card

  1 Open the battery-chamber cover.



**2** Insert the memory card.
Holding the memory card in the orientation shown below, slide it all the way in.





Be sure card is in correct orientation; do not insert at an angle or use force. **?** Close the battery-chamber cover.



### Removing Memory Cards

Be sure the camera is off before opening the batterychamber cover. Press the card in and then release it slowly. The card can now be removed by hand.



#### **\** Cautions

- The memory card may spring out if you remove your finger immediately after pushing the card in.
- Memory cards may be warm to the touch after being removed from the camera. This is normal and does not indicate a malfunction.

888g g8888

 
#### **\** Cautions

- Format memory cards before first use, and be sure to reformat all memory cards after using them in a computer or other device. For more information on formatting memory cards, see page 76.
- Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.
- Do not use miniSD or microSD adapters that expose the back of the card. Failure to observe this precaution may cause damage or malfunction. Adapters that are larger or smaller than the standard dimensions of an SD card may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card.
- Do not turn the camera off or remove the memory card while the memory card is being formatted or data are being recorded to or deleted from the card. Failure to observe this precaution could damage the card.
- Do not affix labels to memory cards. Peeling labels can cause camera malfunction.
- Movie recording may be interrupted with some types of memory card.
- The data in internal memory may be erased or corrupted when the camera is repaired. Please note that the repairer will be able to view pictures in internal memory.
- Formatting a memory card or internal memory in the camera creates a folder in which pictures are stored. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures from memory cards and internal memory; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals.

# **Turning the Camera on and Off**

## **Shooting Mode**

Press the **ON/OFF** button to turn the camera on. The lens will extend and the lens cover will open.



Press **ON/OFF** again to turn the camera off.

## ■ Tip: Switching to Playback Mode

 
Press the **b** button to start playback. Press the shutter button halfway to return to shooting mode.

#### **\** Cautions

- Pictures can be affected by fingerprints and other marks on the lens. Keep the lens clean.
- The **ON/OFF** button does not completely disconnect the camera from its power supply.

# <u>Playback Mode</u>

To turn the camera on and begin playback, press the **▶** button for about a second.



Press the **b** button again to turn the camera off.

## ■ Tip: Switching to Shooting Mode

To exit to shooting mode, press the shutter button halfway. Press the **b** button to return to playback.

### 取 Tip: Auto Power Off

The camera will turn off automatically if no operations are performed for the length of time selected in the **AUTO POWER OFF** menu (see page 76).

# **Basic Setup**

A language-selection dialog is displayed the first time the camera is turned on. Set up the camera as described below (for information on resetting the clock or changing languages, see page 71).

# 1 Choose a language.



**1.1** Press the selector up, down, left, or right to highlight a language.



1.2 Press MENU/OK.



**7** Set the date and time.



2.1 Press the selector left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the selector up or down.

2.2 Press MENU/OK.



#### **▼** Tip: The Camera Clock

 
If the battery is removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on. If the battery is left in the camera for about 30 minutes, the battery can be removed for about 24 hours without resetting the clock or language selection.

# Taking Pictures in (Auto) Mode

This section describes how to take pictures in **n** mode.

Turn the camera on.

Press the **ON/OFF** button to turn the camera on.



### **▼** Tip: Intelligent Face Detection

The first time the camera is turned on, Intelligent Face Detection is automatically activated and the camera is optimized for taking portrait photographs. For more information on using Intelligent Face Detection, see page 18.

**2** Check the battery level. Check the battery level in the monitor.






Indicator	Description
① (white)	Battery partially discharged.
② (white)	Battery more than half discharged.
	Low battery. Charge as soon as
	possible.
(blinks red)	Battery exhausted. Turn camera off
	and charge battery.

# **3** Frame the picture.

Position the main subject in the focus area and use the zoom buttons to frame the picture in the monitor.

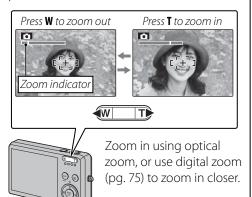


### Holding the Camera

Hold the camera steady with both hands and brace your elbows against your sides. Shaking or unsteady hands can blur your shots.



To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens and flash.

 


### **▼** Tip: Focus Lock

Use focus lock (pg. 21) to focus on subjects that are not in the focus frame.

### Framing Guideline


The images change as shown below if you press the **DISP/BACK** button.

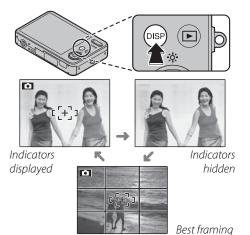

To use the best framing, position the main subject at the intersection of two lines or align one of the horizontal lines with the horizon. Use focus lock (pg. 21) to focus on subjects that will not be in the center of the frame in the final photograph.

# 4 Focus.

Press the shutter button halfway to focus on the main subject in the focus frame.

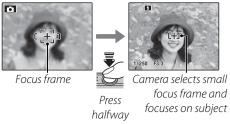

**If the camera is able to focus**, it will beep twice and the indicator lamp will glow green.

If the camera is unable to focus, the focus frame will turn red, a **! AF** indicator will appear in the monitor, and the indicator lamp will blink green. Change the composition or use focus lock (pg. 21).

#### **◆** Note

The lens may make a noise when the camera focuses. This is normal.

 
## **5** Shoot.

Smoothly press the shutter button the rest of the way down to take the picture.



#### **■ Tip: The Shutter Button**

The shutter button has two positions. Pressing the shutter button halfway (1) sets focus and exposure; to shoot, press the shutter button the rest of the way down (2).



#### **★** Note

If the subject is poorly lit, the flash may fire when the picture is taken. To take pictures without the flash, choose another flash mode (pg. 24).

## The Indicator Lamp



The indicator lamp shows camera status as follows:

Indicator lamp	Camera status		
Glows green	Focus locked.		
Blinks green	Camera shake warning, AF warning,		
	or AE warning (ready to shoot)		
Blinks green	Recording pictures. Additional		
and orange	pictures can be taken.		
Glows	Recording pictures. No additional		
orange	pictures can be taken at this time.		
Blinks orange	Flash charging; flash will not fire when		
	picture is taken.		
Blinks red	Recording or lens error.		
	,		

 
## 🔻 Tip: Warnings

Detailed warnings appear in the monitor. See pages 86–89 for more information.

# **Viewing Pictures**

Pictures can be viewed in the monitor. When taking important photographs, take a test shot and check the results.

## **1** Press the **▶** button.



The most recent picture will be displayed in the monitor.



# **2** View additional pictures.


Press the selector right to view pictures in the order recorded, left to view pictures in reverse order.



Press the shutter button to exit to shooting mode.

## Deleting Pictures

To delete the picture currently displayed in the monitor, press the selector up (a). The following dialog will be displayed.

 



To delete the picture, press the selector left to highlight **OK** and press **MENU/OK**. To exit without deleting the picture, highlight **CANCEL** and press **MENU/OK**.



### Tip: The Playback Menu

Pictures can also be deleted from the playback menu (pg. 36).

# **Intelligent Face Detection and Red-Eye Removal**

Intelligent Face Detection allows the camera to automatically detect human faces and set focus and exposure for a face anywhere in the frame for shots that emphasize portrait subjects. Choose for group portraits to prevent the camera from focusing on the background. Intelligent Face Detection also offers a red-eye removal option for removing "red-eye" effects caused by the flash.

**1** Turn Intelligent Face Detection on.

**1.1** Press **MENU/OK** to display the shooting menu.





1.2 Press the selector up or down to highlight FACE DETECTION.



**1.3** Press the selector right to display Intelligent Face Detection options.



**1.4** Press the selector up or down to highlight the desired option.



Optio		
<b>2</b> 0	N	Intelligent Face Detection and red-eye removal on. Use with the flash.
<b>(</b> )	N	removal on. Use with the flash.
<b>2</b> 0	N	Intelligent Face Detection on; red-eye
<b>①</b> 0	FF	removal off.
OFF	Intelligent Face Detection and red-eye removal off.	
	removal off.	

1.5 Press MENU/OK to select the highlighted option and return to shooting mode.



icon appears in monitor when Intelligent Face Detection is on.



# **2** Frame the picture.

If a face is detected, it will be indicated by a green border. If there is more than one face in the frame, the camera will select the face closest



Green border

to the center; other faces are indicated by white borders.

# **3** Focus.

Press the shutter button halfway to set focus and exposure for the subject in the green border.



#### **\** Cautions

- If no face is detected when the shutter button is pressed halfway (pg. 82), the camera will focus on the subject at the center of the monitor and red-eye will not be removed.
- In each shooting mode, the camera will detect and focus on faces but exposure will be optimized for the entire scene rather than the selected portrait subject.

## 4 Shoot.

Press the shutter button all the way down to shoot.



#### **\** Caution

If the subject moves as the shutter button is pressed, their face may not be in the area indicated by the green border when the picture is taken.

If ☑ ON/ ON is selected, the picture will be processed to reduce red-eye before it is recorded (the RED-



**EYE REMOVAL** option in the playback menu can also be used to reduce red-eye; pg. 64).

## ntelligent Face Detection

Intelligent Face Detection is recommended when using the self-timer for group- or self-portraits (pp. 26–27).



The camera can zoom in on pictures taken with Intelligent Face Detection during slide shows (pg. 65) and when pictures are displayed automatically after shooting (pg. 73).

## **Focus Lock**

To compose photographs with off-center subjects:

Position the subject in the focus frame.



## **2** Focus.

Press the shutter button halfway to set focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock).



Press halfway



Repeat steps 1 and 2 as desired to refocus before taking the picture.

**3** Recompose the picture.

Keeping the shutter button pressed halfway, recompose the picture.



**⚠** Shoot.

Press the shutter-release button the rest of the way down to take the picture.



Press the rest of the way down

### Autofocus

Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below. If the camera is unable to focus using autofocus, use focus lock (pg. 21) to focus on another subject at the same distance and then recompose the photograph.

• Very shiny subjects such as mirrors or car bodies.

 
• Fast-moving subjects.



- Subjects photographed through a window or other reflective object.
- Dark subjects and subjects that absorb rather than reflect light, such as hair or fur.
- Insubstantial subjects, such as smoke or flame.
- Subjects that show little contrast with the background (for example, subjects in clothing that is the same color as the background).
- Subjects positioned in front of or behind a high-contrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).

# Macro mode (Close-ups)

To select macro mode, press the selector left (\$\sigma\$).





camera is in macro mode

When macro mode is in effect, the camera focuses on subjects near the center of the monitor. Use the zoom buttons to frame pictures.

To exit macro mode, press the selector left (\*). Macro mode can also be cancelled by turning the camera off or selecting another shooting mode.


#### **◆** Note

 Use of a tripod is recommended to prevent blur caused by camera shake.

# **4** Using the Flash

Use the flash when lighting is poor, for example when shooting at night or indoors under low light.

To choose a flash mode, press the selector right (\$). The flash mode changes each time the selector is pressed; in modes other than AUTO, the current mode is indicated by an icon in the monitor. Choose from the following options (some options are not available in all shooting modes; see the restrictions in another supplied document):



Mode	Description		
AUTO (no icon)	The flash fires when required. Recommended in most situations.		
<b>\$</b> (fill flash)	The flash fires whenever a picture is taken. Use for backlit subjects or for natural coloration		
	when shooting in bright light.		
(suppressed)	The flash does not fire even when the subject is poorly lit. 🗯 will appear in the monitor at		
flash)	slow shutter speeds to warn that pictures may be blurred. Use of a tripod is recommended.		
<b>S\$</b> (slow sync)	Capture both the main subject and the background when shooting at night (note that		
	brightly lit scenes may be overexposed). If 🔑 is selected for 🧿 SHOOTING MODE, shutter		
	speed may be slow. Use a tripod.		

If the flash will fire, 3 will be displayed in the monitor when the shutter button is pressed halfway.

### **\** Caution

The flash may fire several times with each shot. Do not move the camera until shooting is complete.

 
#### Red-Eye Removal

When ② ON/ ○ ON is selected for Intelligent Face Detection (pg. 18), redeye removal (○) is available in AUTO (♠), fill flash (○4), and slow sync (♠) modes. Red-eye removal minimizes "redeye" caused when light from the flash is reflected from the subject's retinas as shown in the illustration at right.



#### Silent Mode

In situations in which camera sounds or light from the flash may be unwelcome, press the **DISP/BACK** button until **(%)** is displayed in the monitor.




The camera speaker, shooting indicator, flash, and indicator and self-timer lamps turn off. Flash and volume settings (pg. 75) can not be adjusted while silent mode is in effect. To restore normal operation, press the **DISP/BACK** button until the **\text{\text{\text{to}}}** icon is no longer displayed.


# **🖒** Using the Self-Timer

  The camera offers a ten-second timer that allows photographers to appear in their own photographs, and a two-second timer that can be used to avoid blur caused by the camera moving when the shutter button is pressed.

### 1 Set the timer.

The current self-timer mode is displayed in the monitor. To choose a different setting, press the selector down (\*). The selection changes each time the selector is pressed.





The current self-timer mode is displayed in the monitor.

- :The picture is taken after 10 seconds.
- : The picture is taken after 2 seconds.

# **2** Focus.

Press the shutter button halfway to focus.

#### **\** Caution

Stand behind the camera when using the shutter button. Standing in front of the lens can interfere with focus and exposure.




## 3 Start the timer.

Press the shutter button the rest of the way down to start the timer. The display in the monitor shows the number of seconds remaining until the shutter is released. To stop the timer before the picture is taken, press **DISP/BACK**.





The self-timer lamp on the front of the camera will blink immediately before the picture is taken. If the two-second timer is selected, the self-timer lamp will blink as the timer counts down.

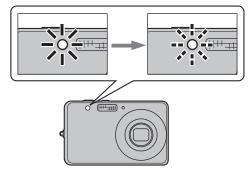

## Intelligent Face Detection

Because it ensures that the faces of portrait subjects will be in focus, Intelligent Face Detection (pg. 18) is recommended when using the self-timer for group portraits or self-portraits. To use the self-timer with Intelligent Face Detection, set the timer as described in Step 1 and then press the shutter button all the way down to start the timer. The camera will detect faces while the timer is counting down and adjust focus and exposure immediately before the shutter is released. Be careful not to move until the picture has been recorded.

# Shooting Mode

Choose a shooting mode according to the scene or type of subject.

# **Selecting a Shooting Mode**

Press MENU/OK to display the shooting menu.





**★** Note

See the restrictions in another supplied document for flash mode setting.

5 Press MENU/OK to select the highlighted option.

**7** Press the selector up or down to highlight **O** SHOOTING MODE.

 
ISO ISO

QUALITY

CONTINUOUS

- **?** Press the selector right to display shooting mode options.





SHOOTING MENU

A FACE DETECTION

0 0

AUTO

● #107/1 N

OFF

**1** Press the selector up or down to highlight the desired mode.



# **Shooting Modes**

#### MANUAL

Choose this mode for complete control of shooting settings, including exposure compensation (pg. 59) and white balance (pg. 60).

#### **RESIDENT RECOGNITION**

Simply by pointing the camera to the subject, the camera automatically analyzes and selects the most appropriate setting using scene recognition.



The camera analyzes a subject based on scene recognition, then an icon appears in the bottom left of the monitor (The illustration shows when the

camera analyzed subject(s) in portrait.).

lcon O	<b>Description</b> For soft-toned portraits with
0	For soft-toned portraits with
O	
	natural skin tones.
٥	For crisp, clear daylight shots of
	buildings and landscapes.
	For night and twilight scenes, a
G	using high sensitivity setting to
	minimize blurring.
0	For clear close-ups of flowers,
	etc.
	For a subject backlit against the
<b>&amp;</b>	sun, preventing the background
	from becoming dim.
G	For a subject in a dim place,
	reducing blur.
	© ©

### **▼** Tip

When a subject can not be analyzed by the camera, **AUTO** mode will be set

#### **★** Notes

- 12 Intelligent Face Detection is turned on automatically.
- The camera continuously adjusts focus on a face, or the center area of the monitor.
- Continuous auto focus will be audible and will increase battery drain.
- Macro mode is set when ② is set.

#### AUTO

Choose for crisp, clear snapshots (pg. 13). This mode is recommended in most situations.

#### **③ BABY MODE**

Choose for natural skin tones when taking portraits of infants. The flash turns off automatically.

### **PICTURE STABILIZATION**

Choose this mode for fast shutter speeds that reduce blur caused by camera shake or subject movement.

### **PORTRAIT**

Choose this mode for soft-toned portraits with natural skin tones.

### **▲ LANDSCAPE**

Choose this mode for crisp, clear daylight shots of buildings and landscapes.

### **¾** SPORT

Choose this mode when photographing moving subjects. Priority is given to faster shutter speeds.

#### ( NIGHT

A high sensitivity setting is selected automatically to minimize blurring for recording night and twilight scenes.

### A<sup>C\*</sup> NIGHT (TRIPOD)

Slow shutter speeds are used to record night scenes. Use of a tripod is recommended to prevent camera shake.

#### NATURAL LIGHT

Capture natural light indoors, under low light, or where the flash can not be used. The flash turns off and sensitivity is raised to reduce blur.

#### **♣** BEACH

Choose for crisp, clear shots that capture the brightness of sunlit beaches.

### **SNOW**

Choose for crisp, clear shots that capture the brightness of scenes dominated by shining white snow.

## FIREWORKS

Slow shutter speeds are used to capture the expanding burst of light from a firework. Press the selector left or right to choose a shutter speed. Use of a tripod is recommended to prevent blur. The flash turns off automatically.

## 👛 SUNSET

Choose this mode to record the vivid colors in sunrises and sunsets.

### **※ FLOWER**

Choose for vivid close-ups of flowers. The camera focuses in the macro range and the flash turns off automatically.

### **PARTY**

Capture indoor background lighting under low-light conditions.

#### # MUSEUM

Choose where flash photography is prohibited or the sound of the shutter may be unwelcome. The flash, speaker, and self-timer lamp turn off automatically.

#### **←** Note

Photography may be prohibited altogether in some settings. Obtain permission before shooting.

## TEXT TEXT

Take clear pictures of text or drawings in print. The camera focuses in the macro range.


# **Single-Frame Playback**

To view the most recent picture in the monitor, press the **D** button.





Press the selector right to view pictures in the order recorded, left to view pictures in reverse order. Keep the selector pressed to scroll rapidly to the desired frame.

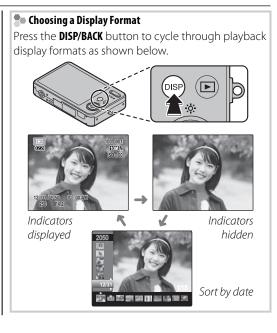

#### **←** Note

Pictures taken using other cameras are indicated by a \( \mathbb{H} \) ("gift image") icon during playback.

## **Playback Zoom**

Press **T** to zoom in on images displayed in single-frame playback; press **W** to zoom out.



Press T to zoom in

Press **W** to zoom out

Zoom indicator

When the picture is zoomed in, the selector can be used to view areas of the image not currently visible in the display.





Navigation window shows portion of image currently displayed in monitor

Press DISP/BACK to exit zoom.

#### **←** Note

The maximum zoom ratio varies with image size. Playback zoom is not available with pictures taken at an image size of **QSIII**.

# **Multi-Frame Playback**

To change the number of images displayed, press **W** when a picture is shown full-frame in the monitor.







Press **T** to reduce the number of images displayed.

Use the selector to highlight images and press **MENU/OK** to view the highlighted image full frame. In the nine- and hundred-frame displays, press the selector up or down to view more pictures.

# **Sort by Date**

1 In single-frame playback, press DISP/ BACK until the sort-by-date screen is displayed.



The picture displayed in the single-frame playback remains selected.



**2** Press the selector up or down to select a date.



**3** Press the selector left or right to select a picture.



## **▼** Tips: Rapid Scroll

- Press and hold the selector up or down to scroll dates rapidly.
- Press and hold the selector left or right to rapidly scroll pictures taken on the same date.

# **Deleting Pictures**

The **ERASE** option in the playback menu can be used to delete still pictures and movies, increasing the amount of space available on the memory card or in internal memory (for information on deleting pictures in single-frame playback, see page 17). Note that deleted pictures can not be recovered. Copy important pictures to a computer or other storage device before proceeding.

Press MENU/OK to display the playback menu.



4 Press the selector up or down to highlight **FRAME** or **ALL FRAMES**.



**5** Press **MENU/OK** to display options for the selected item (see pg. 37).



**7** Press the selector up or down to highlight ERASE.

▶ PLAYBACK MENU

RED EYE REMOVAL SLIDE SHOW

PRINT ORDER (DPOF) PROTECT



**?** Press the selector right to display delete options.

> ERASE RED EYE REMOVAL

SLIDE SHOW PRINT ORDER (DP PROTECT



▶ PLAYBACK MENU

ALL FRAMES



■ Tips: Deleting Pictures

- When a memory card is inserted, pictures will be deleted from the memory card; otherwise, pictures will be deleted from internal memory.
- Protected pictures can not be deleted. Remove protection from any pictures you wish to delete (pg. 66).
- If a message appears stating that the selected images are part of a DPOF print order, press MENU/OK to delete the pictures.

### ■ FRAME: Deleting Selected Images

Selecting **FRAME** displays the dialog shown at right.



Press the selector left or right to scroll through pictures and press **MENU/OK** to delete the current picture (the picture is deleted immediately; be careful not delete the wrong picture).



Press **DISP/BACK** to exit when all the desired pictures have been deleted.

### ■ ALL FRAMES: Deleting All Images

Selecting **ALL FRAMES** displays the confirmation shown at right.



Press **MENU/OK** to delete all unprotected pictures.



The dialog shown at right is displayed during deletion. Press **DISP/BACK** to cancel before all pictures have been deleted (any pictures deleted before the button was pressed can not be recovered).



 
# **Recording Movies**

Shoot short movies at 30 frames per second. Sound is recorded via the built-in microphone; do not cover the microphone during recording.

Press MENU/OK to display the shooting menu and select 

MODE (pg. 28).

MODE (pg. 28).



Choosing the Frame Size
To choose the frame size, press MENU/OK and select
QUALITY. Choose 640
(640×480 pixels) for better quality, \$20 (320×240 pixels) for longer movies. Press MENU/OK to return to movie recording mode.

**2** Frame the scene using the zoom buttons





Zoom can not be adjusted once recording begins.

**3** Press the shutter button all the way down to start recording.





**REC** and time remaining are displayed in monitor

#### **◆** Note

Focus is set when recording begins; exposure and white balance are adjusted automatically throughout recording. The color and brightness of the image may vary from that displayed before recording begins.

4 Press the shutter button to end recording. Recording ends automatically when the movie reaches maximum length or memory is full.



**■ Tip** 

There is no need to keep the shutter button pressed during recording.

 
# **▶** Viewing Movies

During playback (pg. 32), movies are displayed in the monitor as shown at right. The following operations can be performed while a movie is displayed:



Operation	Description
Start/pause	<b>Press the selector down</b> to start playback.
_ playback	Press again to pause.
End	Press the selector up to end playback. If
playback/	playback is paused, pressing the selector
delete	up will delete the current movie.
	<b>Press the selector right</b> to advance, <b>left</b> to
Advance/	rewind. If playback is paused, the movie
rewind	will advance or rewind one frame each
	time the selector is pressed.
	Press MENU/OK to pause playback and
Adjust	display volume controls. Press the
volume	selector up or down to adjust the
volume	volume; press <b>MENU/OK</b> again to resume
	playback.

Progress is shown in the monitor during playback.




### **\** Cautions

- Do not cover the speaker during playback.
- Vertical or horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.

# **Viewing Pictures on TV**

Connect the camera to a TV and tune the television to the video channel to show pictures to a group. Connect an A/V cable (optional), as shown below.

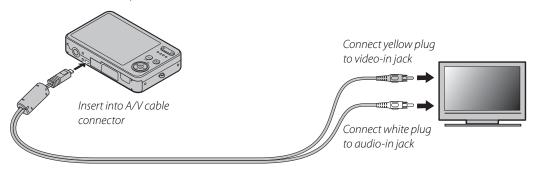

Press for about a second to turn the camera on. The camera monitor turns off and pictures and movies are played back on the TV. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.

#### **←** Note

Image quality drops during movie playback.

### **\** Caution

When making the A/V cable connection, be sure the connectors are fully inserted.

 
## **Printing Pictures via USB**

If the printer supports PictBridge, the camera can be connected directly to the printer and pictures can be printed without first being copied to a computer. Note that depending on the printer, not all the functions described below may be supported.




## **Connecting the Camera**

1 Connect the supplied USB cable as shown and turn the printer on.



 Press the ▶ button for about a second to turn the camera on. USB will be displayed in the monitor, followed by the PictBridge display shown below at right.



## **Printing Selected Pictures**

Press the selector left or right to display a picture you wish to print.



**2** Press the selector up or down to choose the number of copies (up to 99).



**3** Repeat steps 1–2 to select additional pictures. Press **MENU/OK** to display a confirmation dialog when settings are complete.





**4** Press **MENU/OK** to start printing.



### ■ Tip: Printing the Date of Recording

To print the date of recording on pictures, press **DISP/BACK** in steps 1–2 to display the PictBridge menu (see "Printing the DPOF Print Order," below). Press the selector up or down to highlight **PRINT WITH DATE** and press **MENU/OK** to return to the PictBridge display (to print pictures without the date of recording, select **PRINT WITHOUT DATE**). The date will not be printed if the camera clock was not set when the picture was taken.

#### **★** Note

 
If no pictures are selected when the **MENU/OK** button is pressed, the camera will print one copy of the current picture.

## **Printing the DPOF Print Order**

To print the print order created with **PRINT ORDER (DPOF)** in the playback menu (pg. 62):

1 In the PictBridge display, press DISP/ BACK to open the PictBridge menu.





Press the selector up or down to highlight PRINT DPOF.



**3** Press **MENU/OK** to display a confirmation dialog.







## ▲ Press MENU/OK to start printing.



## During Printing

The message shown at right is displayed during printing. Press **DISP/BACK** to cancel before all pictures are printed (depending on the printer, printing may end before the current picture has printed).



If printing is interrupted, press **\D** to turn the camera off and then on again.

## Disconnecting the Camera

Confirm that "PRINTING" is not displayed in the monitor and press **\rightarrow** to turn the camera off. Disconnect the USB cable

#### **←** Notes

- Print pictures from internal memory or a memory card that has been formatted in the camera
- If the printer does not support date printing, the **PRINT WITH DATE** option will not be available in the PictBridge menu and the date will not be printed on the pictures in the DPOF print order.
- Default printer page size and print quality settings are used when printing via direct USB connection.

## **Creating a DPOF Print Order**

The **PRINT ORDER (DPOF)** option in the playback menu can be used to create a digital "print order" for PictBridge-compatible printers (pg. 42) or devices that support DPOF.

### **DPOF**

**DPOF** (Digital Print Order Format) is standard that allows pictures to be printed from "print orders" stored in internal memory or on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.

## ■ WITH DATE [ / WITHOUT DATE

To modify the DPOF print order, select **PRINT**ORDER (DPOF) in the playback menu and press
the selector up or down to highlight WITH

DATE or WITHOUT DATE.



with DATE : Print date of recording on pictures.

**LWITHOUT DATE**: Print pictures without date.

 
Press MENU/OK and follow the steps below.

1 Press the selector left or right to display a picture you wish to include in or remove from the print order.



**2** Press the selector up or down to choose the number of copies (up to 99). To remove a picture from the order, press the selector down until the number of copies is 0.





Repeat steps 1–2 to complete the print order. Press **MENU/OK** to save the print order when settings are complete, or **DISP/BACK** to exit without changing the print order.

**4** The total number of prints is displayed in the monitor. Press **MENU/OK** to exit.



The pictures in the current print order are indicated by a icon during playback.



#### ■ RESET ALL

To cancel the current print order, select **RESET ALL** in the **PRINT ORDER** (**DPOF**) menu. The confirmation shown at right will be displayed; press **MENU/OK** to remove all pictures from the order.

#### **←** Notes

- Remove the memory card to create or modify a print order for the pictures in internal memory.
- Print orders can contain a maximum of 999 pictures.
- If a memory card is inserted containing a print order created by another camera, the message shown at right will be displayed. Pressing **MENU/OK** cancels the print order; a new print order must be created as described above.





# **Viewing Pictures on a Computer**

The supplied FinePixViewer software can be used to copy pictures to a computer, where they can be stored, viewed, organized, and printed. Before proceeding, install FinePixViewer as described below. The latest FinePixViewer is available at http://www.fujifilm.com/. *Do Not connect the camera to the computer until installation is complete*.

## Installing FinePixViewer

FinePixViewer is available in a Windows version (FinePixViewer S) and a Macintosh version (FinePixViewer). Installation instructions for Windows are on pages 48–50, those for the Macintosh on pages 51–52.

## Installing FinePixViewer S: Windows

1 Confirm that the computer meets the following system requirements:

OS	Preinstalled versions of Windows Vista, Windows XP Home Edition (Service Pack 2), Windows XP Professional (Service Pack 2), or Windows 2000 Professional (Service Pack 4)	
CPU	Windows Vista: 800 MHz Pentium 4 or better (3 GHz Pentium 4 or better recommended) Windows XP: 800 MHz Pentium 4 or better (2 GHz Pentium 4 or better recommended)	
	• Windows 2000: 200 MHz Pentium or better	
	• Windows Vista: 512 MB or more (1 GB or more recommended)	
RAM	• Windows XP: 512 MB or more	
	• Windows 2000: 128 MB or more	
Free disk	A minimum of 450 MB required for installation with 600 MB available when FinePixViewer is running (15 GB or	
space	more recommended under Windows Vista, 2 GB or more recommended under Windows XP)	
Video	$800 \times 600$ pixels or more with 16-bit color or better (1,024 $\times$ 768 pixels or more with 32-bit color recommended)	
Other	<ul> <li>Built-in USB port recommended. Operation is not guaranteed other USB ports.</li> <li>Internet connection (56 kbps or faster recommended) required to use FinePix Internet Service; Internet connection and e-mail software required to use e-mail option</li> </ul>	

#### **\** Caution

Other versions of Windows are not supported. Operation is not guaranteed on home-built computers or computers that have been upgraded from earlier versions of Windows.

- **2** Start the computer. Log in to an account with administrator privileges before proceeding.
- **3** Exit any applications that may be running and insert the installer CD in a CD-ROM drive.

### Windows Vista

If an AutoPlay dialog is displayed, click **SETUP.exe**. A "User Account Control" dialog will then be displayed; click **Allow**.

The installer will start automatically; click **Installing FinePixViewer** and follow the on-screen instructions to install FinePixViewer S. Note that the Windows CD may be required during installation.

## **■** If the Installer Does Not Start Automatically

If the installer does not start automatically, select **Computer** or **My Computer** from the Start menu (Windows Vista/XP) or double-click the **My Computer** icon on the desktop (Windows 2000), then double-click the **FINEPIX** CD icon to open the FINEPIX CD window and double-click **SETUP** or **SETUP.exe**.

- **4** If prompted to install Windows Media Player or DirectX, follow the on-screen instructions to complete installation.
- **5** When prompted, remove the installer CD from the CD-ROM drive and click **Restart** to restart the computer. Store the installer CD in a dry location out of direct sunlight in case you need to reinstall the software. The version number is printed at the top of the CD label for reference when updating the software or contacting customer support.

Installation is now complete. Proceed to "Connecting the Camera" on page 53.

## Installing FinePixViewer: Macintosh

**1** Confirm that the computer meets the following system requirements:

	CPU	PowerPC or Intel
	<b>0S</b> Preinstalled versions of Mac OS X 10.3.9-10.5 (visit http://www.fujifilm.com/ for more information)	
	RAM	256 MB or more
Fr	ee disk space	A minimum of 200 MB required for installation with 400 MB available when FinePixViewer is running
	Video	$800 \times 600$ pixels or more with thousands of colors or better
		<ul> <li>Built-in USB port recommended. Operation is not guaranteed other USB ports.</li> <li>Internet connection (56 kbps or faster recommended) required to use FinePix Internet Service; Internet connection and e-mail software required to use e-mail option</li> </ul>

- 2 After starting the computer and quitting any applications that may be running, insert the installer CD in a CD-ROM drive. Double-click the **FinePix CD** icon on the desktop and double-click **Installer for Mac OS X**.
- **3** An installer dialog will be displayed; click **Installing FinePixViewer** to start installation. Enter an administrator name and password when prompted and click **OK**, then follow the on-screen instructions to install FinePixViewer. Click **Exit** to quit the installer when installation is complete.

- 4 Remove the installer CD from the CD-ROM drive. Note that you may be unable to remove the CD if Safari is running; if necessary, quit Safari before removing the CD. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software. The version number is printed at the top of the CD label for reference when updating the software or contacting customer support.
- **5** Select **Applications** in the Finder **Go** menu to open the applications folder. Double-click the **Image Capture** icon and select **Preferences...** from the Image Capture application menu.

The Image Capture preferences dialog will be displayed. Choose **Other...** in the **When a camera is connected, open** menu, then select **FPVBridge** in the "Applications/FinePixViewer" folder and click **Open**.





Select **Quit Image Capture** from the Image Capture application menu.

Installation is now complete. Proceed to "Connecting the Camera" on page 53.

 
## **Connecting the Camera**

1 If the pictures you wish to copy are stored on a memory card, insert the card into the camera (pg. 8). If no card is inserted, pictures will be copied from internal memory.

### **\** Caution

Loss of power during transfer could result in loss of data or damage to internal memory or the memory card. Check the battery level.

**2** Turn the camera off and connect the supplied USB cable as shown, making sure the connectors are fully inserted. Connect the camera directly to the computer; do not use a USB hub or keyboard.



Press the ▶ button for about a second to turn the camera on. FinePixViewer will start automatically and the "Save Image Wizard" will be displayed. Follow the on-screen instructions to copy pictures to the computer. To exit without copying pictures, click CANCEL.

### **\** Caution

If FinePixViewer does not start automatically, the software may not be correctly installed.

Disconnect the camera and reinstall the software.

For more information on using FinePixViewer, select **How to Use FinePixViewer** in the FinePixViewer **Help** menu.

### **◆** Note

The camera will not turn off automatically while connected to a computer.

#### **\** Cautions

- Use only memory cards that have been formatted in the camera and contain pictures taken with the camera. If a memory card containing a large number of images is inserted, there may be a delay before FinePixViewer starts and FinePixViewer may be unable to import or save images. Use a memory card reader to transfer pictures.
- Make sure the indicator lamp is out before turning the camera off, disconnecting the USB cable or pulling the memory card out. Failure to observe this precaution could result in loss of data or damage to internal memory or the memory card.
- Disconnect the camera before inserting or removing memory cards.
- In some cases, it may not be possible to access pictures saved to a network server using FinePixViewer in the same way as on a standalone computer.
- The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.

## Disconnecting the Camera

After confirming that the indicator lamp is out, follow the on-screen instructions to turn the camera off and disconnect the USB cable.

## Uninstalling FinePixViewer

Only uninstall FinePixViewer before reinstalling the software or when it is no longer required. After quitting FinePixViewer and disconnecting the camera, drag the "FinePixViewer" folder from "Applications" into the Trash and select **Empty Trash** in the **Finder** menu (Macintosh), or open the control panel and use "Programs and Features" (Windows Vista) or "Add/Remove Programs" (other versions of Windows) to uninstall FinePixViewer. Under Windows, one or more confirmation dialogs may be displayed; read the contents carefully before clicking **OK**.

# The Shooting Menu

The shooting menu is used to adjust settings for a wide range of shooting conditions.

## <u>Using the Shooting Menu</u>

**1** Press **MENU/OK** to display the shooting menu.



**3** Press the selector right to display options for the highlighted item.





← Note
The options displayed in the shooting menu vary depending on the shooting mode.

SHOOTING MENU

FACE DETECTION

so iso

QUALITY

CONTINUOUS

0 0

AUTO

● £0021 N



2 Press the selector up or down to highlight the desired menu item.



**4** Press the selector up or down to highlight the desired option.



Press **MENU/OK** to select the highlighted option.



# **Shooting Menu Options**

Menu item	Description	Options	Default
© SHOOTING MODE	Choose a shooting mode according to the type of subject (pg. 28).	OM/‱/O/③/‰/\$/▲/%/ C/&/(O/). Y/辞/図/#	۵
FACE DETECTION	Turn Intelligent Face Detection and red-eye removal on or off (pg. 18).	OFF  OFF	ON ON
<b>®</b> ISO	Adjust ISO sensitivity (pg. 57). Choose higher values when the subject is poorly lit.	AUTO/1600/800/400/200/ 100	AUTO
QUALITY	Choose image size and quality (pg. 58).	10M F/10M N/9M 3:2/5M / 3M / 2M /03M	IOM N
EXP. COMPENSATION	Adjust exposure for bright, dark, or high-contrast scenes (pg. 59).	–2 EV to +2 EV in increments of ⅓ EV	±0
® WHITE BALANCE	Adjust color for different light sources (pg. 60).	AUTO/☀/を/∺/∺//∺//	AUTO
CONTINUOUS	Shoot a series of pictures (pg. 61).	<b>₫</b> ₂/OFF	OFF
⑤ SET-UP	Perform basic camera setup such as choosing a language and setting the time and date (pg. 71).	<b>□</b> / <b>۶</b> 1/ <b>۶</b> 2/ <b>۶</b> 3	_

## ® ISO

Control the camera's sensitivity to light with M. Higher values can be used to reduce blur when lighting is poor; note, however, that mottling may appear in pictures taken at high sensitivities. If **AUTO** is selected, the camera will adjust sensitivity automatically in response to shooting conditions. Settings other than **AUTO** are shown by an icon in the monitor if you use M.

### QUALITY

Choose the size and quality at which still pictures are recorded. Large pictures can be printed at large sizes with no drop in quality; small pictures require less memory, allowing more pictures to be recorded.

Option	Prints at sizes up to
10M F	31×23 cm/12×9 in. (10M) or 31×21 cm/
10M N	12×8 in. (9M 3:2). Choose 10M F for high-
9M 3:2	quality prints, 9M 3:2 for an aspect ratio of
	3.2.
5M	22×16 cm (8.5×6.5 in.)
<b>3M</b>	$17 \times 13 \text{ cm } (7 \times 5 \text{ in.})$
2M	14×10 cm (5.3×4 in.)
03M	$5 \times 4$ cm ( $2 \times 1.5$ in.). Suited to e-mail or the
COM	web.

The number of pictures that can be taken at current settings (pg. 91) is displayed to the right of the image quality icon in the monitor.

## Aspect Ratio

Pictures taken at an image quality setting of **QLI** 3:2 have an aspect ratio of 3:2, the same as a frame of 35-mm film. Pictures taken at other settings have an aspect ratio of 4:3.





3:2

#### **◆** Note

Image quality is not reset when the camera is turned off or another shooting mode is selected.

 
### **EXP. COMPENSATION**

Use exposure compensation when photographing very bright, very dark, or highcontrast subjects.

Choose positive (+) values to increase exposure









## Choosing an Exposure Compensation Value

• Backlit subjects: choose values from  $+\frac{2}{3}$  FV to  $+\frac{1}{3}$  FV (for an explanation of the term "EV", see the Glossary on page 90)



 Highly reflective subjects or very bright scenes (e.g., snowfields): +1 FV



- Scenes that are mostly sky: +1 EV
- Spotlit subjects (particularly if photographed against dark backgrounds): −¾ EV
- Subjects with low reflectivity (pine trees or darkcolored foliage): -2/3 EV

#### **←** Note

At settings other than ±0, a 🔀 icon is displayed in the monitor. Exposure compensation is not reset when the camera is turned off; to restore normal exposure control, choose a value of  $\pm 0$ .

### **® WHITE BALANCE**

For natural colors, choose a setting that matches the light source (for an explanation of "white balance," see the Glossary on page 90).

<b>Option</b>	Description	
AUTO	White balance adjusted automatically.	
*	For subjects in direct sunlight.	
*=	For subjects in the shade.	
<b>₩</b> 1	Use under "daylight" fluorescent lights.	
岩	Use under "warm white" fluorescent lights.	
∺	Use under "cool white" fluorescent lights.	
- <b>Ģ</b> -	Use under incandescent lighting.	

If **AUTO** does not produce the desired results (for example, when taking close-ups), choose the option that matches the light source.

#### **★** Note

Results vary with shooting conditions. Play pictures back after shooting to check colors in the monitor.

## CONTINUOUS (Continuous shooting)

Select **Q** TOP 3 to capture motion in a series of pictures. The camera takes up to three pictures while the shutter-release button is pressed.

#### **←** Notes

- Frame rate varies with shutter speed.
- Focus and exposure are determined by the first frame in each series.
- The number of pictures that can be recorded depends on the memory available. Additional time may be required to record pictures when shooting ends. The pictures are displayed in the monitor while recording is in progress.



# The Playback Menu

The playback menu is used to manage the pictures in internal memory or on the memory card.

## **Using the Playback Menu**

Press ► to enter playback mode (pg. 32).



**2** Press **MENU/OK** to display the playback menu.



PLAYBACK MENU

III ERASE

RED EVE REMOVAL

SLIDE SHOW

PRINT ORDER (DPOF)

PROTECT

**3** Press the selector up or down to highlight the desired menu item.



**4** Press the selector right to display options for the highlighted item.





► PLAYBACK MENU

**5** Press the selector up or down to highlight the desired option.



**6** Press **MENU/OK** to select the highlighted option.



# **Playback Menu Options**

The following options are available:

Option	Description
<b>⊕</b> ERASE	Delete all or selected pictures (pg. 36).
	Create copies with reduced red eye (pg. 64).
SLIDE SHOW	View pictures in a slide show (pg. 65).
PRINT ORDER (DPOF)	Select pictures for printing on DPOF- and PictBridge-compatible devices (pg. 45).
<b>☞</b> PROTECT	Protect pictures from accidental deletion (pg. 66).
<b>™</b> COPY	Copy pictures between internal memory and a memory card (pg. 67).
<b>⊘</b> IMAGE ROTATE	Rotate pictures (pg. 69).
TRIMMING	Create cropped copies of pictures (pg. 70).
<b>⑤</b> SET-UP	Perform basic camera setup (pg. 71).

 
#### RED EYE REMOVAL

This option is used with pictures taken using Intelligent Face Detection to create copies that have been processed to remove red eye.

Play the picture back in the monitor (pictures taken with Intelligent Face Detection are indicated by a □ icon) and select ■ RED EYE REMOVAL in the playback menu (pg. 62).



Press MENU/OK. The message shown below at left will be displayed while the camera analyses the image; if red-eye is detected, the message shown below at right will be displayed while the camera processes the image to create a copy with reduced red-eye.




#### **←** Notes

- Red eye may not be removed if the camera is unable to detect a face or the face is in profile. Results may differ depending on the scene. Red eye can not be removed from pictures that have already been processed using red-eye removal or pictures created with other devices.
- The amount of time needed to process the image varies with the number of faces detected.
- Copies created with **⊚ RED EYE REMOVAL** are indicated by a **⊚** icon during playback.

## SLIDE SHOW

View pictures in an automated slide show. Choose the type of show and press **MENU/OK** to start. Press **DISP/BACK** at any time during the show to

 

view on-screen help. When a movie is displayed, movie playback will begin automatically, and the slide show will continue when the movie ends. The show can be ended at any time by pressing

#### MENU/OK.

#### **◆** Note

The camera will not turn off automatically while a slide show is in progress.

Option	Description
NORMAL	Press selector left or right to go back or skip ahead one frame. Select <b>WIPE</b> for
WIPE	wipe transitions between frames.
NORMAL [2]	As above, except that camera automatically zooms in on faces
WIPE [2]	selected with Intelligent Face detection (pg. 18).

### **PROTECT**

Protect pictures from accidental deletion. The following options are available.

### **■** FRAME

Protect selected pictures.

1 Press the selector left or right to display the desired picture.







Picture not protected

Protected picture

Press MENU/OK to protect the picture. If the picture is already protected, pressing MENU/OK will remove protection from the image.



**3** Repeat steps 1–2 to protect additional images. Press **DISP/BACK** to exit when the operation is complete.



#### ■ SFT ALL

Press **MENU/OK** to protect all pictures, or press **DISP/BACK** to exit without changing picture status.



On RESET ALL OK?

#### ■ RESET ALL

Press **MENU/OK** to remove protection from all pictures, or press **DISP/BACK** to exit without changing picture status.

ISP/BACK to exit without and picture status.

umber of pictures disvery large, the

If the number of pictures affected is very large, the display at right will appear in the monitor while the operation is in progress.



Press **DISP/BACK** to exit before the operation is complete.

#### **N** Caution

Protected pictures will be deleted when the memory card or internal memory is formatted (pg. 76).

 
### COPY

Copy pictures between internal memory and a memory card.

Press the selector up or down to highlight IN INTERNAL MEMORY

So CARD (copy pictures from internal memory to the memory card) or

CARD IN INTERNAL MEMORY (copy pictures from a memory card to internal memory).







**3** Press the selector up or down to highlight **FRAME** or **ALL FRAMES**.



4 Press MENU/OK.



### **IDENTIFY : Tip: Copying Pictures Between Memory Cards**

To copy pictures between two memory cards, insert the source card and copy the pictures to internal memory, then remove the source card, insert the destination card, and copy the pictures from internal memory.

### **■** FRAME

Copy selected frames.



Press the selector left or right to display the desired picture.



**2** Press **MENU/OK** to copy the picture.



**3** Repeat steps 1–2 to copy additional images. Press **DISP/BACK** to exit when the operation is complete.



#### ■ ALL FRAMES

Press **MENU/OK** to copy all pictures, or press **DISP/BACK** to exit without copying pictures.

 


### **\** Cautions

- Copying ends when the destination is full.
- DPOF print information is not copied (pg. 45).

### **1 IMAGE ROTATE**

By default, pictures taken in tall orientation are displayed in wide orientation. Use this option to display pictures in the correct orientation in the



monitor. It has no effect on pictures displayed on a computer or other device.


### **◆** Notes

- Protected pictures can not be rotated. Remove protection before rotating pictures (pg. 66).
- The camera may not be able to rotate pictures created with other devices.

To rotate a picture, play the picture back and select **② IMAGE ROTATE** in the playback menu (pg. 62).

Press the selector down to rotate the picture 90° clockwise, up to rotate the picture 90° counterclockwise.



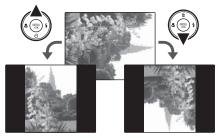

Press MENU/OK to confirm the operation (to exit without rotating the picture, press DISP/BACK).



The next time the picture is played back, it will automatically be rotated.

### TRIMMING

To create a cropped copy of a picture, play the picture back and select **TRIMMING** in the playback menu (pg. 62).

1 Press the zoom buttons to zoom in and out and use the selector to scroll the picture until the desired portion is displayed (to exit to single-frame playback without creating a cropped copy, press DISP/BACK).

700m indicator

2 Press MENU/OK. A confirmation dialog will be displayed.





W



Navigation window shows portion of image currently displayed in monitor

Copy size (5M), 3M), 2M), or 03M; see page 58) is shown at the top; if the size is 03M, OK is displayed in yellow. Larger crops produce larger copies; all copies have an aspect ratio of 4:3.

**3** Press **MENU/OK** to save the cropped copy to a separate file.



# The Setup Menu

# **Using the Setup Menu**

- Display the setup menu.
  - **1.1** Press **MENU/OK** to display the menu for the current mode.
  - **1.2** Press the selector up or down to highlight (1) SET-UP.



 
**1.3** Press the selector right to display the setup menu.

 




- **7** Choose a page.
  - 2.1 Press the selector left or right to choose a page.
  - 2.2 Press the selector down to enter the menu.









3.2 Press the selector right to display options for the highlighted item.





**3.3** Press the selector up or down to highlight an option.



3.4 Press MENU/OK to select the highlighted option.





# **Setup Menu Options**

 
	Menu item	Description	Options	Default
	<b>☑</b> IMAGE DISP.	Choose how long pictures are displayed after	CONTINUOUS / 3 SEC / 1.5 SEC /	1.5 SEC
		shooting (pg. 73).	ZOOM (CONTINUOUS) / OFF	
•	™ FRAME NO.	Choose how files are named (pg. 74).	CONTINUOUS / RENEW	CONTINUOUS
ب	Q DIGITAL ZOOM	Enable or disable digital zoom (pg. 75).	ON/OFF	OFF
	ET LCD DOWED CAVE	Enable or disable monitor power saving (pg.	ON /OFF	ON
	■ LCD POWER SAVE	75).	ON/OFF	UN
	DATE/TIME	Set the camera clock (pg. 12).	_	_
	OPERATION VOL.	Adjust the volume of camera controls.	(mid)/	40
1 عر	SHUTTER VOLUME	Adjust the volume of the shutter sound.	<b>(</b> (low) / <b>(0FF</b> (mute)	•••
	D PLAYBACK VOLUME	Adjust the volume for movie playback (pg. 75).	_	7
	<b>EXECUTE</b> LCD BRIGHTNESS	Control the brightness of the monitor (pg. 75).	_	0
	FORMAT	Format internal memory or memory cards		
		(pg. 76).	_	_
	ම්ව 言語/LANG.	Choose a language (pg. 12).	See page 93	ENGLISH
<b>ر</b> و	AUTO POWER OFF	Choose the auto power off delay (pg. 76).	5 MIN/2 MIN/OFF	2 MIN
	TIME DIFFERENCE	Set the clock to local time (pg. 77).	<b>☆</b> / <b>+</b>	企
	VIDEO SYSTEM	Choose a video mode for connection to a TV	NTSC/PAL	
	PAL VIDEO STSTEIN	(pg. 41).	NIJC/ FAL	_
		Reset all settings except Frame number,		
		DATE/TIME, TIME DIFFERENCE, and VIDEO SYSTEM		
<b>ر</b> عر	RESET	to default values. A confirmation dialog will	_	_
		be displayed, press the selector left or right to		
		highlight <b>OK</b> and press <b>MENU/OK</b> .		

#### **☑** IMAGE DISP.

Choose an option other than **OFF** to display pictures in the monitor after shooting. Pictures can be displayed for 1.5 s **(1.5 SEC)**, 3 s **(3 SEC)**, or until the **MENU/OK** button is pressed **(CONTINUOUS)** and **ZOOM (CONTINUOUS)**). If **ZOOM (CONTINUOUS)** is selected, photos taken at qualities larger than **(SE)** can be zoomed in to check focus and other fine details (see page 33). If Intelligent Face Detection is on (pg. 18), the camera will automatically zoom in on the face used to set focus and exposure; press the selector down to cycle through the other faces detected. Note that **ZOOM (CONTINUOUS)** is disabled during continuous shooting (pg. 61), and that the colors displayed at settings of **1.5 SEC** and **3 SEC** may differ from those in the final picture.

### I FRAME NO.

New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used. The file number is displayed during playback as shown at right. **FRAME NO.** controls whether file numbering is reset to 0001 when a new memory card is inserted or the current memory card or internal memory is formatted.




- **CONTINUOUS**: Numbering continues from the last file number used or the first available file number, whichever is higher. Choose this option to reduce the number of pictures with duplicate file names.
- RENEW: Numbering is reset to 0001 after formatting or when a new memory card is inserted.

#### **←** Notes

- If the frame number reaches 999-9999, the shutter release will be disabled (pg. 88).
- Selecting RESET (pg. 72) does not reset frame numbering.
- Frame numbers for pictures taken with other cameras may differ.

#### **Q** DIGITAL ZOOM

If  $\mathbf{ON}$  is selected, pressing  $\mathbf{T}$  at the maximum optical zoom position will trigger digital zoom, further magnifying the image. To cancel digital zoom, zoom out to the minimum digital zoom position and press  $\mathbf{W}$ .

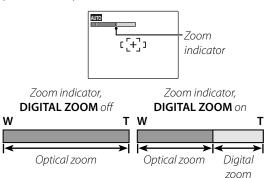

### **\** Caution

Digital zoom produces lower quality images than optical zoom.

### **☑** LCD POWER SAVE

If **ON** is selected, the monitor will dim to save power if no operations are performed for several seconds. Full brightness can be restored by pressing the shutter button halfway. The monitor does not dim in movie mode or during playback.

### **D PLAYBACK VOLUME**

Press the selector up or down to choose volume for movie playback and press **MENU/OK** to select.



### LCD BRIGHTNESS

Press the selector up or down to choose monitor brightness and press **MENU/OK** to select.



### **FORMAT**

Format internal memory or a memory card. If a memory card is inserted in the camera, will be displayed in the

dialog shown at right and



this option will format the memory card. If no memory card is inserted, will be displayed and this option will format internal memory. Press the selector left to highlight **OK** and press **MENU/OK** to begin formatting.

### **\** Cautions

- All data—including protected pictures—will be deleted. Be sure important files have been copied to a computer or other storage device.
- $\bullet$  Do not open the battery cover during formatting.

### **AUTO POWER OFF**

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually. Note that regardless of the option selected, the camera will not turn off automatically when connected to a printer (pg. 42) or computer (pg. 53) or when a slide show is in progress (pg. 65).

### ■ Tip: Reactivating the Camera

To reactivate the camera after it has turned off automatically, press the **ON/OFF** button or press the **Description** button for about a second (pg. 11).

### TIME DIFFERENCE

When travelling, use this option to switch the camera clock instantly from your home time zone to the local time at your destination.

- **1** Specify the difference between local time and your home time zone.
  - **1.1** Press the selector up or down to highlight **← LOCAL**.



**1.2** Press the selector right to display the time difference.





- **1.3** Press the selector left or right to highlight +, –, hours, or minutes; press up or down to edit. The minimum increment is 15 minutes.
- S (SH) \$
- **1.4** Press **MENU/OK** when settings are complete.

2 Switch between local time and your home time zone


To set the camera clock to local time, highlight + LOCAL and press MENU/OK. To set the clock to the time in your home time zone, select + HOME. If + LOCAL is selected, + will be displayed in the monitor for three seconds after the camera enters shooting mode, and the date will be displayed in yellow.



After changing time zones, check that the date and time are correct.

# **Optional Accessories**

The camera supports a wide range of accessories from FUJIFILM and other manufacturers.

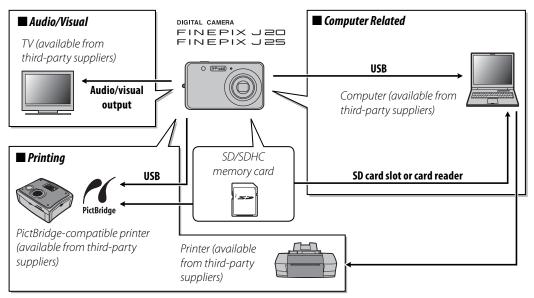

# **Accessories from Fujifilm**

The following optional accessories were available from FUJIFILM. For the latest information on the accessories available in your region, check with your local Fujifilm representative or visit <a href="http://www.fujifilm.com/products/digital\_cameras/index.html">http://www.fujifilm.com/products/digital\_cameras/index.html</a>.

- NP-45 rechargeable Li-ion battery (supplied): Additional NP-45 slimline batteries can be purchased as required.
- AV-C1 A/V cable: Connects the camera and a TV.



# **Troubleshooting**

# **Power and Battery**

	Problem	Possible cause	Solution	Dono
	Problem	Possible cause		Page
Power	The camera does	The battery is exhausted.	Charge the battery or insert a fully-charged spare battery.	4, 6
	not turn on.	The battery is not in the correct orientation.	Re-insert the battery in the correct orientation.	6
		The battery-chamber cover is not latched.	Latch the battery-chamber cover.	7
	The heather was	The battery is cold.	Warm the battery by placing it in a pocket or other warm place and re-insert it in the camera immediately before taking a picture.	_
supply	The battery runs	There is dirt on the battery terminals.	Clean the terminals with a soft, dry cloth.	
	down quickly.	The camera is in 👪 mode.	Choose a different shooting mode.	29
		The battery has been charged many times.	The battery has reached the end of its charging life. Purchase a new battery.	_
	The camera turns off suddenly.	The battery is exhausted.	Charge the battery or insert a fully-charged spare battery.	4, 6
	Charging does	The battery is not correctly inserted.	Re-insert the battery in the charger.	6
	not start.	The battery is not in the correct orientation.	Re-insert the battery in the correct orientation.	6
	Charging is slow.	The temperature is low.	Charge the battery at room temperature.	5
Battery	There is dirt of	There is dirt on the battery terminals.	Clean the terminals with a soft, dry cloth.	
charger	The charging lamp lights, but the battery does not charge.	The battery has been charged many times.	The battery has reached the end of its charging life. Purchase a new battery. If the battery still fails to charge, contact your FUJIFILM dealer.	_

# **Menus and Displays**

Problem	Possible cause	Solution	Page
Menus and displays are	English is not selected for the 图言語/LANG.	Soloct ENGLISH	12
not in English.	option in the setup menu.	Select <b>ENGLISH</b> .	12

### Shooting

	Problem	Possible cause	Solution	Page
		Memory is full.	Insert a new memory card or delete pictures.	8, 36
	No picture is	Memory is not formatted.	Format the memory card or internal memory.	76
	taken when the	There is dirt on the memory card contacts.	Clean the contacts with a soft, dry cloth.	9 8
Taking	shutter button is	The memory card is damaged.	Insert a new memory card.	8
pictures	pressed. The	The battery is exhausted.	Charge the battery or insert a fully-charged spare battery.	4, 6
		The camera has turned off automatically.	Turn the camera on.	11, 76
	The monitor goes dark after shooting.	The flash has fired.	The monitor may darken while the flash charges. Wait for the flash to charge.	24
Focus	The camera does	The subject is close to the camera.	Select macro mode.	23
	not focus.	The subject is far away from the camera.	Cancel macro mode.	23
	Tiot locus.	The subject is not suited to autofocus.	Use focus lock.	21

	Problem	Possible cause	Solution	Page
	Face detection not available.	The camera is in a shooting mode which makes Intelligent Face Detection unavailable.	Choose a different shooting mode.	28
		The subject's face is obscured sunglasses, a hat, long hair, or other objects.	Remove the obstructions.	
Intelligent Face	No face is detected.	The subject's face occupies only a small area of the frame.	Change the composition so that the subject's face occupies a larger area of the frame.	18
Detection		The subject's head is tilted or horizontal.	Ask the subject to hold their head straight.	]
		The camera is tilted.	Hold the camera straight.	14
		The subject's face is poorly lit.	Shoot in bright light.	_
	Wrong subject selected.	The selected subject is closer to the center of the frame than the main subject.	Recompose the picture or turn face detection off and frame the picture using focus lock.	21
Close-ups	Macro mode is not available.	The camera is in a shooting mode which makes macro (close-up) mode unavailable.	Choose a different shooting mode.	28

	Problem	Possible cause	Solution	Page
		The flash is charging.	Wait for the flash to charge.	16
		The camera is in a shooting mode in which the flash does not fire.	Choose a different shooting mode.	28
	The flash does not fire.	The battery is exhausted.	Charge the battery or insert a fully-charged spare battery.	4, 6
		The camera is in continuous mode.	Select <b>OFF</b> for <b>OCONTINUOUS</b> .	28 4, 6 61 25 24 28 25 93 14 97 14 15, 21, 86
Flash		The camera is in silent mode.	Turn silent mode off .	
1 10311		The flash is off (3).	Choose a different flash mode.	24
	Some flash modes are not	The camera is in a shooting mode which makes some flash modes unavailable.	Choose a different shooting mode.	28
	available.	The camera is in silent mode.	Turn silent mode off .	25
	The flash does not fully light the	The subject is not in range of the flash.	Position the subject in range of the flash.	93
	subject.	The flash window is obstructed.	Hold the camera correctly.	14
		The lens is dirty.	Clean the lens.	97
	Pictures are	The lens is blocked.	Keep objects away from the lens.	14
Problem	blurred.	<b>! AF</b> is displayed during shooting and the focus frame is displayed in red.	Check focus before shooting.	
images		🕼 is displayed during shooting.	Use the flash or a tripod.	24
	Pictures are mottled.	The ambient temperature is high and the subject is poorly lit.	This is normal and does not indicate a malfunction. Choose a lower sensitivity.	57

# Playback

	Problem	Possible cause	Solution	Page
	Pictures are grainy.	The pictures were taken with a different make or model of camera.	_	_
Pictures	Playback zoom unavailable.	The pictures were taken at an image size of or with a different make or model of camera.	_	_
	No sound in	Playback volume is too low.	Adjust playback volume.	
Audio	movie playback.	The microphone was obstructed.	Hold the camera correctly during recording.	
	THOVIC playback.	The speaker is obstructed.	Hold the camera correctly during playback.	
Deletion	· ·	Some of the pictures selected for deletion are protected.	Remove protection using the device with which it was originally applied.	66
Frame no.	File numbering is unexpectedly reset.	The battery-chamber cover was opened while the camera was on.	Turn the camera off before opening the battery-chamber cover to replace the battery or insert a memory card.	11, 74

### Connections

	Problem	Possible cause	Solution	Page
		The camera is not properly connected.	Connect the camera correctly.	41
	N	The supplied A/V cable was connected during movie playback.	Connect the camera once movie playback has ended.	40, 41
	No picture or sound.	Input on the television is set to "TV".	Set input to "VIDEO".	
TV	Souria.	The camera is not set to the correct video standard.	Match the camera <b>WIDEO SYSTEM</b> setting to the TV.	41, 72
		The volume on the television is too low.	Adjust the volume.	_
	No color.	The camera is not set to the correct video standard.	Match the camera <b>WIDEO SYSTEM</b> setting to the TV.	41, 72

	Problem	Possible cause	Solution	Page
Computer	The computer does not recognize the camera.	The camera is not properly connected.	Connect the camera correctly.	53
	Pictures can not	The camera is not properly connected.	Connect the camera correctly.	42
	be printed.	The printer is off.	Turn the printer on.	_
PictBridge	Only one copy is printed. The date is not printed.	The printer is not PictBridge-compatible.	_	_

### Miscellaneous

Problem	Possible cause	Solution	Page
Nothing happens when the	Temporary camera malfunction.	Remove and reinsert the battery.	6
shutter button is pressed.		Charge the battery or insert a fully- charged spare battery.	4, 6
The camera does not function as expected.		Remove and reinsert the battery. If the problem persists, contact your FUJIFILM dealer.	6
No sound.	The camera is in silent mode.	Turn silent mode off.	25

# **Warning Messages and Displays**

The following warnings are displayed in the monitor:

Warning	Description	Solution
<b>Ф</b> (red)	Low battery.	Charge the battery or insert a fully-charged spare
<b>□</b> (blinks red)	Battery exhausted.	battery.
ļoʻ	Slow shutter speed. Picture may be blurred.	Use the flash or mount the camera on a tripod.
<b>!AF</b> (displayed in red with red focus frame)	The camera can not focus.	<ul> <li>Use focus lock to focus on another subject at the same distance, then recompose the picture (pg. 21).</li> <li>If the subject is poorly lit, try focusing at a distance of about 2 m (6 ft. 7 in.).</li> <li>Use macro mode to focus when taking close-ups.</li> </ul>
<b>!AE</b> (blinks red)	The subject is too bright or too dark. The picture will be over- or under-exposed.	If the subject is dark, use the flash.
FOCUS ERROR	Camera malfunction.	Turn the camera off and then on again, taking care not to touch the lens. If the message persists, contact a
ZOOM ERROR	Camera manufectori.	FUJIFILM dealer.
NO CARD	No memory card inserted when <b>COPY</b> is selected in the playback menu.	Insert a memory card.
	The memory card or internal memory is not formatted.	Format the memory card or internal memory (pg. 76).
CARD NOT INITIALIZED	The memory card contacts require cleaning.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 76). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.
PROTECTED CARD	The memory card is locked.	Unlock the memory card (pg. 8).
BUSY	The memory card is incorrectly formatted.	Use the camera to format the memory card (pg. 76).

Warning	Description	Solution
	The memory card is not formatted for use in the camera.	Format the memory card (pg. 76).
CARD ERROR	The memory card contacts require cleaning or the memory card is damaged.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 76). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.
MEMORY FULL		
MEMORY FULL	The memory card or internal memory is full;	Delete pictures or insert a memory card with more
INTERNAL MEMORY IS FULL INSERT A NEW CARD	pictures can not be recorded or copied.	free space.
	Memory card error or connection error.	Re-insert the memory card or turn the camera off and then on again. If the message persists, contact a FUJIFILM dealer.
WRITE ERROR	Not enough memory remaining to record additional pictures.	Delete pictures or insert a memory card with more free space.
	The memory card or internal memory is not formatted.	Format the memory card or internal memory (pg. 76).
	The file is corrupt or was not created with the camera.	The file can not be played back.
READ ERROR	The memory card contacts require cleaning.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 76). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.

Warning	Description	Solution		
FRAME NO. FULL	The camera has run out of frame numbers (current frame number is 999-9999).	Format the memory card and select <b>RENEW</b> for the <b>FRAME NO.</b> option in the <b>SETUP</b> menu. Take a picture to reset frame numbering to 100-0001, then return to the <b>FRAME NO.</b> menu and select <b>CONTINUOUS</b> .		
TOO MANY FRAMES	Date for which more than 4,999 pictures exist selected in sort-by-date view.	Choose a different date.		
CAN NOT EXECUTE	Red-eye reduction can not be applied to the			
CAN NOT EXECUTE	selected picture or movie.	_		
PROTECTED FRAME	An attempt was made to delete or rotate a protected picture.	Remove protection before deleting or rotating pictures.		
sd NO IMAGE	The source device selected in the playback	Select a different source.		
NO IMAGE	COPY menu contains no pictures.	Select a different source.		
O3M CAN NOT TRIM	An attempt was made to crop a 👊 picture.			
CAN NOT TRIM	The picture selected for cropping is damaged or was not created with the camera.	These pictures can not be cropped.		
DPOF FILE ERROR The DPOF print order on the current memory card contains more than 999 images.		Copy the pictures to internal memory and create a new print order.		
CAN NOT SET DPOF	The picture can not be printed using DPOF.	_		
CAN NOT SET DPOF	Movies can not be printed using DPOF.	_		
CAN NOT ROTATE	The picture can not be rotated.	_		
CAN NOT ROTATE	Movies can not be rotated.	_		
PRESS AND HOLD THE DISP BUTTON TO DEACTIVATE SILENT MODE	An attempt was made to choose a flash mode or adjust the volume with the camera in silent mode.	Exit silent mode before choosing a flash mode or adjusting the volume.		
COMMUNICATION ERROR  A connection error occurred while pictures were being printed or copied to a computer or other device.		Confirm that the device is turned on and that the USB cable is connected.		

Warning	Description	Solution
PRINTER ERROR	Printer out of paper or ink, or other printer	Check printer (see printer manual for details). To resume printing, turn the printer off and then turn it back on.
PRINTER ERROR RESUME?	-error.	Check printer (see printer manual for details). If printing does not resume automatically, press <b>MENU/OK</b> to resume.
CAN NOT BE PRINTED	An attempt was made to print a movie, a picture not created with the camera, or a picture in a format not supported by the	Movies and some pictures created with other devices can not be printed. If the picture was created with the camera, check the printer manual to confirm that the printer supports the JFIF-JPEG or Exif-JPEG format. If it does not, the pictures can not be printed.

# Glossary

**Digital zoom**: Unlike optical zoom, digital zoom does not increase the amount of visible detail. Instead, details visible using optical zoom are simply enlarged, producing a slightly "grainy" image.

**DP0F** (Digital Print Order Format): A standard that allows pictures to be printed from "print orders" stored in internal memory or on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.



**EV** (Exposure Value): The exposure value is determined by the sensitivity of the image sensor and the amount of light that enters the camera while the image sensor is exposed. Each time the amount of light doubles, EV increases by one; each time the amount of light is halved, EV decreases by one. The amount of light entering the camera can be controlled by adjusting aperture and shutter speed.

**Exif Print**: A standard that allows information stored with pictures to be used for optimal color reproduction during printing.

**JPEG** (Joint Photographic Experts Group): A compressed file format for color images. The higher the compression rate, the greater the loss of information and more noticeable drop in quality when the picture is displayed.

**Motion JPEG**: An AVI (Audio Video Interleave) format that stores images and sound in a single file, with the images recorded in JPEG format. Motion JPEG files can be played in QuickTime 3.0 or later.

**Smear**: A phenomenon specific to CCDs which causes white streaks to appear when very bright light sources, such as the sun or reflected sunlight, appear in the frame.

**WAV** (Waveform Audio Format): A standard Windows audio file format. WAV files have the extension "\*.WAV" and may be compressed or uncompressed. The camera uses uncompressed WAV. WAV files can be played using Windows Media Player or QuickTime 3.0 or later.

**White balance**: The human brain automatically adapts to changes in the color of light, with the result that objects that appear white under one light source still appear white when the color of the light source changes. Digital cameras can mimic this adjustment by processing images according to the color of the light source. This process is known as "white balance."

# **Internal Memory/Memory Card Capacity**

The following table shows the recording time or number of pictures available at different image qualities. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of exposures or length remaining may not diminish at an even rate.

		10M F	TOM N	9M 3:2	5M	3M	2M	03M	640	320
lmage	size (pixels)	3648>	< 2736	$3648 \times 2432$	2592×1944	2048×1536	1600×1200	640×480	640×480	$320 \times 240$
Fi	ile size	4.9 MB	2.5 MB	2.2 MB	1.2 MB	780 KB	630 KB	130 KB	_	_
	al memory ox. 20 MB)	3	7	8	13	19	26	90	13 s	31 s
SD	512 MB	95	190	210	350	480	640	2220	6 min.	12 min.
) card	1 GB	190	380	420	700	960	1280	4420	12 min.	28 min.
ᇗ	2 GB	390	760	860	1400	1930	2580	8850	25 min.	57 min.
~	4 GB	790	1520	1720	2810	3870	5160	17720	50 min. *	116 min. *
SDHC	8 GB	1590	3060	3450	5650	7780	10370	35560	100 min. *	229 min. *
card	16 GB	3190	6140	6930	11340	15600	20800	71310	204 min. *	467 min. *
₫.	32 GB	6340	12190	13760	22610	30970	41290	99990	406 min. *	927 min. *

<sup>\*</sup> Total length of all movie files. Individual movies can not exceed 2 GB in size.

# **Specifications**

System			
Model	FinePix J25/FinePix J20 digital camera		
Effective pixels	10 million		
CCD	½3-in., square-pixel CCD with primary color filter		
Storage media	Internal memory (approx. 20 MB)     SD/SDHC memory cards (see page 8)		
File system	Compliant with Design Rule for Camera File System (DCF), Exif 2.2, and Digital Print Order Format (DPOF)		
File format	• Still pictures: Exif 2.2 JPEG (compressed) • Movies: Motion JPEG AVI		
Image size (pixels)	• 1011 F: 3,648×2,736 • 1011 N: 3,648×2,736 • 1011 N: 3,648×2,736 • 1011 N: 3,648×2,432 • 1011 N: 2,592×1,944 • 1011 N: 2,048×1,536		
File size	See page 91		
Lens	Fujinon 3 × optical zoom lens, F/3.1 (wide angle) – 5.6 (telephoto)		
Focal length	f=6.3 mm-18.9 mm (35-mm format equivalent: 35.5 mm-106.5 mm)		
Digital zoom	Approx. $5.7 \times$ (up to $17.1 \times$ when combined with optical zoom)		
Aperture	Two steps		
Focus range (distance from	Approx. 40 cm (1.3 ft.) - infinity (wide angle); 40 cm (1.3 ft.) - infinity (telephoto)		
front of lens)	Macro mode: approx. 10 cm-80 cm/3.9 in2.6 ft. (wide angle); 40 cm-80 cm/1.3 ft2.6ft. (telephoto)		
Sensitivity	Equivalent to ISO 100, 200, 400, 800, 1600; AUTO (Standard Output Sensitivity)		
Metering	256-segment through-the-lens (TTL) metering		
Exposure control	Programmed autoexposure		
Exposure compensation	-2EV - +2EV in increments of 1/3EV (♠M mode)		
Scene modes	③(BABY MODE), ¼¾(ANTI-BLUR), ♀(PORTRAIT), ▲(LANDSCAPE), Ҳ(SPORT), ੯(NIGHT),		
	🖈 (NIGHT(TRIPOD)), 👁 (NATURAL LIGHT), 🕍 (BEACH), 🗣 (SNOW), 🍥 (FIREWORKS), 📸 (SUN		
	★(FLOWER),   ▼(PARTY),     #F(MUSEUM),     Image: Text of the part of the		
Image Stabilization	Available		
Intelligent Face Detection	Available		

System			
Shutter speed	1/4 s – 1/2,000 s (AUTO mode); 8 s – 1/2,000 s (other modes); combined mechanical and electronic shutter		
Continuous	Up to three frames at a maximum of approximately 1 fps		
Focus	Mode: Single AF     Autofocus system: Contrast-detect TTL AF		
	Focus-area selection: AF CENTER		
White balance	Automatic scene detection; six manual preset modes for direct sunlight, shade, daylight		
	fluorescent, warm white fluorescent, cool white fluorescent, and incandescent lighting		
Self-timer	Approx. 2s and approx. 10s		
Flash	Flash type: Auto flash		
	Effective range: (180): AUTO)		
	Wide-angle: approx. 50 cm - 3.2 m (1.6 ft 10.5 ft.)		
	Telephoto: approx. 50 cm - 1.8 m (1.6 ft 5.9 ft.)		
	Macro: approx. 30 cm - 80 cm (11.8 in 2.6 ft.)		
Flash modes	Auto, fill flash, off, slow sync (red-eye removal off); auto with red-eye reduction, fill flash with red		
	eye reduction, off, slow sync with red-eye reduction (red-eye removal on)		
Monitor (FinePix J20)	2.7-in., 230k-dot amorphous silicon TFT color LCD monitor; frame coverage approx. 96%		
Monitor (FinePix J25)	3.0-in., 230k-dot amorphous silicon TFT color LCD monitor; frame coverage approx. 96%		
Movies	Camera can record movies with monaural sound and a frame size of 640×480 (640) or 320×24		
	(320) at a frame rate of 30 fps		
Shooting options	Scene recognition, Intelligent Face Detection with red-eye removal, best framing, and frame		
	number memory		
Playback options	Intelligent Face Detection with red-eye removal, micro thumbnail, multi-frame playback, sort-by		
	date, cropping (still pictures only), slide show, and image rotation		
Other options	PictBridge, Exif Print, language selection (Simplified Chinese, Traditional Chinese, Czech, Dutch,		
-	English, French, German, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish,		
	Swedish, and Turkish), time difference		

• **Humidity**: 85% or less (no condensation)

Input/output terminals	
A/V OUT (audio/video output)	NTSC or PAL with monaural sound
Digital input/output	USB 2.0 High Speed with MTP/PTP connection
Power supply/other	
Power sources	NP-45 rechargeable battery
Battery life (NP-45)	Approx. 165 frames, based on CIPA (Camera and Imaging Products Association) standard; measured at 23 °C (73 °F) with the monitor on, pictures recorded to an SD memory card, the camera zoomed from widest angle to maximum zoom and back once every 30 s, the flash fired at full power with every other shot, and the camera turned off and then on again every 10 shots. Note that the number of shots that can be taken with a fully-charged battery varies with temperature and shooting conditions.
Camera dimensions	$91.0 \text{mm} \times 56.0 \text{mm} \times 17.4 \text{mm}/3.6 \text{in}. \times 2.2 \text{in}. \times 0.7 \text{in}. (W \times H \times D), \text{excluding projections}$
Camera weight (FinePix J20)	Approx. 96.5 g/3.4 oz., excluding battery, accessories, and memory cards
Camera weight (FinePix J25)	Approx. 100.0 g/3.5 oz., excluding battery, accessories, and memory cards
Shooting weight (FinePix J20)	Approx. 113.1 g/4.0 oz., including battery and memory card
Shooting weight (FinePix J25)	Approx. 116.6 g/4.1 oz., including battery and memory card

• Temperature:  $0^{\circ}\text{C} - +40^{\circ}\text{C} / +32^{\circ}\text{F} - +104^{\circ}\text{F}$ 

Operating conditions

NP-45 rechargeable battery	
Nominal voltage	DC 3.7V
Nominal capacity	740 mAh
Operating temperature	0°C-+40°C/+32°F-+104°F
Dimensions (W $\times$ H $\times$ D)	31 mm×39.4 mm×5.7 mm/1.2 in.×1.6 in.×0.2 in.
Weight	Approx. 15 g/0.5 oz.

BC-45A battery charger	
Rated input	100–240 V AC, 50/60 Hz
Input capacity	7.0 VA (100 V)/10.8 VA (240 V)
Rated output	4.2 V DC, 550 mA
Supported batteries	NP-45 rechargeable batteries
Charging time	Approx. 100 minutes (at +23 °C/+73 °F)
Dimensions (W $\times$ H $\times$ D)	101.7 mm×56 mm×20 mm/4.0 in.×2.2 in.×0.8 in.
(built-in plug model)	
Dimensions (W $\times$ H $\times$ D)	85 mm×54 mm×20 mm/3.3 in.×2.1 in.×0.8 in.
(power cable model)	
Weight (built-in plug model)	Approx. 66 g/2.3 oz., excluding battery
Weight (power cable model)	Approx. 56 g/2.0 oz., excluding battery
Operating temperature	0°C-+40°C/+32°F-+104°F

### Notes on the Battery and Battery Charger

- The battery and charger may become warm to the touch during charging. This is normal and does not indicate a malfunction. If possible, charge the battery in a well-ventilated location.
- The battery charger may vibrate when in use. This is normal and does not indicate a malfunction.
- The charger is for use with NP-45 batteries only.
- If the charger causes radio interference, increase the distance between the charger and the radio receiver.
- Do not leave the charger in locations that are very dusty or exposed to strong vibration, extreme humidity, or high temperatures (for example, in direct sunlight or next to a heater).
- The battery charger can be used with input voltages of 100–240 V AC and 50 or 60 Hz. The shape of the plug varies with the country of sale; consult your travel agent to determine whether the charger can be used abroad.

### **Color Television Systems**

NTSC (National Television System Committee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (Phase Alternation by Line) is a color television system adopted mainly in European countries and China.

#### **Notices**

- Specifications subject to change without notice. FUJIFILM shall not be held liable for damages resulting from errors in this manual.
- Although the monitor is manufactured using advanced high-precision technology, small bright points and anomalous colors (particularly in the vicinity of text) may appear. This is normal for this type of monitor and does not indicate a malfunction; images recorded with the camera are unaffected.
- Digital cameras may malfunction when exposed to strong radio interference (e.g., electric fields, static
  electricity, or line noise).
- Due to the type of lens used, some distortion may occur at the periphery of images. This is normal.

# **Caring for the Camera**

To ensure continued enjoyment of the product, observe the following precautions.

# Storage and Use

If the camera will not be used for an extended period, remove the battery and memory card. Do not store or use the camera in locations that are:

- exposed to rain, steam, or smoke
- very humid or extremely dusty
- exposed to direct sunlight or very high temperatures, such as in a closed vehicle on a sunny day
- · extremely cold
- subject to strong vibration
- exposed to strong magnetic fields, such as near a broadcasting antenna, power line, radar emitter, motor, transformer, or magnet
- in contact with volatile chemicals such as pesticides
- next to rubber or vinyl products

### **■** Water and Sand

Exposure to water and sand can also damage the camera and its internal circuitry and mechanisms. When using the camera at the beach or seaside, avoid exposing the camera to water or sand. Do not place the camera on a wet surface.

### **■** Condensation

Sudden increases in temperature, such as occur when entering a heated building on a cold day, can cause condensation inside the camera. If this occurs, turn the camera off and wait an hour before turning it on again. If condensation forms on the memory card, remove the card and wait for the condensation to dissipate.

### Cleaning

Use a blower to remove dust from the lens and monitor, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of FUJIFILM lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. Care should be taken to avoid scratching the lens or monitor. The camera body can be cleaned with a soft, dry cloth. Do not use alcohol, thinner, or other volatile chemicals

# Travelling

Keep the camera in your carry-on baggage. Checked baggage may suffer violent shocks that could damage the camera.

# **FUJIFILM**

FUJIFILM Corporation 7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN http://www.fujifilm.com/products/digital\_cameras/index.html