


HANNSpree

K219-10A1 9.6" Liquid Crystal Display TV


Quick Start Guide

This Quick Start Guide is designed to help you set up and start using your LCD TV. Refer to the User's Manual for more detailed installation and safety instructions.

Front View

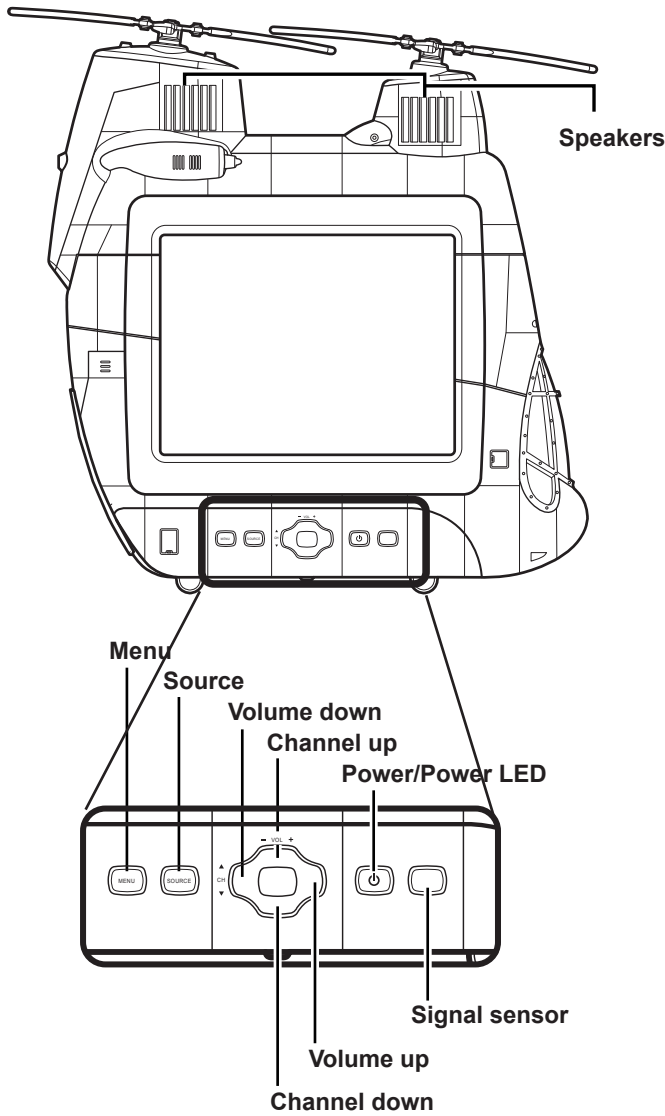


Rear View

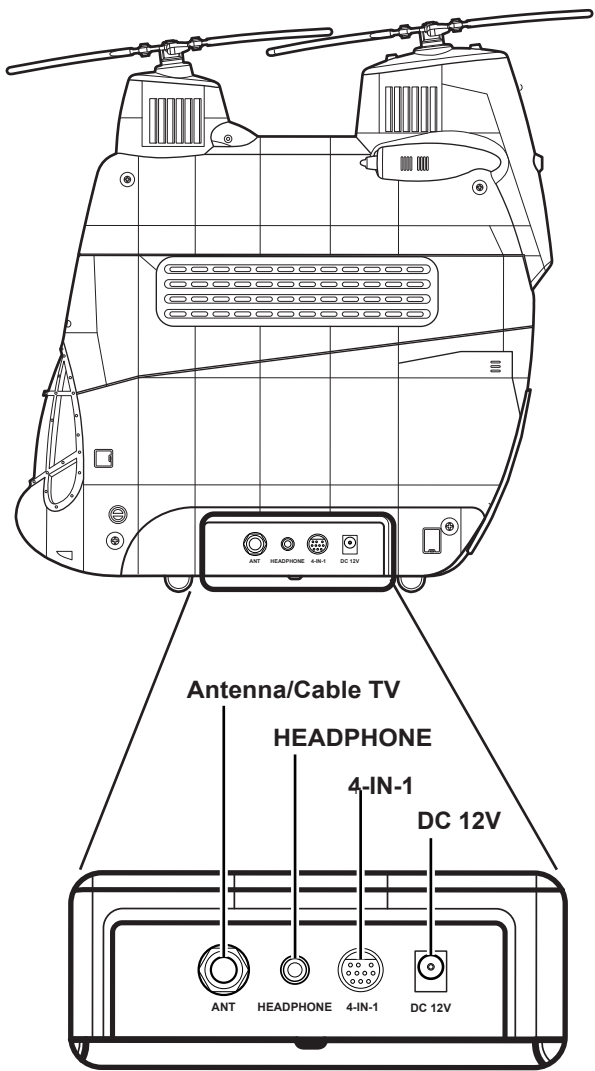


Making Connections

Connecting to Antenna/Cable TV

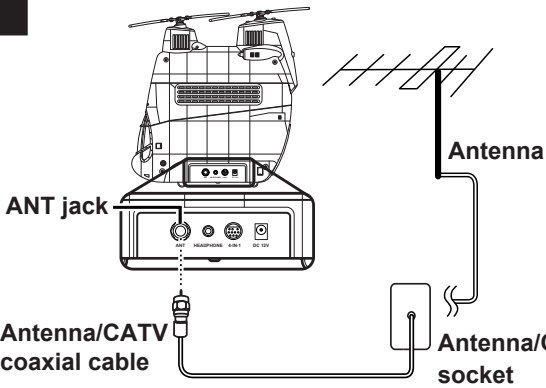

1. Connect one end of the VHF/UHF (Antenna) or CATV cable to ANT Jack (VHF/UHF IN Jack) on the back of the TV.
2. Connect the other end of the VHF/UHF (Antenna) or CATV cable to the Antenna or CATV socket.

Connecting to a VCR, VCD or DVD Player or Game Device

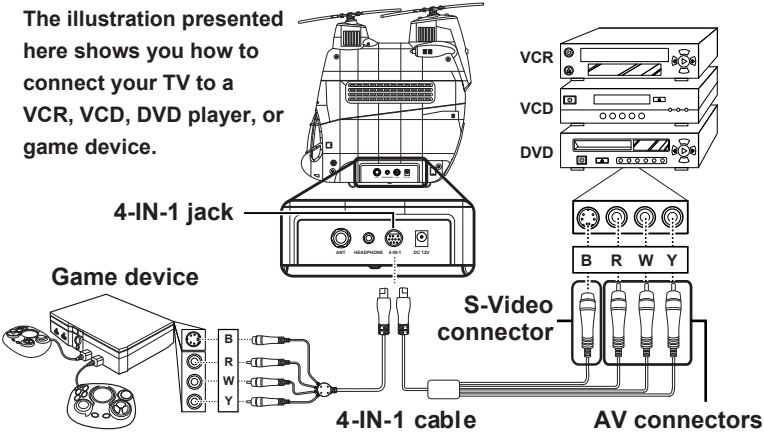


The illustration presented here shows you how to connect your TV to a VCR, VCD, DVD player, or game device.

Refer to the user's manual included with your device for more detailed instructions.

The cables are color-coded (black, red, white, yellow). Connect each color-coded cable to the appropriate connector on your device.

Connecting the Power Adapter

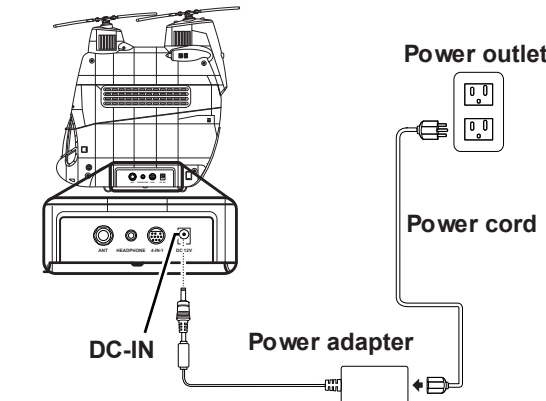


1. Connect the power cord to the power adapter as illustrated.
2. Plug the power adapter connector into the DC-IN input jack on the rear panel of the TV.
3. Insert the three-pronged plug at the other end of the power cord into a power outlet.

Getting Started

Watching Broadcast or Cable TV


1. Press the **POWER** button to turn on your TV.
2. Press the **SOURCE** button to select TV / CATV.
3. Press the **MENU** button to enter the OSD menu.
4. Press the **CH UP** button to select TV Setting.
5. Press the **MENU** button.
6. Press the **CH UP** button to select TV/CATV.
7. Press the **MENU** button.
8. Press the **CH DOWN / CH UP** buttons to select either TV (broadcast television) or CATV (cable TV).
9. Press the **MENU** button to confirm selection.

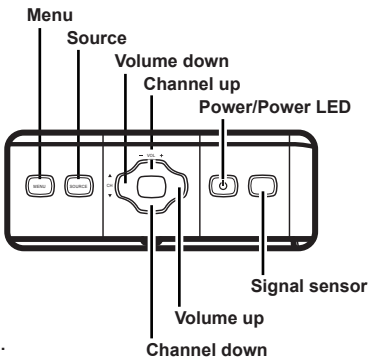

Using Other Devices


Make sure your TV is turned on and a device such as a DVD player is connected.

Press **SOURCE** on the remote control or the control panel to select different source signals. TV/CATV and the channel number, AV, or S-Video appear on the screen.

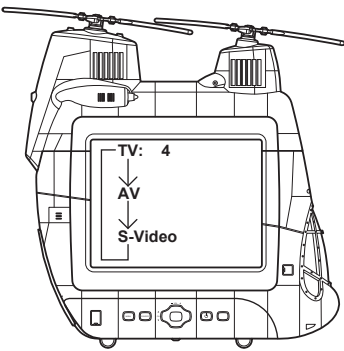

Adjusting OSD Settings

Press the **MENU** button to enter the OSD menus. Use the channel buttons on the control panel to adjust settings.

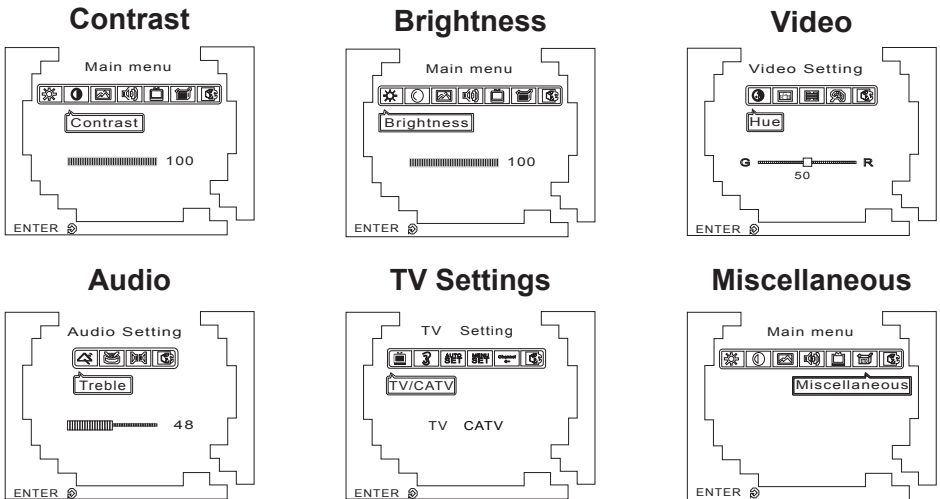


HANNspree 快速啟動指南


K219-10A1 9.6 吋液晶電視

這份《快速啟動指南》的目的，是在協助您快速的架設並使用您的電視。有關安裝及安全注意事項的詳盡資訊，請務必參閱隨附的《使用手冊》。

前視圖

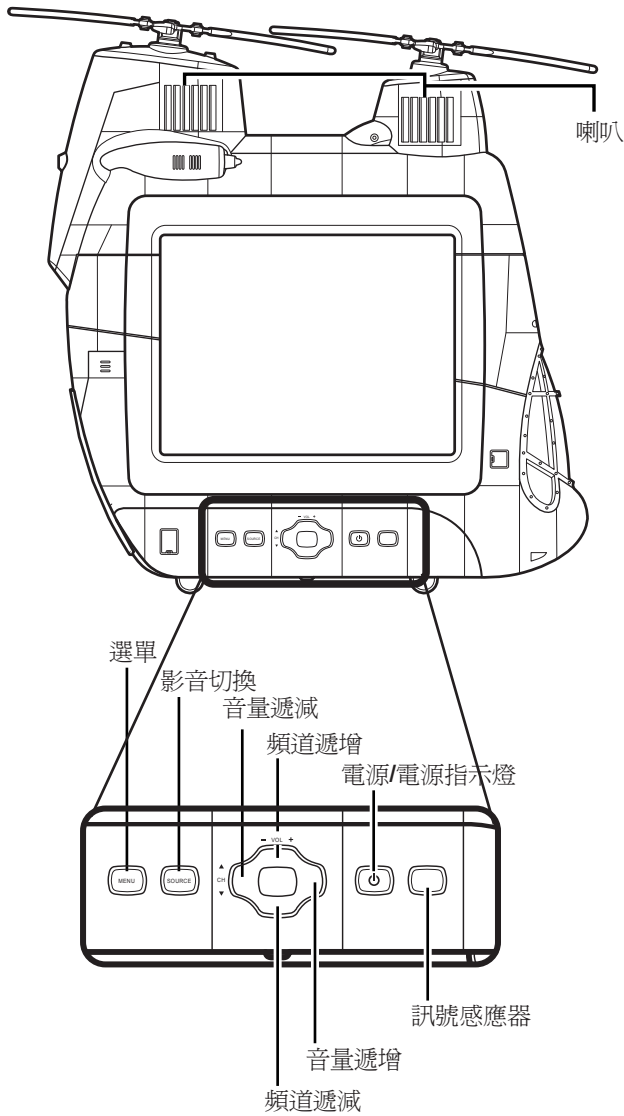


後視圖

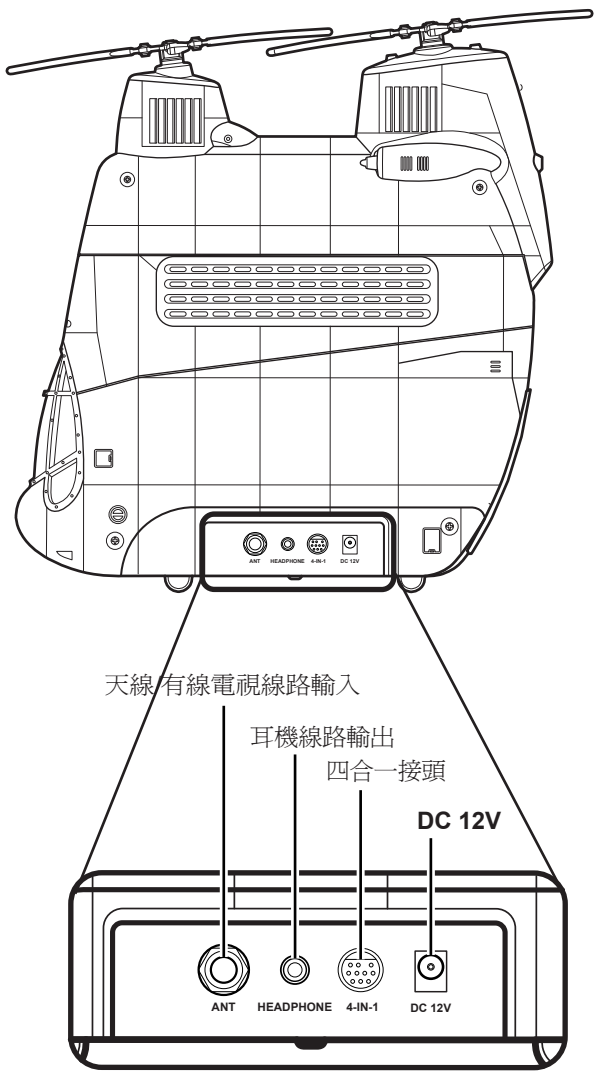

連接各式接線


連接至天線/有線電視

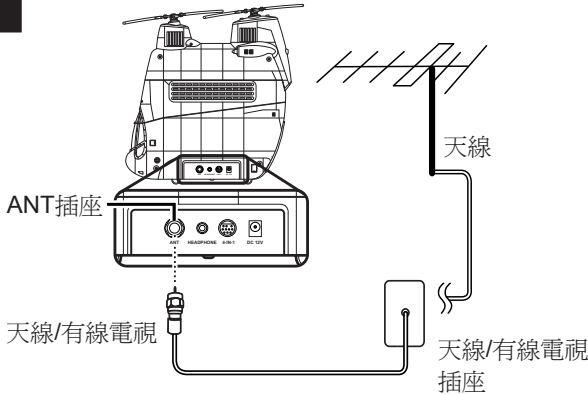

1. 將 VHF/UHF (無線天線) 或有線電視線的一頭插入電視背面的ANT 插座 (VHF/UHF IN 插座)。
2. 將 VHF/UHF (無線天線) 或有線電視線的另一頭插入無線天線或有線電視插座。


連接至VCR、VCD、DVD播放器或電視遊樂器

下圖在示範您的電視與 VCR、VCD、DVD 播放機及電視遊樂器的連接方式。

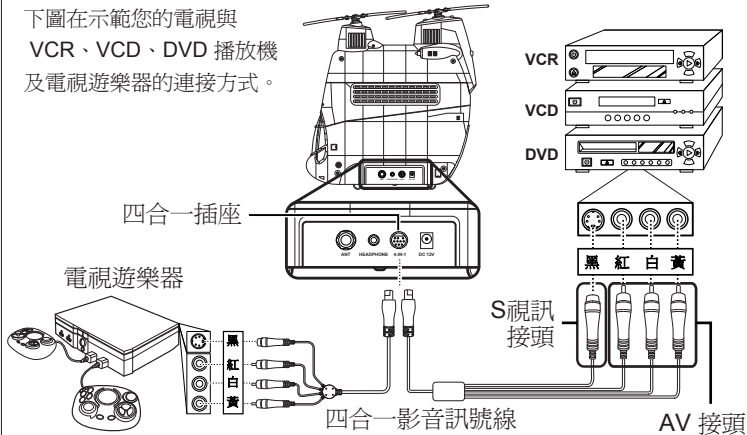

相關詳盡說明，請參閱各設備隨附的使用手冊。
訊號線已利用顏色分別標示(黑色、紅色、白色、黃色)。依照各個顏色的標示，將訊號線連接至您設備上正確的接頭上。

連接電源轉換器

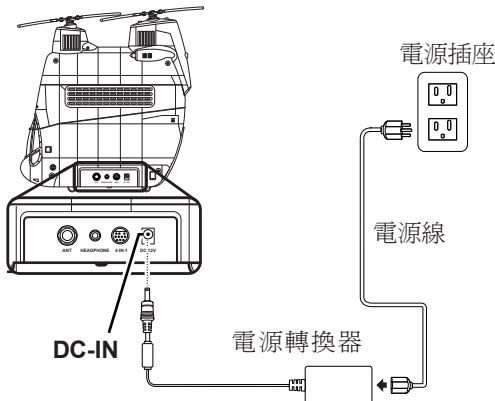


1. 依左圖所示，將電源線連接至電源轉換器。
2. 將電源轉換器接頭插入本產品後面板的 DC-IN 輸入插座。
3. 將電源線另一端的三蕊插頭插入電源插座內。

開始操作

觀賞電視或有線電視


1. 按下**電源**按鈕，開啓您的電視。
2. 按 **SOURCE** 按鈕，選擇「電視/有線電視」。
3. 按遙控器上的 **MENU** 按鈕，進入選單。
4. 按**頻道遞增**按鈕選擇電視設定。
5. 按 **MENU** 按鈕。
6. 按**頻道遞增**按鈕選擇「電視/有線電視」。
7. 按 **MENU** 按鈕。
8. 按**頻道選擇**按鈕選擇「電視」或「有線電視」。
9. 按 **MENU** 按鈕確認選擇。

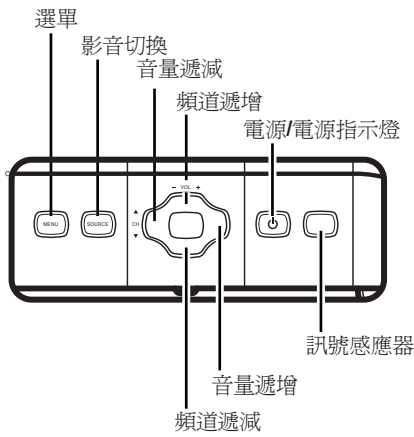

使用其他裝置

確認您的電視已開啓，而且已連接外部裝置，如 DVD 播放器。

按下遙控器或控制面板上的 **SOURCE** 按鈕，選擇不同的來源訊號。電視及頻道號碼、AV 或 S訊訊會顯示在螢幕上。

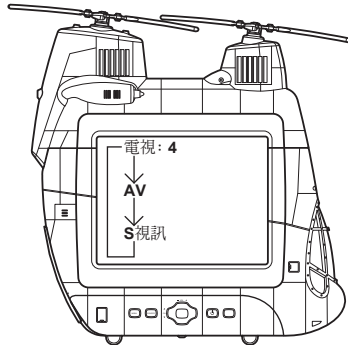

調整選單設定值

按 **MENU** 按鈕，進入選單。利用控制面板上的**頻道選擇**按鈕來調整設定值。

