

Start Here!

For details, see the camera dock 6000 chapter of your camera user's guide.

1

Camera dock 6000

What's in the box?



- Dock 6000
- AC adapter, 5 V
- Kodak EasyShare Ni-MH rechargeable battery pack*

* For selected EasyShare cameras only. See Step 2.

What else do I need?



- Kodak EasyShare CX/DX 6000 or LS600 series digital camera

Included with camera:


- USB cable
- Kodak EasyShare software

2

 
Install the Rechargeable Battery in Camera

If your camera came with:

Non-rechargeable starter batteries,




OR



Lithium 3 V, CRV3


2, AA 1.5 V

use the Ni-MH rechargeable battery pack that came with the camera dock 6000.

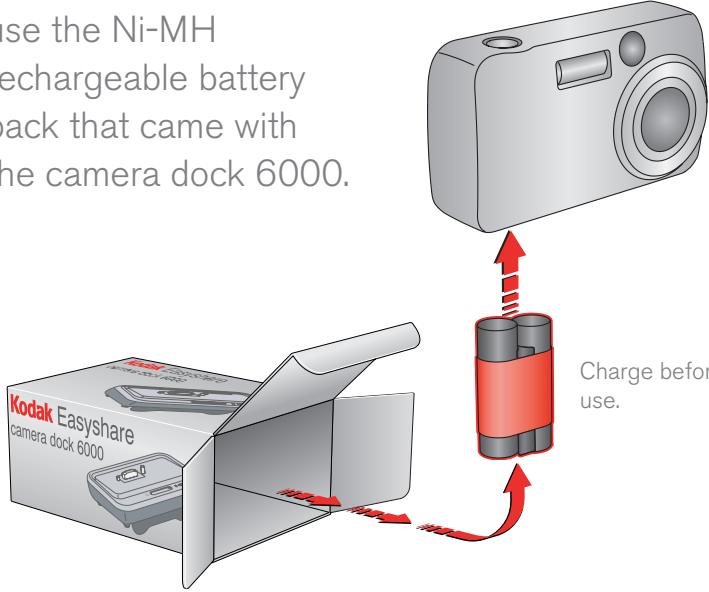


Charge before use.

 Rechargeable Li-Ion battery,




OR

 

1050 mAh

1700 mAh

use the Li-Ion battery that came with your camera.

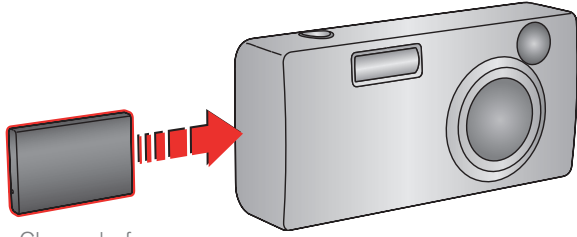


Charge before use.

Do **not** try to use the Ni-MH rechargeable battery pack that came with the camera dock 6000.

3

Connect the Camera Dock

Make sure your EasyShare software is installed before connecting.

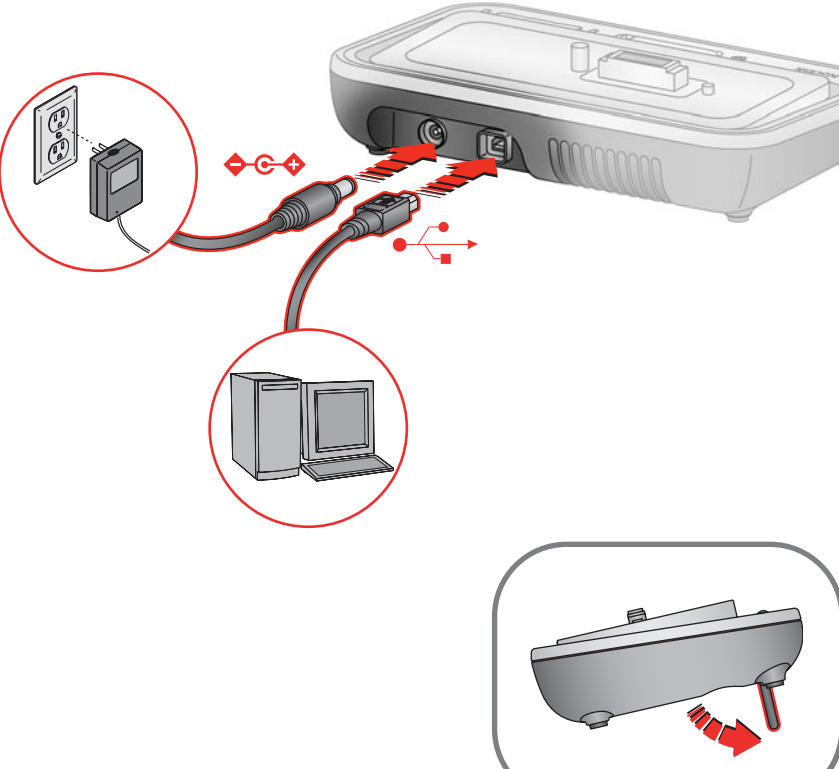


Steady green = camera properly seated

4

Charge Battery

- Turn off camera.
- Place in dock.*

* A custom insert provides the best fit. Consult your camera manual for details.

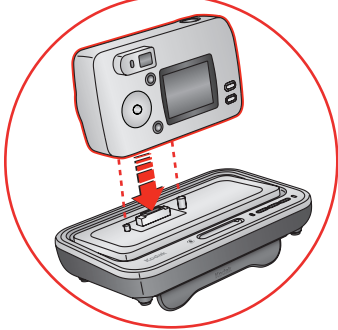

Battery Status

Low

Partially charged


Fully charged

Full charging takes 2.5–3 hours.


5

Transfer Pictures to Computer

Press the Transfer button.

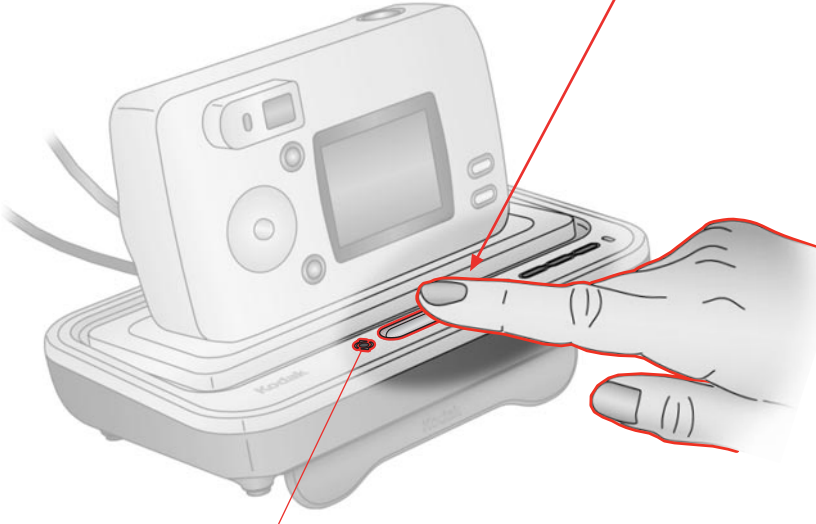

Blinking green = Pictures transferring



Eastman Kodak Company

Rochester, NY 14650 U.S.A.

© Eastman Kodak Company, 2003.

TM: Kodak, EasyShare

Printed in China

6B8335

Need More Help?

www.kodak.com/go/howto

www.kodak.com/go/support

for interactive tutorials

Print, Email, Edit, Organize

Click the Help button in the EasyShare software.

