 


Installation Guide

安裝指南

安装指南

KONICA MINOLTA magicolor® 7440

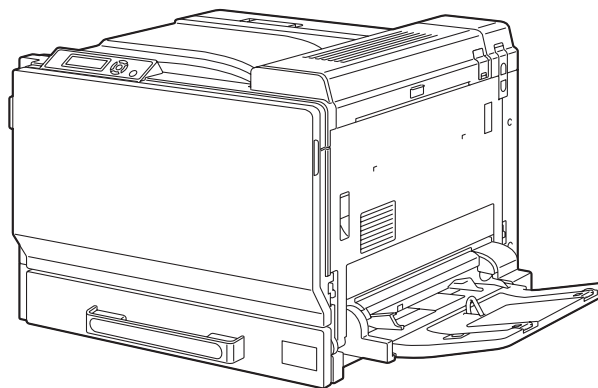

1800809-058A
4039-9554-00



KONICA MINOLTA

The essentials of imaging

 
printer.konicaminolta.com

 
 


Unless otherwise requested, keep all packing materials in case you ever need to move or ship the printer.

除非另有要求，否則請保留所有包裝材料，以備移動或裝運印表機之需。

除非特別要求，否則請妥善保管好所有的包裝材料以備將來搬用或裝運打印機時使用。






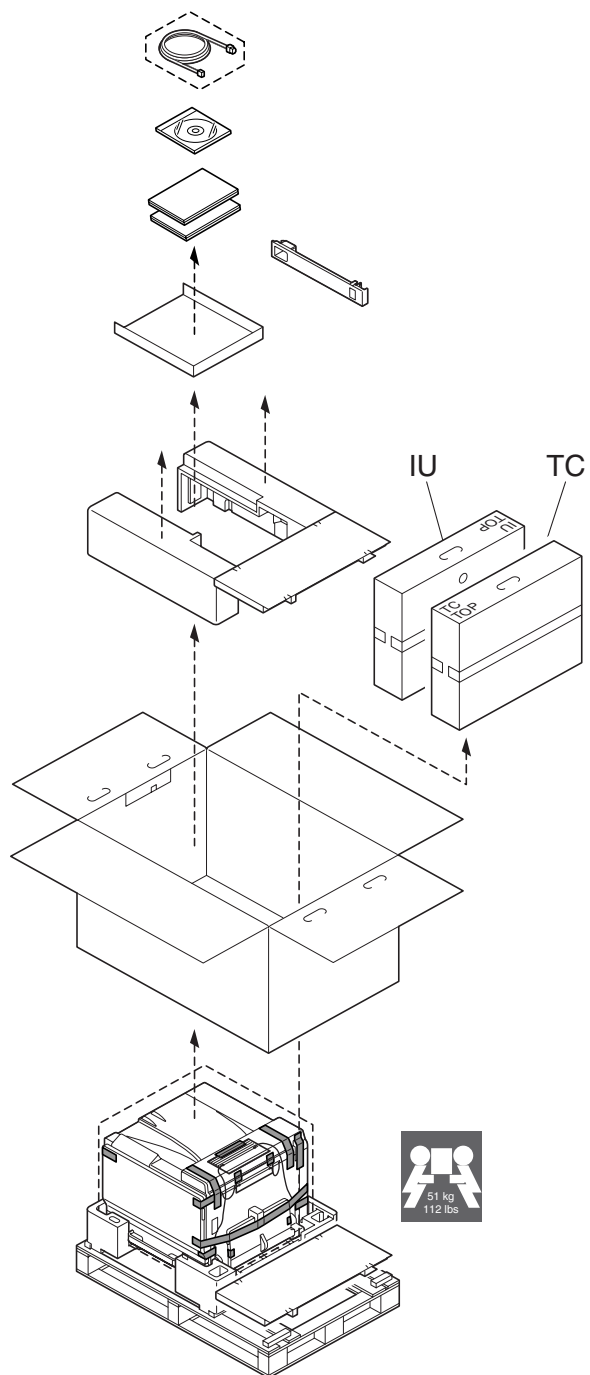


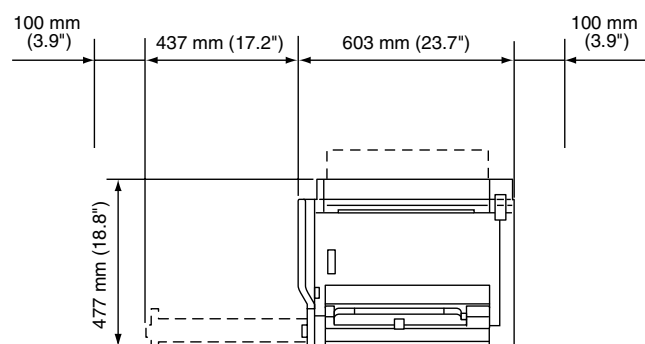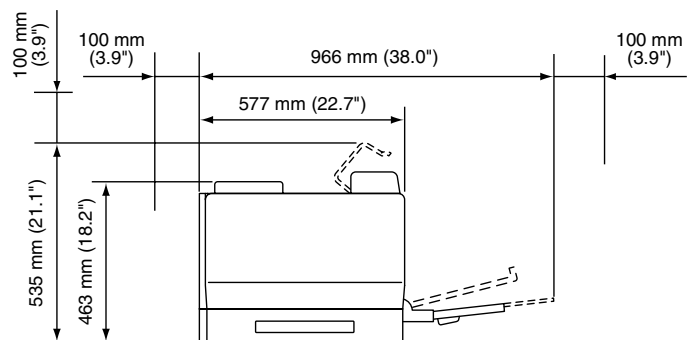

Before setting up your printer, examine the safety information in the Safety Information Guide.

安裝印表機之前，請先閱讀 安全資訊指南 中的安全資訊。

      
安裝打印机之前，请先阅读 安全信息指南 中的安全信息。

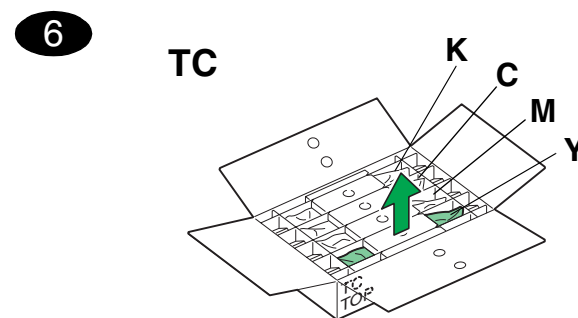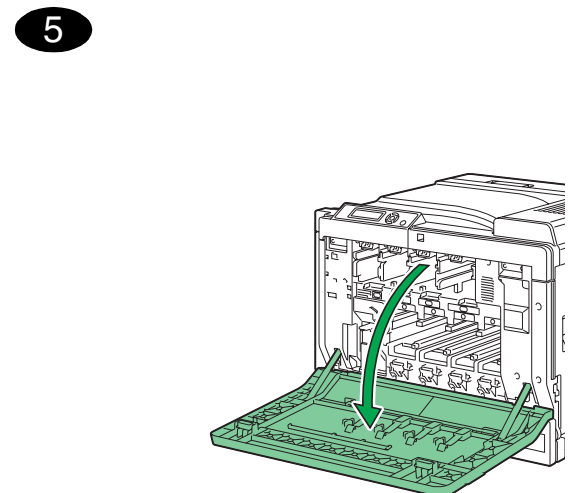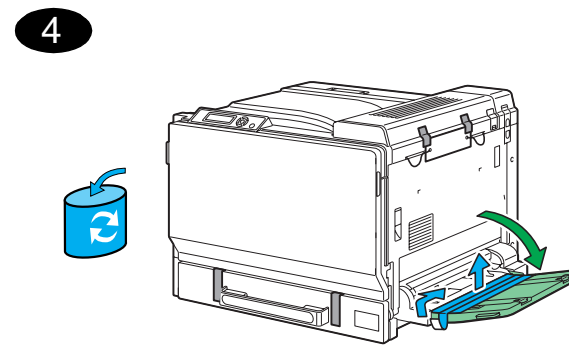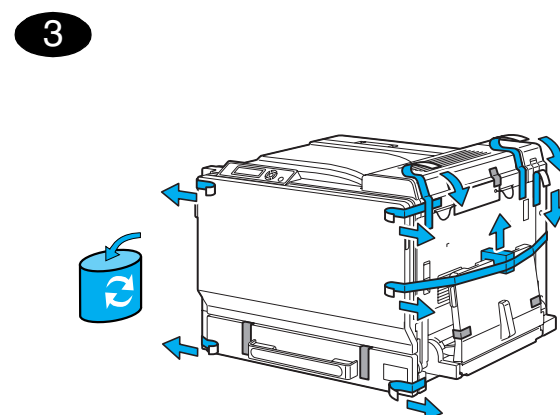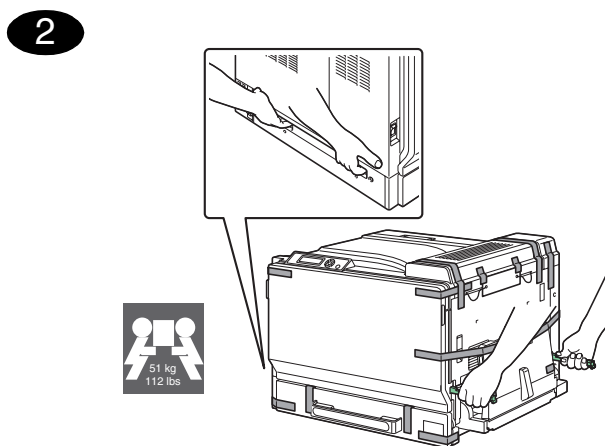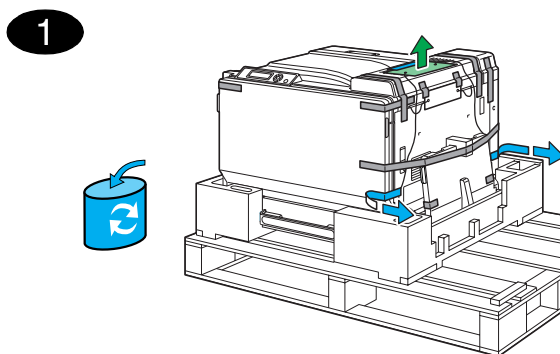


7a

YELLOW

 黃色
黄色

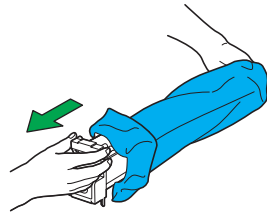


7b

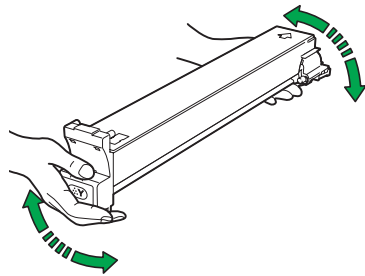 


5-10 x

 7c

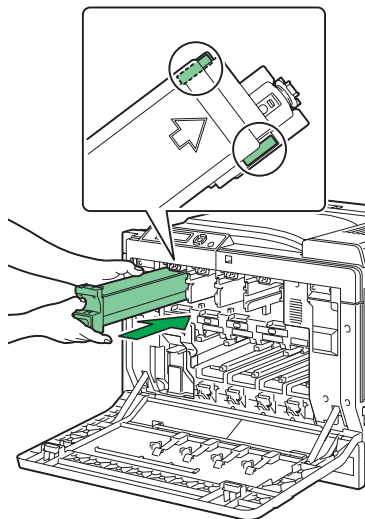


7d

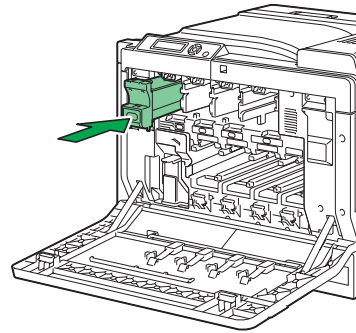 


8a

MAGENTA

 品紅色
品红色

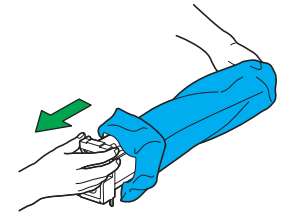


8b

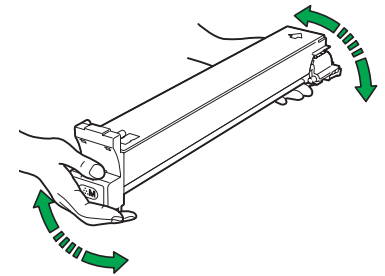 


5-10 x

 8c

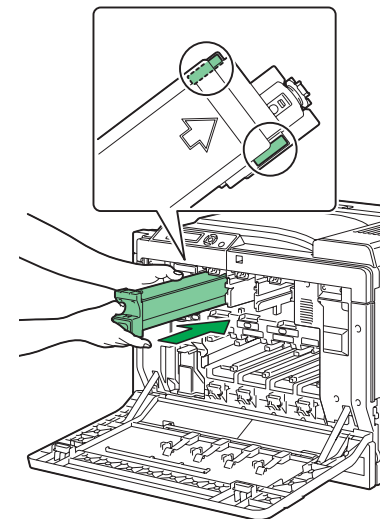


8d

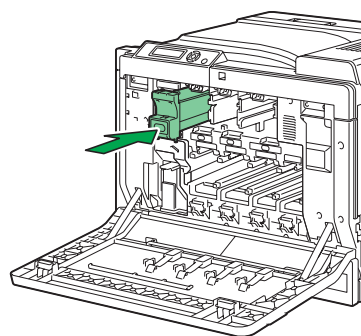 


9a

 
CYAN
青色
青色

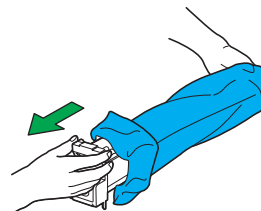


9b

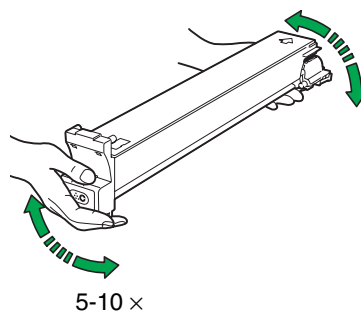 

9c

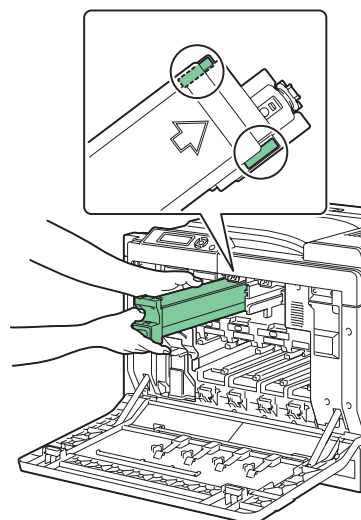 


9d

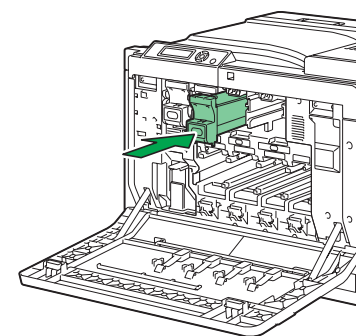 


10a

 
BLACK
黑色
黑色

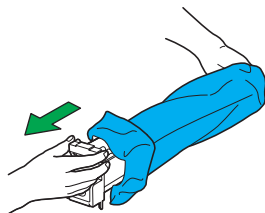


10b

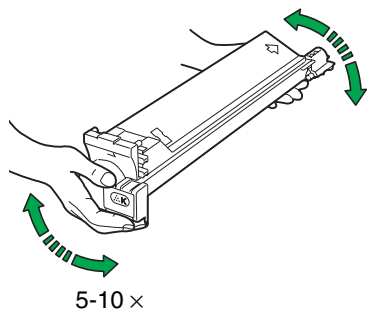 


10c

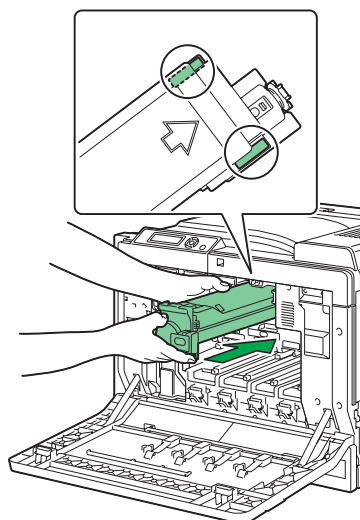 

10d

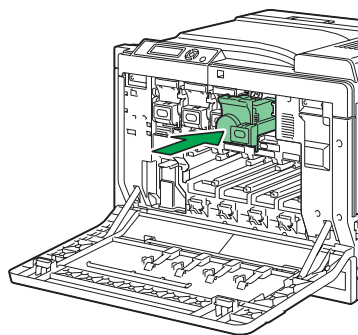 


11

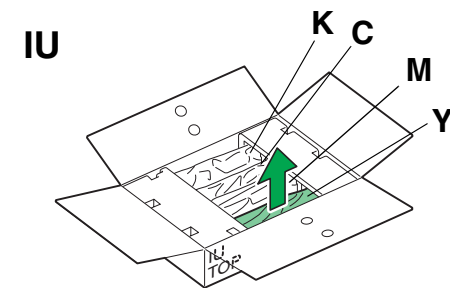 


12a

 
YELLOW
黄色
黄色

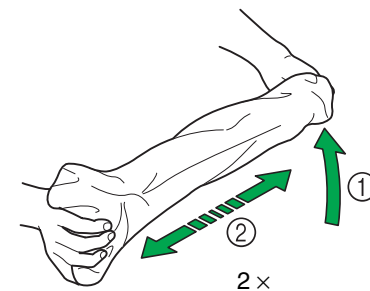


12b

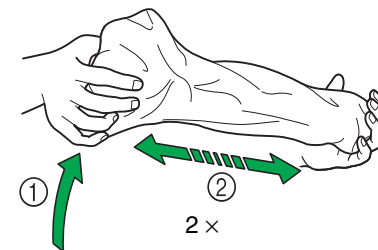 


12c

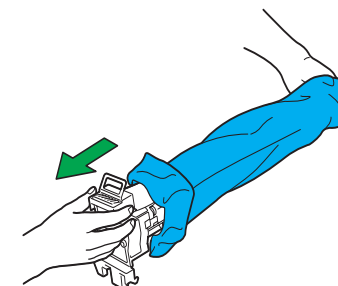 


12d

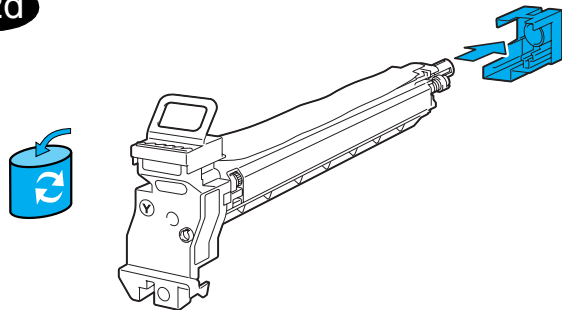 


12f

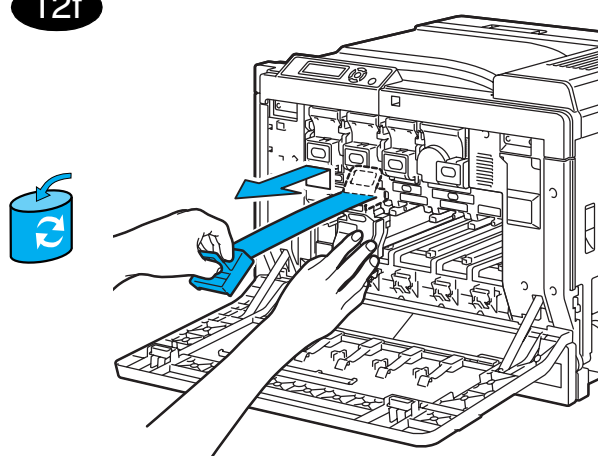 

12e

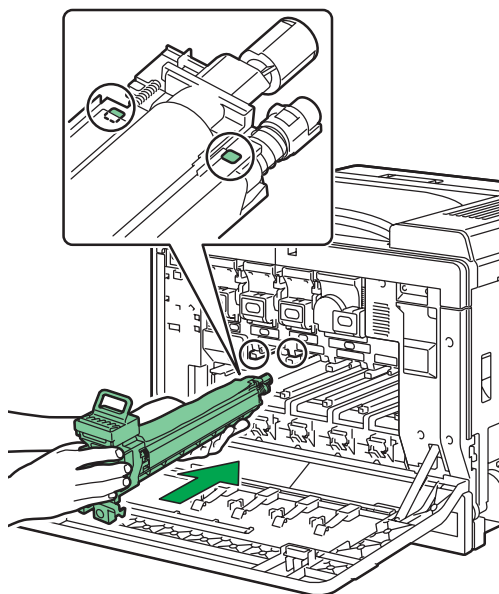 


12g

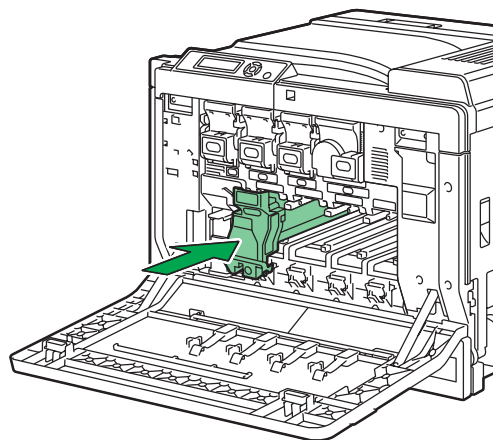 


13a

 
MAGENTA
品紅色
品紅色

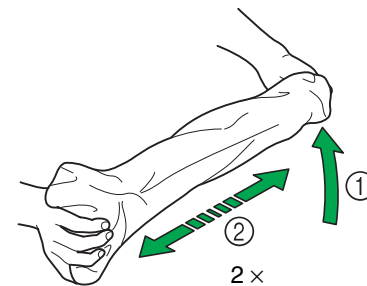


13b

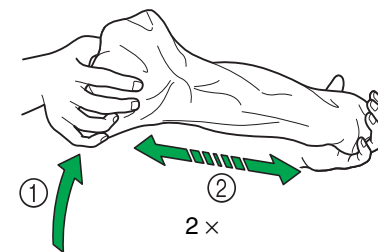 


13c

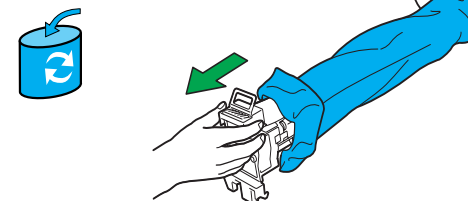 


13d

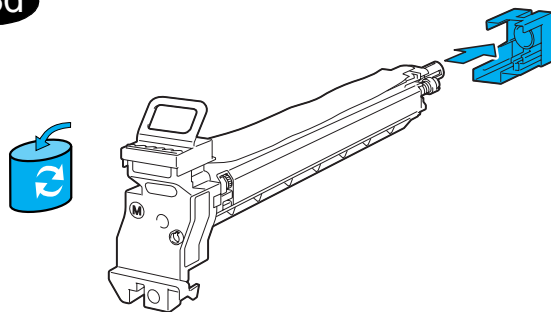 


13f

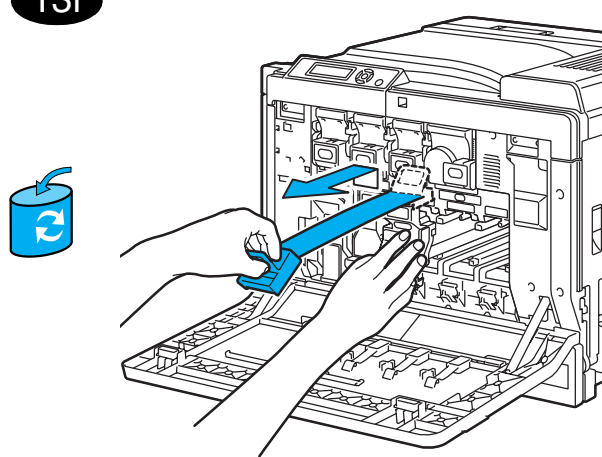 

13e

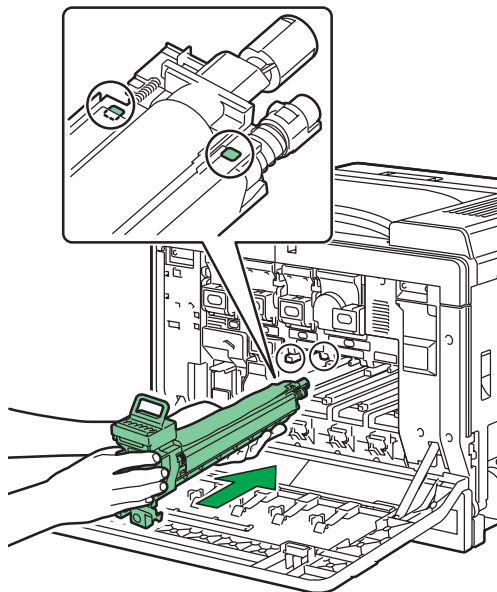 


13g

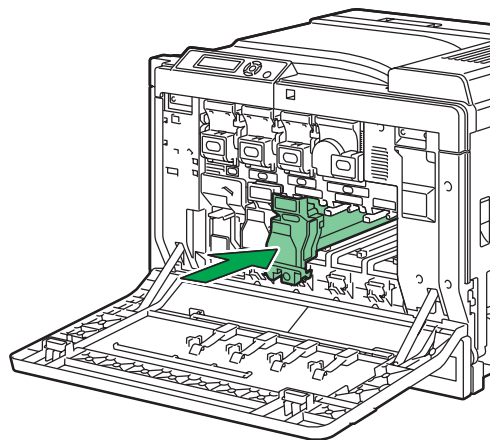 


14a

 
CYAN
青色
青色

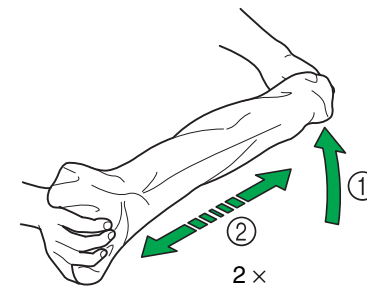


14b

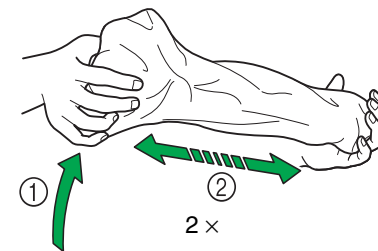 


14c

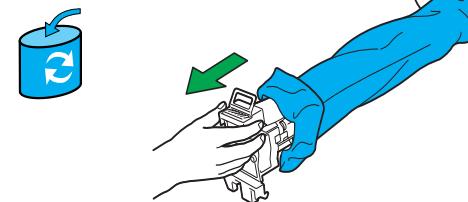 


14d

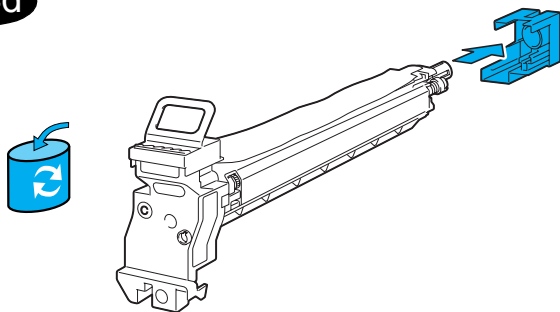 


14f

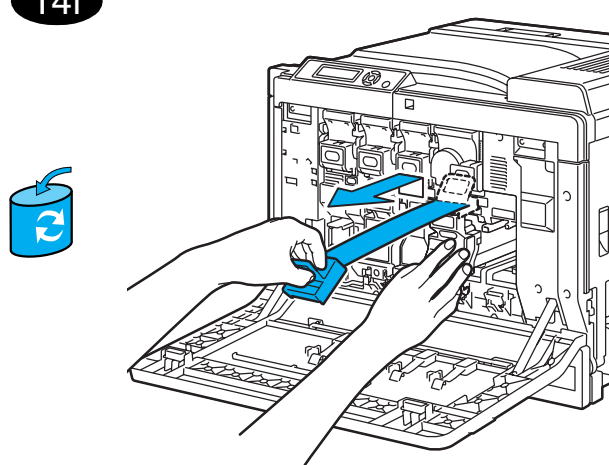 

14e

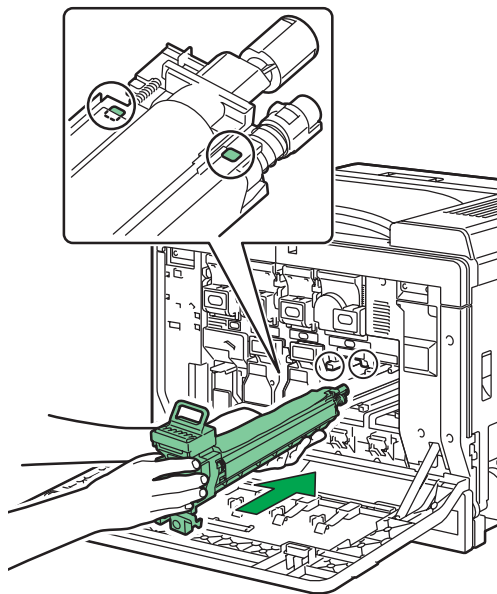 


14g

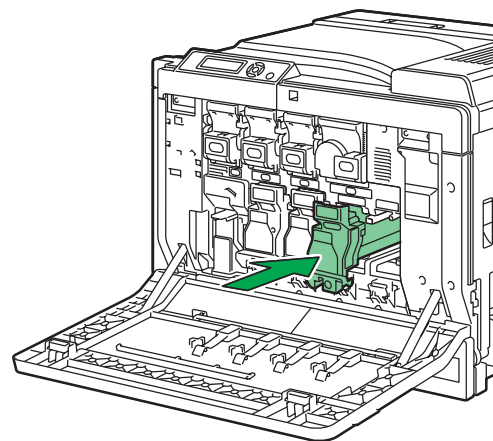 


15a

 
BLACK
黑色
黑色

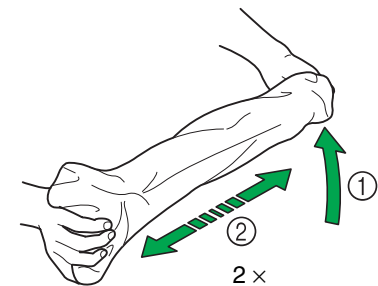


15b

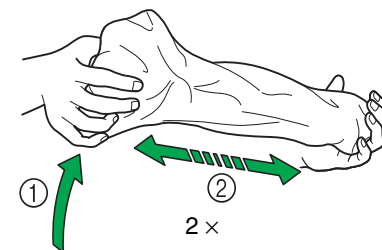 


15c

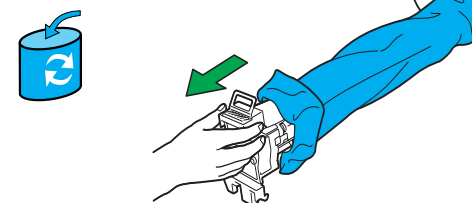 


15d

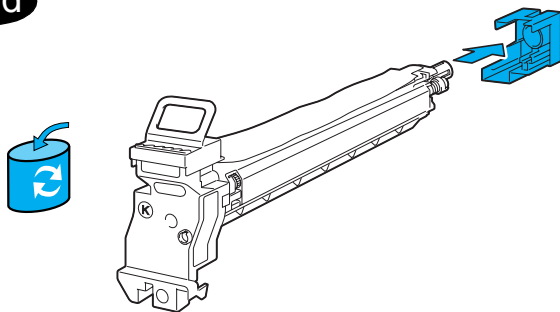 


15f

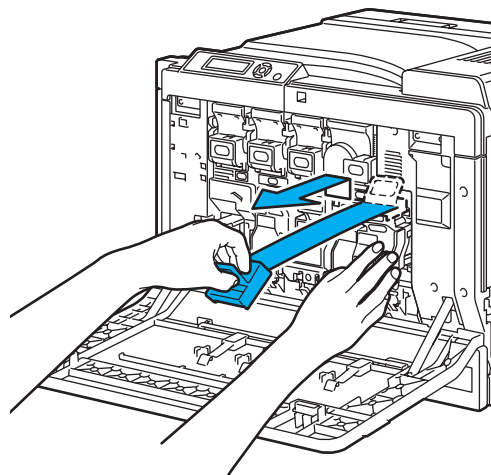 


15e

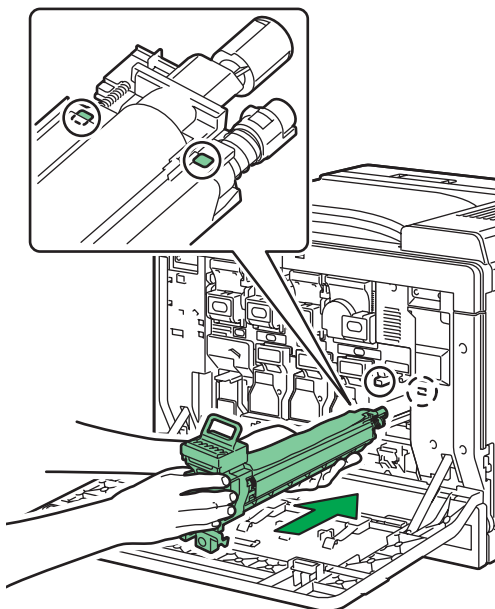 


15g

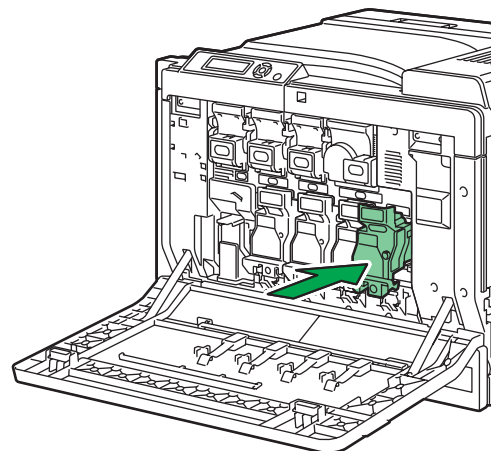 


16

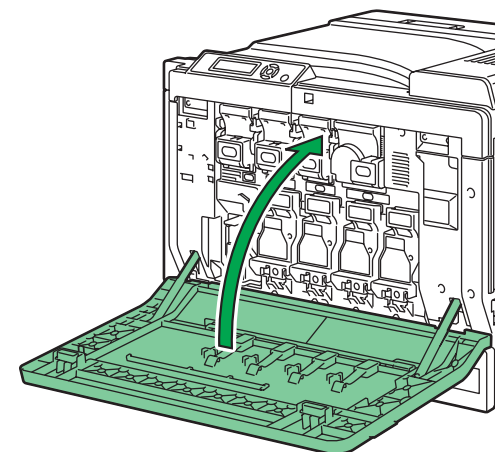 


17

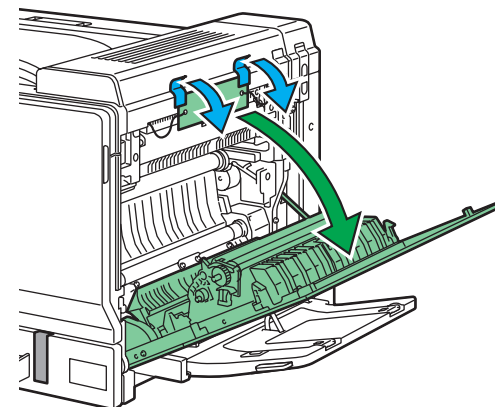 


18

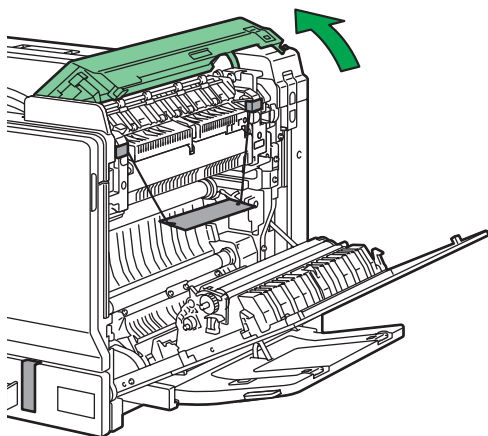 


19

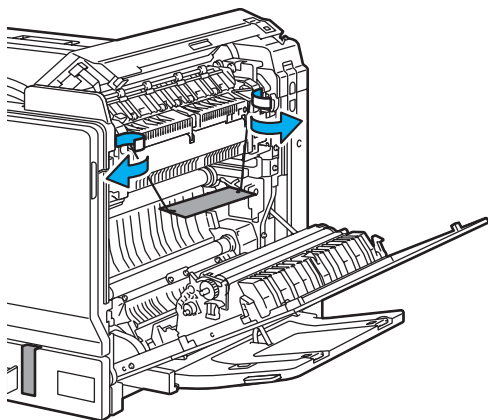 


20

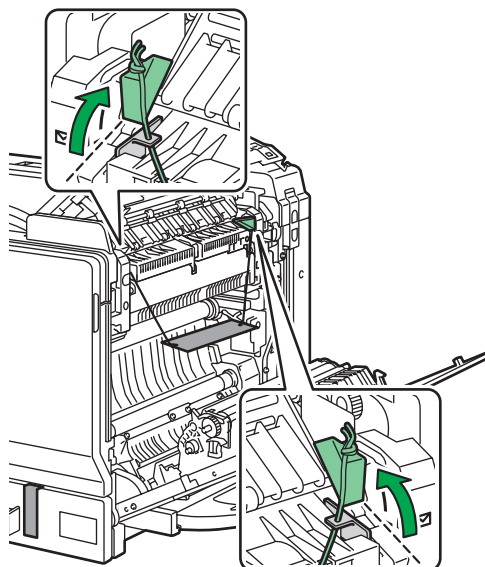 


21

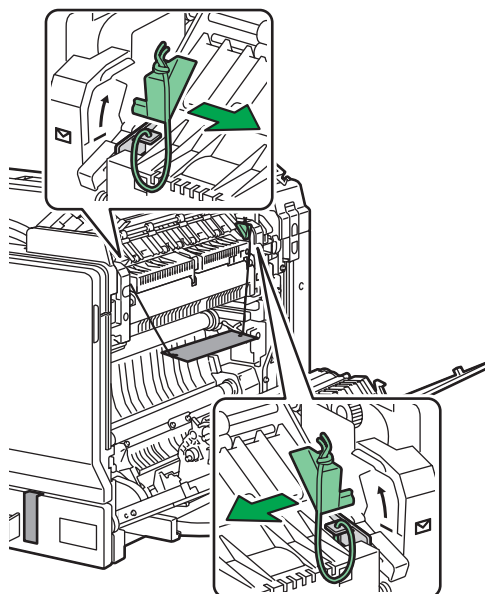 


22

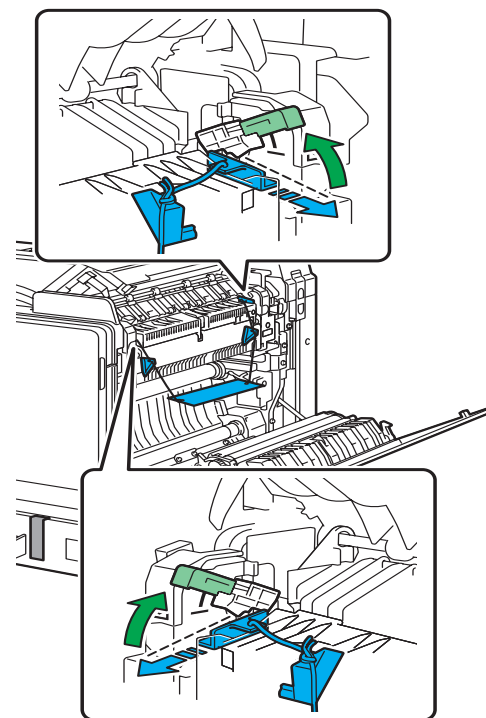 


23

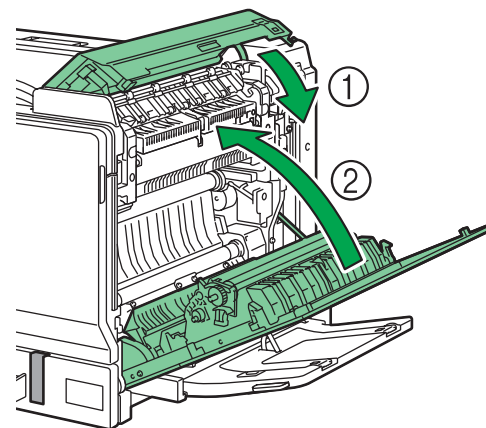 


24

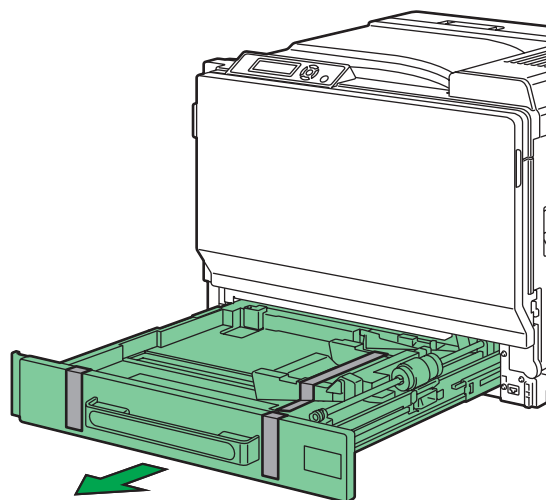 


25

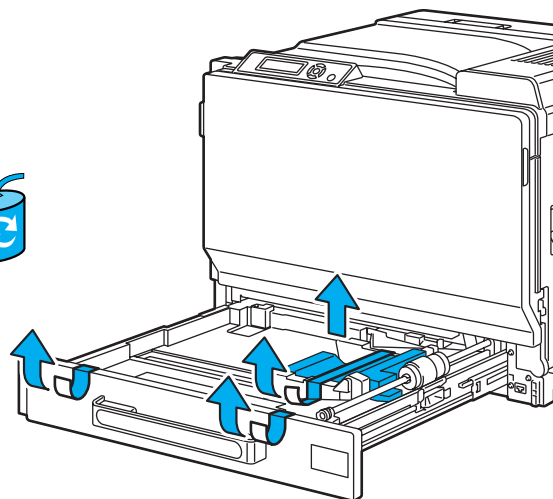 

26

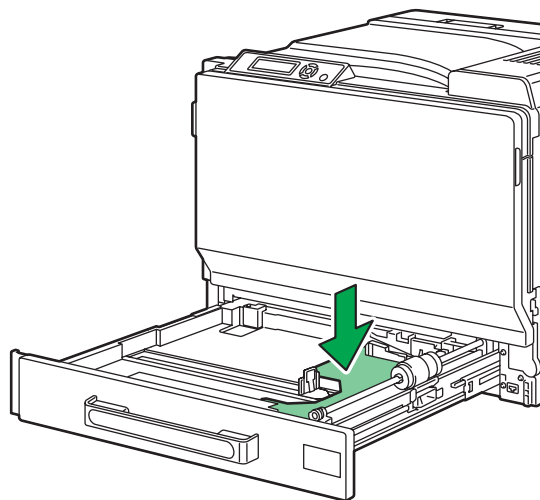 


27

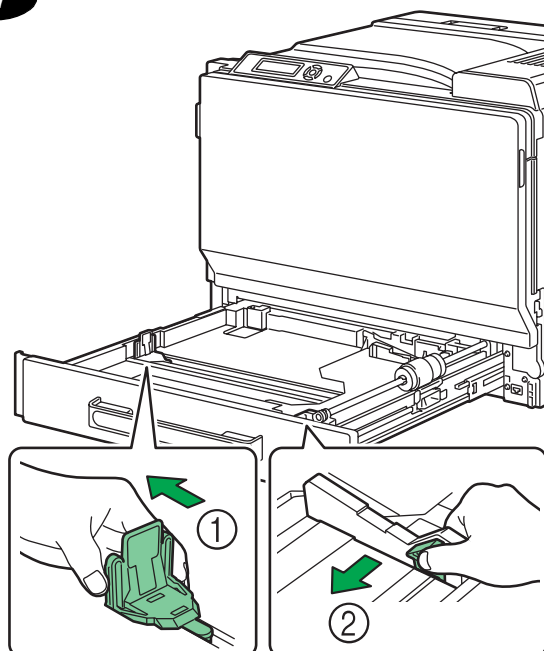 


28

 
Max. 500
sheets
64-90 g/m²
(17-24 lb)

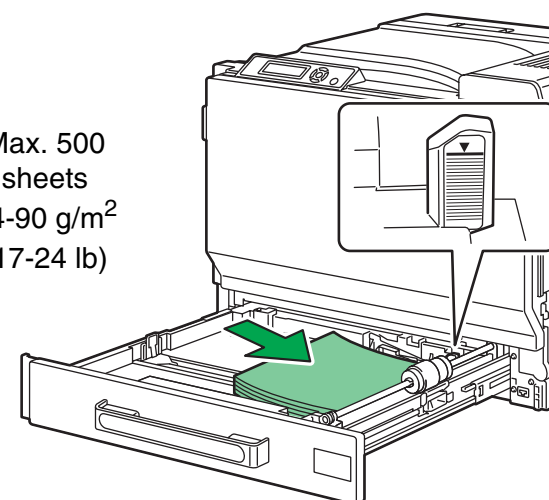


29

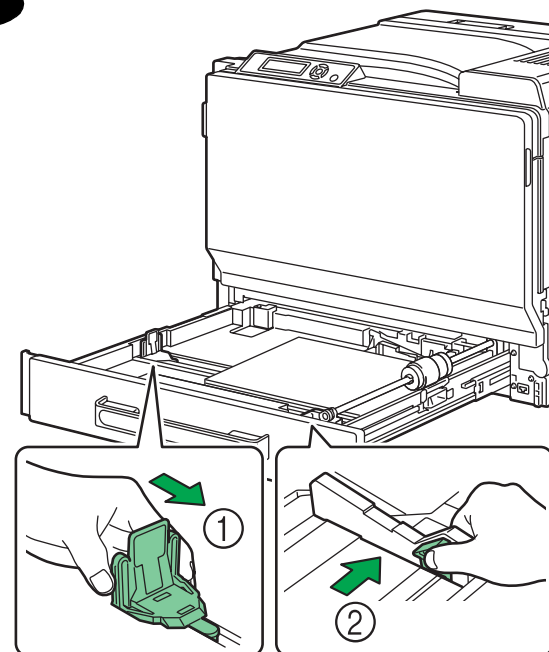 


30

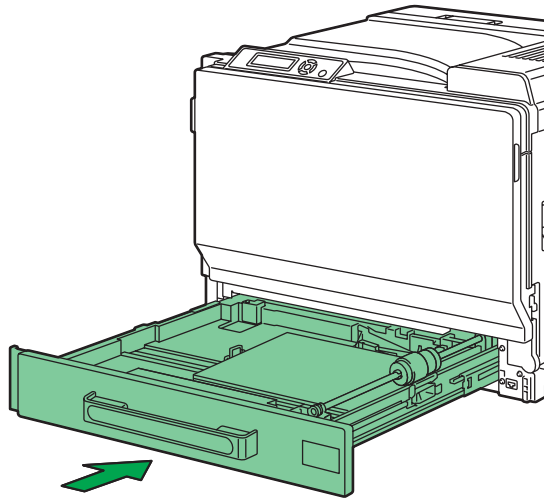 




31

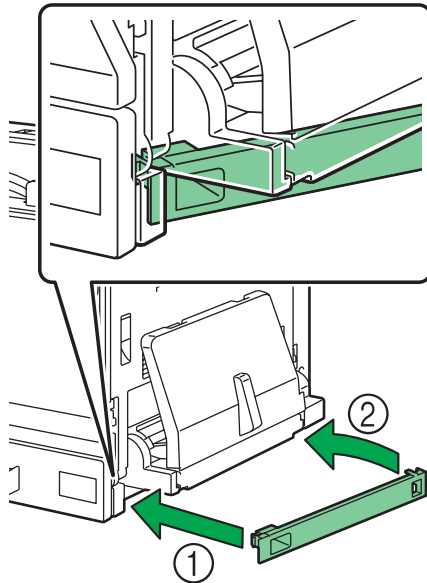 

32

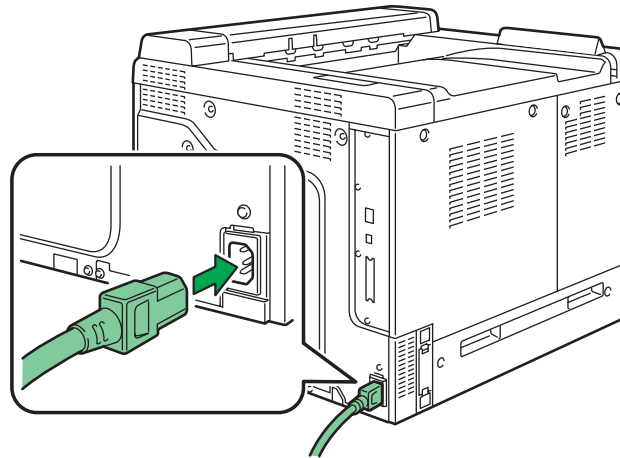 

33

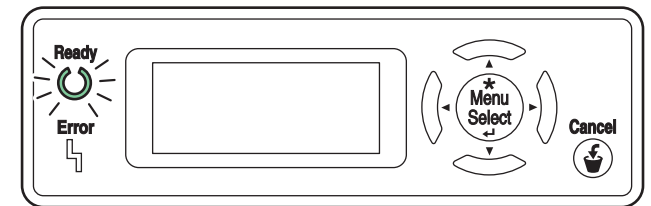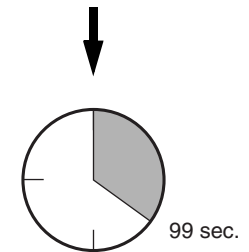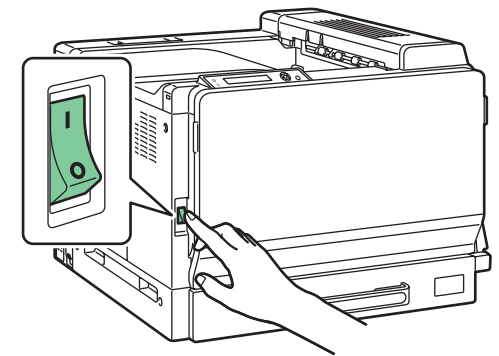   

Install the printer driver.**CAUTION**

 
Do not connect the interface cables to your magicolor 7440 until instructed to do so.

Note:

The interface cables are not included in shipment.

The instructions for the Windows operating system are described below.

1. If you are connecting the printer to your network, you should now plug the 10Base-T/100Base-TX/1000Base-T cable into the printer's Ethernet port, as shown below.

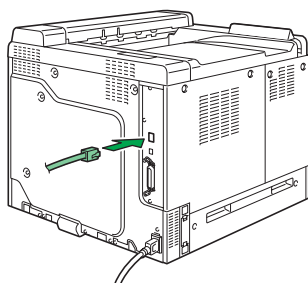

2. Insert the magicolor 7440 Software Utilities CD-ROM in the CD-ROM/DVD drive of your PC.
3. The CD-ROM Installer automatically starts.

 
CAUTION

If the Installer doesn't automatically start, use Windows Explorer to browse the CD-ROM and double-click **setup.exe**.

English

4. Follow the instructions on the screen.

When instructed to do so, connect your magicolor 7440 to your computer as shown below.

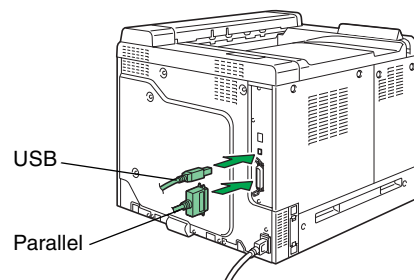

5. Follow the instructions on the screen to install the following utilities, as required.

- Crown Print Monitor
- Status Monitor
- PageScope Net Care
- PageScope Network Setup
- PageScope Plug and Print
- PageScope NDPS Gateway
- PageScope Peer to Peer Printing Tool

6. When the driver and utilities are installed, remove the CD-ROM and store it in a safe place.

Configure the printer driver.

(Windows XP/Server 2003):

From the Windows menu bar, select **start - Printers and Faxes**. Right-click the **KONICA MINOLTA mc7440 PCL6** printer icon. Select **Printing Preferences - Basic** tab.

(Windows 2000):

From the Windows menu bar, select **Start - Settings - Printers**. Right-click the **KONICA MINOLTA mc7440 PCL6** printer icon. Select **Printing Preferences - Basic** tab.

(Windows Me/98SE):

From the Windows menu bar, select **Start - Settings - Printers**. Right-click the **KONICA MINOLTA mc7440 PCL6** printer icon. Select **Properties - Basic** tab.

(Windows NT4.0):

From the Windows menu bar, select **Start - Settings - Printers**. Right-click the **KONICA MINOLTA mc7440 PCL6** printer icon. Select **Document Defaults - Basic** tab.

1. Select the printer defaults you use, like the media size, orientation, etc.
2. Click **Apply**.
3. Click **OK** and close all subsequent windows.

Notes:

Examine the magicolor 7440 **User's Guide** and **Reference Guide** for detailed information about installing the options, working with the driver, Status Monitor and the other utilities; using media, replacing consumables; maintaining the printer; troubleshooting; and printer specifications. The **Safety Information Guide** provides safety precautions for using this printer.

Notes:

The **User's Guide** and **Reference Guide** are in PDF format on the magicolor 7440 **Documentation CD-ROM**.

(4039-9565-00A)

This manual was printed with soy ink.

