
USB Flash Disk Utility

User's Manual

Contents

1. Introduction.....	2
1.1 System Requirements	2
1.2 Multilingual Support	2
1.3 Disk Partitioning.....	2
1.4 Secret & Compress:.....	2
1.5 Note	3
2. Icon Descriptions of the UFD Utility.....	4
2.1 Partition Manager	5
2.2 Boot Manager	5
2.3 Security Manager	5
2.4 Autorun Manager	5
2.5 Flash Mail Manager.....	5
2.6 PC Lock Manager.....	5
2.7 Bookmark Manager.....	5
2.8 Security Folder	5
2.9 Remark	5
3. UFD Utility Operation manual	6
3.1 Introduction of Partition Manager	6
3.2 Instructions of Boot Manager	8
3.2.1 Configure Boot Disk.....	8
3.2.2 Making a Boot Disk (for Windows 98)	9
3.2.3 Making a Boot Disk (for Windows ME / 2000 / XP / Vista)	11
3.3 Instructions of Security Manager:	13
3.3.1 Login to Security Area.....	13
3.3.2 Logout from Security Area	14
3.4 Instructions of Autorun Manager.....	15
3.4.1 Start from Source File Preparation	15
3.4.2 Start from Existing Source File	19
3.4.3 Restore To Default Setting.....	22
3.5 Instructions of Flash Mail Manager.....	26
3.5.1 First Time Set Up.....	26
3.5.2 Flash Mail Manager Operation Flow	28
3.6 Instructions of PC Lock Manager.....	30
3.7 Instructions of Bookmark Manager	32
3.7.1 Import My Favorites.....	32
3.7.2 Select PC Bookmark or UFD Bookmark.....	32
3.7.3 How to use PC Bookmark or UFD Bookmark	33
3.8 Introduction of Security Folder	34
3.8.1 Secret area data access.....	35
3.8.2 Change Secret area password	36

1. Introduction

1.1 System Requirements

- Windows 98 / ME / 2000 / XP / Vista
- USB 2.0 Host 、USB HUB (Optional)

1.2 Multilingual Support

- Simplified Chinese 、Traditional Chinese 、Portuguese 、Japanese and English

1.3 Disk Partitioning

 
UFD Utility can be used to partition UFD into 2 kinds of partitioning types. Please read instructions below before partitioning.

- Public Area

Default setting is no security restrictions. User can use entire memory area as public area.

- Security Area

All data in Security Area is protected by password.

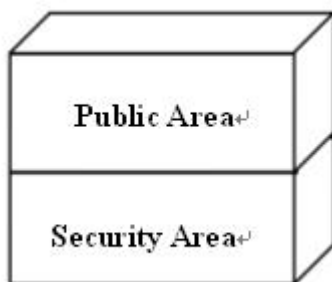


- Public Area + Security Area

UFD can be partitioned into 2 areas, Public area and Security area. All data stored in Security area is protected by password. However, the Public area has no restrictions in access.

1.4 Secret & Compress:

 UFD Utility Secret Zip tool is save secret Zip file with special extension.

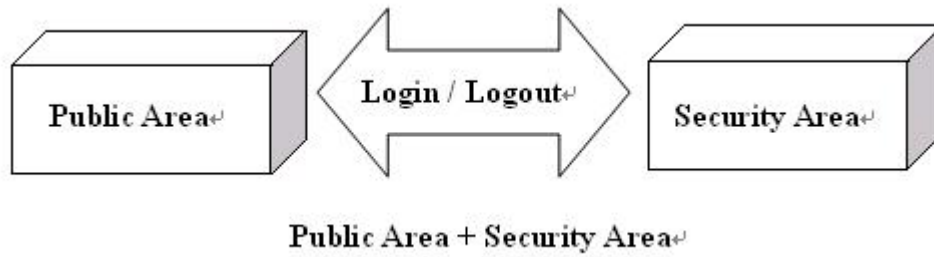


1.5 Note

- UFD, used in the article, stands for USB FLASH DISK
- Please be aware that some utility functions will format the UFD after executing the UFDUtility.exe. Please backup all data in the UFD before executing the program.

2. Icon Descriptions of the UFD Utility

 The descriptions for each icon after plug in UFD and execute  was list below.

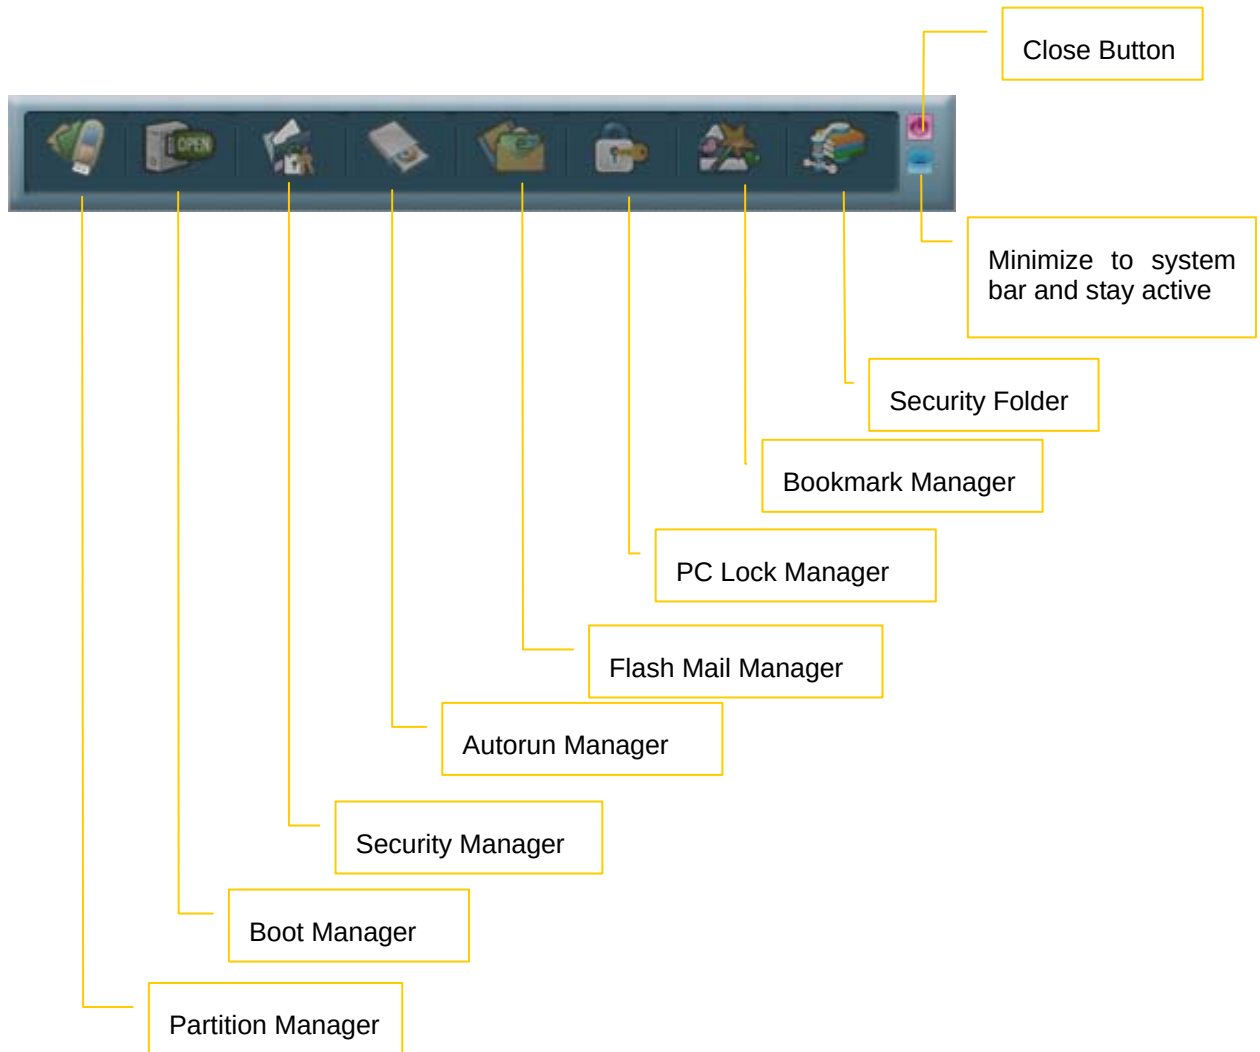

2.1 Partition Manager

The icon is able to use to partition UFD into “public area” only or “public area + security area”. It supports to modify disk label and password for security area.

2.2 Boot Manager

The icon is able to make UFD as a boot disk as USB-ZIP or USB-HDD.

2.3 Security Manager

The icon is able to Login security area after correct password key in and logout after data access for protection.

2.4 Autorun Manager

Create virtual CDROM partition with auto-run feature embedded on top of “Partition Manager” made 1 or 2 partition areas. This tool also supports ISO image file making and one single “Removable Disk” default setting call back function.

2.5 Flash Mail Manager

The icon is able to copy mail, address book and accounts in the Outlook Express to the UFD. It can use to read mail at any Windows Outlook Express platform.

2.6 PC Lock Manager

Lock PC to prevent un-wanted operation during setting time after un-plug UFD. User can define PC lock time and text/picture display they prefer during PC lock time.

2.7 Bookmark Manager

Copy my favorites in the Internet Explorer to the UFD. It can be used to visit favorite website on any Windows Internet Explorer platform.

2.8 Security Folder

Put the file you want to secret or compress to the vfprintf folder under public area. The tool will create a special vfprintf.vfo Zip file.

2.9 Remark

Whenever “Partition Manager”, “Boot Manager” and “Autorun Manager” executed, the “UFD Utility.exe” will be duplicated to the Public area for user convenience.

3. UFD Utility Operation manual

3.1 Introduction of Partition Manager

- Click “Partition Manager” on the UFD Utility bar.



 
- “Partition manager” window will pop up right after click as below.



- Use keyboard (↑, ↓, ←, →) or mouse to adjust public or security area capacity. The minimum capacity for public area is 5MB.
- Enter new password (maximum is 8 characters)
- Enter the password hint to remind the user in case forgetting password
- User may enter or modify the disk label for each area (maximum is 15 characters)
- Execution by pressing “Start”



- A warning message prompts user to backup all the data before partition.
- Press "OK".

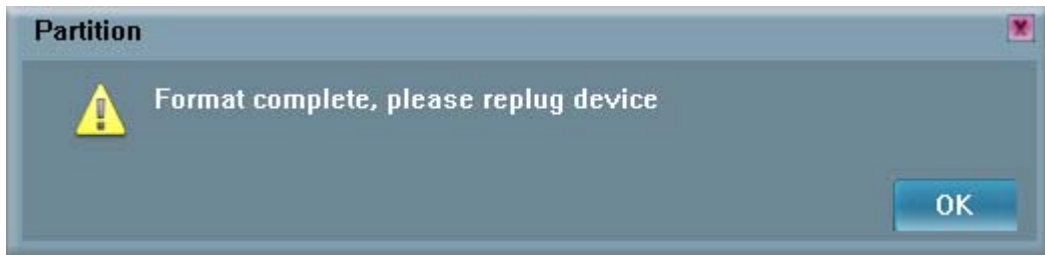

- Showing format complete message when finished. Re-plug device is necessary after finish.

 
3.2 Instructions of Boot Manager

3.2.1 Configure Boot Disk

- Click “Boot Manager” on the UFD Utility bar



- “Boot-Up” window will pop up right after click as below.
- The disk label can be modified through “Boot-Up” setting window.

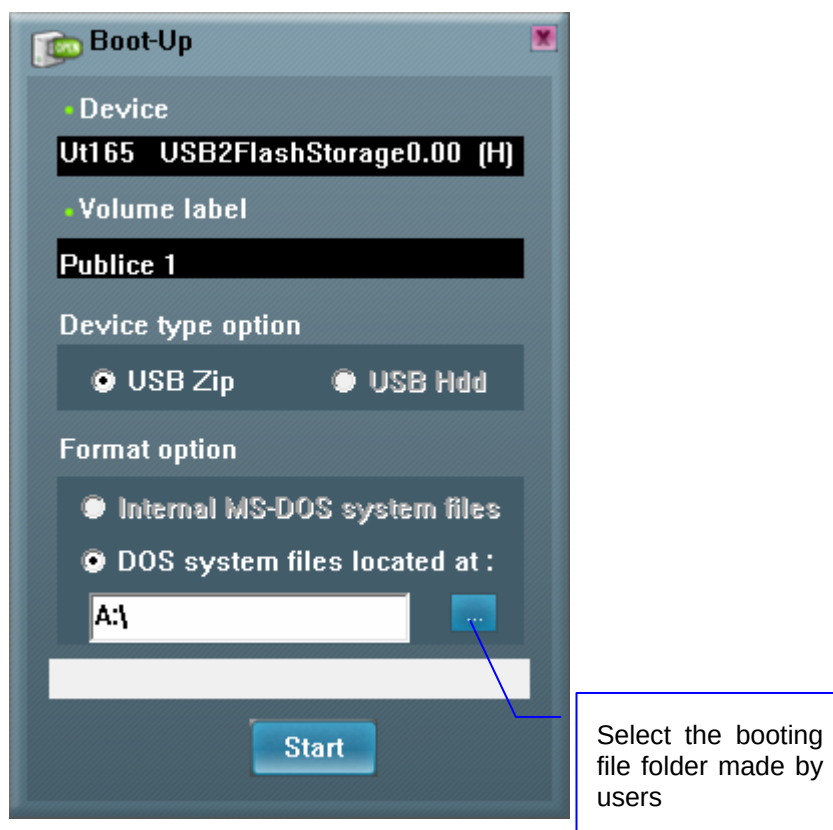


- May enter or modify the disk label (maximum is 11 characters)
- Select booting mode, USB Zip or USB HDD. Please select the same mode in the BIOS first boot device.
- Notice: USB HDD booting support on Windows 98 ONLY.
- User can modify the disk label only if press “Start”.

3.2.2 Making a Boot Disk (for Windows 98)


- Click “Boot Manager” on the UFD Utility bar



 
- “Boot-Up” window will pop up right after click as below.

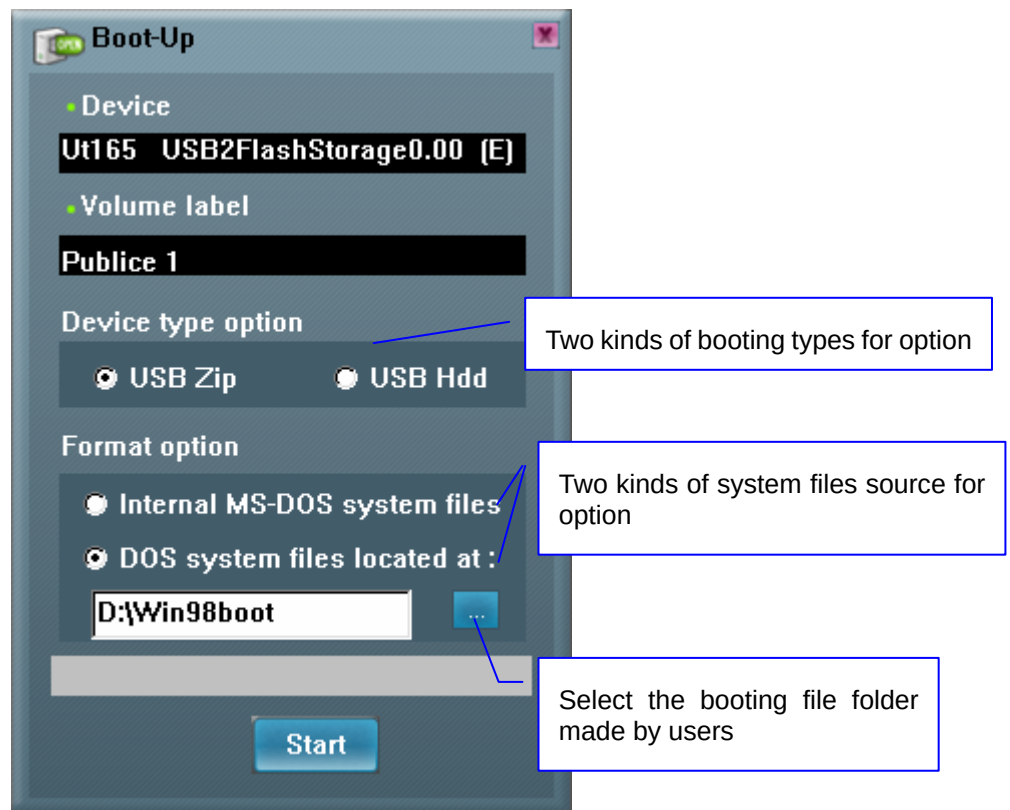

- Users can select either “using internal MS-DOS system files” or “using MS-DOS system files located at:” in Windows 98.
- If users select “using internal MS-DOS system files”, then UFD Utility will copy “command.com” and “io.sys” under Windows 98 “Command” folder to UFD public area.
- If users select “using MS-DOS system files located at:”, UFD Utility will copy “command.com” and “io.sys” from user specify folder to UFD public area.
- Press “Start”.

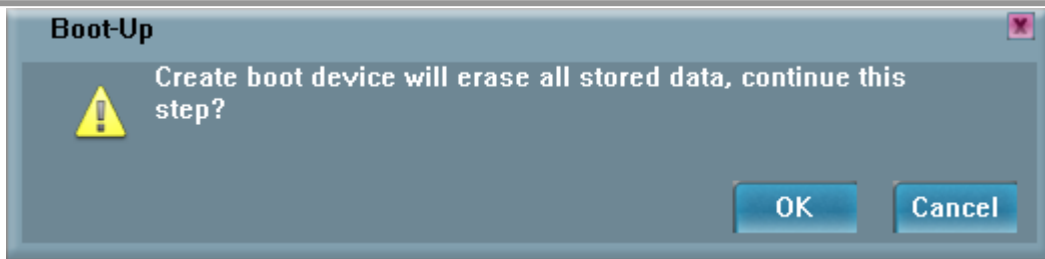 

 - A warning message reminds user to backup all the data before partition then press "OK".

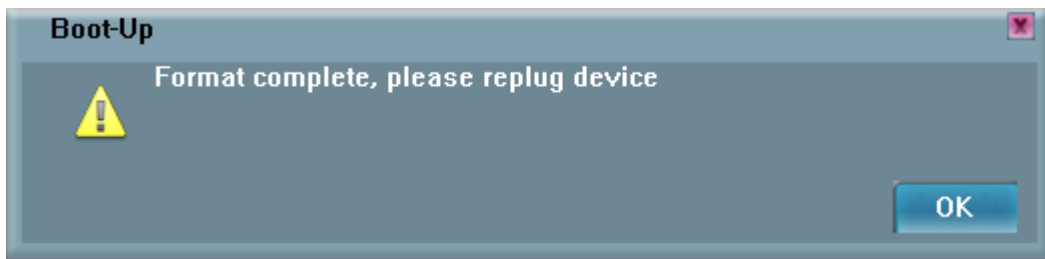

- Showing format complete message when finished. Re-plug device is necessary after finish.

 
–

3.2.3 Making a Boot Disk (for Windows ME / 2000 / XP / Vista)


- Click “Boot Manager” on the UFD Utility bar




- “Boot-Up” window will pop up right after click as below.

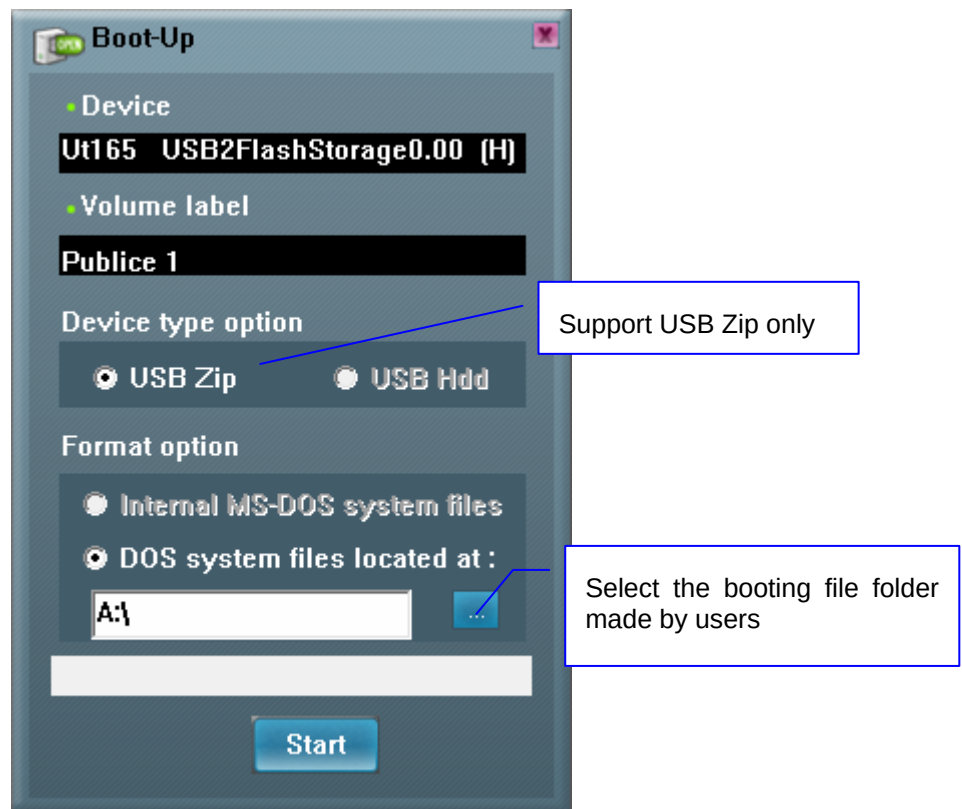

 - Users only can select “using MS-DOS system files located at:” when using Windows ME, 2000, XP or Vista platform.
- UFD Utility will copy “command.com” and “io.sys” from user specify folder to UFD public area.
- Press “Start”.

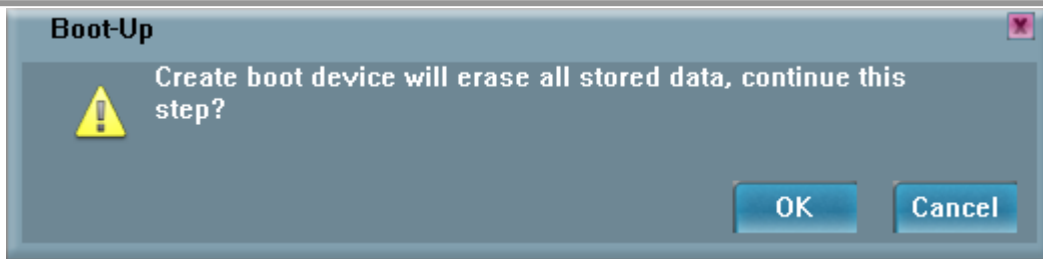

 - A warning message prompts user to backup all the data before partition.
- Press "OK".

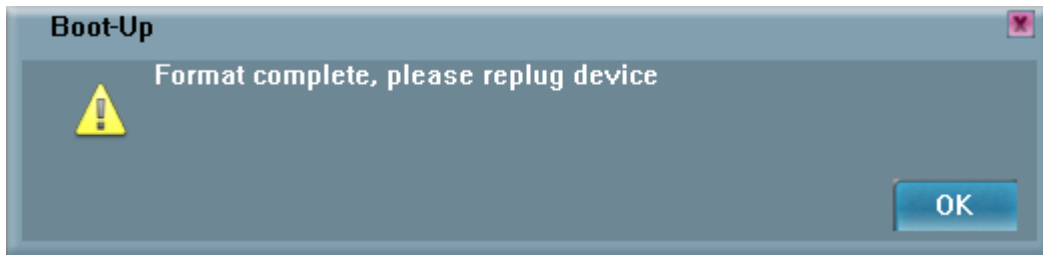

- Showing format complete message when finished. Re-plug device is necessary after finish.

3.3 Instructions of Security Manager:

3.3.1 Login to Security Area

 
- Click “Security Manager” on the UFD Utility bar.



- “Login/out” window will pop up right after click as below. Current status, Logout” will show on window.




- Click “Hint” to recall the password, if the password was set but forget.
- Input the correct password to log into security area.

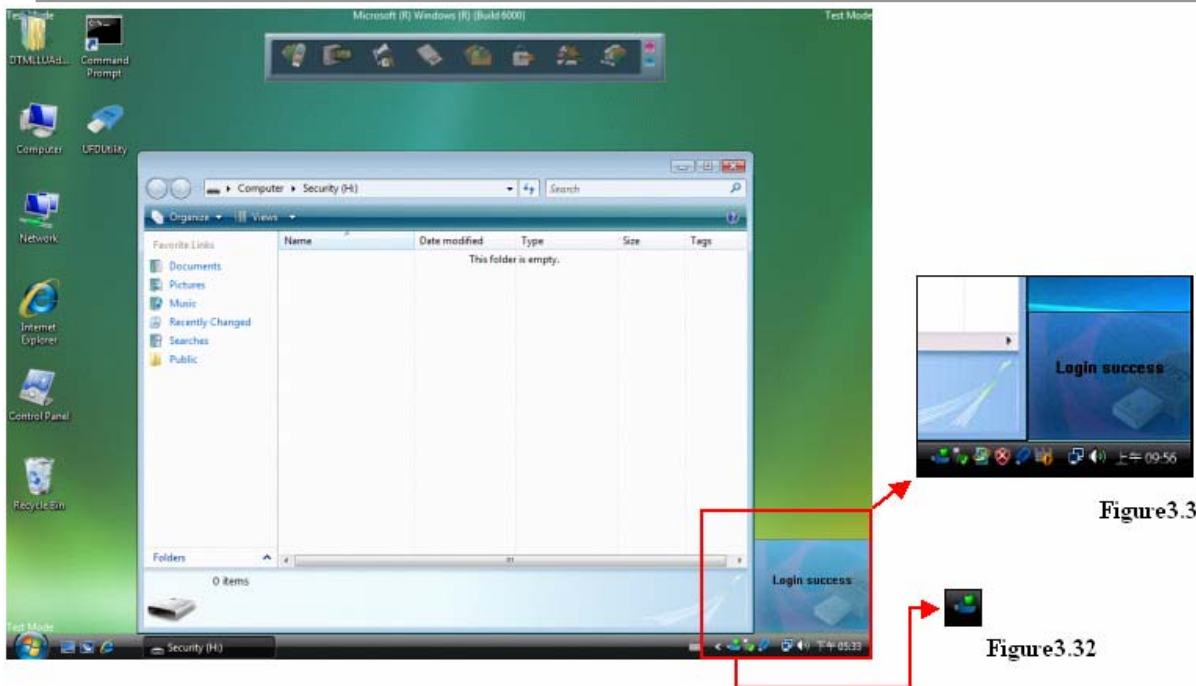

- Figure 3.31, Figure 3.32 and removable disk window will pops up right after successful login.

3.3.2 Logout from Security Area

 - Double click  on the icon bar; a “Login/out” window pops up. Current status, Login, will show up on window.

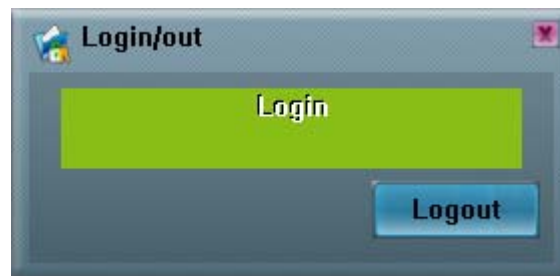


- Click “Logout”
- Removable disk Window will change from security area to public area after logout success.
- Only public area is accessible after logout the security area.

3.4 Instructions of Autorun Manager

3.4.1 Start from Source File Preparation

Prepare "Source File" in advance, including "Autorun.exe", "Autorun.inf" and "Autorun.ico (optional)"

 
- Example of "Source File"

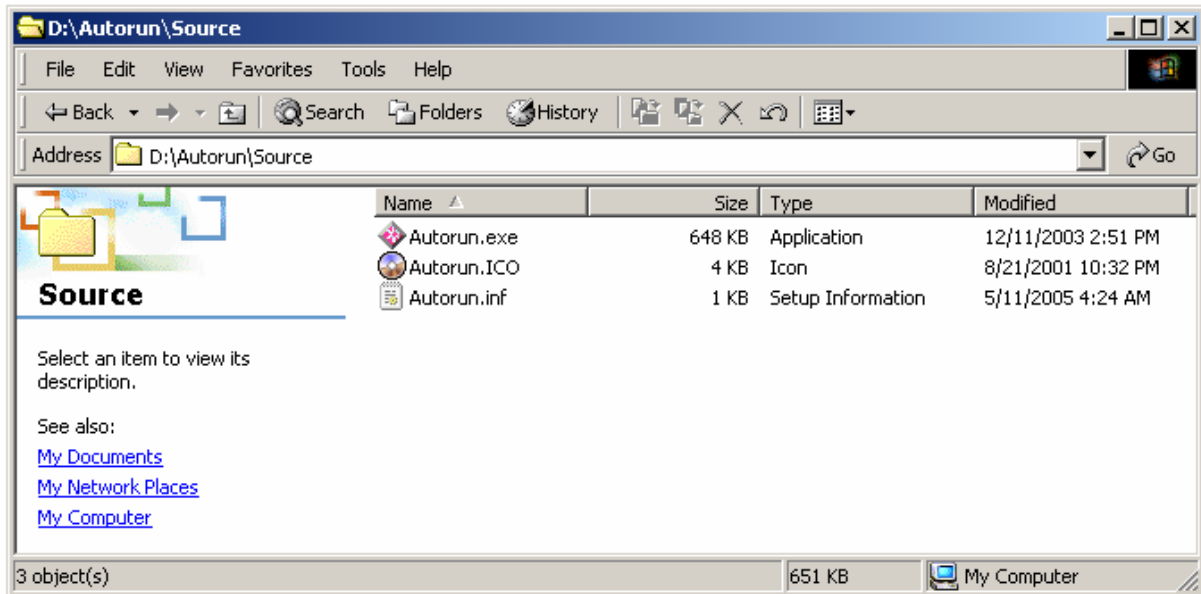

- Example of "Autorun.exe"



 
- Example of "Autorun.inf"

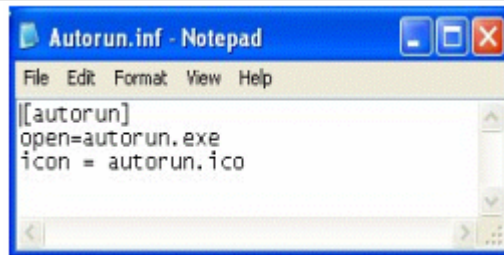


- Click “Autorun Manager” on the UFD Utility bar.



 
- “Autorun Manager” window will pop up right after click as below. Click on the button shown below and select the file-stored path.

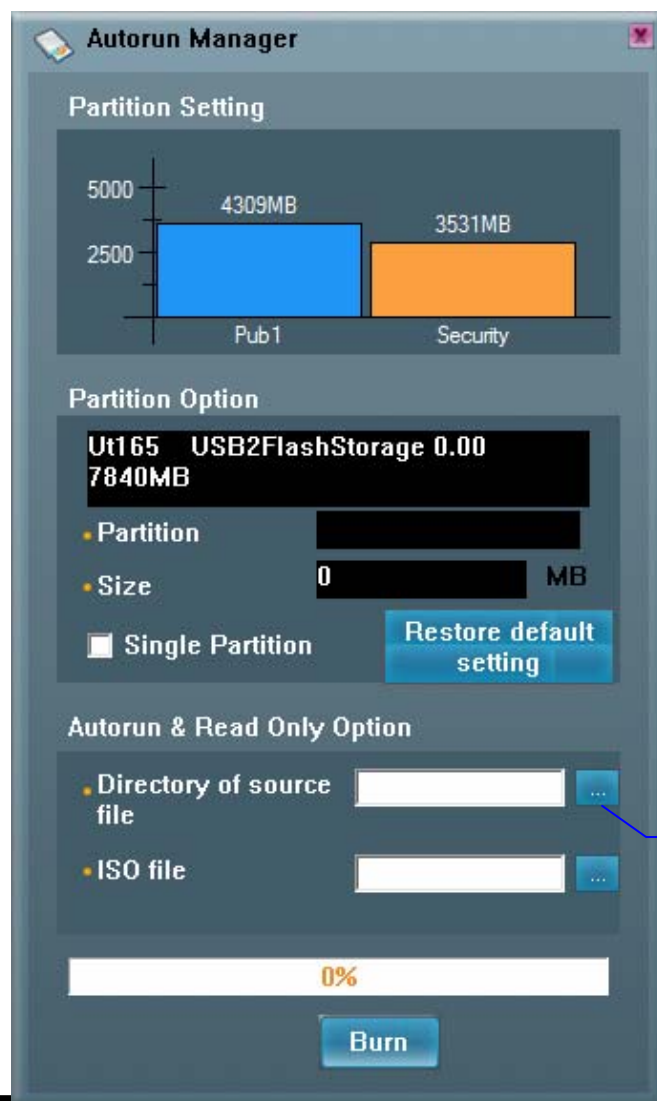

 
- Select the “Source File” store path and click “OK”

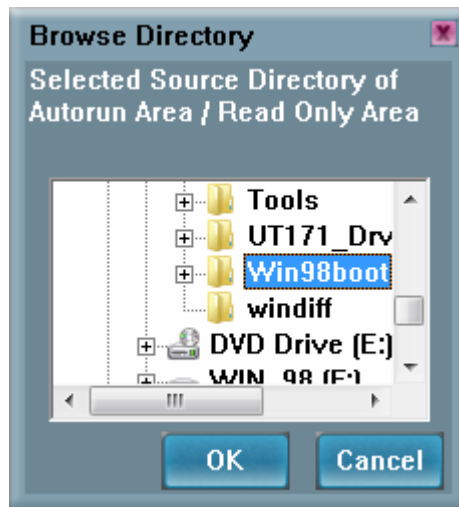

 - Select the path to store “ISO File” and click “Save”. *Notes: DO NOT PLACE BOTH ISO FILE AND SOURCE FILE IN THE SAME FOLDER OR VISTA ROOTS FOLDER.*

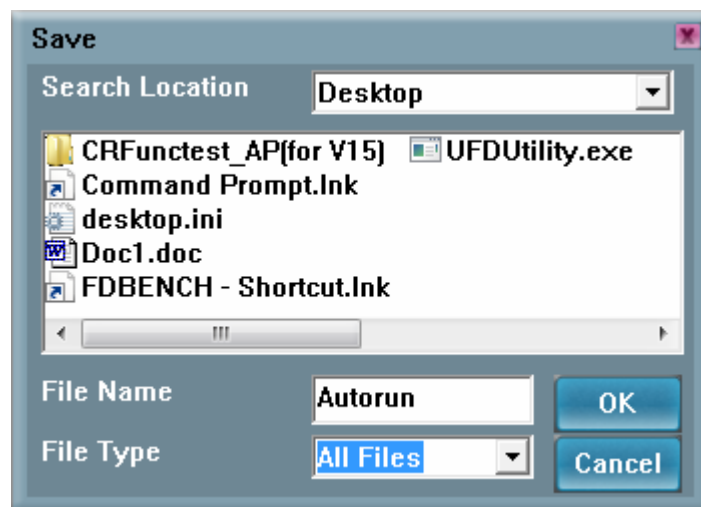

 - Input the volume label of the CDROM and click “Build”

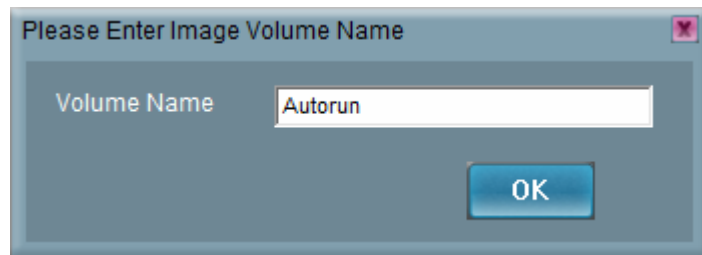


- “Build ISO complete” indication pops up, click “OK”.




- A warning message prompts to user to backup all the data before partition.
- Click “OK”



 - Burn ISO file completed. Re-plug device is necessary after finish.

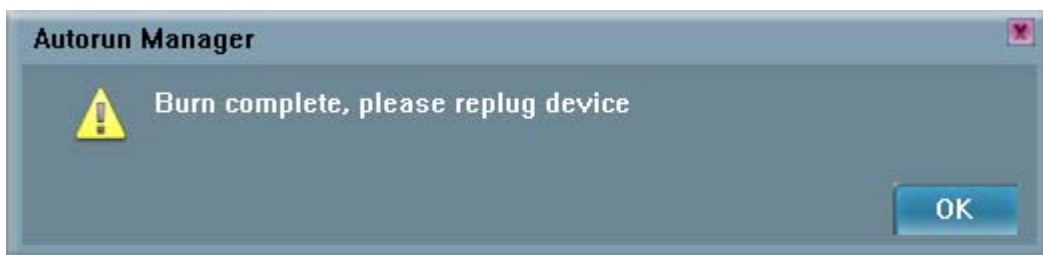

 - After re-plug the UFD, 2 disks will appear in “My Computer”, “Compact Disk” and “Removable Disk”.
- The virtual CDROM was partitioned successfully.

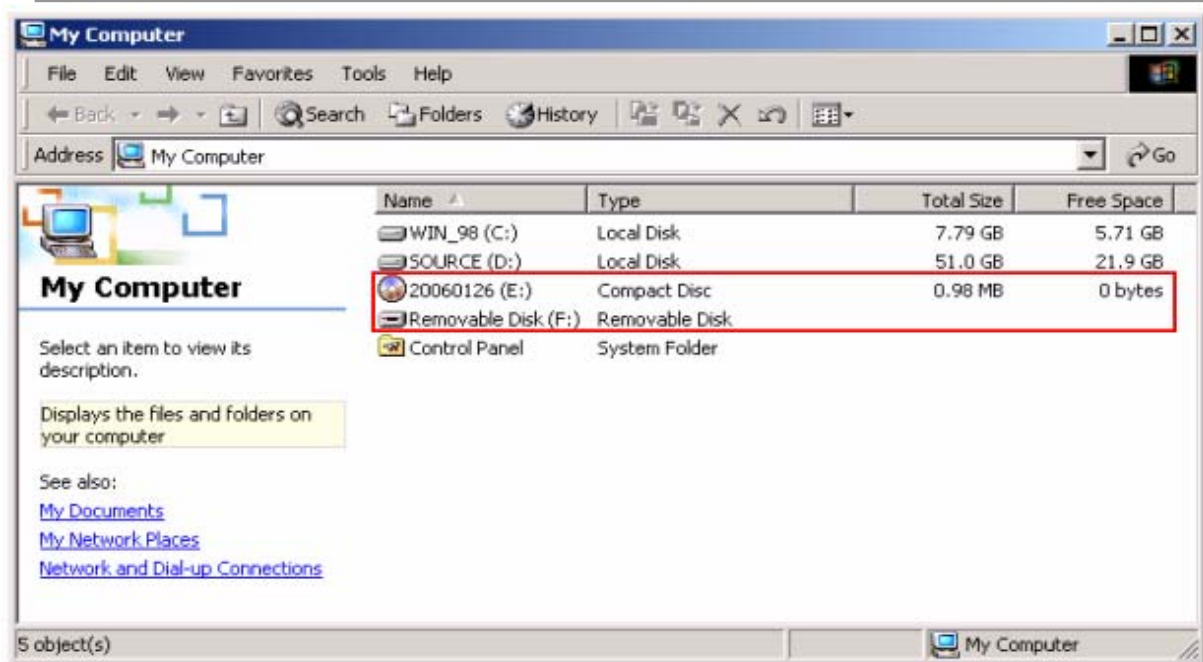


3.4.2 Start from Existing Source File

To use the existing ISO file to create a virtual CDROM for Autorun.

- Click “Autorun Manager” on the UFD Utility bar.




 - “Autorun Manager” window will pop up right after click as below.

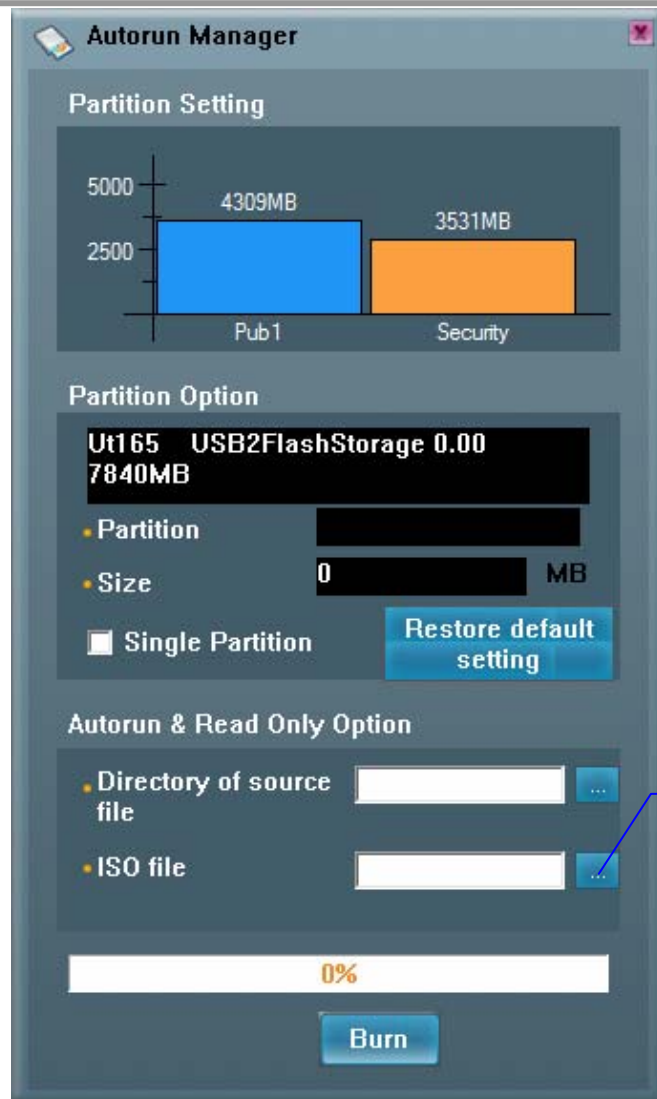


Click here to locate the ISO file

 - Click ISO file browse button “...” to locate ISO file.

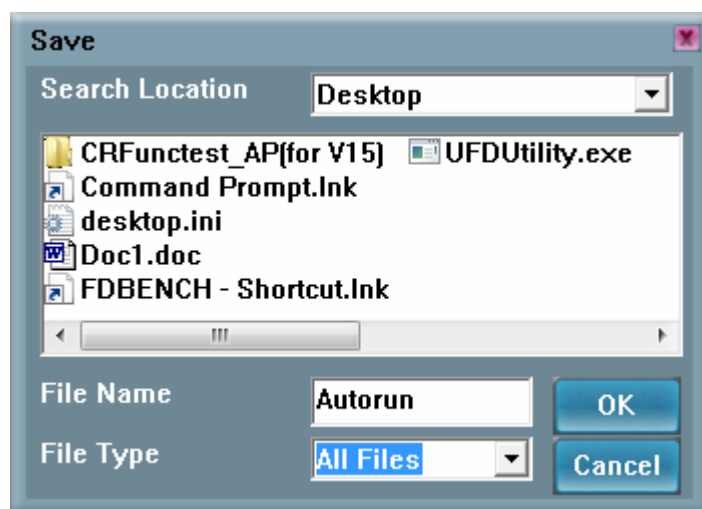

- Select the ISO file.

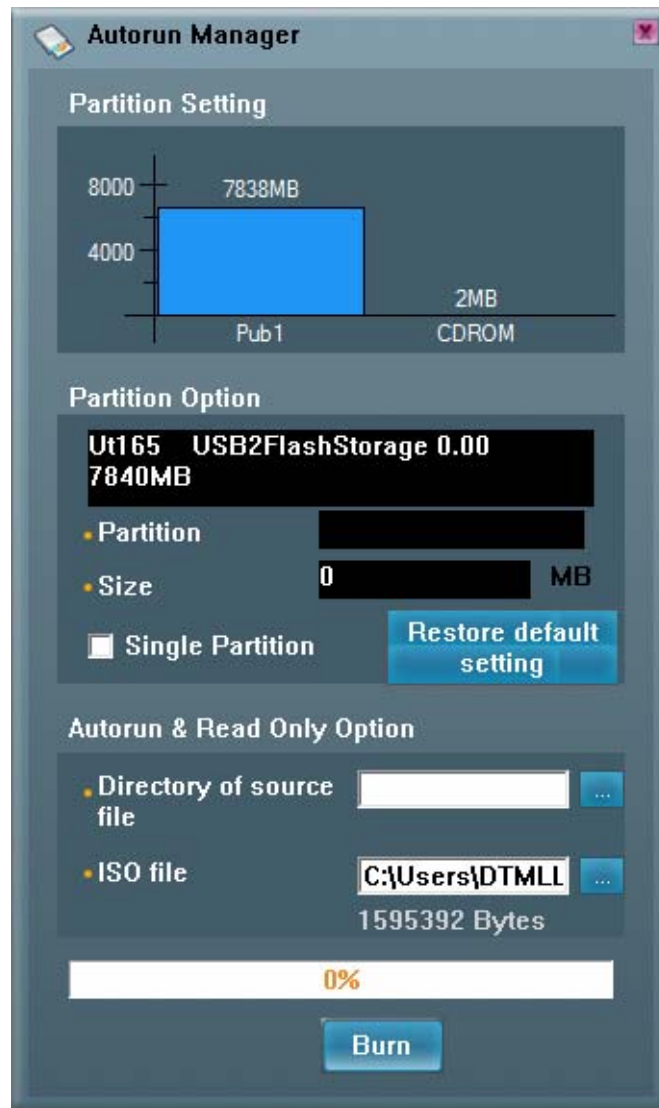 


- Click "Burn".



- A warning message prompts to user to backup all the data before partition.
- Click "OK"



 - When burn is complete, click “OK”

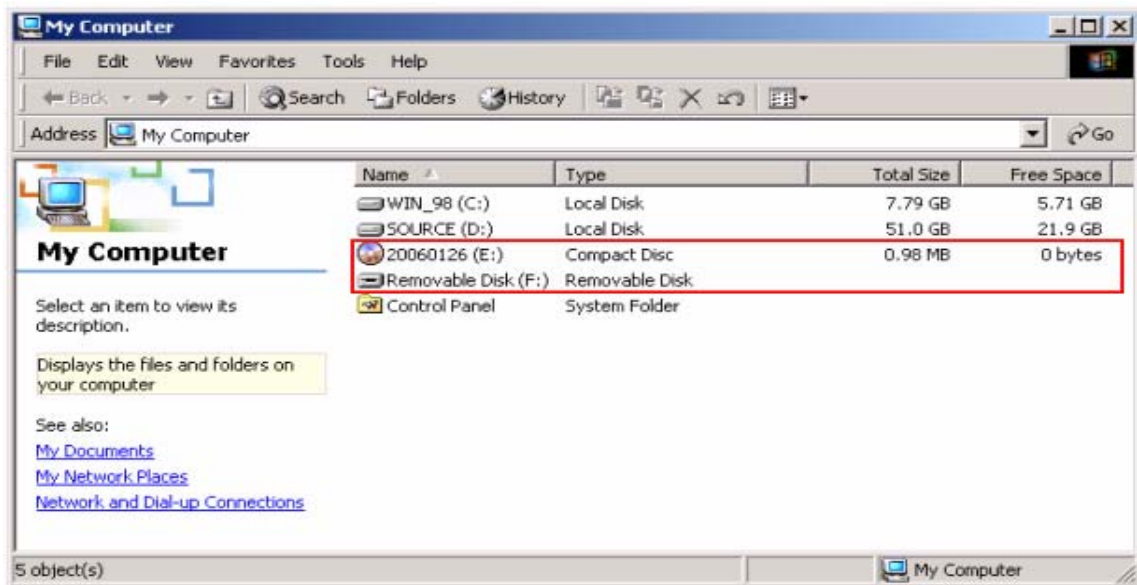

- After re-plug the UFD, 2 disks will appear in “My Computer”, “Compact Disk” and “Removable Disk”. Partitioning is successful.

 
3.4.3 Restore To Default Setting

Restore to initial setting, single partition.


- Click “Autorun Manager” on the UFD Utility bar.



- ““Autorun Manager” window will pop up right after click as below.

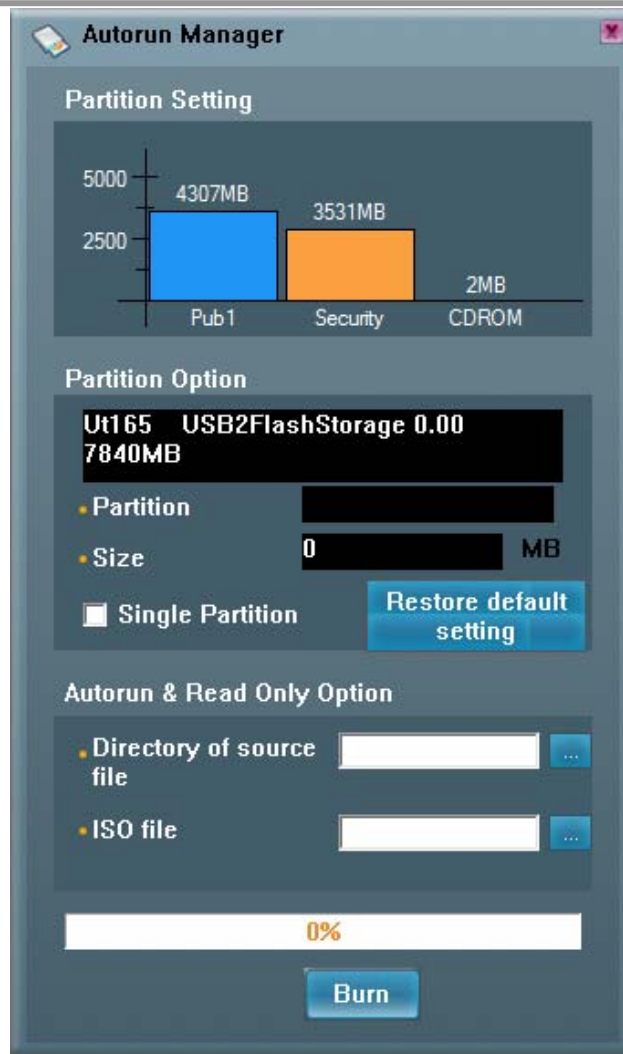

 - Check “Single Partition” option, only one partition will be shown in left side. Click “Restore Default Setting” to restore original partitions.

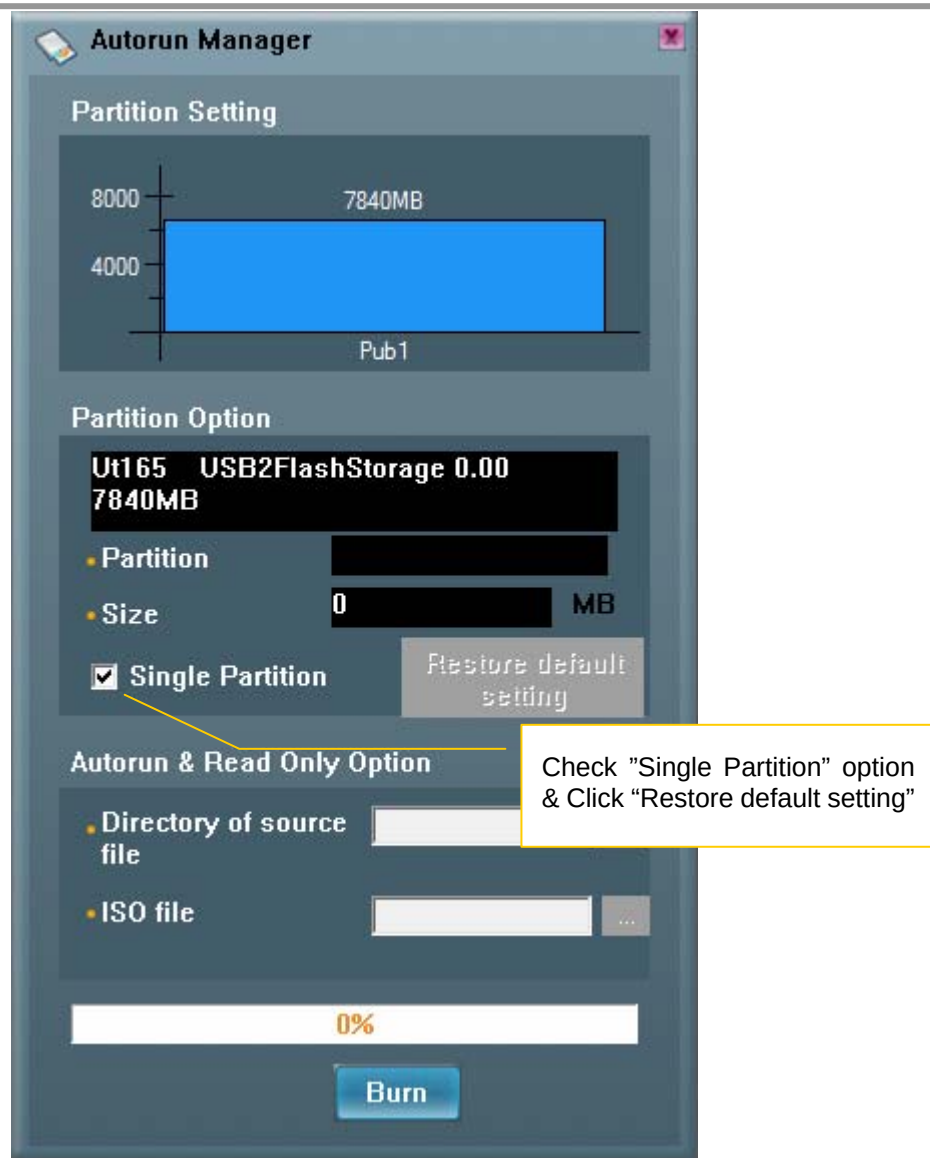


- Click "Burn". A warning message prompts to user to backup all the data before partition.
- Click "OK"



- Click "OK" after burn is complete.



 
- After re-plug the UFD, only one “Removable Disk” will appear in “My Computer”.

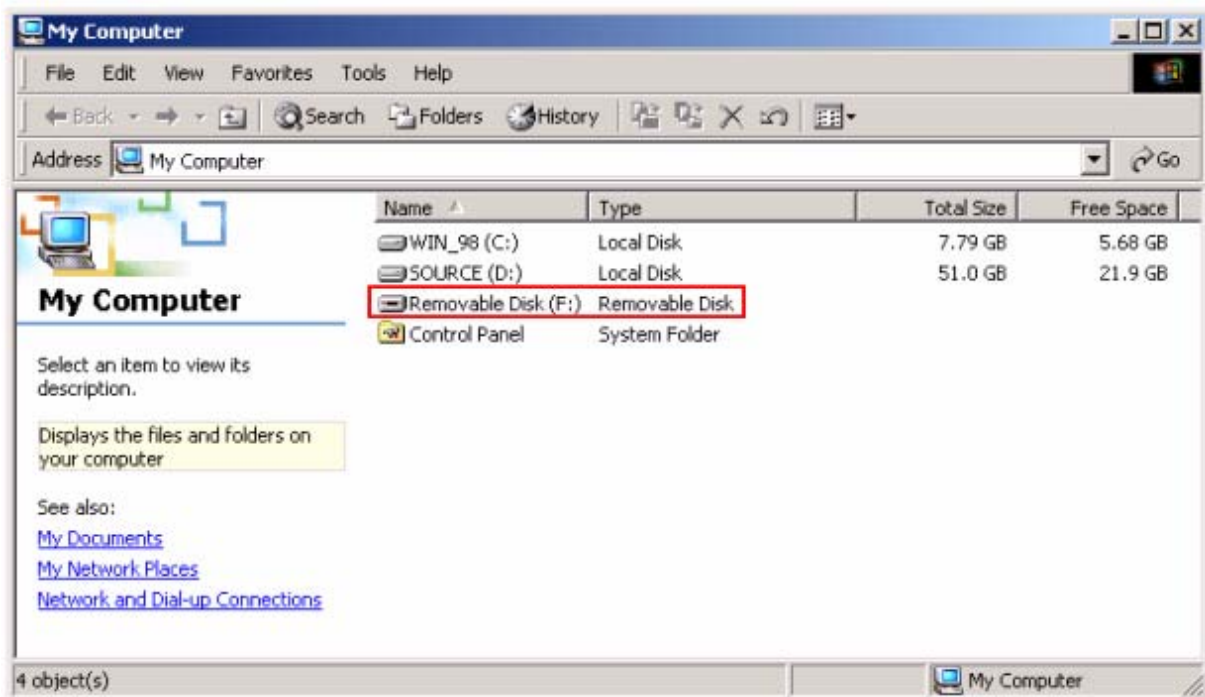

3.5 Instructions of Flash Mail Manager

3.5.1 First Time Set Up

 
- Click “Flash Mail Manager” on the UFD Utility bar.

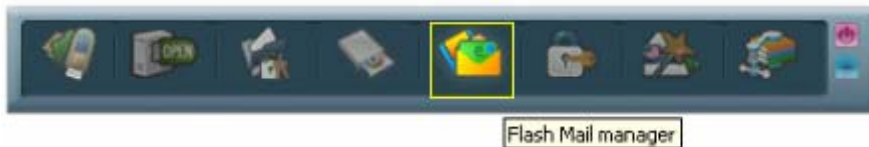


- Click “Yes” to continue flash mail setting if it is first time use.



 - “Mail Manager” window will pop up right after click as below.

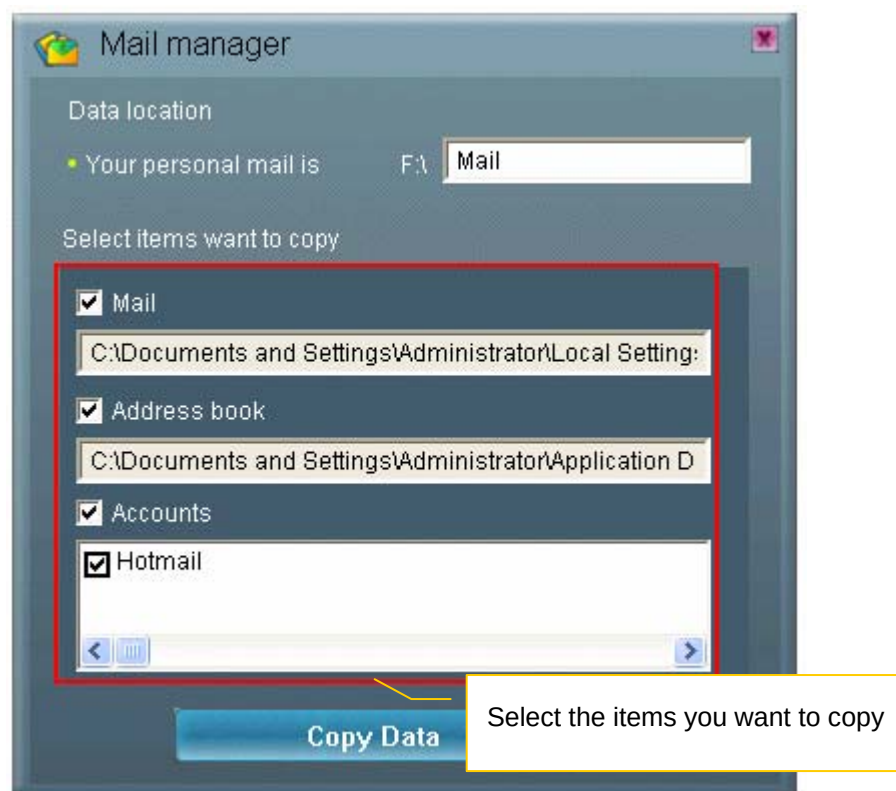

 - Select the items you want to copy to UFD mail folder
- Click “Copy Data”
- Copy Email data to mail folder

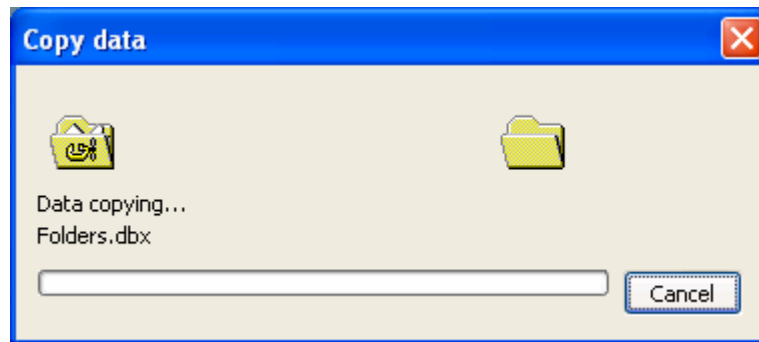


- Click “OK” when Email data was copied complete



- In order to keep data consistence, please close Outlook Express before remove device




 - Click “OK”
- Re-plug UFD and one new mail folder is set up in UFD. This means email data was imported successfully.

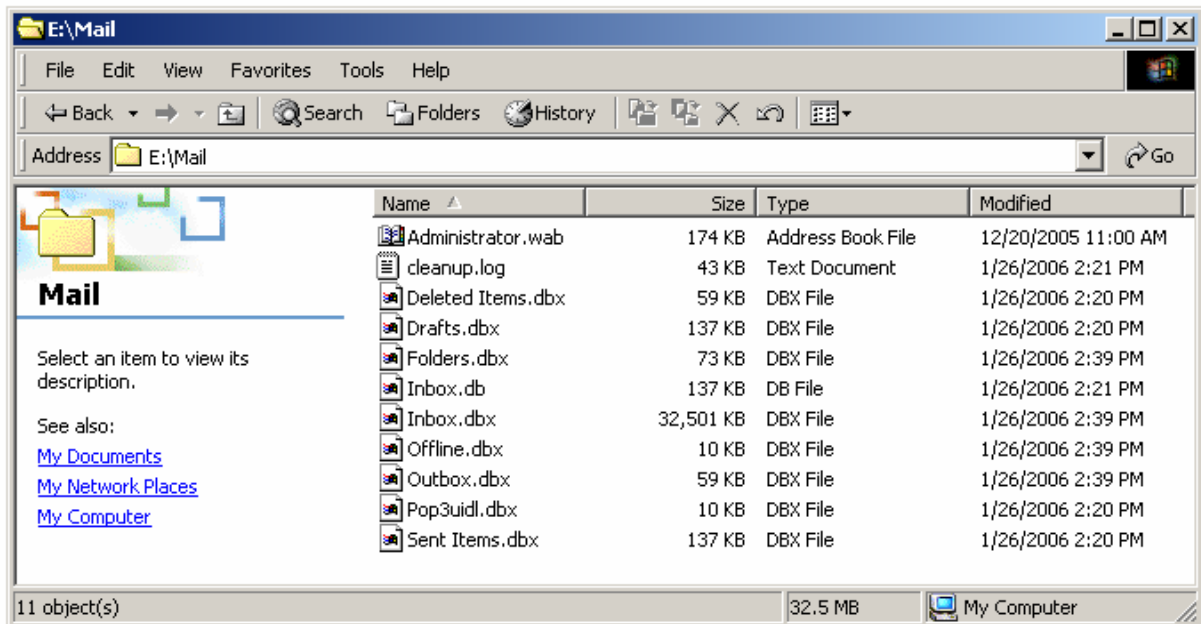

3.5.2 Flash Mail Manager Operation Flow

 
- Click “Flash Mail manager” in UFD utility bar

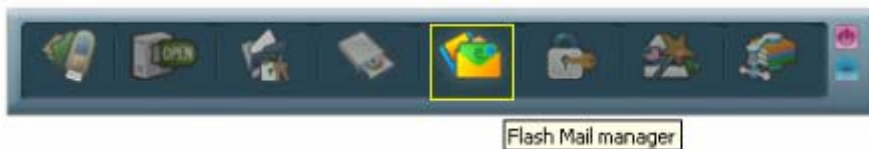

- In order to keep data consistence, please close Outlook Express before remove device
- Click “OK”



 - Please enter your username and password when logon dialog appears

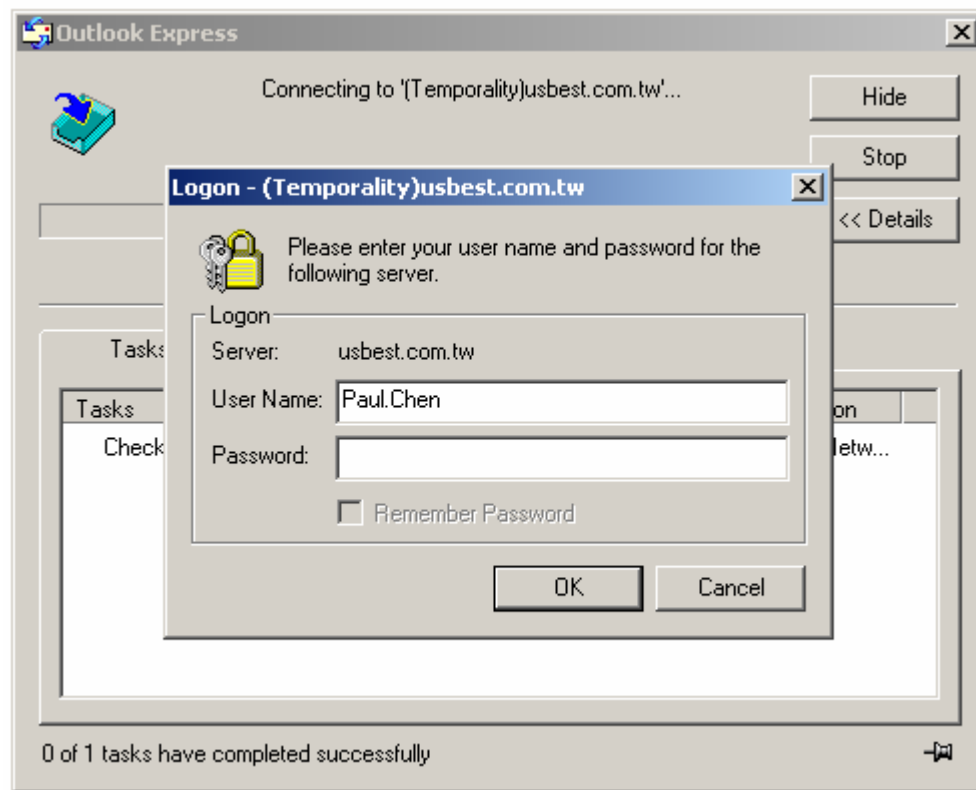


- Then user can send and receive emails on Windows platform. *Note: If use “Flash Mail Manager” to send or receive mails the new mail will be store in UFD “Mail” folder only. No mail will update in your PC Outlook Express.*
- This function not supports Vista Windows Mail.

3.6 Instructions of PC Lock Manager

- Click “PC Lock Manager” on the UFD Utility bar.



 - “PC Lock” window will pop up right after click as below.

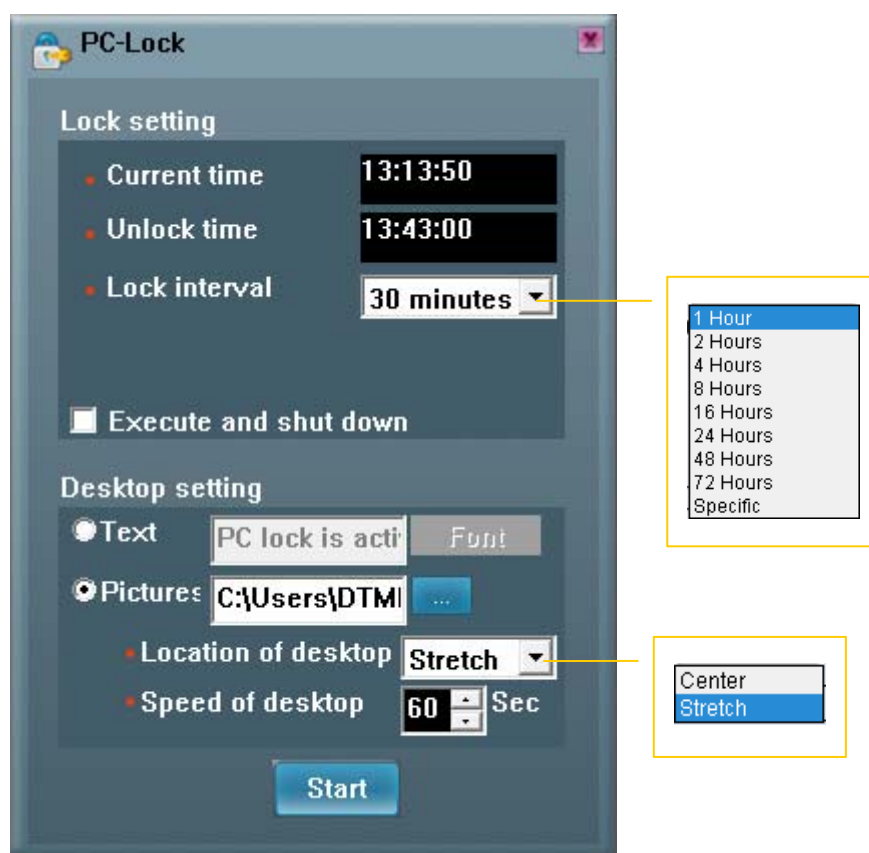

- Select time from “Lock Interval” reel: PC Lock Manager will start screen saver according to users setting time.
- User can click “Execute and shut down” after selecting lock interval time. Then the computer will shut down and lock PC. (Computer will lock PC when re-starting)
- User can select the wallpaper of screen saver from text or pictures display.
- Must indicate the location of folder that picture storage. The picture must be JPG, GIF or BMP file.
- User can select location of wallpaper at center or stretch to the screen size.

- User can set the speed of wallpaper change.
- After setting and pressing <Start>, PC will be locked immediately when you un-plug UFD.
- Please well keep UFD after executing PC Lock Manager.
- Re-plug same UFD to computer in any time to un-locking PC, than user can start using computer again.
- This function not supports Fixed Disk Type.

3.7 Instructions of Bookmark Manager

3.7.1 Import My Favorites

- Click “Bookmark Manager” on the UFD Utility bar.



- “UBookmark” window will pop up right after click as below.



- Click “Import my favorites”, will copy My Favorites directory to UFD Device.
- After completion, remove the UFD device.
- If success, there will be created one Favorites folder in the UFD directory.

3.7.2 Select PC Bookmark or UFD Bookmark

- Click “Bookmark Manager” on the UFD Utility bar.



- “UBookmark” window will pop up right after click as below.





- Selected PC or UFD Bookmark in the Bookmark manager window.
- IE will load user selected Bookmark after close the Bookmark manager window.

3.7.3 How to use PC Bookmark or UFD Bookmark



 
- Select "Run Internet Explorer after the button is selected"
- Browse website after user select PC bookmark or UFD bookmark button.
- Before remove UFD must back to Bookmark manager and click "PC Bookmark".

3.8 Introduction of Security Folder

Click "Security Folder" on the UFD Utility bar




After "Disk Login" window pop up please input password.

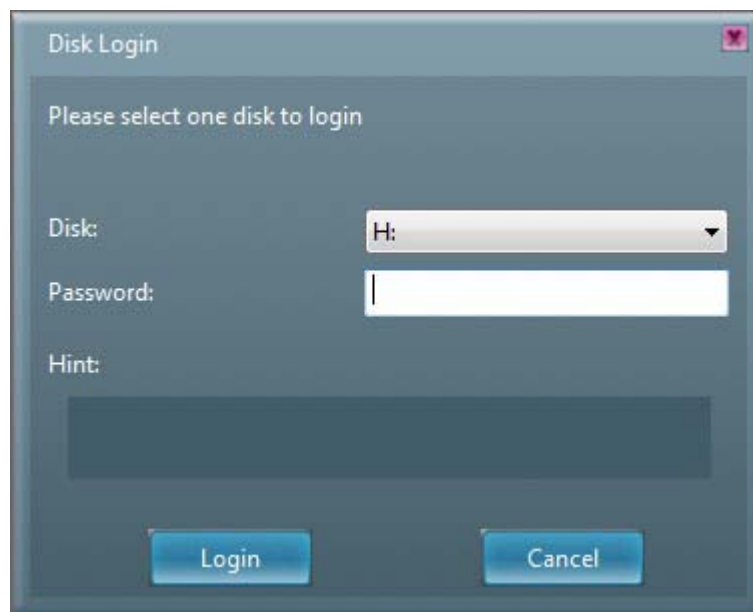


3.8.1 Secret area data access

 After login to secret area user can create folder or copy file.

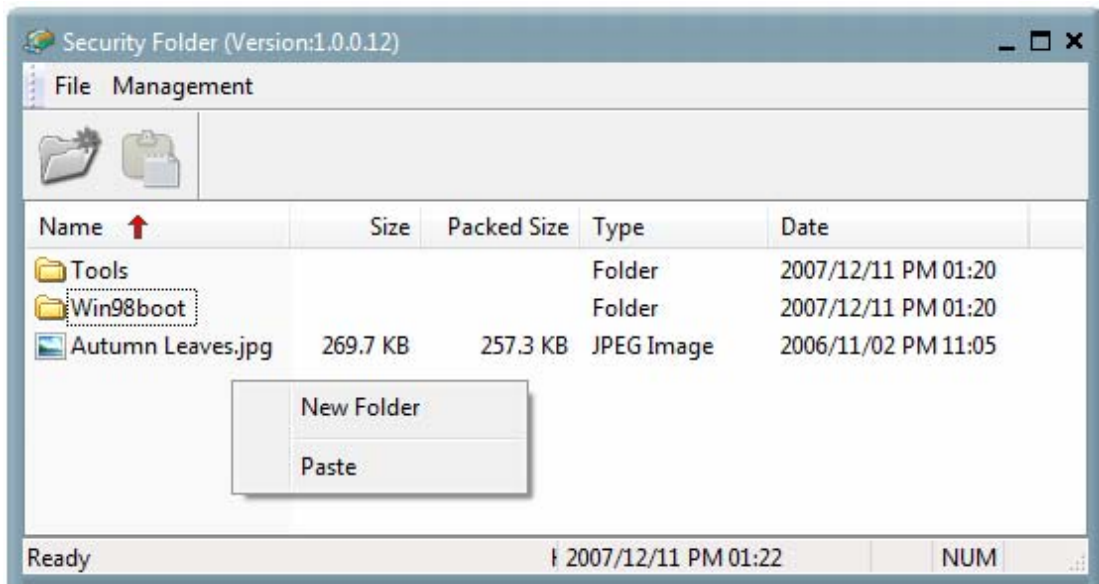


Cut file and delete file.

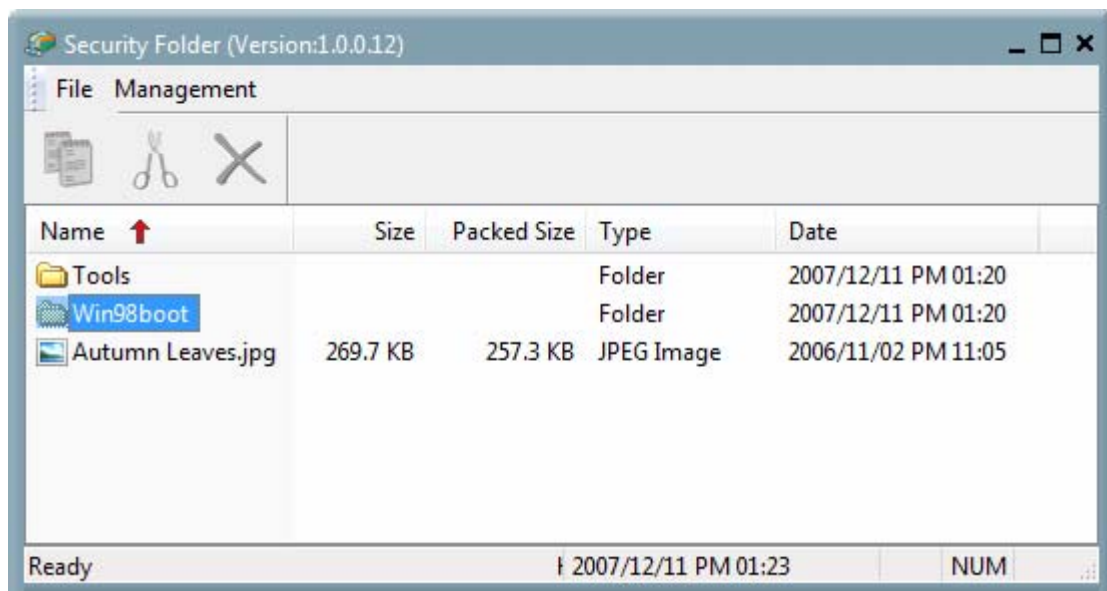 


Close "Security Folder" window will logout secret area. Login secret area again user should click "Compress Manager" and input password again.

3.8.2 Change Secret area password

 At "management" user can logout or change password.

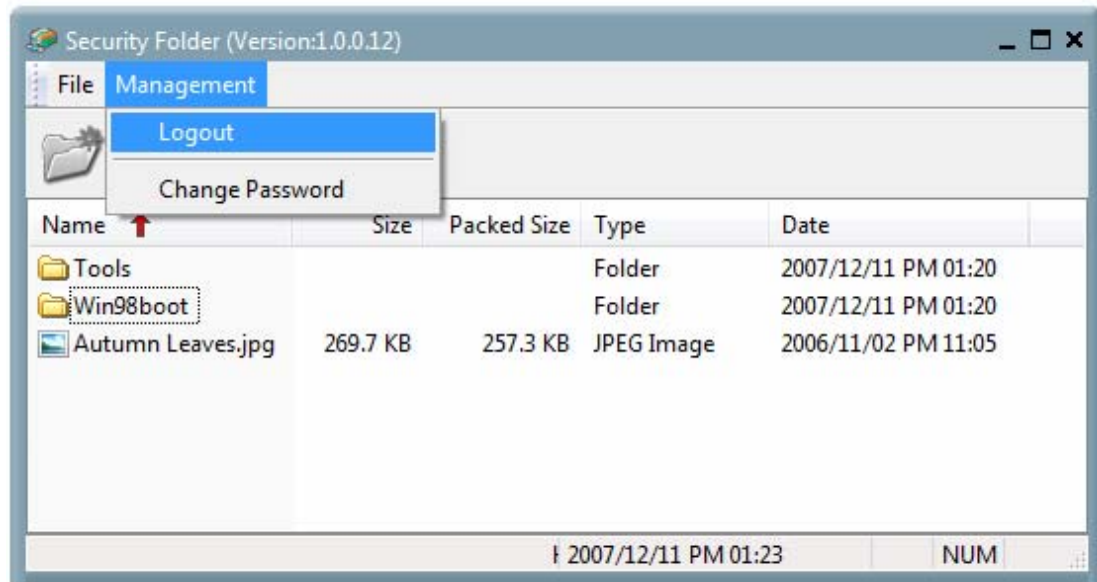

 After logout to the public area user will found vfbest.vfo file under vfzip folder. This file is the Zip file for secret area and only can be use by login to secret area. (Delete vfbest.vfo will cause all data under secret area missing.)

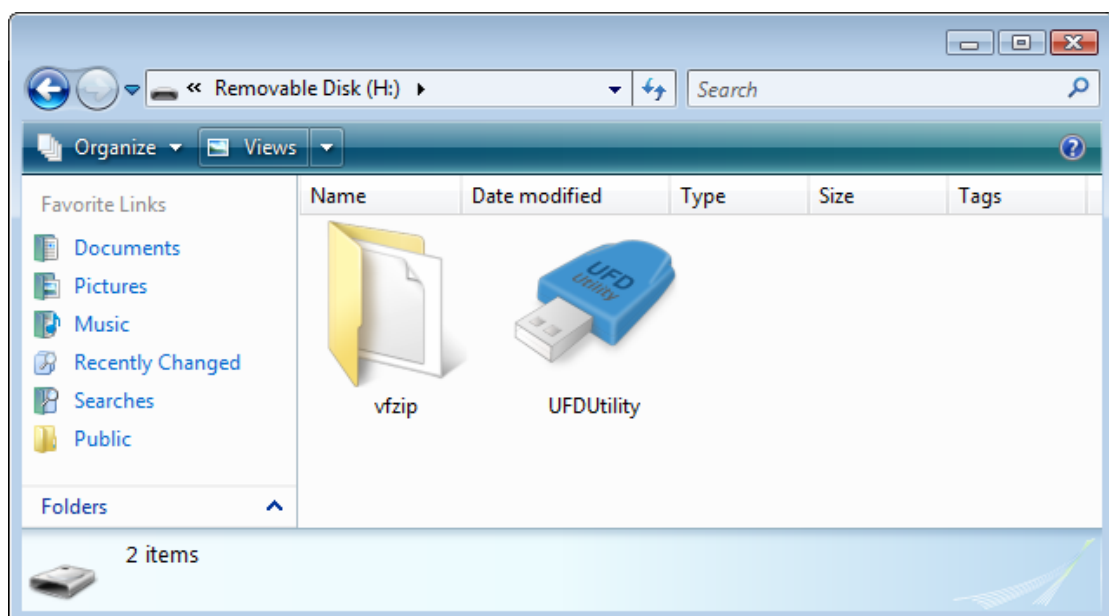

USB Flash Disk Utility

中文使用手冊

Contents

1. 產品簡介	2
1.1 系統需求	2
1.2 支援多國語言.....	2
1.3 磁碟分割區型式.....	2
1.4 加密&壓縮.....	3
1.5 注意事項.....	3
2. UFD Utility 視窗功能說明	4
2.1 分割管理員	4
2.2 開機管理員	4
2.3 保密區管理員	5
2.4 自動執行管理員	5
2.5 電子郵件管理員	5
2.6 電腦鎖管理員	5
2.7 書籤管理員	5
2.8 資料保密管理員	5
2.9 備註欄	5
3. UFD Utility 操作說明	6
3.1 分割管理員使用說明.....	6
3.2 開機管理員使用說明.....	8
3.2.1 開機管理組態設定	8
3.2.2 製作成可以開機磁碟(Windows 98 系統).....	9
3.2.3 製作成可以開機磁碟(Windows ME、2000、XP、Vista 系統).....	11
3.3 保密區管理員使用說明.....	13
3.3.1 登入保密區切換視窗	13
3.3.2 登出保密區切換視窗	14
3.4 自動執行管理員使用說明.....	15
3.4.1 製作虛擬光碟機	15
3.4.2 使用現有的 ISO File.....	19
3.4.3 單一分割格式化	22
3.5 電子郵件管理員使用說明.....	25
3.5.1 選擇設定	25
3.5.2 注意事項說明	28
3.6 電腦鎖管理員使用說明.....	29
3.7 書籤管理員使用說明.....	31
3.7.1 匯入我的最愛	31
3.7.2 選取 PC 書籤或 UFD 書籤.....	31
3.7.3 使用 PC 書籤或使用 UFD 書籤.....	32
3.8 保密資料管理員使用說明.....	33
3.8.1 登入保密區資料存取	34
3.8.2 修改變更保密區密碼	35

1. 產品簡介

1.1 系統需求：

- 作業系統: Windows 98 / ME / 2000 / XP / Vista。
- 硬體需求: USB 2.0 Host、USB HUB (非必需)。

1.2 支援多國語言：

- 簡體中文、繁體中文、葡萄牙語、日文及英文。

1.3 磁碟分割區型式：

 
UFD Utility 的磁碟分割工具，可以用來將 UFD 分割為二種分割區形式。在分割前請先閱讀下列內容。

- 公共區

這是 afatech 原廠設定的資料區形式，此形式可以讓所有人使用整個 UFD 的記憶容量，沒有任何資料讀取的限制，但無法在此建立加密的檔案。整個 UFD 的容量，也可以為公共區。

- 保密區

在保密區內的檔案都受到密碼保護。

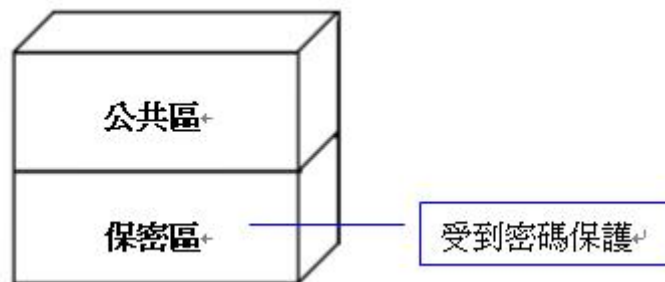

- 公共區+保密區

將 UFD 分割為同時包含**公共區**和**保密區**的裝置。保密資料可置於**保密區**並且受到密碼保護。公共區沒有任何資料存取的限制。



1.4 加密&壓縮:

- UFD Utility 的磁碟應用工具內的 Secret Zip 功能，是將檔案儲存為有特定副檔名的加密壓縮檔。

1.5 注意事項:

- USB FLASH DISK 以下簡稱為 **UFD**。
- UFD Utility 部份功能會將 UFD 重新格式化，請先備份 UFD 內的資料，以免重要資料流失。

2. UFD Utility 視窗功能說明



2.1 分割管理員

可以用來將 UFD 分割為 1 個分割區公共區或 2 個分割區公共區 + 保密區的磁碟分割型態。支援修改 Disk Label 及設定/修改保密資料區密碼。

2.2 開機管理員

將 UFD 製作成可以開機磁碟, 分別有 USB-ZIP & USB-HDD 兩種的裝置型態。

2.3 保密區管理員

輸入密碼將裝置登入到保密區，儲存資料完成可將裝置登出保密區，達成資料保密的功能。

2.4 自動執行管理員

將已分割為 1 個或 2 個分割區的 UFD，產生出 1 個重新插入後可自動執行的虛擬光碟機。且支援 ISO 檔案製作及回復初始值的作用。

2.5 電子郵件管理員

可選擇將 Outlook Express 的郵件、通訊錄、郵件帳號，複製到裝置中，支援有 Outlook Express 的 Windows 平台進行收發郵件，郵件資料隨身攜帶。

2.6 電腦鎖管理員

離開電腦時可自行設定鎖定時間及設定欲顯示之圖片、文字，設定完成後卸下 UFD 即可上鎖保密。

2.7 書籤管理員

可將 Internet Explorer 裡我的最愛書籤，複製到裝置中，支援有 Internet Explorer 的 Windows 平台進行瀏覽網頁，書籤資料隨身攜帶。

2.8 資料保密管理員

將想要壓縮及加密的資料，儲存到公共區內的 vfile 資料夾。資料夾中會產生一個 vfile.vfo 的特定副檔名的加密壓縮檔。

2.9 備註欄

執行分割管理員、開機管理員、自動執行管理員，程式都會重新複製 UFD Utility.exe 到公共區(Public 1)裡面，確保程式的安全性及便利性。

3. UFD Utility 操作說明

3.1 分割管理員使用說明:

 
- 點選 UFD Utility 視窗，選取分割管理員。



- 出現分割磁區視窗，選擇你所要分割磁區型式。



- 可以直接按下鍵盤的上、下、左、右鍵按鈕，來調整分割公共區&保密區的容量大小，或者也可以利用滑鼠來自由拖曳容量大小，公共區最小分割為 5MB。
- 輸入一個新密碼 (密碼最多可設為 8 個字元)。
- 輸入密碼提示，用來提醒自己設定的密碼。
- 可以輸入或更改磁碟標籤代號 (代號最多可設為 15 個字元)。
- 按下開始後執行。

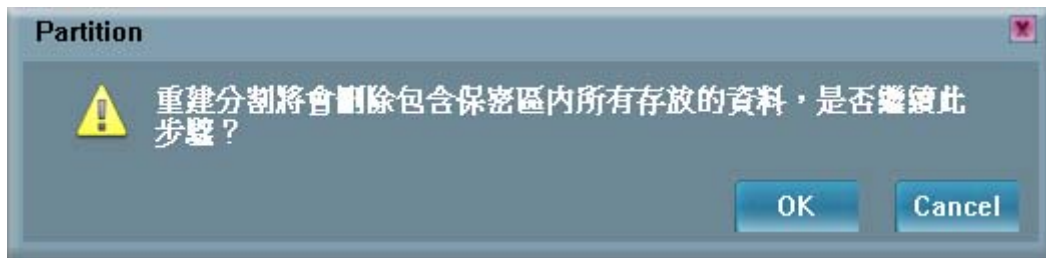

- 出現警告訊息，分割前請先備份資料。
- 按下確定。



- 出現格式化完成，表示分割成功。

3.2 開機管理員使用說明:

3.2.1 開機管理組態設定

- 點選 UFD Utility 視窗，選取開機管理員。



- 出現開機設定視窗，單獨的改變磁碟標籤代號。



 
- 可以輸入或更改磁碟標籤代號 (代號最多可設為 11 個字元)。
- 點選你所需要的開機模式 (USB Zip 或 USB Hdd，請選擇主機板 BIOS 在 First Boot Device 已設定的模式)。
- USB HDD 開機模式，只支援 Windows 98 系統。
- 如果按下開始的按鈕，可以單獨的改變磁碟標籤代號。

3.2.2 製作成可以開機磁碟(Windows 98 系統)


Windows 98 系統，製作開機磁碟範例：



- 在格式化選項中，按下製作 DOS 開機碟的按鈕。
- Windows 98 系統，可點選你所需要使用開機的位置。例如:[使用 MS-DOS 系統檔案]按鈕或[使用 MS -DOS 系統檔案位於]路徑的按鈕。
- 點選[使用 MS -DOS 系統檔案]按鈕，此時 UFD Utility 會將 Windows 98 作業系統目錄下的 COMMAND.COM 與 IO.SYS 複製到 UFD 的公共區裡面。
- [使用 MS -DOS 系統檔案位於] 路徑的按鈕，此時 UFD Utility 會載入使用者所製作的開機資料夾後，按下確定，此時 UFD Utility 會將資料夾下的 COMMAND.COM 與 IO.SYS 複製到 UFD 的公共區裡面。
- 按下開始的按鈕。

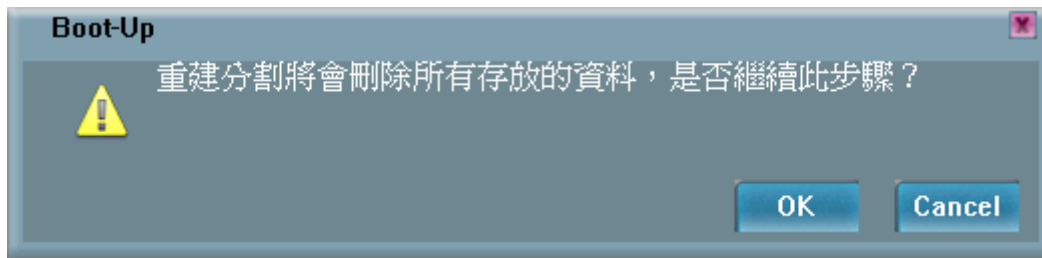

- 出現警告訊息，分割前請先備份資料。
- 按下確定。

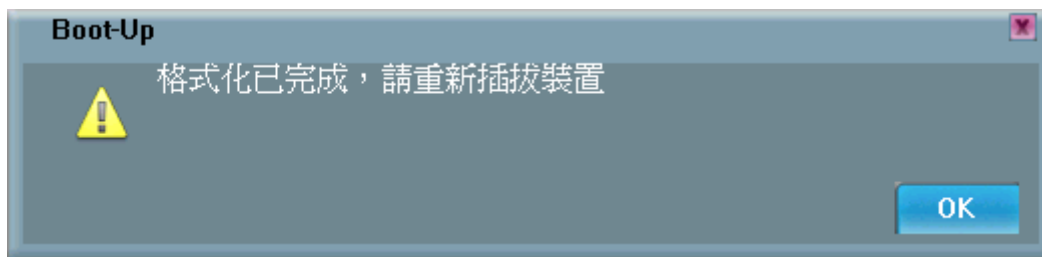 


- 出現格式化完成，表示製作開機磁碟成功。

3.2.3 製作成可以開機磁碟(Windows ME、2000、XP、Vista 系統)


Windows ME、2000、XP、Vista 系統，製作開機磁碟範例：



 - 在格式化選項中，按下製作 DOS 開機碟的按鈕。
- Windows ME、2000、XP、Vista 下只能選擇使用 MS -DOS 開機檔案所在路徑的按鈕。
- 點選 [使用 MS -DOS 系統檔案位於路徑] 的按鈕，載入使用者所製作的開機資料夾後，按下確定，此時 UFD Utility 會將資料夾下的 COMMAND.COM 與 IO.SYS 複製到 UFD 的公共區裡面。
- 按下開始的按鈕。

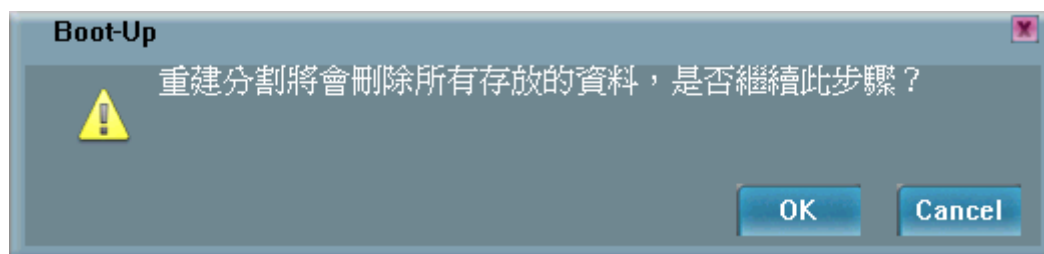

- 出現警告訊息，分割前請先備份資料。
- 按下確定。

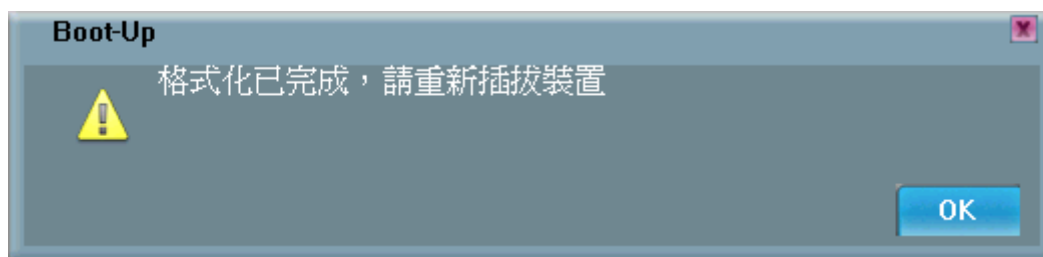 

- 出現格式化完成，表示製作開機磁碟成功。

3.3 保密區管理員使用說明:

3.3.1 登入保密區切換視窗

 
- 點選 UFD Utility 視窗，選取保密區管理員。



- 出現保密區切換視窗。



- 假如在分割磁碟區時有設定密碼提示，這時可以按下密碼提示按鈕來幫助回想密碼。
- 輸入正確密碼按下登入即可切換至保密區。

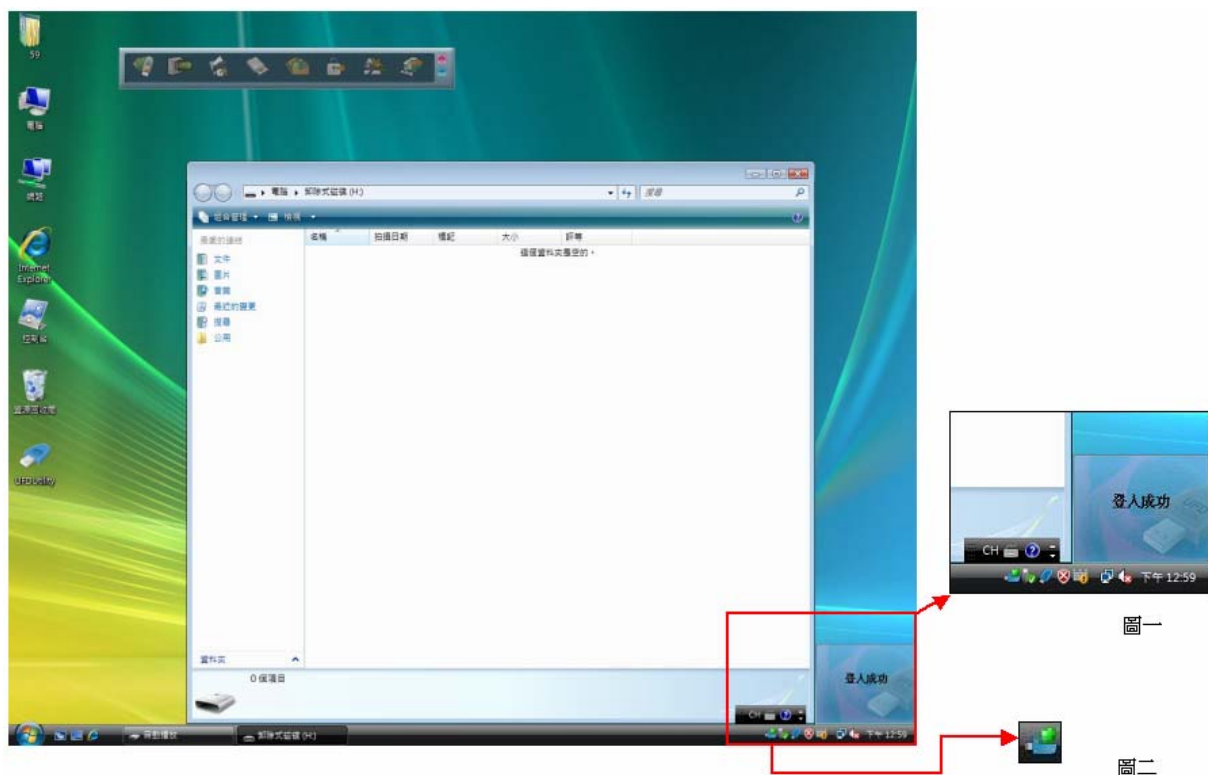

- 出現卸除磁碟機、圖一、圖二，這時表示登入成功。

3.3.2 登出保密區切換視窗

- 在 Windows 系統右下方常駐列的  圖示上點兩下，出現裝置已登入的視窗。



 
- 按下登出。
- 出現卸除磁碟機，這時已經登出保密區。
- 當成功登出保密區後，將只能夠讀取公共區的資料。

3.4 自動執行管理員使用說明:

3.4.1 製作虛擬光碟機

預先準備 Source File，內容包含 Autorun.exe、Autorun.inf、Autorun.ico 非必要。


- Source File 範例:

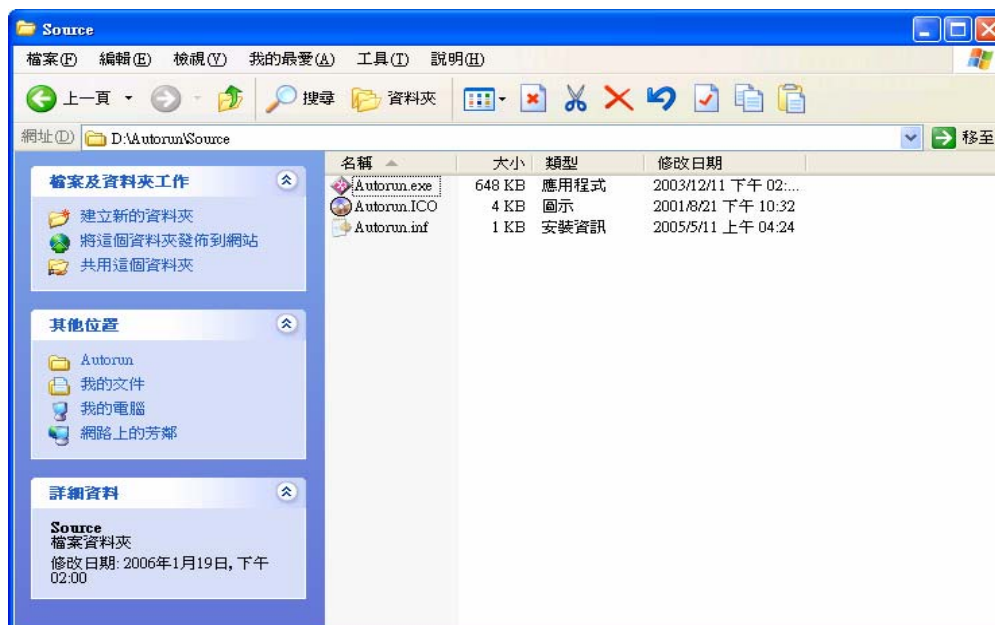

- Autorun.exe 範例:



 
- Autorun.inf 範例:

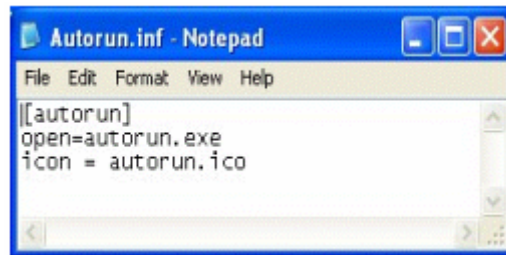

- 點選 UFD Utility 視窗，選取自動執行管理員。



 - 出現自動執行切換視窗，按下檔案來源目錄的按鈕，出現瀏覽資料夾對話框。

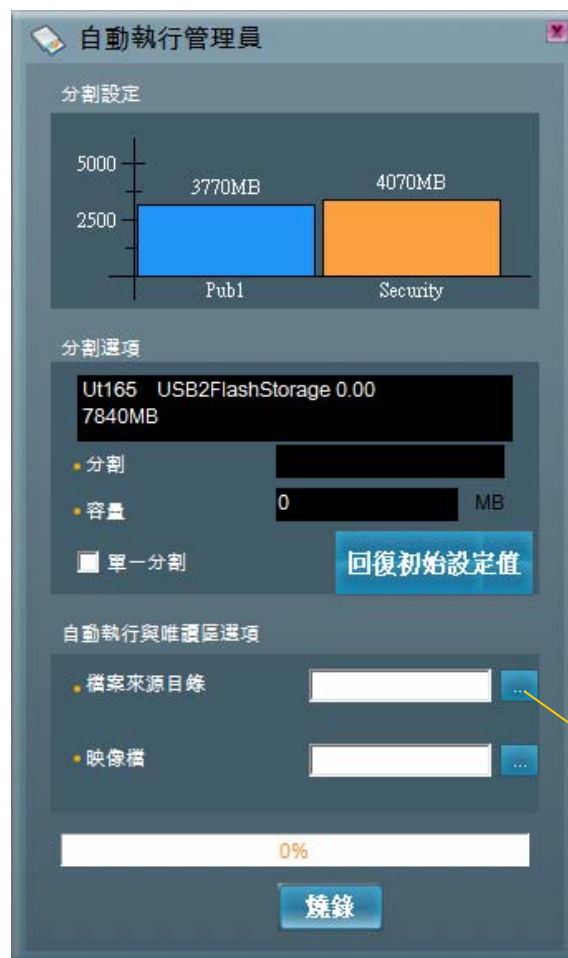


按下檔案來源目錄的


- 選擇 Source File 的存放位置，按下確定的按鈕。



 - 選擇產生的 ISO File 要存放的位置，然後按下儲存 (請勿將 ISO File 與 Source File 放在同一資料夾內 & Vista 的根目錄下)。

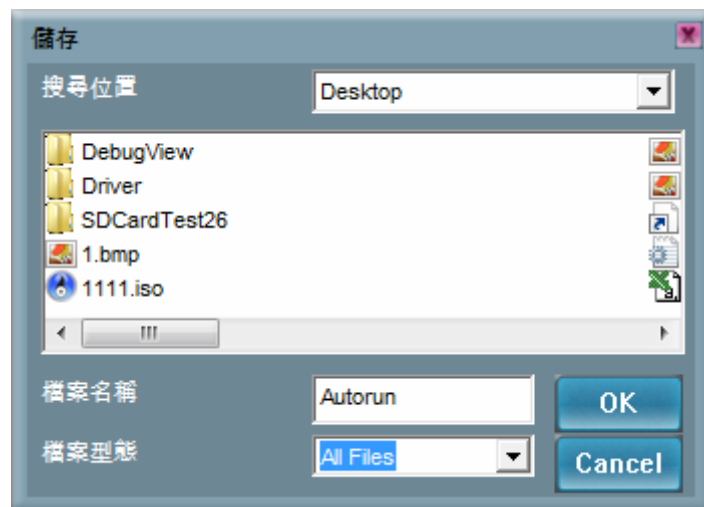


- 輸入光碟機名稱，然後按下 "Build"。

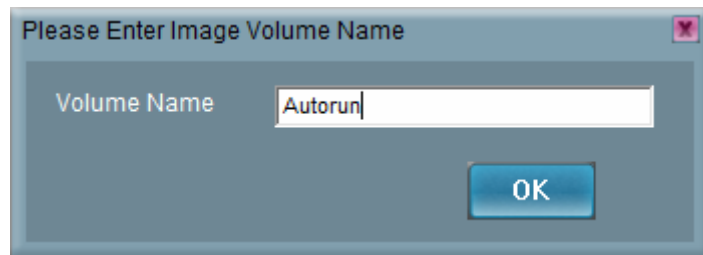 

- 出現映像檔製作完成，然後按下確定、燒錄。



 
- 出現警告訊息，重建分割前請先備份資料。
- 按下確定。

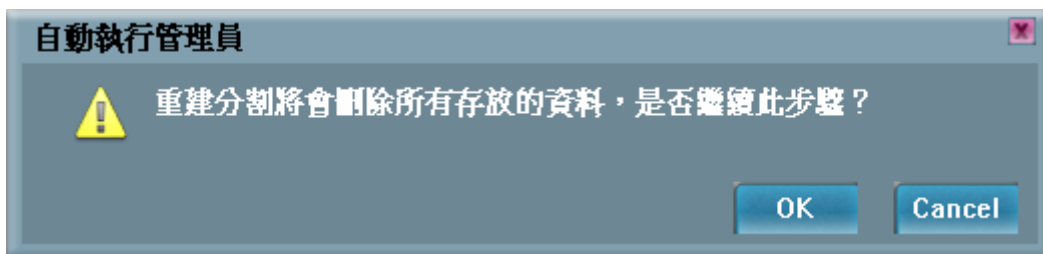

- 出現燒錄完成後按下確定。



 
- 重新插拔 UFD 後，會在我的電腦下，產生 1 個 "卸除式硬碟" 及 1 個可自動執行的虛擬光碟機。
- 表示分割虛擬光碟機成功。

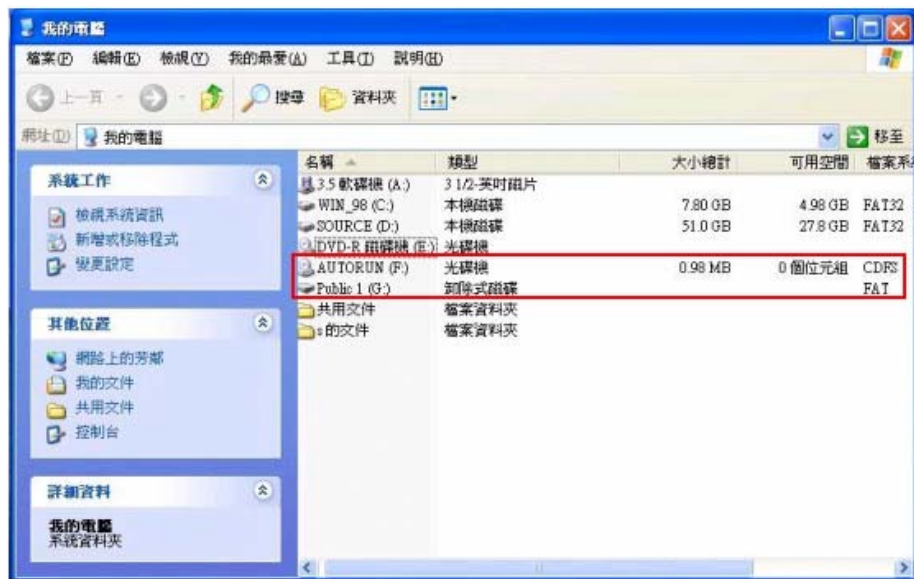

3.4.2 使用現有的 ISO File


使用現有的 ISO File，重新格式化製作可自動執行的虛擬光碟機。

 - 出現自動執行切換視窗。

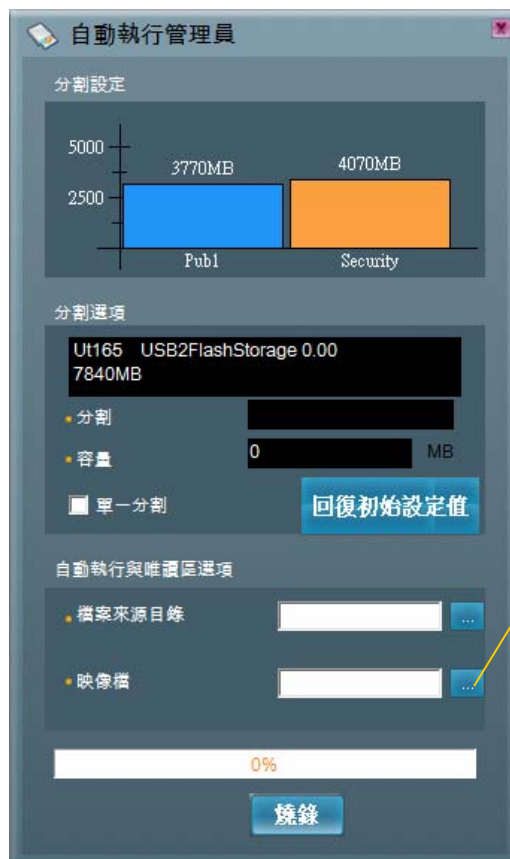


按下映像檔來源目錄的按鈕

 
- 按下映像檔的按鈕，出現瀏覽資料夾對話框。

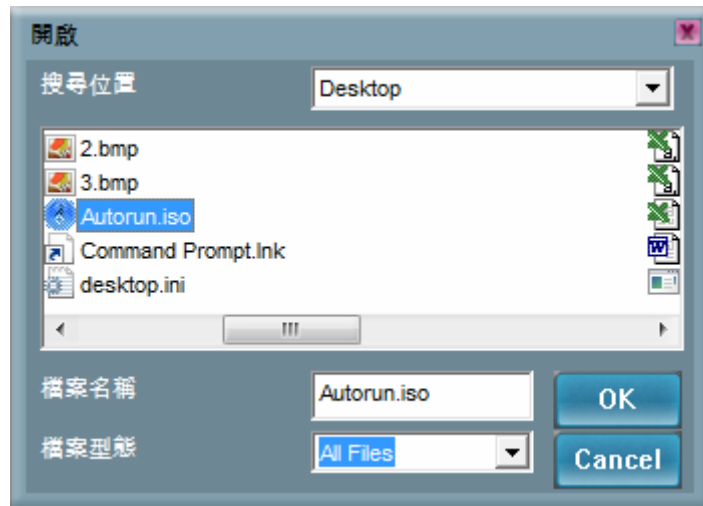


- 選擇 ISO File 的位置。

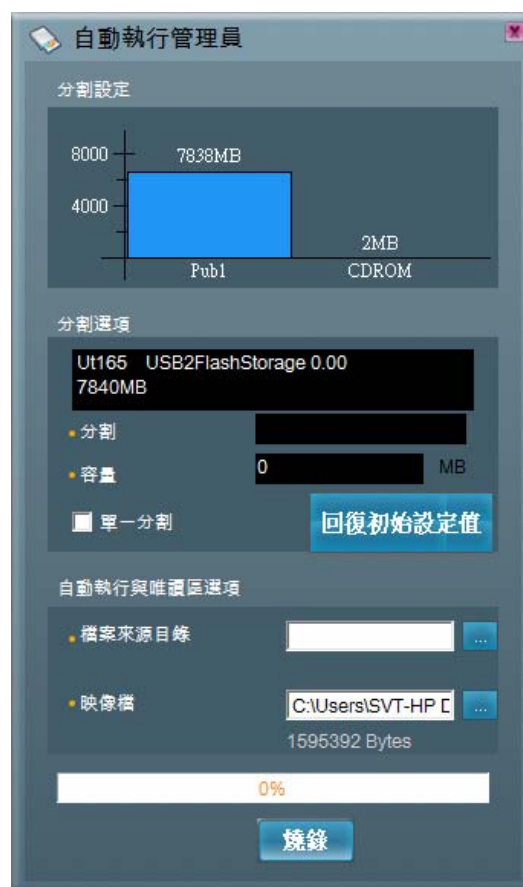 


- 按下燒錄。

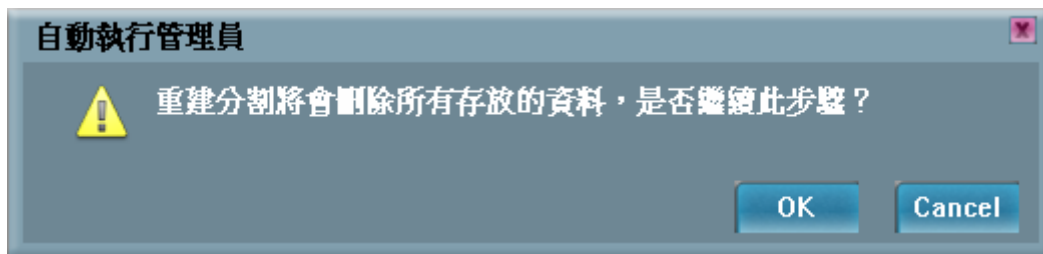 

- 出現警告訊息，重建分割前請先備份資料。
- 按下確定。

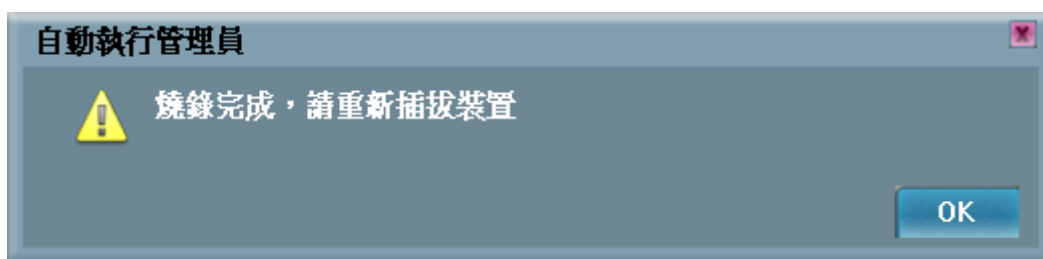 

- 出現燒錄完成後按下確定。

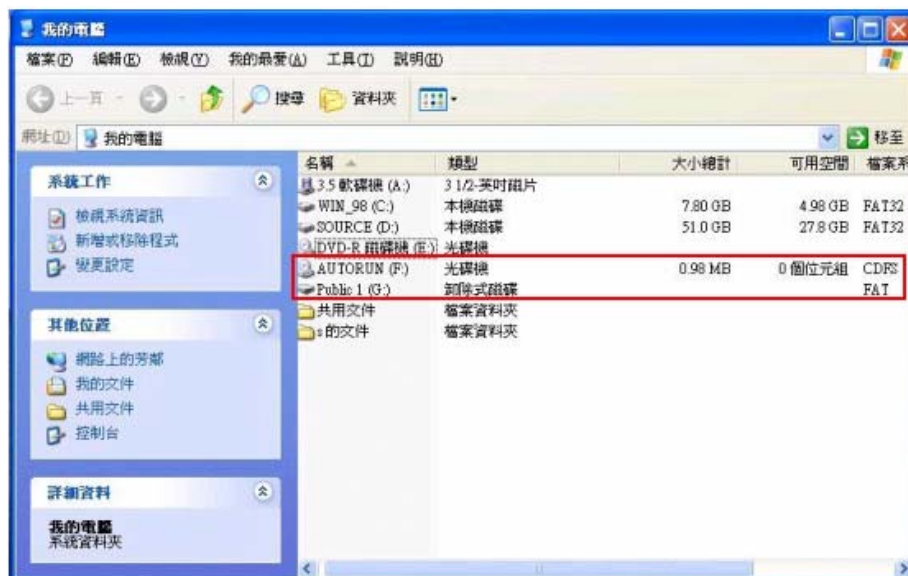 


- 重新插拔 UFD 後，會在我的電腦下，產生 1 個 "卸除式硬碟" 及 1 個可自動執行的虛擬光碟機。表示分割虛擬光碟機成功。

3.4.3 單一分割格式化

回復初始值，單一分割重新格式化。

 - 出現自動執行切換視窗。

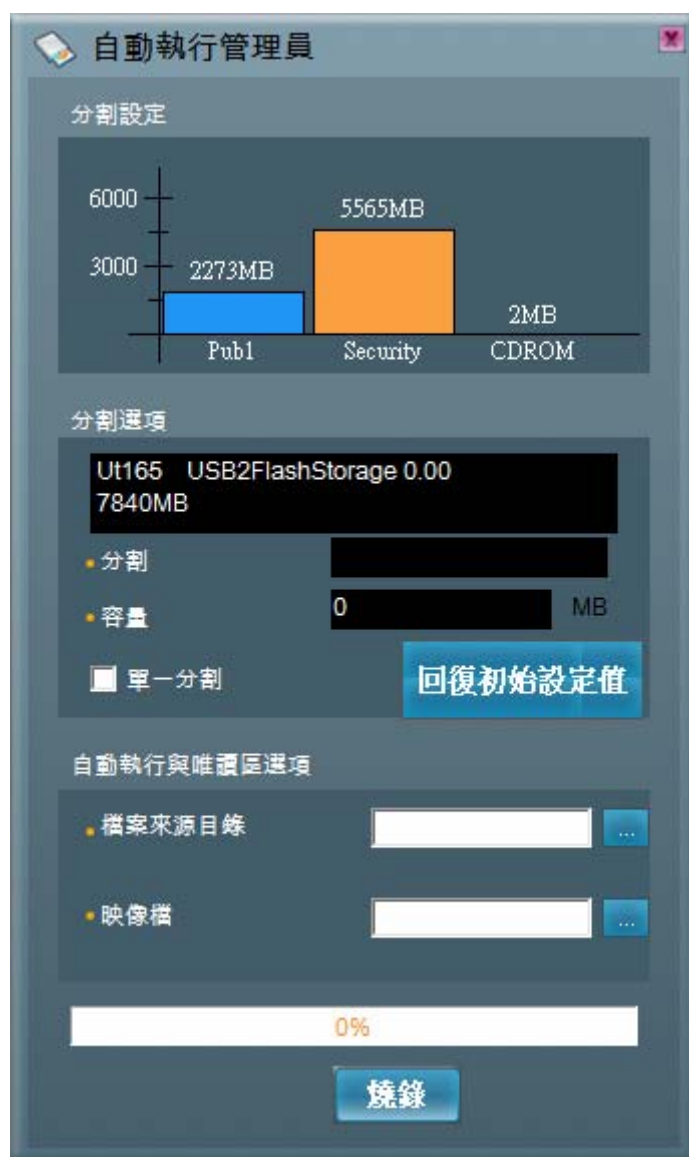


- 點選“單一分割”選項，出現自動執行切換單一分割視窗。




點選“單一分割”選項&“回復初始設定值”選項

 
- 按下燒錄後會出現警告訊息，重建分割前請先備份資料。
- 按下確定。

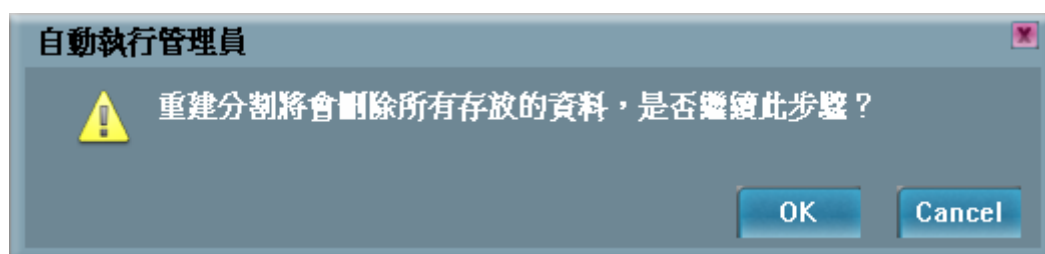

- 出現燒錄完成後按下確定。

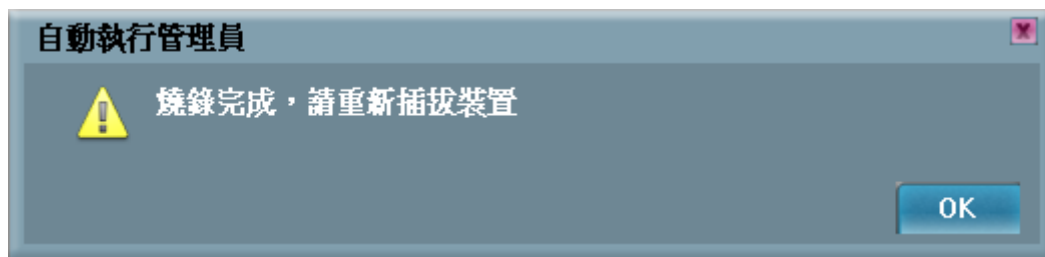 

 - 重新插拔 UFD 後，會在我的電腦下，產生 1 個 "卸除式硬碟"。表示切換單一分割成功。

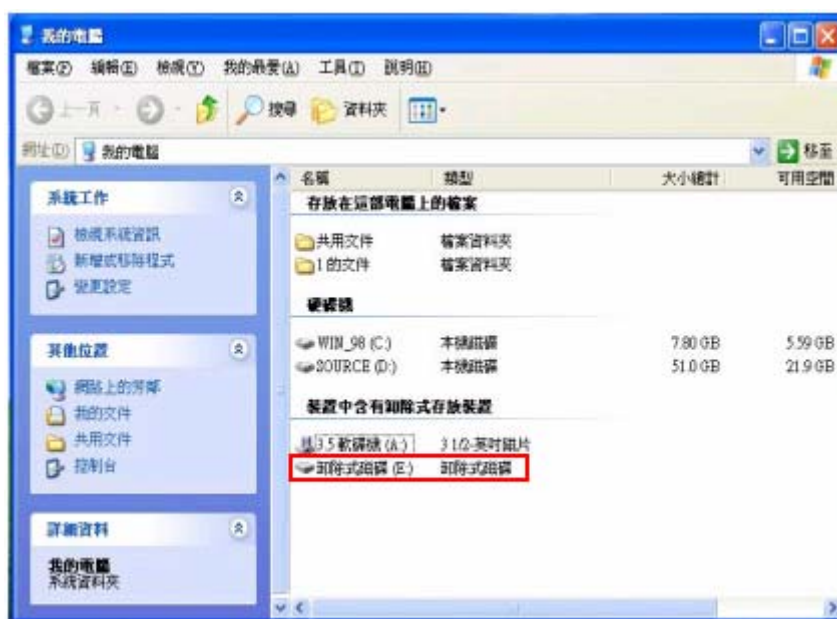


3.5 電子郵件管理員使用說明:

3.5.1 選擇設定


- 點選 UFD Utility 視窗，選取電子郵件管理員。



 - 出現電子郵件設定視窗訊息，按下是。

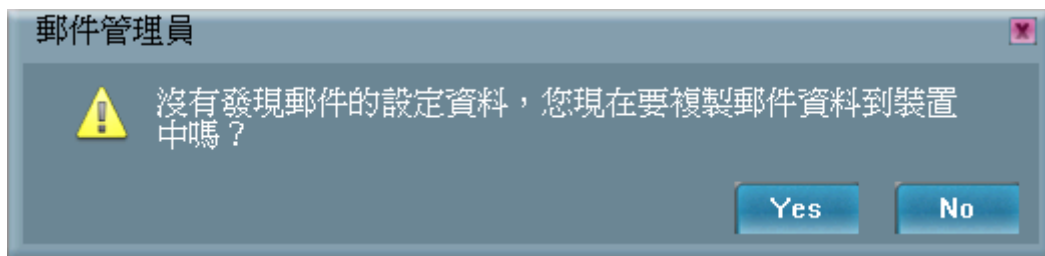

- 出現電子郵件欲複製的項目視窗。

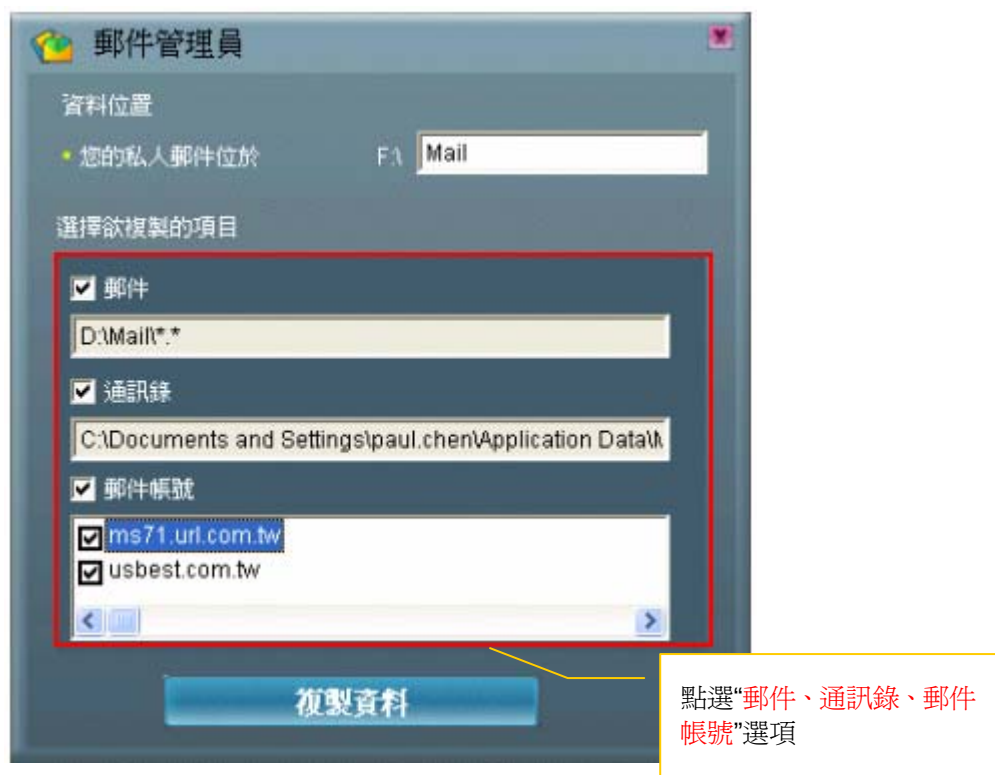 


- 可以選擇欲複製的項目 郵件、通訊錄、郵件帳號，複製到 UFD 的 Mail 資料夾裡。
- 按下複製資料。
- 複製郵件資料到 Mail 資料夾中。




- 資料複製完成，按下確定。



 
- 為確保資料正確寫入，請先結束 Outlook Express 按下確定後再移除裝置。

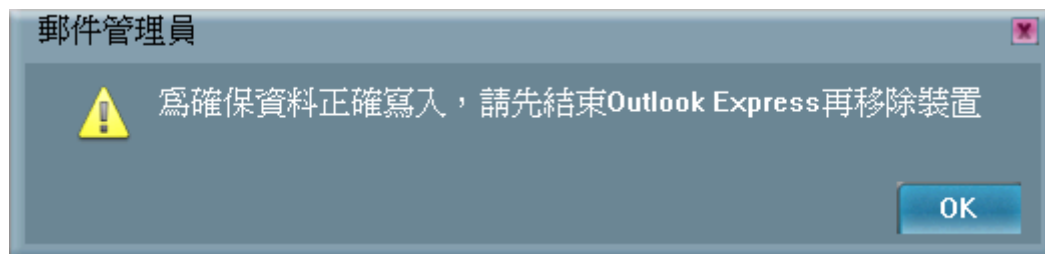

 
- 將 UFD 重新插入電腦後，會在 UFD 的目錄產生 1 個 Mail 資料夾。表示匯入成功。

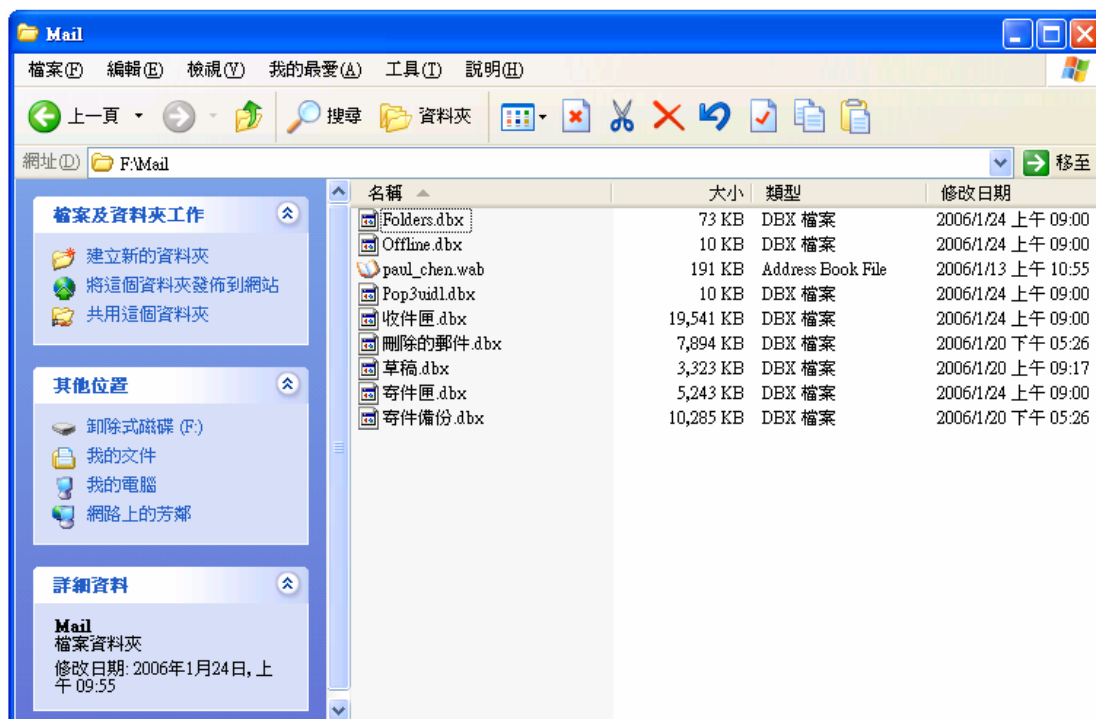


- 點選 UFD Utility 視窗，選取電子郵件管理員。

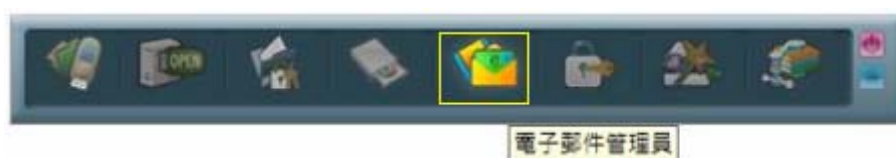 

 - 出現確保資料正確寫入，請先結束 Outlook Express 按下確定視窗訊息。

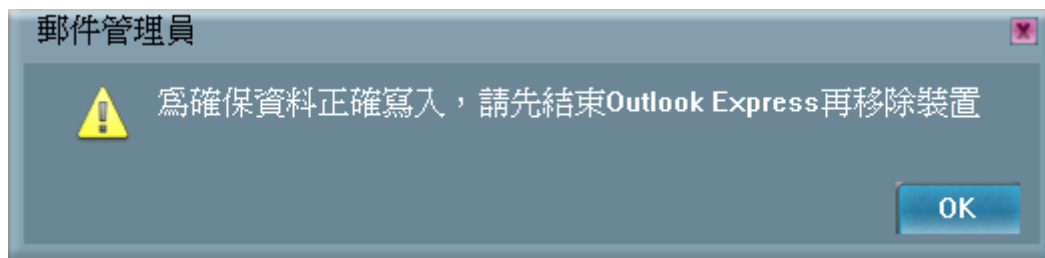

 - 出現 Outlook Express 登入密碼設定，請輸入你 e-mail 伺服器的帳號密碼。

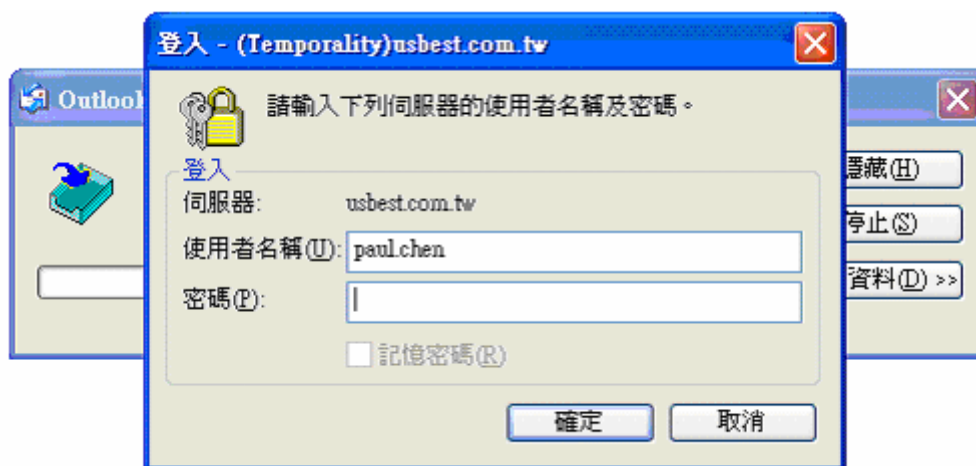

3.5.2 注意事項說明

 
- 這樣就可以對於 Windows 平台進行收發郵件，郵件資料隨身攜帶 UFD 資料夾中 (使用 UFD Utility 電子郵件管理員收發信件後僅存放至 UFD 的 Mail 資料夾，不會備份或存放到 Outlook Express 裡面)。
- 此功能不支援 Vista Windows Mail。

3.6 電腦鎖管理員使用說明:

- 點選 UFD Utility 視窗，選取電腦鎖管理員。



- 出現電腦鎖管理設定視窗。

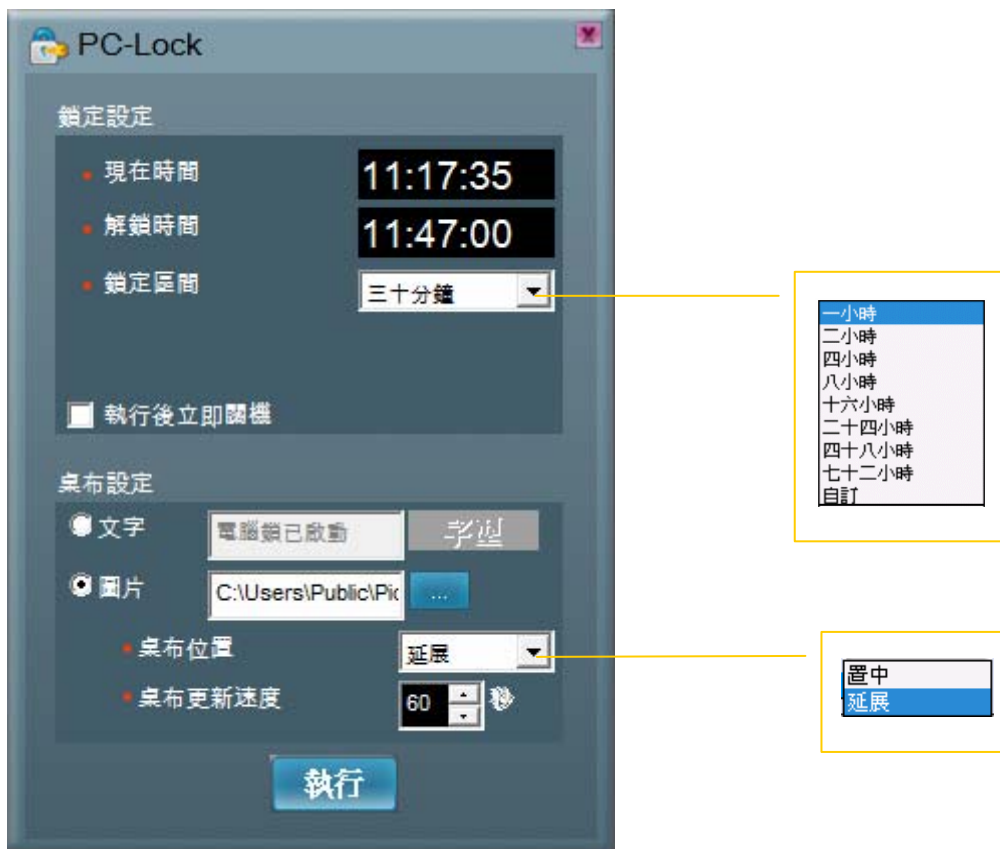

- 選擇你需要鎖定桌面的時間，電腦鎖管理員會依照你所設定的時間終止鎖定桌面。
- 可以選擇你設定完成後，立即關閉電腦 (重新開機後直接進入鎖定狀態)。
- 桌布畫面可以選擇文字顯示或圖片顯示。
- 圖片顯示須要指定圖片存放的資料夾，圖片檔案可為 JPG、GIF、BMP 三種格式。
- 桌布位置可以選擇 置中、延展。
- 可以自行設定圖片更新速度。
- 你設定完成後按下執行一旦移除 UFD，電腦就會立即鎖定桌面。

- 執行電腦鎖管理員後，取下 UFD 並妥善保存。
- 要解除電腦的上鎖狀態，必須將 UFD 重新插入電腦。螢幕上的鎖定將會自動消失，您就可以繼續使用電腦。
- 此功能不支援 Fixed Disk Type。

 
3.7 書籤管理員使用說明:

3.7.1 匯入我的最愛

- 點選 UFD Utility 視窗，選取書籤管理員。



- 出現書籤管理設定視窗。

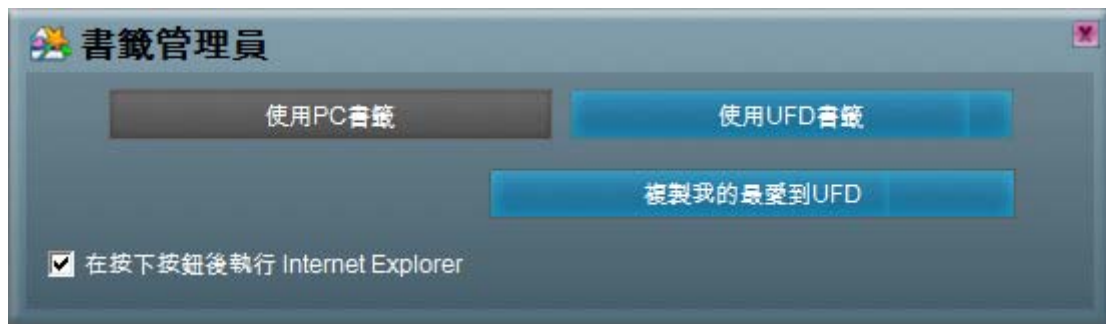

- 點選“複製我的最愛到 UFD”選項，可將 Internet Explorer 裡我的最愛書籤，複製到裝置中。
- 複製成功後，移除 UFD 裝置。
- 將UFD重新插入支援Internet Explorer的Windows平台後，會在UFD的目錄產生1個 Favorites 資料夾，表示匯入成功。

3.7.2 選取 PC 書籤或 UFD 書籤



- 點選 UFD Utility 視窗，選取書籤管理員。



- 出現書籤管理設定視窗，點選所要使用的書籤。
- 離開書籤管理設定視窗後，開啓 IE 將會載入 USER 所選的書籤。

3.7.3 使用 PC 書籤或使用 UFD 書籤



打開“在按下按鈕執行 Internet Explorer”選項

- 打開“在按下按鈕執行 Internet Explorer”選項。
- 可依照 USER 喜好，使用 PC 書籤或使用 UFD 書籤按鈕來瀏覽網頁。
- 移除 UFD 裝置前，必須回到書籤管理員裡面，按下使用 PC 書籤後才可以移除 UFD 裝置。

3.8 保密資料管理員使用說明:

- 點選 UFD Utility 視窗，選取壓縮管理員。



- 出現登入保密區視窗，輸入你設定的密碼。

 


3.8.1 登入保密區資料存取

- 登入後進入保密資料區，可以新增資料夾及拷貝資料。




- 或剪下或刪除資料。

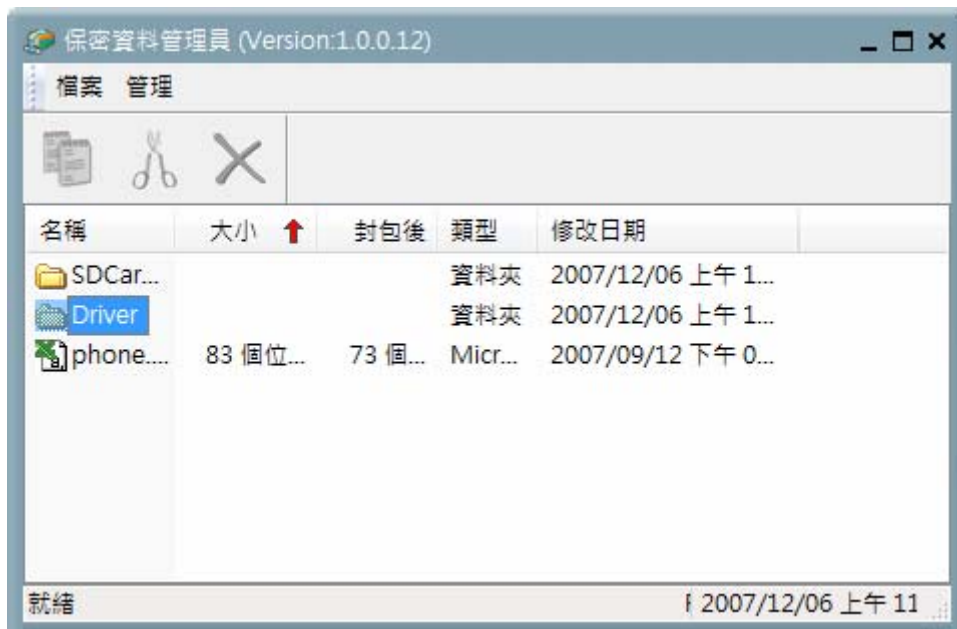

- 關閉視窗即可登出保密資料區，下次登入必須輸入密碼。

3.8.2 修改變更保密區密碼

 - 管理選項，可以登出及修改密碼。

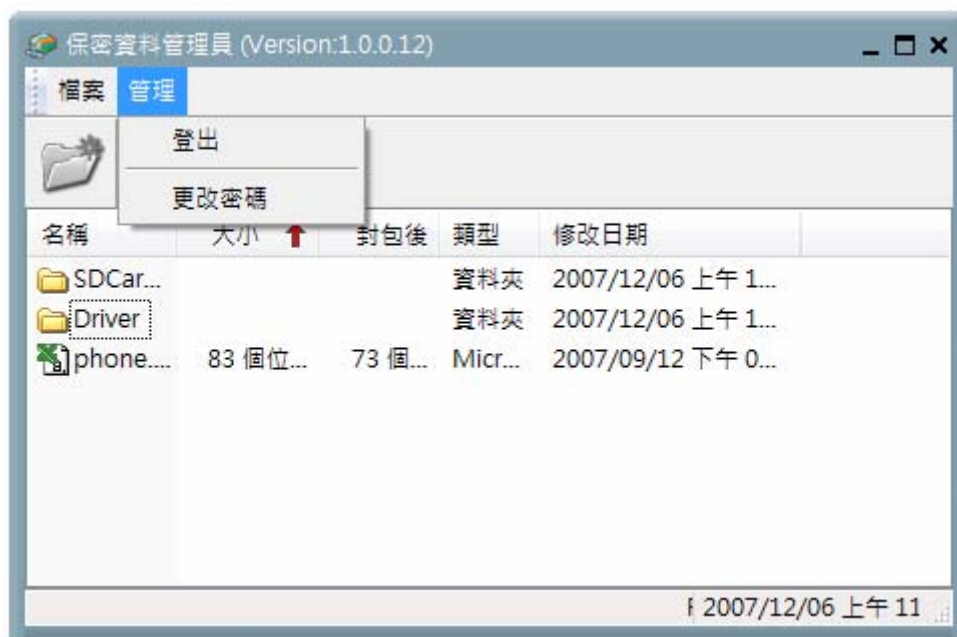

- 登出後回到公用區，可以看到 vfzip 資料夾內的一個檔名為 vfbest.vfo 檔案。此資料檔案為保密區資料的型態，必須要登入才可使用。(注意不要刪除，否則保密區資料會被破壞)

