Canon

Mac PS Driver Guide Mac PS Driver Ver. 1.60

Please read this guide before operating this equipment. ENG After you finish reading this guide, store it in a safe place for future reference.

Mac PS Driver Guide



Includes the available paper sizes list, glossary, and index.

Considerable effort has been made to ensure that this manual is free of inaccuracies and omissions. However, as we are constantly improving our products, if you need an exact specification, please contact Canon.

Contents

	Preface vii
	How to Use This Manual
	Symbols Used in This Manual vii
	Buttons Used in This Manual
	Displays Used in This Manual
	Abbreviations Used in This Manualviii
	Legal Noticesix
	Trademarksix
	Copyrightix
	Disclaimersix
Chapter 1	Before You Start
	Supported Canon Products
	System Requirements
	Where to Find Help
Chapter 2	Getting Started
	Installing the Software
	Installing the Printer Driver2-2
	Uninstalling the Printer Driver2-6
	Specifying the Printer Settings2-10
	Mac OS X 10.2.8 - 10.3.9
	Mac OS X 10.4 or later
	Setting Up the Printer Configuration
	Printing a Document
Chapter 3	Basic Print Options
	Specifying the Paper Orientation
	Scaling a Document
	Specifying the Paper Size
	Specifying the Paper Size in the Page Setup Pane
	Specifying the Paper Size in the Print dialog box (Mac OS X 10.4 or
	later)
	Specifying the Print Sets and Ranges
	Printing Multiple Pages on One Sheet

Two-Sided Printing
Specifying the Finishing Options3-15
Selecting a Finishing Option3-15
Stapling the Documents
Booklet Printing
Specifying the Paper Source
Selecting a Paper Source
Adding Front or Back Covers to the Document
Inserting Sheets into the Document
Inserting Tab Paper
Creating Tabs
Printing on Custom Paper3-33
Registering Custom Paper3-33
Mac OS X 10.2.8 - 10.3.9
Mac OS X 10.4 or later
Printing on Custom Paper
Printing a Document in Toner Save Mode

Chapter 4 Special Print Options

Mac OS X 10.2.8 - 10.3.9	
Mac OS X 10.4 or Later	
Saving a Document as a File (Mac OS X 10.2.8 - 10.3.9)	4-38
Specifying the Error Handling Method	
Using the PS Printmonitor	
Starting the PS Printmonitor	
File Menu	
Printer Menu	
PS Printmonitor Window	

Chapter 5 Troubleshooting

	oblems and Solutions	5-2
--	----------------------	-----

Chapter 6 Appendix

Available Paper Sizes List	6-2
Glossary	6-5
Index	6-6

Preface

Thank you for purchasing this Canon product. Please read this manual thoroughly before operating the product to familiarize yourself with its capabilities, and to make the most of its many functions. After reading this manual, store it in a safe place for future reference.

How to Use This Manual

Symbols Used in This Manual

The following symbols are used in this manual to explain procedures, restrictions, handling precautions, and instructions that should be observed for safety.

- IMPORTANT Indicates operational requirements and restrictions. Be sure to read these items carefully to operate the product correctly, and avoid damage to the product.
- NOTE Indicates a clarification of an operation, or contains additional explanations for a procedure. Reading these notes is highly recommended.

Buttons Used in This Manual

The following button names are a few examples of how buttons to be clicked are expressed in this manual:

Buttons on Computer Operation Screens: [Button Name]

Examples: [OK]

[Next]

Displays Used in This Manual

Screen shots of computer operation screens used in this manual may differ from the ones you actually see, depending on the operating system and the model or options that come with your machine.

The buttons which you should click are marked with a _____, as shown below.

When multiple buttons can be clicked, they are highlighted and mentioned in the order in which they should be clicked.

Printer:	Canon Printer	
Presets:	Standard	
	Special Features	
	Job Processing: Print Method of Notification: Display Dialog	
Printer Info	Job Accounting	 Click this button for operation

Abbreviations Used in This Manual

In this manual, product names and model names are abbreviated as follows:

Postscript® 3 emulation: PS

Apple Macintosh: Mac

Legal Notices

Trademarks

Canon, the Canon logo, imageRUNNER, and imagePRESS are trademarks of Canon Inc.

Adobe, PostScript, and PostScript 3 are trademarks of Adobe Systems Incorporated.

Apple, ColorSync, Mac OS, and Macintosh are trademarks of Apple Computer, Inc.

Other product and company names herein may be the trademarks of their respective owners.

Copyright

Copyright 2006 by Canon Inc. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage or retrieval system without the prior written permission of Canon Inc.

Disclaimers

The information in this document is subject to change without notice.

CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR AGAINST INFRINGEMENT OF ANY PATENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

Before You Start CHAPTER

This chapter describes the system environments required for using the PS printer driver. It also explains where to find help and information regarding the installation and use of this driver.

Supported Canon Products	. 1-2
System Requirements	. 1-4
Where to Find Help	. 1-5

Supported Canon Products

The PS printer driver version 1.60 is available for the following Canon Products. Refer to the following table to select the driver name that corresponds to your printer.

Printer Name	Driver Name
Color imageRUNNER C2620	iR C2620 CanonPS
Color imageRUNNER C2880/C2880G/ C2880i	iR C2880/C3380 CanonPS
Color imageRUNNER C3200	iR C3200 CanonPS
Color imageRUNNER C3220	iR C3220 CanonPS
Color imageRUNNER C3380/C3380G/ C3380i	iR C2880/3380 CanonPS
Color imageRUNNER C4080i	iR C4080/4580 CanonPS
Color imageRUNNER C4580i	iR C4080/4580 CanonPS
Color imageRUNNER C5180i	iR C5180 CanonPS
imageRUNNER C3100	iR C3100 CanonPS
imageRUNNER C3170i	iR C3170 CanonPS
imageRUNNER C3170U	iR C3170 CanonPS
imageRUNNER C5800	iR C5800 CanonPS
imageRUNNER C5870U	iR C5870 CanonPS
imageRUNNER C6800	iR C6800 CanonPS
imageRUNNER C6870U	iR C6870 CanonPS
imageRUNNER 105	iR105 CanonPS
imageRUNNER 105+	iR105PLUS CanonPS
imageRUNNER 2870/2270	iR2270/iR2870 CanonPS
imageRUNNER 3300/2800/2200	iR2200-3300 CanonPS
imageRUNNER 3300i	iR2200-3300 CanonPS
imageRUNNER 3320G	iR2220/iR3320 CanonPS
imageRUNNER 3320i/2220i	iR2220/iR3320 CanonPS
imageRUNNER 3320N/2220N	iR2220/iR3320 CanonPS

Printer Name	Driver Name
imageRUNNER 4570/3570	iR3570/iR4570 CanonPS
imageRUNNER 5000i	iR5000i-6000i CanonPS
imageRUNNER 5070	iR5070 CanonPS
imageRUNNER 6000/5000	iR5000-6000 CanonPS
imageRUNNER 6020/5020	iR5020/iR6020 CanonPS
imageRUNNER 6020i/5020i	iR5020/iR6020 CanonPS
imageRUNNER 6570/5570	iR5570/6570 CanonPS
imageRUNNER 7105/7095/7086	iR7086-7105 CanonPS
imageRUNNER 7200	iR7200 CanonPS
imageRUNNER 8070	iR8070 CanonPS
imageRUNNER 85	iR8500 CanonPS
imageRUNNER 8500	iR8500 CanonPS
imageRUNNER 85+	iR85PLUS CanonPS
imageRUNNER 9070	iR9070 CanonPS
imagePRESS C1	iPR C1 CanonPS

IMPORTANT

In this guide, these printer names are hereafter referred to as the following:

- Color imageRUNNER C2880/C2880G/C2880i, Color imageRUNNER C3380/C3380G/ C3380i: Color imageRUNNER C2880/C3380
- Color imageRUNNER C4080i, Color imageRUNNER C4580i: Color imageRUNNER C4080/C4580
- Color imageRUNNER C5180i: Color imageRUNNER C5180
- imageRUNNER C3170i, imageRUNNER C3170U: imageRUNNER C3170
- imageRUNNER C5870U: imageRUNNER C5870
- imageRUNNER C6870U: imageRUNNER C6870

System Requirements

The printer driver can be used in the following system environments:

■ Operating System Software

Mac OS X (version 10.2.8 or later)

■ Computer

Any computer which runs Mac OS X properly

Where to Find Help

Here is where to get immediate help if you are having problems installing or using the printer driver.

ReadMe.rtf file

Any hints, enhancements, limitations, and restrictions you need to be aware of when installing and using your printer driver are included in the ReadMe.rtf file provided with the driver. This ReadMe.rtf file is located in \PS\us_eng\MacOSX.

Online Help

You can locate additional help for questions you may have regarding your printer in the Online Help file provided with the driver software. In the [Page setup] dialog box or the [Print] dialog box, you can also click [??] to display additional information about every feature and option in the PS printer driver.

Canon Authorized Dealers or Service Providers

If the Online Help file does not provide the information you need, contact your local authorized Canon dealer or service provider.

2 CHAPTER

Getting Started

This chapter describes instructions for installing the PS printer driver, setting the system configuration, and printing a document.

Installing the Software	2-2
Installing the Printer Driver	.2-2
Uninstalling the Printer Driver	.2-6
Specifying the Printer Settings	2-10
Mac OS X 10.2.8 - 10.3.9	2-10
Mac OS X 10.4 or later	2-13
Setting Up the Printer Configuration 2	2-17
Printing a Document	2-19

Installing the Software

This section describes instructions for installing the printer driver and for uninstalling the printer driver.

Installing the Printer Driver

Before using the printer, you must install the PS printer driver for it.

- **1** Insert the Printer Driver Software CD-ROM into the CD-ROM drive.
- **2** Open the following folders: [PS] \rightarrow [us_eng] \rightarrow [MacOSX].
- **3** Double-click the [PS Installer] icon.



The [Authenticate] dialog is displayed.

4 Enter the administrator's name and password \rightarrow click [OK].



The installer starts.

NOTE

Depending on the system environment, the [Authenticate] dialog box may not be displayed. In that case, skip to step 5.

5 Read the software license agreement carefully \rightarrow click [Continue].



6 If you agree to the terms of the software license agreement, click [Agree].



7 Confirm that [Easy Install] is selected \rightarrow click [Install].



8 Click [Continue] in the message box to proceed.



Installation starts.



10 Click [Restart] when the confirmation message below appears.



The computer is restarted.

Installation is complete.

NOTE

- The printer utility software "PS Printmonitor" is installed simultaneously.
- For details about using PS Printmonitor, see "Using the PS Printmonitor," on p. 4-40.

Uninstalling the Printer Driver

It is recommended that you use the Installer to uninstall an unnecessary driver.

- **1** Quit all running application software.
- **2** Insert the Printer Driver Software CD-ROM into the CD-ROM drive.
- **3** Open the following folders: [PS] \rightarrow [us_eng] \rightarrow [MacOSX].
- **4** Double-click the [PS Installer] icon.



The [Authenticate] dialog box is displayed.

5 Enter the administrator's name and password \rightarrow click [OK].

		Authenticate
	PS Installe	r requires that you type your password.
	Name	edit
b. Dataile	Password	
P Details		
?		Cancel OK

The installer starts.

NOTE

Depending on the system environment, the [Authenticate] dialog box may not be displayed. In that case, skip to step 6.

6 Read the software license agreement carefully \rightarrow click [Continue].

	License
 License Installation Type Installing Finish Up 	SOFTWARE LICENSE AGREEMENT MPORTANT This is a legal agreement ("Agreement") between you and Canon Inc. ("Canon") and governing your use of Canon's software program named as "pstonctps." Such software program shall be referred to hereinafter as the "Software." READ CAREFULLY AND UNDERSTAND ALL OF THE RIGHTS AND RESTRICTIONS DESCRIBED IN THIS AGREEMENT BEFORE USING THE SOFTWARE. BY USING THE SOFTWARE AS DESCRIBED IN SECION 1 BELOW, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE FOLLOWING TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE THE SOFWARE AND PROMPTLY RETURN THE SAME TO THE PLACE WHERE YOU OBTAINED IT.

7 If you agree to the terms of the software license agreement, click [Agree].



8 Select [Uninstall] from the drop-down list \rightarrow click [Uninstall].

000	PS Installer
	Uninstall
 ⊖ License ⊖ Installation Type ● Uninstalling ● Finish Up 	Clicking the Uninstall button removes the following items: o PS Printer Driver o Printer driver utilities
	Disk space available: > 4GB Approximate disk space needed: 0K
	Go Back Uninstall

9 Click [Continue] in the message box to proceed.

No other applications can be running during this operation. Click Continue to automatically quit all other running applications. Click Cancel to leave your disks untouched.
Cancel

Uninstallation starts.

10 Click [Quit] when the confirmation message below appears.

000	PS Installer
	Finish Up
 ⊖ License ⊖ Installation Type ⊖ Uninstalling ● Finish Up 	The uninstall was successful.
	Installation powered by VISE X-

Uninstallation is complete.

Specifying the Printer Settings

After installing the printer driver, you need to specify the printer you want to use in the Printer Setup Utility in order to print a document.

NOTE

The Printer Setup Utility is called Print Center on Mac OS X 10.2.8.

Mac OS X 10.2.8 - 10.3.9

1 Select the hard disk drive you are using → click [Applications] → [Utilities] → double-click the [Printer Setup Utility] icon.

The [Printer List] dialog box is displayed.

2 Click the [Add] icon.



3 Select the printer connection type.

- If the printer is connected to a network using a TCP/IP protocol:
 - □ Select [Canon IP (PS)] \rightarrow proceed to step 4.



If the printer is connected to a Macintosh computer using a USB connection:

□ Select [USB] \rightarrow skip to step 5.

4 Enter your printer's IP address or DNS name in [Printer's Address] → skip to step 6.

Printer's Address:	172.23.2.70	
	Complete and valid address.	
Queue Name:		

5 Select the printer \rightarrow select [Canon] from [Printer Model] \rightarrow select the driver name from the model name list.

038	_		÷	
Product		Type		
iR C2620		Canon		
Printer Model: Canon				
Printer Model: Canon				A
Printer Model: Canon Model Name iR C2620 CanonPS				A
Printer Model: Canon Model Name IR C2620 CanonPS IR C3100 CanonPS				A
Printer Model: Canon Model Name IR C2620 CanonPS IR C3100 CanonPS IR C3170 CanonPS				-
Printer Model: Canon Model Name IR C2620 CanonPS IR C3100 CanonPS IR C32170 CanonPS IR C3200 CanonPS				_
Printer Model: Canon Model Name IR C2620 CanonPS IR C3100 CanonPS IR C3200 CanonPS IR C3200 CanonPS				A

- For the driver name corresponding to your printer, see "Supported Canon Products," on p. 1-2.
- If the driver name for your printer does not exist in the model name list, select [iR C3200 Canon PS] (for color printers) or [iR5000-6000 Canon PS] (for black-and-white printers).
- **6** Click [Add] in the [Printer List] dialog box.

7 Confirm that the printer has been added in the [Printer List] dialog box \rightarrow close the dialog box.

NOTE

- Confirm that the driver name corresponding to your printer is displayed under [Kind] in the [Printer List] dialog box.
- For the driver name corresponding to your printer, see "Supported Canon Products," on p. 1-2.
- If the driver name for your printer does not exist in the table on p. 1-2, either [iR C3200 Canon PS] (for color printers) or [iR5000-6000 Canon PS] (for black-and-white printers) will be displayed.

Mac OS X 10.4 or later

1 Select the hard disk drive you are using → click [Applications] → [Utilities] → double-click the [Printer Setup Utility] icon.

The [Printer List] dialog box is displayed.

2 Click the [Add] icon.



3 Select the printer connection type.

ault Browser IP Printer Protocol: Line Printer Daemon - LPD Address: Enter host name or IP address. Queue: Leave blank for default queue. Name: Location: Print Using: Please select a driver or printer model	00	Printer Browser	
Protocol: Line Printer Daemon – LPD Address: Enter host name or IP address. Queue: Leave blank for default queue. Name: Location: Print Using: Please select a driver or printer model	ault Browser	IP Printer Sea	irch
Protocol: Line Printer Daemon - LPD Address: Enter host name or IP address. Queue: Leave blank for default queue. Name: Location: Print Using: Please select a driver or printer model			
Address: Enter host name or IP address. Queue: Leave blank for default queue. Name: Location: Print Using: Please select a driver or printer model	Protocol:	Line Printer Daemon - LPD	;
Enter host name or IP address. Queue: Leave blank for default queue. Name: Location: Print Using: Please select a driver or printer model	Address:		•
Queue: Leave blank for default queue. Name: Location: Print Using: Please select a driver or printer model		Enter host name or IP address.	
Leave blank for default queue. Name: Location: Print Using: Please select a driver or printer model	Queue:		•
Name: Location: Print Using: Please select a driver or printer model		Leave blank for default queue.	
Location: Print Using: Please select a driver or printer model	Name:		
Print Using: Please select a driver or printer model	Location:		
	Print Using:	Please select a driver or printer model	\$
?) More Printers Add	?	More Printers	Add

• If the printer is connected to a network using a TCP/IP protocol:

□ Select [More Printers] \rightarrow select [Canon IP (PS)] \rightarrow proceed to step 4.

• If the printer is connected to a Macintosh computer using a USB connection:

□ Select [Default Browser] \rightarrow skip to step 5.

4 Enter your printer's IP address or DNS name in [Printer's Address] → skip to step 6.

Printer's Address:	172.23.2.70
	Complete and valid address.
Queue Name:	

5 Select the printer \rightarrow select [Canon] from [Printer Using] \rightarrow select the driver name from the model name list.

9	<u>a</u>	Q	
fault Browser	IP Printer	Search	
IR C3220		Connection	
IN COLLO		000	
Name:	IR C3220		
Location:	localhost		1
Print Using	Canon		h
Print Using	Canon		Ų
(Model	A.	_]
	IR C5870 CarlonPS		
	iR C6870 CanonPS		
	iR105 CanonPS		
	iR105PLUS CanonPS		J
	iR2200-3300 CanonPS		6
	incess-5500 canones		1
	iP2220/iP3320 CanonPS		_
	iR2220/iR3320 CanonPS		<u>- J</u>
	iR2220/iR3320 CanonPS		-

Select a printer that has [USB] displayed in its [Connection] column.

- For the driver name corresponding to your printer, see "Supported Canon Products," on p. 1-2.
- If the driver name for your printer does not exist in the model name list, select [iR C3200 Canon PS] (for color printers) or [iR5000-6000 Canon PS] (for black-and-white printers).

6 Click [Add] in the [Printer List] dialog box.

7 Confirm that the printer has been added in the [Printer List] dialog box \rightarrow close the dialog box.

Ø NOTE

- Confirm that the driver name corresponding to your printer is displayed under [Kind] in the [Printer List] dialog box.
- For the driver name corresponding to your printer, see "Supported Canon Products," on p. 1-2.
- If the driver name for your printer does not exist in the table on p. 1-2, either [iR C3200 Canon PS] (for color printers) or [iR5000-6000 Canon PS] (for black-and-white printers) will be displayed.

Setting Up the Printer Configuration

Before printing a document, you need to set up the printer configuration in order to use the functions of an optional unit attached to the printer.

You can also check the following printer information: the name of the printer model, installed options, and paper source status (including the amount of paper remaining in the paper source).

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select a pane:

Select one of the following panes:

- [Finishing] preferences pane
- [Paper Source] preferences pane
- [Quality] preferences pane
- [Special Features] preferences pane

3 Click [Printer Info].

-	
Presets:	Standard
	Finishing
	Print Style:
	1-sided Printing
	Booklet
	Binding Location:
	Long Edge (Left) 🛟 Gutter
	Finishing:
	Offset
	Number of Copies for Offset:
C Davies Deview	1 (1 to 9999)
Device Preview	Paper Output: Auto
Printer Info	
	Finishing Details

The [Printer Info] dialog box is displayed.

4 Check the printer information \rightarrow click [OK].


2

Getting Started

Printing a Document

This section describes how to print a document from application software. Note that the printing procedure may differ depending on the application software. For details, see the instruction manuals provided with the application software.

- 1 Start the application software \rightarrow display the document you want to print. 2 From the [File] menu, select [Page Setup]. The [Page Setup] dialog box is displayed. 3 Select [Page Attributes] from [Settings]. The [Page Attributes] preferences pane is displayed. Settings: Page Attributes + + Format for: Canon Printer iR7200 CanonPS Paper Size: Letter + 21.59 cm x 27.94 cm Orientation: Scale: 100 % ? Cancel OK 4 Select the printer to use from [Format for].
- **5** Specify the paper size, scale, and paper orientation.
- **6** Click [OK] in the [Page Setup] dialog box.

7 From the [File] menu, select [Print].

The [Print] dialog box is displayed.

8 Verify or select the printer name from [Printer].

Presets:	Standard		÷		
	Copies &	& Pages	2		\$
Copies:	1		ollated		
Pages:	• All				
	O From:	1	to:	1	

9 Specify pages to print, number of copies, etc. → click [Print] in the [Print] dialog box.

Printing starts.

NOTE

- If you canceled printing before job completion, make sure you reset the printer settings.
- There are additional features available using the other panes. See Chapter 3, "Basic Print Options," Chapter 4, "Special Print Options," or the Online Help.

3 CHAPTER

Basic Print Options

This chapter describes instructions for specifying the various basic settings for printing a document.

Specifying the Paper Orientation
Scaling a Document
Specifying the Paper Size 3 Specifying the Paper Size in the Page Setup Pane 3 Specifying the Paper Size in the Print dialog box (Mac OS X 10.4 or later) 3
Specifying the Print Sets and Ranges
Printing Multiple Pages on One Sheet
Two-Sided Printing
Specifying the Finishing Options .3-1 Selecting a Finishing Option .3-1 Stapling the Documents .3-1 Booklet Printing .3-1
Specifying the Paper Source 3-2 Selecting a Paper Source 3-2 Adding Front or Back Covers to the Document 3-2 Inserting Sheets into the Document 3-2 Inserting Tab Paper 3-2 Creating Tabs 3-3
Printing on Custom Paper
Printing a Document in Toner Save Mode

Specifying the Paper Orientation

You can specify the paper orientation.

1 From the [File] menu of the application software, select [Page Setup].

The [Page Setup] dialog box is displayed.

2 Select [Page Attributes] from [Settings].

The [Page Attributes] preferences pane is displayed.

3 Select the paper orientation from [Orientation].

Settings:	Page Attributes	÷
Format for:	Canon Printer	•
Paper Size:	Letter	\$
Orientation:	21.59 cm x 27.94 cm	
Scale:	100 %	
	(7)	

4 Click [OK].

Scaling a Document

You can enlarge or reduce the size of the printed document.

1 From the [File] menu of the application software, select [Page Setup].

The [Page Setup] dialog box is displayed.

2 Select [Page Attributes] from [Settings].

The [Page Attributes] preferences pane is displayed.

3 Specify the zoom ratio for [Scale].

Settings:	Page Attributes
Format for:	Canon Printer
Paper Size:	Letter
Orientation:	
Scale	100 %
?	Cancel OK

4 Click [OK].

Specifying the Paper Size

The paper size set in application software is the one usually used for the print output. However, you can print on a paper size different from the size set in the application software. In this case, the scaling is automatically set to fit onto the selected paper.

Specifying the Paper Size in the Page Setup Pane

1 From the [File] menu of the application software, select [Page Setup].

The [Page Setup] dialog box is displayed.

2 Select [Page Attributes] from [Settings].

The [Page Attributes] preferences pane is displayed.

3 Specify the paper size to be printed on from [Paper Size].

	Letter	
	11x17	
Settings	Legal	
	Executive	1
Format for	Statement	
i ormat iti	A5	-
	B5	
Paper Siz	√ A4	
	B4	1
	A3	
Orientatio	Oficio	
	Argentina Oficio	
Sca	Ecuador Oficio	
	Mexico Oficio	
	Argentina Letter	_
0	Government Letter	
(?)	Government Legal	OK
	Korea Legal	
	Foolscap	
	Australia Foolscap	
	Folio	
	Custom Paper 1	
	Manage Custom Sizes	

Paper sizes that can be selected differ depending on the printer model you are using. For details, see "Available Paper Sizes List," on p. 6-2.

4 Click [OK].

Specifying the Paper Size in the Print dialog box (Mac OS X 10.4 or later)

If you are using Mac OS X 10.4 or later, you can also specify the paper size in the print dialog box.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Paper Handling] preferences pane.

The [Paper Handling] preferences pane is displayed.

3 Select [Scale to fit paper size] \rightarrow select the paper size to be printed on.



NOTE

If you do not want the document to be enlarged, select [Scale down only].

4 Click [Print] in the [Print] dialog box.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Confirm that the [Copies & Pages] preferences pane is displayed → specify [Copies] and [Pages].

Printer:	Canon Printer	•
Presets:	Copies & Pages	
Copies:	1 Collated	
Pages:	All From: 1 to: 1	

If you want to print only a part of the document, enter the first and last page numbers.

NOTE

For additional information, see the Online Help.

3 If you are printing more than two copy sets and want them to be collated, select [Collated].

Printer:	Canon Printer		•	
Presets:	Standard		\$	
	Copies & Pages	2	\$	
Copies:	1 🗹 C	ollated		
Pages:	• All			
	O From: 1	to: 1		
	ulaw)		Cancal	Drie

Ø NOTE

For example, if you are printing two sets of a three page document and [Collated] is selected, printed pages are output in page order "1, 2, 3, 1, 2, 3." When [Collated] is not selected, printed pages are output in page order "1, 1, 2, 2, 3, 3."

4 Click [Print] in the [Print] dialog box.

Printing Multiple Pages on One Sheet

Multiple pages of the original can be printed on one sheet of paper by reducing the print size.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Layout] preferences pane.

The [Layout] preferences pane is displayed.

3 Select the number of pages you want to print onto one sheet of paper from [Pages per Sheet].



4 Select the page layout direction from [Layout Direction].



5 To add a border, select the line type from [Border].

Presets:	Standard	\$
	Layout	;
	Pages per Sheet: (2
12	Layout Direction Border Two-Sided	None ✓ Single Hairline Single Thin Line Double Hairline Double Thin Line

6 Click [Print] in the [Print] dialog box.

Two-Sided Printing

You can print on both sides of the paper.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

	Print Style:
	1-sided Printing
	Binding Location:
	Long Edge (Left)
	Finishing:
	Staple: Upper Left (Single)
	☑ Offset
	Paper Output: Auto
Printer Info	

2 Select the [Finishing] preferences pane.

The [Finishing] preferences pane is displayed.

3 Select [2-sided Printing] from [Print Style].

Procets	Standard	
Tresets.		
	Finishing	
	Drink Studey	
	Print Style:	
	2-sided Printing	
	omaing cocation.	
	Long Edge (Left)	
	Finishing:	
	Staple: Upper Left (Single)	1 A
	✓ Offset	
	Paper Output: Auto	
Printer Info	\supset	

4 Select the binding location from [Binding Location].

	Finishing	
	Print Style:	
	1-sided Printing	\$
	Binding Location:	
	Long Edge (Left) Gutte	r)
	Finishing:	
	Staple: Upper Left (Single)	* *
	☑ Offset	
	Paper Output: Auto	\$
Printer Info		

NOTE

You can set the binding location in one of the following positions: top, bottom, left, or right. When you set [Binding Location], a preview screen shows the binding location.

5 Click [Gutter].

Printer:	Canon Printer	
Presets:	Standard 🛟	
	Finishing	
	Print Style:	
	1-sided Printing	
	Binding Location:	
	Long Edge (Left)	
	Finishing:	
	Staple: Upper Left (Single)	
	Offset	
	raper output. Auto	
Printer Info		
<u>4</u>		
	view Cancel Print	

The [Gutter] dialog box is displayed.

6 Specify the gutter width \rightarrow click [OK].



Ø NOTE

Depending on the printer model you use, you can specify the gutter width between 0.0 to 1.2 inches or between 0.0 to 2.0 inches.



Specifying the Finishing Options

This section describes how to select a finishing option and how to use Booklet Printing.

Selecting a Finishing Option

You can specify the finishing options (Offset, Staple, etc.).

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

Printer: Canon Printer + Standard + Presets: + Finishing Print Style: 1-sided Printing + Booklet. Binding Location: Long Edge (Left) 4 Gutter... Finishing: Offset Number of Copies for Offset (1 to 9999) 1 **Device Preview** Paper Output: Auto + Printer Info Finishing Details... Print PDF V) (Preview) Standard Cancel

2 Select the [Finishing] preferences pane.

The [Finishing] preferences pane is displayed.

3 Select the finishing options (Offset, Staple, etc.).

Printer:	Canon Printer	
Presets:	Standard 🛟	
	Finishing 🗧	
	Print Style:	
	1-sided Printing	;
	Saddle Stitch	
	Binding Location:	C
	Long Edge (Left)	utter)
	Finishing:	
	Staple: Upper Left (Single)	× v
	🗹 Offset 📃 Hole Pur	ich
Printer Info	Paper Output: Auto	÷
Printer into		
	Einiching	Datails
	Finishing	Detalls

4 Click [Print] in the [Print] dialog box.

NOTE

You can also specify the following items in the [Finishing] preferences pane. The available items differ depending on the printer model and optional units you are using.

- [Staple] : Staples copies of the document.
- [Offset] : Outputs printouts while offsetting each set.
- [Rotate] : Rotates printouts, at a 90 degree angle for each set.
- [Hole Punch] : Punches holes on output paper.
- [Z-fold] : Zigzag folding of the output paper.
- [Number of Copies Outputs printouts while offsetting each specified number of sets.

Stapling the Documents

You can staple the output documents.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Finishing] preferences pane.

The [Finishing] preferences pane is displayed.

3 Select [Staple] \rightarrow specify the staple position.

Prints Info	Print Style: 1-sided Printing	
Print Style: 1-sided Printing Binding Location: Long Edge (Left) Gutter Finishing: Staple: Offset Paper Output Printer Info Printer Info	Print Style: 1-sided Printing	
1-sided Printing Binding Location: Long Edge (Left) Comparison Visit Staple: Offset Paper Output Visit (Single) Lower Right (Single) Lower Right (Single) Lower Right (Single) Right (Double) Top (Double) Bottom (Double)	1-sided Printing	
Binding Location: Long Edge (Left) Gutter Finishino: ✓ Upper Left (Single) ✓ Staple: Offset Paper Output Upper Right (Single) Lower Right (Single) Lower Right (Single) Lower Right (Single) Lower Right (Single) Right (Double) Top (Double) Bottom (Double) Bottom (Double)		\$
Binding Location: Long Edge (Left) Cutter Finishino: Staple: Upper Left (Single) Offset Paper Output Printer Info		
Long Edge (Left) Gutter Finishino: Staple: Ø Staple: Upper Left (Single) Offset Lower Left (Single) Paper Output Left (Double) Printer Info Lower Right (Single) Right (Double) Top (Double) Bottom (Double) Bottom (Double)	Binding Location:	
Finishing: Staple: ✓ Upper Left (Single) Offset Lower Left (Single) Paper Output Left (Double) Printer Info Lower Right (Single) Right (Double) Top (Double) Bottom (Double) Bottom (Double)	Long Edge (Left)	er)
Printer Info ✓ Staple: ✓ Upper Left (Single) Lower Left (Single) Left (Double) Upper Right (Single) Lower Right (Single) Right (Double) Right (Double) Top (Double) Bottom (Double)	Finishing	
Printer Info Paper Output Upper Right (Single) Lower Right (Single) Right (Double) Top (Double) Bottom (Double)	✓ Staple: ✓ Upper Left (Single) Offset Lower Left (Single) Left (Double)	
Top (Double) Bottom (Double)	Paper Output Upper Right (Single Lower Right (Single Right (Double))
	Top (Double) Bottom (Double)	

4 Click [Print] in the [Print] dialog box.

NOTE

- You cannot use this option when [Offset] or [Rotate] is selected in the [Finishing] preferences pane, or [Collated] is not selected in the [Copies & Pages] preferences pane.
- You cannot staple a single page document.

Booklet Printing

This option enables you to print two pages of the original on each side of a sheet, then fold them in half, so that the printouts are made into a booklet.

For example, if you print a 12 page document using the Booklet Printing option, original pages are printed on both sides of the sheet, then the resulting three sheets are printed out. With the Booklet Printing option, the pages are sorted and printed so that they are laid out in the correct order after outputting and folding.

🧷 NOTE

This option is not available for the Color imageRUNNER C2620, Color imageRUNNER C3200, Color imageRUNNER C3220, imageRUNNER C3100, imageRUNNER C5800, and imageRUNNER C6800.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Finishing] preferences pane.

The [Finishing] preferences pane is displayed.

3 Select [Booklet Printing] from [Print Style].

Printer:	Canon Printer	•
Presets:	Standard	•
	Finishing	;
	1-sided Printing	
	✓ Booklet Printing]9
	Paper Output: Auto	•
Printer Info		ar set

4 Specify detailed options for booklet printing.

NOTE

You can specify the following options for booklet printing. The available options differ depending on the printer model and optional units you are using.

- [Booklet] opens a dialog box to specify detailed settings for booklet printing such as displacement correction.
- [Saddle Stitch] applies saddle stitching.

5 Click [Print] in the [Print] dialog box.

Specifying the Paper Source

You can specify the paper source for printing a document. If you do not specify the paper source, an appropriate paper source is selected automatically.

Selecting a Paper Source

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Paper Source] preferences pane.

	Select by:	Paper Source	+
	Paper Source:	Auto	\$
	Inserting S	heet Inserting Sheet Setting:	i)
]		Front/Back Cover Setting	gs)
Printer Info			

The [Paper Source] preferences pane is displayed.

+ Printer: Canon Printer Presets: Standard + + Paper Source + Select by: Paper Source ✓ Auto 4 Paper Source Drawer 1 Drawer 2 Inserting Drawer 3 Drawer 4 Stack Bypass Front/Back Cover Settings... Printer Info Print ? PDF V Preview Cancel

- **4** Select the paper source location from [Paper Source] or the type of paper from [Paper Type].
- **5** Click [Print] in the [Print] dialog box.

3 Select [Paper Source] or [Paper Type] from [Select by].

Adding Front or Back Covers to the Document

You can add front and back covers to documents when printing. Also, you can specify separately on which side of the front or back cover to print.

NOTE

Depending on the controller version of the printer you use, this option may not be available.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Paper Source] preferences pane.

The [Paper Source] preferences pane is displayed.

3 Select the paper source for body pages of the document from [Paper Source].

4 Click [Front/Back Cover Settings].

	Paper Source	;	
	Select by:	Paper Source	+
S. F.	Paper Source:	Auto	\$
	Inserting SH	neet Inserting Sheet Setti Front/Back Cover Set	tings
Printer Info			

The [Front/Back Cover Settings] dialog box is displayed.

5 Select [Set Front Cover] and [Set Back Cover] to add front and back covers.

Set Front Cover		
Print on:	None	-
Paper Source:	Drawer 1	
Set Back Cover		
Print on:	None	
Paper Source:	Drawer 1	

You can select either or both.

6 Select the side of the paper to print on from [Print on].

- 7 Select the paper source for front and back covers from [Paper Source].
- 8 Click [OK] in the [Front/Back Cover Settings] dialog box.
- **9** Click [Print] in the [Print] dialog box.

Inserting Sheets into the Document

You can insert blank sheets into documents for clearer distinction among sections, or insert sheets to use as chapter divider pages, which are useful to separate the document into chapters. You can also print on the inserted sheets.

NOTE

Depending on the controller version of the printer you use, this option may not be available.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Paper Source] preferences pane.

The [Paper Source] preferences pane is displayed.

3 Select the paper source for body pages of the document from [Paper Source].

4 Select [Inserting Sheet] \rightarrow click [Inserting Sheet Settings].

	Standard	•	
	Paper Source	•	
	Select by:	Paper Source	+
	Paper Source:	Auto	\$
Driator lafo		Front/Back Cover Set	tings)

The [Inserting Sheet Settings] dialog box is displayed.

5 Select either [Inserted Sheet] or [Chapter Pages] from [Sheet for Insertion] to specify the type of inserted sheet.

Sheet for Insertion:	Inserted She	et 🛟	
Print on:	None	•	
Paper Source:	Drawer 1	•	
Insertion Positions:	1st	In Front of Page	0
	2nd	In Front of Page	0
	3rd	In Front of Page	0
	4th	In Front of Page	0
	5th	In Front of Page	0
	6th	In Front of Page	0 1
	1st	➡ In Front of Page	0
		(Done
Unit:	() Millimeter		
	() Inch		
Shifting Width:	0.50 🗘 in	(0.00 to 1.00)	

6 Select the side of paper to print on from [Print on].

NOTE

Chapter pages can be printed only on the front side of the page. Blank sheets cannot be inserted as chapter pages.

7 Select the paper source for inserted sheets or chapter pages from [Paper Source].

8 Select [1st] from [Insertion Positions] → specify the page number to determine where the first inserted sheet or chapter page is to be placed in the document → click [Done].

9 In the same way, specify the settings for subsequent inserted sheets or chapter pages.

NOTE

- If the sequence number of the inserted sheets or chapter pages differs from that of the insertion positions, an ascending sequence is applied after clicking [Done].
- The available range for the insertion position is from pages 2 to 999.

10 Click [OK] in the [Inserting Sheet Settings] dialog box.

11 Click [Print] in the [Print] dialog box.

Inserting Tab Paper

You can insert tab paper into a document.

Ø NOTE

This option is available for the Color imageRUNNER C2620, Color imageRUNNER C2880/C3380, Color imageRUNNER C3200, Color imageRUNNER C3220, Color imageRUNNER C4080/C4580, Color imageRUNNER C5180, imageRUNNER C5870, imageRUNNER C5870, imageRUNNER C6800, imageRUNNER C6870, imageRUNNER 105, imageRUNNER 105+, imageRUNNER 5070, imageRUNNER 6570/5570, imageRUNNER 7105/7095/7086, imageRUNNER 7200, imageRUNNER 8070, imageRUNNER 85, imageRUNNER 85+, imageRUNNER 8500, imageRUNNER 9070, and imagePRESS C1, depending on the controller version of the printer you use.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Paper Source] preferences pane.

The [Paper Source] preferences pane is displayed.

3 Select the paper source for body pages of the document from [Paper Source].

4 Select [Inserting Sheet] \rightarrow click [Inserting Sheet Settings].

Standard	•	
Paper Source	÷)—	
Select by:	Paper Source	;
Paper Source:	Auto	\$
	Front/Back Cover Set	ttings)
\supset		
	Standard Paper Source Select by: Paper Source: Inserting Si	Standard : Paper Source : - Select by: Paper Source Paper Source: Auto Inserting Sheet Inserting Sheet Sett Front/Back Cover Set

The [Inserting Sheet Settings] dialog box is displayed.

5 Select [Tab Paper] from [Sheet for Insertion].

Sheet for Insertion:	Tab Paper	•		
Print on:	Only Front S	ide 🛊		
Paper Source:	Drawer 3	\$		
Insertion Positions:	1st	Insert as Page	0	
	2nd	Insert as Page	0	ų
	3rd	Insert as Page	0	
	4th	Insert as Page	0	
	5th	Insert as Page	0	1
	бth	Insert as Page	0	4
	lst	➡ Insert as Page	0	
			Dor	ne
Unit:	O Millimeter			
	Inch			
Shifting Width:	0.50 ‡ ir	(0.00 to 1.00)		



If you are using the imageRUNNER C5800, imageRUNNER C5870, imageRUNNER C6800, imageRUNNER C6870, or imagePRESS C1, you can select the type of tab paper from [Sheet for Insertion].

- **6** Select the paper source for tab paper from [Paper Source].
- 7 Select [1st] from [Insertion Positions] → specify the page number to determine where the first tab paper sheet is to be placed in the document → click [Done].
- 8 In the same way, specify the settings for subsequent tab paper sheets.

NOTE

- If the sequence number of the tab paper differs from that of the insertion positions, an ascending sequence is applied after clicking [Done].
- The available range for the insertion position is from pages 1 to 999.

9 Specify the width to shift the image to be printed on the tab part of the paper in [Shifting Width].

NOTE 🖉

You can change the unit of measurement by clicking [Millimeter] or [Inch].

10 Click [OK] in the [Inserting Sheet Settings] dialog box.

11 Click [Print] in the [Print] dialog box.

You can print on the tab part of tab paper.

NOTE

This option is available for the Color imageRUNNER C2620, Color imageRUNNER C2880/C3380, Color imageRUNNER C3200, Color imageRUNNER C3220, Color imageRUNNER C4080/C4580, Color imageRUNNER C5180, imageRUNNER C5870, imageRUNNER C6800, imageRUNNER C6870, imageRUNNER 105, imageRUNNER 105+, imageRUNNER 5070, imageRUNNER 6570/5570, imageRUNNER 7105/7095/7086, imageRUNNER 7200, imageRUNNER 8070, imageRUNNER 85, imageRUNNER 85+, imageRUNNER 8500, imageRUNNER 9070, and imagePRESS C1.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Paper Source] preferences pane.

The [Paper Source] preferences pane is displayed.

3 Select [Paper Type] from [Select by] → select [Tab Paper] from [Paper Type].

	Raper Source		
	Paper Source		~
	Select by:	Paper Type	
N Str	Paper Type:	✓ Plain Paper Recycled Paper	0
	Inserting St	Color Paper 3-Hole Punch Letterhead	2
<u>a</u> – 2		Bond Paper Heavy Paper	
Tan Jan		Label)
Printer Info	5 (Tab Paper	

4 Click [Tab Position].

The [Tab Position Settings] dialog box is displayed.

5 Specify the width to shift the image to be printed on the tab part of the paper in [Shifting Width].



NOTE

You can change the unit of measurement by clicking [Millimeter] or [Inch].

6 Click [OK] in the [Tab Position Settings] dialog box.

7 Click [Print] in the [Print] dialog box.

Printing on Custom Paper

This section describes how to print on nonstandard paper. If you register a paper size as a custom paper size, you will be able to select the registered custom paper size from [Paper Size] in the [Page Attribution] preferences pane when you print a document.

Registering Custom Paper

Mac OS X 10.2.8 - 10.3.9

1 From the [File] menu of the application software, select [Page Setup].

The [Page Setup] dialog box is displayed.

2 Select [Custom Paper Size] from [Settings].

The [Custom Paper Size] preferences pane is displayed.

3 Click [New] → specify a name for the new custom paper in the list.

Setting	Custom Paper Size
Untitled	New Duplicate Delete Save
Paper Size	Printer Margins
Height: 0	cm Top: 0 cm
Width: 0	cm Left: 0 cm Right: 0 cm
	Bottom: 0 cm
?	Cancel OK

- **4** Specify the height and width for [Height] and [Width].
- **5** Specify the margins for [Top], [Bottom], [Left], and [Right].
- 6 Click [Save].

Mac OS X 10.4 or later

1 From the [File] menu of the application software, select [Page Setup].

The [Page Setup] dialog box is displayed.

2 Select [Manage Custom Sizes] from [Paper Sizes].

The [Custom Page Sizes] dialog box is displayed.

3 Click [+] → specify a name for the new custom paper in the list.



4 Specify the height and width for [Height] and [Width].

5 Specify the margins for [Top], [Bottom], [Left], and [Right].


Printing on Custom Paper

1 From the [File] menu of the application software, select [Page Setup].

The [Page Setup] dialog box is displayed.

2 Select [Page Attributes] from [Settings].

The [Page Attributes] preferences pane is displayed.

3 Select the specified custom paper from [Paper Size].

	-			
Format for:	Canon	Printer		\$
	iR720	0 CanonPS		_
Paper Size:	Custon	n Paper 1		;
	0.0	u cm x u.uu	J CM	_
Orientation:	11	1.	1.	
Scale:	100	%		
Orientation: Scale:	1 100	1 . %	1.	

- 4 Click [OK].
- **5** From the [File] menu of the application software, select [Print].
- **6** Click [Print] in the [Print] dialog box.

Printing a Document in Toner Save Mode

You can print a document in toner save mode. This mode is useful for proofreading.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Quality] preferences pane.

		Quality Settings
	Color Mode: Color	•
	Combine Color Separat	tions:
· · · · · · · · · · · ·	Printer Default	\$
Printer Info		Profile Settings

The [Quality] preferences pane is displayed.

3 Click [Quality Settings].

Printer: Co Presets: St	andard andity
	Quality Settings Color Mode: Color Combine Color Separations: Printer Default
Printer Info	Profile Settings

The [Quality Settings] dialog box is displayed.

4 Select [Toner Save] \rightarrow click [OK].

Halftones:	Resolution	÷
🗹 Image Refinement		
Cradation Smoothing:	Off	\$
Toner Save		

Ø NOTE

For information on the other items in the [Quality Settings] dialog box, see "Specifying the Print Quality (Color Printers)," on p. 4-16, or the Online Help.

Special Print Options



This chapter describes instructions for specifying the various special settings for printing a document.

Setting the Print Document Time (Mac OS X 10.3 or later)
Changing the Order of Pages (Mac OS X 10.3 or later)
Specifying a Color Filter (Mac OS X 10.3 or later)
Overlay Printing
Using the Print Notification Option4-14
Specifying the Print Quality (Resolution)4-15
Specifying the Print Quality (Color Printers) 4-16 Color Printing 4-16 Halftone Settings 4-17 Gradation Settings 4-19 Configuring the Printer's Color Adjustment Settings 4-21
Sending Document Data to a User Inbox
Secured Printing
Promoting a Print Job
Job Accounting Feature
Checking the Current Print Settings
Saving the Printer Settings
Saving a Document in PDF Format 4-35 Mac OS X 10.2.8 - 10.3.9 4-35 Mac OS X 10.4 or Later 4-36
Saving a Document as a File (Mac OS X 10.2.8 - 10.3.9)4-38
Specifying the Error Handling Method4-39
Using the PS Printmonitor

4. Special Print Options

File Menu	4-41
Printer Menu	4-42
PS Printmonitor Window	4-43

Setting the Print Document Time (Mac OS X 10.3 or later)

You can specify the time to start printing, as well as the printing priority.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Scheduler] preferences pane.

The [Scheduler] preferences pane is displayed.

3 Specify when to print the document.

Printer:	Canon Printer	•
Tresets.	Scheduler	•
Print Document:	Now At 9:00 AM	
<u> </u>		

If you select [At], specify the time to start printing.

4 Select [Urgent], [High], [Medium], or [Low] printing priority.

Printer:	Canon P	rinter	+	
Presets:	Standard	1	\$	
	Schedule	er	•	
Print Document:	Now			
	INC/VV			
	Jrgent	00 AM 🔹		
Ū.	Jrgent ligh	00 AM 🗘		
Priori V V	Jrgent ligh Medium	00 AM 🗘		

You can change the print order of the pages.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Paper Handling] preferences pane.

The [Paper Handling] preferences pane is displayed.

3 Specify the page order.

	Paper Handling		•	
Page Order	Automatic	Drint: All D	2005	
rage ofuer.	Normal		numbered i	nanes
	Reverse	O Even	numbered	page
Destination P	aper Size:			
🖲 Use doci	iments paper size:	: Letter		
O Scale to	fit paper size:	Letter		A T
Scale	down only			

If you are using Mac OS X version 10.4 or later, select the page order from [Page Order].

If you are using Mac OS X version 10.3 to 10.3.9, to print in reverse page order, select [Reverse page order].

4 Select which pages to print from among [All pages], [Odd numbered pages], and [Even numbered pages].

Tresets.	Standard	
	Paper Handling	;
Page Order:	 Automatic Normal Reverse 	Print: • All Pages Odd numbered pages Even numbered pages
Destination P	aper Size:	
🖲 Use docu	uments paper siz	e: Letter
O Scale to	fit paper size:	Letter ‡
✓ Scale	down only	

Specifying a Color Filter (Mac OS X 10.3 or later)

You can apply a color filter to the print output.

From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [ColorSync] preferences pane.

The [ColorSync] preferences pane is displayed.

3 Select the matching method for the color of the output from [Color Conversion].

NOTE

Printing results are the same regardless of the setting for [Color Conversion] in the printer driver. Therefore, it is recommended that you select [Standard] for [Color Conversion] as this prints a document faster.

4 Specify the color filter you want to output with from [Quartz Filter].



Overlay Printing

This option enables you to overlay text data onto a form file. The form file must be created and stored in the printer beforehand. When the form file is ready, you can overlay other documents on the form file. For example, if the format of a report or bill is created in application software as a form file, you can create a perfectly formatted document by overlaying a text data document onto the form file.







(prepared in advance)

Text data (used in printing)

Print by overaying them

For Overlay Printing, the following two procedures are required. Create and store image data in the printer as a form file. Then, you can use the Overlay Printing mode using the form file created in procedure 1.

Procedure 1. Creating a form file.

Procedure 2. Printing with an Overlay.

Ø NOTE

This option is not available for the Color imageRUNNER C2620, Color imageRUNNER C3200, Color imageRUNNER C3220, imageRUNNER C3100, imageRUNNER C5800, imageRUNNER C6800, imageRUNNER 3300/2800/2200, and imageRUNNER 6000/ 5000.

Creating a Form File

1 Prepare a document as a form file with the application software.

2 From the [File] menu, select [Print].

The [Print] dialog box is displayed.

3 Select the [Special Features] preferences pane.

The [Special Features] preferences pane is displayed.

4 Click [Overlay].

Printer:	Canon Printer
Presets:	Standard 🛟
	Special Features
	Job Processing:
	Print +
	Method of Notification:
Printer Info	Job Accounting
PDF PDF	view Cancel Print

The [Overlay] dialog box is displayed.

5 Select [Create a Form File] from [Processing Method].

Processing Method:	O Do Not Use Overlay P	rinting		
	Create a Form File			
File List:	Name	Time	e Stored	
	OverlayData1	05/7/15	12:34	1
	PaymentForm	05/7/15	12:35	1
	OrderForm	05/7/15	12:36	
	MyOriginalForm	05/7/15	12:37	1
	SalesForm	05/7/15	12:37	
File Name:				
	Specify the file name.			
	Form file will be stored in	n printer as image	data.	

6 Enter a form file name in [File Name].

Name	Time	Stored	-
Data 1	05/7/15	12:34	1
Form	05/7/15	12:35	n
rm	05/7/15	12:36	U
nalForm	05/7/15	12:37	1
m	05/7/15	12:37	
ha fila nama			
	Data1 Form nalForm m he file name.	Name 100 Data1 05/7/15 rm 05/7/15 nalForm 05/7/15 m 05/7/15 m 05/7/15	Name Time science Data1 05/7/15 12:34 /:form 05/7/15 12:35 rm 05/7/15 12:37 m 05/7/15 12:37

NOTE

You can enter up to 24 characters in [File Name].

7 Click [OK] in the [Overlay] dialog box.

Printer:	Canon Printer
Presets:	Standard
	Special Features
	Job Processing:
	Print
	Method of Notification:
Printer Info	Job Accounting Overlay
? PDF • Prev	view Cancel Print

The created file is stored as a form file in the printer instead of being printed.

NOTE

From the printer driver, you cannot delete form files stored in the printer.

Printing with an Overlay

- **1** Start the application software, and then display the document you want to print.
- 2 From the [File] menu, select [Print].

The [Print] dialog box is displayed.

3 Select the [Special Features] preferences pane.

The [Special Features] preferences pane is displayed.

4 Click [Overlay].

Printer:	Canon Printer	•
Presets:	Standard	
	Special Features	;
-	Job Processing:	
	Print	\$
	Method of Notification:	
Printer Info	Job Accounting	Overlay
	iow	Cancel Print

The [Overlay] dialog box is displayed.

5 Select [Use Overlay Printing] from [Processing Method].

rocessing Method.	Use Overlay Printing	inting	
	Create a Form File		
File List:	Name	Time	e Stored
	OverlayData1	05/7/15	12:34
	PaymentForm	05/7/15	12:35
	UrderForm McOriginalEarm	05/7/15	12:35
	SalesForm	05/7/15	12:37
Apply to:	All Pages	A T	
Apply to:	All Pages	A T	

6 Select the desired form file from [File List].

Processing Method:	 Do Not Use Overlay P Use Overlay Printing Create a Form File 	rinting	
File List:	Name	Time	Stored
	OverlayData1	05/7/15	12:34
	PaymentForm	05/7/15	12:35
	OrderForm	05/7/15	12:36
	MyOriginalForm	05/7/15	12:37
	SalesForm	05/7/15	12:37
Apply to	All Pages	*]	

7 For 2-sided printing, select which pages of the document are to be overlaid with the form file ([All Pages], [Only Front Sides], or [Only Back Sides]) from [Apply to].

Processing Method:	 Do Not Use Overlay P Use Overlay Printing Create a Form File 	rinting	
File List:	Name	Time	e Stored
	OverlayData1	05/7/15	12:34
	PaymentForm	05/7/15	12:35
	OrderForm	05/7/15	12:36
	MyOriginalForm	05/7/15	12:37
	SalesForm	05/7/15	12:37
Apply to	✓ All Pages		
	Only Front Sides		
	Only Back Sides		

8 Click [OK] in the [Overlay] dialog box.

9 Click [Print] in the [Print] dialog box.

Presets:	Standard
	Special Features
	Job Processing:
1,000 C	Print
	Method of Notification:
Printer Info	Job Accounting Overlay

The document is printed out with the document data laid over the form file.

Using the Print Notification Option

You can receive notification by a dialog box whenever a print job is complete.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Special Features] preferences pane.

The [Special Features] preferences pane is displayed.

3 Select [Display Dialog] from [Method of Notification].

Presets:	Standard
	Special Features
	Job Processing:
- Sent	Print
<u><u>s</u></u>	Uisplay Dialog
Printer Info	Overlay

You can select the print resolution when printing.

Ø NOTE

This option is only available for printer models that support 1200 dpi printing.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Quality] preference pane.

The [Quality] preferences pane is displayed.

+ Printer: Canon Printer + Presets: Standard Quality 200 dn Quality: 600 dpi anty Setti Color Mode: Color + Combine Color Separations: + Printer Default Printer Info Profile Settings... (?) PDF **v** Preview Cancel Print

3 Select a resolution from [Quality].

Specifying the Print Quality (Color Printers)

This section describes how to specify the print quality settings for color printers.

🥟 NOTE

- The features described in this section are available only for the Color imageRUNNER C2620, Color imageRUNNER C2880/C3380, Color imageRUNNER C3200, Color imageRUNNER C3220, Color imageRUNNER C4080/C4580, Color imageRUNNER C5180, imageRUNNER C3100, imageRUNNER C3170, imageRUNNER C5800, imageRUNNER C5870, imageRUNNER C6800, imageRUNNER C6870, and imagePRESS C1.
- For information on the print quality settings for black-and-white printers, see the Online Help.

Color Printing

To print color a document, follow the procedure below.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select [Quality] preferences pane.

The [Quality] preferences pane is displayed.

3 Select [Color] from [Color Mode].

Printer:	Canon Printer 🛟
Presets:	Standard 🛟
	Quality
	Quality Settings
	Color Mode:
	Combine Color Separations:
·	Printer Default
Printer Info	Profile Settings
PDF PDF	view Cancel Print
	Cunter Chine

NOTE

To print in grayscale, select [Black and White].

4 Click [Print] in the [Print] dialog box.

Halftone Settings

This section describes how to specify the halftone processing method for printing a document.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select [Quality] preferences pane.

The [Quality] preferences pane is displayed.

3 Click [Quality Settings].

Printer:	anon Printer 🛟
Presets: S	tandard 🗘
	uality ;
	Quality Settings Color Mode: Color Combine Color Separations: Printer Default
Printer Info	Profile Settings
(?) (PDF •) (Preview	(Cancel) Print

The [Quality Settings] dialog box is displayed.

4 Select an appropriate halftone setting from [Halftones] \rightarrow click [OK].

Halftones:	Resolution	\$
🗹 Image Refinement		
Gradation Smoothing:	Off	•

The following settings are available for [Halftones].

[Resolution]:	Provides halftone processing giving priority to resolution. This method is suitable for outputting a document containing only text and line drawings.
[Gradation]:	Provides halftone processing giving priority to gradation. This method is suitable for outputting a document containing images/photos.

[Error Diffusion]:	Provides halftone processing giving priority to error diffusion. This method is suitable for outputting a document containing small and fine text.
[Pattern 1] to [Pattern 7]:	The following halftone processing methods are applied to text, graphic, and image data separately. [Pattern 1]: text = Error Diffusion, graphic = Error Diffusion, image = Resolution [Pattern 2]: text = Error Diffusion, graphic = Error Diffusion, image = Gradation [Pattern 3]: text = Error Diffusion, graphic = Resolution, image = Resolution [Pattern 4]: text = Error Diffusion, graphic = Gradation, image = Gradation [Pattern 5]: text = Resolution, graphic = Resolution, image = Gradation [Pattern 6]: text = Resolution, graphic = Gradation, image = Gradation [Pattern 7]: text = Error Diffusion, graphic = Resolution, image = Gradation

5 Click [Print] in the [Print] dialog box.

Gradation Settings

This section describes how to specify the gradation level for printing a document. This setting is useful when printing a document which includes images, such as photographs.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Quality] preferences pane.

The [Quality] preferences pane is displayed.

3 Click [Quality Settings].

Printer:	anon Printer
Presets: S	tandard 🗘
	Quality
	Quality Settings Color Mode: Color Combine Color Separations: Printer Default
Printer Info	Profile Settings
? PDF Preview	W Cancel Print

The [Quality Settings] dialog box is displayed.

4 Select an appropriate gradation setting from [Gradation Smoothing] → click [OK].

Halftones:	Resolution	\$
☑ Image Refinement Gradation Smoothing: □ Toner Save	Off	\$

The following settings are available for [Gradation Smoothing].

[Off]: Prints documents in standard mode.

- [Smooth 1]: Prints documents which include images with a low level of smoothing.
- [Smooth 2]: Prints documents which include images with a high level of smoothing. You can acquire better print quality than with [Smooth 1].



Configuring the Printer's Color Adjustment Settings

How colors are interpreted by and printed from application software differs according to the printer. You can configure the printer's color adjustment settings to control RGB data, CMYK data, etc.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Quality] preferences pane.

The [Quality] preferences pane is displayed.

3 Click [Profile Settings].



The [Profile Settings] dialog box is displayed.

ofile Settings		
Pure Black Text:	Printer Default	\$
Black Overprint:	Printer Default	Å. T
S RGB		
Source Profile:	Printer Default	\$
Matching Method:	Printer Default	\$
🗹 Pure Black Process		
смук		
Simulation Profile:	Printer Default	\$
🗹 Pure Black Process		
Grayscale		
Use Grayscale Profile		
Output Profile:	Canon iR C6870	\$
✓ Prioritize Printing of Lines	and Text	
Brightness	Dark 🔆 💬 🔆	Light

4 Specify the settings for RGB data, CMYK data, grayscale data, output profile, and brightness if necessary \rightarrow click [OK].

NOTE

For the detailed information about the [Profile Settings] dialog box, see the Online Help.

Sending Document Data to a User Inbox

You can store a document in a User Inbox of the printer. You can print a stored document using the Remote UI or the control panel of the printer.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Special Features] preferences pane.

The [Special Features] preferences pane is displayed.

3 Select [Store] from [Job Processing].



4 Click [Print] in the [Print] dialog box.

The [Store Destination] dialog box is displayed.

5 Enter the document name for the data \rightarrow select the box number of the User Inbox you want to use.

Data Name:	d	ocument_	A	
User Inboxes:	_			
Inbox Number	Proof Print	Inbox Na	ime	
0				
1				
2				
3				
4				
5				
5				
0				
0				
10				

NOTE

- For the Color imageRUNNER C2880/C3380, Color imageRUNNER C4080/C4580, Color imageRUNNER C5180, imageRUNNER C3170, imageRUNNER C5870, imageRUNNER C6870, imageRUNNER 105+, imageRUNNER 2870/2270, imageRUNNER 4570/3570, imageRUNNER 5070, imageRUNNER 6570/5570, imageRUNNER 7105/7095/7086, imageRUNNER 8070, imageRUNNER 85+, imageRUNNER 9070, and imagePRESS C1, you can send data to multiple user inboxes simultaneously.
- You can simultaneously send jobs to multiple user inboxes by holding down the shift key (to select successive user inboxes) or the command key (to select non-sequential user inboxes) while clicking on the desired user inboxes.
- If you are using a printer model that supports proof printing, you can proof print and save print data simultaneously by selecting a user inbox that has [On] displayed in its [Proof Print] column.

6 Click [OK] in the [Store Destination] dialog box.

Data Name:	d	ocument_A	
User Inboxes:			
Inbox Number	Proof Print	Inbox Name	
0			1
1			4
2			
3			
4			
5			
6			
7			
8			
9			4
10			-

Secured Printing

You can store a document with a certain user name and password in the printer. To print a stored document, enter the password via Remote UI or by using the control panel of the printer.

This feature is useful for printing confidential documents.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Special Features] preferences pane.

The [Special Features] preferences pane is displayed.

3 Select [Secured Print] from [Job Processing].

Printer:	Canon Printer
Presets:	Standard
	Special Features
	Job Processing:
· · · · ·	J Drint
3 - F	Secured Print
	Display Dialog
•••••	
2	
Deleteralefe	
Printer Info	Overlay
(DDF -) (Day	(Cancel) Print

4 Click [Print] in the [Print] dialog box.

The [Secured Print] dialog box is displayed.

5 In the [Secured Print] dialog box, enter the document name, user name, and password.

j	Document v Set docume If you chang Monitor.	will be printed in the s nt name, user name, ge the user name, job	Secured Print mode. and password. Is cannot be deleted with Prin
Docu	ment Name	sales_2003	Max. 32 characters)
	User Name	canon	Max. 32 characters)

NOTE

- You can enter up to 32 characters for [Document Name] and [User Name].
- You can enter up to seven digits (0 9999999) for [Password].

6 Click [OK] in the [Secured Print] dialog box.

Document v Set docume If you chang Monitor.	vill be printed in the nt name, user name, je the user name, job	Secured Print mode. and password. Is cannot be deleted with Prin
Document Name:	sales_2003	(Max. 32 characters)
User Name:	canon	(Max. 32 characters)
		(0 to 0000000)

Promoting a Print Job

You can give the desired job top priority for printing over all other print jobs waiting in the print queue.

NOTE

This option is available for the Color imageRUNNER C2620, Color imageRUNNER C2880/C3380, Color imageRUNNER C3200, Color imageRUNNER C3220, Color imageRUNNER C4080/C4580, Color imageRUNNER C5180, imageRUNNER C3100, imageRUNNER C3170, imageRUNNER C5800, imageRUNNER C5870, imageRUNNER C6800, imageRUNNER C6870, imageRUNNER 105+, imageRUNNER 2870/2270, imageRUNNER 4570/3570, imageRUNNER 5070, imageRUNNER 6570/5570, imageRUNNER 7105/7095/7086, imageRUNNER 8070, imageRUNNER 85+, imageRUNNER 9070, and imagePRESS C1.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Special Features] preferences pane.

The [Special Features] preferences pane is displayed.

3 Select [Promote Print] from [Job Processing].

Printer: Canon Printer Presets: Standard	•
Special Features	
Job Processing:	t It
Printer Info	Overlay
(?) (PDF •) (Preview)	Cancel Print

Job Accounting Feature

This feature enables you to sum print totals for each department or user for management purposes. This feature is useful for taking statistics on paper consumption and allocating paper costs to each department.

In order to use the Job Accounting feature, the ID and password need to be registered on the printer beforehand.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Special Features] preferences pane.

The [Special Features] preferences pane is displayed.

Printer:	Canon Printer
Presets:	Standard 🛟
	Special Features
[Job Processing:
	Print
	Method of Notification:
Printer Info	Job Accounting Overlay
? PDF • Prev	view Cancel Print

3 Click [Job Accounting].

The [ID/Password Settings] dialog box is displayed.



If you want to perform black-and-white printing using the Color imageRUNNER C2620, Color imageRUNNER C2880/C3380, Color imageRUNNER C3220, Color imageRUNNER C4080/C4580, Color imageRUNNER C5180, imageRUNNER C3170, imageRUNNER C5870, imageRUNNER C6870, or imagePRESS C1 while using Job Accounting, you can output the document without Job Accounting by selecting the [Disable Job Accounting when B&W Print] check box. To use this function, set [Allow black and white print jobs] on the touch panel display of the printer to [On].

4 Specify the ID and password in the [ID/Password Settings] dialog box → click [OK].

Set II	D and password.	
840	ID: 1234	
Pas	sword:	Verify
✓c	onfirm ID/Passwo	rd when Printing

Ø NOTE

- You can verify the ID and password that are registered in the printer by clicking [Verify].
- Enter the numbers registered as the ID and password in the printer (seven digits maximum).

Checking the Current Print Settings

You can display all the currently specified settings in the [Print] dialog box. This feature is useful to confirm the printer driver settings before printing documents.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 In each pane, specify the printer driver settings with which you want to print a document.

3 Select the [Summary] preferences pane.

((_	
L L	Summary	
Copies & Pages		
▶ Layout		
▶Scheduler		
▶ Paper Handling		
▶ ColorSync		
Cover Page		
Error Handling		
Finishing		
Paper Source		
▶ Quality		
Special Features		
Evened All		

The [Summary] preferences pane is displayed.

4 Check the settings for each pane.
- **5** If you want to modify any of the settings, change those settings in the appropriate panes.
- **6** Click [Print] in the [Print] dialog box.

Saving the Printer Settings

You can save printer driver settings that you frequently use as a Preset. If you select a Preset when printing a document, it will be output with the saved settings.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 In each pane, specify the printer driver settings you want to save.

3 Select [Save As] from [Presets].

3	Save Preset As:	
1	Standard 1	

The [Save Preset] dialog box is displayed.

4 Enter a name for the settings in [Save Preset As] \rightarrow click [OK].

The current settings are saved as a Preset.

The saved Preset will be displayed in [Presets] in the [Print] dialog box from the next time you open the dialog box.

NOTE

- To print a document with the saved settings, select the Preset from [Presets] in the [Print] dialog box.
- To edit a Preset, in the [Print] dialog box, select the Preset from [Presets] → specify the printer driver settings → select [Save] from [Presets].
- To change a Preset's name, in the [Print] dialog box, select the Preset from [Presets] → select [Rename] from [Presets].
- To delete a Preset, in the [Print] dialog box, select the Preset from [Presets] → select [Delete] from [Presets].

As an alternative to printing on paper, you can save your document as a PDF file.

Mac OS X 10.2.8 - 10.3.9

- **1** From the application software, open the document you want to save as a PDF (Portable Document Format) file.
- 2 From the [File] menu, select [Print].

The [Print] dialog box is displayed.

3 In any of the panes under the [Print] dialog box, click [Save as PDF].

The [Save to File] dialog box is displayed.

4 Specify the file name and the save location in the [Save to File] dialog box.

	Ac Untitlad	T
Sav	As	
W	nere Documents	

5 Click [Save].

The document is saved as a PDF file.

Mac OS X 10.4 or Later

1 From the application software, open the document you want to save as a PDF (Portable Document Format) file.

2 From the [File] menu, select [Print].

The [Print] dialog box is displayed.

3 In any of the panes under the [Print] dialog box, select [Save as PDF] from [PDF].

rinter.	Canon Printer	•
Presets:	Standard	•
	Copies & Pages	•
Copies:	1 Collated	
Pages:	 All 	
	O From: 1 to: 1	
	view	Cancel Print
PDF Prev Save as PDF	view	Cancel Print
? PDF Prev Save as PDF Save rDF as ro Fax PDF	usiscript	Cancel Print
PDF Prev Save as PDF Save ror as ro Fax PDF Compress PDF	uiew	Cancel Print
PDE Prev Prev Save as PDF Save FDF as PDF Fax PDF Compress PDF Encrypt PDF	ulew) Discocript	Cancel Print
PDF Prev Prev Save as PDF Save run as ru Fax PDF Compress PDF Encrypt PDF Mail PDF	olew) ostocnipt	Cancel Print
PDF Prev Save as PDF Save rDr as rC Fax PDF Compress PDF Encrypt PDF Mail PDF Save as PDF-X		Cancel Print
PDE Pre Save as PDF Save rDF as rt Fax PDF Compress PDF Encrypt PDF Mail PDF Save as PDF-X Save PDF to iP	osiscript	Cancel Print
PDE Pre Save as PDF Save r.Dr as rt Fax PDF Compress PDF Encrypt PDF Mail PDF Save as PDF-X Save PDF to W	uiew ustachipt c hoto leb Receipts Folder	Cancel Print

You can select other options for handling the file as a PDF.

The [Save] dialog box is displayed.

4 Specify the file name and save location in the [Save] dialog box.

Where Documents	÷

5 Click [Save].

The document is saved as a PDF file.

Saving a Document as a File (Mac OS X 10.2.8 - 10.3.9)

As an alternative to printing on paper, you can save your document as a file. You can select either the PostScript or PDF format.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Output Options] preferences pane.

The [Output Options] preferences pane is displayed.

3 Select [Save as File] \rightarrow select the file format from [Format].

Printer:	Canon Printer	•
Presets:	Standard	•
	Output Options	•
Save as File	Format PDF	
Preview Sa	ave As PDF Fax	Cancel Save

4 Click [Save] in the [Print] dialog box.

Specifying the Error Handling Method

You can specify whether a report containing information about PostScript errors should be printed out.

1 From the [File] menu of the application software, select [Print].

The [Print] dialog box is displayed.

2 Select the [Error Handling] preferences pane.

The [Error Handling] preferences pane is displayed.

3 Specify PostScript error handling from [PostScript Errors].



The following settings are available for [PostScript Errors]:

[No special reporting]: No error report printed.

[Print detailed report]: Prints out a detailed report on PostScript errors.

4 Click [Print] in the [Print] dialog box.

Using the PS Printmonitor

The Canon PS Printmonitor is application software that interfaces with the printer software.

With the PS Printmonitor, you can check the printer status, such as "out of paper" or "offline," on your computer.

Starting the PS Printmonitor

To start the PS Printmonitor, follow the procedure below.

- 1 Open the following Mac OS folders: [Library] → [Printers] → [Canon] → [PS] → [Utilities].
- **2** Double-click the [PS Printmonitor] icon.



The [PS Printmonitor] window is displayed.

The printer is r	eady.			
II Document	User	Status	Size	Page

NOTE

- You can create a PS Printmonitor alias on the desktop to enable you to start the PS Printmonitor merely by double-clicking its icon on the desktop.
- To select a different printer, see "Printer Menu," on p. 4-42.
- If you close the PS Printmonitor while printing, data may remain in the printer. In this case, reset the printer to delete the data.

File Menu

The following commands are available on the [File] menu of the PS Printmonitor.

Ś	PS Printmonitor	File	Printer	
		Op	en	жо
		Clo	ose	жw
		Pre	ferences	

- [**Open**]: Opens the [PS Printmonitor] window.
- [Close]: Closes the [PS Printmonitor] window.
- [Preferences]: Displays the [Preferences] dialog box. In this dialog box, you can specify the polling interval (interval between printer status acquisitions).

Printer Menu

The following commands are available on the [Printer] menu of the PS Printmonitor.

Printer
✓ 殳 172.23.2.70
Search for Printer Get Printer Information
Make Default

[Printer Name]: Displays the printers whose status you can monitor. If more than one is available, select the printer whose status you want to monitor.

[Search for Printer]: If the printer you want is not displayed on the [Printer] menu, it can be searched by selecting [Search for Printer].

[Get Printer Information]: Displays the [Printer Info] dialog box.

[Make Default]: Registers the currently selected printer the next time the PS Printmonitor starts.

Ø NOTE

- After changing the printer configuration, for example by adding an optional paper source, make sure that you select [Get Printer Information] from the [Printer] menu, or click [Printer Info] in the [Print] dialog box accessed from application software in which you created a document. Failing to follow this procedure may result in unacceptable printout.
- To monitor the printer status using the PS Printmonitor, you need to register the printer with the Printer Setup Utility (Mac OS X 10.3 or later) or the Print Center (Mac OS X 10.2.8). Then, select the printer in the [Print] dialog box from the application software in which the document was created.

The [PS Printmonitor] window displays the printer status and the status of the documents being printed. If a problem occurs during printing, the error status is displayed in this window.



Status Message:	Displays the printer status (out of paper, offline, error, etc).
Details:	Displays a detailed explanation of the Status Message or remedies for error conditions.
Status Graphia	Displays an illustration for the printer status

Status Graphic: Displays an illustration for the printer status.

- Job Status: Displays the job list, including user name, job status, data size, etc. for each job.
- [Pause]: Selecting this button pauses data transmission from your Macintosh to the printer or print server.
- [Remote UI]: Selecting this button starts the Remote UI.
- **[Clear Print Jobs]:** Selecting this button cancels the selected print job and deletes its data from the printer.
- [Resume]: Selecting this button resumes sending of paused jobs.



- To start the Remote UI, the web browser must be set up beforehand. For instructions on how to set up the Remote UI, see the *Remote UI Guide*.
- After changing the printer configuration, for example by adding an optional paper source, make sure that you select [Get Printer Information] from the [Printer] menu, or click [Printer Info] in the [Print] dialog box accessed from application software in which you created a document. Failing to follow this procedure may result in unacceptable printout.



This chapter describes how to resolve printing problems.

Problems and Solutions	5	-2	2
------------------------	---	----	---

Problems and Solutions

This section describes corrective procedures, in the event that trouble occurs.

The data lamp is not lit even when sending data to the printer.

- Cause 1 The printer is not connected to the Macintosh computer correctly.
- Remedy Correctly connect the printer with the Macintosh computer.

Cause 2 The printer is not ON.

Remedy Turn the printer ON.

The printer name is not displayed on the Printer Setup Utility (Mac OS X 10.3 or later) or the Print Center (Mac OS X 10.2.8).

- Cause 1 The printer is not connected to the Macintosh computer correctly.
- Remedy Correctly connect the printer with the Macintosh computer.
- Cause 2 The printer is not ON, or is offline.
- Remedy Turn the printer ON, or online.
- Cause 3 The printer driver is not installed correctly.
- Remedy Reinstall the printer driver correctly.

The printer kind is displayed as [Generic] and some functions are not available.

- Cause 1 The printer is not connected to the Macintosh computer correctly.
- Remedy Correctly connect the printer with the Macintosh computer.
- Cause 2 The printer is not ON, or is offline.
- Remedy Turn the printer ON, or online.
- Cause 3 The printer driver is not installed correctly.
- Remedy Reinstall the printer driver correctly.

Cause 4 The printer is not specified as a PS Printer.

Remedy Reset the printer settings to specify the printer as a PS Printer on the Printer Setup Utility (Mac OS X 10.3 or later) or the Print Center (Mac OS X 10.2.8). (See step 3 in "Specifying the Printer Settings," on p. 2-10.)

Printing is slow.

- Cause 1 If a large data object, such as a color photo, is pasted into the document to be printed, more time is required for printing.
- Remedy Please wait, while the data lamp is on.
- Cause 2 If a large data object, such as a color photo, is pasted into the document to be printed, more time may be required due to insufficient memory.
- Remedy Expand memory.

The edge of the document is not printed out.

- Cause 1 The paper size set in the application software may be different from the size of the paper output from the printer.
- Remedy Reduce the output to fit the paper in the printer by specifying the desired reduction ratio in [Scale] in the [Page Setup] dialog box.
- Cause 2 The width or height of the page margins specified in the application software exceeds the printable range of the printer.
- Remedy Adjust the page margin settings.



Appendix

This chapter includes the available paper sizes list, glossary, and index.

Available Paper Sizes List	6-2
Glossary	6-5
Index	6-6

Available Paper Sizes List

The paper sizes which can be selected differ depending on the printer model you are using. Available paper sizes are listed below.

Printer Name	Paper Size
Color imageRUNNER C2620, Color imageRUNNER C3200, Color imageRUNNER C3220	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, 12x18, SRA3, Envelope C5, Envelope COM10, Envelope Monarch, Envelope B5, Oficio, Argentina Oficio, Brazil Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (100 x 148 mm - 306 x 457 mm)
Color imageRUNNER C2880/C3380	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, 12x18, SRA3, Envelope C5, Envelope COM10, Envelope Monarch, Envelope DL, Envelope B5, Oficio, Argentina Oficio, Brazil Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (99 x 140 mm - 320 x 457.2 mm), Long Strip Paper (99 x 457.3 mm - 320 x 630 mm)
Color imageRUNNER C4080/C4580, Color imageRUNNER C5180	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, 12x18, SRA3, Envelope C5, Envelope COM10, Envelope Monarch, Envelope B5, Oficio, Argentina Oficio, Brazil Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (100 x 148 mm - 320 x 457.2 mm), Long Strip Paper (100 x 457.3 mm - 320 x 630 mm)
imageRUNNER C3100	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, 12x18, SRA3, Envelope C5, Envelope COM10, Envelope Monarch, Envelope DL, Envelope B5, Oficio, Argentina Oficio, Brazil Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (99 x 140 mm - 308 x 457 mm)

Printer Name	Paper Size
imageRUNNER C3170	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, 12x18, SRA3, Envelope C5, Envelope COM10, Envelope Monarch, Envelope DL, Envelope B5, Oficio, Argentina Oficio, Brazil Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (99 x 140 mm - 308 x 457 mm)
imageRUNNER C5800, imageRUNNER C6800	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, 12x18, 13x19, SRA3, Oficio, Argentina Oficio, Brazil Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (100 x 148 mm - 313 x 474 mm)
imageRUNNER 105, imageRUNNER 105+, imageRUNNER 7200, imageRUNNER 8070, imageRUNNER 85, imageRUNNER 85+, imageRUNNER 8500, imageRUNNER 9070	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, Oficio, Argentina Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Korea Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (100 x 148 mm - 297 x 432 mm)
imageRUNNER 2870/2270, imageRUNNER 4570/3570	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, Envelope C5, Envelope COM10, Envelope Monarch, Envelope DL, Envelope B5, Oficio, Argentina Oficio, Brazil Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (99 x 148 mm - 297 x 432 mm)
imageRUNNER 3300/2800/2200, imageRUNNER 3300i, imageRUNNER 3320G, imageRUNNER 3320i/2220i, imageRUNNER 3320N/2220N	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, Envelope C5, Envelope COM10, Envelope Monarch, Envelope DL, Envelope B5, Oficio, Argentina Oficio, Brazil Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Korea Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (100 x 138 mm - 297 x 432 mm)

Printer Name	Paper Size
imageRUNNER 6000/5000, imageRUNNER 5000i, imageRUNNER 6020/5020, imageRUNNER 6020i/5020i	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, Oficio, Argentina Oficio, Brazil Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Korea Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (100 x 148 mm - 297 x 432 mm)
imageRUNNER 5070, imageRUNNER 6570/5570	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, Oficio, Argentina Oficio, Brazil Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Korea Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (99 x 148 mm - 297 x 432 mm)
imageRUNNER 7105/7095/7086	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, Oficio, Argentina Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Korea Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (100 x 148 mm - 297 x 431.8 mm), Long Strip Paper (100 x 431.9 mm - 297 x 630 mm)
imagePRESS C1	Letter, 11x17, Legal, Executive, Statement, A5, B5, A4, B4, A3, 12x18, 13x19, SRA3, Oficio, Argentina Oficio, Brazil Oficio, Ecuador Oficio, Mexico Oficio, Argentina Letter, Government Letter, Government Legal, Foolscap, Australia Foolscap, Folio, Custom Paper Size (100 x 148 mm - 330 x 483 mm), Long Strip Paper (100 x 483.1 mm - 330 x 630 mm)

NOTE

For the Color imageRUNNER C2620, Color imageRUNNER C2880/C3380, Color imageRUNNER C3200, Color imageRUNNER C3220, Color imageRUNNER C4080/ C4580, Color imageRUNNER C5180, imageRUNNER C3100, imageRUNNER C3170, imageRUNNER C5800, imageRUNNER C5870, imageRUNNER C6800, imageRUNNER C6870, imageRUNNER 105+, imageRUNNER 2870/2270, imageRUNNER 4570/3570, imageRUNNER 5070, imageRUNNER 6570/5570, imageRUNNER 7105/7095/7086, imageRUNNER 8070, imageRUNNER 85+, imageRUNNER 9070, and imagePRESS C1, you can also select paper sizes in the list which include "(Print Area Large)" in their names. The page margins of these paper sizes are 0 inches.

Glossary

Ρ

PDF

Portable Document Format. The page description language used in the Adobe Systems' Acrobat document exchange system, which is restricted neither by device nor resolution. PDF displays documents in a way that is independent of the original application software, hardware, and operating system used to create those documents. A PDF document can contain any combination of text, graphics, and images.

Protocol

A set of rules that govern the transmission of data across a network. Examples of protocols are FTP, DHCP, BOOTP, RARP, IPP, TCP/IP, and LDAP.

PS

PostScript. A representative page descriptive language developed by Adobe, that provides flexible font capability and high-quality graphics, especially for high-resolution printing.

R

Remote UI

Remote User Interface. The Remote UI is software that enables you to perform operations which are usually performed on the machine's control panel, using a Web browser (such as Netscape Navigator/Communicator or Microsoft Internet Explorer) over a network.

Index

A

Adding front or back covers to document, 3-22 Available paper sizes list, 6-2

В

Booklet printing, 3-18

С

Changing order of pages (Mac OS X 10.3 or later), 4-5 Checking current print settings, 4-32 Color adjustment settings, 4-21 Color filter, 4-7 Color printing, 4-16 Creating form file, 4-8 Creating tabs, 3-30 Custom paper, 3-33

Ε

Error handling, 4-39

F

File format, 4-38 File menu, 4-41 Finishing options, specifying, 3-15 Booklet printing, 3-18 Selecting, 3-15 Stapling documents, 3-17 Form file, creating, 4-8

G

Gradation settings, 4-19

Η

Halftone settings, 4-17 Help, 1-5

I

Inserting sheets into document, 3-24 Inserting tab paper, 3-27 Installer, 2-6 Installing printer driver, 2-2 Installing software, 2-2 Printer driver, 2-2 Uninstalling printer driver, 2-6

J

Job Accounting feature, 4-30

0

Online Help, 1-5 Operating system software, 1-4 Order of pages, changing (Mac OS X 10.3 or later), 4-5 Overlay printing, 4-8 Creating form file, 4-8 Printing with overlay, 4-11

Ρ

Paper orientation, specifying, 3-2 Paper size, 6-2 Paper size, specifying, 3-4 Paper source, specifying, 3-20 Adding front or back covers to document, 3-22 Creating tabs, 3-30 Inserting sheets into document, 3-24 Inserting tab paper, 3-27 Selecting paper source, 3-20 PDF, 4-35, 6-5 Preset, 4-34 Print document time, setting (Mac OS X 10.3 or later), 4-3 Print notification option, 4-14 Print guality, 4-16 Print sets and ranges, 3-7 Printer configuration, 2-17 Printer menu, 4-42 Printer name, 6-2 Printing document, 2-19 Printing document in toner save mode, 3-36 Printing multiple pages on one sheet, 3-9 Printing on custom paper, 3-33 Printing, 3-35 Registering, 3-33 Printing with overlay, 4-11 Promoting print job, 4-28 Protocol, 6-5 PS, 6-5 PS Printmonitor, 4-40 File menu, 4-41

Printer menu, 4-42 PS Printmonitor window, 4-43 Starting PS Printmonitor, 4-40

R

ReadMe.rtf file, 1-5 Remote UI, 6-5

S

Saving document as file, 4-38 Saving document in PDF format, 4-35 Saving printer settings, 4-34 Scaling document, 3-3 Secured printing, 4-26 Sending document data to User Inbox, 4-23 Setting print document time (Mac OS X 10.3 or later), 4-3 Setting up printer configuration, 2-17 Specifying color filter (Mac OS X 10.3 or later), 4-7 Specifying error handling method, 4-39 Specifying finishing options, 3-15 Booklet printing, 3-18 Selecting finishing option, 3-15 Stapling documents, 3-17 Specifying paper orientation, 3-2 Specifying paper size, 3-4 Specifying paper source, 3-20 Specifying print quality (Color Printers), 4-16 Color printing, 4-16 Configuring printers color adjustment settings, 4-21 Gradation settings, 4-19 Halftone setting, 4-17 Specifying print quality (Resolution), 4-15 Specifying print sets and ranges, 3-7

Appendix •

Specifying printer settings, 2-10 Stapling documents, 3-17 Starting PS Printmonitor, 4-40 Supported Canon Products, 1-2 System requirements, 1-4 Computer, 1-4 Operating system software, 1-4

Т

Tab paper, 3-27, 3-30 Toner save mode, 3-36 Troubleshooting, 5-2 Two-sided printing, 3-11

U

User Inbox, 4-23 Using print notification option, 4-14 Using PS Printmonitor, 4-40, 4-43 File menu, 4-41 Printer menu, 4-42 PS Printmonitor window, 4-43 Starting PS Printmonitor, 4-40

W

Where to find Help, 1-5 Canon authorized dealers, 1-5 Online Help, 1-5 ReadMe.rtf file, 1-5



CANON INC. 30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan CANON U.S.A., INC. One Canon Plaza, Lake Success, NY 11042, U.S.A. CANON CANADA INC. 6390 Dixie Road Mississauga, Ontario L5T 1P7, Canada CANON EUROPA N.V. Bovenkerkerweg 59-61 1185 XB Amstelveen, The Netherlands CANON FRANCE S.A.S. 17, quai du Président Paul Doumer 92414 Courbevoie Cedex, France CANON COMMUNICATION & IMAGE FRANCE S.A.S. (Pour les utilisateurs de l'imprimante laser uniquement) 12, rue de l'Industrie 92414 Courbevoie Cedex, France CANON (U.K.) LTD. Woodhatch, Reigate, Surrey, RH2 8BF, United Kingdom CANON DEUTSCHLAND GmbH Europark Fichtenhain A10, 47807 Krefeld, Germany CANON ITALIA S.p.A. Via Milano, 8 20097 San Donato Milanese (MI) Italy CANON LATIN AMERICA, INC. 703 Waterford Way Suite 400 Miami, Florida 33126 U.S.A. CANON AUSTRALIA PTY. LTD 1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia CANON CHINA CO., LTD 15F Jinbao Building No.89 Jinbao Street, Dongcheng District, Beijing 100005, China CANON SINGAPORE PTE. LTD. 1 HarbourFront Avenue #04-01 Keppel Bay Tower, Singapore 098632 CANON HONGKONG CO., LTD 19/F., The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong