


# HANNSpree 快速啟動指南


## F621-15A1 15 吋液晶電視

這份《快速啟動指南》的目的，是在協助您快速的架設並使用您的電視。有關安裝及安全注意事項的詳盡資訊，請務必參閱隨附的《使用手冊》。

### 前視圖

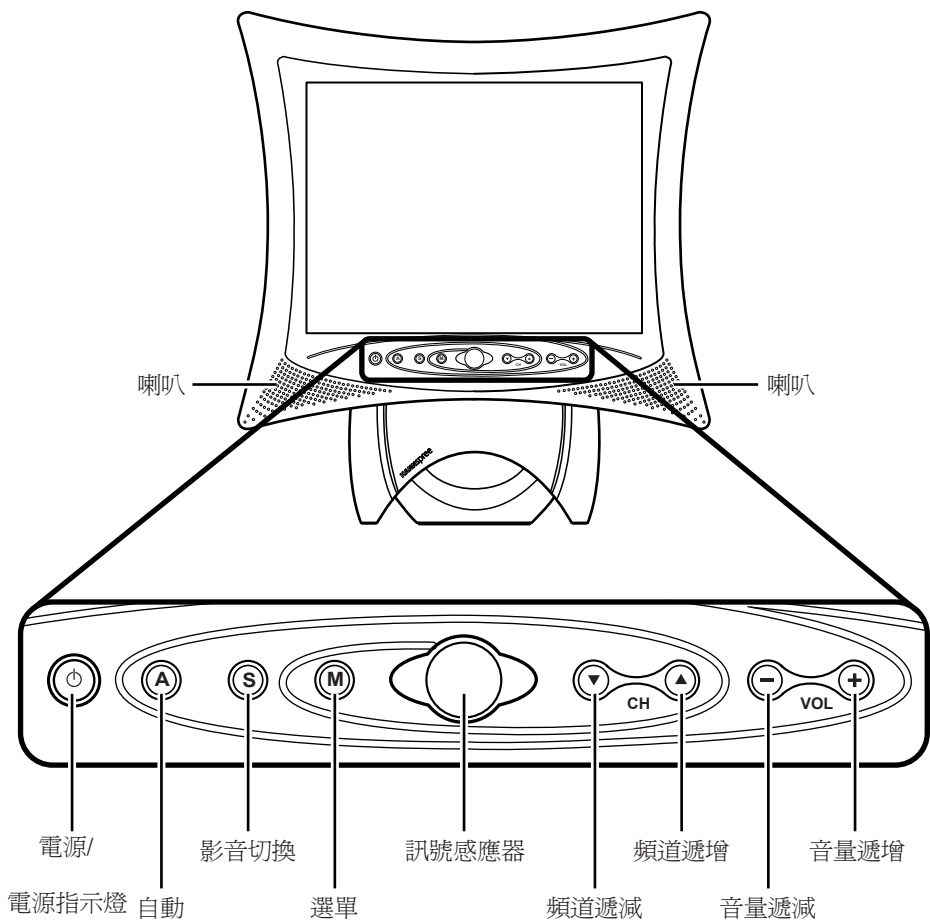


### 後視圖

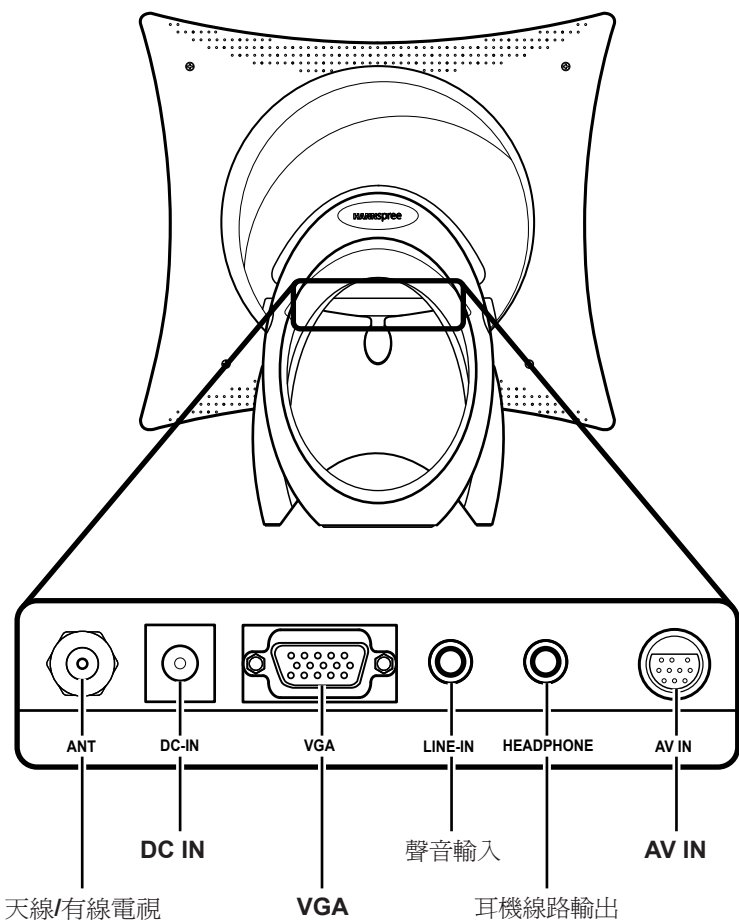


## 連接各式接線


### 連接至天線/有線電視

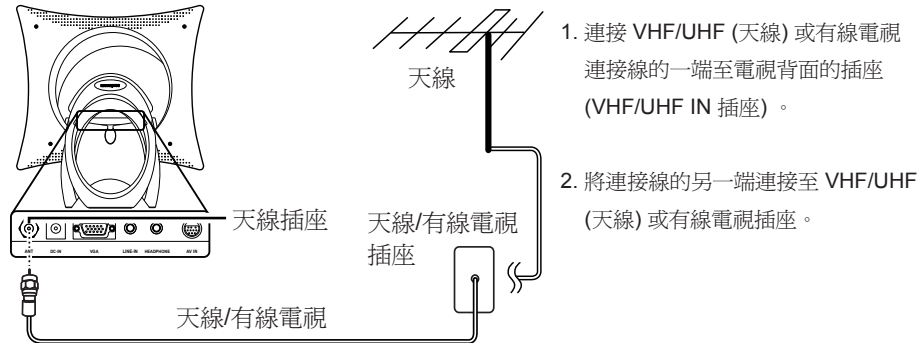

### 連接至VCR、VCD、DVD播放器或電視遊樂器

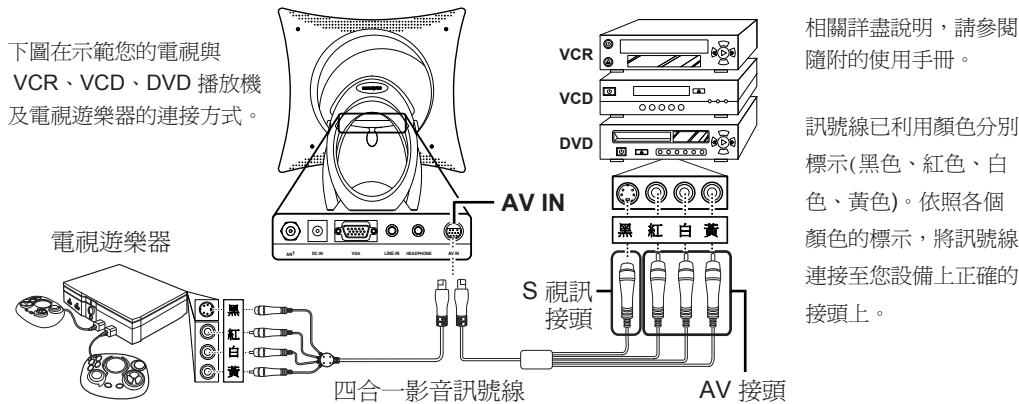

### 連接電源轉換器

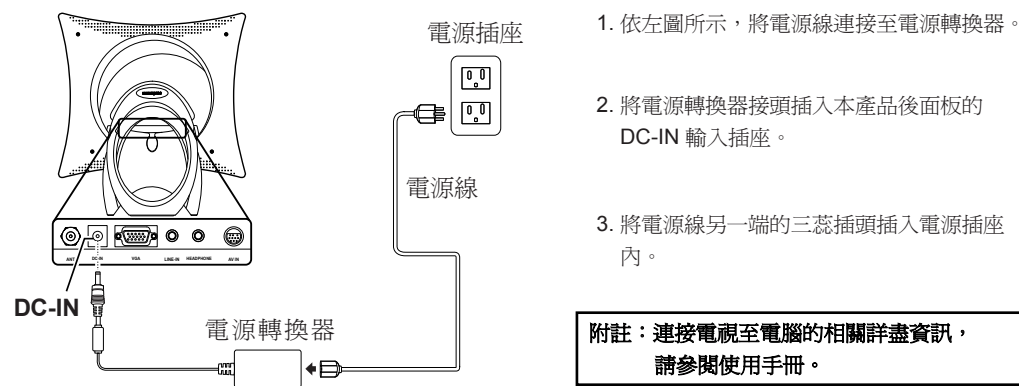

## 開始操作


### 觀賞電視或有線電視

1. 按下**電源**按鈕，開啓您的電視。
2. 按 **SOURCE** 按鈕，選擇「電視」。
3. 按下 **MENU/ENTER** 按鈕，進入選單。
4. 按**頻道遞增**按鈕選擇電視設定。
5. 按 **MENU/ENTER** 按鈕。
6. 按**頻道遞增**按鈕選擇「電視/有線電視」。

### 使用其他裝置

確認您的電視已開啓，而且已連接外部裝置，如 DVD 播放器。

按下控制面板上的 **SOURCE** 按鈕，選擇不同的來源訊號。電視頻道號碼、AV1 或 PC 會顯示在螢幕上。

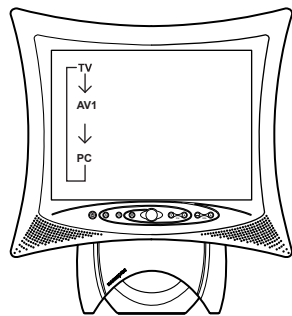


### 調整選單設定值


按 **MENU** 按鈕，進入選單。利用控制面板上的**頻道選擇**按鈕來調整設定值。

|             |             |             |
|-------------|-------------|-------------|
| <b>亮度</b>   | <b>對比</b>   | <b>影像設定</b> |
|             |             |             |
| <b>音質設定</b> | <b>電視設定</b> | <b>綜合功能</b> |
|             |             |             |

Front View

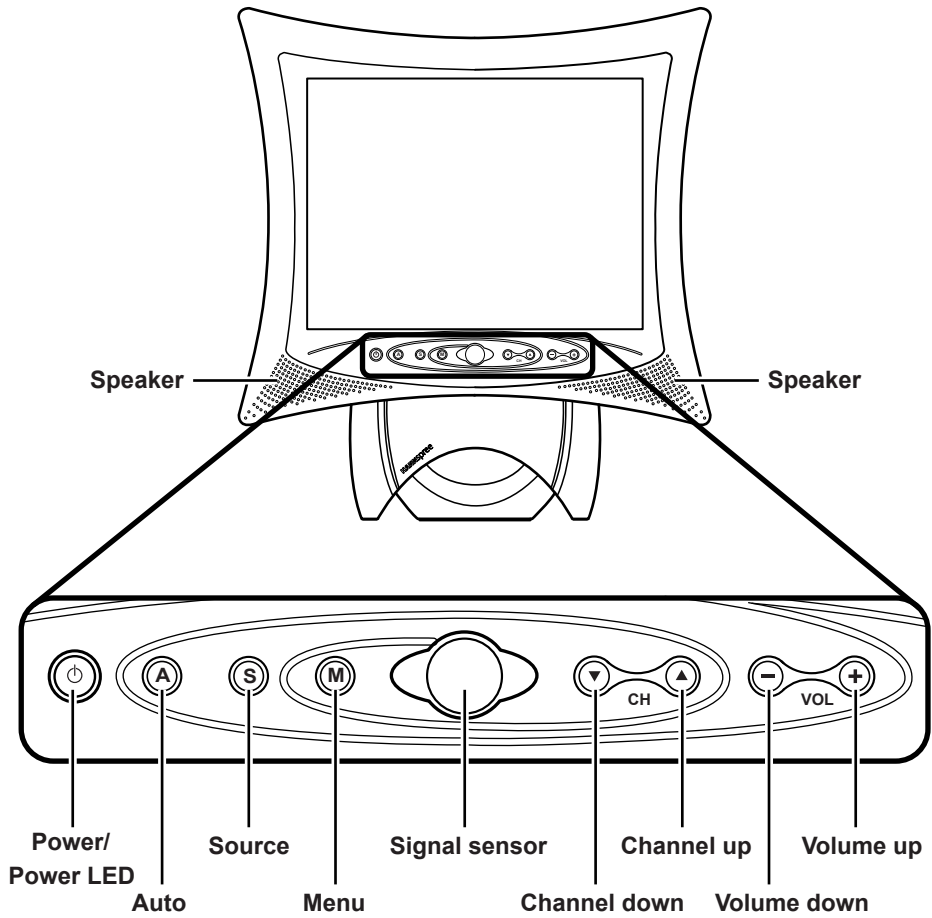


Rear View

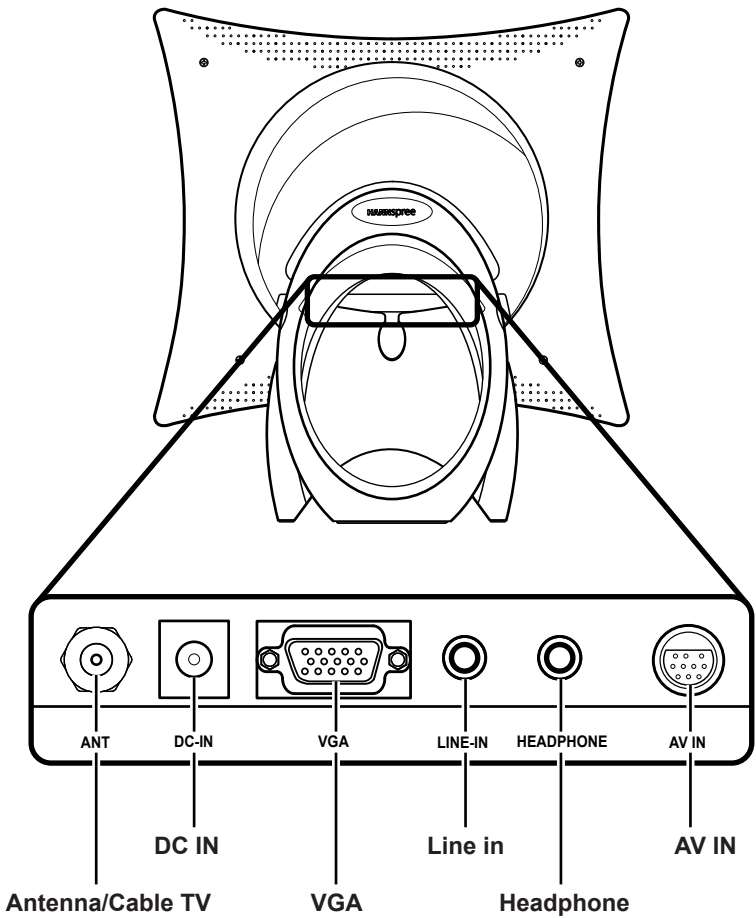

Making Connections

Connecting to Antenna/Cable TV

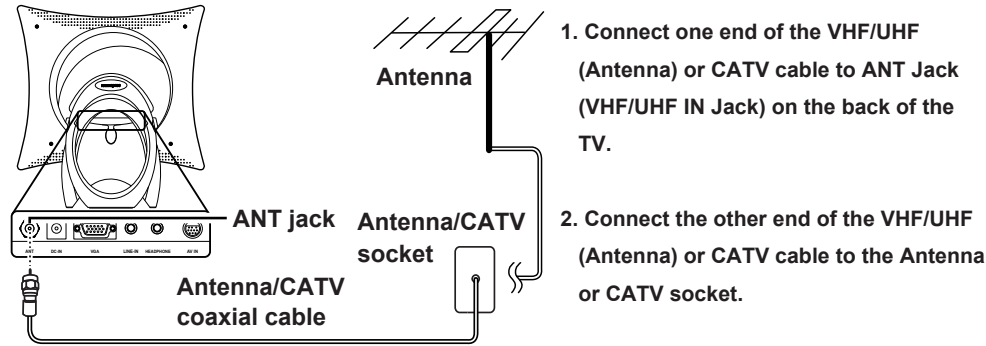


1. Connect one end of the VHF/UHF (Antenna) or CATV cable to ANT Jack (VHF/UHF IN Jack) on the back of the TV.

2. Connect the other end of the VHF/UHF (Antenna) or CATV cable to the Antenna or CATV socket.

Connecting to a VCR, VCD or DVD Player or Game Device


The illustration presented here shows you how to connect your TV to a VCR, VCD, DVD player, or game device.

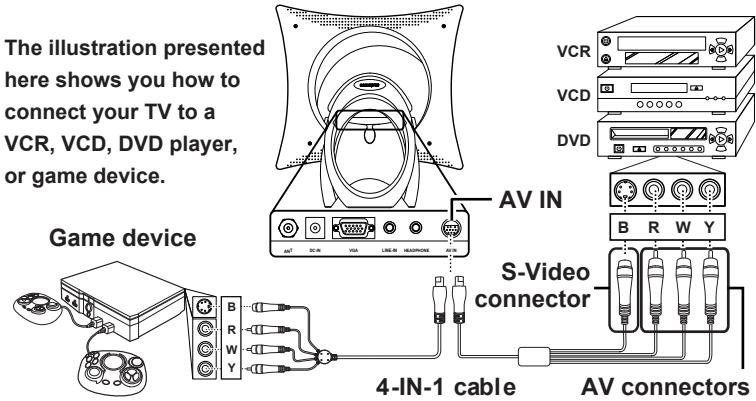

Refer to the user's manual included with your device for more detailed instructions.

The cables are color-coded (black, red, white, yellow). Connect each color-coded cable to the appropriate connector on your device.

Connecting the Power Adapter

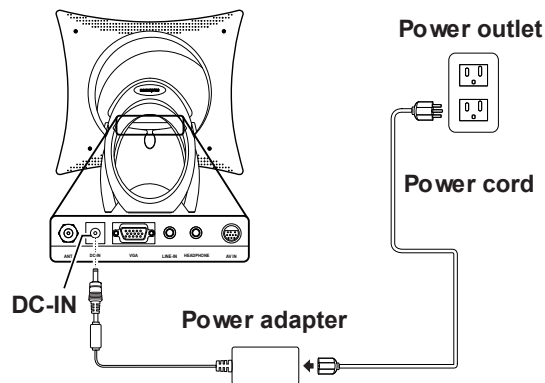

1. Connect the power cord to the power adapter as illustrated.

2. Plug the power adapter connector into the DC-IN input jack on the rear panel of the TV.

3. Insert the three-pronged plug at the other end of the power cord into a power outlet

Note : For information on connecting your TV to a computer, refer to the user's manual.

Getting Started

Watching Broadcast or Cable TV

1. Press the **POWER** button to turn on your TV.

2. Press the **SOURCE** button to select TV.

3. Press the **MENU/ENTER** button on control panel to enter the OSD menu.

4. Press the **▲** button to select TV Setting.


5. Press the **MENU/ENTER** button.

6. Press the **▲** button to select TV/CATV.

Using Other Devices

1. Make sure your TV is turned on and a device such as a DVD player is connected.


2. Press the **SOURCE** button on the control panel to select different source signals. TV/CATV channel number, AV1 or PC appear on the screen.

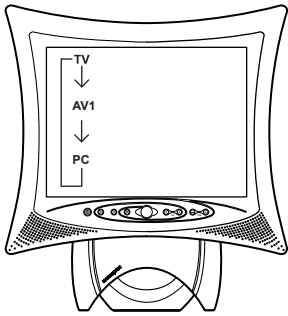


Adjusting OSD Settings

Press the **MENU/ENTER** button to enter the OSD menus. Use the channel buttons on the control panel to adjust settings.


Brightness

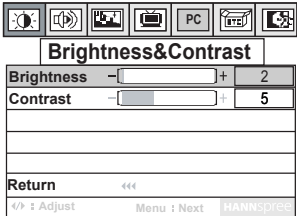


Contrast

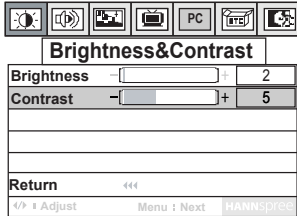


Video

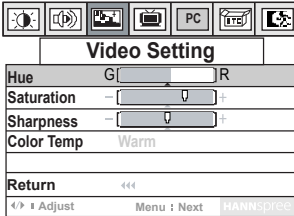

Audio

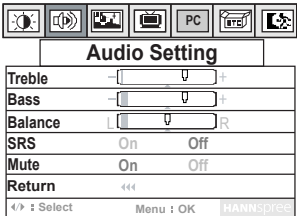

TV Settings

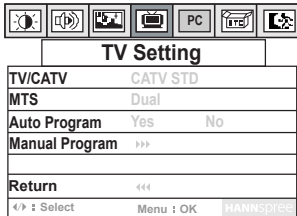

Miscellaneous

