

HANNSpree

HANNSpree, Inc.  
2F, No.362, Ruei-Guang Rd., Neihu District,  
Taipei City 114, Taiwan, R.O.C.  
TEL: 886-2-87520000  
FAX: 886-2-87527092  
[www.hannspree.com](http://www.hannspree.com)

瀚斯寶麗股份有限公司  
台北市114 內湖區  
瑞光路 362 號 2 樓  
電話：886-2-87520000  
傳真：886-2-87527092  
[www.hannspree.com](http://www.hannspree.com)

 
HANNSpree

# Remote Control

## 遙控器

### User's Manual

### 使用手冊

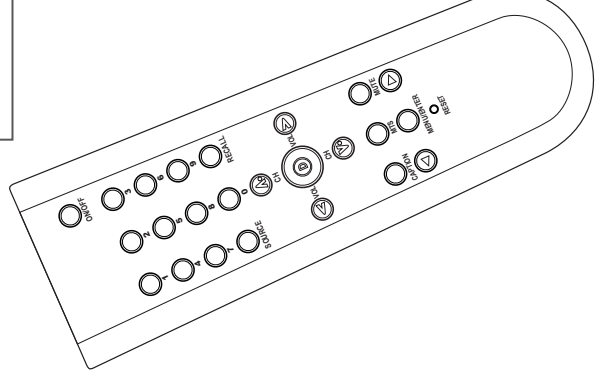

YES-001032  
Made in Taiwan  
NTSCRCTWEN1203  
MAH-000022

# Table of Contents

1. Warranty and Service .....	2
2. Preface .....	3
3. Introducing the Remote Control.....	4
4. Checking Package Contents .....	5
5. Getting to Know Your Remote Control .....	6
Inserting the Remote Control Battery .....	9
6. Troubleshooting .....	10

Thank you for purchasing our product. With this product, you will be able to enjoy superior lifestyle with advanced technology.

Please refer to the Hannspree warranty policy for detailed warranty and service information. You may also obtain the information from our customer service center. Our service representatives will be happy to serve to your satisfaction.

The Hannspree E-mail Address:  
[service@hannspree.com](mailto:service@hannspree.com)

This manual is designed to assist users in using the Remote Control. Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice.

## **Copyright**

 
© Copyright 2003 Hannspree, Inc.

All rights reserved. This product and related documentation are protected by copyright and are distributed under licenses restricting their use, copying, and distribution. No part of this documentation may be reproduced in any form by any means without prior written authorization of Hannspree, Inc., and its licensors, if any.

## Introducing the Remote Control

---

Thank you for purchasing this Remote Control. Your remote control is designed to be safe, versatile, and easy to use. The creative design makes it a fun addition to your TV.

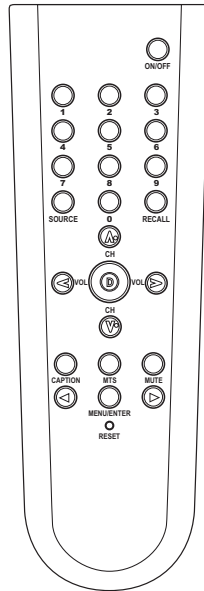


The control buttons located on the handy remote control let you change channels, adjust the volume, and change the display settings through an easy-to-use on-screen menu system.

## Checking Package Contents

 Make sure the following components are included in the box. Contact your vendor immediately if anything is missing or damaged.

### Remote Control

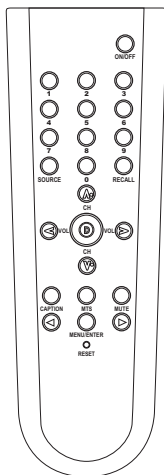


### User's Manual







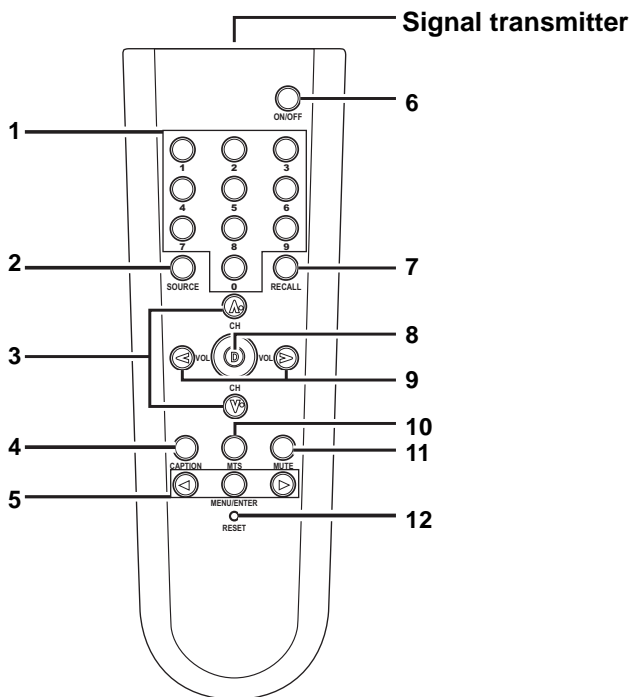 

### Lithium ion battery







## Getting to Know Your Remote Control



	Icon	Description	Function
1		Number buttons	Press these buttons to select a channel directly. Press 0-9 to enter the channel number. Press the 1 and 0 buttons for channel 10.
2		Source button	Press this button to cycle the video input sources.

	Icon	Description	Function
3		Channel select buttons	Press <b>CH</b> ▲ to increase the channel number. Press <b>CH</b> ▼ to decrease the channel number.
4		Caption (optional)	Press this button to view program subtitles (Closed caption ccc) features are only available in 15-inch, North America only).
5		Menu/Enter and arrow buttons	Press <b>MENU ENTER</b> to activate the OSD menu system to adjust various settings and personal preferences. press ◀ and ▶ to scroll through the on-screen-display menu.
6		Power button	Turns the TV power on or off.
7		Recall button	Press this button to return to the last channel selected.
8		Display button	Press this button to show messages on the screen, such as the mode and others. Press the button again to hide the displayed message.



	Icon	Description	Function
9		Volume adjust buttons	Press <b>VOL</b> ◀ to decrease the volume. Press <b>VOL</b> ▶ to increase the volume.
10		MTS button	When you press the MTS button a setting screen will appear. The highlighted mark indicates the status that is supported by the current channel sound system, such as primary channel, secondary channel and bi-channel.
11		Mute button	Press this button to eliminate sound. The word MUTE appears on the top left corner of the screen. Press the mute button again or press the volume buttons directly to restore sound.
12		Reset button	Press this button to return all settings to their factory-set default values.

#### Notes

- The operational distance is shortened when the signal sensor is directly exposed to strong light.
- Protect the remote control from shock and vibration to avoid damage.
- Do not place the remote control in hot or humid locations.
- Aim the transmitter on the remote control at the signal sensor and ensure there are no obstacles between the transmitter and sensor.

---





## Inserting the Remote Control Battery

- 1 Open the battery compartment cover at the back of the remote control (A).
- 2 Insert the battery paying attention to the polarity markings inside the battery compartment (B) and set the battery in place (C).
- 3 Replace the battery compartment cover (D).



### Caution

- If the remote control is not used for a long period, remove the battery and store them properly.
- Handle damaged or leaking battery carefully, and wash hands with soap if they come in contact with leaked chemical fluids.
- Refer to your local recycling or waste disposal rules and contact a local waste disposal vendor to dispose of used battery.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacture. Discard used battery according to manufacturer's instructions.
- Check the remote control battery on a regular basis. Clean any stains on the rear battery cover immediately and use new battery if fluid is leaking from old battery.

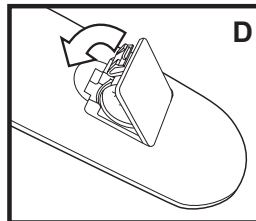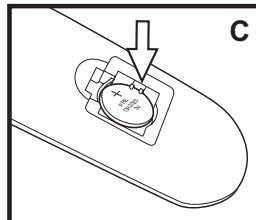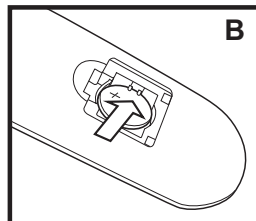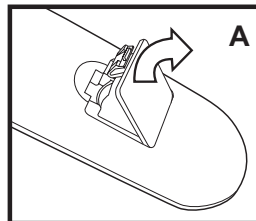

Situation	Solution
Remote control doesn't work.	<ul style="list-style-type: none"><li>• Make sure the battery is inserted correctly.</li><li>• Replace the battery with a new one.</li><li>• Make sure the TV power cord is plugged in.</li><li>• Make sure the path between the remote control and the sensor is clear.</li><li>• Try operating the remote control at a closer distance to the TV. Don't exceed an angle of 30° from the sensor.</li></ul>

## This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

# 目錄

1. 產品保固與服務 .....	2
2. 序言 .....	3
3. 遙控器簡介 .....	4
4. 包裝內容 .....	5
5. 使用遙控器 .....	6
裝入遙控器電池 .....	9
6. 故障排除 .....	10

感謝您購買本公司的產品。使用本產品，您能夠已先進的科技享受到優越的生活品味。

有關產品的保固服務資訊，請參閱 **Hannspree** 產品保固條款，或直接聯絡 **Hannspree** 客戶服務中心。我們的客服人員將十分樂意提供讓您滿意的服務。

Hannspree 電子郵件地址：  
[service@hannspree.com](mailto:service@hannspree.com)

本手冊是設計來協助使用者使用本產品。本文件所含訊息業經審慎地檢查以確保其準確度，然而，並不保證內容之正確性。且本文件內容之訊息可能未經通知而變更。

 
## 著作權

© Copyright 2003 Hannspree, Inc.

保留所有權利。本產品與相關文件均受到著作權保護，而且產品與相關文件的散佈，必須受到限制其使用、複製與散佈的授權規範。未獲得 Hannspree, Inc. 和其授權人事先書面許可，不得以任何形式或方法複製本文件的任何部份。




感謝您購買這台遙控器。您的遙控器具有安全、多功能與方便使用等特性。除了您的電視之外，極具創意的設計使它也非常地有趣。

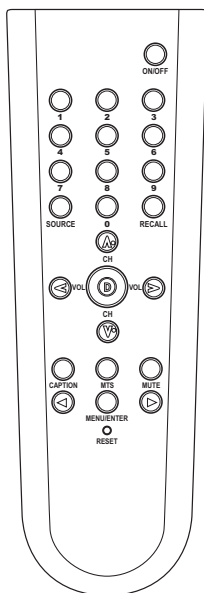

位於精巧遙控器上面的控制按鈕可讓您透過易於使用的螢幕顯示功能表系統來改變頻道、調整音量和改變顯示的設定。

請確認包裝內含有以下物品。如果有任何物品遺漏或損壞，請立刻聯絡您當地的廠商。

### 遙控器

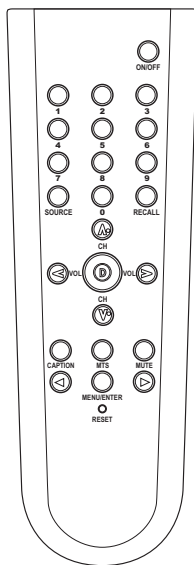 




### 使用手冊





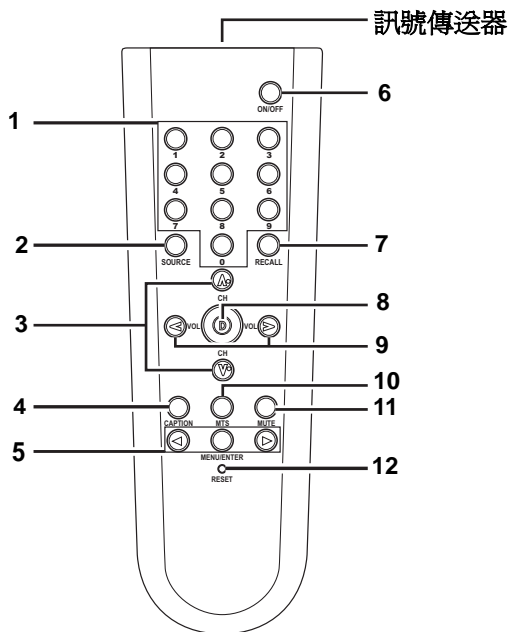 













### 鋰電池





圖示	說明	功能
1 	數字按鈕	按下數字按鈕可直接選擇頻道。按下 0 ~ 9 輸入頻道號碼。按 1、0 按鈕即代表選擇頻道 10。
2 	影音切換按鈕	按下此按鈕，可以循環選擇影像輸入來源。

圖示	說明	功能
3		頻道選擇按鈕
		按 <b>CH</b>  按鈕增加頻道號碼。 按 <b>CH</b>  按鈕減少頻道號碼。
4		字幕按鈕
		按下此鈕可以看見提供有字幕服務的節目中的字幕（美規） (Closed Caption (CC) 功能僅適用於北美地區 15 吋（含）以上機種。）
5		選單 / 輸入方向按鈕
		按下 <b>MENU/ENTER</b> 按鈕可啟動選單系統，並依個人喜好調整各種設定。按下  及  按鈕，捲動螢幕功能設定選單。
6		電源按鈕
		開啓 / 關閉電視的電源。
7		頻道往返按鈕
		按下此按鈕可返回上一個選擇的頻道。
8		顯示按鈕
		按下此鈕可於螢幕上顯示訊息，例如頻道號碼、聲音多重和其它訊息。再次按下本鈕可關閉顯示訊息。
9		音量調整按鈕
		按 下 <b>VOL</b>  按鈕提高音量，或 按 下 <b>VOL</b>  按鈕降低音量。

	圖示	說明	功能
10		立體聲 / 雙語 設定按鈕	(聲音多重) 按下 <b>MTS</b> 設定按鈕，可啓用立體聲 / 雙語功能。
11		靜音按鈕	按下本按鈕消除播放的聲音。再次按下 <b>MUTE</b> 按鈕，或按下 <b>VOLUME</b> 按鈕即可回復聲音撥放。
12		重置按鈕	按下這個按鈕可將所有設定值重新設定成原預設值。

#### 附註

- 訊號感應器如果直接暴露在強光下，會縮短有效的操作距離。
- 請勿撞擊或震動遙控器以避免損壞遙控器。
- 請勿將遙控器放置於濕熱的環境中。
- 將遙控器的訊號傳送器對準訊號感應器，並且確認傳送器與感應器之間沒有任何阻礙物品。

 
 
 
 
## 裝入遙控器電池

- 1 開啓遙控器後方的電池蓋 (A)。
- 2 注意電池匣內的極性標記 (B)，並依極性裝入電池 (C)。
- 3 裝回電池蓋 (D)。



### 注意

- 長時間不使用遙控器時，請取出電池並妥為保存。
- 處理已受損或漏液的電池時請特別小心。若不慎沾染外流的化學液體，請立即以肥皂洗淨雙手。
- 請根據您當地的相關法規，並且聯絡當地的廢電池回收業者處理廢棄的電池。
- 定期檢查遙控器電池。舊電池外流液體時，請立即清除後電池蓋的污垢，並且更換新電池。
- 若電池放置的位置不正確，則易產生爆炸的危險。產品製造商建議您，使用相同或同型號的電池。請依製造商的建議丟棄用過的電池。

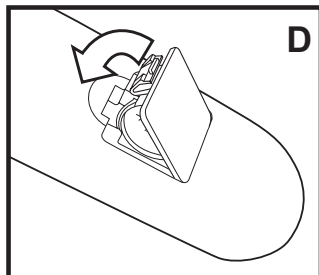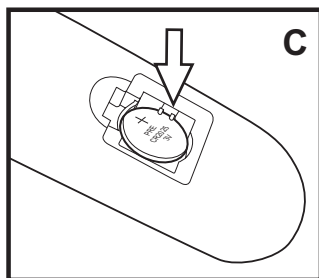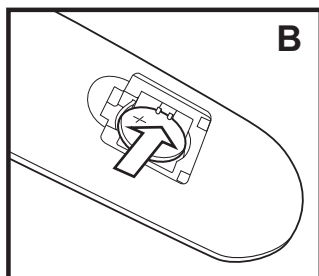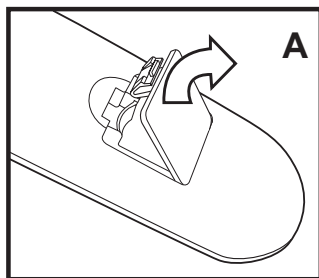

問題	解決方法
無法使用遙控器。	<ul style="list-style-type: none"><li>• 確認已正確裝入電池。</li><li>• 更換新電池。</li><li>• 確認已插好電視的電源線。</li><li>• 確認遙控器與電視訊號感應器之間沒有任何阻礙物。</li><li>• 試著更靠近電視使用遙控器。使用時，遙控器與訊號感應器之間的範圍，請勿超過 30 度。</li></ul>

## This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



[illegible]