



KVM Over the NET™
KN2124v / KN2140v / KN4124v / KN4140v /
KN2132 / KN4116 / KN4132

User Manual



FCC Information

This is an FCC Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

RoHS

 
This product is RoHS compliant.

SJ/T 11364-2006

The following contains information that relates to China.

部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
电器部件	●	○	○	○	○	○
机构部件	○	○	○	○	○	○

- : 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求之下。
- : 表示符合欧盟的豁免条款，但该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006的限量要求。
- ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006的限量要求。



User Information

Online Registration

Be sure to register your product at our online support center:

International		http://support.aten.com
North America	ATEN TECH	http://www.aten-usa.com/product_registration
	ATEN NJ	http://support.aten.com

Telephone Support

For telephone support, call this number:

International		886-2-8692-6959
North America	ATEN TECH	1-888-999-ATEN
	ATEN NJ	1-732-356-1703

User Notice

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed *as is*. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.

Package Contents

The KVM Over the NET™ switch package consists of:

- 1 KN2124v, KN2140v, KN4124v, KN4140v, KN2132, KN4116, or KN4132 KVM Over the Net™ Switch
- 2 SA0142 Serial Adapters (RJ45-F to DB9-M; DTE to DCE)
- 1 Grounding Wire
- 1 Power Cord (KN4116 / KN2132 / KN4132 only)
- 2 Power Cords (KN2124v / KN2140v / KN4124v / KN4140v only)
- 1 5-in-1 Console Cable (KN2124v / KN2140v / KN4124v / KN4140v only)
- 1 Rack Mount Kit
- 1 Foot Pad Set (4 pcs.)
- 1 User Manual*
- 1 Quick Start Guide

Check to make sure that all of the components are present and in good order. If anything is missing, or was damaged in shipping, contact your dealer.

Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the switch or to any other devices on the installation.

* Features may have been added since this manual was printed. Please visit our website to download the most up to date version of the manual.

Copyright © 2006-2009 ATEN® International Co., Ltd.
Manual Part No. PAPE-0296-AX2G
F/W Version: 1.1.106
Manual Date: 2009-03-10

Altusen and the Altusen logo are registered trademarks of ATEN International Co., Ltd. All rights reserved.
All other brand names and trademarks are the registered property of their respective owners.

Contents

FCC Information	ii
SJ/T 11364-2006	ii
User Information	iii
Online Registration	iii
Telephone Support	iii
User Notice	iii
Package Contents	iv
About This Manual	xii
Overview	xii
Conventions	xiii
Terminology	xiii
Product Information	xiv

Chapter 1.

Introduction

Overview	1
Features	4
All Models	4
V-Series Exclusive	6
System Requirements	7
Local Client Computers	7
Remote Servers	7
Video	8
KVM Adapter Cables	8
Operating Systems	9
Browsers	9
Components	10
KN2124v / KN2140v / KN4124v / KN4140v Front View	10
KN4132 / KN4116 / KN2132 Front View	10
KN2124v / KN2140v / KN4124v / KN4140v Rear View	13
KN4132 / KN4116 / KN2132 Rear View	13

Chapter 2.

Hardware Setup

Overview	17
Before You Begin	17
Stacking and Rack Mounting	18
Stacking	18
Rack Mounting	19
Rack Mounting - Front	19
Rack Mounting - Rear	21
Single Stage Installation	23
KN2124v / KN2140v / KN4124v / KN4140v	
Single Stage Installation Diagram	25
KN2132 / KN4116 / KN4132	
Single Stage Installation Diagram	26

Adapter Cable Connection Diagram	27
Two Stage Installation	28
Two Stage Installation Diagram	29
Hot Plugging	30
The Adapter ID Function	30
Powering Off and Restarting	30
Port ID Numbering	31
Port Selection	31

Chapter 3.

Super Administrator Setup

Overview	33
First Time Setup	33
Network Setup	35
Changing the Super Administrator Login	36
Moving On	38

Chapter 4.

Logging In

Overview	39
Local Console Login	39
Browser Login	40
WinClient AP Login	41
The Connection Screen	42
The File Menu	43
Java Client AP Login	44

Chapter 5.

The User Interface

The Web Browser Main Page	47
Page Components	48
The Tab Bar	49
The GUI Main Page	50
The Local Console GUI Main Page	52
The Control Panel	53
WinClient Control Panel	53
Control Panel Functions	55
Macros	57
Hotkeys	57
User Macros	59
System Macros	62
Search	64
Video Settings	65
Gamma Adjustment	67
The Message Board	68
The Button Bar	69
Message Display Panel	69
Compose Panel	69

User List Panel	70
Virtual Media	71
Virtual Media Icons	73
Zoom	74
The On-Screen Keyboard	75
Mouse Pointer Type	76
Mouse DynaSync Mode	77
Automatic Mouse Synchronization (DynaSync)	77
Mac and Linux Considerations	78
Manual Mouse Synchronization	78
Control Panel Configuration	79
The Java Control Panel	81

Chapter 6.

Port Access

Overview	83
Web Browser Interface	83
GUI Interface	83
The Port Selection Sidebar	85
The Port Selection Tree	85
Port Views	86
Port Utilities	86
Port Properties	88
Port Naming	90
Scan	91
Array	91
Filter	91
Connections	93
Device Level	93
Port Level	94
History	95
Favorites	96
Adding a Favorite	96
Modifying a Favorite	97
User Preferences	98
Log	100
Filter	101
Sessions	102
Access	103
Device Level	103
Port Level	104
The Status Panel	105
The Properties Panel	105
Saving Changes	105

Chapter 7.

User Management

Overview	107
----------------	-----

Web Browser Interface	107
GUI Interface	107
Users	109
Adding Users	109
Modifying User Accounts	112
Deleting User Accounts	112
Groups	113
Creating Groups	113
Modifying Groups	115
Deleting Groups	115
Users and Groups	116
Assigning Users to a Group From the User's Notebook	116
Removing Users From a Group From the User's Notebook	117
Assigning Users to a Group From the Group's Notebook	118
Removing Users From a Group From the Group's Notebook	119
Device Assignment	120
Assigning Device Permissions From the User's Notebook	120
Filters	122
Assigning Device Permissions From the Groups' Notebook	122

Chapter 8.

Device Management

Overview	123
Web Browser Interface	123
GUI Interface	123
Device Information	124
Network	126
Service Ports	127
NIC Settings	128
Redundant NIC	128
IP Address	129
DNS Server	129
Network Transfer Rate	129
ANMS	130
IP Installer	131
SMTP Settings	131
Log Server	132
SNMP Settings	132
Syslog Server	132
Disable Local Authentication	132
RADIUS Settings	133
LDAP / LDAPS Authentication and Authorization Settings	134
CC Management Settings	134
OABC	135
Security	136
IP and MAC Filtering	137
Adding Filters	137

Modifying Filters	137
Deleting Filters	138
Login String	138
Account Policy	138
Encryption	139
Private Certificate	139
Using a Private Encryption Key	139
Importing a Signed SSL Server Certificate	139
Customization	140
Login Failures	140
Working Mode	141
Miscellaneous	142
Adapter Attributes	142
Reset on Exit	143
Date/Time	144
Time Zone	144
Date	145
Network Time	145
.	146

Chapter 9.

Maintenance

Overview	147
Web Browser Interface	147
GUI Interface	147
Page Layout	148
Firmware File	148
Options	148
The Main Panel	148
Upgrading the Main Firmware	150
Adapter Firmware Upgrade	151
Firmware Upgrade Recovery	152
Adapter Cable Firmware Upgrade Recovery	152
Backup/Restore	153
Backup	153
Restore	154

Chapter 10.

Download

Overview	155
--------------------	-----

Chapter 11.

Port Operation

Overview	157
The Port Toolbar	158
The Toolbar Icons	159
Toolbar Hotkey Port Switching	160
Auto Scanning	160

Setting the Scan Interval:	160
Invoking Auto Scan	160
Pausing Auto Scan	161
Exiting Auto Scan	161
Skip Mode	161
Recalling the Port Access Page	162
OSD Hotkey Summary Table	162
Panel Array Mode	163
Panel Array Toolbar	164
Multiuser Operation	165
Users and Buses.	166

Chapter 12.

The Log Server

Installation.	167
Starting Up	168
The Menu Bar.	169
Configure.	169
Events	170
Search:	170
Maintenance:	171
Options	172
Help.	172
The Log Server Main Screen	173
Overview	173
The List Panel	174
The Event Panel	174

Chapter 13.

LDAP Server Configuration

Introduction	175
Install the Windows 2003 Support Tools	175
Install the Active Directory Schema Snap-in.	176
Create a Start Menu Shortcut Entry	176
Extend and Update the Active Directory Schema.	177
Creating a New Attribute	177
Extending the Object Class With the New Attribute	179
Editing Active Directory Users.	181

Appendix

Safety Instructions	185
General	185
Rack Mounting	187
Technical Support.	188
International	188
North America	188
Specifications	189
KN2124v / KN4124v	189

KN2140v / KN4140v	190
KN4116	191
KN2132 / KN4132	192
Troubleshooting	193
General Operation	193
Mouse Problems	195
Virtual Media	197
Web Browser	197
The WinClient ActiveX Viewer and the WinClient AP	198
Mac Systems	198
The Java Applet and Java Client AP	199
Sun Systems	200
The Log Server	201
Panel Array Mode	201
IP Address Determination	202
The Local Console	202
IP Installer	202
Browser	203
Port Forwarding	204
PPP Modem Operation	205
Basic Setup	205
Connection Setup Example (Windows XP)	206
KA7140 Configuration and Operation	207
Configuration	207
Operation	207
Additional Mouse Synchronization Procedures	208
Windows:	208
Sun / Linux	209
Additional Video Resolution Procedures	210
Trusted Certificates	211
Overview	211
Installing the Certificate	212
Certificate Trusted	213
Fan Location and Speed Information	214
Fan Location	214
Fan Speed	214
Temperature Sensor Location and Information	215
Clear Login Information	216
Factory Default Settings	217
Serial Adapter Pin Assignments	217
Supported KVM Switches	218
Virtual Media Support	218
WinClient ActiveX Viewer / WinClient AP	218
Java Applet Viewer / Java Client AP	218
Limited Warranty	219

About This Manual

This User Manual is provided to help you get the most from your KVM Over the NET™ system. It covers all aspects of installation, configuration and operation. An overview of the information found in the manual is provided below.

Overview

Chapter 1, Introduction, introduces you to the KN2124v / KN2140v / KN4124v / KN4140v / KN2132 / KN4116 / KN4132 KVM Over the NET™ System. Its purpose, features and benefits are presented, and its front and back panel components are described.

Chapter 2, Hardware Setup, provides step-by-step instructions for setting up your installation, and explains some basic operation procedures.

Chapter 3, Super Administrator Setup, explains the procedures that the super administrator employs to set up the KVM Over the NET™ switch network environment, and change the default username and password.

Chapter 4, Logging In, describes how to log in to the KVM Over the NET™ switch with each of the available access methods: from a local console; an internet browser; a stand-alone Windows application (AP) program; and a stand-alone Java application (AP) program.

Chapter 5, The User Interface, describes the layout and explains the components of the KVM Over the NET™ user interface.

Chapter 6, Port Access, describes the Port Access page and how to configure the options it provides regarding port manipulation.

Chapter 7, User Management, shows super administrators and administrators how to create, modify, and delete users and groups, and assign attributes to them.

Chapter 8, Device Management, shows super administrators how to configure and control overall KVM Over the NET™ switch operations.

Chapter 9, Maintenance, explains how to upgrade the KVM Over the NET™ switch firmware, as well as the firmware of the KVM Adapter Cables used to connect its ports to the installed devices.

Chapter 10, Download, describes how to download stand-alone AP versions of the Win Client, the Java Client, the Log Server, and Power Over the Net (PON) programs.

Chapter 11, Port Operation, provides detailed information on accessing and operating the devices connected to the KVM Over the NET™ switch ports.


Chapter 12, The Log Server, explains how to install and configure the Log Server.

Chapter 13, LDAP Server Configuration, explains how to configure the KVM Over the NET™ switch for LDAP / LDAPS authentication and authorization with Active Directory or OpenLDAP.

An Appendix, at the end of the manual provides technical and troubleshooting information.

Conventions

This manual uses the following conventions:

Monospaced	Indicates text that you should key in.
[]	Indicates keys you should press. For example, [Enter] means to press the Enter key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt].
1.	Numbered lists represent procedures with sequential steps.
◆	Bullet lists provide information, but do not involve sequential steps.
→	Indicates selecting the option (on a menu or dialog box, for example), that comes next. For example, Start → Run means to open the <i>Start</i> menu, and then select <i>Run</i> .
	Indicates critical information.

Terminology

Throughout the manual we make reference to the terms *Local* and *Remote* in regard to the equipment used in a KVM Over the NET™ switch installation.

- ◆ By **Local**, we mean the place where the user is operating from – whether he is connecting to the switch from the Local Console right next to the switch, or from a Local Client login located half-way around the world.
- ◆ By **Remote**, we mean the equipment that connects to the switch via the Adapter Cables – as in “remote servers.”

Product Information

For information about all ALTUSEN products and how they can help you connect without limits, visit ALTUSEN on the Web or contact an ALTUSEN Authorized Reseller. Visit ALTUSEN on the Web for a list of locations and telephone numbers:

International		http://www.aten.com
North America	ATEN TECH	http://www.aten-usa.com
	ATEN NJ	http://www.aten.com

Chapter 1

Introduction

Overview

The KN2124v / KN2140v / KN4124v / KN4140v / KN2132 / KN4116 / KN4132 switches are IP-based KVM control units that allow both local and remote operators to monitor and access multiple computers from a single console. A single KN4140v can control up to 40 computers, and by cascading up to 40 compatible 16 port switches, as many as 640 computers can be controlled on a complete two stage installation.


The switches are differentiated according to the number of buses they support and the number of KVM ports they provide – as shown in the table below:

Model	Bus Support	KVM Ports
KN2124v	1 Local; 2 Remote	24
KN2140v	1 Local; 2 Remote	40
KN4124v	1 Local; 4 Remote	24
KN4140v	1 Local; 4 Remote	40
KN2132	1 Local; 2 Remote	32
KN4116	1 Local; 4 Remote	16
KN4132	1 Local; 4 Remote	32

Each bus permits a separate user session so that up to three (KN2124v / KN2140v / KN2132) or five (KN4124v / KN4140v / KN4116 / KN4132) concurrent independent connections to the local servers can take place.

Since the KVM Over the NET™ switches use TCP/IP for their communications protocol, they can be accessed via their IP addresses from anywhere on the LAN, WAN, or Internet – whether the connecting computer is located down the hall, down the street, or half-way around the world. Remote operators can log in via their browser or make use of stand-alone Windows or Java GUI applications. Java allows the switches to work with Sun Java Runtime Environment (JRE) enabled operating systems – ensuring multi-platform operability. The client software allows operators to exchange keyboard, video and mouse signals with the computers attached to the KVM Over the NET™ switches as if they were present locally and working on the equipment directly.

Up to 32 users can share the remote buses. A *Message Board* feature allows them to communicate with each other to facilitate port sharing.

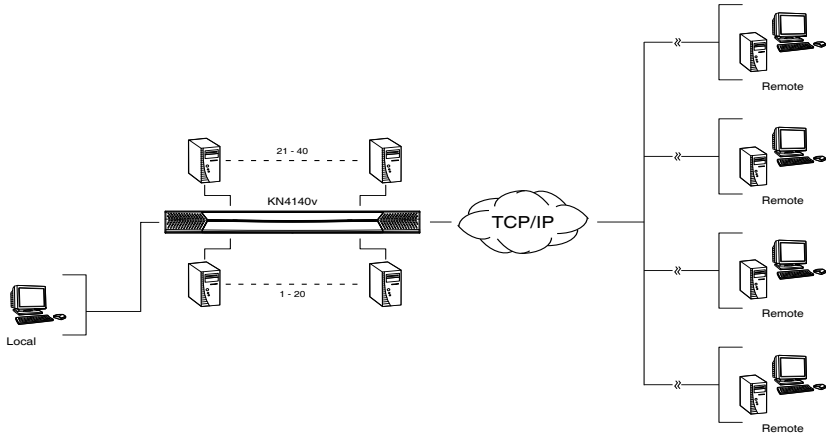

Administrators can handle a multitude of maintenance tasks with ease – from installing and running GUI applications, to BIOS level troubleshooting, routine monitoring, concurrent maintenance, system administration, rebooting and even pre-booting functions.

Local console operation is easily accomplished either by entering *hotkey* combinations from the keyboard with a full screen GUI display.

Monitoring the installation's activities couldn't be easier. An convenient *Auto Scan* feature permits automatic switching from port to ports at user-specified intervals, while the *Panel Array Mode* can display the video output of up to 40 computers at the same time.

The switches feature RJ-45 connectors allowing them to use CAT 5e cable to link to the computers. This space-saving innovation means that a full 16, 24, 32 or 40 port switch can be conveniently installed in a 1U system rack, and the installation can take advantage of the internal network wiring built into most modern commercial buildings.

Setup is fast and easy; plugging cables into their appropriate ports is all that is entailed. Because the switch intercepts keyboard input directly, there is no need to get involved in complex software installation routines, or to be concerned with incompatibility problems.

Since the firmware is upgradeable over the Net, you can stay current with the latest functionality improvements simply by downloading firmware updates from our website as they become available.

With its advanced security features, the KVM Over the NET™ switch provides the fastest, most reliable, most cost effective way to remotely access and manage widely distributed multiple computer installations.

KVM Over the NET™ switches have an *Adapter ID* function that stores port information like the adapter ID, OS, keyboard language, adapter name, operation modes and more, so that when you move a KVM Adapter Cable from one port to another, the switch recognizes the same adapter cable at the new location. Also, for greater ease of use when moving the adapter cable to another switch, the adapter ID, OS, keyboard language, adapter name, and operation modes of the port stay with the adapter.

With its advanced virtual media features, the KN2124v / KN2140v / KN4124v / KN4140v series of switches let you map DVD/CD drives and other storage media to a remote server. This function allows you to conduct file transfers, installs applications and OS patches, and perform diagnostics remotely. You can upgrade your entire installation from a single remote console located anywhere in the world.

The KN4140v offers dual power supplies so that if one of the power supplies fails, the second power supply automatically takes over. In addition to supporting dual power, the KN4140v guards against power failure from your server room outlets. If your server room has more than one power source, connecting the KN4140v power supplies to different power sources is a wise choice. If one of the server room power supplies loses power, the KN4140v will automatically adjust the power it draws from the second source to keep functioning.

The KN2124v/2140v/4124v/4140v models have support for four temperature sensors that can control up to six fans. The sensors regulate the fans to run at optimum speed depending on the server room temperature, throttling down when necessary, using energy more efficiently and prolonging the life of both the fans and the switch.

The KN2124v/2140v/4124v/4140v models are audio enabled. On the local unit, speakers and a microphone are supported; while remote units offer support for speakers only.

Features

All Models

- ♦ 16, 24, 32, or 40 port remote access KVM switch – monitor and control up to 16, 24, 32, or 40 computers on a single level, or control up to 640 computers in a two-level cascade
- ♦ Two 10/100/1000 Mbps NICs for redundant LAN or two IP operation
- ♦ Supports up to 5 bus sessions – 1 local and 2 (KN2132 / KN2124v / KN2140v) or 4 (KN4116 / KN4132 / KN4142v / KN4140v) remote administrators can simultaneously access separate ports
- ♦ Multi-user support – up to 64 user accounts – 1 local and 2 (KN2132 / 2124v / KN2140v) or 4 (KN4116 / KN4132 / KN4142v / KN4140v) remote users can simultaneously access separate ports – up to 32 users share the remote buses
- ♦ Remotely access computers via LAN, WAN, or the Internet; control your installation when and where you want
- ♦ Supports multiplatform server environments: Windows, Mac, Sun, Linux and VT100 based serial devices
- ♦ Uses RJ-45 connectors and CAT 5e cable for a neat and tidy, efficient installation – supports PS/2, USB, Sun Legacy (13W3) and serial (RS-232) connectivity
- ♦ Local Console provides PS/2 and USB keyboard and mouse support
- ♦ Multi-level authentication: super administrator; administrator; user; viewer with no limit on the number of each type
- ♦ Remote authentication support: RADIUS, LDAP, LDAPS, and MS Active Directory
- ♦ Advanced security features include password protection and advanced encryption technologies – 1024 bit RSA; 168-bit 3DES; 256 bit AES; and 128 bit SSL
- ♦ Flexible encryption design allows users to choose any combination of 56-bit DES, 168-bit 3DES, 256-bit AES, 128-bit RC4, or Random for independent KB/Mouse, video, and virtual media data encryption
- ♦ Supports 10Base-T, 100Base-T, 1000Base-T, Auto-Sense, TCP/IP, HTTP, DNS, DHCP, PPP, UDP, ARP, Ping
- ♦ Pure web browser allows administrators to perform administrative tasks without having Java or Active X installed

- ◆ Total web solution features both a Windows Active X viewer and a Java Applet viewer – you can open multiple viewers to control multiple ports from the same login session
- ◆ The switch can detect your browser and open either the Java or Active X viewer accordingly – or you can specify which viewer you prefer to use
- ◆ Browser access can be disabled – Windows and Java AP GUI programs provided for non-browser connectivity
- ◆ Full-screen GUI, Magic Control Panel and toolbars for convenient, user friendly operation
- ◆ Full-screen or sizable and scalable remote desktop window – in full-screen mode the remote desktop display scales to user's monitor display size
- ◆ Mouse DynaSync for USB mice – local and remote mouse movement are the same, no need to constantly resync the two movements
- ◆ Panel Array Mode – view up to 40 ports at the same time, or view up to 42 ports for cascaded installations
- ◆ Message Board for communication among remote users
- ◆ Multi-language support with on-screen (software) keyboard
- ◆ Bandwidth control – video quality and video tolerance can be adjusted to optimize data transfer speed; monochrome color depth setting and threshold and noise settings for compression of the data bandwidth in low bandwidth situations
- ◆ High video resolution: up to 1600 x 1200 @ 60Hz – 32 bit color depth for the local console; up to 1600 x 1200 @ 60Hz with 24 bit color depth for remote sessions
- ◆ Supports ALTUSEN (CC) Control Center Management Series Software
- ◆ PON (Power Over the NET™) support via Java
- ◆ PPP modem dial-in/dial-back support – for low bandwidth operation
- ◆ End Session feature – administrators can terminate running sessions
- ◆ Windows-based Log Server, event logging and Syslog support
- ◆ Backup and restore configuration and user account settings
- ◆ SNMP trap and SMTP alert notification
- ◆ Private CA support
- ◆ RTC support to keep the timer running during times of no power
- ◆ Firmware upgradeable via remote management application
- ◆ Adapter ID; Exit Macros; Keyboard Passthrough; BIOS level support

V-Series Exclusive

Features found only with the V-Series KVM Over the NET™ switches (KN2124v, KN2140v, KN4124v, and KN4140v) include the following:

- ♦ Audio – a microphone and speakers are supported on the Local Console; speakers (only) are supported on the Local Client computers.
- ♦ Dual power supply support – Log and UI reflect the power status
- ♦ Virtual Media support
- ♦ Variable fan speed – speed changes according to the switch's temperature

System Requirements

Local Client Computers

Local client computers are the ones used to log into the switch over the internet (see *Terminology*, page xiii). The following equipment must be installed on these computers:

- ♦ For best results we recommend that the computers used to access the switch have at least a P III 1 GHz processor, with their screen resolution set to 1024 x 768.
- ♦ Browsers must support 128 bit SSL encryption.
- ♦ For best results, a network transfer speed of at least 512kbps is recommended.
- ♦ For the Windows Client AP, DirectX 8 must be present, and at least 90MB of memory must be available after installation.
- ♦ For the Java Client AP, the latest version of Sun's Java Runtime Environment (JRE) must be installed, and at least 145MB of memory must be available after installation.
- ♦ For the browser-based WinClient ActiveX Viewer, DirectX 8 must be present, and at least 150MB of memory must be available after installation.
- ♦ For the browser-based Java Applet Viewer the latest version of Sun's Java Runtime Environment (JRE) must be installed, and at least 205MB of memory must be available after installation.
- ♦ For the *Log Server*, you must have the Microsoft Jet OLEDB 4.0 or higher driver installed.

Remote Servers

Remote servers are the ones connected to the switch via KVM Adapter Cables (see *Terminology*, page xiii). The following equipment must be installed on these servers:

- ♦ A VGA, SVGA or multisync port
- ♦ For USB KVM Adapter Cable Connections: a Type A USB port and USB host controller
- ♦ For PS/2 KVM Adapter Cable Connections: 6-pin Mini-DIN keyboard and mouse ports

Video

Only the following **non-interlaced** video signals are supported:

Resolution	Refresh Rates
640 x 480	60, 70, 72, 75, 85
720 x 400	70, 75
800 x 600	56, 60, 70, 72, 75, 85
1024 x 768	60, 70, 75, 85
1152 x 864	60, 70, 75, 85
1152 x 900	66, 76
1280 x 1024	60, 70, 75, 85
1600 x 1200	60

KVM Adapter Cables

- ♦ Cat 5e (or higher) cable is required to connect the KVM Over the NET™ switch to the KVM Adapter Cables (see page 21).
- ♦ The following KVM Adapter Cables are required for use with the KVM Over the NET™ switch:

Function	Module
Connect to devices with PS/2 ports	KA9120 / KA7120
Connect to devices with USB ports (All platforms – PC, Mac, Sun)	KA9170 / KA7170
Connect to Sun Legacy Computers	KA9130 / KA7130
Connect to serial based devices	KA9140 / KA7140
Connect to devices with USB ports and virtual media support	KA7175*
Connect to devices with USB ports, virtual media and audio support	KA7176*

Note: 1. The KVM Adapter cables marked with an asterisk (*) are for use with the KN2124v, KN2140v, KN4124v and KN4140v switches only.

2. If you use Adapter Cables that were purchased prior to your switch purchase, you may have to upgrade the Adapter Cable's firmware. You can upgrade the Adapter Cable's firmware from the Maintenance page (see page 149 for details).
-

Operating Systems

- Supported operating systems for Local Client computers that log into the KVM Over the NET™ switch include Windows 2000 and higher, and those capable of running Sun's Java Runtime Environment (JRE) 6, Update 3, or higher.
- Supported operating systems for the remote servers that are connected to the switch's ports are shown in the table, below:

OS		Version
Windows		2000 and higher
Linux	RedHat	7.1 and higher
	Fedora	Core 2 and higher
	SuSE	9.0 and higher
	Mandriva (Mandrake)	9.0 and higher
UNIX	AIX	4.3 and higher
	FreeBSD	4.2 and higher
	Sun	Solaris 8 and higher
Novell	Netware	5.0 and higher
Mac		OS 9 and higher*
DOS		6.2 and higher

Browsers


Supported browsers for users that log into the KVM Over the NET™ switch include the following:

Browser	Version
IE	6 and higher
Firefox	1.5 and higher
Mozilla	1.7 and higher
Safari	2.0 and higher*
Opera	9.0 and higher
Netscape	8.1 and higher

* See *Mac Systems*, page 196, for further information.


Components

KN2124v / KN2140v / KN4124v / KN4140v Front View

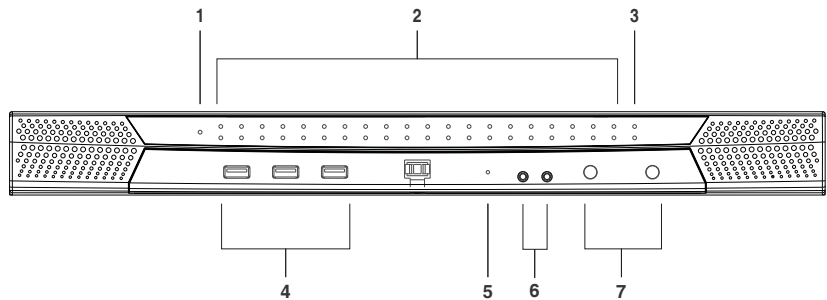

Note: The figure above shows the front panel of a KN2140v / KN4140v.
The KN2124v / KN4124v differs in that there are fewer port LEDs.


KN4132 / KN4116 / KN2132 Front View

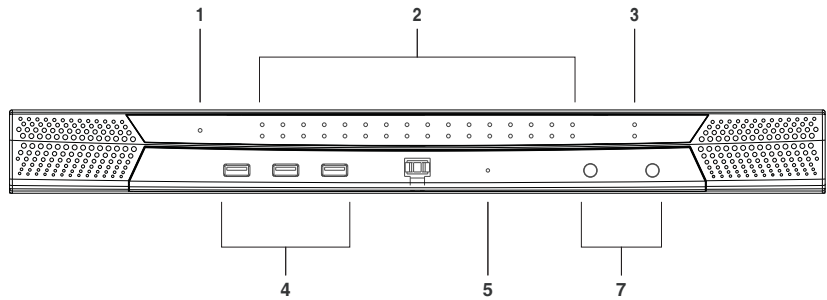

Note: The figure above shows the front panel of a KN4132 /KN2132.
The KN4116 differs in that it only has a single row of port LEDs.


No.	Component	Description
1	Power LED	Lights when the unit is powered up and ready to operate.
2	Port LEDs	<p>The Port LEDs provide status information about their corresponding KVM Ports.</p> <ul style="list-style-type: none"> ♦ GREEN: The computer attached to the port is On Line. ♦ RED: The computer attached to the port is Selected (has KVM focus). ♦ GREEN + RED (ORANGE): The computer attached to the port is On Line and Selected. <p>The LEDs are steady under normal conditions, but a LED flashes at half second intervals when its corresponding port is accessed under Auto Scan Mode or Skip Mode (see pages 158 and 159).</p>
3	LAN LEDs	<p>Primary and Secondary 10/100/1000 Mbps LAN LEDs.</p> <ul style="list-style-type: none"> ♦ RED: 10 Mbps ♦ RED + GREEN (ORANGE): 100 Mbps ♦ GREEN: 1000 Mbps ♦ Flashes to indicate that the switch is being accessed over the Net.
4	USB Ports	A USB keyboard and mouse can plug in here. This can either be in place of, or in addition to, plugging a keyboard and mouse into the ports on the rear panel. (This port can be used to connect USB flash storage only on the KN4140v.)
5	Reset Switch	<p>Note: This switch is recessed and must be pushed with a small object such as the end of a paper clip, or a ballpoint pen.</p> <ul style="list-style-type: none"> ♦ Pressing and releasing this switch when the unit is running performs a system reset. ♦ Pressing and holding this switch in for more than three seconds when the unit is running resets its configuration to the factory default settings. <p>Note: This does not clear User Account information. See <i>Clear Login Information</i>, page 214, for information on clearing user account information.</p> <ul style="list-style-type: none"> ♦ Pressing and holding this switch while powering on the switch returns the unit to its factory default firmware level, rather than the firmware version that the switch has been upgraded to. This allows you to recover from a failed firmware upgrade and gives you the opportunity to try upgrading the firmware again. <p>Note: This operation should only be performed in the event of a firmware upgrade failure that results in the device becoming inoperable.</p>
6	Audio Ports	Speakers and microphone plug in here. (KN4140v only)
7	Port Switching Buttons	<ul style="list-style-type: none"> ♦ Press PORT DOWN to switch from the current port to the previous port on the installation. ♦ Press PORT UP to switch from the current port to the next port on the installation.

KN2124v / KN2140v / KN4124v / KN4140v Rear View

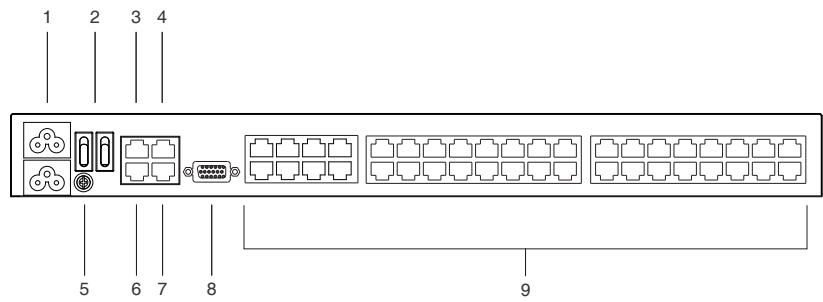

Note: The figure above shows the rear panel of a KN2140v / KN4140v with two blocks of 16 KVM ports and one block of 8 (40 ports in total). The KN2124v / KN4124v differs in that it only has a single block of 16 KVM ports and one bock of 8 (24 ports in total).

KN4132 / KN4116 / KN2132 Rear View

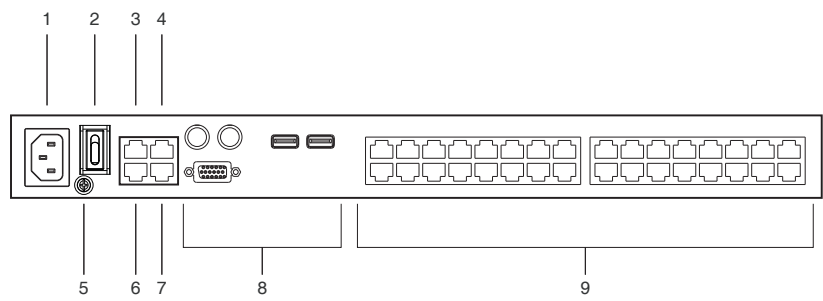

Note: The figure above shows the rear panel of a KN2132 / KN4132 with two blocks of 16 KVM ports (32 ports in total). The KN4116 differs in that it only has a single block of KVM ports (16 ports in total).

No.	Component	Description
1	Power Socket	<p>The power cable(s) plugs in here.</p> <p>Note: For the KN2124v, KN2140v, KN4124v and the KN4140v units, the top power socket corresponds to the left power switch, and the bottom power socket corresponds to the right power switch.</p>
2	Power Switch	This standard slide switch powers the unit on and off.
3	Secondary LAN Port	The cable that connects the unit to the backup network interface (10/100/1000 Mbps) plugs in here.
4	PON Port	<p>This connector is provided for a Power over the Net™ (PON) unit which allows computers attached to the KVM Over the NET™ switch to be booted remotely over the net. See <i>Single Stage Installation</i>, page 21, step 6 for installation details. Contact your dealer for more information regarding PON units.</p>
5	Grounding Terminal	The wire used to ground the unit connects here.
6	Primary LAN Port	The cable that connects the unit to the primary network interface (10/100/1000 Mbps) plugs in here.
7	Modem Port	For dial in connection should the unit be unavailable over the network. See <i>Single Stage Installation</i> , page 21, step 7 for installation details.
8	Local Console Port(s)	<p>The unit can be accessed via a local console as well as over the Net. The local console devices (keyboard, monitor and mouse), plug in here. Any combination of USB and PS/2 keyboards and mice can be used.</p> <p>Note: For the KN2124v, KN2140v, KN4124v and the KN4140v units, use the 5-in-1 cable supplied with the package to connect your console devices to the unit.</p>
9	KVM Ports	The Cat 5e cables that link the unit to the KVM Adapter Cables (which connect to the computers), plug in here.

This Page Intentionally Left Blank

Chapter 2

Hardware Setup

Overview

For convenience and flexibility that allows mixing the PS/2 and USB interfaces, as well as multiple platforms, the KVM Over the NET™ switch design utilizes KVM Adapter Cables, that serve as intermediaries between the switch and the connected devices (refer to the installation diagram on p. 16).

A separate KVM Adapter Cable is required for each computer or device connection. The model numbers of the Adapter Modules are given in the *KVM Adapter Cables* section, page 8.

Before You Begin




1. Important safety information regarding the placement of this device is provided on page 183. Please review it before proceeding.
2. Make sure that power to all the devices you will be connecting up have been turned off. You must unplug the power cords of any computers that have the Keyboard Power On function.

Stacking and Rack Mounting

The KVM Over the NET™ switch can be stacked on the desktop or rack mounted in a variety of ways. The following sections take you through the procedures for each method.

Stacking

The KVM Over the NET™ switch can be placed on any appropriate level surface that can safely support its weight plus the weight of its attached cables. To place the KVM Over the NET™ switch, or to stack units if you are daisy-chaining them, remove the backing material from the bottom of the rubber feet that came with this package, and stick them onto the switch's bottom panel at the corners, as shown in the diagram, below:

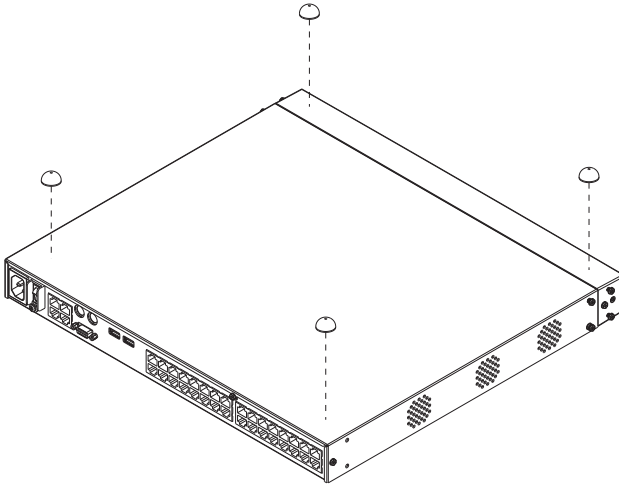

Note: To ensure adequate ventilation, allow at least 5.1 cm on each side, and 12.7 cm behind the unit for power cord and cable clearance.


Rack Mounting

The KVM Over the NET™ switch can be mounted in a 19" (1U) rack. The mounting brackets can screw into either the front or the back of the unit so that it can attach to the front or the back of the rack.


Rack Mounting - Front

To mount the unit at the front of the rack, do the following:


1. Remove the two screws at the front of the unit.

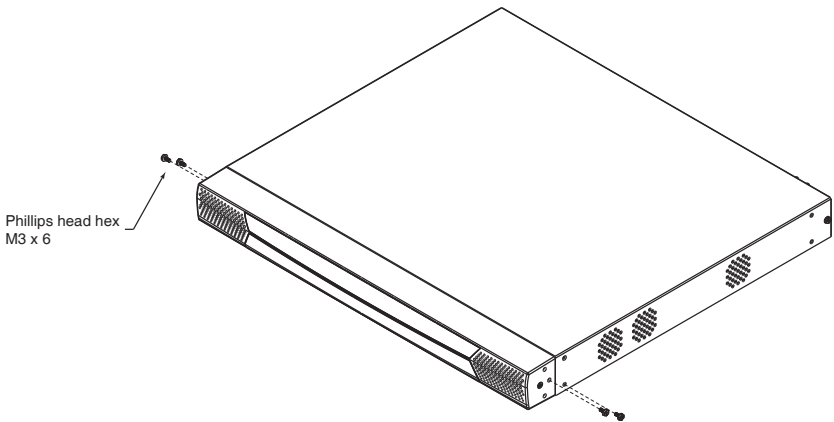

2. Use the M3 x 8 Phillips head hex screws supplied with the rack mount kit to screw the rack mounting brackets into the front of the unit.

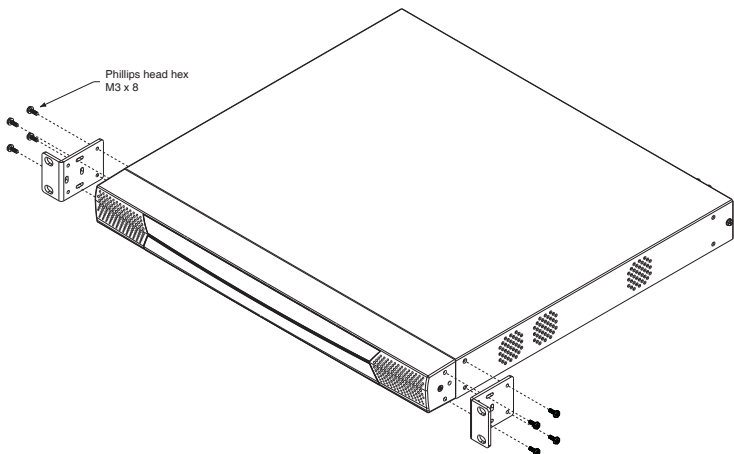

3. Position the device in the front of the rack and align the holes in the mounting brackets with the holes in the rack.
4. Screw the mounting brackets to the rack.

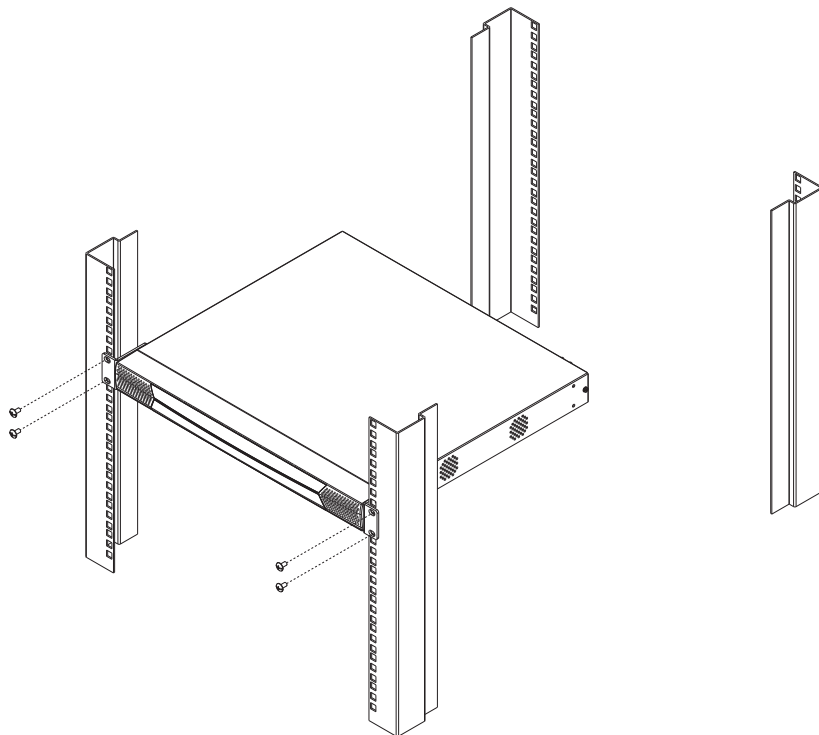


Note: Cage nuts are provided for racks that are not prethreaded.


Rack Mounting - Rear

To mount the unit at the rear of the rack, do the following:

1. Remove the two screws at the rear of the unit.

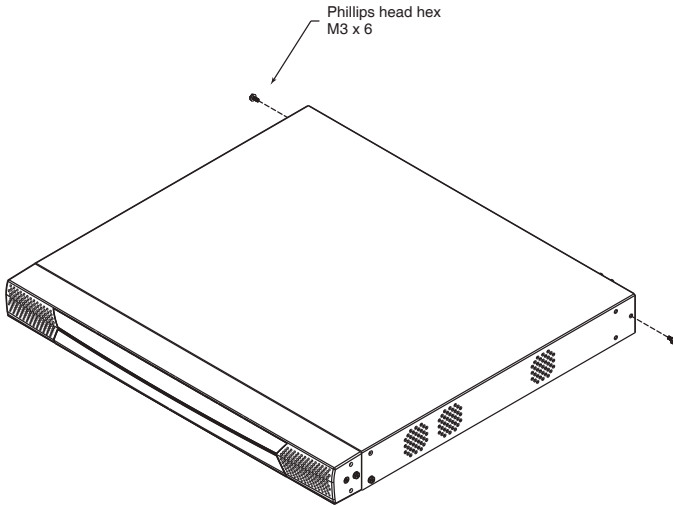


2. Use the M3 x 8 Phillips head hex screws supplied with the rack mounting kit to screw the rack mounting brackets into the rear of the unit.

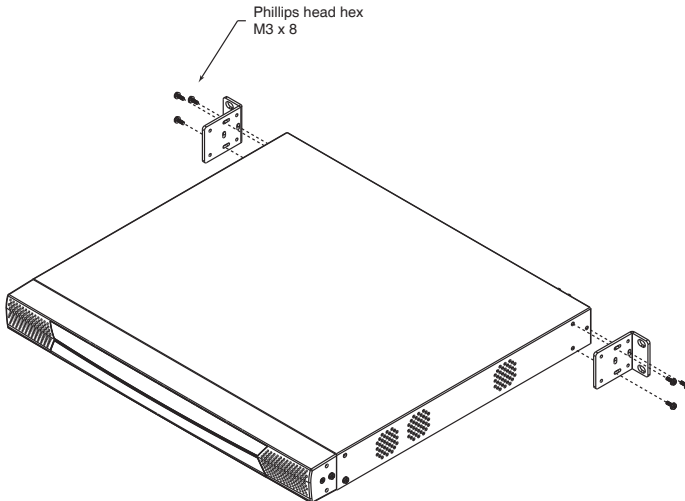

3. Position the device in the rack and align the holes in the mounting brackets with the holes in the rack.

4. Screw the mounting brackets to the rear of the rack.

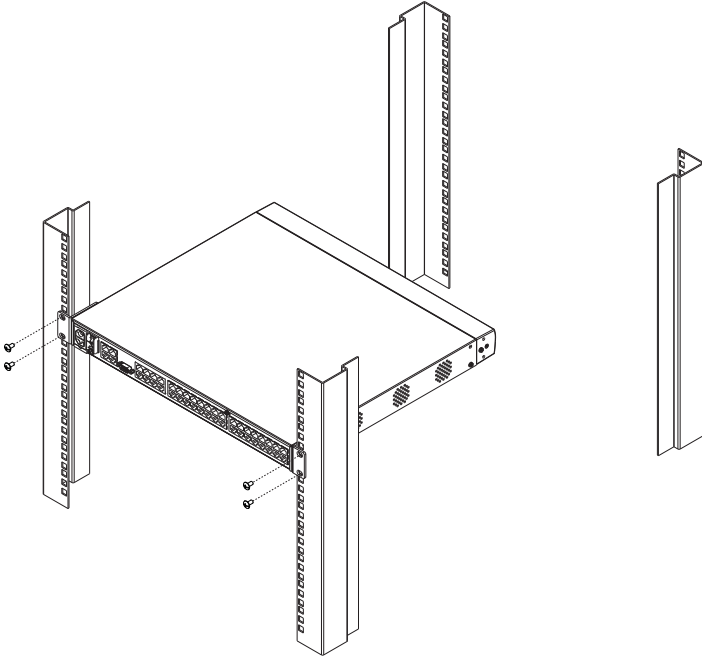

Note: Cage nuts are provided for racks that are not prethreaded.

Single Stage Installation

In a single stage installation, there are no additional switches cascaded from the KVM Over the NET™ switch. To set up a single stage installation, refer to the installation diagrams starting on page 23 (the numbers in the diagram correspond with the numbers of the instruction steps), and do the following:

1. For the KN2124v, KN2140v, KN4124v and KN4140v, use the 5-in-1 Console Cable supplied with the package to connect your Local Console devices to the unit.

For the KN2132, KN4116, and KN4132, plug your Local Console's keyboard, monitor, and mouse into the unit's Console Ports. Each port is color coded and marked with an appropriate icon.

-
- Note:** 1. You can use any combination of keyboard and mouse connections. For example, you can use a PS/2 keyboard with a USB mouse.
2. USB keyboards and mice can plug into the USB ports on the front panel, as well as into the ports in the console port section.
 3. The KVM Over the NET™ switch does not support distances that exceed 20m between itself and the local monitor.
-

2. Use Cat 5e cable to connect any available KVM port to a KVM Adapter Cable that is appropriate for the computer you are installing (see the table on page 8 for details).

-
- Note:** 1. If you are using a KA7120, KA7130, KA9120, KA9130, or KA9131 Adapter Cable, refer to page 206 for mouse pointer synchronization information.
2. If you are using a KA9131 Adapter Cable, refer to page 198 for video and mouse adjustment information.
 3. If you are using a KA7140 Adapter Cable, refer to page 205 for setup and operation information.
 4. The distance between the switch and the KVM Adapter Cable must not exceed these lengths: KA7140: 300m; KA71xx: 50m; KA91xx: 40m.
-

3. Plug the connectors on the KVM Adapter Cable into the appropriate ports of the computer you are installing. (See *Adapter Cable Connection Diagram*, page 25.)
-

4. Plug a cable from the LAN or WAN into the KVM Over the NET™ switch primary network interface socket.
5. (Optional) Plug another cable from the LAN or WAN into the KVM Over the NET™ switch backup (secondary) network interface socket.
6. (Optional) Use Cat 5e cable to connect the KVM Over the NET™ switch PON port to an SA0142 Adapter. Connect the Adapter to the PON IN port of a PN0108 Power Over the Net™ unit.
7. (Optional) Use Cat 5e cable to connect the KVM Over the NET™ switch Modem port to an SA0142 Adapter. Connect the Adapter's serial connector to the modem's DB-9 port.
8. Use the grounding wire supplied with this package to ground the unit by connecting one end of the wire to the grounding terminal, and the other end of the wire to a suitable grounded object.

Note: Do not omit this step. Proper grounding helps to prevent damage to the unit from surges or static electricity.


9. Plug the power cord(s) supplied with this package into the KVM Over the NET™ switch power socket, and then into an AC power source.

For the KN2124v, KN2140v, KN4124v and KN4140v, when using a single power socket, be sure to turn on the correct power switch (see *Power Switch*, page 13). When using both power sockets, either of the power switches can be used to turn on the KVM switch – or turn on both power switches to enable dual power.


After the KVM Over the NET™ switch is cabled up you can turn on the power. After it is powered up, you can turn on the computers.

KN2124v / KN2140v / KN4124v / KN4140v









Single Stage Installation Diagram

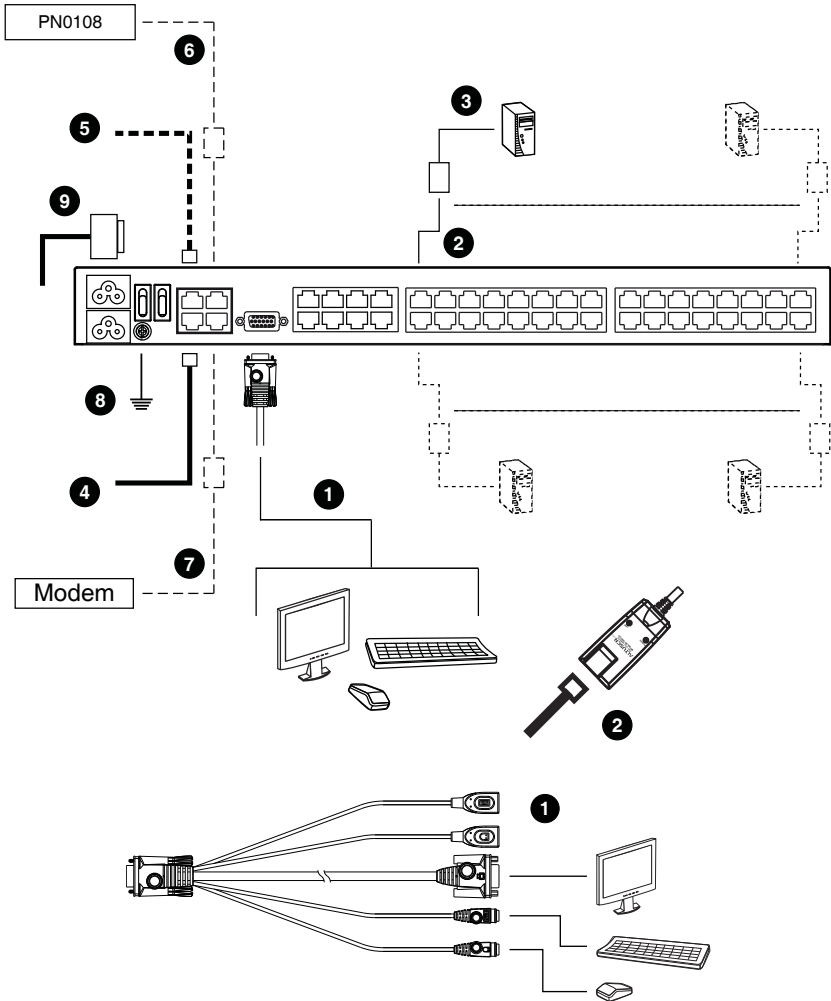

KN2132 / KN4116 / KN4132
Single Stage Installation Diagram

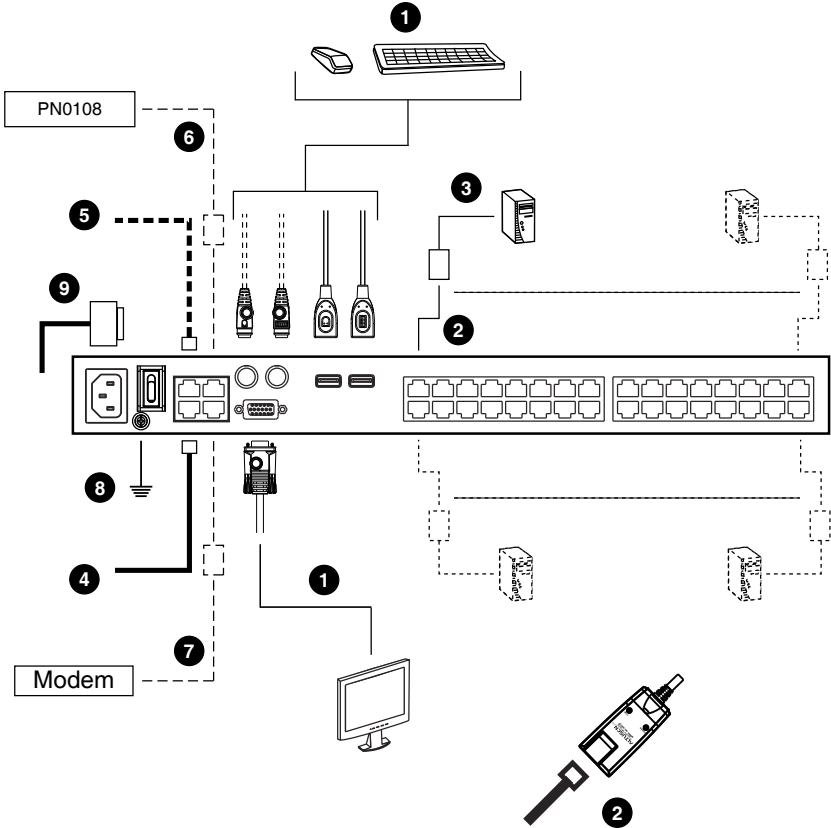

Adapter Cable Connection Diagram

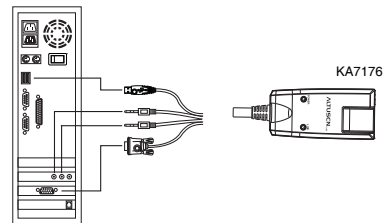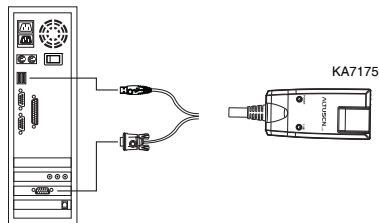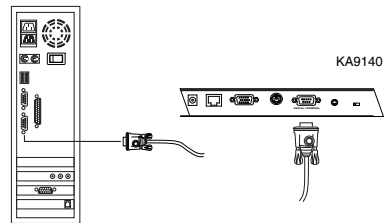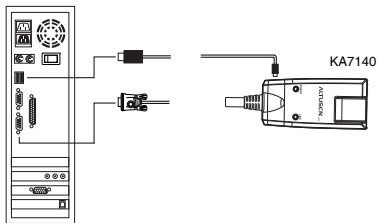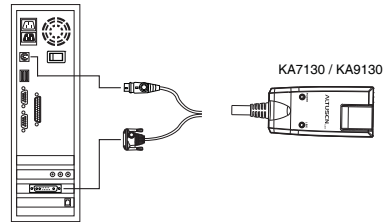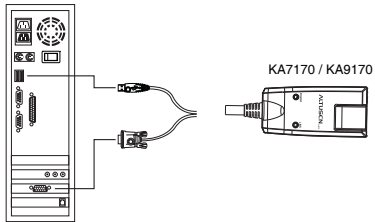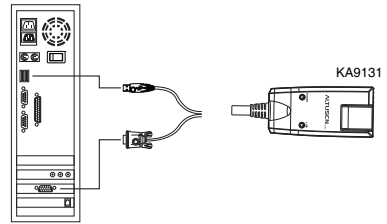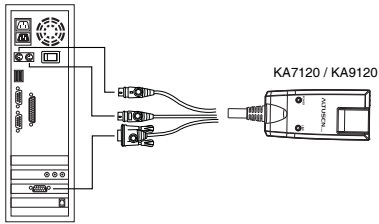

Two Stage Installation

To control even more computers, up to 40 additional KVM switches can be cascaded from the KVM ports of the KVM Over the NET™ switch. As many as 640 computers can be controlled in a complete two stage installation.

In a cascaded installation, the KVM Over the NET™ switch is considered the *First Stage* unit, the cascaded switches are considered *Second Stage* units.

Note: The cascaded KVM switch shown in the example is the KH1516.
See *Supported KVM Switches*, page 216, for a list of other switches.

To set up a two stage installation, refer to the diagram on page 27, and do the following:


1. Make sure that power to all the devices you will be connecting, including all preexisting devices on the installation, have been turned off.
2. Use Cat 5e cable to connect any available KVM Port on the First Stage unit (the KVM Over the NET™ switch) to a KVM Adapter Cable (as described under *KVM Adapter Cables*, page 8).
3. Plug the adapter cable's KVM connectors to the Keyboard, Video, and Mouse Console ports of the Second Stage unit.

Note: The distance between the *First Stage* unit and the *Second Stage* unit must not exceed 40m or 50m based on the KVM adapter cable used.

4. Use KVM cable sets (as described in the Cables section of the cascaded KVM switch's User Manual), to connect any available KVM port on the *Second Stage* unit to the Keyboard, Video, and Mouse ports of the computer you are installing.
5. Plug the power cord that came with the cascaded KVM switch into its Power Socket, and then into an AC power source.
6. Repeat these steps for any other *Second Stage* units you wish to connect.
7. Power on the *Second Stage* unit(s), then power on the *First Stage* unit.
8. Turn on the power to all the computers.

Note: The Power On sequence requires that all *Second Stage* switches be powered on first. After all *Second Stage* switches are powered on, the *First Stage* switch can be powered on. After all the switches are powered on, the computers can be powered on.

Two Stage Installation Diagram

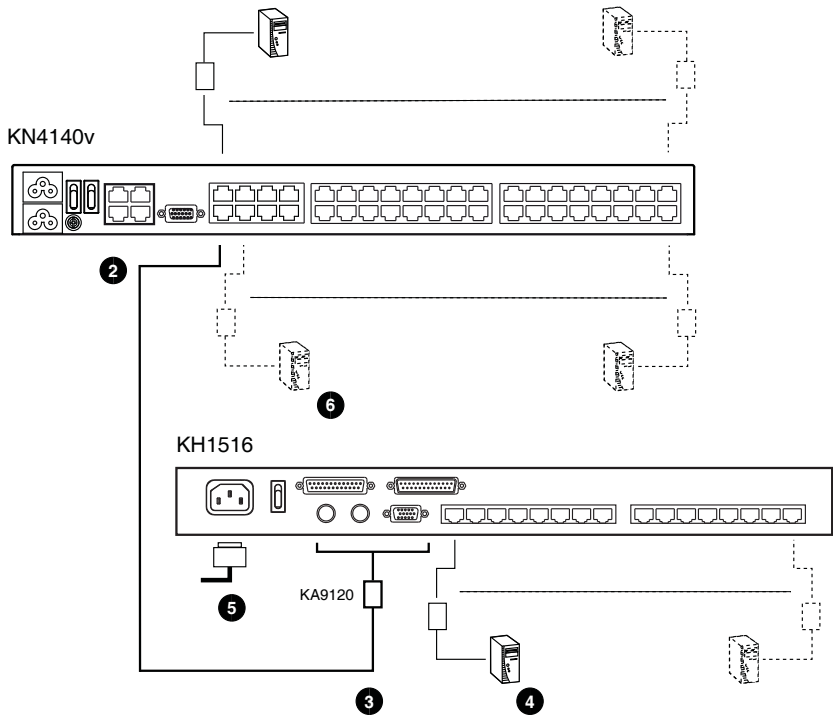

Hot Plugging

The KVM Over the NET™ switch supports hot plugging – components can be removed and added back into the installation by unplugging and replugging cables from the ports without the need to shut the unit down.

Note: If the computer's Operating System does not support hot plugging, this function may not work properly.

The Adapter ID Function

Adapter Cable information that includes the Adapter ID, port name, OS, keyboard language, and access mode is stored on the adapter. The Adapter ID function stores this information, as well as the adapter cable's configuration information (such as access rights, etc.), in the switch's database.

When you move a computer together with its adapter cable from one port to another, you don't have to reconfigure its settings – the Adapter ID function restores them at the new location. The only change is in the port number.

When moving the computer and adapter cable to another switch, however, only the information that is stored on the adapter is retained. For the other settings you must either reconfigure them, or use the Port Utilities export/function (see page 84) to restore them.

Since port settings are stored with the adapter, if you move a computer to a new port without its original adapter; or if you connect a different computer to the adapter, you must manually configure the port settings for the new computer. See *Port Utilities*, page 84 for port configuration details.

Powering Off and Restarting

If it becomes necessary to power off the switch, or if the switch loses power and needs to be restarted, wait 10 seconds before powering it back on. The computers should not be affected by this, but if any of them should fail, simply restart them.

Port ID Numbering

Each computer on the installation is assigned a unique Port ID. The Port ID is a one or two segment number that is determined by the Stage Level and KVM Port number of the KVM switch that the computer is connected to.

The first segment represents the KVM Port number of the First Stage unit; the second segment represents the KVM Port number of the Second Stage unit.

A computer attached to a First Stage unit has a one segment Port ID (from 1–40) that corresponds to the KVM Port number that it is connected to.

A computer attached to a Second Stage unit has a two segment Port ID:

- ♦ The second segment (from 1–16), represents the KVM Port number on the Second Stage unit that the computer is connected to. The first segment (from 1–40) represents the KVM Port number on the First Stage unit that the Second Stage unit links back to.
- ♦ For example, a Port ID of 12 - 3 refers to a computer that is connected to KVM Port 3 of a Second Stage unit that links back to KVM Port 12 of the First Stage unit.

Port Selection

Port selection is accomplished by means of the GUI. Port selection details are discussed in Chapter 6, *Port Access*.

This Page Intentionally Left Blank

Chapter 3

Super Administrator Setup

Overview

The KVM Over the NET™ switch supports three types of user, as shown in the table, below:

User Type	Role
Super Administrator	Access and manage ports and devices. Manage Users, and Groups. Configure the overall installation. Configure personal working environment.
Administrator	Access and manage authorized ports and devices. Manage Users and Groups. Configure personal working environment.
User	Access authorized ports and devices. Manage authorized ports and devices; configure personal working environment.

This chapter discusses the administrative procedures that the Super Administrator performs.

First Time Setup

Once the KVM Over the NET™ switch has been cabled up, the Super Administrator needs to set the unit up for user operation. This involves setting the network parameters and adding users. The most convenient way to do this for the first time is from the local console.

Note: For remote methods of setting up the network, see *IP Address Determination*, page 200.

After the local console has been connected (see *Single Stage Installation*, page 21), and the KVM Over the NET™ switch turned on, a login prompt appears on the console monitor:




The screenshot shows a login interface titled "KN2124v Login". It features two input fields: "Username:" and "Password:". Below these fields are two buttons: "Login" and "Reset". The interface is displayed on a dark background.

Since this is the first time you are logging in, use the default Username: *administrator*; and the default Password: *password*.

Note: For security purposes, you should change these to a unique Username and Password. (See *Changing the Super Administrator Login*, page 34 for details.)

After you successfully log in, the Local Console Main Page appears:

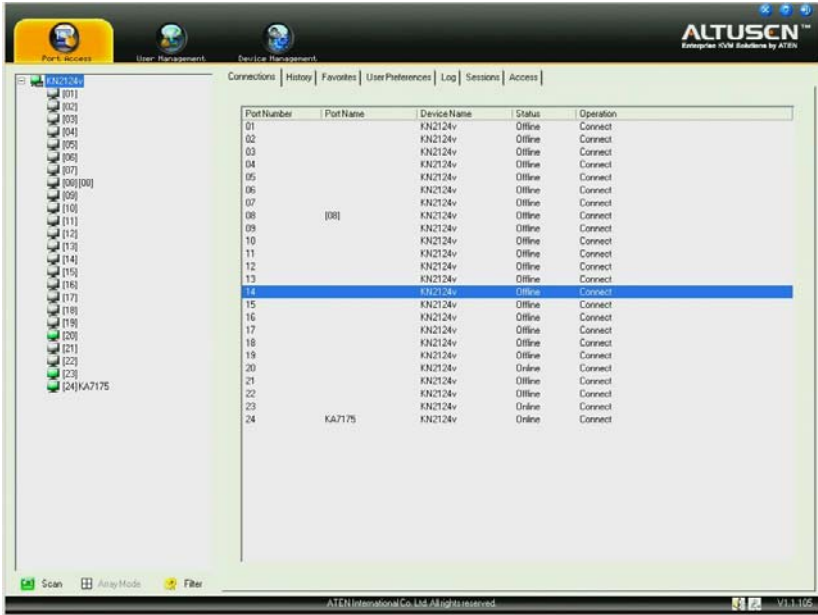

Network Setup

To set up the network, do the following:

1. Click the **Device Management** tab.
2. Select the **Network** tab.

The screenshot shows the ALTUSCN Configuration window with the 'Network' tab selected. The 'Device Management' tab is also visible and highlighted with a red circle. The 'Network' tab contains the following settings:

Service Ports:	
Program:	8000
HTTP:	80
HTTPS:	443

NIC Settings:	
<input type="checkbox"/> Redundant NIC	
1000M Network Adapter 1	
IP Address:	
<input type="radio"/> Obtain IP address automatically (DHCP)	
<input checked="" type="radio"/> Set IP address manually (Fixed IP)	
IP Address:	172 . 17 . 17 . 23
Subnet Mask:	255 . 255 . 255 . 0
Default Gateway:	172 . 17 . 17 . 1
DNS Server:	
<input type="radio"/> Obtain DNS server address automatically	
<input checked="" type="radio"/> Set DNS server address manually	
Preferred DNS server:	10 . 0 . 1 . 23
Alternate DNS server:	0 . 0 . 0 . 0
Network Transfer Rate:	
99999	Kbps

Close


3. Fill in the fields according to the information provided under *Network*, page 124.

Changing the Super Administrator Login

To change the default Super Administrator Username and Password, do the following:

1. At the top of the screen, click **User Management**.

The User Management page has a list of Users and Groups in the left hand panel, and a more detailed list of users – with more information about them – in a large central panel. Since this is the first time the page is being accessed, only the Super Administrator appears:

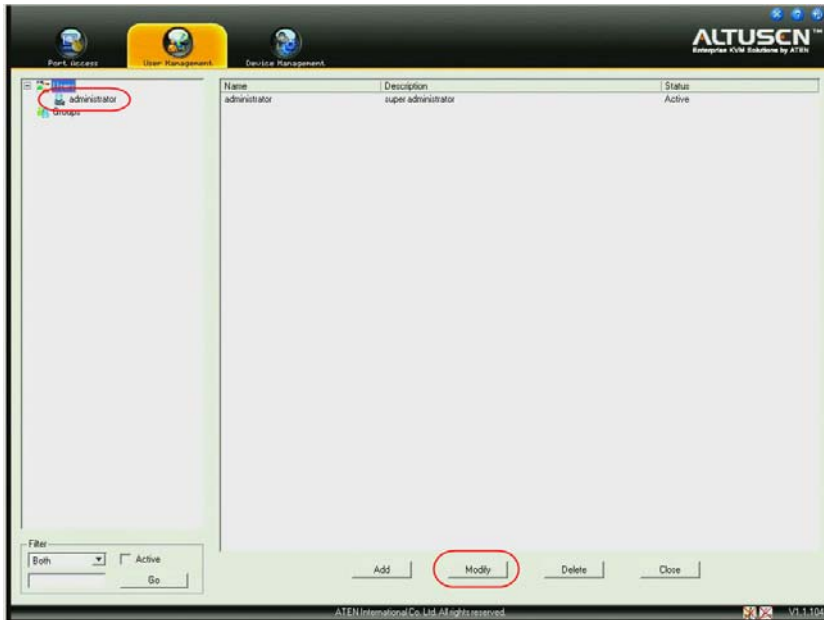

2. Click **administrator** in the left panel
– or –

Select *administrator* in the central panel, then click **Modify** (at the bottom of the page.)

(Continues on next page.)

(Continued from previous page.)

The *User Information* page appears:

User Information

Username:

Password:

Confirm Password:

Description:

Role

☒ Super Administrator ☐ Administrator ☐ User

Permissions:

☒ Windows Client ☒ Java Client ☐ View only

☒ Power Management ☐ Force to Grayscale

Status

☐ Disable account

☒ Account never expires

☐ Account expires on

☐ User must change password at next login

☐ User cannot change password

☒ Password never expires

☐ Password expires after days

Save

3. Change the Username and Password to something unique.
4. Re-enter the password to confirm it is correct.
5. Click **Save**.
6. When the dialog box informing you that the change completed successfully appears, Click **OK**.
7. Click on another item on the Local Console Main Page, to close this page.

Moving On

After setting up the network and changing the default Super Administrator password, you can proceed to other administration activities. These include User Management, Device Management, and Firmware Upgrade Maintenance.

These activities can be accomplished using any of the KVM Over the NET™ switch GUI utilities. These include the Local Console; the browser-based Windows ActiveX Viewer; the browser-based Java Applet Viewer; the stand-alone Windows Client AP; and the stand-alone Java Client AP. Choose the approach that suits you best.

Note: Firmware Upgrade Maintenance cannot be performed from the local console. You must log in remotely with one of the KVM Over the NET™ switch other GUI utilities for this operation.

Chapter 4

Logging In

Overview

KVM Over the NET™ switches can be accessed from a local console; an internet browser; a Windows application (AP) program; and a Java application (AP) program.

No matter which access method you choose, the KVM Over the NET™ switch's authentication procedure requires you to submit a valid username and password. If you supply an invalid login, the authentication routine will return an *Invalid Username or Password*, or *Login Failed* message. If you see this type of message, log in again with a correct username and password.

Note: If the number of invalid login attempts exceeds an amount specified by the switch's Super Administrator, a timeout period is invoked. You must wait until the timeout period expires before you can attempt to log in again. See *Login Failures*, page 138 for further details.

Local Console Login

When the local console is attached (see *Single Stage Installation*, page 21) and there is no user logged in, the KVM Over the NET™ login screen appears on the display:

The image shows a login screen for a KN2124v switch. It has a dark header bar with the text "KN2124v Login" in white. Below the header, there are two input fields: "Username:" and "Password:". The "Username:" field has a cursor in it. Below the input fields, there are two buttons: "Login" and "Reset". The background is a light gray.

Simply key in your Username and Password, then click **Login** to bring up the Local Console Main Page. The Local Console Main Page is similar to the Web Browser, WinClient and Java Client Main Pages. For a description of the Web Browser Main Page, see page 45.

Browser Login

The KVM Over the NET™ switch can be accessed via an Internet browser running on any platform. To access the switch, do the following:

1. Open the browser and specify the IP address of the switch you want to access in the browser's location bar.


Note: For security purposes, a login string may have been set by the administrator (see page 136 for details). If so, you must include a forward slash and the login string along with the IP address when you log in. For example:

192.168.0.100/kn4140v

If you don't know the IP address and login string, ask your Administrator.

2. When a *Security Alert* dialog box appears, accept the certificate – it can be trusted. (See *Trusted Certificates*, page 209, for details.) If a second certificate appears, accept it as well.

Once you accept the certificate(s), the login page appears:

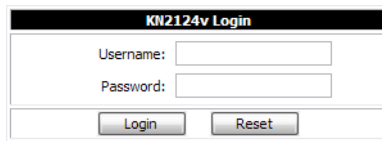
A screenshot of a web browser window displaying the 'KN2124v Login' page. The page has a black header bar with the text 'KN2124v Login' in white. Below the header, there are two text input fields: 'Username:' and 'Password:'. At the bottom of the form, there are two buttons: 'Login' and 'Reset'.

3. Provide your username and password (set by the administrator), then click **Login** to bring up the Web Main Page. For a discussion of the Web Main Page, see page 45.

WinClient AP Login

In some cases, the Administrator may not want the KVM Over the NET™ switch to be available via browser access. The Windows AP Client allows direct remote access to Windows systems users, without having to go through a browser.

You initially download the Windows AP Client program from the browser page (see Chapter 10, *Download*). To connect to the KVM Over the NET™ switch, go to the location on your hard disk that you downloaded the Windows AP Client program to, and double-click its icon (WinClient.exe) to bring up the Windows Client Connection Screen:

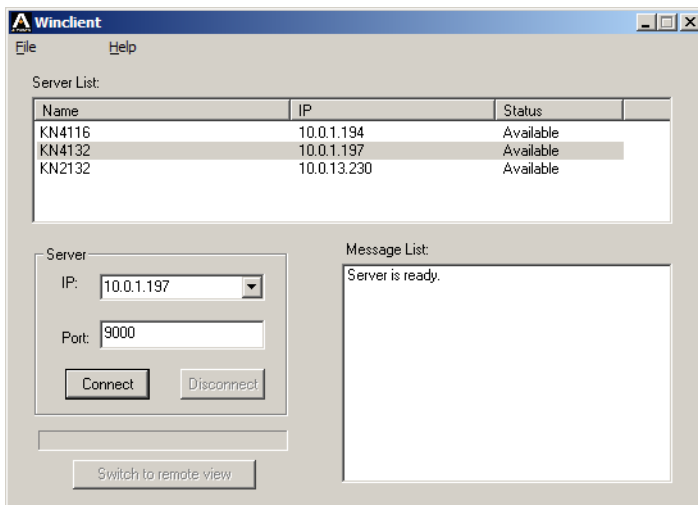

The Connection Screen

A description of the Connection Screen is given in the following table:

Item	Description
Menu Bar	<p>The Menu Bar contains two items: File and Help.</p> <ul style="list-style-type: none">♦ The <i>File Menu</i> allows the operator to Create, Save, and Open user created Work files (see <i>The File Menu</i>, page 41).♦ The <i>Help Menu</i> displays the WinClient AP version.
Server List	<p>Each time the WinClient.exe file is run, it searches the User's local LAN segment for KVM Over the NET™ units, and lists whichever ones it finds in this box. If you want to connect to one of these units, double-click it.</p> <p>Note: 1. The switch will not appear in the list unless its <i>Enable Device List</i> configuration parameter has been enabled. See <i>Working Mode</i>, page 139 for details.</p> <p>2. Only units whose Access Port settings for <i>Program</i> (see <i>Service Ports</i>, page 125) match the number specified for <i>Port</i> in the Server area of this dialog box appear in the Server List window.</p>
Server	<p>This area is used when you want to connect to a KVM Over the NET™ switch at a remote location. You can drop down the IP list box and select an address from the list. If the address you want isn't listed, you can key in the target IP address in the IP field, and its port number in the Port field. (If you don't know the port number, contact your Administrator.)</p> <ul style="list-style-type: none">♦ When the IP address and Port number have been specified, click Connect to bring up a login dialog box. Provide your Username and Password then click OK to bring up the WinClient Main Page. For a description of the WinClient Main Page, see page 48.♦ When you have finished with your session, click Disconnect to end the connection.
Message List	<p>Lists status messages regarding the connection to the KVM Over the NET™ switch.</p>
Switch to Remote View	<p>Once a connection with a KVM Over the NET™ switch has been established, this button becomes active. Click it to switch to the WinClient Main Page. The WinClient Main Page is described on page 48.</p>

The File Menu

The *File Menu* allows the operator to Create, Save, and Open user created Work files. A Work File consists of all the information specified in a Client session. This includes the Server List and Server IP list items, as well as the Hotkey settings.

Whenever a user runs the Client program, it opens with the values contained in the *current work file*. The current work file consists of the values that were in effect the last time the program was closed.


The File menu consists of the following items:

New	Allows the user to create a named work file so its values will not be lost, and it will be available for future recall.
Open	Allows the user to open a previously saved work file and use the values contained in it.
Save	Allows the user to save the values presently in effect as the <i>current work file</i> .
Exit	Exits the WinClient.

Java Client AP Login

In those cases in which the Administrator does not want the KVM Over the NET™ switch to be available via browser access, but the remote users aren't running Windows, the Java AP Client provides direct remote access to non-Windows systems users.

You initially download the Java AP Client program from the browser page (see Chapter 10, *Download*). To connect to the KVM Over the NET™ switch, go to the location on your hard disk that you downloaded the Java AP Client program to, and double-click its icon (JavaClient.jar) to bring up the *Address Input* dialog box:

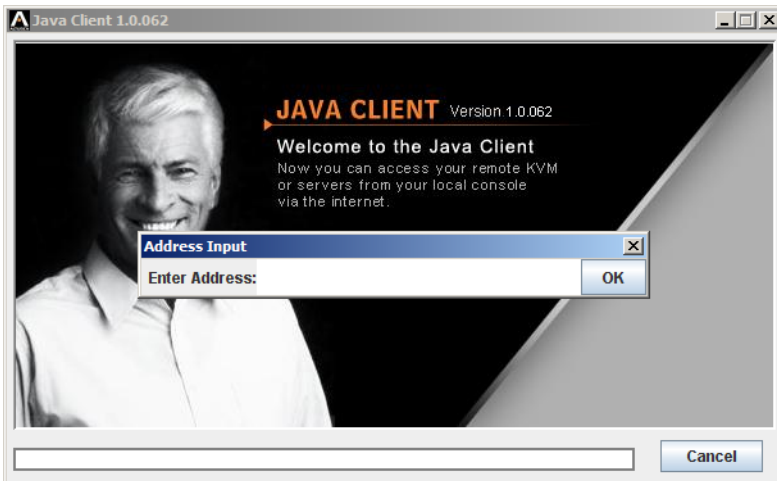


1. Key in the IP address for the unit you want to connect to. For example:

192.168.0.132

Note: If the system administrator set the switch's *Program* port to something other than the default you must specify the port number along with the IP address. For example: 192.168.0.132:9111
See *Program*, page 125 for details.

Click **OK**. A *Login* dialog box appears:

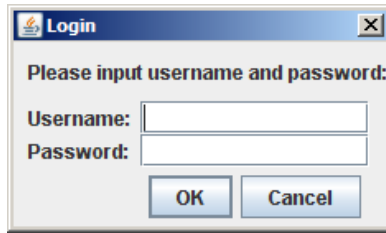

Provide a valid Username and Password, and then click **OK** to switch to the Java Client AP Main Page. The Java Client AP Main Page is similar to that of the WinClient AP Main Page. For a description of the Main Page, see page 48.

This Page Intentionally Left Blank

Chapter 5


The User Interface

Overview

Once you have successfully logged in the KVM Over the NET™ user interface Main Page appears. The look of the page varies slightly, depending on which method you used to log in. Each of the interfaces is described in the sections that follow.

The Web Browser Main Page

To ensure multi-platform operability, access to the KVM Over the NET™ switches can be accomplished with most standard web browsers. Once users log in and are authenticated (see page 38), the *Web Browser Main Page* comes up, with the Port Access page displayed:

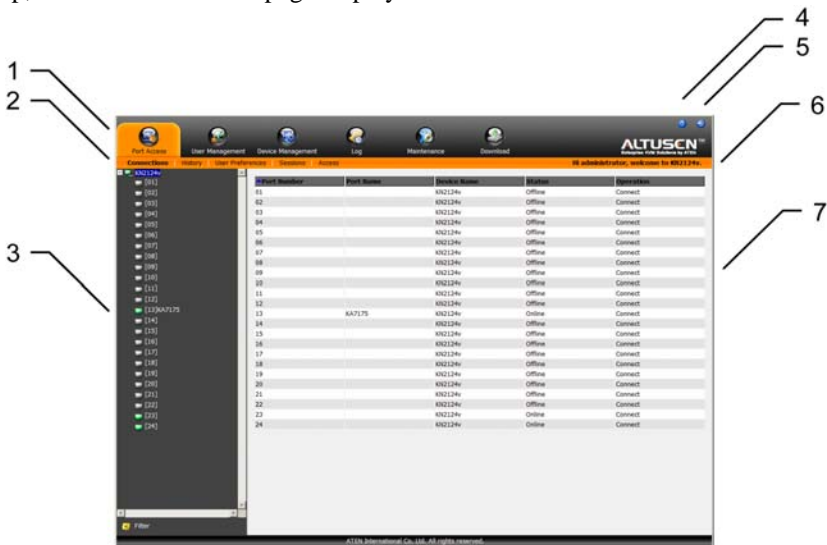

Note: 1. The screen depicts a Super Administrator's page. Depending on a user's type and permissions, not all of these elements appear.

2. When logging in from the Local Console, the *Maintenance* and *Download* icons do not appear, and *Array Mode* is not available (it is grayed out).

The web page components are described in the table below:







Page Components

The web page screen components are described in the table, below:



No.	Item	Description
1	Tab Bar	The tab bar contains the KVM Over the NET™'s main operation categories. The items that appear in the tab bar are determined by the user's type, and the authorization options that were selected when the user's account was created.
2	Menu Bar	The menu bar contains operational sub-categories that pertain to the item selected in the tab bar. The items that appear in the menu bar are determined by the user's type, and the authorization options that were selected when the user's account was created.
3	Sidebar	<p>The Sidebar provides a tree view listing of ports that relate to the various tab bar and menu bar selections. Clicking a node in the Sidebar brings up a page with the details that are relevant to it.</p> <p>There is a <i>Filter</i> button at the bottom of the Sidebar that lets you expand or narrow the scope of the ports that appear in the tree. The Filter function is discussed in detail on page 89</p>
4	About	About provides information regarding the switch's current firmware version.
5	Logout	Click this button to log out of your KVM Over the NET™ session.
6	Welcome Message	If this function is enabled (see <i>Welcome Message*</i> , page 97), a welcome message displays here.
7	Interactive Display Panel	This is your main work area. The screens that appear reflect your menu choices and Sidebar node selection.

The Tab Bar

The number and type of icons that appear on the Tab Bar at the top of the page are determined by the user's type (Super Administrator, Administrator, User) and the permissions assigned when the user's account was created. The functions associated with each of the icons are explained in the table below:


Icon	Function
	Port Access: The Port Access page is used to access and control the devices on the KVM Over the NET™ installation. This page is available to all users.
	User Management: The User Management page is used to create and manage Users and Groups. It can also be used to assign devices to them. User Management is discussed on page 105. This page is available to the Super Administrator and Administrators. The icon doesn't display on the page of ordinary users.
	Device Management: The Device Management page is used by the Super Administrator (and Administrators and Users with Configuration permission) to configure and control the overall operation of the KVM Over the NET™ switch. This page is available to the Super Administrator. The icon doesn't display on the page of ordinary administrators and users.
	Log: The Log page displays the contents of the log file. The Log page is discussed on page 98.
	Maintenance: The Maintenance page is used this icon to install new versions of the KVM Over the NET™ switch's firmware. See <i>Upgrading the Main Firmware</i> , page 148, for details. This page is available to the Super Administrator (and Administrators and Users with Configuration permission). The icon doesn't display on the page of ordinary administrators and users.
	Download: Users with appropriate permission can click this icon to download AP versions of the Windows Client; the Java Client; the Log Server; and the PON program. This page is available to all users. The programs that can be downloaded depend on the user's permissions.

There are two small icons at the extreme right of the page. Their functions are described in the table, below:

Icon	Function
	Click this icon to brings up a panel with information about the KVM Over the NET™ switch firmware version.
	Click this icon to log out and end your KVM Over the NET™ switch session.


The GUI Main Page

With WinClient AP, and Java Client AP access, once users log in (see *Logging In*, page 37), the *GUI Main Page* comes up:

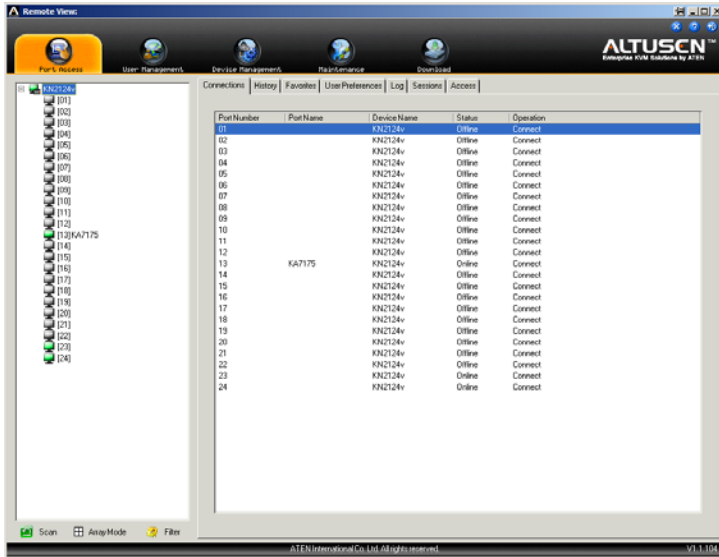

The GUI Main Page is similar to that of the Web Browser. The differences between them are as follows:


1. The GUI version doesn't have a menu bar below the tab bar; it has a series of tabs like a notebook, instead. Like the Web Browser interface, however, the makeup of the tabbed notebook changes depending on the items selected on the main Tab Bar and in the Sidebar.
2. The GUI version doesn't have a *Log* tab on the icon bar. (It's *Log* tab can be found in the notebook under the *Port Access* Tab – see *Log*, page 98.)
3. In addition to *Filter*, there are also buttons for *Scan* and *Array Mode* at the bottom of the Sidebar. These functions are discussed in Chapter 6, *Port Access*.
4. There is a hidden *Control Panel* at the upper or lower center of the screen that becomes visible when you mouse over it.

5. There is an additional icon at the extreme right of the page: . Click this icon to close the GUI Main Page and go to the display of the last selected port.
6. The GUI can be navigated via the keyboard as shown in the table, below:

Keys	Action
Ctrl + P	Opens the Port Access page.
Ctrl + U	Opens the User Management page.
Ctrl + C	Opens the Device Management page.
Ctrl + F	Opens the Maintenance page.
Ctrl + D	Opens the Download page.
F1	To see <i>About</i> information
F2	To edit the port name of the selected port.
F4	Selects the Sidebar (left) panel.
F5	Selects the main (right) panel
F7	Closes the GUI.
F8	To log out.



The Local Console GUI Main Page

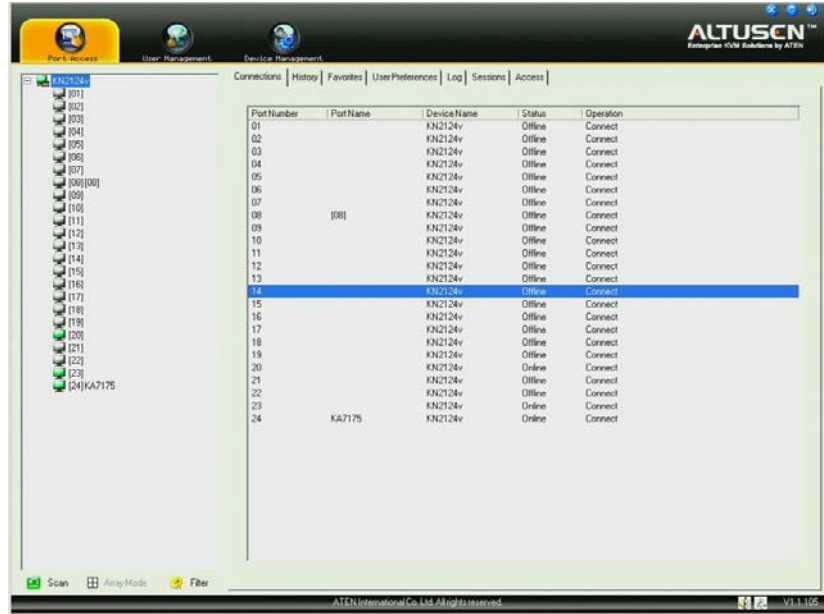The Local Console GUI Main Page is similar to the Java and Windows GUI Main Page:



The major difference is that the Local Console Main Page doesn't have tabs for *Maintenance* or *Download*, and *Array Mode* isn't available.

In addition, there are two small icons at the bottom right – as described in the following table.

Icon	Function
	Speaker. Allows sound output from the computers connected to the switch's ports to be heard on the Local Console computer. Click the icon to toggle speaker support On and Off. When Off, a red X displays across the icon.
	Microphone. Allows microphone input from the Local Console computer to be sent to the computers connected to the switch's ports. Click the icon to toggle microphone support On and Off. When Off, a red X displays across the icon.

The Control Panel

WinClient Control Panel

Since the WinClient ActiveX Viewer and WinClient AP Control Panel contains the most complete functionality of all the user interface control panels, this section describes the WinClient Control Panel. Although the other control panels may not have all of the features that this one does, you can refer to the information described here when using them.


The WinClient Control Panel consists of three rows: a row of icons at the top, with two text rows below it:



Ordinarily, the top text row shows the video resolution of the remote display. The lower row shows the IP address of the device you are accessing at the left. In the center of the bar, the number before the slash indicates which bus the user is on, while the number behind the slash indicates the number of users on that bus.

-
- Note:** 1. The above image shows the complete Control Panel. The icons that appear can be customized. See *Control Panel Configuration*, page 77, for details.
2. See *Multiusers Operation*, page 163 for further information regarding the KVM Over the NET™ switch's bus assignments.
-



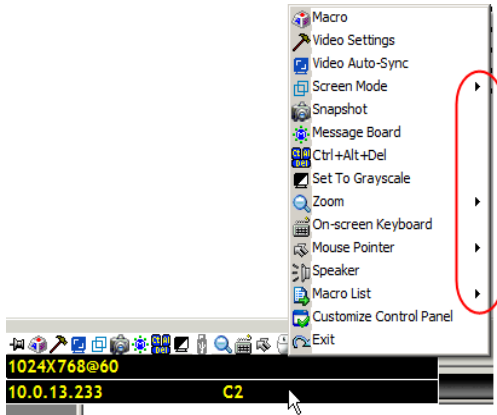








- ♦ As the mouse pointer moves over the icons in the icon bar the information in the top text row changes to describe the icon's function. If a message is entered in the message board, and you have not opened the message board in your session, the message scrolls across the top row, as well.
- ♦ Right clicking in the text row area brings up a menu that allows you to select options for the *Screen Mode*, *Zoom*, *Mouse Pointer* type, and *Mouse Sync Mode*. These functions are discussed in the sections that follow.



- ♦ To move the Control Panel to a different location on the screen, place the mouse pointer over the text bar area, then click and drag.









Control Panel Functions

The Control Panel functions are described in the table below.

Icon	Function
	This is a toggle. Click to make the Control Panel persistent – i.e., it always displays on top of other screen elements. Click again to have it display normally.
	Click to bring up the Macros dialog box (see page 55 for details).
	Click to bring up the Video Options dialog box. Right-click to perform a quick Auto Sync (see <i>Video Settings</i> , page 63, for details).
	Click to perform a video and mouse autosync operation. It is the same as clicking the Auto-sync button in the <i>Video Options</i> dialog box (see <i>Video Settings</i> , page 63).
	Toggles the display between <i>Full Screen Mode</i> and <i>Windowed Mode</i> .
	Click to take a snapshot (screen capture) of the remote display. See <i>Snapshot</i> , page 78, for details on configuring the Snapshot parameters.
	Click to bring up the Message Board (see <i>The Message Board</i> , page 66).
	Click to send a Ctrl+Alt+Del signal to the remote system.
	Click to toggle the remote display between color and gray scale views.
	Click to bring up the <i>Virtual Media</i> dialog box. The icon changes when a virtual media device is started on the port. See <i>Virtual Media</i> , page 69, for specific details. Note: 1. This icon is displayed on the KN2124v, KN2140v, KN4124v and KN4140v switches only. 2. This icon displays in gray when the function is disabled or not available.
	Click to zoom the remote display window. Note: This feature is only available in windowed mode (Full Screen Mode is off). See <i>Zoom</i> , page 72, for details.

(Continues on next page.)

(Continued from previous page.)

Icon	Function
	Click to bring up the on-screen keyboard (see <i>The On-Screen Keyboard</i> , page 73).
	Click to select the mouse pointer type. Note: This icon changes depending on which mouse pointer type is selected (see <i>Mouse Pointer Type</i> , page 74).
	Click to toggle Automatic or Manual mouse sync. ♦ When the selection is <i>Automatic</i> , a green √ appears on the icon. ♦ When the selection is <i>Manual</i> , a red X appears on the icon. See <i>Mouse DynaSync Mode</i> , page 75 for a complete explanation of this feature.
	Click to toggle the local computer's speaker on or off. The "prohibited" symbol (a red circle with a diagonal bar) displays on the icon when the speaker is toggled Off.
	Click to display a dropdown list of <i>User</i> macros. Access and run macros more conveniently rather than using the Macros dialog box (see the <i>Macros</i> icon in the table above, and the <i>Macros</i> section on page 55).
	Click to bring up the Control Panel Configuration dialog box. See <i>Control Panel Configuration</i> , page 77, for details on configuring the Control Panel.
	Click to exit the remote view. ♦ Exiting from a viewer accessed session brings you back to the web browser Main Page. ♦ Exiting from a WinClient AP session logs you out and brings you back to the login dialog box (see page 39). ♦ Exiting from a Java Client AP session logs you out and closes the Java program.
	These Lock Key LEDs show the Num Lock, Caps Lock, and Scroll Lock status of the remote computer. Click on the icon to toggle the status. Note: When you first connect, the LED display may not be accurate. To be sure, click on the LEDs to set them.




Macros

The Macros icon provides access to three functions found in the Macros dialog box: Hotkeys, User Macros, and System Macros. Each of these functions is described in the following sections.

Hotkeys

Various actions related to manipulating the remote server can be accomplished with hotkeys. The *Hotkey Setup* utility (accessed by clicking this icon), lets you configure which hotkeys perform the actions.

The actions are listed in the left panel; the hotkeys that invoke them are shown in the panel at the right. Use the checkbox to the left of an action's name to enable or disable its hotkey.

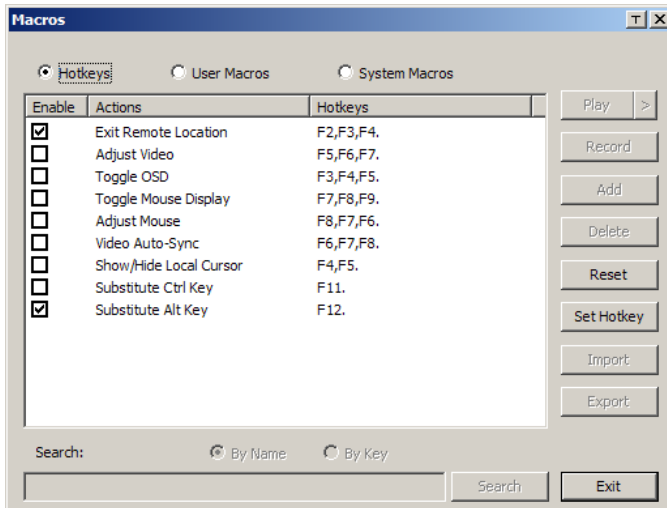

If you find the default Hotkey combinations inconvenient, you can reconfigure them as follows:

1. Highlight an *Action*, then click **Set Hotkey**.
2. Press your selected Function keys (one at a time). The key names appear in the *Hotkeys* field as you press them.
3. When you have finished keying in your sequence, click **Save**.

- ♦ To reset all the hotkeys to their default values, click **Reset**; to cancel setting a hotkey value, click **Cancel**; to clear an action's Hotkeys field, click **Clear**.
- ♦ You can use the same function keys for more than one action, *as long as the first key is not the same*. For example, you can use **F1 F2 F3** for one action; **F2 F1 F3** for another; **F3 F2 F1** for a third, etc.


Note: To invoke an action, you must press and release the keys one key at a time.

An explanation of the Hotkey actions is given in the table below:

Action	Explanation
Exit remote location	Breaks the connection to the KVM Over the NET™ switch and returns you to local operation.
Adjust Video	Brings up the video adjustment utility.
Toggle OSD	Toggles the Control Panel Off and On.
Toggle mouse display	<p>If you find the display of the two mouse pointers (local and remote) to be confusing or annoying, you can use this function to shrink the non-functioning pointer down to a barely noticeable tiny circle, which can be ignored. Since this function is a toggle, use the hotkeys again to bring the mouse display back to its original configuration.</p> <p>Note: This has the same effect as selecting the Dot pointer type from the Control Panel (see <i>Mouse Pointer Type</i>, page 74). The Java Control Panel does not have this feature.</p>
Adjust mouse	This utility synchronizes the local and remote mouse movements following a video resolution change. After invoking this utility, simply click the local mouse pointer on top of the remote mouse pointer.
Video Auto-sync	This combination performs an auto-sync operation. It is the same as clicking the Auto-sync button in the <i>Video Options</i> dialog box (see <i>Video Settings</i> , page 63).
Show/Hide Local Cursor	Toggles the display of your local mouse pointer off and on.
Substitute Alt key	Although all other keyboard input is captured and sent to the KVM Over the NET™ switch, [Alt + Tab] and [Ctrl + Alt + Del] work on your local computer. In order to implement their effects on the remote system, another key may be substituted for the Alt key. If you substitute the F12 key, for example, you would use [F12 + Tab] and [Ctrl + F12 + Del].
Substitute Ctrl key	If your local computer captures Ctrl key combinations, preventing them from being sent to the remote system, you can implement their effects on the remote system by specifying a function key to substitute for the Ctrl key. If you substitute the F11 key, for example, pressing [F11 + 5] would appear to the remote system as [Ctrl + 5].


User Macros

User Macros are used to perform specific actions on the remote server.

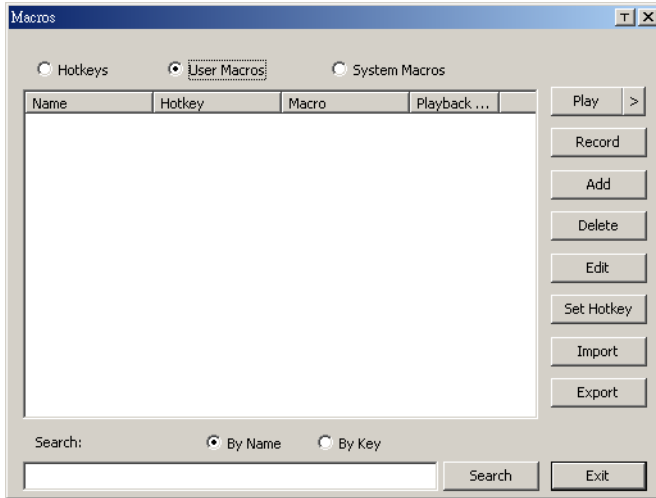


To create the macro, do the following:

1. Select *User Macros*, then click **Add**.

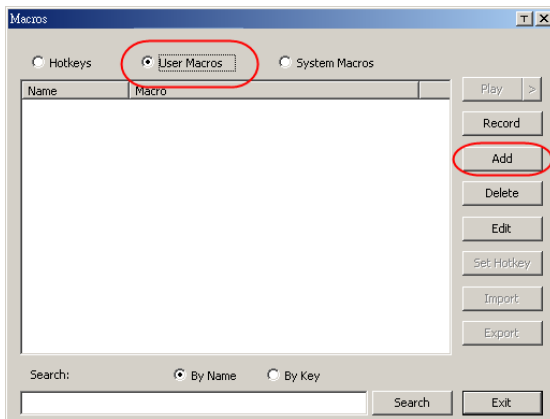


2. In the dialog box that comes up, key in a name for your macro. The “New Macro” text is replaced with what you key in:

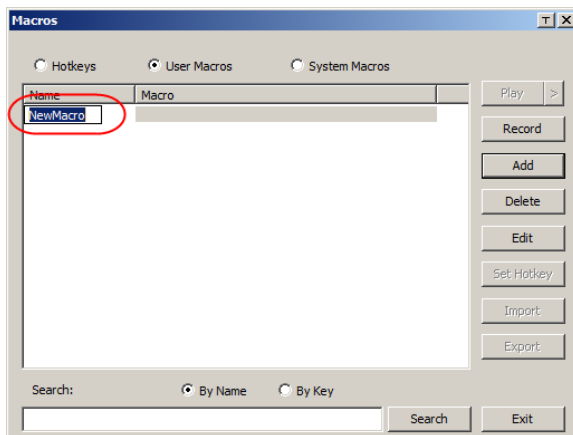

3. Click **Record**.

 
The dialog box disappears, and a small panel appears at the top left of the screen:



4. Press the keys for the macro, then click **Done**.

Note: To pause macro recording, click Pause. To resume, click Pause again.

You return to the Macros dialog box with your system macro key presses displayed in the Macro column:

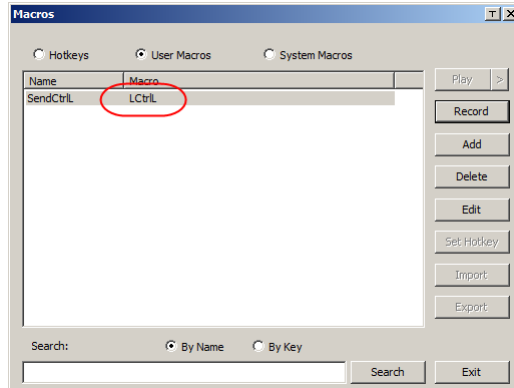


If you want to change any of the keystrokes, select the macro and click **Edit**.

5. Repeat the procedure for any other macros you wish to create.

After creating your macros, you can run them either by opening this dialog box and clicking **Play**, or by opening the Macro List on the Control Panel and clicking the one you want (see page 54).

 If you run the macro from this dialog box, you have the option of specifying how the macro runs.



- ♦ If you choose *Play Without Wait*, the macro runs the keypresses one after another with no time delay between them.
- ♦ If you choose *Play With Time Control*, the macro waits for the amount of time between key presses that you took when you created it. Click on the arrow next to *Play* to make your choice.

Note: User Macros are stored on the Local Client computer of each user.


Therefore there is no limitation on the of number of macros, the size of the macro names, or makeup of the hotkey combinations that invoke them

System Macros


System Macros are used to create exit macros for when you close a session. For example, as an added measure of security, you could create a macro that sends the Winkey-L combination which would cause the remote device's log in page to come up the next time the device was accessed

To create the macro, do the following:

1. Select *System Macros*, then click **Add**.

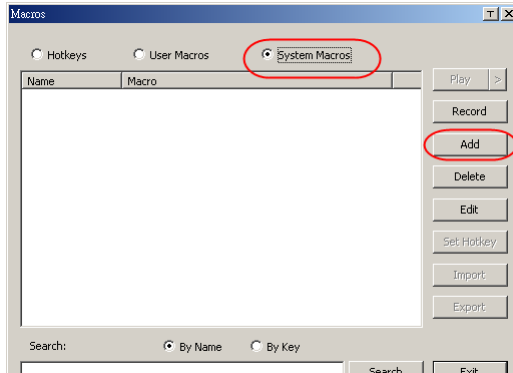


2. In the dialog box that comes up, key in a name for your macro. The “New Macro” text is replaced with what you key in:

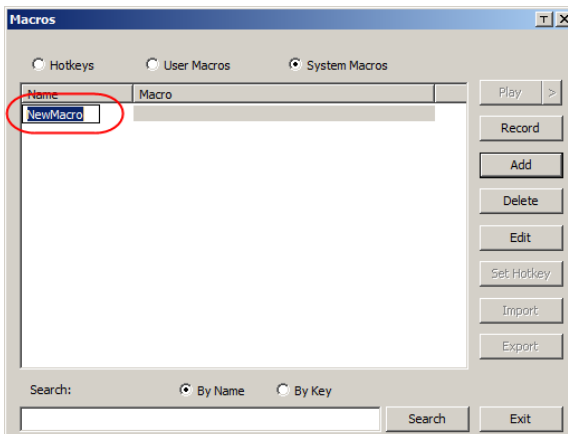

3. Click **Record**.

 
The dialog box disappears, and a small panel appears at the top left of the screen:



4. Press the keys for the macro, then click **Done**.

Note: To pause macro recording, click Pause. To resume, click Pause again.

You return to the Macros dialog box with your system macro key presses displayed in the Macro column:

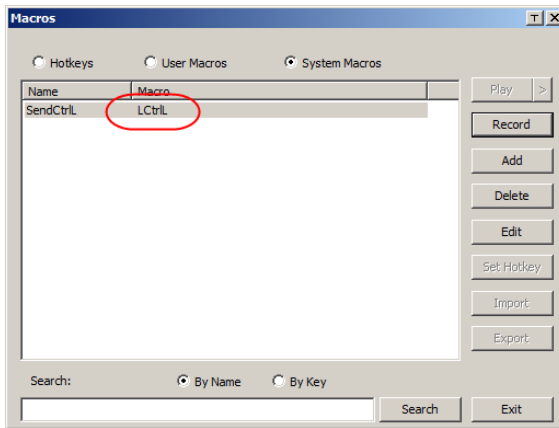

If you want to change any of the keystrokes, select the macro and click **Edit**.

5. Repeat the procedure for any other macros you wish to create.

Once the system macros have been created, they are available for use on a port-by-port basis. They get selected on a port's *Connection* page (see *Exit Macro*, page 92, for details).

Note: 1. You can choose only one system macro per port.

2. Systems macros are stored on the switch, therefore macro names may not exceed 64 Bytes; hotkey combinations may not exceed 256 Bytes; each key usually takes 3–5 Bytes.

Search


Search allows you to find previously created macros and have them listed in the large upper panel for you to play or edit.

Click a radio button to choose whether you want to search by name or by Hotkey; key in a string for the search; then click **Search**. All instances that match your search string appear in the upper panel.



Video Settings

Clicking the *Hammer* icon on the Control Panel brings up the *Video Settings* dialog box. The options in this dialog box allow you to adjust the placement and picture quality of the remote screen on your monitor:

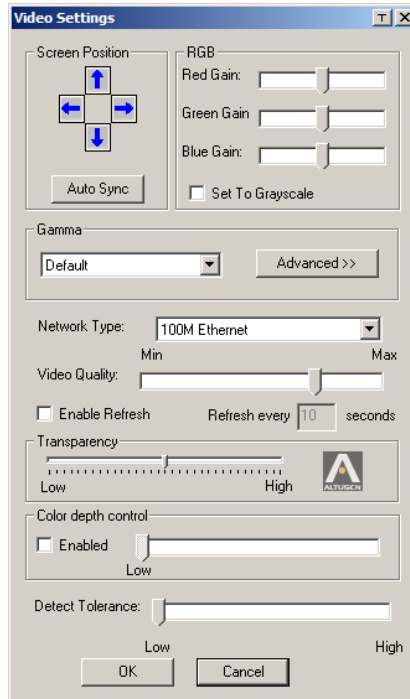

The meanings of the video adjustment options are given in the table below:


Option	Usage
Screen Position	Adjust the horizontal and vertical position of the remote computer window by Clicking the Arrow buttons.
Auto-Sync	<p>Click Auto-Sync to have the vertical and horizontal offset values of the remote screen detected and automatically synchronized with the local screen.</p> <p>Note: 1. If the local and remote mouse pointers are out of sync, in most cases, performing this function will bring them back into sync.</p> <p>2. This function works best with a bright screen.</p> <p>3. If you are not satisfied with the results, use the Screen Position arrows to position the remote display manually.</p>

RGB	<p>Drag the slider bars to adjust the RGB (Red, Green, Blue) values. When an RGB value is increased, the RGB component of the image is correspondingly increased.</p> <p>If you enable <i>Set to Grayscale</i>, the remote video display is changed to grayscale.</p>
Gamma	<p>This section allows you to adjust the video display's gamma level. This function is discussed in detail in the next section, <i>Gamma Adjustment</i>.</p>
Network Type	<p>Select the type of internet connection that the Local Client computer uses. The switch will use that selection to automatically adjust the <i>Video Quality</i> and <i>Detect Tolerance</i> settings to optimize the quality of the video display.</p> <p>Since network conditions vary, if none of the pre-set choices seem to work well, you can select <i>Customize</i> and use the Video Quality and Detect Tolerance slider bars to adjust the settings to suit your conditions.</p>
Video Quality	<p>Drag the slider bar to adjust the overall Video Quality. The larger the value, the clearer the picture and the more video data goes through the network. Depending on the network bandwidth, a high value may adversely effect response time.</p>
Enable Refresh	<p>The KVM Over the NET™ switch can redraw the screen every 1 to 99 seconds, eliminating unwanted artifacts from the screen. Select Enable Refresh and enter a number from 1 through 99. The KVM Over the NET™ switch will redraw the screen at the interval you specify. This feature is disabled by default. Click to put a check mark in the box next to <i>Enable Refresh</i> to enable this feature.</p> <p>Note: 1. The switch starts counting the time interval when mouse movement stops.</p> <p>2. Enabling this feature increases the volume of video data transmitted over the network. The lower the number specified, the more often the video data is transmitted. Setting too low a value may adversely affect overall operating responsiveness.</p>
Transparency	<p>Adjusts the transparency of the Control Panel and other Toolbars. Slide the bar until the display in the example window is to your liking.</p>
Color Depth Control	<p>This setting determines the richness of the video display by adjusting the amount of color information.</p>
Detect Tolerance	<p>This setting also relates to video quality. It governs detecting or ignoring pixel changes. A high setting can result in a lower quality display due to less data transfer. A lower setting will result in better video quality, but setting the threshold too low may allow too much data to be transferred, negatively impacting network performance.</p>

Gamma Adjustment

If it is necessary to correct the gamma level for the remote video display, use the *Gamma* function of the Video Adjustment dialog box.

- Under *Basic* configuration, there are ten preset and four user-defined levels to choose from. Drop down the list box and choose the most suitable one.
- For greater control, clicking the *Advanced* button brings up the following dialog box:

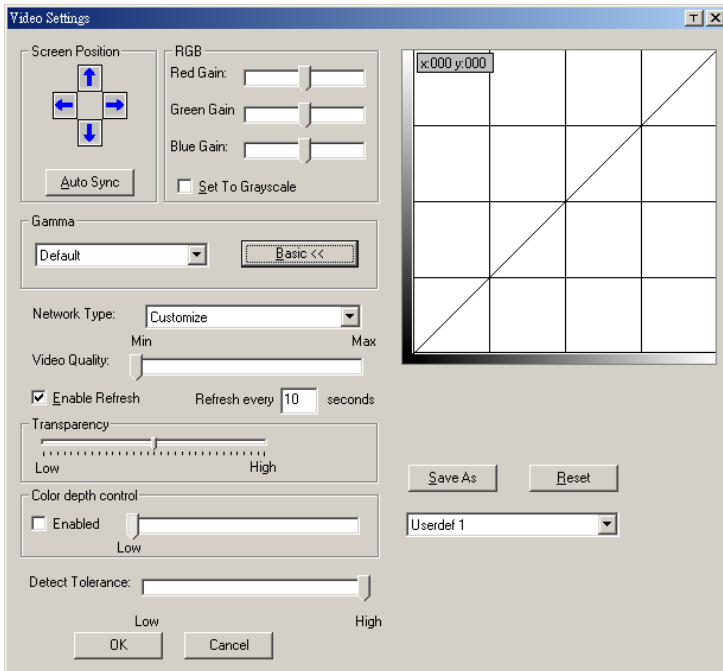


- Click and drag the diagonal line at as many points as you wish to achieve the display output you desire.
- Click **Save As** to save up to four user-defined configurations derived from this method. Saved configurations can be recalled from the list box at a future time.
- Click **Reset** to abandon any changes and return the gamma line to its original diagonal position.
- Click **OK** to save your changes and close the dialog box.
- Click **Cancel** to abandon your changes and close the dialog box.

Note: For best results, change the gamma while viewing a remote computer.





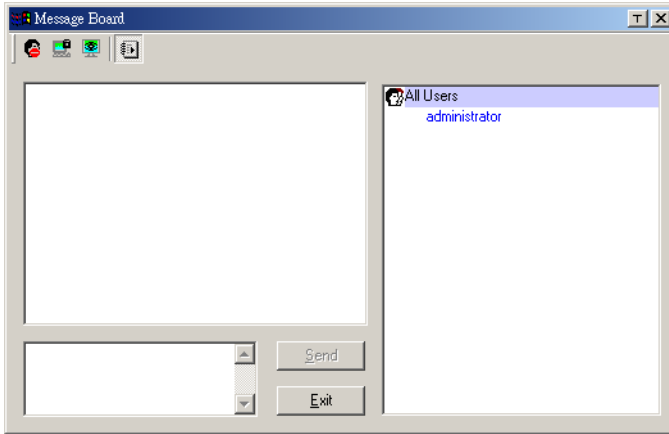

The Message Board

The KVM Over the NET™ switch supports multiple user logins, which can possibly give rise to access conflicts. To alleviate this problem, a message board feature has been provided, allowing users to communicate with each other:



The Button Bar

The buttons on the Button Bar are toggles. Their actions are described in the table below:

Button	Action
	Enable/Disable Chat. When disabled, messages posted to the board are not displayed. The button is shadowed when Chat is disabled. The icon displays next to the user's name in the User List panel when the user has disabled Chat.
	Occupy/Release Keyboard/Video/Mouse. When a port is set to <i>Occupy</i> mode (see <i>Access Mode</i> , page 87), you can use this button to occupy the KVM. When you Occupy the KVM, other users cannot see the video, and cannot input keyboard or mouse data. The button is shadowed when the KVM is occupied. The icon displays next to the user's name in the User List panel when the user has occupied the KVM.
	Occupy/Release Keyboard/Mouse. When a port is set to <i>Occupy</i> mode (see <i>Access Mode</i> , page 87), you can use this button to occupy the KM. When you Occupy the KM, other users can see the video, but cannot input keyboard or mouse data. The button is shadowed when the KM is occupied. The icon displays next to the user's name in the User List panel when the user has occupied the KM.
	Show/Hide User List. When you Hide the User List, the User List panel closes. The button is shadowed when the User List is open.

Message Display Panel

Messages that users post to the board - as well as system messages - display in this panel. If you disable Chat, however, messages that get posted to the board won't appear.


Compose Panel

Key in the messages that you want to post to the board in this panel. Click **Send**, or press [**Enter**] to post the message to the board.

User List Panel

The names of all the logged in users are listed in this panel.

- ♦ Your name appears in blue; other users' names appear in black.
- ♦ By default, messages are posted to all users. To post a message to one individual user, select the user's name before sending your message.
- ♦ If a user's name is selected, and you want to post a message to all users, select All Users before sending your message.
- ♦ If a user has disabled Chat, its icon displays before the user's name to indicate so.
- ♦ If a user has occupied the KVM or the KM, its icon displays before the user's name to indicate so.

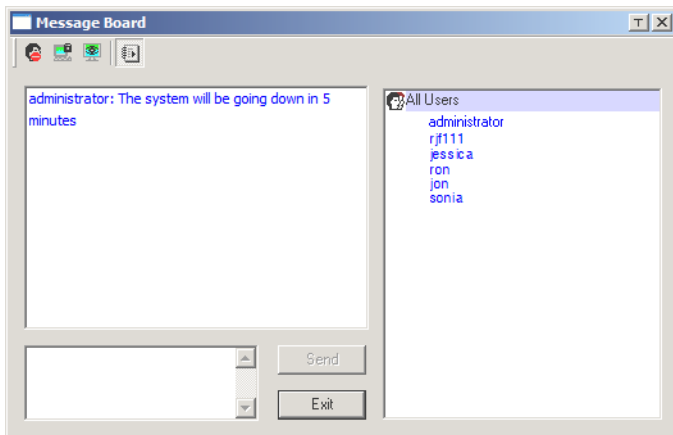




Virtual Media

The *Virtual Media* feature allows a drive, folder, image file, or removable disk on a user's system to appear and act as if it were installed on the remote server.

Note: Virtual Media is only supported on remote computers connected to the KVM Over the NET™ switch with KA7175 or KA7176 adapter cables.


To implement this redirection feature, do the following:

1. Click this icon to bring up the *Virtual Media* dialog box:

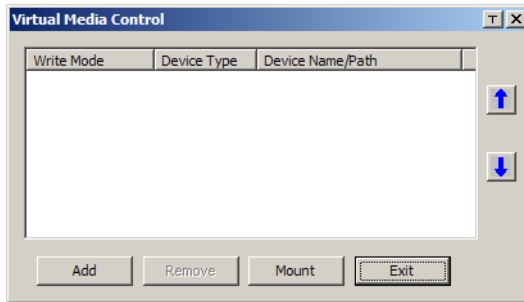

Note: The **T** button at the top right brings up a slider to adjust the transparency of the dialog box. After making your adjustment, click anywhere in the dialog box to dismiss the slider.

2. Click **Add**; then select the media source.

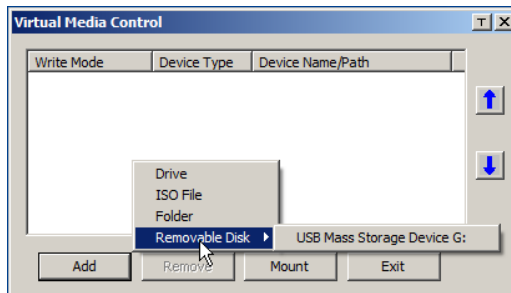


Depending on your selection, additional dialog boxes appear to enable you to select the drive, file, folder, or removable disk you desire. See *Virtual Media Support*, page 216 for details about mounting each of these media types.

3. To add additional media sources, click **Add**, and select the source as many times as you require.

Up to three virtual media choices can be mounted. The top three in the list are the ones that are selected. To rearrange the selection order, highlight the device you want to move, then click the Up or Down Arrow button to promote or demote it in the list.


4. *Read* refers to the redirected device being able to send data to the remote sever; *Write* refers to the redirected device being able to have data from the remote server written to it. The default is for Write to not be enabled (Read only). If you want the redirected device to be writable as well as readable, click to put a check in the *Enable Write* checkbox:

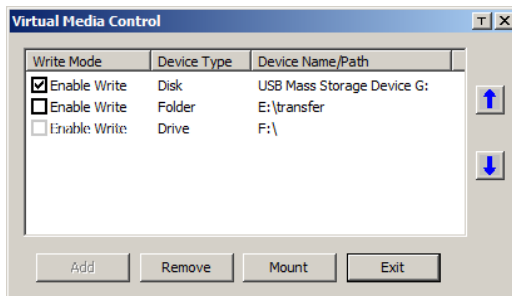

Note: 1. If a redirected device cannot be written to, it appears in gray in the list.

2. See *Virtual Media Support*, page 216, for a list of supported virtual media types.
-

5. To remove an entry from the list, select it and click **Remove**.
6. After you have made your media source selections, click **Mount**. The dialog box closes. The virtual media devices that you have selected are redirected to the remote system, where they show up as drives, files and folders on the remote system's file system.

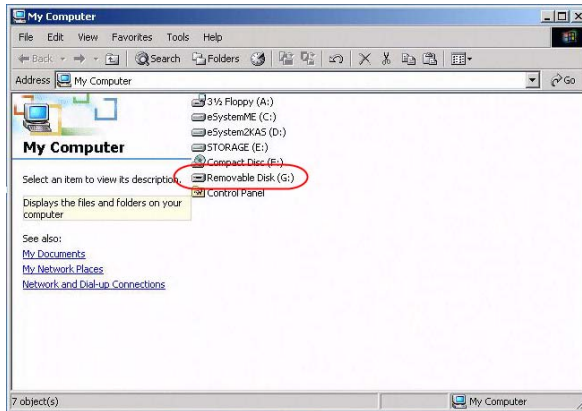




Once mounted, you can treat the virtual media as if they were really on the remote server – drag and drop files to/from them; open files on the remote system for editing and save them to the redirected media, etc.

Files that you save to the redirected media, will actually be saved on your local system. Files that you drag from the redirected media will actually come from your local system.

7. To end the redirection, bring up the *Control Panel* and click on the Virtual Media icon. All mounted devices are automatically unmounted.

Virtual Media Icons

The Virtual Media icon on the Windows Client Control Panel changes, depending on the type of drive used, as shown in the table below:

Icon	Function
	The icon displays in gray to indicate that the virtual media function is disabled or not available
	The icon displays in blue to indicate that the virtual media function is available. Click the icon to bring up the virtual media dialog box.
	The icon displays in blue with a red X to indicate that a virtual media device has been mounted on the remote server. Click the icon to unmount all redirected devices.



Zoom


The Zoom icon controls the zoom factor for the remote view window. Settings are as follows:

Setting	Description
100%	Sizes and displays the remote view window at 100%.
75%	Sizes and displays the remote view window at 75%.
50%	Sizes and displays the remote view window at 50%.
25%	Sizes and displays the remote view window at 25%.
1:1	Sizes and displays the remote view window at 100%. The difference between this setting and the 100% setting is that when the remote view window is resized its contents don't resize – they remain at the size they were. To see any objects that are outside of the viewing area move the mouse to the window edge, to have the screen scroll. Note: The 1:1 Zoom size is not available in the Java Applet Viewer or the Java Client AP.



The On-Screen Keyboard

The KVM Over the NET™ switch supports an on-screen keyboard, available in multiple languages, with all the standard keys for each supported language. Click this icon to pop up the on-screen keyboard:

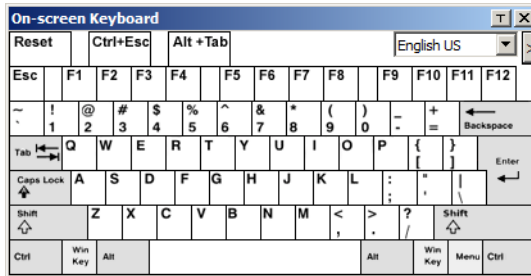


One of the major advantages of the on-screen keyboard is that if the keyboard languages of the remote and local systems aren't the same, you don't have to change the configuration settings for either system. The user just has to bring up the on-screen keyboard; select the language used by the computer on the port he is accessing; and use the on-screen keyboard to communicate with it.

Note: You must use your mouse to click on the keys. You cannot use your actual keyboard.


To change languages, do the following:

1. Click the down arrow next to the currently selected language, to drop down the language list.

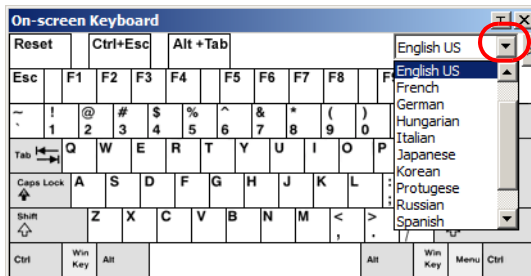

2. Select the new language from the list.

To display/hide the expanded keyboard keys, click the arrow to the right of the language list arrow.

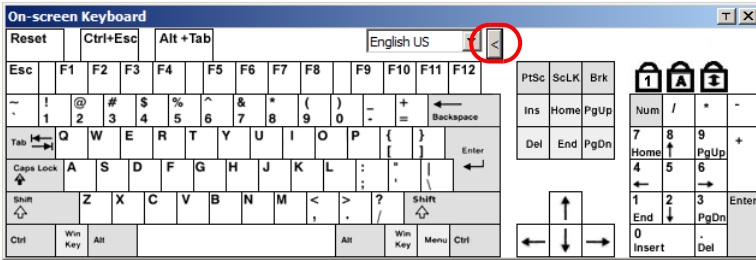

Mouse Pointer Type

KVM Over the NET™ switches offer a number of mouse pointer options when working in the remote display. Click this icon to select from the available choices:



Note: 1. Before accessing a port, only Dual and Crosshairs are available. Once the port is accessed, all four pointers are available.

2. The icon on the Control Panel changes to match your choice.
3. Selecting the Dot pointer has the same effect as the *Toggle mouse display* hotkey function (see *Toggle mouse display*, page 56, for details).
4. The Dot pointer is not available with the Java Applet Viewer or the Java Client AP.



Mouse DynaSync Mode

Synchronization of the local and remote mouse pointers is accomplished either automatically or manually.

Automatic Mouse Synchronization (DynaSync)

Mouse DynaSync provides automatic locked-in synching of the remote and local mouse pointers – eliminating the need to constantly resync the two movements.

Note: This feature is only available for Windows and Mac systems (G4 and higher) whose adapter attribute OS setting is configured for Win or Mac (see *Port Properties*, page 86), which are connected to the switch with one of the following Adapter Cables: KA7170, KA7175, KA7176, or KA9170.

All other configurations must use manual mouse synchronization (described in the next section).


The icon on the toolbar indicates the synchronization mode status as follows:

Icon	Function
	This icon displays in gray to indicate that Mouse DynaSync is not available – you must use manual synching procedures. This is the default setting for all KVM Adapters other than the KA7170, KA7175, KA7176, and KA9170.
	The green check mark on this icon indicates that Mouse DynaSync is available and is enabled . This is the default setting when Mouse DynaSync is available. (See the Note, above.)
	The red X on this icon indicates that Mouse DynaSync is available but is not enabled .

When *Mouse DynaSync* is available, clicking the icon toggles its status between enabled and /disabled. If you choose to disable Mouse DynaSync mode, you must use the manual synching procedures described in the next section.

Mac and Linux Considerations

For Mac systems, there is a second DynaSync setting to choose from when Mouse DynaSync is enabled. If the default synchronization result is not satisfactory, try the **Mac 2** setting. To select Mac 2, right click in the text area of the Control Panel and select *Mouse Sync Mode* → *Automatic for Mac 2*:

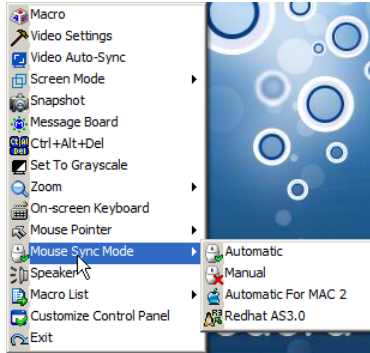

Linux doesn't support DynaSync Mode, but it has an additional setting on the Mouse Sync Mode menu (Redhat AS3.0). If you are using one of the USB Adapter Cables (see the Note on the previous page), and the default mouse synchronization is not satisfactory, you can try the Redhat AS3.0 setting. In either case, you must perform the manual mouse synchronization procedures described in the next section.


Manual Mouse Synchronization

If the local mouse pointer goes out of sync with the remote system's mouse pointer there are a number of methods to bring them back into sync:

1. Perform a video and mouse auto sync by clicking the *Video Settings* icon on the Control Panel (see page 63).
2. Perform an *Auto Sync* with the Video Adjustment function (see *Video Settings*, page 63, for details).
3. Invoke the *Adjust Mouse* function with the *Adjust Mouse* hotkeys (see *Adjust mouse*, page 56, for details).
4. Move the pointer into all 4 corners of the screen (in any order).
5. Drag the Control Panel to a different position on the screen.
6. Set the mouse speed and acceleration for each problematic computer attached to the switch. See *Additional Mouse Synchronization Procedures*, page 206, for instructions.

Control Panel Configuration

Clicking the *Control Panel* icon brings up a dialog box that allows you to configure the items that appear on the Control Panel, as well as its graphical settings:

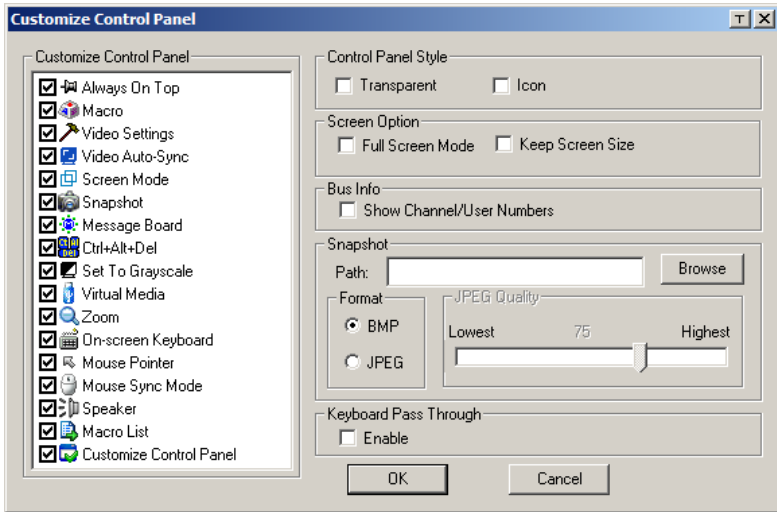

The dialog box is organized into six main sections as described in the table, below:

Item	Description
Customize Control Panel	Allows you to select which icons display in the Control Panel
Control Panel Style	<ul style="list-style-type: none"> Enabling <i>Transparent</i> makes the Control Panel semi-transparent, so that you can see through it to the display underneath. Enabling <i>Icon</i> causes the Control Panel to display as an icon until you mouse over it. When you mouse over the icon, the full panel comes up.

(Continues on next page.)

(Continued from previous page.)

Item	Description
Screen Options	<ul style="list-style-type: none"> ◆ If <i>Full Screen Mode</i> is enabled, the remote display fills the entire screen. ◆ If <i>Full Screen Mode</i> is not enabled, the remote display appears as a window on the local desktop. If the remote screen is larger than what is able to fit in the window, move the mouse pointer to the screen border that is closest to the area you want to view and the screen will scroll. ◆ If <i>Keep Screen Size</i> is enabled, the remote screen is not resized. <ul style="list-style-type: none"> ◆ If the remote resolution is smaller than that of the local monitor, its display appears like a window centered on the screen. ◆ If the remote resolution is larger than that of the local monitor, its display is centered on the screen. To access the areas that are off screen, move the mouse to the corner of the screen that is closest to the area you want to view and the screen will scroll. ◆ If <i>Keep Screen Size</i> is not enabled, the remote screen is resized to fit the local monitor's resolution.
Bus Info	<p>If <i>Bus Info</i> is enabled, the number of the bus you are on, as well as the total number of users on the bus, displays on the bottom row center of the Control Panel as follows: Bus No./Total Users. (See the Control Panel diagram on page 51 for an example.)</p>
Snapshot	<p>These settings let the user configure the KN2124v / KN2140v / KN4124v / KN4140v / KN2132 / KN4116 / KN4132's screen capture parameters (see the <i>Snapshot</i> description under <i>The Control Panel</i>, page 51):</p> <ul style="list-style-type: none"> ◆ Path lets you select a directory that the captured screens automatically get saved to. Click Browse; navigate to the directory of your choice; then click OK. If you don't specify a directory here, the snapshot is saved to your desktop. ◆ Click a radio button to choose whether you want the captured screen to be saved as a BMP or a JPEG (JPG) file. ◆ If you choose JPEG, you can select the quality of the captured file with the slider bar. The higher the quality, the better looking the image, but the larger the file size.
Keyboard Pass Through	<p>When this is enabled, the Alt-Tab key press is passed to the remote device and affect that device. If it is not enabled, Alt-Tab acts on your Local Client computer.</p>

The Java Control Panel

The Java Applet Viewer and Java Client AP Control Panel is similar to the one used by the WinClient:



The major differences between them are:

- ♦ In the Macros dialog box, *Toggle Mouse Display* is not available.
- ♦ The *Dot* mouse pointer type is not available.
- ♦ The 1:1 Zoom feature is not available.
- ♦ The Message Board:
 - ♦ There is no *Show/Hide* button to show or hide the user list. This function is achieved by clicking the arrows at the top of the bar that separates the User List panel from the Main panel.
 - ♦ If a message is entered in the message board and you have not opened the message board in your session, the message board window pops up on your screen.
- ♦ In Virtual Media, only ISO and Folder are supported. See *Java Applet Viewer / Java Client AP*, page 216 for further details.
- ♦ In *Control Panel Configuration*, the following functions are not available: the *Transparent* control panel style; *Screen Options*; and *Keyboard Passthrough*. The BMP Snapshot format has been replaced by PNG.



This Page Intentionally Left Blank


Chapter 6

Port Access


Overview

When you log in to the switch the *Port Access* page comes up with the *Connections* page displayed.

Web Browser Interface

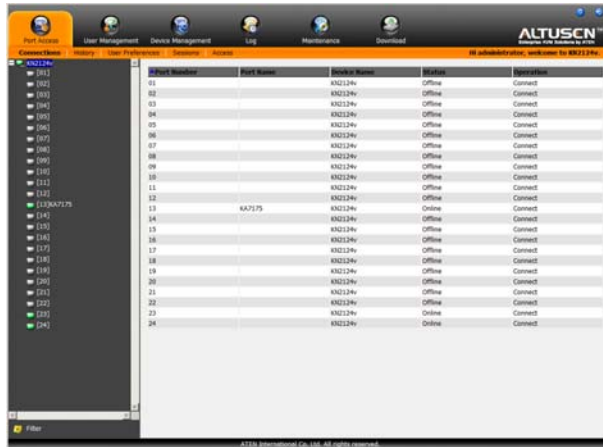

GUI Interface

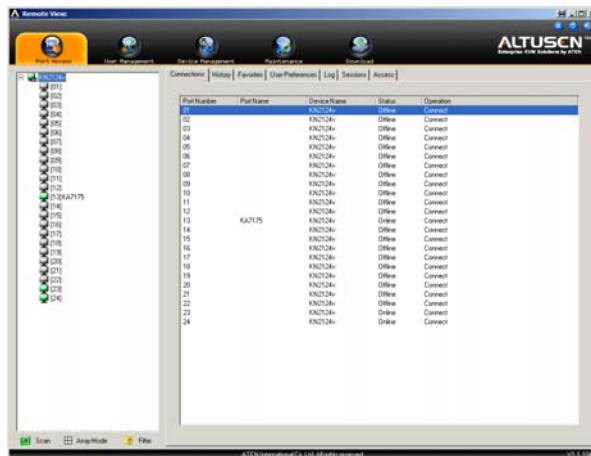


The page is organized into several main areas. All the ports that a user is permitted to access are listed in the Port Selection Sidebar at the left of the page. At the bottom of the Sidebar, there are buttons for different port display functions.

The tabs at the top of the main panel open different pages for information and configuration options related to the ports. The main panel provides a detailed listing of each port, as well as a means of accessing the ports.

The Port Selection Sidebar

All switches and their ports – including cascaded switches and their ports – are listed in a tree structure in the Sidebar at the left of the screen:

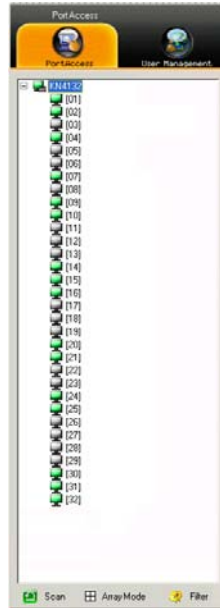

The Port Selection Tree

- ♦ Users are only allowed to see the switches and ports that they have access permission for.
- ♦ Ports and child switches can be nested under their parent switches. Click the + in front of a switch to expand the tree and see the ports nested underneath it. Click the - to collapse the tree and hide the nested ports.
- ♦ A port's ID number is displayed in brackets next to the port icon. For convenience the ports can be named (see *Port Naming*, page 88, for details).
- ♦ Switches and ports that are on line have their monitor screen icons lit green; the monitor screens are gray for devices and ports that are offline.
- ♦ To access a port, double click its icon. Port operation details are discussed in Chapter 11, *Port Operation*.


Port Views

In the Web Browser version, you can open as many port viewers as there are ports, but the number of ports that you see depends on the number of buses that the switch supports. For example, if the switch supports 4 buses, the 5th viewer displays the same port as the 1st viewer; the 6th viewer displays the same screen as the 2nd viewer, etc.

In the GUI version you can only access one port at a time. To see two different ports, you would have to log in two separate times.

Port Utilities

The GUI version Port Access page provides a convenient method to manipulate the device tree. When you right click an item in the Sidebar, a list with various options pops up. The items on the list vary depending on your user type, and whether you selected a switch or a port. The screenshot below, shows the available items:

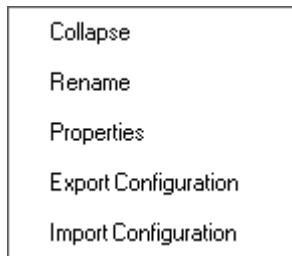


The meanings of the configuration items are explained in the following table:

Item	User Type	Explanation
Expand/ Collapse	Administrators Users	<ul style="list-style-type: none"> ◆ If the device's ports are nested (not displayed), the dialog box entry is <i>Expand</i>. Click Expand to open the tree and display the ports. ◆ If the device's ports are displayed, the dialog box entry is <i>Collapse</i>. Click Collapse to nest the ports. <p>Note: 1. This item only appears for switches or ports that have child devices connected to them.</p> <p>2. This has the same effect as clicking the + or - in the tree view.</p>
Rename	Administrators Users	For convenience – especially in large installations with many switches and ports – each switch and each port can be given a name. See <i>Port Naming</i> , page 88, for details.
Properties	Administrators	<p>This item allows you to configure the properties for a switch or port.</p> <ul style="list-style-type: none"> ◆ For switches, clicking this item takes you to the Device Management page. See <i>Device Management</i>, page 121, for configuration details. ◆ For ports, a dialog box opens allowing you to make configuration settings for that port. See <i>Port Properties</i>, page 86, for details.
Export Configuration	Administrators	This item is only available for switches. It allows you to save the configuration settings for the switch in an external file (<i>SysConfig.cfg</i>). Simply click Export Config ; browse to where you want to save the file; then click Save .
Import Configuration	Administrators	This item is only available for switches. It imports previously saved configuration settings. Click Import Config . In the dialog box that comes up, browse to where the saved configuration file is located; select the setting components you wish to import; then click Import .

Port Properties

When you select **Properties** from the popup menu, a dialog box that allows you to make configuration settings for the selected port appears:

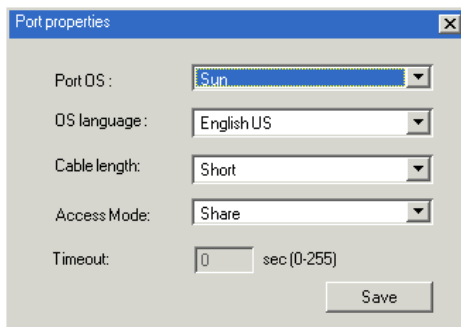

Note: This is a quick setting method that performs the same port configuration functions as the ones found under *Adapter Attributes* on the Device Management *Customization* page. See *Customization*, page 138, for details.

(Continues on next page.)

(Continued from previous page.)

An explanation of the configuration fields is given in the table, below:

Field	Explanation
Port OS	Specifies the operating system that the computer on the connected port is using. Choices are Win, Mac, Sun, and Other. The default is Win.
OS Language	Specifies the OS language being used by the computer on the connected port. Drop down the list to see the available choices. The default is English US.
Cable Length	<p>Specifies the length of the Cat5e cable that is used to connect the computer to the port. Choices are Short (less than 10 m), Medium (10–25 m), and Long (greater than 25 m). The default is Short.</p> <p>Note: Cable length can affect video quality. Generally speaking, shorter cables offer better quality. This setting is designed to compensate for longer or shorter cable lengths. You can experiment to find the setting that best suits your connection.</p>
Access Mode	<p>Defines how the port is to be accessed when multiple users have logged on, as follows:</p> <p>Exclusive: The first user to switch to the port has exclusive control over the port. No other users can view the port. The <i>Timeout</i> function does not apply to ports which have this setting.</p> <p>Occupy: The first user to switch to the port has control over the port. However, additional users may view the port's video display. If the user who controls the port is inactive for longer than the time set in the <i>Timeout</i> box, port control is transferred to the next user to move the mouse or strike the keyboard.</p> <p>Share: Users simultaneously share control over the port. Input from the users is placed in a queue and executed chronologically. Under these circumstances, users can take advantage of the <i>Message Board</i>, which allows a user to take control of the keyboard and mouse or keyboard, mouse, and video of a Share port (see <i>The Message Board</i>, page 66).</p>
Timeout	<p>This field sets a time threshold for users on ports whose Access Mode has been set to <i>Occupy</i> (see <i>Access Mode</i> – above, in this table). If there is no activity from the user occupying the port for the amount of time set here, the user is timed out and the port is released. The first user to send keyboard or mouse input after the port has been released gets to occupy the port.</p> <p>Input a value from 0 to 255 seconds. The default is 3 seconds. A setting of 0 causes the port to be released the instant there is no input.</p>

After making your configuration choices, click **Save** to save your new settings and close the dialog box.

Port Naming

For convenience – especially in large installations with many switches and ports – each switch and each port can be given a name. To assign, modify or delete a port name, do the following:

1. Click once on the port you want to edit; wait a second; then click again.

Note: 1. This is not a double-click. It involves two separate clicks. A double-click will switch you to the device attached to the port.

2. In the GUI version you can right click on the port you want to edit, then select **Rename** in the popup box that appears.
-

– or –

Press **F2**

After a second or two, the port field changes to provide a text input box:



2. Key in a name for the port (or change/delete a previous one). The maximum number of characters allowed for a port name is 20. You can use any combination of letters, numbers, and symbols on the typewriter keys of keyboards with PC US English layout.
3. When you have finished editing the port name, press **[Enter]** or click anywhere outside of the input box to complete the operation.



Scan

Scan is found at the bottom of the GUI Sidebar. It automatically switches among all the ports that are visible in the Sidebar tree (see *Filter*, below), at regular intervals, so that their activity can be monitored automatically. See *Auto Scanning*, page 158 for details.

Note: This item doesn't appear at the bottom of the Sidebar in the Web Browser version. You must invoke it from the port's *Toolbar*. See *The Port Toolbar*, page 156, for details.


Array

Array is found at the bottom of the GUI Sidebar. It represents another way of monitoring port activity. Under this function your screen is divided into a grid of panels, with each panel representing. Only ports that are visible in the Sidebar tree (see *Filter*, below), and that are on line are displayed – all other ports are blank. See *Panel Array Mode*, page 161, for details.

Note: This item doesn't appear at the bottom of the Sidebar in the Web Browser version. You must invoke it from the port's *Toolbar*. See *The Port Toolbar*, page 156, for details.

Filter

Filter allows you to control the number and type of ports that display in the Sidebar Tree, as well as which ports get scanned when Auto Scan and Array Mode is invoked (see *Scan* and *Array*, above). When you click *Filter*, the bottom of the panel changes to look similar to the figure, below:

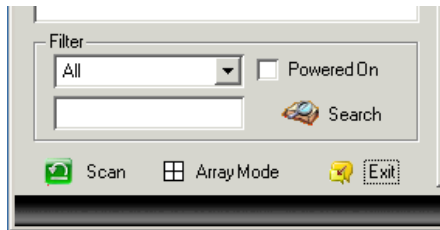

(Continues on next page.)

(Continued from previous page.)

The meanings of the choices are explained in the table, below:


Choices	Explanation
All	<p>This is the default view. With no other filter options selected, all of the ports that are accessible to the user are listed in the Sidebar tree.</p> <p>If any <i>Favorites</i> have been specified (see page 94), you can drop down the list box and select Favorites instead of All. If you select Favorites, only the items you have selected as Favorites display in the tree.</p>
Powered On	<p>If you enable <i>Powered On</i> (by putting a check in the checkbox) only the ports that have their attached devices powered on display in the tree.</p>
Search	<p>If you key in a search string and click Search, only port names that match the search string display in the tree. Wildcards (? and *) are acceptable, so that more than one port can show up in the list. For example, if you key in Web*, both Web Server 1 and Web Server 2 show up in the list.</p>
Exit	<p>Clicking Exit closes the filter dialog.</p>

Connections

The Connections page displays port status information at the device level, and port connection configuration options at the port level.

Device Level

When a KVM Over the NET™ switch is selected in the Port Selection Panel, the Connections page displays a list of ports for the device that the user is authorized to access or view.

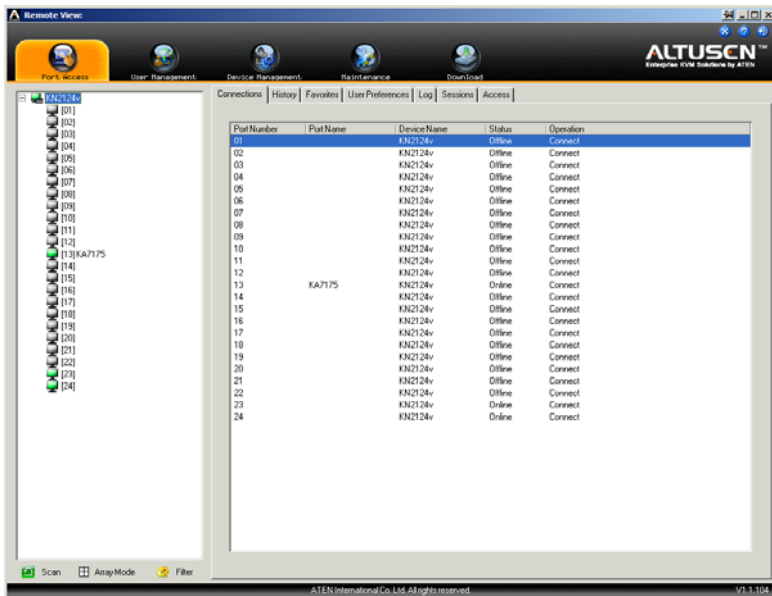


The following attributes are listed for each device:

- ◆ Port Number – the port's number on the switch.
- ◆ Port Name – if a name has been assigned to a port it displays here.
- ◆ Device Name – if a name has been assigned to a switch it displays here.
- ◆ Status – the current status of the switch – online, or offline.
- ◆ Operation – Connect means you can access the port by double clicking anywhere on its line entry.

Note: In the Web Browser version, the sort order of the information displayed can be changed by clicking the column headings.

Port Level

When a port is selected in the Sidebar tree, the Connections page changes to display the port connection and configuration options:

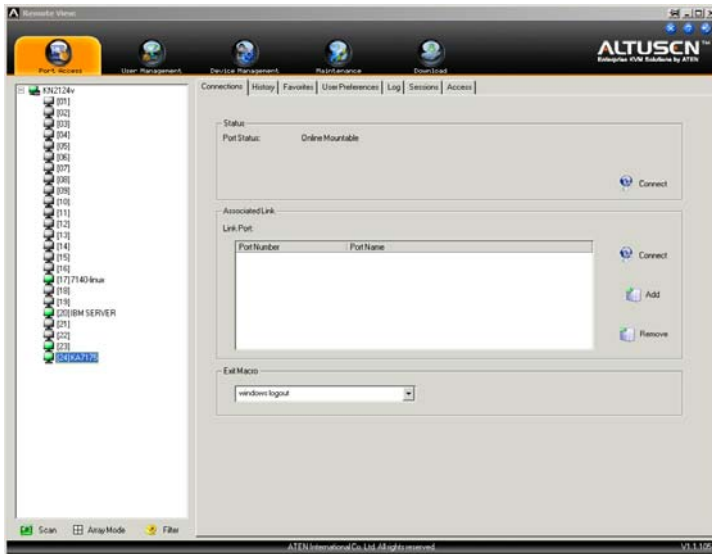


The screen is divided into three major panels, as described in the table below:

Panel	Description
Status	<p>The Status Panel displays the port's current status information, including whether the port is online or offline, and if the port is mountable.</p> <p>Click the Connect button to view the port display via the switch's built-in Win Viewer (when using Windows Internet Explorer), or Java Viewer (when using other web browsers).</p>
Associated Link	<p>The Associated Link Panel provides a method of associating other ports on the same switch to the selected port. This function is primarily intended to be used when connecting both KVM and serial ports (KA7140, KA9140) from a single computer to the switch. Click Add to add a desired associated port. To remove an unwanted associated port, select it and click Remove. To connect to a port, select it, and click Connect.</p>
Exit Macro	<p>The Exit Macro Panel contains a dropdown listbox of <i>System</i> macros. You can select a macro from the list that will execute when exiting the port. See <i>System Macros</i>, page 60 for details on creating exit macros.</p> <p>The macro only executes after the last user accessing the port exits the port.</p>

History

The History page provides a record of each time that a port was accessed.

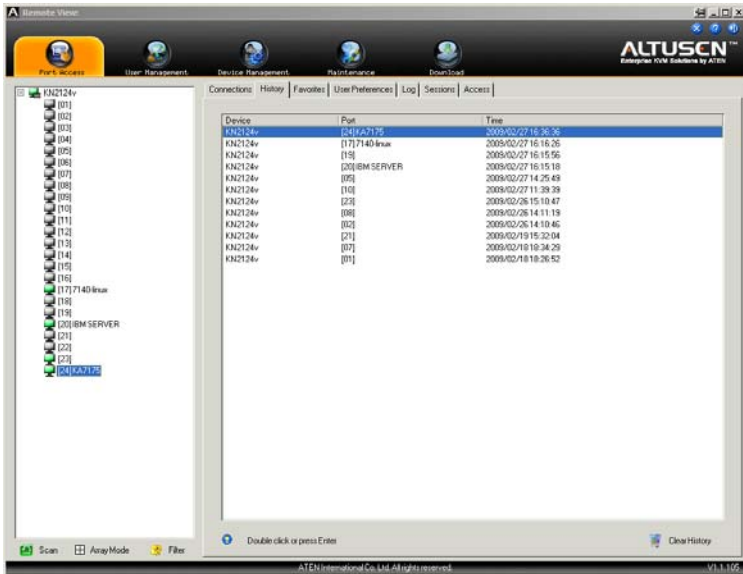


- ♦ If there are more entries than there is room on the screen, a scroll bar appears to let you scroll up and down to see the entire record.
- ♦ To clear the record and start over, click the *Clear History* button at the bottom right of the page.

Note: 1. In the Web Browser version, the sort order of the information displayed can be changed by clicking the column headings.

2. You can access a port by double clicking it.

Favorites

The *Favorites* page is similar to a bookmarks feature. Ports that you frequently visit can be saved in a list here. Simply open this page and select the port – rather than hunting for it in the port tree. This feature is especially handy on large, crowded installations:

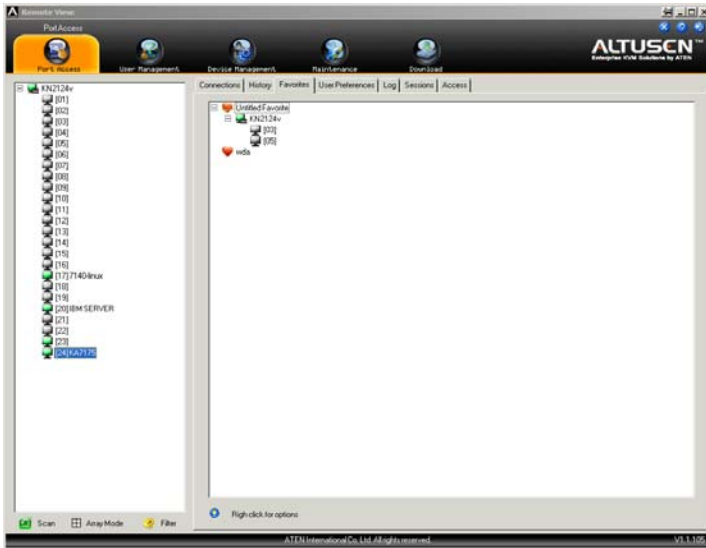


Note: This feature is only available in the GUI version.

Adding a Favorite

To add a port to the bookmarks, do the following:

1. Right click in the main panel; click **Add Favorite**.

An *Untitled Favorite* entry is appears at the top of the panel.

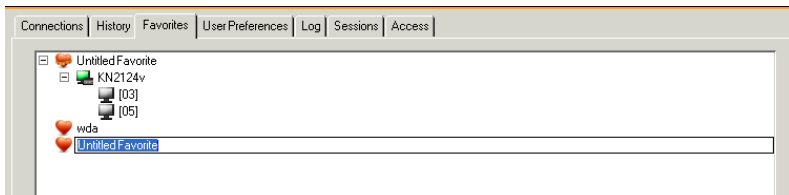

This will be a container to hold your port entries, so you will want to give it an appropriate name.


2. Click inside the text entry box to erase *Untitled Favorite* and key in an appropriate name.
3. To add a port:

Drag it from the Port Select list and drop it onto the container, or Right Click on it; select **Copy**. Right click on the container; select **Paste**.

The switch that the port belongs to is added to the container; the selected port is appended under the switch.

Note: To add multiple ports at the same time, hold the Shift or Ctrl key down while you make your selections then drag or copy the entire group to the Favorites panel.

4. Repeat step 3 for any other *Favorite* categories you wish to create

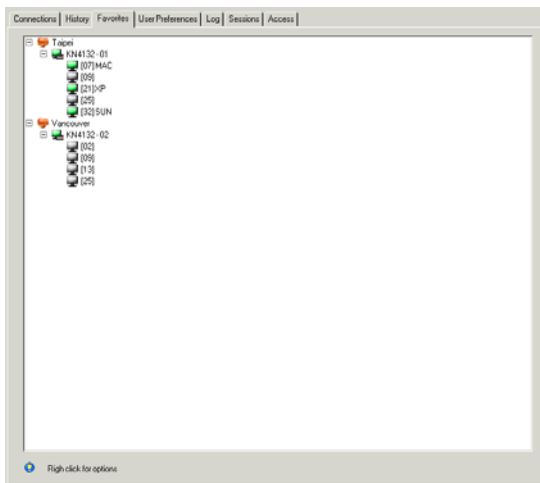


Note: Favorites can be selected for filtering in the Sidebar tree. See *Filter*, page 89, for details.

Modifying a Favorite

- ♦ To modify a Favorite, or one of the items contained in it, right click on it, then select a choice from the popup menu that appears.
- ♦ To simply edit a Favorite's name, click on it once, wait a second, then click again. You can edit the name after the display changes to provide a text input box, This is the same procedure as the one described for port naming (see *Port Naming*, page 88).

User Preferences

The *User Preferences* page allows users to set up their own, individual, working environments. The switch stores a separate configuration record for each user profile, and sets up the working configuration according to the *Username* that was keyed into the Login dialog box:

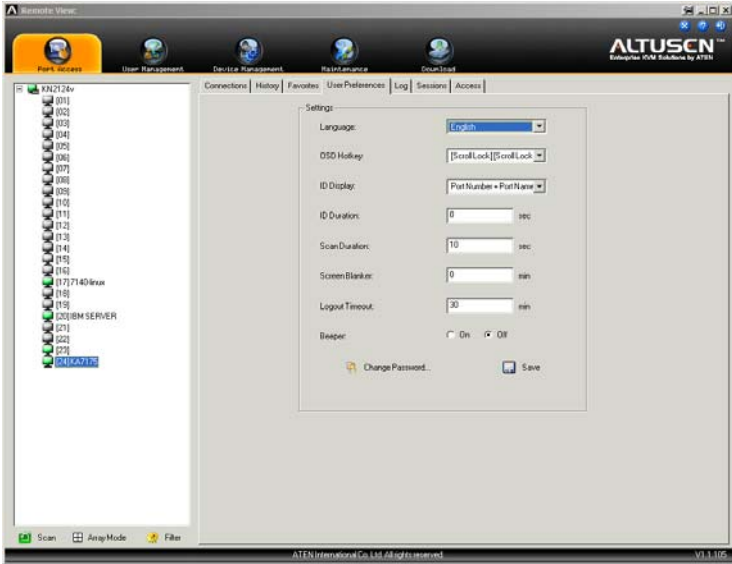

The page settings are explained in the following table:

Setting	Function
Language	Selects the language that the interface displays in.
OSD Hotkey	Selects which Hotkey controls the GUI function: [Scroll Lock], [Scroll Lock], or [Ctrl] [Ctrl]. Since the Ctrl key combination may conflict with programs running on the computers, the default is the Scroll Lock combination.
ID Display	Selects how the Port ID is displayed: the Port Number alone (PORT NUMBER); the Port Name alone (PORT NAME); or the Port Number plus the Port Name (PORT NUMBER + PORT NAME). The default is PORT NUMBER + PORT NAME.

(Continues on next page.)


(Continued from previous page.)

Setting	Function
ID Duration	Determines how long a Port ID displays on the monitor after a port change has taken place. You can choose an amount from 1—255 seconds. The default is 3 Seconds. A setting of 0 (zero) means the Port ID is always on.
Scan Duration	Determines how long the focus dwells on each port as it cycles through the selected ports in Auto Scan Mode (see <i>Auto Scanning</i> , page 158). Key in a value from 1—255 seconds. The default is 5 seconds; a setting of 0 disables the Scan function.
Screen Blanker	<p>If there is no input from the console for the amount of time set with this function, the screen is blanked. Key in a value from 1—30 minutes. A setting of 0 disables this function. The default is 0 (disabled).</p> <p>Note: Although this function can be set from either the local console or a remote login, it only affects the local console monitor.</p>
Logout Timeout	If there is no user input for the amount of time set with this function, the user is automatically logged out. A login is necessary before the KVM Over the NET™ switch can be accessed again.
Beeper	When set to ON, the beeper sounds whenever a Port is changed; when activating the Auto Scan function (see <i>Auto Scanning</i> , page 158); or if only a single power line is connected (or only a single power switch is On) – see <i>Device Information</i> , page 122. The default is ON.
Viewer*	<p>You can choose which viewer is used when accessing a remote computer:</p> <ul style="list-style-type: none"> ♦ Auto Detect will select the appropriate viewer based on the web browser used; WinClient for Windows Internet Explorer, Java Client for other web browsers (ex. Firefox). ♦ Java Client will open the Java based viewer regardless of the web browser being used.
Welcome Message*	You can choose to hide or show the welcome message displayed in the submenu bar. The default is disabled.
Save	Click Save to save any changes made to the User Preferences settings.
Changing a Password	To change a user's password, key in the old password and new password into the input boxes, then click Change Password to apply the change.

* This item is only available with the Web Browser version.

Log

The KVM Over the NET™ switch logs all the events that take place on it. The Log page displays the information in the log file:

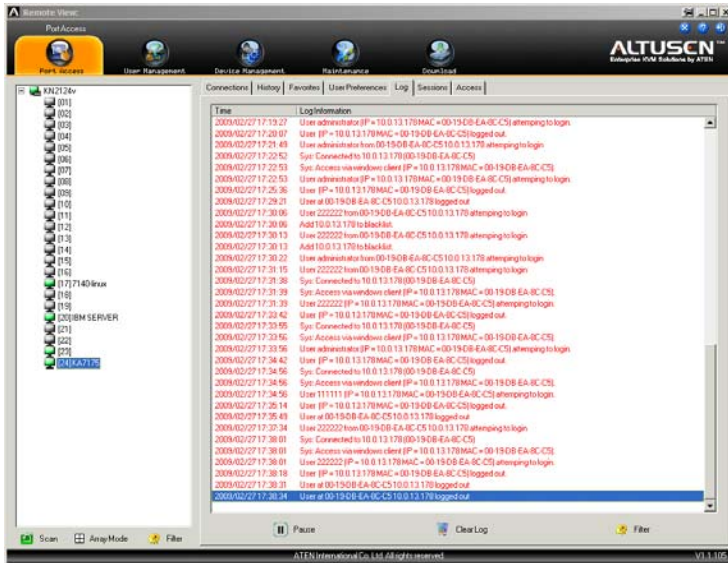


Note: 1. The screenshot displays an GUI version screen. In the Web Browser version, *Log* appears as a separate icon on the Icon Tab Bar.

2. The Log tab only appears for administrators and users who have been given permission to view the log file (see *Access*, page 101). It isn't available for other users.

- ♦ The log file tracks a maximum of 2048 events. When the limit is reached, the oldest events get discarded as new events come in.
- ♦ Clicking *Pause* stops the display of new events; the button changes to *Resume*. Click **Resume** to start displaying events again.
- ♦ To clear the log file, click the *Clear Log* icon.

Filter

Filter allows you to search for particular events by date or by specific words or strings. When you access this function, the log filter dialog box displays at the bottom of the page:

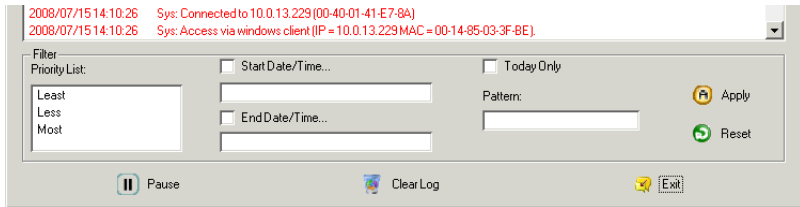

A description of the items is given in the table, below:

Item	Description
Priority	Sets the level for how detailed the filter results display should be.
Start Date/Time	Put a check in the checkbox to bring up a calendar. Set the date and time that you want the filtering to start from. All events from the Start date/time to the End date/time are displayed.
End Date/Time	Put a check in the checkbox to bring up a calendar. Set the date and time that you want the filtering to end at. All events from the Start date/time to the End date/time are displayed.
Today Only	Only the events for the current day are displayed.
Pattern	Key in the pattern that you are filtering for here. Wildcards (? and *) are supported. E.g., h*ds would match hands and hoods.
Apply	Starts the procedure; filters the events according to the criteria you specified; and returns the results.
Reset	Click this button to clear the entries in the dialog box and start with a clean slate.
Exit	Click this button to exit the log filter function.

Sessions

The *Session* page lets the administrator see at a glance all the users currently logged into the KVM Over the NET™ switch, and provides information about each of their sessions.



- Note:** 1. The Session page only appears in Administrator sessions. It isn't available for ordinary users.
2. The *Category* heading lists the type of user who has logged in: SA (Super Administrator); Admin (Administrator); Normal user (User).

The meanings of the headings at the top of the page are fairly straightforward. The *IP* heading refers to the IP address that the user has logged in from; the *Device* and *Port* headings show which device and port the user is currently accessing. The *Bus ID* refers to the bus that the user is currently on (Bus 0 refers to the Local Console's bus).

- Note:** 1. In the Web Browser version, the sort order of the information displayed can be changed by clicking the column headings.
2. The Bus ID also displays on the control panel (see page 51).
3. See *Users and Buses*, page 164 for information about users and buses.

This page also gives the administrator the option of forcing a user logout by selecting the user and clicking **End Session**.


Access

Administrators use the *Access* page to set user and group access and configuration rights for switches and ports. The page is organized into three main areas: a large Main panel; a Status panel at the lower left, and a Properties panel at the lower right.

Note: The Access tab only appears in Administrator sessions. It isn't available for ordinary users.

Device Level

If a switch is chosen in the Sidebar Tree, the Main panel looks similar to the one shown below:

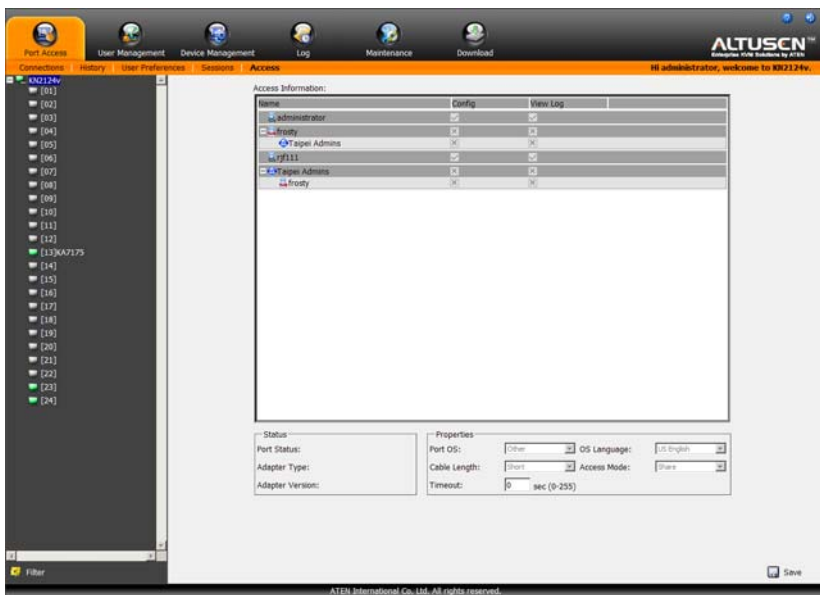


The main panel consists of three columns: *Name*, *Config*, and *View Log*:

- ◆ *Name* lists all the users and groups that have been created.
- ◆ *Config* indicates the users who have Configuration privileges. A check mark (✓) indicates that the user has permission to make changes to the switch configuration settings (see Chapter 8, *Device Management*); an X means that the user is denied permission to make configuration changes. Click the icon to toggle permission for Administrators and Users (Super Administrators always have configuration privileges).

- ♦ *View Log* indicates the users who have permission to view the log files. A check mark (✓) indicates that the user has permission to view the files; an X means that the user is denied permission to view them. Click the icon to toggle permission.
- ♦ The panels at the bottom of the page are inactive except for the Timeout field. This field sets a time threshold for users on ports whose Access Mode has been set to *Occupy*. See *Timeout*, page 87, for details.

Port Level

If a port is chosen in the Sidebar Tree, the Main panel looks similar to the one shown below:

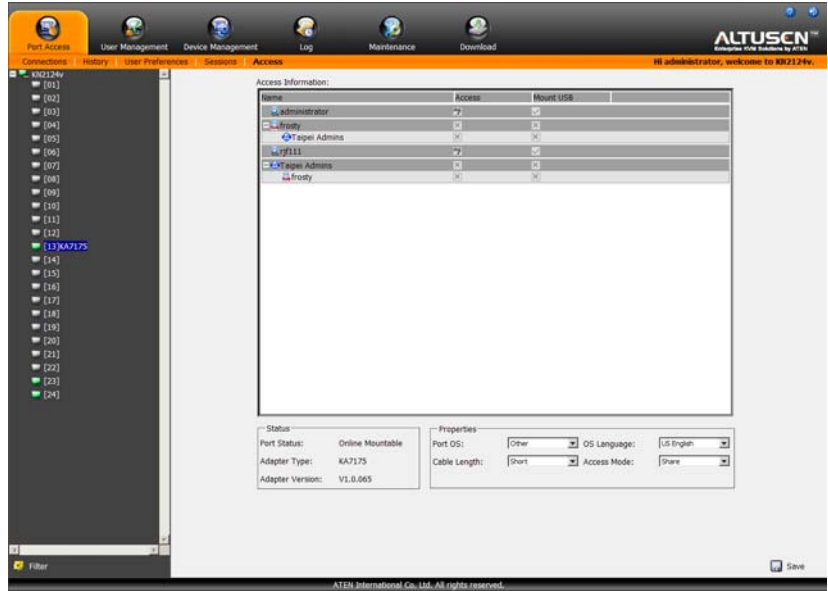

- ♦ *Name* lists all the users and groups that have been created.
- ♦ *Access* displays the access rights of the users and groups for each port, as shown in the table below.


	Full Access: The user can view the remote screen and can perform operations on the remote system from his keyboard and monitor.
	View Only: The user can only view the remote screen; he cannot perform any operations on it.
	No Access: No port access. The Port will not show up on the User's list on the Main Screen.

- ♦ *Mount USB* indicates users who have permission to mount Virtual Media devices on remote systems. A check mark (✓) indicates that a user has permission; an X means the user does not have permission.

Note: This entry does not appear for switches that do not support the USB Virtual Media function (KN2132, KN4116, KN4132).

The Status Panel

The *Status* panel provides information about the online status of a selected port, and the KVM Adapter cable attached to it:

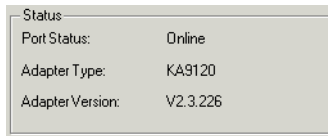


Status	
Port Status:	Online
Adapter Type:	KA9120
Adapter Version:	V2.3.226

Note: This panel is inactive when a switch is selected in the Port Select list.

The Properties Panel

For convenience, the *Properties* panel offers an additional input method to make configuration settings for the selected port.

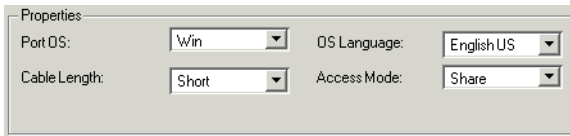

Properties			
Port OS:	Win	OS Language:	English US
Cable Length:	Short	Access Mode:	Share

These port properties settings are the same as the ones that were discussed earlier in this chapter. Refer back to *Port Properties*, page 86 for setting details.

Saving Changes

Click the **Save** button at the lower right corner of the page to save any changes made on the Access page.

This Page Intentionally Left Blank


Chapter 7

User Management

Overview

When you select the *User Management* tab the screen comes up with the *Users* page displayed:

Web Browser Interface

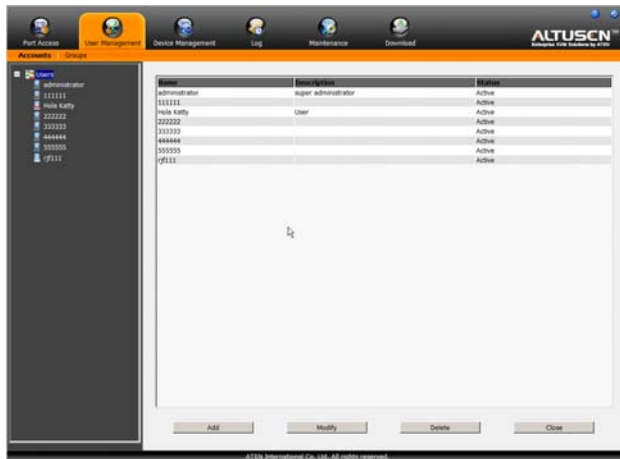

GUI Interface



The page is organized into two main areas. All users and groups appear in the panel at the left of the page. The large panel at the right provides more detailed information at-a-glance for each.

- ♦ There is a pre-installed super administrator account. It can be used to set up the switch and to begin creating users and groups. The Username for this account is *administrator*; the password is *password*. For security purposes, we strongly recommend changing these to something unique.
- ♦ When using the GUI the section located below the Users and Groups list provides a filter that allows you to manage the Sidebar list:



- ♦ Click the arrow at the right of the list box to select whether you want to view only Users, only, Groups, or both Users and Groups.
- ♦ Click to put a check in the *Active* checkbox to filter out any users whose accounts are not active.
- ♦ To only select Users or Groups that match a particular string, key it into the text box in front of the *Go* button, then click **Go**. Only Users or Groups that match the string will display. Wildcards (?) and (*) are acceptable.
- ♦ The Web version has separate menu bar entries for Accounts (Users) and Groups.
- ♦ In the Web version, the sort order of the information displayed can be changed by clicking the column headings.
- ♦ The buttons below the main panel are used in managing users and groups, as shown in the sections that follow.

Users

Adding Users

To add a user, do the following:

1. Select *Users* in the list panel.
2. Click **Add** at the bottom of the main panel. The User notebook opens, with the *User* tab selected:

The screenshot shows a web-based form for adding a new user. At the top, there are three tabs: 'User' (selected), 'Groups', and 'Devices'. The form is divided into several sections:

- User Information:** Contains four text input fields for 'Username', 'Password', 'Confirm Password', and 'Description'.
- Role:** Contains three radio buttons: 'Super Administrator', 'Administrator', and 'User' (which is selected).
- Permissions:** Contains six checkboxes arranged in two columns: 'Windows Client', 'Java Client', 'View only', 'Power Management', and 'Force to Grayscale'.
- Status:** Contains several options:
 - 'Disable account' (checkbox, unchecked)
 - 'Account never expires' (radio button, selected)
 - 'Account expires on' (radio button, unchecked, followed by a date input field)
 - 'User must change password at next login' (checkbox, unchecked)
 - 'User cannot change password' (checkbox, unchecked)
 - 'Password never expires' (radio button, selected)
 - 'Password expires after' (radio button, unchecked, followed by a text input field containing '30' and the word 'days')

A 'Save' button is located at the bottom right of the form.

3. Enter the required information in the appropriate fields. A description of each of the fields is given in the table below:

Field	Description
Username	From 1 to 16 characters are allowed depending on the Account Policy settings. See <i>Account Policy</i> , page 136.
Password	From 0 to 16 characters are allowed depending on the Account Policy settings. See <i>Account Policy</i> , page 136.
Confirm Password	To be sure there is no mistake in the password, you are asked to enter it again. The two entries must match.
Description	Additional information about the user that you may wish to include.
Role	<p>There are three categories: Super Administrator, Administrator and User. There is no limitation on the number of accounts that can be created in each category.</p> <ul style="list-style-type: none">♦ The super administrator is responsible for the overall installation configuration and maintenance; user management; and device and port assignments.♦ Administrators have user management privileges. They can also access the ports and devices assigned to them by the super administrator.♦ Users can access the ports and devices assigned to them by the super administrator. Note: By default the User account is inactive. The user will not be able to log in until you give him any of the available permissions (see below).
Permissions	<p>Super administrators and administrators automatically have Windows Client, Java Client, and Power Management permissions. Permissions and restrictions for ordinary users are set individually by checking the appropriate boxes, as follows:</p> <ul style="list-style-type: none">♦ <i>Windows Client</i> allows a user to download the Windows Client software, and access the switch with it, in addition to (or instead of) the browser access method.♦ <i>Java Client</i> allows a user to download the Java Client software, and access the KVM Over the NET™ switch with it, in addition to (or instead of) the browser access method.♦ <i>View Only</i> limits users to only being able to view the display of connected devices. They cannot control port access, nor can they input any keyboard or mouse signals to the devices they view.♦ <i>Power Management</i> allows a User to connect to Power on the Net™ devices.♦ <i>Force to Grayscale</i> forces the user's view of the remote display to be in grayscale. This can speed up I/O transfer in low bandwidth situations.

(Continues on next page.)

(Continued from previous page.)

Field	Description
Status	<p>Status allows you to control the user's account and access to the installation, as follows:</p> <ul style="list-style-type: none"> ◆ <i>Disable Account</i> lets you suspend a user's account without actually deleting it, so that it can be easily reinstated in the future. ◆ If you don't want to limit the time scope of the account, select <i>Account never expires</i>; if you want to limit the amount of time that the account remains in effect, select <i>Account expires on</i>, and key in the expiration date. ◆ To require a user to change his password at the next logon, select <i>User must change password at next logon</i>. This can be used by the administrator to give the user a temporary password to log in for the first time, and then let the user set the password of his choice for future logins. ◆ To make a password permanent, so that the user cannot change it to something else, select <i>User cannot change password</i>. ◆ For security purposes, administrators may want users to change their passwords from time to time. <ul style="list-style-type: none"> ◆ If not, select <i>Password never expires</i>. This allows users to keep their current passwords for as long as they like. ◆ If so, select <i>Password expires after</i>, and key in the number of days allowed before the password expires. Once the time is up, a new password must be set.

4. At this point you can assign the new user to a group by selecting the *Groups* tab – the Groups page is discussed on page 114. You can also assign the user's port access rights by selecting the *Devices* tab – the Devices page is discussed on page 118.

Note: Optionally, you can skip this step now to add more users and create groups, and come back to it later.

5. When your selections have been made click **Save**.
6. When the *Operation Succeeded* message appears, click **OK**.

7. Click **Users** in the List panel to return to the main screen. The new user appears in the list and in the main panel, as well.
 - ♦ The Users List can expand and collapse. If the list is expanded, click the minus symbol (–) next to the *Users* icon to collapse it; if it is collapsed there is a plus symbol (+) next to the icon. Click the plus symbol to expand it.
 - ♦ The icon for super administrators has two black bands; the icon for administrators has one red band.
 - ♦ The large main panel shows the user's name; the description that was given when the account was created; and whether the account is currently active or has been disabled.

Modifying User Accounts

To modify a user account, do the following:

1. In the *User* list, click the user's name
– or –
In the main panel, select the user's name, then click **Modify**.
2. In the *User* page that comes up, make your changes, then click **Save**.

Note: The *User* page is discussed on page 107; the *Groups* page is discussed on page 114, the *Devices* page is discussed on page 118.

Deleting User Accounts

To delete a user account do the following:

1. In the main panel, select the user's name, then click **Delete**.
2. Click **OK**.


Groups

Groups allow administrators to easily and efficiently manage users and devices. Since device access rights apply to anyone who is a member of the group, administrators need only set them once for the group, instead of having to set them for each user individually. Multiple groups can be defined to allow some users access to specific devices, while restricting other users from accessing them.

Creating Groups

To create a group, do the following:

1. Select *Groups* in the list panel.
2. Click **Add** at the bottom of the main panel. The Group notebook opens, with the *Group* tab selected:

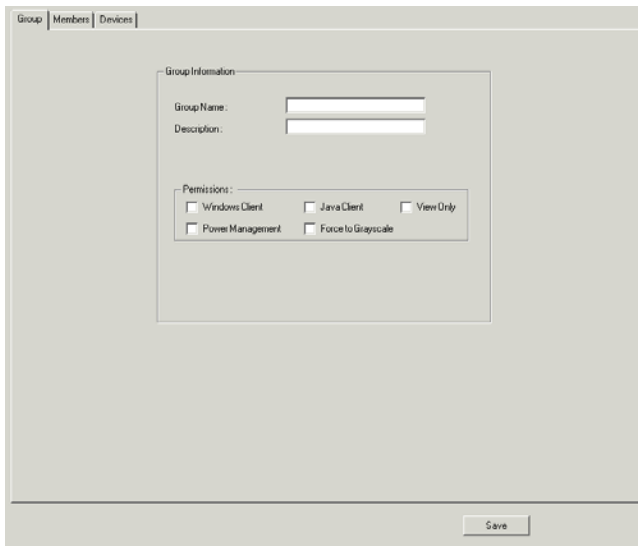The screenshot shows a software interface with a tabbed menu at the top containing 'Group', 'Members', and 'Devices'. The 'Group' tab is active. Below the menu is a large rectangular area containing a 'Group Information' section. This section has two text input fields labeled 'Group Name' and 'Description'. Below these is a 'Permissions' section with four checkboxes: 'Windows Client', 'Java Client', 'Power Management', and 'View Only'. The 'Force to Grayscale' checkbox is also present but is not checked. At the bottom right of the main window is a 'Save' button.

(Continues on next page.)

(Continued from previous page.)

3. Enter the required information in the appropriate fields. A description of each of the fields is given in the table below:

Field	Description
Group Name	A maximum of 16 characters is allowed.
Description	Additional information about the user that you may wish to include. A maximum of 63 characters is allowed.
Permissions	<p>Permissions and restrictions for groups are set by checking the appropriate boxes, as follows:</p> <ul style="list-style-type: none">♦ <i>Windows Client</i> allows group members to download the Windows Client software, and access the KVM Over the NET™ switch with it, in addition to (or instead of) the browser access method.♦ <i>Java Client</i> allows group members to download the Java Client software, and access the KVM Over the NET™ switch with it, in addition to (or instead of) the browser access method.♦ <i>Power Management</i> allows group members to connect to Power on the Net™ devices.♦ <i>View Only</i> limits group members to only being able to view the display of connected devices. They cannot control port access, nor can they input any keyboard or mouse signals to the devices they view.♦ <i>Force to Grayscale</i> forces the group members' view of the remote display to be in grayscale. This can speed up I/O transfer in low bandwidth situations. <p>Note: If a user has permissions in addition to the ones assigned to the group, the user keeps those permissions in addition to the group ones.</p>

4. At this point you can assign users to the group by selecting the *Members* tab – the Members page is discussed on page 116. You can also assign the group's port access rights by selecting the *Devices* tab – the Devices page is discussed on page 118.

Note: Optionally, you can skip this step now to add more groups and assign users to them, and come back to it later.

5. When your selections have been made click **Save**.
6. When the *Operation Succeeded* message appears, click **OK**.

7. Click **Group** in the List panel to return to the main screen. The new group appears in the list and in the main panel.
 - ♦ The Groups List can expand and collapse. If the list is expanded, click the minus symbol (–) next to the *Users* icon to collapse it; if it is collapsed there is a plus symbol (+) next to the icon. Click the plus symbol to expand it.
 - ♦ The large main panel shows the group's name, and the description that was given when the group was created (the *Status* column is inactive).

Modifying Groups

To modify a group, do the following:

1. In the *Group* list, click the group's name
– or –
In the main panel, select the group's name, then click **Modify**.
2. In the *Group* notebook that comes up, make your changes, then click **Save**.

Note: The *Group* page is discussed on page 111; the *Members* page is discussed on page 116, The *Devices* page is discussed on page 118.

Deleting Groups

To delete a group do the following:

1. In the main panel, select the group's name, then click **Delete**.
2. Click **OK**.

Users and Groups

There are two ways to assign users to – and remove users from – groups: from the Users notebook; and from the Group notebook.

Note: Before you can assign users to groups, you must first create them.
See *Adding Users*, page 107 for details.

Assigning Users to a Group From the User's Notebook


To assign a user to a group from the User's notebook, do the following:

1. In the *User* list, click the user's name

– or –

In the main panel, select the user's name, then click **Modify**.

2. In the *User* notebook that comes up, select the *Groups* tab. A screen, similar to the one below, appears:

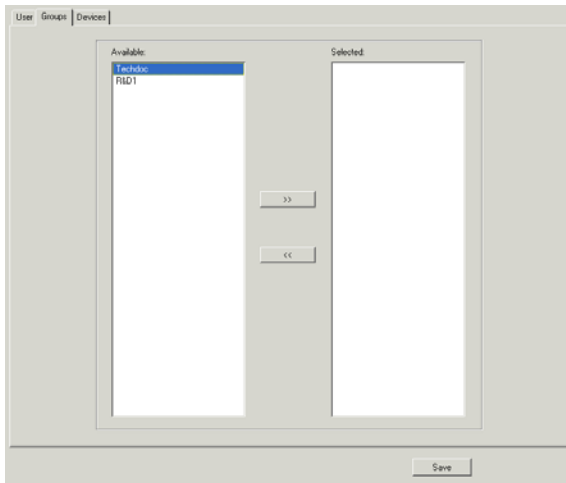

3. In the *Available* column, select the group that you want the user to be in.
4. Click the **Right Arrow** to put the group's name into the *Selected* column.
5. Repeat the above for any other groups that you want the user to be in.
6. Click **Save** when you are done.

Removing Users From a Group From the User's Notebook


To remove a user from a group from the User's notebook, do the following:

1. In the *User* list, click the user's name

– or –

In the main panel, select the user's name, then click **Modify**.

2. In the *User* notebook that comes up, select the *Groups* tab. A screen, similar to the one below, appears:

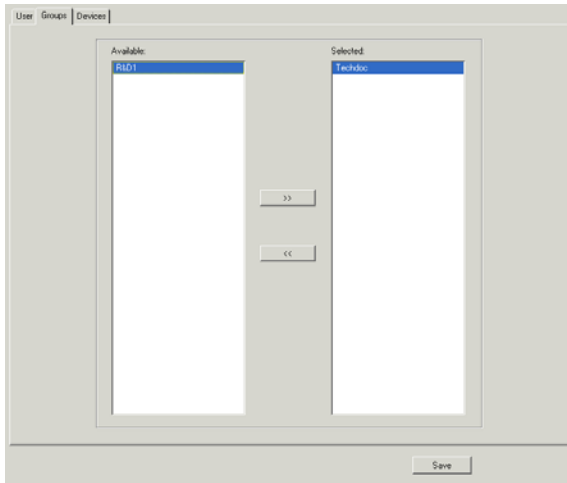


3. In the *Selected* column, select the group that you want to remove the user from.
4. Click the **Left Arrow** to remove the group's name from the *Selected* column. (It goes back into the *Available* column.)
5. Repeat the above for any other groups that you want to remove the user from.
6. Click **Save** when you are done.

Assigning Users to a Group From the Group's Notebook

To assign a user to a group from the Group notebook, do the following:

1. In the *Group* list, click the group's name
– or –
In the main panel, select the group's name, then click **Modify**.
2. In the *Group* notebook that comes up, select the *Members* tab. A screen, similar to the one below, appears:

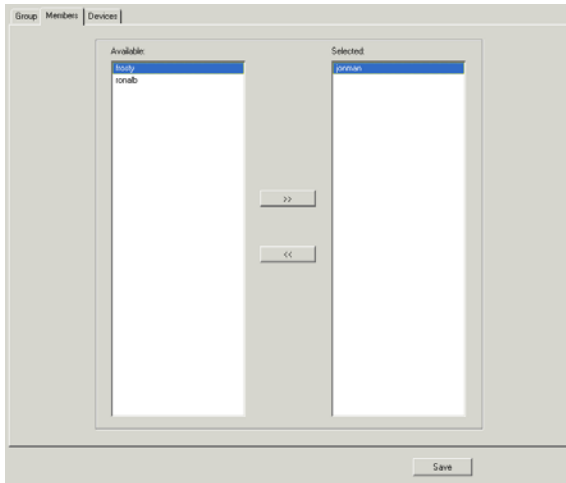

3. In the *Available* column, select the user that you want to be a member of the group.
4. Click the **Right Arrow** to put the user's name into the *Selected* column.
5. Repeat the above for any other users that you want to be members of the group.
6. Click **Save** when you are done.

Removing Users From a Group From the Group's Notebook


To remove a user from a group from the Group's notebook, do the following:

1. In the *Group* list, click the group's name

– or –

In the main panel, select the group's name, then click **Modify**.

2. In the *Group* notebook that comes up, select the *Members* tab. A screen, similar to the one below, appears:

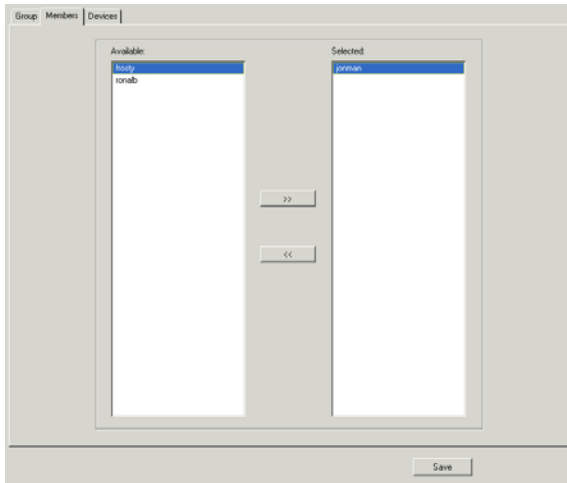

3. In the *Selected* column, select the user that you want to remove from the group.
4. Click the **Left Arrow** to remove the user's name from the *Selected* column. (It goes back into the *Available* column.)
5. Repeat the above for any other users that you want to remove from the group.
6. Click **Save** when you are done.

Device Assignment

When a user logs in to the KVM Over the NET™ switch, the interface comes up with the Port Access page displayed. All the ports that the user is permitted to access are listed in the Port Selection panel at the left of the page. Access permissions for those ports and the devices connected to them are assigned on a port-by-port basis from the *User* or *Group* list of the User Management page.

Assigning Device Permissions From the User's Notebook


To assign a device permissions to a user User's notebook, do the following:

1. In the *User* list, click the user's name

– or –




In the main panel, select the user's name, then click **Modify**.

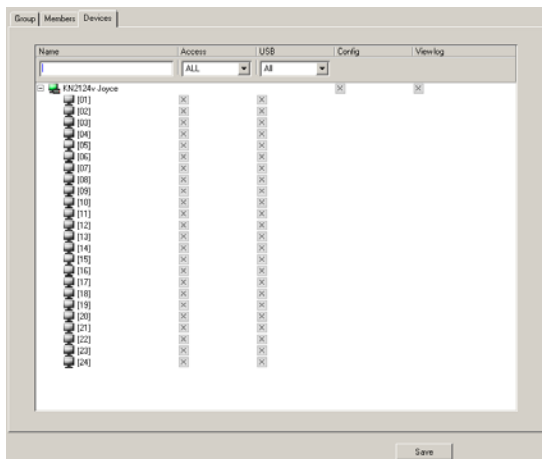2. In the *User* notebook that comes up, select the *Devices* tab. A screen, similar to the one below, appears:



- ♦ Ports are listed under *Names* in the left hand column.
- ♦ The *Access* column is where device access rights are set.
- ♦ The *USB* column is where USB Virtual Media device access rights are listed. This entry does not appear for switches that do not support the USB Virtual Media function (KN2132, KN4116, KN4132).
- ♦ *Config* enables/disables the user from making changes to the KVM Over the NET™ switch configuration settings.
- ♦ *View Log* permits/restricts viewing of the KVM Over the NET™ switch log file.

3. Under the *Access* or *USB* column, click the icon that corresponds to the port you want to configure to cycle through the choices, as shown below:

Icon	Meaning	Description
	Full Access	The user can view the remote screen and can perform operations on the remote system from his keyboard and monitor.
	View Only	The user can only view the remote screen; he cannot perform any operations on it.
	No Access	No access rights - the Port will not show up on the User's list on the Main Screen.

Note: You can use Shift-Click or Ctrl-Click to select a group of ports to configure. Clicking to cycle through the choices on any one of the selected ports causes all them to cycle in unison.

4. Under *Config*, click the icon to toggle the choices. A check mark (✓) indicates that the user has permission to make changes to the KVM Over the NET™ switch configuration settings (see Chapter 8, *Device Management*); an X means that the user is denied permission to make configuration changes.
5. Under *View Log*, click the icon to toggle the choices. A check mark (✓) indicates that the user has permission to view the KVM Over the NET™ switch's log files; an X means that the user is denied permission to view the files.
6. When you have finished making your choices, click **Save**.
7. In the confirmation popup that appears, click **OK**.

Filters

There are three filters at the top of the page that allow you to expand or limit the scope of the ports that are displayed, as described in the following table:

Filter		Description
Name		To filter on the port name, key in the name, partial name, or partial name and wild card (*) then press Enter . Only the ports whose names correspond to what you have keyed in appear in the list.
Access	All	All ports appear in the list.
	Full Access	Only ports configured as Full Access ports appear in the list.
	View Only	Only ports configured as View Only ports appear in the list.
	No Access	Only ports configured as No Access ports appear in the list.
USB	All	All ports appear in the list.
	Permitted	Only ports configured as Permitted appear in the list.
	Restricted	Only ports configured as Restricted appear in the list.

Assigning Device Permissions From the Groups' Notebook

To assign a device permissions to a Group of users, do the following:

1. In the *Groups* list, click the group's name

– or –

In the main panel, select the group's name, then click **Modify**.

2. In the *Groups* notebook that comes up, select the *Devices* tab.
3. The screen that comes up is the same one that appears in the User's notebook. Make your device assignments according to the information described under *Assigning Device Permissions From the User's Notebook*, page 118.

The only difference is that whatever settings you make apply to all members of the group instead of just one individual member.

Chapter 8

Device Management

Overview

The *Device Management* page allows super administrators to configure and control overall KVM Over the NET™ switch operations.

Web Browser Interface




GUI Interface



Device Information

The *General* section of the Device Information page presents information about the selected device.

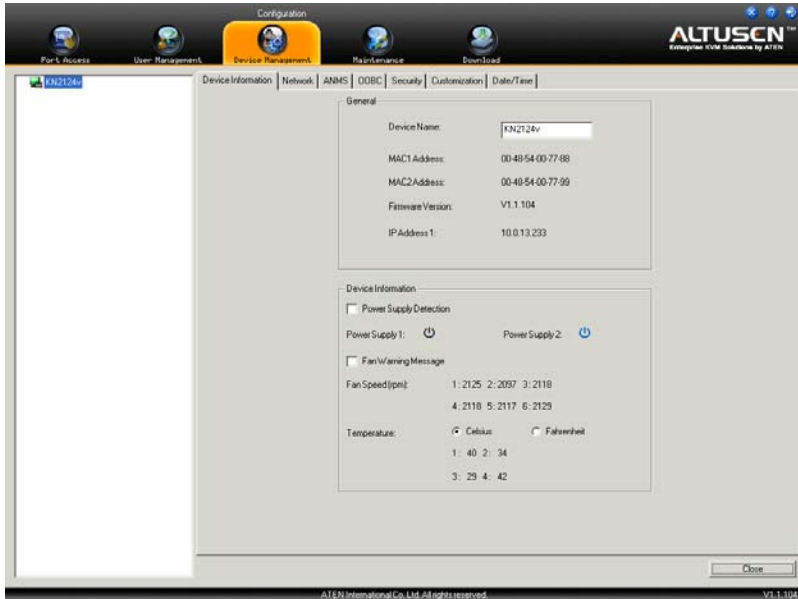

Note: The screenshot shows the GUI version. The Web version only displays the upper panel.

Each item of this section is described in the following table.

Item	Meaning
Device Name	This field lets you give the switch a unique name. This can be convenient when you need to differentiate among several devices in multi station installations. Simply delete the switch's number and key in the name of your choice.
MAC1 Address	The KVM Over the NET™ switch supports two network interfaces. This item displays the MAC address of the first interface.
MAC2 Address	The KVM Over the NET™ switch supports two network interfaces. This item displays the MAC address of the second interface.
Firmware Version	This item displays the current firmware version number. You can reference it to see if there are newer versions available on the Altusen website.
IP Address 1	This item displays the IP address of the first network interface.

The lower panel of the GUI page presents information about the selected device, as described in the table, below:

Item	Description
Power Supply Detection	<p>The icons for Power Supply 1 and Power Supply 2 display in gray when there is no power to the power supply – they display in blue when power is present.</p> <p>When this function is enabled (there is a check in the checkbox), if there is only one source of power, the switch will beep constantly to warn you of the problem.</p> <p>If you are at the Local Console you will see a message asking you to confirm that your intention is to only have one power source. If your intention is to only have one source of power, there are two ways to stop the beeping: 1) You can disable power supply warnings by unchecking the checkbox. Do this if you want to disable this function on a permanent basis.</p> <p>Or, 2) you can confirm your intention in the dialog box. Do this if you only want to disable the warning temporarily. With this method, the warning function will be back in effect after the next system reset.</p> <p>The default for this function is enabled.</p>
Fan Warning Message	<p>Place a check in the checkbox to enable a fan warning message.</p> <p>If any fan stops spinning the system beeps to warn you of the problem. If you are at the Local Console a message appears informing you of the situation. You can select <i>Confirm</i> (to ignore the warning and stop the beeping) if you are sure there is no problem.</p> <p>Note: The warning doesn't necessarily mean that the fan has failed, since the fan will stop spinning (as desired) when the temperature drops below its lower setting.</p> <p>The default for this function is enabled.</p>
Fan Speed	Fan speeds are indicated here. See <i>Fan Location and Speed Information</i> , page 212.
Temperature	Temperature readings from the switch's built-in sensors are indicated here and can be displayed in degrees celsius or fahrenheit. See <i>Temperature Sensor Location and Information</i> , page 213

Network

The Network page is used to specify the KVM Over the NET™ switch network environment.

Service Ports:	
Program:	<input type="text" value="9000"/>
HTTP:	<input type="text" value="80"/>
HTTPS:	<input type="text" value="443"/>

☒ Redundant NIC

IP Address:	
<input type="radio"/> Obtain IP address automatically [DHCP]	
<input checked="" type="radio"/> Set IP address manually [Fixed IP]	
IP Address:	<input type="text" value="10.0.13.233"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
Default Gateway:	<input type="text" value="10.0.13.1"/>

DNS Server:	
<input type="radio"/> Obtain DNS server address automatically	
<input checked="" type="radio"/> Set DNS server address manually	
Preferred DNS server:	<input type="text" value="10.0.1.23"/>
Alternate DNS server:	<input type="text" value="0.0.0.0"/>

Network Transfer Rate:	<input type="text" value="99999"/>	KBps
------------------------	------------------------------------	------

Service Ports

As a security measure, if a firewall is being used, the Administrator can specify the port numbers that the firewall will allow. Users must specify the port number when they log in. If an invalid port number (or no port number) is specified, the KVM Over the NET™ switch will not be found. An explanation of the fields is given in the table below:

Field	Explanation
Program	<p>This is the port used when connecting with the WinClient ActiveX Viewer, WinClient AP, Java Applet Viewer, Java Client AP, or via Virtual Media. The default is 9000. Valid entries are from 1024–65535.</p> <p>If the port is changed to something other than the default, the port number must be specified when logging in using the WinClient AP / Java Client AP or else the user will not be able to connect to the switch. See <i>WinClient AP Login</i>, page 39 and <i>Java Client AP Login</i>, page 42.</p>
HTTP	The port number for a browser login. The default is 80.
HTTPS	The port number for a secure browser login. The default is 443.

- Note:**
1. The access ports cannot have the same value. You must set a different value for each one.
 2. If you have set up a firewall, you must open the ports you have set for *Program* and *HTTPS* in order for users logging in from outside the firewall to access the switch. See *Port Forwarding*, page 202, for details.

NIC Settings

Redundant NIC

The KVM Over the NET™ switch is designed with two network interfaces. If *Redundant NIC* is enabled (the default), both interfaces make use of the IP address of Network Adapter 1.

Under this configuration, the second interface is usually inactive. If there is a network failure on the first interface, the switch automatically switches to the second interface.

- ♦ **Redundant NIC Enabled – Single IP Address for Both Interfaces**

To enable the Redundant NIC function, do the following:

1. Click to put a check in the *Redundant NIC* checkbox.
2. *Network Adapter 1* is selected in the network adapter listbox, and the listbox is disabled – you cannot configure Network Adapter 2.
3. Configure the IP and DNS server addresses for Network Adapter 1 (see the sections below).

- ♦ **Redundant NIC Not Enabled – Two IP Addresses**

If you choose not to enable the Redundant NIC function, the two NICs can be configured with separate interfaces. Users can log into the KVM Over the NET™ switch with either IP address. To set up the switch with this configuration, do the following:

1. If there is a check in the *Redundant NIC* checkbox, click to remove it.
2. In the network adapter listbox; select Network Adapter 1.
3. Configure the IP and DNS server addresses for Network Adapter 1 (see the sections below).
4. Drop down the network adapter listbox; select Network Adapter 2.
5. Configure the IP and DNS server addresses for Network Adapter 2.

IP Address

The KVM Over the NET™ switch can either have its IP address assigned dynamically (DHCP), or it can be given a fixed IP address.

- ♦ For dynamic IP address assignment, select the *Obtain IP address automatically* radio button.
- ♦ To specify a fixed IP address, select the *Set IP address manually* radio button and fill in the IP address with values appropriate for your network.

DNS Server

- ♦ For automatic DNS Server address assignment, select the *Obtain DNS Server address automatically* radio button.
- ♦ To specify the DNS Server address manually, select the *Set DNS server address manually* radio button, and fill in the addresses for the Preferred and Alternate DNS servers with values appropriate for your network.

Note: Specifying at the preferred DNS Server address is optional.

Network Transfer Rate

This setting allows you to tailor the size of the data transfer stream to match network traffic conditions by setting the rate at which the KVM Over the NET™ switch transfers data to remote computers. The range is from 4–99999 Kilobytes per second (KBps).

ANMS

The Advanced Network Management Settings page is used to set up login authentication and authorization management from external sources. It is divided into three main panels, as described, below:

IP Installer	
<input checked="" type="radio"/> Enabled	<input checked="" type="radio"/> View Only
<input type="radio"/> Disabled	
SMTP Settings	
<input type="checkbox"/> Enable report from the following SMTP Server	
SMTP Server:	<input type="text" value="0.0.0.0"/>
<input type="checkbox"/> My server requires authentication	
Account Name:	<input type="text"/>
Password:	<input type="text"/>
From:	<input type="text"/>
To:	<input type="text"/>
<input type="checkbox"/> Report IP address	<input type="checkbox"/> Report system reboot
<input type="checkbox"/> Report user login	<input type="checkbox"/> Report user logout
Log Server	
<input type="checkbox"/> Enable	
MAC Address:	<input type="text" value="000000000000"/>
Service Port:	<input type="text" value="9001"/>
SNMP Server	
<input type="checkbox"/> Enable SNMP Agent	
Server IP:	<input type="text" value="0.0.0.0"/>
Service Port:	<input type="text" value="162"/>
Syslog Server	
<input type="checkbox"/> Enable	
Server IP:	<input type="text" value="0.0.0.0"/>
Service Port:	<input type="text" value="514"/>
<input type="checkbox"/> Disable Local Authentication	
RADIUS Settings	
<input type="checkbox"/> Enable	
Preferred RADIUS Server IP:	<input type="text" value="0.0.0.0"/>
Preferred RADIUS Service Port:	<input type="text" value="0"/>
Alternate RADIUS Server IP:	<input type="text" value="0.0.0.0"/>
Alternate RADIUS Service Port:	<input type="text" value="0"/>
Timeout:	<input type="text" value="0"/> sec
Retries:	<input type="text" value="0"/>
Shared Secret (at least 6 characters):	<input type="text"/>
LDAP Settings	
<input type="checkbox"/> Enable	Type
	<input checked="" type="radio"/> LDAP <input checked="" type="radio"/> LDAPS
LDAP Server:	<input type="text" value="0.0.0.0"/>
Admin DN:	<input type="text"/>
Admin Name:	<input type="text"/>
Password:	<input type="text"/>
Search DN:	<input type="text"/>
Port:	<input type="text" value="0"/>
Timeout:	<input type="text" value="0"/> sec
CC Management	
<input checked="" type="checkbox"/> Enable	
CC Server IP:	<input type="text" value="0.0.0.0"/>
CC Service Port:	<input type="text" value="0"/>

IP Installer

The IP Installer is an external Windows-based utility for assigning IP addresses to the KVM Over the NET™ switch.

Click one of the radio buttons to select *Enable*, *View Only*, or *Disable* for the IP Installer utility. See *IP Installer*, page 200, for IP Installer details.

-
- Note:** 1. If you select *View Only*, you will be able to see the KVM Over the NET™ switch in the IP Installer's Device List, but you will not be able to change the IP address.
2. For security, we strongly recommend that you set this to *View Only* or *Disable* after use.
-

SMTP Settings

To have the KVM Over the NET™ switch email reports from the SMTP server to you, do the following:

1. Enable the *Enable report from the following SMTP server*, and key in the IP address of your SMTP server.
2. If your server requires authentication, put a check in the *My server requires authentication* checkbox.
3. Key in the appropriate account information in the *Account Name*, *Password*, and *From* field.

Note: Only one email address is allowed in the *From* field, and it cannot exceed 64 Bytes.

4. Key in the email address (addresses) of where you want the report of the DHCP address and event reports sent to in the *To* field.

Note: If you are sending the report to more than one email address, separate the addresses with a semicolon. The total cannot exceed 256 Bytes.

5. Select the report options you would like sent. Choices include: *Report IP address*, *Report system reboot*, *Report user login* and *Report user logout*.

Log Server

Important transactions that occur on the KVM Over the NET™ switch, such as logins and internal status messages, are kept in an automatically generated log file. Specify the MAC address and a port number for the computer that the Log Server resides on in this panel. The valid port range is 1-65535. The default port number is 9001.

Note: The port number must differ than the one used for the *Program* port (see *Program*, page 125).

Installation and operation of the Log Server is discussed in Chapter 12. The Log File is discussed on page 98.

SNMP Settings

If you want to use SNMP to help with your installation management:

1. Check *Enable SNMP Agent*.
2. Key in the IP address and the port number of the computer to be notified of SNMP trap events. The valid port range is 1-65535.

Note: The following SNMP trap events are sent: system power On, login failure, and system reset.

Syslog Server

To record all the events that take place on KVM Over the NET™ switches and write them to a Syslog server, do the following:

1. Check **Enable**.
2. Key in the IP address and the port number of the Syslog server. The valid port range is 1-65535.

Disable Local Authentication

Selecting this option will disable login authentication locally on the KVM Over the NET™ switch. The switch can only be accessed using LDAP, LDAPS, MS Active Directory, RADIUS or CC Management authentication.

RADIUS Settings

To allow authentication and authorization for the KVM Over the NET™ switch through a RADIUS server, do the following:

1. Check **Enable**.
2. Fill in the IP addresses and port numbers for the Preferred and Alternate RADIUS servers.
3. In the *Timeout* field, set the time in seconds that the KVM Over the NET™ switch waits for a RADIUS server reply before it times out.
4. In the *Retries* field, set the number of allowed RADIUS retries.
5. In the *Shared Secret* field, key in the character string that you want to use for authentication between the KVM Over the NET™ switch and the RADIUS Server.
6. On the RADIUS server, set the entry for each user as follows:

`su/xxxx`

Where *xxxx* represents the Username given to the user when the account was created on the KVM Over the NET™ switch. The user's access rights are the ones assigned for the KVM Over the NET™ switch, as well.
(See *Adding Users*, page 107.)

LDAP / LDAPS Authentication and Authorization Settings

To allow authentication and authorization for the KVM Over the NET™ switch via LDAP / LDAPS, refer to the information in the table, below:

Item	Action
Enable	Put a check in the <i>Enable</i> checkbox to allow LDAP / LDAPS authentication and authorization.
Type	Click a radio button to specify whether to use LDAP or LDAPS.
LDAP Server IP and Port	Fill in the IP address and port number for the LDAP or LDAPS server. For LDAP, the default port number is 389; for LDAPS, the default port number is 636.
Admin DN	Consult the LDAP / LDAPS administrator to ascertain the appropriate entry for this field. For example, the entry might look like this: ou=kn4132,dc=aten,dc=com
Admin Name	Key in the LDAP administrator's username.
Password	Key in the LDAP administrator's password.
Search DN	Set the distinguished name of the search base. This is the domain name where the search starts for user names.
Timeout	Set the time in seconds that the KVM Over the NET™ switch waits for an LDAP or LDAPS server reply before it times out.


Note: If *LDAP Settings* is enabled, the LDAP schema for MS Active Directory must be extended. See *LDAP Server Configuration*, page 173, for details.

CC Management Settings

To allow authorization for the KVM Over the NET™ switch through a CC (Control Center) server, check *Enable* and fill in the CC Server's IP address and the port that it listens on in the appropriate fields.

OOBC

In case the KVM Over the NET™ switch cannot be accessed with the usual LAN-based methods, it can be accessed via the switch's modem port. This page is used to enable support for PPP (modem) dial in operation.

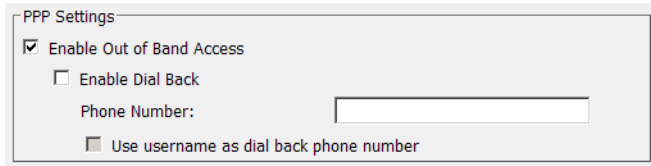

PPP Settings

☒ Enable Out of Band Access

☐ Enable Dial Back

Phone Number:

☐ Use username as dial back phone number

An explanation of the items is given in the table below:

Item	Action
Enable Out of Band Access	Check this to enable dial-in out of band access to the KVM Over the NET™ switch.
Enable Dial Back	As an added security feature, check this to have the switch disconnect the original dial-in connection and dial back to the phone number specified below.
Phone Number	If Enable Dial Back is checked, this is the phone number the switch will use to dial back to initiate a PPP session with the user. This should be set to the same phone number that the user is dialing from.
Use username as dial back phone number	<p>If Enable Dial Back is checked, and a phone number has been specified in the Phone Number field, and <i>Use username as dial back phone number</i> has been checked:</p> <ul style="list-style-type: none"> ◆ Use the phone number of the modem that the switch is dialing back to for the dial-in Username. ◆ Use the phone number specified in the <i>Phone Number</i> field for the dial in password.

See *PPP Modem Operation*, page 203, for PPP setup and operation details.

Security

The Security page controls access to the KVM Over the NET™ switch.

Security

☐ IP Filter Enable

☒ Include

☒ Exclude

Add

Modify

Delete

Login String:

☐ MAC Filter Enable

☒ Include

☒ Exclude

Add

Modify

Delete

Account Policy

Minimum Username Length:

6

Minimum Password Length:

6

Password Must Contain At Least

☐ One Upper Case

☐ One Lower Case

☐ One Number

☐ Disable Duplicate Login

Encryption

Keyboard/Mouse

☐ DES☐ 3DES☐ AES☐ RC4☐ Random

Video

☐ DES☐ 3DES☐ AES☐ RC4☐ Random

Virtual Media

☐ DES☐ 3DES☐ AES☐ RC4☐ Random

Private Certificate

Private Key :

Browse...

Certificate :

Browse...

Upload

Restore default

IP and MAC Filtering

If any filters have been configured, they appear in the IP Filter and/or MAC Filter list boxes.

IP and MAC Filters control access to the KVM Over the NET™ switch based on the IP and/or MAC addresses of the computers attempting to connect. A maximum of 100 IP filters and 100 MAC filters are allowed.

To enable IP and/or MAC filtering, **Click** to put a check mark in the *IP Filter Enable* and/or *MAC Filter Enable* checkbox.

- ♦ If the include button is checked, all the addresses within the filter range are allowed access; all other addresses are denied access.
- ♦ If the exclude button is checked, all the addresses within the filter range are denied access; all other addresses are allowed access.

Adding Filters

To add a filter, do the following:

1. After enabling IP and/or MAC filtering, click **Add**. A dialog box similar to the ones below appears:

The image shows two dialog boxes. The top dialog box is titled 'IP Filter' and has two text input fields: 'From :' and 'To :'. Both fields contain the IP address '0.0.0.0'. Below the fields are 'OK' and 'Cancel' buttons. The bottom dialog box is titled 'Mac Filter' and has a single text input field labeled 'MAC Address:' containing the MAC address '000000000000'. It also has 'OK' and 'Cancel' buttons.

Note: Each IP filter can consist of a single address, or a range of addresses. To filter a single IP address, key in the same address in both the *From* and *To* fields. To filter a continuous range of IP addresses, key in the start of the range in the *From* field; key in the end of the range in the *To* field.

2. Specify the filter addresses, then click **OK**.

Modifying Filters

To modify a filter, select it in the IP Filter and/or MAC Filter list boxes and click **Modify**. The Modify dialog box is similar to the Add dialog box. When it comes up, simply delete the old address(es) and replace it with the new one(s).

Deleting Filters

To delete a filter, select it in the IP Filter and/or MAC Filter list boxes and click **Delete**.

Login String

The *Login String* entry field lets the super administrator specify a login string (in addition to the IP address) that users must include when accessing the KVM Over the NET™ switch with a browser. For example:

192.168.0.126/abcdefg

Note: 1. There must be a forward slash between the IP address and the string.

2. If no login string is specified here, anyone will be able to access the KVM Over the NET™ switch login page using the IP address alone. This makes your installation less secure.

For security purposes, we recommend that you change this string occasionally.

Account Policy

In the Account Policy section, system administrators can set policies governing usernames and passwords. Check a policy and enter the required information in the appropriate fields.

Item	Description
Minimum Username Length	Sets the minimum number of characters required for a username. Acceptable values are from 1–16.
Minimum Password Length	Sets the minimum number of characters required for a password. Acceptable values are from 0–16.
Password Must Contain At Least	Checking any of these items requires users to include at least one uppercase letter, one lowercase letter or one number in their password. Note: This policy does not affect existing user accounts. Only new user accounts created after this policy has been enabled, and users required to change their passwords are affected.
Disable Duplicate Login	Check this to prevent users from logging in with the same account at the same time.

Encryption

These flexible encryption alternatives for keyboard/mouse, video, and virtual media data let you choose any combination of DES; 3DES; AES; RC4; or a Random cycle of any or all of them. Enabling encryption will affect system performance – no encryption offers the best performance; the greater the encryption the greater the adverse effect. If you enable encryption, the performance considerations (going from best to worst) are as follows:

- ♦ RC4 offers the least impact on performance; DES is next; the 3DES or AES
- ♦ The RC4 + DES combination offers the least impact of any combination

Private Certificate

When logging in over a secure (SSL) connection, a signed certificate is used to verify that the user is logging in to the intended site. The *Private Certificate* section is used to obtain a certificate and private key for this purpose.

Using a Private Encryption Key

If you wish to use a private encryption key, do the following:

1. Click **Browse** to the right of *Privet Key* (see the screenshot on page 134.); browse to where your private encryption key file is located; and select it.
2. Click **Upload** to complete the procedure.

Importing a Signed SSL Server Certificate

In order to avoid users having to go through the certificate acceptance prompt each time they log in, administrators may choose to use a third party certificate authority (CA) signed certificate.

To use a third party signed certificate, do the following:

1. Go to a CA (Certificate Authority) website to apply for an SSL certificate.
2. After the CA sends you the certificate, save it to a convenient location on your computer.
3. Open the *Security* page; in the *Private Certificate* panel, at the right of the *Certificate* entry field, click **Browse**. (See the screenshot on page 134.)
4. Browse to where the certificate file is located and select it.
You return to the *Security* page, with the filename displayed in the entry field.
5. Click **Upload** to complete the procedure.

Customization

The *Customization* page is used to set *Login Failure*, *Working Mode*, and *Miscellaneous* parameters.

The screenshot displays a web-based configuration interface for KVM Over the NET. It is divided into three main sections: Login Failures, Working Mode, and Misc. The Login Failures section contains two input fields: 'Allowed' with the value '5' and 'Timeout' with the value '3' followed by a 'min' unit. The Working Mode section contains a list of checkboxes: 'Enable ICMP' (checked), 'Enable Browser' (checked), 'Enable Multiuser Operation' (checked), 'Force All to Grayscale' (unchecked), 'Enable Device List' (checked), and 'Enable Adapter ID' (checked). The Misc section contains three buttons: 'Clear Port Names', 'Reset Default Values', and 'Adapter Attributes'. At the bottom of the form, there is a checkbox labeled 'Reset on exit' which is currently unchecked.

Login Failures	
Allowed:	<input type="text" value="5"/>
Timeout:	<input type="text" value="3"/> min

Working Mode	
<input checked="" type="checkbox"/>	Enable ICMP
<input checked="" type="checkbox"/>	Enable Browser
<input checked="" type="checkbox"/>	Enable Multiuser Operation
<input type="checkbox"/>	Force All to Grayscale
<input checked="" type="checkbox"/>	Enable Device List
<input checked="" type="checkbox"/>	Enable Adapter ID

Misc	
<input type="button" value="Clear Port Names"/>	<input type="button" value="Reset Default Values"/>
<input type="button" value="Adapter Attributes"/>	

☐ Reset on exit

Login Failures

- ♦ **Allowed** sets the number of consecutive failed login attempts that are permitted from a remote computer.
- ♦ **Timeout** sets the amount of time a remote computer must wait before attempting to login again after it has exceeded the number of allowed failures.

Working Mode

- ♦ If *ICMP* is **enabled**, the KVM Over the NET™ switch can be pinged and an IP address can be assigned with the ARP command. If it is not enabled, the device cannot be pinged, nor can it be assigned an IP address with the ARP command. The default is Enabled.
- ♦ To permit browser access to the KVM Over the NET™ switch, click to put a check mark in the *Enable Browser* checkbox. If browser access is not enabled, users must use either the WinClient AP or Java Client AP program to access the switch. The default is Enabled.
- ♦ Enabling *Multiuser operation* permits up to 32 users to log in at the same time to share the remote bus. If not enabled, only the number of users that the switch has remote buses for (2 or 4) can log in at the same time. The default is Enabled.
- ♦ If *Force all to grayscale* is enabled, the remote displays of all devices connected to the KVM Over the NET™ switch are changed to grayscale. This can speed up I/O transfer in low bandwidth situations.
- ♦ If *Enable Device List* is enabled, the switch appears in the Server List when using the WinClient AP (see *WinClient AP Login*, page 39). If this option is not enabled, the switch can still be connected to, but its name will not appear in the Server List.
- ♦ When the *Enable Adapter ID* function is enabled (the default) the switch stores adapter cable information for each of its ports, so that when you move a KVM Adapter Cable from one port to another, it remembers the adapter cable's port properties information at the new location (see *The Adapter ID Function*, page 28).

If this function is disabled, moving the adapter will mean having to key in its port properties information all over again at the new port (see *Port Properties*, page 86).


Miscellaneous

The functions performed by the remaining elements at the bottom of the screen are described in the table, below:

Parameter	Explanation
Clear Port Names	This function removes the names that have been assigned to the ports settings (see <i>Port Naming</i> , page 88).
Reset Default Values	This function undoes all Customization page changes that have been made to the KVM Over the NET™ switch (except for the Port Names), as well as the Network Transfer Rate (on the Network page), and returns the parameters to the original factory default settings.
Adapter Attributes	Clicking this button brings up a dialog box that allows you to set attribute parameters for each of the KVM Adapter Modules connected to the KVM Over the NET™ switch's ports. See the next section for details.

Adapter Attributes

The *Adapter Attribute Settings* dialog box looks similar to the figure below:

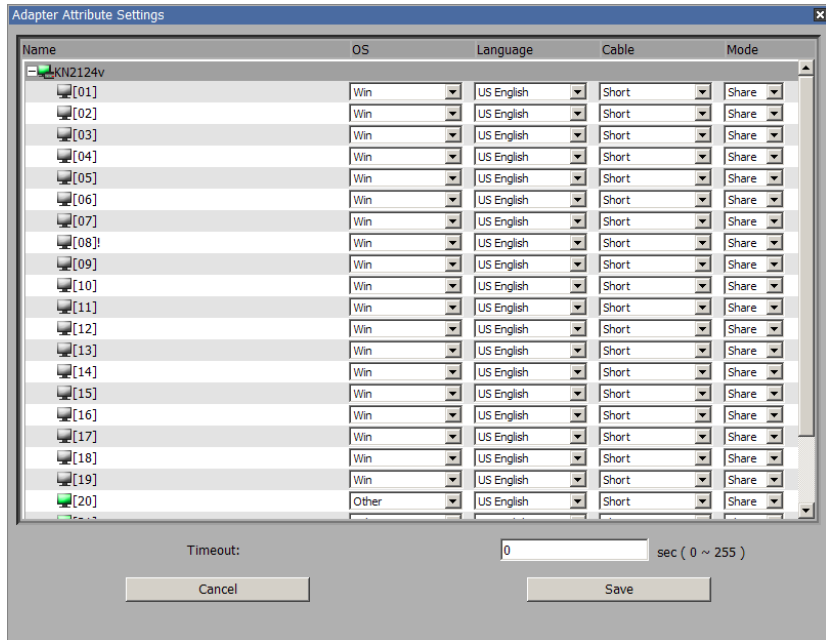

The attribute setting details are the same as the ones that were discussed in Chapter 6, *Port Access*. Refer back to *Port Properties*, page 86 for attribute details.

Select any of the available options from the dropdown listbox for any port.

Note: With the GUI version, you can use [**Shift**] **Click** or [**Ctrl**] **Click** to select several ports and set an attribute for all of them at the same time

After making your choices, click **Save** to save your settings and exit.

Reset on Exit

Place a check here to have the KVM Over the NET™ switch reset itself and implement all the new settings when you log out. Following the reset, wait approximately 30 to 60 seconds before logging back in.

For network IP address settings the *Reset on exit* check box is automatically selected and the KVM switch will reset when you log out. Clearing the check mark before logging out will cause the new IP settings to be ignored and the original IP address settings will remain in effect.

Note: Even though the new IP information is ignored, it still remains in the field. The next time you access this page Reset on Exit will be enabled. The next time that the switch resets the IP settings that you thought you discarded will be saved. To avoid this problem, you should be sure that the IP settings that appear in the field are the ones you want to save.

Date/Time

The Date/Time dialog page sets the KVM Over the NET™ switch time parameters:

Time Zone

(GMT-12:00) Eniwetok Kwajalein

☐ Daylight Savings Time

Date

February < 2009 >

February 2009

Su	Mo	Tu	We	Th	Fr	Sa
1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28

Time

15 : 59 : 02

Set

Network Time

☐ Enable auto adjustment

Preferred time server

AU | ntp1.cs.mu.OZ.AU

☐ Preferred custom server IP

0.0.0.0

☐ Alternate time server

AU | ntp1.cs.mu.OZ.AU

☐ Alternate custom server IP

0.0.0.0

Adjust time every 1 days

Adjust Time Now

Set the parameters according to the information below.

Time Zone

- ♦ To establish the time zone that the KVM Over the NET™ switch is located in, drop down the *Time Zone* list and choose the city that most closely corresponds to where it is at.
- ♦ If your country or region employs Daylight Saving Time (Summer Time), check the corresponding checkbox.

Date

- ♦ Select the month from the dropdown listbox.
- ♦ Click < or > to move backward or forward by one year increments.
- ♦ In the calendar, click on the day.
- ♦ To set the time, use the 24 hour HH:MM:SS format.
- ♦ Click **Set** to save your settings.

Network Time

To have the time automatically synchronized to a network time server, do the following:

1. Check the *Enable auto adjustment* checkbox.
2. Drop down the time server list to select your preferred time server
– or –
Check the *Preferred custom server IP* checkbox, and key in the IP address of the time server of your choice.
3. If you want to configure an alternate time server, check the *Alternate time server* checkbox, and repeat step 2 for the alternate time server entries.
4. Key in your choice for the number of days between synchronization procedures.
5. If you want to synchronize immediately, click **Adjust Time Now**.

This Page Intentionally Left Blank


Chapter 9

Maintenance


Overview

The *Maintenance* function is used to upgrade the KVM Over the NET™ switch firmware, as well as the firmware of the KVM Adapter Cables.

Web Browser Interface

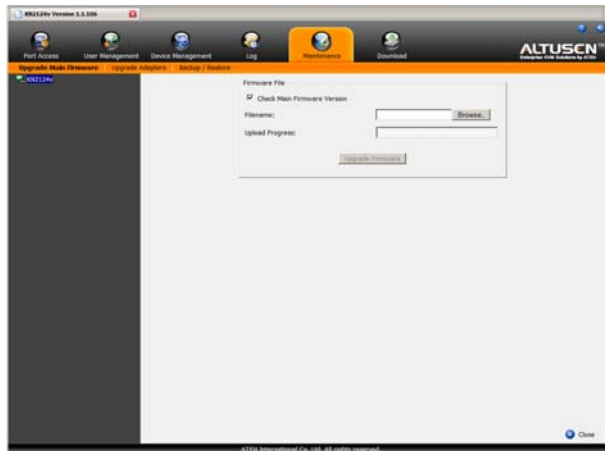

GUI Interface

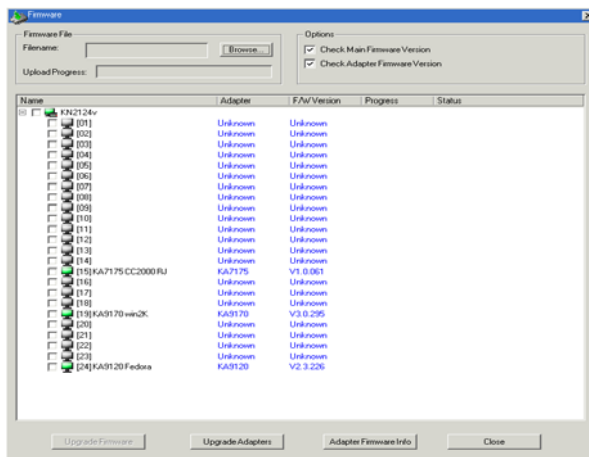

Page Layout

The organization of the Web Browser and GUI pages are similar. The differences are as follows:

- ♦ The Web version has separate menu bar entries for upgrading the main firmware and Adapter firmware.
- ♦ The Web version has a menu bar entry for Backup and Restore.
- ♦ The GUI backup and restore function is contained in the Port Access page, *Export Configuration*, and *Import Configuration*, page 85.

The dialog box is organized into three main areas: *Firmware File*, *Options*, and a large main panel. These are described in the following sections.

Firmware File

As new versions of the KVM Over the NET™ switch firmware become available, they are posted on our website and can be downloaded to a convenient location on your computer. When performing an upgrade, use this section to navigate to where the download file is located.

Options

If you enable *Check Main Firmware Version*, or *Check Adapter Firmware Version* when you perform an upgrade the current firmware level(s) are compared with that of the upgrade file. If the current version is higher than the upgrade version, a message appears, and gives you the option to *Continue* or *Cancel* the operation.

The Main Panel

A description of the items shown in this panel are described in the table, below:

Item	Description
Name	A listing of the KVM Over the NET™ switch ports. The checkbox is for selecting ports whose KVM Adapter firmware you want to upgrade.
Adapter	Displays the type of KVM Adapter connected to the port.
F/W Version	Displays the firmware version of the KVM Adapter connected to the port.
Progress	Shows the progress of the firmware upgrade as it takes place.
Status	Shows the status of the upgrade after the process has completed.
Upgrade Firmware	Click this button to upgrade the switch's main firmware. see <i>Upgrading the Main Firmware</i> , page 148, for firmware upgrading details.
Upgrade Adapters	Click this button to upgrade the firmware of the selected adapters. See <i>Adapter Firmware Upgrade</i> , page 149, for details on upgrading adapters.
Adapter Firmware Info	Shows the versions of the KVM Adapter firmware contained in the main firmware file. If anything is newer than the version displayed in the <i>F/W Version</i> column, you may want to upgrade the adapter to the newer version. See <i>Adapter Firmware Upgrade</i> , page 149, for details.

Upgrading the Main Firmware

The following procedure describes upgrading the main firmware. To perform the upgrades, do the following:

1. Go to our website and download the new firmware file to a convenient location on your computer.
2. In the *Firmware File* section of the Maintenance dialog box, click **Browse**; navigate to where the firmware file is located and select it.
3. Click **Upgrade Firmware** to start the upgrade procedure.
 - ♦ If you enabled *Check Main Firmware Version* the current firmware level is compared with that of the upgrade file. If the current version is equal to or higher than the upgrade version, a popup message appears, to inform you of the situation and stops the upgrade procedure.
 - ♦ If you didn't enable *Check Main Firmware Version*, the upgrade file is installed without checking what its level is.
 - ♦ As the upgrade proceeds, progress information is shown in the *Progress* column.
 - ♦ When the procedure completes the status of the upgrade (Succeeded or Failed) is shown in the *Status* column.
 - ♦ Once the upgrade completes successfully, the switch resets itself.
4. Log in again, and check the firmware version to be sure it is the new one.

Note: To recover from a “failed upgrade” situation, see *Firmware Upgrade Recovery*, page 150.

Adapter Firmware Upgrade

The following procedure describes upgrading the firmware of selected KVM Adapter Cables. To perform the upgrades, do the following:

1. Click the Adapter Firmware Info button to see the adapter firmware versions stored by the main firmware.
2. Compare the adapter firmware information with the version shown in the *F/W Version* column of the Main Panel to see if the stored version is newer than the version in the adapter. If the stored version is newer, you will probably want to perform the upgrade.
3. In the *Name* column of the Main Panel, check the ports whose Adapters you want to upgrade.
4. Click **Upgrade Adapters** to start the upgrade procedure.
 - ♦ If you enabled *Check Adapter Firmware Version*, the current firmware level(s) are compared with that of the upgrade file. If the current version is equal to, or higher than the upgrade version, a message appears in the adapters *Progress* column informing you that no upgrade is available and stops the upgrade procedure.
 - ♦ If you didn't enable *Check Adapter Firmware Version*, the upgrade files are installed without checking what their level is.
 - ♦ As the upgrade proceeds, progress information is shown in the *Progress* column.
 - ♦ When the procedure completes the new adapter firmware version displays.

-
- Note:**
1. The switch may work with older adapter firmware versions, but for optimum compatibility we recommend upgrading your Adapter Cable firmware to that stored with the switch's Main firmware.
 2. You can perform the upgrade procedure anytime you add an Adapter to the installation to make sure it is working with the latest firmware version.
 3. To recover from a "failed upgrade" situation, see *Adapter Cable Firmware Upgrade Recovery*, page 150.
-

Firmware Upgrade Recovery

Should the switch's main firmware upgrade procedure fail, and the switch becomes unusable, the following firmware upgrade recovery procedure will resolve the problem:

1. Power off the switch.
2. Press and hold the Reset Switch in (see *Reset Switch*, page 11 for details).
3. While holding the Reset Switch in, power the switch back on.

This causes the switch to use the original factory installed main firmware version. Once the switch is operational, you can try upgrading the main firmware again.

Adapter Cable Firmware Upgrade Recovery

Should the adapter firmware upgrade procedure fail for one of the KVM Adapter Cables and the adapter becomes unusable, the following adapter firmware upgrade recovery procedure will resolve the problem:

1. Unplug the Adapter from the computer it is connected to.
2. Slide its *Firmware Upgrade Recovery Switch* (located next to the Cat 5e connector) to the **RECOVER** position.
3. Plug the Adapter back into the computer.
4. Repeat the Adapter upgrade procedure.
5. After the Adapter has been successfully upgraded, unplug the Adapter from the computer it is connected to; slide the Firmware Upgrade Recovery Switch back to the **NORMAL** position; and plug the Adapter back in.

Backup/Restore

When you select Backup/Restore on the Web version menu bar gives you the ability to back up the switch's configuration and user profile information:

The screenshot shows a web interface for Backup/Restore operations. The header is orange and contains the text 'options | Backup / Restore'. The main content area is light gray and contains two sections: 'Backup' and 'Restore'. The 'Backup' section has a 'Password:' label and a text input field, with a 'Backup' button below. The 'Restore' section has a 'Filename:' label with a text input field and a 'Browse...' button, a 'Password:' label with a text input field, and an 'Options' section with checkboxes for 'Device Information', 'Network', 'ANMS', 'OOBC', 'Security', 'Customization', 'Date&Time', 'Account', and 'Select All'. A 'Restore' button is at the bottom.

Backup

To backup the device's settings do the following:

1. In the *Password* field, key in a password for the file.

Note: Make a note of the password, since you will need it to be able to restore the file.

2. Click **Backup**.
3. When the browser asks what you want to do with the file, select *Save to disk*; then save it in a convenient location.

Restore

To restore a previous backup, do the following:

1. Click **Browse**; navigate to the file and select it.
2. In the *Password* field, key in the same password that you used to save the file.

Note: If you renamed the file, you can leave the new name. There is no need to return it to its original name.

3. Select as many of the options that are presented as you wish to restore.
4. Click **Restore**.


After the file is restored, a message appears to inform you that the procedure succeeded.

Chapter 10

Download

Overview

Download is used to download stand-alone AP versions of the Windows Client, the Java Client, the Log Server, and Power Over the Net (PON) programs. When you select this tab, a list of available programs appears:

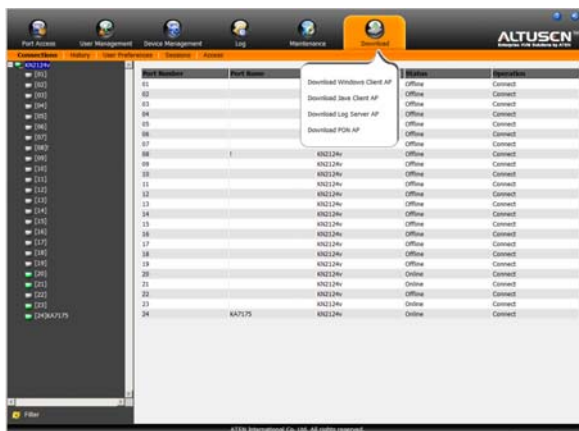

Note: The number and type of programs that appear will vary depending on your User Type.

Click the program you want to download; save it to a convenient location on your hard disk, and run it from there.

- ♦ WinClient AP and Java Client AP operation is the same as browser operation. Refer to Chapter 4, *Logging In*, for login details. Refer to Chapter 6, *Port Access* and Chapter 11, *Port Operation* for port operation details.
- ♦ The Log Server is discussed in Chapter 12.
- ♦ If you are authorized to access a Power Over the Net™ (PON) device connected to the switch, the PON program will allow you to access it.

Note: The PON program can only be used in the current session. If you log out, the program will stop. You must download and run it again the next time you log in.


This Page Intentionally Left Blank

Chapter 11

Port Operation

Overview

After you have successfully logged in (see *Logging In*, page 37), the KVM Over the NET™ switch's Main Page appears with the Port Access tab selected:

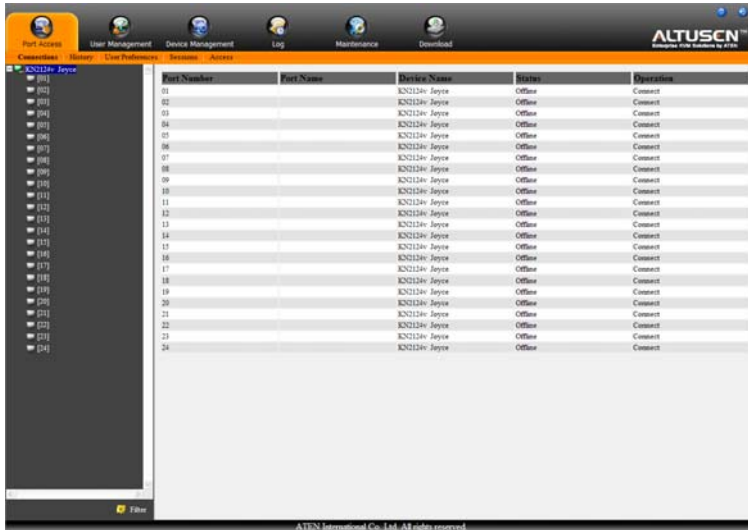

Note: 1. The WinClient and Java Client AP programs have a hidden Control Panel either at the upper or lower center of the screen that becomes visible when you mouse over it. The Web Browser version's Control Panel only appears after you switch to a port. The Control Panel is discussed on page 51.

2. See Chapter 6, *Port Access* for details about the Port Access page.

All the ports that a user is permitted to access are listed in the Port Selection Sidebar at the left of the page. To access a device connected to one of the ports, double click its icon.

Once you switch to a port, its screen displays on your monitor, and your keyboard and mouse input affects the remote system:



The Port Toolbar

The switch interface provides a toolbar to help you with port switching operations from within the captured port. To bring up the toolbar, tap the OSD Hotkey (Scroll Lock or Ctrl), twice. The toolbar appears at the upper left corner of the screen:












Depending on the settings that were selected for ID Display (see page 96), the Port Number and/or the Port Name display at the right of the toolbar. The meanings of the toolbar icons are given in a table on page 157.

Note: You can adjust the toolbar transparency (see *Video Settings*, page 63).

When the toolbar displays, mouse input is confined to the toolbar area and keyboard input has no effect on the computer connected to the port. To carry out operations on the computer, close the toolbar by clicking the X on it; or, recall the Port Access page and select the port again.

The Toolbar Icons

The meanings of the toolbar icons are explained in the table below.

Icon	Purpose
	Click to skip to the first accessible port on the entire installation without having to recall the Port Access page.
	Click to skip to the first accessible port previous to the current one without having to recall the Port Access page.
	Click to begin Auto Scan Mode. The KVM Over the NET™ switch automatically switches among the ports that were selected for Auto Scanning with the Port Select and Filter functions (see <i>Filter</i> , page 89). This allows you to monitor their activity without having to switch among them manually.
	Click to skip from the current port to the next accessible one without having to recall the Port Access page.
	Click to skip from the current port to the last accessible port on the entire installation without having to recall the Port Access page.
	Click to recall the Port Access page.
	Click to close the toolbar.
	Click to invoke Panel Array Mode (see <i>Panel Array Mode</i> , page 161). Note: The Local Console does not have this function. See the entry below for the Local Console icon and function.
	This icon is only found on the Local Console. Clicking this button cycles you through the I/O module's compensation mode choices (Short, Medium, Long) depending on the length of cable used to connect a device to the switch. The length of the line in the icon changes to indicate which choice is selected.

Toolbar Hotkey Port Switching

When the toolbar displays, you can use hotkeys to provide KVM focus to a port directly from the keyboard. The KVM Over the NET™ switch provides the following hotkey features:

- ♦ Auto Scanning
- ♦ Skip Mode Switching

The hotkeys are: **A** and **P** for Auto Scanning; and the **Arrow Keys** for Skip Mode.

Note: 1. In order for hotkey operations to take place, the toolbar must be visible (see *The Port Toolbar*, page 156).

2. To use the keys designated as hotkeys (i.e. A, P, etc.) for normal, non-hotkey purposes, you must first close the toolbar.

3. For issues affecting multiple user operation in Auto Scan Mode, see *Multiuser Operation*, page 163.

Auto Scanning

The Scan function automatically switches among all the ports that are accessible to the currently logged on user at regular intervals, so that the user can monitor their activity automatically. Users can also limit the number of ports scanned with the Filter function of the Sidebar Tree. See *Scan*, page 89, and *Filter*, page 89, for further details.

Setting the Scan Interval:

The amount of time Auto Scan dwells on each port is set with the *Scan Duration* setting (see *Scan Duration*, page 97).

Invoking Auto Scan

To start Auto Scanning, with the toolbar showing, tap the **A** key. The Auto Scan function cycles through the ports in order - starting from the first port on the installation. An **S** appears in front of the Port ID Display to indicate that the port is being accessed under Auto Scan Mode.

Pausing Auto Scan

While you are in Auto Scan Mode, you can pause the scanning in order to keep the focus on a particular computer by pressing **P**. During the time that Auto Scanning is paused, the **S** in front of the Port ID blinks On and Off.

Pausing when you want to keep the focus on a particular computer can be more convenient than exiting Auto Scan Mode because when you *Resume* scanning, you start from where you left off. If, on the other hand, you were to exit and then restart Auto Scan Mode, the scanning would start over from the very first computer on the installation.

To *Resume* Auto Scanning after a pause, press any key except [Esc] or the [Spacebar]. Scanning continues from where it left off.

Exiting Auto Scan

While Auto Scan Mode is in effect, ordinary keyboard functions are suspended. You must exit Auto Scan Mode in order to regain normal control of the keyboard. To exit Auto Scan Mode press [Esc] or the [Spacebar]. Auto Scanning stops when you exit Auto Scan Mode.

Skip Mode

Skip Mode allows you to switch ports in order to monitor the computers manually. You can dwell on a particular port for as long or as little as you like - as opposed to Auto Scanning, which automatically switches after a fixed interval. The Skip Mode hotkeys are the four Arrow keys. Their operation is explained in the table below:

Arrow	Action
←	Skips from the current port to the first accessible port previous to it.
→	Skips from the current port to the first accessible port that comes after it.
↑	Skips from the current port to the very first accessible port on the installation.
↓	Skips from the current port to the very last accessible port on the installation.

Recalling the Port Access Page

To dismiss the toolbar and bring back the Port Access page, do one of the following:

- ♦ Tap the OSD Hotkey once.
- ♦ From the toolbar, click the icon that recalls the Port Access page (see *The Toolbar Icons*, page 157).

The toolbar closes, and the Port Access Page appears.


OSD Hotkey Summary Table

The following table presents a summary of the OSD Hotkey actions after you have accessed a port. See *OSD Hotkey*, page 96 to set the OSD Hotkey.

To...		Do This...
Open the Toolbar		Click the OSD Hotkey twice
Open the Port Access Page	The Toolbar is open	Click the OSD Hotkey once
	The Toolbar is not open	Click the OSD Hotkey three times

Panel Array Mode



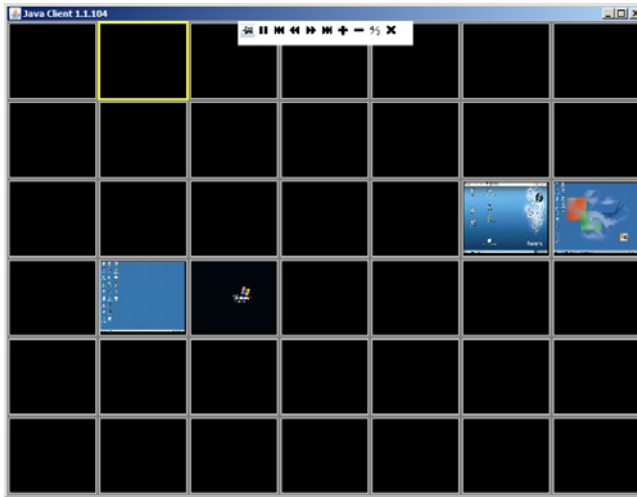







Clicking the toolbar's *Panel* icon invokes Panel Array Mode. Under this mode, the your screen divides into a grid of up to 42 panels:



- ◆ Each panel represents one of the switch's ports beginning with Port 1 at the upper left, and going from left to right; top to bottom.
- ◆ The number of panels in the array can be selected by clicking the **Show More Ports**, and **Show Fewer Ports** symbols on the panel array toolbar (see the following page).
- ◆ When the Array is first invoked, it scans through each of the ports that were selected for Auto Scanning with the Port Select and Filter functions (see *Filter*, page 89). The border of the panel that has the focus is highlighted.
- ◆ Only ports that are accessible to the user are displayed. For ports that are not accessible, the panel is blank.
- ◆ If the computer connected to a port is on line, its screen displays in its panel, otherwise the panel is blank.
- ◆ Mousing over a panel displays information about the port (port name, online status, port access status, and resolution).
- ◆ You can access a computer connected to a port by moving the mouse pointer over its panel and clicking. You switch to the computer exactly as if you had selected it from the Port Access page.

Panel Array Toolbar

The panel array toolbar, (hidden at the top center of the screen for the Java Applet Viewer and Java Client AP), provides shortcut navigation and control of the panel array. Mouse over the top center to bring up the toolbar. If you like, you can click and drag it anywhere on the screen. Mousing over an icon brings up a “tooltip” that provides a short description of the icon’s function. The icon functions are described in the table below:

	Click the pushpin to have the toolbar always be on top.
	Pause panel scanning, leaving the focus on the panel that currently has it.
	Move back four panels.
	Move to the previous panel.
	Move to the next panel.
	Move ahead four panels.
	Show More Ports: Increase the number of panels in the array.
	Show Fewer Ports: Decrease the number of panels in the array.
	Toggle 4/3 aspect ratio.
	Exit Panel Array mode.

Note: For issues affecting multiple user operation in Panel Array Mode, see *Multiuser Operation*, page 163.

Multiusers Operation

The KVM Over the NET™ switch supports multiuser operation. When multiple users simultaneously access the switch from Local Client computers, the rules of precedence that apply are shown in the following table:

Operation	Rule
General	Each bus is independent, for the method by which users are assigned to buses, see the next section, <i>Users and Buses</i> . Each user can open his own independent GUI Main Page.
Auto Scan Mode	<p>If a user has invoked Auto Scan Mode (see page 158), and then another user logs on and gets assigned to the same bus, at first the new user sees the GUI Main Page – but as soon as he accesses any port, he automatically enters Auto Scan Mode (since he is sharing the bus with the original user).</p> <p>Any user on the bus can halt Auto Scan Mode by recalling the GUI Main Page. When this occurs, Auto Scan Mode stops and all the other users on the bus are switched to the port that was being accessed when Auto Scan Mode stopped.</p>
Panel Array Mode	<ul style="list-style-type: none"> ♦ If a user has invoked Panel Array Mode (see page 161), and then another user logs on and gets assigned to the same bus, at first the new user sees the GUI Main Page – but as soon as he accesses any port, he automatically enters Panel Array Mode (since he is sharing the bus with the original user). ♦ Panel Array Mode continues until the original user stops it. (Administrators can override Panel Array Mode, however.) ♦ Only the user who starts Panel Array Mode can use the Skip Mode (see page 159), function. ♦ Only the user who starts Panel Array Mode can switch ports. Other users automatically switch to the ports that the original user selects. However, if one of the other users does not have access rights to the port that the original users switches to, that user will not be able to view the port. ♦ Individual users can increase or decrease the number of panels they wish to view in Panel Array Mode; however, the picture quality may decrease as the number of panels decreases.

Users and Buses

- ♦ The KN2132, KN2124v, and KN2140v only support two remote buses. The first, third, fifth, etc., users to log in are all on one bus; the second, fourth, sixth, etc., users to log in are all on the other bus.
- ♦ The KN4116, KN4132, KN4142v, and KN4140v support four remote buses. The first, fifth, ninth, etc. users are all on the first bus; the second, sixth, 10th, etc.; users are all on the second bus; the third, seventh, 11th, etc.; users are all on the third bus; the fourth, eighth, 12th, etc.; users are all on the fourth bus.
- ♦ The switches support independent bus switching. With independent bus switching, if a user switches to a port that is being utilized by someone on a different bus, only the user that switched ports goes to the new port and the new bus – the other users on the original bus remain on the original port and original bus.

Note: Independent bus switching does not work when Auto Scan Mode or Panel Array Mode is being used by one of the members of the bus.

- ♦ We recommend that the user who starts Panel Array Mode set it to display at least four panels. Otherwise, it is possible that the other users may only receive part of the picture.

Chapter 12

The Log Server


The Windows-based Log Server is an administrative utility that records all the events that take place on selected KVM Over the NET™ switch units and writes them to a searchable database. This chapter describes how to install and configure the Log Server.

Installation

1. From the computer that you want to use as the Log Server, open your browser and log into the KVM Over the NET™ switch (see page 38).
2. Click the *Log Server* button at the left of the webpage to start the Log Server installation program.
3. If any security warning dialog boxes appear, ignore them and click **Run** or **Open**.

Note: If the browser cannot run the file, save it to disk, instead, and run the file from your disk.


The Log Server installation screen appears:

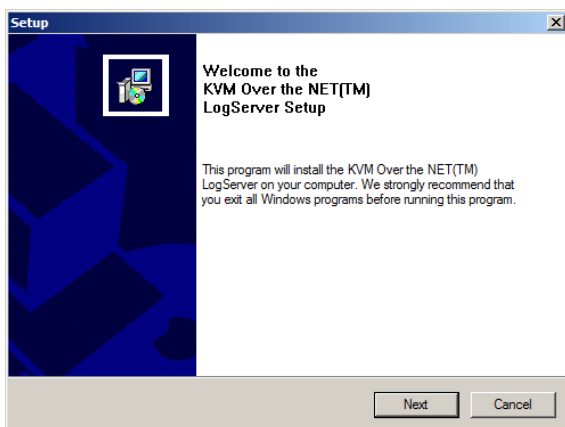

4. Click **Next**. Then follow the on-screen instructions to complete the installation and have the Log Server program icon placed on your desktop.

Starting Up

To start the Log Server, either double click the program icon, or key in the full path to the program on the command line. The first time your run it, a screen similar to the one below appears:

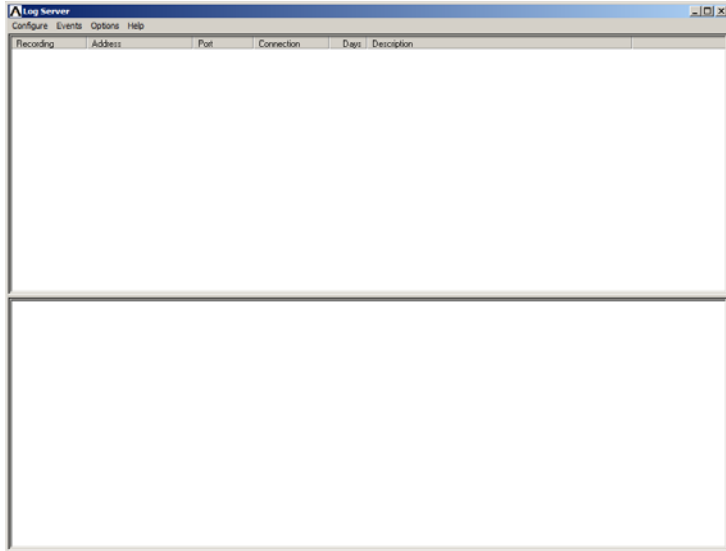

Note: The MAC address of the Log Server computer must be specified on the *Device Management Date/Time* page (see page 142).

The screen is divided into three components:

- ♦ A *Menu Bar* at the top
- ♦ A panel that will contain a list of KVM Over the NET™ units in the middle (see *The Log Server Main Screen*, page 171).
- ♦ A panel that will contain an *Events List* at the bottom

Each of the components is explained in the sections that follow.

The Menu Bar

The Menu bar consists of four items:

- ♦ Configure
- ♦ Events
- ♦ Options
- ♦ Help

These are discussed in the sections that follow.


Note: If the Menu Bar appears to be disabled, click in the List window to enable it.

Configure

The Configure menu contains three items: Add; Edit; and Delete. They are used to add new units to the List; edit the information for units already on the list; or delete units from the list.

- ♦ To add a unit to the list, click **Add**.
- ♦ To edit or delete a listed unit, first select the target in the List window, then open this menu and click **Edit** or **Delete**.

When you choose *Add* or *Edit*, a dialog box, similar to the one below, appears:

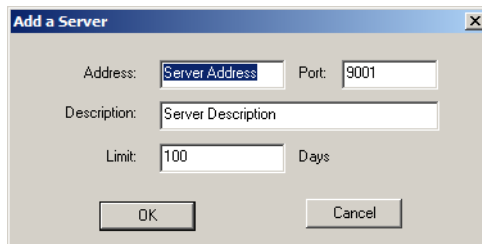A screenshot of a Windows-style dialog box titled "Add a Server". The dialog box has a blue title bar with a close button (X) in the top right corner. The main area is light gray and contains four input fields: "Address:" with a text box containing "Server Address", "Port:" with a text box containing "9001", "Description:" with a text box containing "Server Description", and "Limit:" with a text box containing "100" followed by the text "Days". At the bottom of the dialog box are two buttons: "OK" and "Cancel".

A description of the fields is given in the table, below:

Field	Explanation
Address	This can either be the IP address of the unit or its DNS name (if the network administrator has assigned it a DNS name).
Port	The port number that was assigned to the Log Server (see <i>Date/Time</i> , page 142).
Description	This field is provided so that you can put in a descriptive reference for the unit to help identify it.
Limit	This specifies the number of days that an event should be kept in the Log Server's database. Events that exceed the amount of time specified here can be removed with the Maintenance function (see <i>Maintenance</i> ., page 169).

Fill in or modify the fields, then click **OK** to finish.

Events

The Events Menu has two items: *Search* and *Maintenance*.

Search:

Search allows you to search for events containing specific words or strings. When you access this function, a screen, similar to the one below, appears:

Search Dialog

Search Options

- ☒ New search
- ☐ Search last results
- ☐ Search excluding last results

Start date: 2008-03-14 Start time: 13:15:19 End date: 2008-03-15 End time: 13:15:19 Pattern:

Server List: 172.17.17.11

Priority List: Least, Less, Most

Result:

Server: 10.0.13.54

03/15/2008(12:01:34) : Loading system setting

03/15/2008(12:01:34) : DHCP: Discovering...

03/15/2008(12:01:34) : DHCP: Requesting...

03/15/2008(12:01:34) : DHCP: Requesting...

03/15/2008(12:01:34) : DNS server 1 : 10.0.1.23

03/15/2008(12:01:34) : Accept new IP : 10.0.13.54

03/15/2008(12:07:49) : User from 00-01-29-5C-13-9A 10.0.8.150 scanning port = 445

03/15/2008(12:07:52) : User from 00-01-29-5C-13-9A 10.0.8.150 scanning port = 445

03/15/2008(12:07:52) : User from 00-01-29-5C-13-9A 10.0.8.150 scanning port = 445

Buttons: Search, Print, Export, Exit

A description of the items is given in the table, below:


Item	Description
New search	This is one of three radio buttons that define the scope of the search. If it is selected, the search is performed on all the events in the database for the selected unit.
Search last results	This is a secondary search performed on the events that resulted from the previous search.
Search excluding last results	This is a secondary search performed on all the events in the database for the selected unit excluding the events that resulted from the previous search.
Server List	KVM Over the NET™ units are listed according to their IP address. Select the unit that you want to perform the search on from this list. You can select more than one unit for the search. If no units are selected, the search is performed on all of them.
Priority	Sets the level for how detailed the search results display should be. 1 is the most general; 3 is the most specific.
Start Date	Select the date that you want the search to start from. The format follows the MM/DD/YYYY convention.
Start Time	Select the time that you want the search to start from. The format follows the HH:MM:SS convention.
End Date	Select the date that you want the search to end at.
End Time	Select the time that you want the search to end at.
Pattern	Key in the pattern that you are searching for here. The multiple character wildcard (%) is supported. E.g., h%ds would match hands and hoods.
Results	Lists the events that contained matches for the search.
Search	Click this button to start the search.
Print	Click this button to print the search results.
Export	Click this button to save the search results to file.
Exit	Click this button to exit the Log Server.

Maintenance:

This function allows the administrator to perform manual maintenance of the database, such as erasing specified records before their expiration time is up.

Options

Network Retry allows you to set the number of seconds that the Log Server should wait before attempting to connect if its previous attempt to connect failed. When you click this item, a dialog box, similar to the one below, appears:

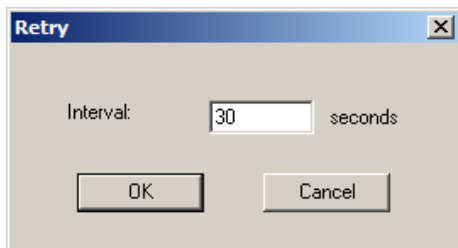

Key in the number of seconds, then click **OK** to finish.

Help


From the Help menu, click Contents to access the online Windows Help file. The help file contains instructions about how to setup, operation and troubleshoot the Log Server.

The Log Server Main Screen

Overview

The Log Server Main Screen is divided into two main panels.

- The upper (List) panel lists all of the units that have been selected for the Log Server to track (see *Configure*, page 167).
- The lower (Event) panel displays the tick information for the currently selected unit. (If there are more than one unit, the selected unit is the one that is highlighted).
- To select a unit in the list, simply click on it.

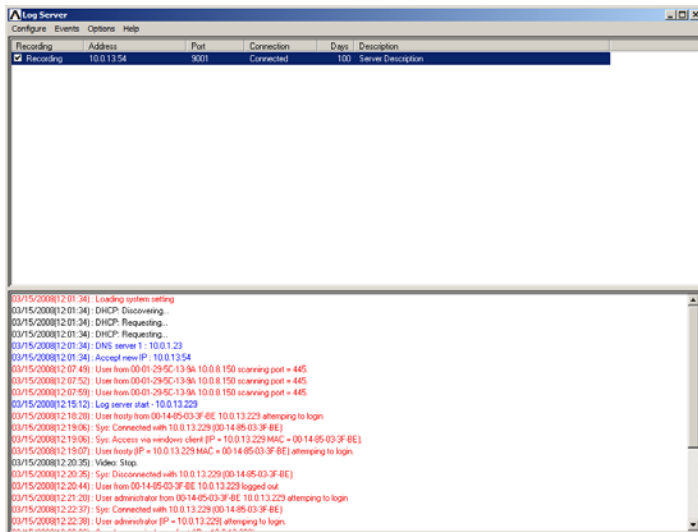

The List Panel

The List panel contains six fields:

Field	Explanation
Recording	Determines whether the Log Server records the ticks for this unit, or not. If the Recording checkbox is checked, the field displays <i>Recording</i> , and the ticks are recorded. If the Recording checkbox is not checked, the field displays <i>Paused</i> , and the ticks are not recorded. Note: Even though a unit is not the currently selected one, if its Recording checkbox is checked, the Log Server will still record its ticks.
Address	This is the IP Address or DNS name that was given to the unit when it was added to the Log Server (see <i>Configure</i> , page 167).
Port	This is the Access Port number assigned to the unit (see <i>Configure</i> , page 167).
Connection	<ul style="list-style-type: none">◆ If the Log Server is connected to the unit, this field displays <i>Connected</i>.◆ If the Log Server is not connected, this field displays <i>Waiting</i>. This means that the Log Server's MAC address has not been set properly. It needs to be set on the <i>Device Management Date/Time</i> page (see page 142).
Days	This field displays the number of days that the unit's log events are to be kept in the Log Server's database before expiration (see <i>Configure</i> , page 167).
Description	This field displays the descriptive information given for the unit when it was added to the Log Server (see <i>Configure</i> , page 167).

The Event Panel

The lower panel displays log events for the currently selected unit. Note that if there are more than one units, even though they aren't currently selected, if their *Recording* checkbox is checked, the Log Server records their log events and keeps them in its database.

Chapter 13

LDAP Server Configuration

Introduction

The KVM Over the NET™ switch allows log in authentication and authorization through external programs. This chapter describes how to configure Active Directory for KVM Over the NET™ switch authentication and authorization.

To allow authentication and authorization via LDAP or LDAPS, the Active Directory's LDAP *Schema* must be extended so that an extended attribute name for the KVM Over the NET™ switch – ***iKVM4140-userProfile*** – is added as an optional attribute to the *person* class.

Note: *Authentication* refers to determining the authenticity of the person logging in; *authorization* refers to assigning permission to use the device's various functions.

In order to configure the LDAP server, you will have to complete the following procedures: 1) Install the Windows Server Support Tools; 2) Install the Active Directory Schema Snap-in; and 3) Extend and Update the Active Directory Schema.

The following section provides an example of configuring LDAP under Windows 2003 Server.

Install the Windows 2003 Support Tools

To install the Windows 2003 Support Tools, do the following:

1. On your Windows Server CD, open the Support → Tools folder.
2. In the right panel of the dialog box that comes up, double click **SupTools.msi**.
3. Follow along with the Installation Wizard to complete the procedure.

Install the Active Directory Schema Snap-in

To install the Active Directory Schema Snap-in, do the following:

1. Open a Command Prompt.
2. Key in: `regsvr32 schmmgmt.dll` to register schmmgmt.dll on your computer.
3. Open the *Start* menu; click **Run**; key in: `mmc /a`; click **OK**.
4. On the *File* menu of the screen that appears, click **Add/Remove Snap-in**; then click **Add**.
5. Under *Available Standalone Snap-ins*, double click **Active Directory Schema**; click **Close**; click **OK**.
6. On the screen you are in, open the *File* menu and click **Save**.
7. For *Save in*, specify the `C:\Windows\system32` directory.
8. For *File name*, key in **schmmgmt.msc**.
9. Click **Save** to complete the procedure.

Create a Start Menu Shortcut Entry

To create a shortcut entry on the Start Menu for the Active Directory Schema, do the following:

1. Right click Start; select: **Open all Users → Programs → Administrative Tools**.
2. On the *File* menu, select **New → Shortcut**
3. In the dialog box that comes up, browse to, or key in the path to schmmgmt.msc (`C:\Windows\system32\schmmgmt.msc`), then click **Next**.
4. In the dialog box that comes up, key in *Active Directory Schema* as the name for the shortcut, then click **Finish**.


Extend and Update the Active Directory Schema

To extend and update the Active Directory Schema, you must do the following 3 procedures: 1) create a new attribute; 2) extend the object class with the new attribute; and 3) edit the active directory users with the extended schema.

Creating a New Attribute

To create a new attribute do the following:

1. From the Start menu, open Administrative Tools → Active Directory Schema.
2. In the left panel of the screen that comes up, right-click **Attributes**:

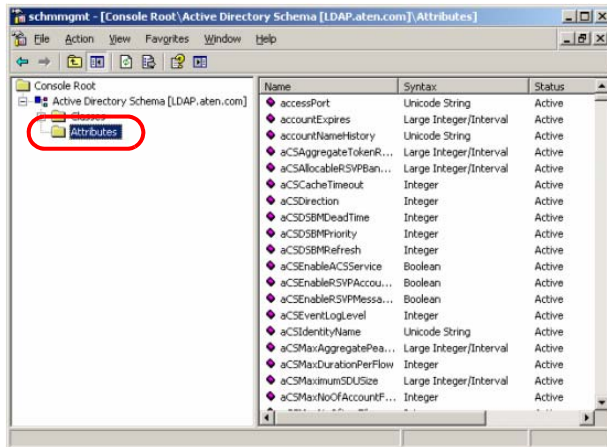

3. Select New → Attribute.
4. In the warning message that appears, click **Continue** to bring up the *Create New Attribute* dialog box.

(Continues on next page.)

(Continued from previous page.)

5. Fill in the dialog box to match the entries for *Description* and *Common Name* shown below, then click **OK** to complete the procedure.

Note: The Unique X500 Object ID uses periods, not commas.


The screenshot shows the 'iKVM4140-userProfile Properties' dialog box with the 'General' tab selected. The 'Description' and 'Common Name' fields are highlighted with a red oval. The 'X.500 OID' field contains the value '1.3.6.1.4.1.21317.1.1.4.25'. The 'Syntax and Range' section shows 'Syntax' as 'Unicode String', 'Minimum' as '1', and 'Maximum' as '255'. Below this, there are several checkboxes: 'Allow this attribute to be shown in advanced view' (unchecked), 'Attribute is active' (checked), 'Index this attribute in the Active Directory' (unchecked), 'Ambiguous Name Resolution (ANR)' (unchecked), 'Replicate this attribute to the Global Catalog' (unchecked), 'Attribute is copied when duplicating a user' (unchecked), and 'Index this attribute for containerized searches in the Active Directory' (unchecked). The 'OK', 'Cancel', and 'Apply' buttons are at the bottom.

iKVM4140-userProfile Properties	
General	
iKVM4140-userProfile	
Description:	iKVM4140-userProfile
Common Name:	iKVM4140-userProfile
X.500 OID:	1.3.6.1.4.1.21317.1.1.4.25
Syntax and Range	
Syntax:	Unicode String
Minimum:	1
Maximum:	255
This attribute is single-valued.	
<input type="checkbox"/> Allow this attribute to be shown in advanced view	
<input checked="" type="checkbox"/> Attribute is active	
<input type="checkbox"/> Index this attribute in the Active Directory	
<input type="checkbox"/> Ambiguous Name Resolution (ANR)	
<input type="checkbox"/> Replicate this attribute to the Global Catalog	
<input type="checkbox"/> Attribute is copied when duplicating a user	
<input type="checkbox"/> Index this attribute for containerized searches in the Active Directory	
OK Cancel Apply	

Extending the Object Class With the New Attribute

To extend the object class with the new attribute, do the following:


1. Open the Control Panel → Administrative Tools → Active Directory Schema.
2. In the left panel of the screen that comes up, select **Classes**.
3. In the right panel, right-click **person**:

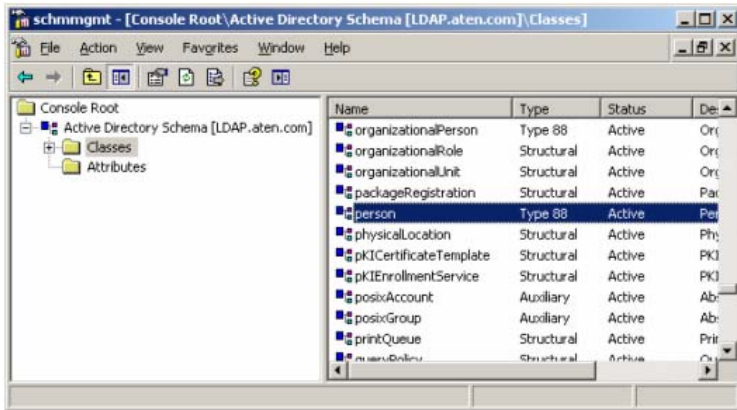


4. Select **Properties**; the *person Properties* dialog box comes up with the *General* page displayed. Click the *Attributes* tab.



5. On the *Attributes* page, click **Add**:

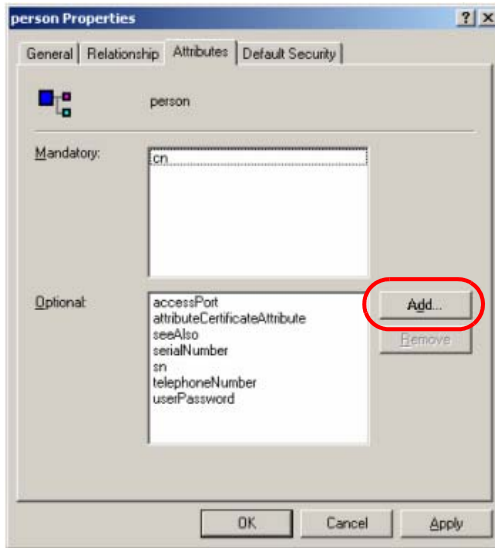


6. In the list that comes up, select **iKVM4140-userProfile**, then click **OK** to complete the procedure.

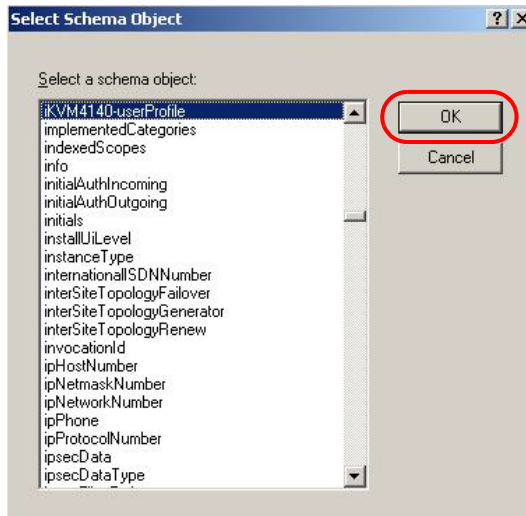

Editing Active Directory Users

To edit Active Directory Users With the Extended Schema, do the following:

1. Run **ADSI Edit**. (Installed as part of the *Support Tools*.)
2. In the left panel, open **Domain**, and navigate to the **DC=aten,DC=com** **CN=Users** node.
3. In the right panel, locate the user you wish to edit. (Our example uses *jason*.)

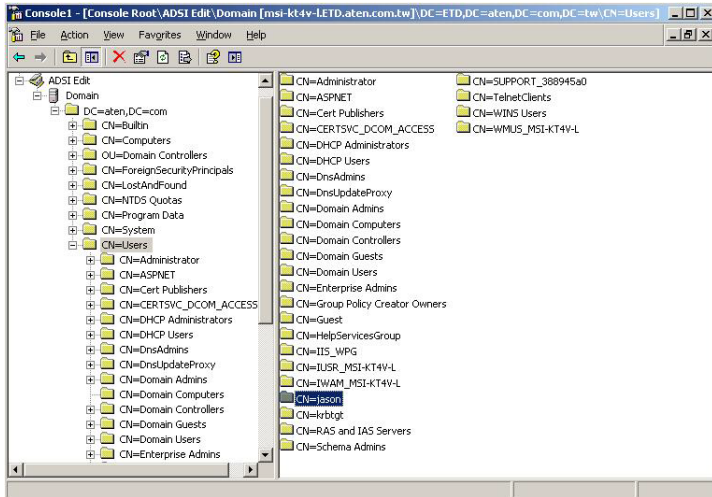


4. Right-click on the user's name and select **properties**.


(Continues on next page.)

(Continued from previous page.)

5. On the *Attribute Editor* page of the dialog box that appears, select **iKVM4140-userProfile** from the list.

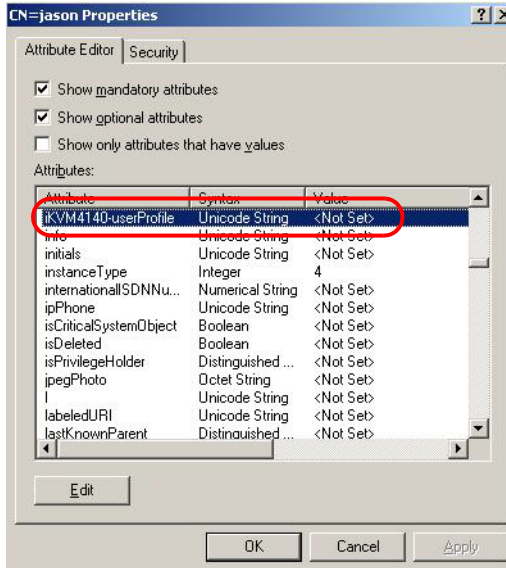

6. Click **Edit** to bring up the *String Attribute Editor*:

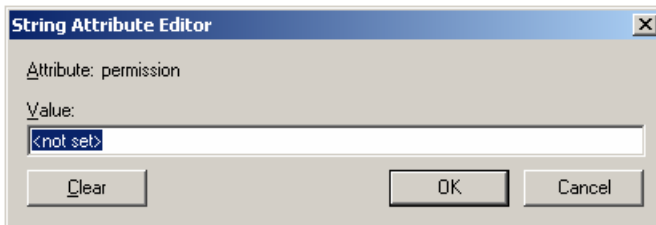

(Continues on next page.)


(Continued from previous page.)

7. Key in the KVM Over the NET™ switch permission attribute values. For example:



Note: Where *user* represents the Username of a KVM Over the NET™ switch user whose permissions reflect the permissions you want Jason to have (see *Users*, page 107).

8. Click **OK**. When you return to the *Attribute Editor* page, the *iKVM4140-userProfile* entry now reflects the new permissions:

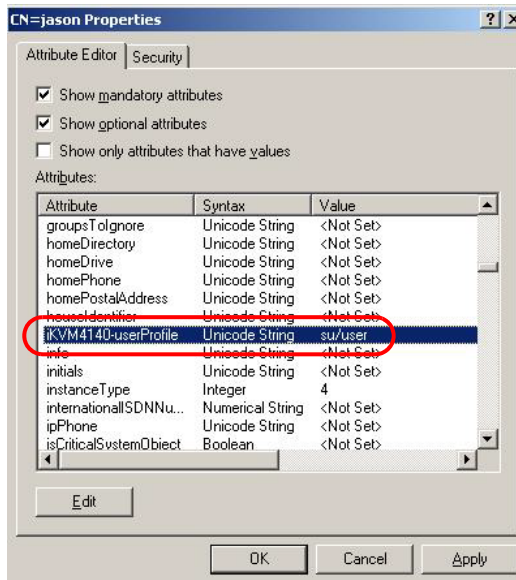

- a) Click **Apply** to save the change and complete the procedure. Jason now has the same permissions as *user*.
- b) Repeat the *Editing Active Directory Users* procedure for any other users you wish to add.

This Page Intentionally Left Blank

Safety Instructions

General

- ♦ Read all of these instructions. Save them for future reference.
- ♦ Follow all warnings and instructions marked on the device.
- ♦ Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- ♦ Do not use the device near water.
- ♦ Do not place the device near, or over, radiators or heat registers.
- ♦ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ♦ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ♦ Never spill liquid of any kind on the device.
- ♦ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ♦ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ♦ To prevent damage to your installation it is important that all devices are properly grounded.
- ♦ The device is designed for IT power distribution systems with 230V phase-to-phase voltage.
- ♦ The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.
- ♦ Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.

- ♦ If an extension cord is used with this device make sure that the total of the ampere ratings of all products used on this cord does not exceed the extension cord ampere rating. Make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.
- ♦ To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or un-interruptible power supply (UPS).
- ♦ Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- ♦ When connecting or disconnecting power to hot-pluggable power supplies, observe the following guidelines:
 - ♦ Install the power supply before connecting the power cable to the power supply.
 - ♦ Unplug the power cable before removing the power supply.
 - ♦ If the system has multiple sources of power, disconnect power from the system by unplugging all power cables from the power supplies.
- ♦ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- ♦ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- ♦ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
 - ♦ The power cord or plug has become damaged or frayed.
 - ♦ Liquid has been spilled into the device.
 - ♦ The device has been exposed to rain or water.
 - ♦ The device has been dropped, or the cabinet has been damaged.
 - ♦ The device exhibits a distinct change in performance, indicating a need for service.
 - ♦ The device does not operate normally when the operating instructions are followed.
- ♦ Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.
- ♦ Do not connect the RJ-11 connector marked “UPGRADE” to a public telecommunication network.

Rack Mounting

- ♦ Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- ♦ Always load the rack from the bottom up, and load the heaviest item in the rack first.
- ♦ Make sure that the rack is level and stable before extending a device from the rack.
- ♦ Use caution when pressing the device rail release latches and sliding a device into or out of a rack; the slide rails can pinch your fingers.
- ♦ After a device is inserted into the rack, carefully extend the rail into a locking position, and then slide the device into the rack.
- ♦ Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- ♦ Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.
- ♦ Ensure that proper airflow is provided to devices in the rack.
- ♦ Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer
- ♦ Do not step on or stand on any device when servicing other devices in a rack.

Technical Support

Technical support is available both by email and online (with a browser over the web):

International

Email Support		support@aten.com
Online Support	Technical Support	http://support.aten.com
	Troubleshooting Documentation Software Updates	http://www.aten.com
Telephone Support		886-2-8692-6959

North America

Email Support		ATEN TECH	support@aten-usa.com
		ATEN NJ	sales@aten.com
Online Support	Technical Support	ATEN TECH	http://www.aten-usa.com/support
		ATEN NJ	http://support.aten.com
	Troubleshooting Documentation Software Updates	ATEN TECH	http://www.aten-usa.com
		ATEN NJ	http://www.aten.com
Telephone Support		ATEN TECH	1-888-999-ATEN
		ATEN NJ	1-732-356-1703

When you contact us, please have the following information ready beforehand:

- ♦ Product model number, serial number, and date of purchase.
- ♦ Your computer configuration, including operating system, revision level, expansion cards, and software.
- ♦ Any error messages displayed at the time the error occurred.
- ♦ The sequence of operations that led up to the error.
- ♦ Any other information you feel may be of help.

Specifications

KN2124v / KN4124v

Function		KN2124v	KN4124v
Computer Connections	Direct	24	
	Max	384 (via cascade)	
Port Selection		Pushbutton / GUI / Hotkey	
Connectors	Console Port	1 x SPHD-18 Female (Yellow)	
	KVM Port	24 x RJ-45 Female (Black)	
	Power	2 x 3-prong AC socket	
	LAN	2 x RJ-45 Female (Black)	
	PON	1 x RJ-45 Female (Black)	
	Modem	1 x RJ-45 Female (Black)	
	USB	3 x USB Type A Female (White)	
	Audio	2 x Audio Jack Female	
Switches	Reset	1 x Semi-recessed Pushbutton	
	Power	2 x Rocker Switch	
	Port Selection	2 x Pushbutton	
LEDs	On Line	24 (Green)	
	Selected	24 (Red)	
	Power	1 (Blue)	
	Link 10 / 100 / 1000 Mbps	2 (Red / Red + Green / Green)	
Emulation	Keyboard/Mouse	PS/2 / USB (PC, Mac, Sun) / Serial	
Video		1600x1200 @ 60Hz	
Scan Interval		1–255 Seconds	
I/P Rating		100–240V AC; 50–60 Hz; 1.0 A	
Power Consumption	Single Power	115V/36.4W 230V/37.2W	115V/43.7W 230V/44.6W
	Dual Power	115V/41.8W 230V/42.5W	115V/49.1W 230V/50W
Environment	Operating Temp.	0–50° C	
	Storage Temp.	-20–60° C	
	Humidity	0–80% RH Noncondensing	
Physical Properties	Housing	Metal	
	Weight	5.99 kg	6.04 kg
	Dimensions L x W x H	43.36 x 40.94 x 4.40 cm (19"1U)	

KN2140v / KN4140v

Function		KN2140v	KN4140v
Computer Connections	Direct	40	
	Max	640 (via cascade)	
Port Selection		Pushbutton / GUI / Hotkey	
Connectors	Console Port	1 x SPHD-18 Female (Yellow)	
	KVM Port	40 x RJ-45 Female (Black)	
	Power	2 x 3-prong AC socket	
	LAN	2 x RJ-45 Female (Black)	
	PON	1 x RJ-45 Female (Black)	
	Modem	1 x RJ-45 Female (Black)	
	USB	3 x USB Type A Female (White)	
	Audio	2 x Audio Jack Female	
Switches	Reset	1 x Semi-recessed Pushbutton	
	Power	2 x Rocker Switch	
	Port Selection	2 x Pushbutton	
LEDs	On Line	40 (Green)	
	Selected	40 (Red)	
	Power	1 (Blue)	
	Link 10 / 100 / 1000 Mbps	2 (Red / Red + Green / Green)	
Emulation	Keyboard/Mouse	PS/2 / USB (PC, Mac, Sun) / Serial	
Video		1600x1200 @ 60Hz	
Scan Interval		1–255 Seconds	
I/P Rating		100–240V AC; 50–60 Hz; 1.0 A	
Power Consumption	Single Power	115V/36.8W 230V/37.7W	115V/49W 230V/50W
	Dual Power	115V/42.2W 230V/43W	115V/54W 230V/56W
Environment	Operating Temp.	0–50° C	
	Storage Temp.	-20–60° C	
	Humidity	0–80% RH Noncondensing	
Physical Properties	Housing	Metal	
	Weight	6.08 kg	6.12 kg
	Dimensions L x W x H	43.36 x 40.94 x 4.40 cm (19"1U)	

KN4116

Function			Description
Computer Connections	Direct		16
	Max		256 (via cascade)
Port Selection			Pushbutton / GUI / Hotkey
Connectors	Console Port	Keyboard	1 x 6-pin Mini-DIN Female (Purple) 1 x USB Type A Female (White)
		Video	1 x HDB-15 Female (Blue)
		Mouse	1 x 6-pin Mini-DIN Female (Green) 1 x USB Type A Female (White)
	KVM Port		16 x RJ-45 Female (Black)
	Power		1 x 3-prong AC socket
	LAN		2 x RJ-45 Female (Black)
	PON		1 x RJ-45 Female (Black)
	Modem		1 x RJ-45 Female (Black)
	USB		3 x USB Type A Female (White)
	Switches	Reset	
Power		1 x Rocker Switch	
Port Selection		2 x Pushbutton	
LEDs	On Line		16 (Green)
	Selected		16 (Red)
	Power		1 (Blue)
	Link 10 / 100 / 1000 Mbps		2 (Red / Red + Green / Green)
Emulation	Keyboard/Mouse		PS/2 / USB (PC, Mac, Sun) / Serial
Video			1600x1200 @ 60Hz
Scan Interval			1–255 Seconds
I/P Rating			100–240V AC; 50–60 Hz; 1.0 A
Power Consumption			110V / 39.60W 230V / 40.00W
Environment	Operating Temp.		0–50°C
	Storage Temp.		-20–60°C
	Humidity		0–80% RH, Noncondensing
Physical Properties	Housing		Metal
	Weight		5.52 kg
	Dimensions L x W x H		43.36 x 41.35 x 4.40 cm (19" 1U)

KN2132 / KN4132

Function			KN2132	KN4132
Computer Connections	Direct		32	
	Max		512	
Port Selection			Pushbutton / GUI / Hotkey	
Connectors	Console Port	Keyboard	1 x 6-pin Mini-DIN Female (Purple) 1 x USB Type A Female (White)	
		Video	1 x HDB-15 Female (Blue)	
		Mouse	1 x 6-pin Mini-DIN Female (Green) 1 x USB Type A Female (White)	
	KVM Port		32 x RJ-45 Female (Black)	
	Power		1 x 3-prong AC socket	
	LAN		2 x RJ-45 Female (Black)	
	PON		1 x RJ-45 Female (Black)	
	Modem		1 x RJ-45 Female (Black)	
	USB		3 x USB Type A Female (White)	
	Switches	Reset		1 x Semi-recessed Pushbutton
Power		1 x Slide		
Port Selection		2 x Pushbutton		
LEDs	On Line		32 (Green)	
	Selected		32 (Red)	
	Power		1 (Blue)	
	Link 10 / 100 / 1000 Mbps		2 (Red / Red + Green / Green)	
Emulation	Keyboard/Mouse		PS/2 / USB (PC, Mac, Sun) / Serial	
Video			1600x1200 @ 60Hz	
Scan Interval			1–255 secs	
I/P Rating			100–240VAC; 50–60Hz; 1.0A	
Power Consumption			110V / 33.40W 230V / 33.60W	110V / 45.80W 230V / 46.30W
Environment	Operating Temp.		0–50° C	
	Storage Temp.		-20–60° C	
	Humidity		0–80% RH	
Physical Properties	Housing		Metal	
	Weight		5.59 kg	5.63 kg
	Dimensions L x W x H		43.36 x 41.35 x 4.40 cm (19" 1U)	

Troubleshooting

General Operation

Problem	Resolution
I am confused about which equipment the terms <i>Local</i> and <i>Remote</i> refer to.	<ul style="list-style-type: none"> ♦ By Local, we mean the place where the user is operating from – whether he is connecting to the switch from the Local Console right next to the switch, or from a Local Client login located half-way around the world. ♦ By Remote, we mean the equipment that connects to the switch via the Adapter Cables – as in “remote servers.”
Erratic Operation	<p>The switch needs to be started before any cascaded switches.</p> <ol style="list-style-type: none"> 1. Make sure to power it on before powering on the switch. 2. If the cascaded switch was started before the switch, reset or restart the cascaded switch. <p>Press and release the <i>Reset</i> switch (see <i>Reset Switch</i>, page 11).</p>
I have been given an account but I am unable to log in.	<ol style="list-style-type: none"> 1. Make sure that you have correctly specified your Username and Password. 2. Make sure that the administrator has given you the necessary permission to access the switch. 3. Ask your administrator to see if the switch is under CC management. If it is, he will have to resolve the situation either by disabling CC management on the switch (see page 128), or by deselecting it on the CC server (see the CC User Manual for details).
I can't access the switch, even though I have specified the IP address and port number correctly.	If the switch is behind a router, the router's <i>Port Forwarding</i> (also referred to as <i>Virtual Server</i>) feature must be configured. See <i>Port Forwarding</i> , page 202, for details.
When logging in from a browser, the following message appears: <i>404 Object Not Found</i> .	If a login string has been set, make sure to include the forward slash and correct login string when you specify the switch IP address. (See <i>Login String</i> , page 136.)
Sudden loss of network connection.	Close your switch connection. Wait approximately 30 seconds, and log in again.

Problem	Resolution
No remote server video display on the Local Client computer.	<p>Check that your KVM Adapter Cable's firmware version is the same as the version stored in the switch's Main firmware. See <i>Adapter Firmware Upgrade</i>, page 149, for details.</p> <p>Set the remote server resolution to 1280 x 1024 or less.</p>
No remote server video display on the Local Client computer, but mouse movements appear on the local console and mouse clicks have no effect	Press and release the left Alt key, then press and release the right Alt key
The display on the Local Client computer is distorted and performing an Autosync doesn't resolve the problem.	<p>Switch ports to a port with a different resolution, then switch back.</p> <p>If the above didn't resolve the problem, change the resolution and refresh rate for the system running on the port. Afterward, you can either run at the new resolution, or switch back to the original resolution.</p>
The Lock Key LEDs on the Control Panel don't accurately reflect the actual locked status of my keyboard input.	When you first connect, the LED display may not accurately reflect the LEDs on your keyboard. To resolve the problem, click the LEDs on the Control Panel until they match your keyboard. Afterward, when you change them from the keyboard they will change on the Control Panel.
When I log in, the browser generates a <i>CA Root certificate is not trusted</i> , or a <i>Certificate Error</i> response.	The certificate's name is not found on Microsoft's list of Trusted Authorities. The certificate can be trusted. See <i>Trusted Certificates</i> , page 209, for details.
In multiuser operation I had exclusive (or occupy) rights on the port I was viewing. After I recalled the Port Access page and then came back to the port I was occupying, it had been taken over by another user. Why did this happen?	If you try to return to the port by selecting again in the tree, the switch acts as if you are accessing the port for the first time. If another user was waiting on the port, he takes precedence and gets the port. The correct way to return to the port is to click the <i>Close</i> icon at the top right of the Port Access page.
I can't access my PN9108 when I run the PON AP.	Since the PN9108 already has over IP functionality, there is no need for the KN2124v / KN2140v / KN4124v / KN4140v / KN2132 / KN4116 / KN4132 to provide it. Therefore, only PON devices that don't have their own over IP functionality (such as the PN0108) are supported.

Mouse Problems

Problem	Resolution
Mouse and/or Keyboard not responding.	<p>Check that your KVM Adapter Cable's firmware version is the same as the version stored in the switch's Main firmware. See <i>Adapter Firmware Upgrade</i>, page 149, for details.</p> <p>Unplug the cable(s) from the console port(s), then plug it/them back in.</p>
Mouse movement extremely slow	There is too much data being transferred for your connection to keep up with. Lower the video quality (see <i>Video Settings</i> , page 63) so that less video data is transmitted.
There are two mouse pointers after the remote server is accessed.	You can select another pointer type. See <i>Mouse Pointer Type</i> , page 74, for details.
When the mouse pointer is in Single Pointer mode, I can't access the Control Panel.	Recall the Control Panel and immediately change the pointer to Dual mode.
Why is there a Dual Pointer mode?	When you are not in Mouse DynaSync Mode, you need the two pointers so that you know the remote server pointer is actually at the location you think it is at. Otherwise, you might perform a mouse operation and because of net lag the remote server pointer may not be at the location that your Local Client pointer is at.
Mouse pointer confusion	If you find the display of two mouse pointers (local and remote) to be confusing or annoying, you can use the <i>Toggle Mouse Display</i> function to shrink the non-functioning pointer. See <i>Toggle mouse display</i> , page 56, and <i>Mouse Pointer Type</i> , page 74.
When I log in with my Windows system, the local and remote mouse pointers do not sync.	<ol style="list-style-type: none"> 1. Check the status of the <i>Mouse Sync Mode</i> setting (see <i>Mouse DynaSync Mode</i>, page 75). If it is set to <i>Automatic</i>, change the setting to <i>Manual</i> and refer to the information for <i>Manual Mouse Synchronization</i> on page 76. 2. If you are in Manual mode, use the <i>AutoSync</i> feature (see <i>Video Settings</i>, page 63), to sync the local and remote monitors. 3. If that doesn't resolve the problem, use the <i>Adjust Mouse</i> feature (see <i>Adjust mouse</i>, page 56) to bring the pointers back in step. 4. If the above fails to resolve the problem, refer to <i>Additional Mouse Synchronization Procedures</i>, page 206, for further steps to take.

Problem	Resolution
When I log in with my Mac system, the local and remote mouse pointers do not sync.	There are two automatic Mouse DynaSync settings: the default, and Mac2. If mouse synchronization is not satisfactory with the default, try the Mac 2 setting. See the Note on page 76 for details.
When I log in with my Sun system, the local and remote mouse pointers do not sync	<p>Automatic Mouse DynaSync sync only supports USB mice on Windows and Mac (G4 or higher) systems. You must sync the pointers manually. See <i>Mouse DynaSync Mode</i>, page 75, and <i>Manual Mouse Synchronization</i>, page 76, for further details.</p> <p>After doing the above, refer to <i>Sun / Linux</i>, page 207, under <i>Additional Mouse Synchronization Procedures</i> for further steps to take.</p>
When I log in with my Linux system, the local and remote mouse pointers do not sync.	<p>Automatic Mouse DynaSync sync only supports USB mice on Windows and Mac (G4 or higher) systems. You must sync the pointers manually. See <i>Mouse DynaSync Mode</i>, page 75, <i>Manual Mouse Synchronization</i>, page 76, and <i>Mac and Linux Considerations</i>, page 76, for further details.</p> <p>After doing the above, refer to <i>Sun / Linux</i>, page 207, under <i>Additional Mouse Synchronization Procedures</i> for further steps to take.</p>

Virtual Media

Problem	Resolution
Virtual Media doesn't work.	The remote server's mainboard does not support USB. If there is a newer firmware and BIOS version for the remote server's mainboard – one that supports USB – get it from the manufacturer and upgrade the server's mainboard firmware and BIOS.
There is no Virtual Media icon on my Control Panel.	<ol style="list-style-type: none"> 1. Virtual Media only supports the KA7175 and KA7176 KVM Adapter Cables. 2. You must be have Administrator privileges on your Local Client computer. (This is a Windows limitation.)
I can't boot my remote server from my Virtual Media drive.	Your remote server's BIOS doesn't support booting from a USB drive. Get the latest firmware and BIOS version for your mainboard from the manufacturer and upgrade your mainboard BIOS.
If I connect a USB floppy drive to a remote server, it can boot the remote server. But, if I map it to the remote server as a Virtual Media drive, it cannot boot the remote server.	USB floppy drives have two types of format: UFI and CBI. Both can be used for OS level virtual media functions, but currently only UFI is supported for BIOS level (such as boot) functions.
I cannot mount Folder as a Virtual Media device.	If the actual Folder is formatted with the FAT16 file system, it cannot be mounted if its size exceeds 2GB.

Web Browser

Problem	Resolution
After upgrading the firmware, after logging in with my web browser, the switch appears to still be using the old firmware version.	<p>The switch is using the new firmware version but the browser is displaying a page that is stored in its cache. Simply log out and clear your browser's cache.</p> <ul style="list-style-type: none"> ◆ IE: Tools → Internet Options → Temporary Internet Files → Delete Files ◆ Firefox: Tools → Clear Private Data
Firefox only opens the Java Applet Viewer. It doesn't open the WinClient ActiveX Viewer.	The WinClient ActiveX Viewer requires ActiveX. Since Firefox doesn't support ActiveX only the Java Applet Viewer is available.

The WinClient ActiveX Viewer and the WinClient AP

Problem	Resolution
My switch units don't show up in the <i>Server List</i> window when I start the WinClient AP program.	Only units whose Access Port settings for <i>Program</i> (see page 142) match the number specified for <i>Port</i> in the Server area of this dialog box appear in the Server List window. Make sure that your entry for Port matches the entry you have specified for Program on the Device Management <i>Service</i> page.
The WinClient ActiveX Viewer and the WinClient AP won't connect to the switch.	DirectX 8.0 or higher must be installed on your computer.
After upgrading the firmware, the WinClient ActiveX Viewer or WinClient AP do not run.	The old version of your .ocx file was not deleted. You must delete the old file. There are two methods to delete the file. <ol style="list-style-type: none"> 1. For the ActiveX Viewer: Open IE → Tools → Manage Add-ons. Delete or disable all occurrences of WinClient. 2. For the WinClient AP: Open Explorer and search for WinClient.ocx. Delete all occurrences.
Part of remote window is off my monitor.	<ol style="list-style-type: none"> 1. Perform an Auto Sync (see <i>Control Panel Functions</i>, page 53, for details). 2. If <i>Keep Screen Size</i> is not enabled (see <i>Screen Options</i>, page 78), use the <i>AutoSync</i> feature (see <i>Video Settings</i>, page 63), to sync the local and remote monitors. 3. If <i>Keep Screen Size</i> is enabled, you can scroll to the areas that are off screen.
The remote screen is rotated 90 degrees.	Enable <i>Keep Screen Size</i> (see <i>Control Panel Configuration</i> , page 77).
I cannot run <i>Net Meeting</i> when the WinClient is running.	Enable <i>Keep Screen Size</i> (see <i>Control Panel Configuration</i> , page 77).

Mac Systems

Problem	Resolution
When I log in to the switch with my Safari browser, it hangs when I use the Snapshot feature.	<p>Force close Safari, then reopen it. Don't use the Snapshot feature in the future.</p> <p>To use the Snapshot feature with Safari, upgrade to Mac OS 10.4.11 and Safari 3.0.4.</p>

The Java Applet and Java Client AP

Problem	Resolution
I can't connect to the switch.	<ol style="list-style-type: none"> 1. The latest Java version must be installed on your Local Client computer. 2. Check if you need to specify the Program port along with the IP address. See <i>Java Client AP Login</i>, page 42, for details. 3. Close Java reopen it, and try again.
I have installed the latest Java JRE, but I am having performance and stability problems.	There may be issues with the latest version because it is so new. Try using a Java version that is one or two versions earlier than the latest one.
After upgrading the firmware, after logging in with the Java Applet Viewer or the Java Client AP, the switch appears to still be using the old firmware version.	<p>Log out. Delete your Java temporary internet files as follows:</p> <ol style="list-style-type: none"> 1. Open Control Panel → Java. 2. In the <i>Temporary Internet Files</i> section, click Settings. 3. In the <i>Disk Space</i> section, click Delete Files. 4. In the dialog box that comes up, click OK.
The national language characters that I input do not appear.	<p>Change the keyboard language of your computer to English-UK.</p> <p>Use the switch <i>On-Screen Keyboard</i> and set the on-screen keyboard to the same language that the other system is using. (See <i>The On-Screen Keyboard</i>, page 73.)</p>
Java performance deteriorates.	Exit the program and start again.
Pressing the Windows Menu key has no effect.	Java doesn't support the Windows Menu key.

Sun Systems

Problem	Resolution
Video display problems with HDB15 interface systems (e.g. Sun Blade 1000 servers).*	<p>The display resolution should be set to 1024 x 768 @ 60Hz:</p> <p>Under Text Mode:</p> <p>Go to OK mode and issue the following commands:</p> <pre>setenv output-device screen:r1024x768x60 reset-all</pre> <p>Under XWindow:</p> <ol style="list-style-type: none">1. Open a console and issue the following command: <pre>m64config -res 1024x768x60</pre>2. Log out3. Log in
Video display problems with 13W3 interface systems (e.g. Sun Ultra servers).*	<p>The display resolution should be set to 1024 x 768 @ 60Hz:</p> <p>Under Text Mode:</p> <p>Go to OK mode and issue the following commands:</p> <pre>setenv output-device screen:r1024x768x60 reset-all</pre> <p>Under XWindow:</p> <ol style="list-style-type: none">1. Open a console and issue the following command: <pre>fbconfig -res 1024x768x60</pre>2. Log out3. Log in
I have a KA9131 USB adapter. Will it work with the switch?	<p>Yes. Although we recommend the KA9170 for new purchases, if you already have a KA9131 you can use it instead of the KA9170.</p>

* These solutions work for most common Sun VGA cards. If using them fails to resolve the problem, consult the Sun VGA card's manual.

The Log Server

Problem	Resolution
The Log Server program does not run.	<p>The Log Server requires the Microsoft Jet OLEDB 4.0 driver in order to access the database.</p> <p>This driver is automatically installed with Windows ME, 2000 and XP.</p> <p>For Windows 98 or NT, you will have to go to the Microsoft download site: http://www.microsoft.com and do a search for <i>MDAC</i> to retrieve the driver file:</p> <p>MDAC 2.7 RTM Refresh (2.70.9001.0)</p> <p>Since this driver is used in Windows Office Suite, an alternate method of obtaining it is to install Windows Office Suite. Once the driver file or Suite has been installed, the Log Server will run.</p>

Panel Array Mode

Problem	Resolution
Low resolution video – the screens don't display clearly.	This sometimes occurs due to the screens being scaled to fit in the panels. Decrease the number of panels that are displayed.
When multiple remote users are logged in, some of them only receive a partial image.	The first user to invoke Panel Array Mode should set it to display at least four panels.
When I try to move forward or backward one port, the display sometimes moves forward two ports or remains on the original port.	<p>This occurs occasionally due to a net lag problem. The array automatically moves through the ports at a pre-selected time. By the time it gets your input it has already moved forward a port on its own - but that hasn't shown up on your display as yet.</p> <p>So, when it moves ahead or back due to your input it appears to have moved two ports (from its own movement plus your "forward one port" command), or remains on the original port (from its own forward movement plus your "back one port" command).</p>

IP Address Determination

If you are an administrator logging in for the first time, you need to access the switch in order to give it an IP address that users can connect to. There are three methods to choose from. In each case, your computer must be on the same network segment as the switch. After you have connected and logged in you can give the switch its fixed network address. (See *Network*, page 124.)


The Local Console

The easiest way to assign an IP address is from the local console. Refer to *First Time Setup*, page 31, for details on the procedure involved.

IP Installer

For computers running Windows, an IP address can be assigned with the *IP Installer* utility. The utility can be obtained from the *Download* area of our web site. Look under *Driver/SW*, and the model of your switch. After downloading the utility to your computer, do the following:

1. Unzip the contents of *IPInstaller.zip* to a directory on your hard drive.
2. Go to the directory that you unzipped the IPInstaller program to and run *IPInstaller.exe*. A dialog box similar to the one below appears:

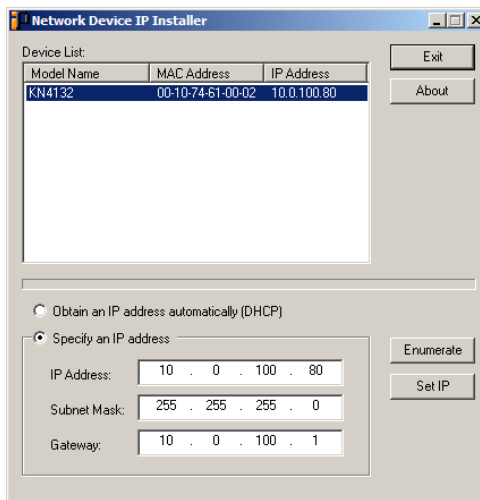

3. Select the switch in the *Device List*.

Note: 1. If the list is empty, or your device doesn't appear, click **Enumerate** to refresh the Device List.

2. If there is more than one device in the list, use the MAC address to pick the one you want. The switch MAC address is located on its bottom panel.
-

4. Select either *Obtain an IP address automatically (DHCP)*, or *Specify an IP address*. If you chose the latter, fill the IP Address, Subnet Mask, and Gateway fields with the information appropriate to your network.
5. Click **Set IP**.
6. After the IP address shows up in the Device List, click **Exit**. See *IP Installer*, page 129 for more information.

Browser

1. Set your computer's IP address to 192.168.0.XXX
Where XXX represents any number or numbers except 60. (192.168.0.60 is the default address of the switch.)
2. Specify the switch's default IP address (192.168.0.60) in your browser, and you will be able to connect.
3. Assign a fixed IP address for the switch that is suitable for the network segment that it resides on.
4. After you log out, reset your computer's IP address to its original value.

Port Forwarding

For devices located behind a router, port forwarding allows the router to pass data coming in over a specific port to a specific device. By setting the port forwarding parameters, you tell the router which device to send the data coming in over a particular port to.

For example, if the switch connected to a particular router has an IP address of 192.168.1.180, you would log into your router's setup program and access the Port Forwarding (sometimes referred to as *Virtual Server*) configuration page. You would then specify 192.168.1.180 for the IP address and the port number you want opened for it (9000 for internet access, for example).


Since configuration setup can vary somewhat for each brand of router, refer to the router's User Manual for specific information on configuring port forwarding for it.

PPP Modem Operation

Basic Setup

In addition to the browser and AP methods, the switch can also be accessed through its RS-232 port using a PPP dial-in connection, as follows:

1. Set up your hardware configuration to match the diagram, below:

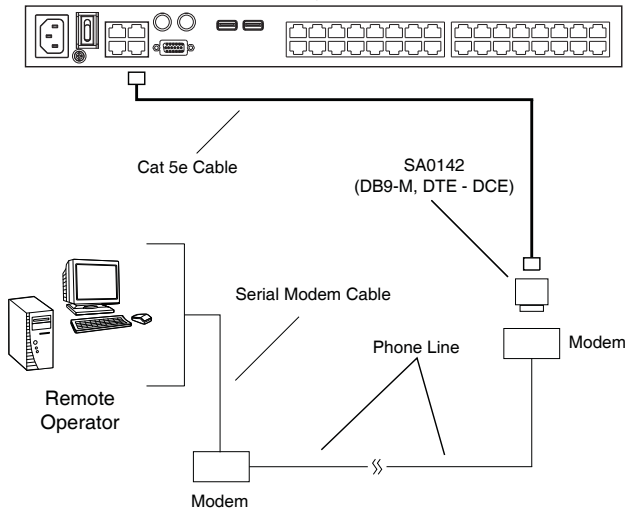

2. From your computer, use your modem dial-in program to dial into the switch modem.

Note: 1. If you don't know the switch modem's serial parameters, get them from the switch administrator.

2. An example of setting up a modem dial-in program under Windows XP is provided on the next page.

-
3. Once the connection is established, open your browser, and specify **192.168.192.1** in the URL box.

Note: The default username and password are blank.

From here, operation is the same as if you had logged in from a browser or with the AP programs.

Connection Setup Example (Windows XP)

To set up a dial-in connection to the switch under Windows XP, do the following:

1. From the *Start* menu, select Control Panel → Network Connections → Create a New Connection.
2. When the *Welcome to the New Connection Wizard* dialog box appears, click **Next** to move on.
3. In the *Network Connection Type* dialog box, select *Connect to the network at my workplace*, then click **Next**.
4. In the *Network Connection* dialog box, select *Dial-up connection*, then click **Next**.
5. In the *Connection Name* dialog box, key in a name for the connection (for example, TPE-KN4132-01), then click **Next**.
6. In the *Connection Availability* dialog box, you can select either *Anyone's use* or *My use only*, depending on your preferences, then click **Next**.

Note: If you are the only user on this computer, this dialog box won't appear.

7. In the *Phone Number to dial* dialog box, key in the phone number of the modem connected to the switch (be sure to include country and area codes, if necessary), then click **Next**.
8. In the *Completing the New Connection Wizard* dialog box, check **Add a shortcut to this connection on my desktop**, then click **Finish**.

This completes the connection setup. Double click the desktop shortcut icon to make a PPP connection to the switch.


KA7140 Configuration and Operation

The KA7140 Adapter Cable connects a serial device to the switch.

Configuration

To configure the KA7140 to interact with the connected device, you need to set its serial parameters to match the parameters of the device, as follows:

1. In the Port Access page, right click on the port that the KA7140 is connected to.
2. In the popup that appears, choose Port Configuration to bring up the Port Properties dialog box:

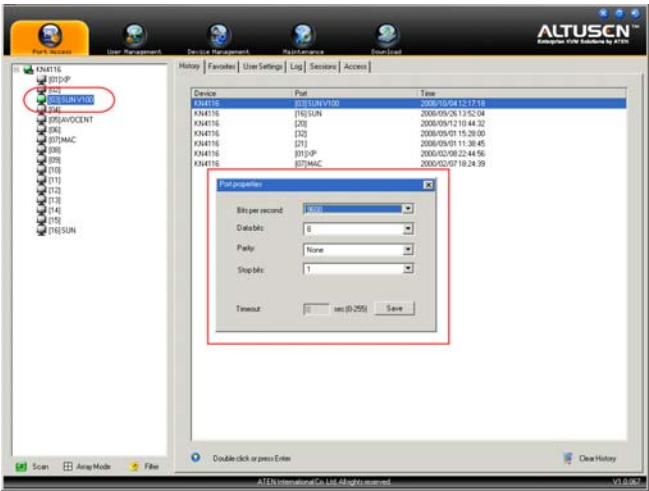

3. Select the appropriate values for the connected device, then click **Save**.

Operation

To operate the device connected to the port, in the Port Access page double click the port. After you switch to the port, issue the command that calls up the device.


Additional Mouse Synchronization Procedures

If you use Manual Mouse Synchronization, you must perform the following operations on the remote servers that connect to the switch.


- Note:** 1. These procedures are to be performed on the computers attached to the switch's ports - not on the computer you are using to access the switch.
2. In order for the local and remote mice to synchronize, you must use the generic mouse driver supplied with the Windows operating system. If you have a third party driver installed - such as one supplied by the mouse manufacturer - you must remove it.
-

Windows:

1. Windows 2000:
 - a) Open the Mouse Properties dialog box (Control Panel → Mouse → Mouse Properties)
 - b) Click the *Motion* tab
 - c) Set the mouse speed to the middle position (6 units in from the left)
 - d) Set the mouse acceleration to *None*

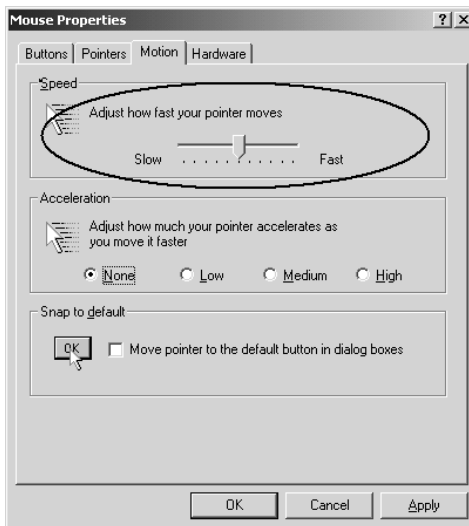

2. Windows XP / Windows Server 2003:
 - a) Open the Mouse Properties dialog box (Control Panel → Mouse)
 - b) Click the *Pointer Options* tab
 - c) Set the mouse speed to the middle position (6 units in from the left)
 - d) Disable *Enhance Pointer Precision*

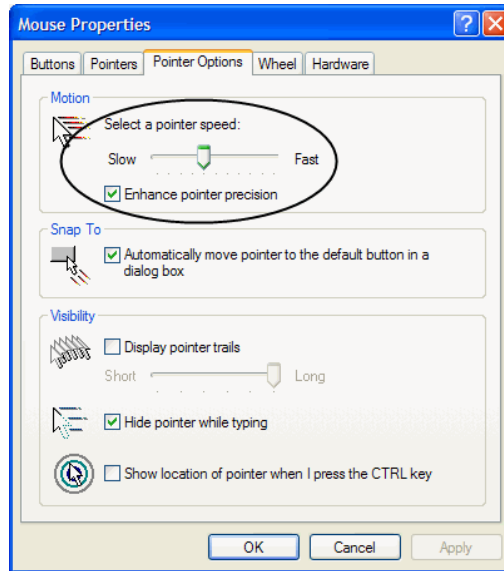

3. Windows ME:

Set the mouse speed to the middle position; disable mouse acceleration (click **Advanced** to get the dialog box for this).
4. Windows NT / Windows 98 / Windows 95:

Set the mouse speed to the slowest position.

Sun / Linux

Open a terminal session and issue the following command:

Sun: `xset m 1`


Linux: `xset m 0`

Linux using the Redhat AS3.0 mouse mode: `xset m 1`

Additional Video Resolution Procedures

If you are running Windows, and wish to use the refresh rates indicated with an asterisk (*) on page 8, do the following:

1. Open Control Panel → Display → Settings → Advanced → Monitor.
2. In the dialog box that comes up, make sure that the *Hide modes that this monitor cannot display* checkbox is unchecked.

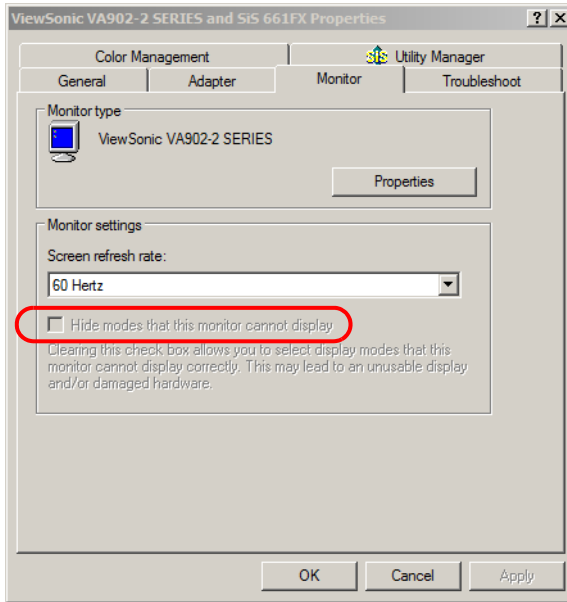


3. Click the arrow at the right of the *Screen refresh rate* listbox, and select the refresh rate you want from the list that appears.

Note: Make sure that your monitor supports the refresh rate you choose – if not, you may seriously damage your monitor.

Trusted Certificates

Overview

When you try to log in to the device from your browser, a Security Alert message appears to inform you that the device's certificate is not trusted, and asks if you want to proceed.

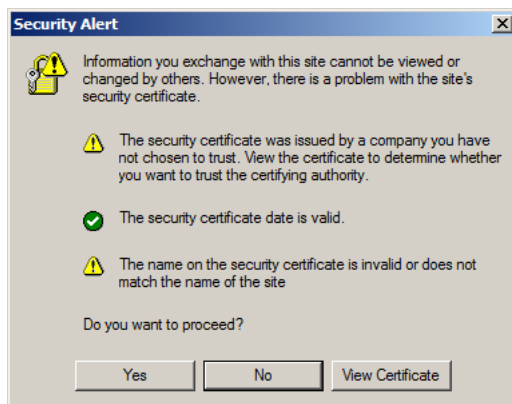


The certificate can be trusted, but the alert is triggered because the certificate's name is not found on Microsoft list of Trusted Authorities. You have two options: 1) you can ignore the warning and click **Yes** to go on; or 2) you can install the certificate and have it be recognized as trusted.

- ♦ If you are working on a computer at another location, accept the certificate for just this session by clicking **Yes**.
- ♦ If you are working at your own computer, install the certificate on your computer (see below for details). After the certificate is installed, it will be recognized as trusted.

Installing the Certificate


To install the certificate, do the following:

1. In the *Security Alert* dialog box, click **View Certificate**. The *Certificate Information* dialog box appears:

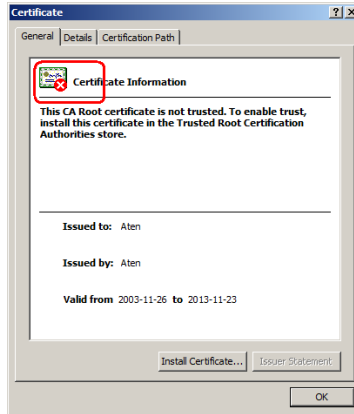

Note: There is a red and white X logo over the certificate to indicate that it is not trusted.

2. Click **Install Certificate**.
3. Follow the Installation Wizard to complete the installation. Unless you have a specific reason to choose otherwise, accept the default options.
4. When the Wizard presents a caution screen:

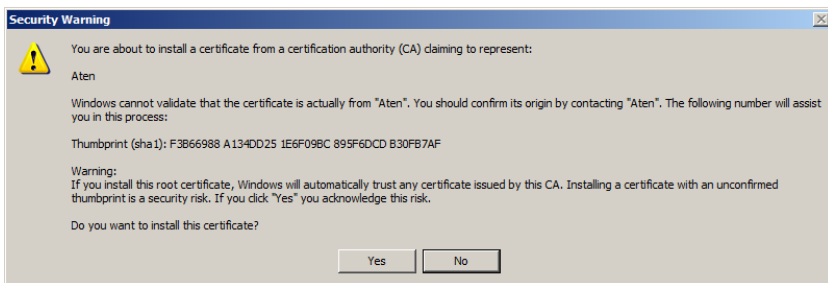


Click **Yes**.


- Next, click **Finish** to complete the installation; then click **OK** to close the dialog box.

Certificate Trusted

The certificate is now trusted:

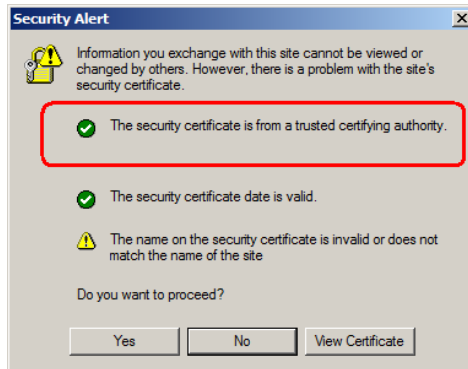


When you click *View Certificate*, you can see that the red and white **X** logo is no longer present – further indication that the certificate is trusted:

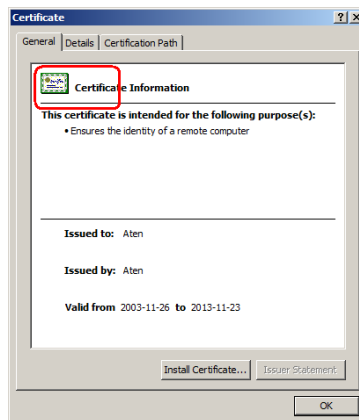

Fan Location and Speed Information

Fan Location

The switch has 6 fans that feed realtime fan speed information to the WinClient / Java Client Device Management page.

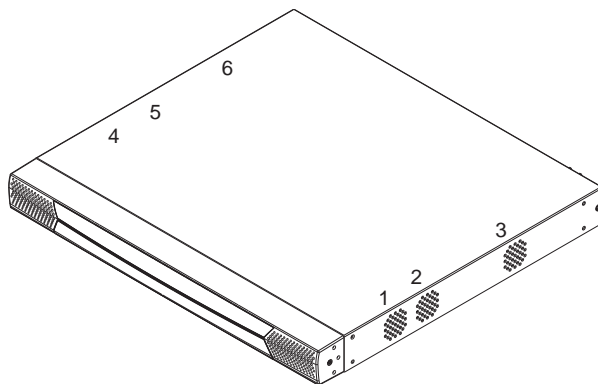

The fan locations in the above image are listed in the Device Information section under *Fan Speed*. See , page 144, for details.


Fan Speed

The fan speed automatically adjusts according to temperature as follows:

- ♦ If any sensor senses that the temperature is greater than 32° C, all the fans are set to spin at half speed.
- ♦ If any sensor senses that the temperature is greater than 45° C, all the fans are set to spin at full speed.
- ♦ When all four sensors sense that the temperature is less than 40° C, all the fans return to half speed.
- ♦ When all four sensors sense that the temperature is less than 30° C, all the fans turn off.

Temperature Sensor Location and Information

The switch has 4 temperature sensors on its mainboard that feed realtime temperature updates to the WinClient / Java Client Device Management page.

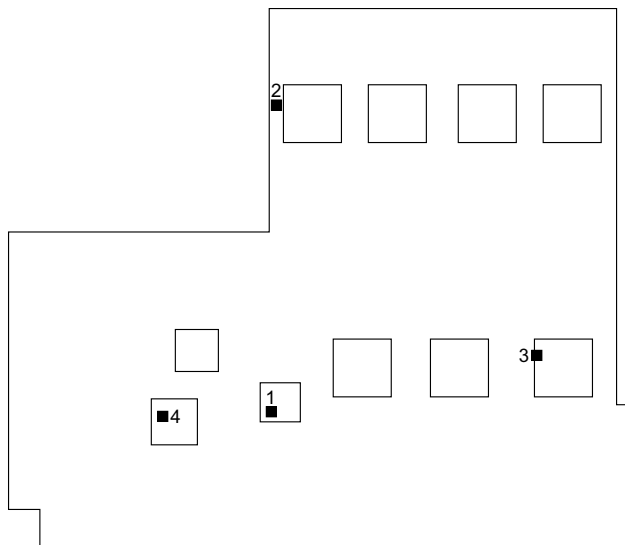

The sensors in the above image are listed in the *Device Information* section under *Temperature*. See , page 144, for details.


Clear Login Information

If you are unable to perform an Administrator login (because the Username and Password information has become corrupted or you have forgotten it, for example) you can clear the login information with the following procedure.

Note: Performing this procedure also returns all settings to their defaults.

To clear the login information (and return all settings to their defaults), do the following:

1. Power off the switch and remove its housing.
2. Use a jumper cap to short the mainboard jumper labeled **J23**.

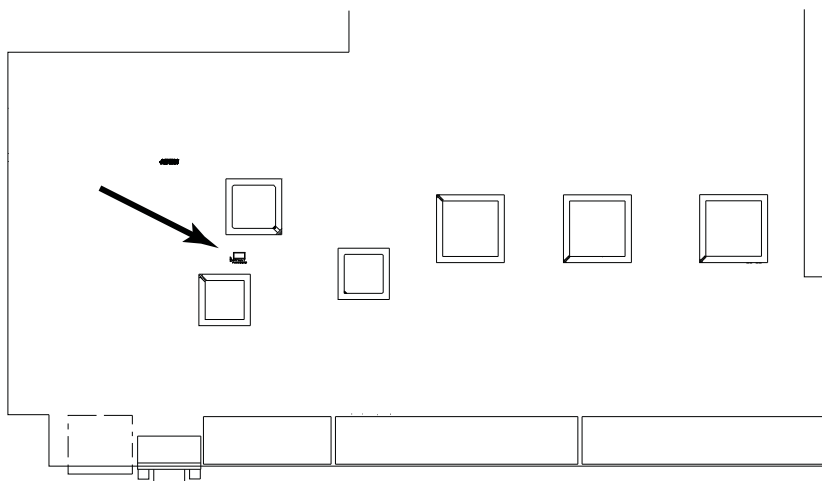

3. Power on the switch.
4. When the Link and 10/100Mbps LEDs flash, power off the switch.
5. Remove the jumper cap from J23.
6. Close the housing and start the switch.

After powering on the unit, you can use the default Super Administrator Username and Password (see *First Time Setup*, page 31), to log in.

Factory Default Settings

The default settings are as follows:

Setting	Default
Language	English
OSD Hotkey	[Scroll Lock] [Scroll Lock]
Port ID Display	Port Number + Name
Port ID Display Duration	3 Seconds
Scan/Skip Mode	All
Scan Duration	5 Seconds
Screen Blanker	0 Minutes (disabled)
Beeper	On
Viewer	Auto Detect
Welcome Message	Hide
Accessible Ports	♦ Super Administrators – Full for all ports ♦ All other users – None for all ports.

Serial Adapter Pin Assignments

SA0142: RJ45-F to DB9-M (Black Connector) DTE to DCE

switch (RJ45)	Pins (8)		Modem/Device (DB9)
RTS	1	↔	7
DTR	2	↔	4
TXD	3	↔	3
CTS	4	↔	8
GND	5	↔	5
RXD	6	↔	2
DCD	7	↔	1
DSR	8	↔	6
9 NC not used			

Supported KVM Switches

The following is a list of fully supported KVM switches that can be used in a cascaded installation:

- ♦ KH88
- ♦ KH98
- ♦ KH1508
- ♦ KH1516
- ♦ CS9134
- ♦ CS9138

Note: The installation cannot be cascaded beyond the second level.

Virtual Media Support

WinClient ActiveX Viewer / WinClient AP

- ♦ IDE CDROM/DVD-ROM Drives – Read Only
- ♦ IDE Hard Drives – Read Only
- ♦ USB CDROM/DVD-ROM Drives – Read Only
- ♦ USB Hard Drives – Read/Write*
- ♦ USB Flash Drives – Read/Write*
- ♦ USB Floppy Drives – Read/Write

* These drives can be mounted either as a Drive or as a Removable Disk (see *Virtual Media*, page 69). Removable disks allow the user to boot the remote server if the disk contains a bootable OS. In addition, if the disk contains more than one partition, the remote server can access all the partitions.

- ♦ ISO Files – Read Only
- ♦ Folders – Read/Write

Java Applet Viewer / Java Client AP

- ♦ ISO Files – Read Only
- ♦ Folders – Read/Write

Limited Warranty

ALTUSEN warrants this product against defects in material or workmanship for a period of one (1) year from the date of purchase. If this product proves to be defective, contact ALTUSEN's support department for repair or replacement of your unit. ALTUSEN will not issue a refund. Return requests can not be processed without the original proof of purchase.

When returning the product, you must ship the product in its original packaging or packaging that gives an equal degree of protection. Include your proof of purchase in the packaging and the RMA number clearly marked on the outside of the package.

This warranty becomes invalid if the factory-supplied serial number has been removed or altered on the product.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence or modification of any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than ALTUSEN. This warranty does not cover products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL ALTUSEN'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT. FURTHER, ALTUSEN SHALL NOT BE RESPONSIBLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, ITS ACCOMPANYING SOFTWARE, OR ITS DOCUMENTATION. ALTUSEN SHALL NOT IN ANY WAY BE RESPONSIBLE FOR, WITHOUT LIMITATION, LOSS OF DATA, LOSS OF PROFITS, DOWNTIME, GOODWILL, DAMAGE OR REPLACEMENT OF EQUIPMENT OR PROPERTY, AND ANY EXPENSES FROM RECOVERY, PROGRAMMING, AND REPRODUCTION OF ANY PROGRAM OR DATA.

ALTUSEN makes no warranty or representation, expressed, implied, or statutory with respect to its products, contents or use of this documentation and all accompanying software, and specifically disclaims its quality, performance, merchantability, or fitness for any particular purpose.

ALTUSEN reserves the right to revise or update its product, software or documentation without obligation to notify any individual or entity of such revisions, or update.

For details about extended warranties, please contact one of our dedicated value added resellers.

This Page Intentionally Left Blank

A

- Access, 101
- Access Ports, 125
- Adapter Attributes, 140
- Adapter cable
 - firmware upgrade recovery, 150
- Adapter Cables
 - upgrading, 149
- Adapter connection diagram, 25
- Adapter ID Function, 28
- Adding Users, 107
- Additional Video Resolution Procedures, 208
- Administration Page
 - Date/Time, 142
- ANMS, 128
- Array, 89
- Authentication
 - external, 128
- Auto Scanning, 158
 - Exiting, 159
 - Invoking, 158
 - Pausing, 159
 - Scan Interval, 158
- Auto scanning, 89

B

- Backup/Restore, 151
- Beeps, 123

C

- Cat5 cable length, 87
- CC Management, 132
- Clear Login Information, 214
- Clear Port Names, 140
- Components, 10
 - Front View, 10

Rear View, 12

Control Panel, 48

Java Client AP, 79

WinClient, 51

Creating Groups, 111

Customization page, 138

D

- Date/Time Settings, 142
 - Synchronize, 47
- Deleting groups, 113
- Deleting user accounts, 110
- Device Assignment, 118
- Device Management, 121
 - Customization, 138
 - General, 122
 - Network, 124
 - Security, 134
- Device Permissions
 - assigning, 118, 120
- DNS Server, 127
- DynaSync, 75

E

- Event Panel, 172
- External authentication, 128

F

- Factory Default Settings, 215
- Fan Location and Speed, 212
- Fan Warning Message, 123
- Favorites, 94
- Features
 - All models, 4
 - V-Series exclusive, 6
- Filter, 89, 99
- Filtering

- IP, 135

- MAC, 135

- Firmware

- upgrading, 145, 148

- Firmware Upgrade

- Adapters, 149

- Firmware upgrade recovery, 150

- Firmware, Upgrading, 47

- Front View, 10

G

- General page, 122

- Groups

- assigning users, 114, 116

- creating, 111

- Deleting, 113

- Managing, 111

- Modifying, 113

- removing users, 115, 117

H

- Hardware Setup, 15

- Hot Plugging, 28

I

- Installation

- Single Station, 21

- Two Stage, 26

- Introduction, 1

- Invalid login, 37

- IP

- Address determination, 200

- IP Address, 127

- IP Filtering, 135

- IP Installer, 129, 200

J

- Java Client AP

- GUI, 48

- Logging in, 42

K

- KA7140 Setup and Operation, 205

- Keyboard

- On-Screen, 73

- KVM Adapter Cables

- upgrading, 149

L

- LDAP / LDAPS, 132

- LDAP Server Configuration, 173

- List Panel, 172

- Local Console

- GUI, 50

- Main Page, 50

- Lock Key LEDs, 54

- Log, 98

- filter, 99

- Log Server, 199

- Configure, 167

- Event Panel, 172

- Events, 168

- Installation, 165

- List Panel, 172

- Main Screen, 171

- Menu Bar, 167

- Options, 170

- Starting Up, 166

- Log server, 130, 165

- Logging in

- Browser, 38

- Java Client AP, 42

- Local console, 37

- WinClient AP, 39

- Login

- Invalid login, 37

- Login Failures, 138

- Login String, 136

M

- MAC Filtering, 135
- Managing Groups, 111
- Managing Users, 107
- Message Board
 - Windows Client, 66
- Modem operation, 203, 213
- Modifying groups, 113
- Modifying user accounts, 110
- Module connection diagram, 25
- Mouse
 - DynaSync Mode, 75
 - Synchronization, 75
- Mouse pointer type, 74
- Mouse Problems, 193
- Mouse synchronization
 - Windows, 206

N

- Network page, 124
- Network Time, 143
- Network Transfer Rate, 127
- NIC Settings, 126

O

- Online
 - Registration, iii
- On-Screen Keyboard, 73
- OOBC, 133
- Overview, 1

P

- Panel array, 89
- Panel Array Mode, 161, 199
- Panel Array toolbar, 162
- Port
 - Naming, 88
 - Properties, 86
- Port Access, 81
 - Access, 101

- filter log, 99
 - log page, 98
 - Sessions, 100
- Port Access Page
 - Recalling, 160
- Port Forwarding, 202
- Port ID Numbering, 29
- Port names
 - clearing, 140
- Port Operation, 155
- Port Selection, 29
 - Sidebar, 83
 - Tree, 83
- Port Utilities, 84
- Power Supply Detection, 123
- Powering Off and Restarting, 28
- PPP, 203, 213

R

- Rack Mounting
 - Front, 17
 - Rear, 19
- RADIUS
 - settings, 131
- Rear View, 12
- Redundant NIC, 126
- refresh screen, 64
- Requirements
 - Operating Systems, 9
 - OS Support, 9
- RoHS, ii

S

- Safety Instructions
 - General, 183
 - Rack Mounting, 185
- Scan, 89
- screen, refresh, 64
- Security
 - Login string, 136

- Security page, 134
- Serial Adapter pin assignments, 215
- Sessions, 100
- Single Station Installation, 21
- SJ/T 11364-2006, ii
- Skip Mode, 159
- Stacking, 16
- Supported KVM Switches, 216
- Synchronization
 - mouse, 75
- System Requirements, 7
 - KVM Adapter Cables, 8

T

- Technical Support, 186
- Telephone support, iii
- Time settings, 142
- Toolbar
 - Hotkey port switching, 158
 - Icons, 157
- Troubleshooting
 - General Operation, 191
 - Java Applet, 197
 - Log Server, 199
 - Mac Systems, 196
 - Mouse problems, 193
 - Panel Array Mode, 199
 - Sun Systems, 198
 - Virtual Media, 195
 - Web Browser, 195
 - WinClient ActiveX Viewer, 196
 - WinClient AP, 196
- Trusted Certificates, 209
- Two IP Addresses, 126
- Two Stage Installation, 26

U

- User Interface, 45
 - GUI, 48

- Local Console, 50
- Tab bar, 47
- Web Browser Main Page, 45
- User interface
 - Page components, 46
- User Management, 105
- User Notice, iii
- Users
 - Adding, 107
 - assigning to groups, 114, 116
 - Deleting, 110
 - Managing, 107
 - Modifying, 110
 - removing from groups, 115, 117
- Users and Groups, 114

V

- Video requirements, 8
- Video Resolution
 - additional procedures, 208
- Video Settings, 63
- Virtual Media
 - Troubleshooting, 195
 - WinClient, 69
- Virtual Media Support, 216

W

- Warning beeps, 123
- Web Browser Main Page, 45
- WinClient AP
 - GUI, 48
 - Logging in, 39
- Windows AP
 - Connection Screen, 40
 - File Menu, 41
- Windows Client
 - Auto Scanning, 158
 - Message Board, 66
- Working Mode, 139