At your side. **USER'S GUIDE** MFC-5440CN MFC-5840CN





If you need to call Customer Service
Please complete the following information for future reference:
Model Number: MFC-5440CN and MFC-5840CN (Circle your model number)
Serial Number:*
Date of Purchase:
Place of Purchase:
* The serial number is on the back of the unit. Retain this User's Guide with your sales receipt as a permanent record of your purchase, in the event of theft, fire or warranty service.

Register your product on-line at

http://www.brother.com/registration

By registering your product with Brother, you will be recorded as the original owner of the product. THIS EQUIPMENT IS DESIGNED TO WORK WITH A TWO WIRE ANALOGUE PSTN LINE FITTED WITH THE APPROPRIATE CONNECTOR.

APPROVAL INFORMATION

Brother advises that this product may not function correctly in a country other than where it was originally purchased, and does not offer any warranty in the event that this product is used on public telecommunication lines in another country.

Compilation and Publication Notice

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.


The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

Safety precautions

To use the MFC safely

Please refer to these instructions for later reference and before attempting any maintenance.

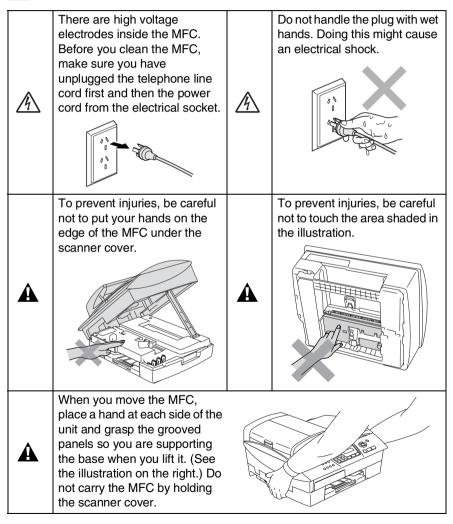

Most of the illustrations in this User's Guide show the MFC-5440CN.



- Use caution when installing or modifying telephone lines. Never touch telephone wires or terminals that are not insulated unless the telephone line has been disconnected at the wall socket. Never install telephone wiring during a lightning storm. Never install a telephone wall socket in a wet location.
- This product must be installed near an electrical socket that is easily accessible. In case of emergencies, you must disconnect the power cord from the electrical socket in order to shut off power completely.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:



1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or washing machine, in a wet basement or near a swimming pool.

2. Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

3. Do not use this product to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

Choosing a location

Place your MFC on a flat, stable surface that is free of vibration and shocks, such as a desk. Put the MFC near a telephone socket and a standard, grounded electrical socket. Choose a location where the temperature remains between 10° and 35° C. To make sure the ADF can feed the maximum of 35 pages, keep the temperature between 20° C and 30° C.

Caution

- Avoid placing your MFC in a high-traffic area.
- Avoid placing your MFC on the carpet.
- Do not place near heaters, air conditioners, water, chemicals, or refrigerators.
- Do not expose the MFC to direct sunlight, excessive heat, moisture, or dust.
- Do not connect your MFC to electrical sockets controlled by wall switches or automatic timers.
- Disruption of power can wipe out information in the MFC's memory.
- Do not connect your MFC to electrical sockets on the same circuit as large appliances or other equipment that might disrupt the power supply.
- Avoid interference sources, such as speakers or the base units of cordless phones.







Quick Reference Guide

Sending faxes

Automatic Transmission

- 1 If it is not illuminated in green, press (Fax).
- 2 Load your document.
- **3** Enter the fax number using Speed-Dial, Search or the dial pad.
- 4 Press Mono Start or Colour Start.

Storing numbers

Storing Speed-Dial numbers

- **1** Press **Menu/Set**, **2**, **3**, **1**.
- **2** Using the dial pad, enter a two-digit Speed-Dial location number, and then press **Menu/Set**.
- 3 Enter a number (up to 20 digits), and then press **Menu/Set**.
- 4 Enter a name up to 15 characters (or leave it blank), and then press Menu/Set.
- 5 Press Stop/Exit.

Dialling operations

Speed-Dialling

- 1 If it is not illuminated in green, press (Fax).
- 2 Load your document.
- **3** Press **Search/Speed Dial**, press **#**, and then press the two-digit Speed-Dial number.
- 4 Press Mono Start or Colour Start.

Using Search

- 1 If it is not illuminated in green, press (Fax).
- 2 Load your document.
- **3** Press **Search/Speed Dial**, and then enter the first letter of the name you're looking for.
- 4 Press ◄ or ► to search the memory.
- 5 Press Mono Start or Colour Start.

Making copies

- 1 Press (Copy) to illuminate it in green.
- **2** Load your document.
- 3 Press Mono Start or Colour Start.

Table of Contents

Introduction	1-1
Using this Guide	1-1
Finding information	
Symbols used in this Guide	
Control panel overview	
Turning the MFC to Power Save condition	
Power Save Setting	
Load documents	
Using the automatic document feeder (ADF)	1-7
Recommended environment	1-7
Using the scanner glass	1-9
About paper	1-10
Recommended Paper	
Handling and using special paper	1-11
Paper type and size for each operation	1-12
Paper weight, thickness and capacity	1-13
Paper capacity of the output paper tray	1-13
Printable area	
How to load paper, envelopes and post cards	
To load paper or other media	1-15
To load paper in the paper tray#2	
(MFC-5840CN only)	
To load envelopes	
To load post cards	
About fax machines	
Fax tones and handshake	
ECM (Error Correction Mode)	1-23
Getting started	
Initial Setup	
Setting the Date and Time	2-1
Setting Tone or Pulse dialling mode	
(Not available in New Zealand)	
Setting the Station ID	
Setting the Phone Line Type	
PABX and TRANSFER	
General Setup	
Setting the Mode Timer	
Setting the Paper Type	
Setting the Paper Size	
Setting the Ring Volume	2-6

Setting the Beeper Volume	2-6
Setting the Speaker Volume	2-7
Setting the LCD Contrast	
Setting the Tray Use for Copy mode	
(MFC-5840CN only)	2-8
Setting the Tray Use for Fax mode	
(MFC-5840CN only)	2-9
, , , , , , , , , , , , , , , , , , ,	
tup Send	3-1
How to enter Fax mode	3-1
How to dial	3-1
Manual dialling	3-1
Speed-Dialling	
Search	3-2
Fax Redial	
How to Fax (B&W and Colour)	3-3
Colour fax transmission	3-3
Faxing from the ADF	3-3
Faxing from the scanner glass	3-4
Automatic transmission	3-5
Manual transmission	3-5
Basic sending operations	3-6
Sending faxes using multiple settings	3-6
Contrast	3-6
Fax Resolution	
Dual Access (Not available for colour faxes)	
Real Time Transmission	3-9
Checking job status	3-10
Cancelling a fax in progress	3-10
Cancelling a scheduled job	
Advanced sending operations	
Broadcasting (Not available for colour faxes)	
Overseas Mode	
Delayed Fax (Not available for colour faxes)	3-13
Delayed Batch Transmission	
(Not available for colour faxes)	3-14
Setup for Polled Transmit (Standard)	
(Not available for colour faxes)	3-14
Setup for Polled Transmit with Secure Code	
(Not available for colour faxes)	3-15

	TX Lock (Key Lock for some countries)	
	Setting up the password	
	Changing the TX Lock password	3-17
	Turning TX Lock on	3-17
	Turning TX Lock off	3-18
	Faxing letter size documents from the scanner	
	glass	3-18
	gidos	
4	Setup Receive	4-1
	Basic receiving operations	4-1
	Choosing the Receive Mode	4-1
	To select or change your Receive Mode	
	Setting the Ring Delay	
	Setting the F/T Ring Time (Fax/Tel mode only)	1-3
	Fax Detect	
	Printing a reduced incoming fax (Auto Reduction).	
	Printing a fax from the memory	4-5
	Reception into memory	
	(Not available for colour fax reception)	
	Polling	
	Secure Polling	
	Setup for Polling Receive (Standard)	
	Setup for Polling Receive with Secure Code	
	Setup Delayed Polling Receive	4-8
	Sequential Polling	4-9
5	Ordele Distances have and disting a setting a	- 4
J	Quick-Dial numbers and dialling options	
	Storing numbers for easy dialling	
	Storing Speed-Dial numbers	
	Changing Speed-Dial numbers	
	Setting up Groups for Broadcasting	
	Dialling options	
	Access codes and credit card numbers	5-5
	Pause	5-5
	Tone or Pulse (Not available in New Zealand)	5-6
6	Remote Fax Options (Not available for colour faxes)	6-1
	Setting up Fax Forwarding	
	Setting Fax Storage	
	Setting PC Fax Receive	
	Turning off Remote Fax Options	
	Setting your Remote Access Code	6-4

	Remote Retrieval	
	Using your Remote Access Code	6-5
	Remote commands	
	Retrieving fax messages	6-7
	Changing your Fax Forwarding number	
_		
	Printing reports	7-1
	Fax settings and activity	7-1
	Customizing the Transmission Verification Report.	7-1
	Setting the Journal Period	7-2
	Printing reports	7-3
	How to print a report	7-3
8	Making copies	0 1
U		
	Using the MFC as a copier Enter Copy mode	
	Making a single copy	
	Making multiple copies	
	Stop copying	
	Using the temporary Copy keys	
	Increasing copy speed or quality	
	Enlarging or reducing the image copied	
	Setting the paper type	05
	(MFC-5440CN only)	8-6
	Using the Tray Select key	00
	(MFC-5840CN only)	8-7
	Changing the temporary copy settings	
	Setting paper type	
	(MFC-5840CN only)	8-9
	Setting paper size	
	Adjusting brightness	
	Adjusting contrast	
	Sorting copies using the ADF	
	Making N in 1 copies or a poster	-
	(Page Layout)	.8-11
	Changing the default copy settings	
	Increasing copy speed or quality	
	Adjusting brightness	
	Adjusting contrast	
	Adjusting colour saturation	
	Legal limitations	

9

Walk-Up PhotoCapture Center™ (MFC-5840CN onIv)

	(MFC-5840CN only)	
	Introduction	
	PhotoCapture Center [™] requirements	9-2
	Getting started	
	Printing the Index (Thumbnails)	
	Printing images	
	DPOF printing	9-8
	Changing the default settings	
	Increasing print speed or quality	
	Setting the paper & size	
	Adjusting brightness	9-10
	Adjusting contrast	
	Colour enhancement	
	Cropping	
	Borderless	
	Understanding the Error Messages	9-13
	Using PhotoCapture Center [™] from your PC	
	Using PhotoCapture Center [™] for scanning	
	documents	9-14
10	Important information	
	Important Information for Australia	
	In Dortant Information for Australia	
	•	
	IMPORTANT-For Your Safety.	10-1
	IMPORTANT-For Your Safety Disconnect device	10-1 10-1
	IMPORTANT-For Your Safety Disconnect device LAN connection	10-1 10-1
	IMPORTANT-For Your Safety. Disconnect device LAN connection International ENERGY STAR [®] Compliance	10-1 10-1 10-1
	IMPORTANT-For Your Safety. Disconnect device LAN connection International ENERGY STAR [®] Compliance Statement	10-1 10-1 10-1 10-2
	IMPORTANT-For Your Safety. Disconnect device LAN connection International ENERGY STAR [®] Compliance Statement Important safety instructions.	10-1 10-1 10-1 10-2 10-2
	IMPORTANT-For Your Safety. Disconnect device LAN connection International ENERGY STAR® Compliance Statement Important safety instructions Important Information for New Zealand	
	IMPORTANT-For Your Safety. Disconnect device LAN connection International ENERGY STAR [®] Compliance Statement Important safety instructions.	
	IMPORTANT-For Your Safety. Disconnect device LAN connection International ENERGY STAR® Compliance Statement Important safety instructions. Important Information for New Zealand Important Safety Instructions	
	IMPORTANT-For Your Safety. Disconnect device LAN connection International ENERGY STAR [®] Compliance Statement Important safety instructions. Important Information for New Zealand Important Safety Instructions IMPORTANT-For Your Safety Disconnect device	
	IMPORTANT-For Your Safety. Disconnect device LAN connection International ENERGY STAR [®] Compliance Statement Important safety instructions. Important Information for New Zealand Important Safety Instructions IMPORTANT-For Your Safety	
	IMPORTANT-For Your Safety. Disconnect device LAN connection International ENERGY STAR® Compliance Statement Important safety instructions. Important Information for New Zealand Important Safety Instructions IMPORTANT-For Your Safety Disconnect device	
	IMPORTANT-For Your Safety. Disconnect device LAN connection International ENERGY STAR® Compliance Statement Important safety instructions. Important Information for New Zealand Important Safety Instructions. IMPORTANT-For Your Safety Disconnect device IMPORTANT NOTICE LAN connection	
	IMPORTANT-For Your Safety. Disconnect device LAN connection International ENERGY STAR® Compliance Statement Important safety instructions. Important Information for New Zealand Important Safety Instructions. IMPORTANT-For Your Safety Disconnect device IMPORTANT NOTICE LAN connection Important Information for Some Countries	

	Troubleshooting and routine maintenance	11-1
	Troubleshooting	11-1
	Error messages	11-1
	Document jams	11-5
	Document is jammed in the top of the ADF unit	11-5
	Document is jammed inside the ADF unit.	11-5
	Printer jam or paper jam	
	Paper is jammed inside the paper tray	11-6
	Paper is jammed inside the MFC	
	If you are having difficulty with your MFC	
	Compatibility1	
	How to improve print quality1	
	Cleaning the print head1	
	Checking the print quality1	
	Checking the printing alignment1	
	Checking the ink volume1	
	Packing and shipping the MFC1	1-20
	Routine maintenance1	
	Cleaning the scanner1	
	Cleaning the MFC printer platen1	
	Replacing the ink cartridges1	
_	Replacing the link califinges	1-20
\boldsymbol{A}	Appendix A	۸_1
Z A	Telephone Service for Australia	
	Telstra [®] FaxStream [®] Duet [®] (Distinctive Ringing)	
	What is the Advantage of using Telstra®	. ^- i
	EavStroam® Duct® Eurotion?	۸ 1
	FaxStream [®] Duet [®] Function?	. A-1
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work?	. A-2
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON	. A-2 . A-3
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification)	. A-2 . A-3 . A-3
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID	. A-2 . A-3 . A-3 . A-3
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work?	. A-2 . A-3 . A-3 . A-3 . A-4
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work? The Caller ID Appears on the Display When You	. A-2 . A-3 . A-3 . A-3 . A-4
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work? The Caller ID Appears on the Display When You Telephone Rings	. A-2 . A-3 . A-3 . A-3 . A-4 . A-4
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work? The Caller ID Appears on the Display When You Telephone Rings The Caller ID is Stored in Your MFC Memory	. A-2 . A-3 . A-3 . A-3 . A-4 . A-4 . A-4
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work? The Caller ID Appears on the Display When You Telephone Rings The Caller ID is Stored in Your MFC Memory Viewing Caller ID List	. A-2 . A-3 . A-3 . A-3 . A-4 . A-4 . A-4 . A-4 . A-5
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work? The Caller ID Appears on the Display When You Telephone Rings The Caller ID is Stored in Your MFC Memory Viewing Caller ID List Printing Caller ID List	. A-2 . A-3 . A-3 . A-3 . A-4 . A-4 . A-4 . A-5 . A-5
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work? The Caller ID Appears on the Display When You Telephone Rings The Caller ID is Stored in Your MFC Memory Viewing Caller ID List Printing Caller ID List Telephone Service for New Zealand	. A-2 . A-3 . A-3 . A-3 . A-4 . A-4 . A-4 . A-4 . A-5 . A-5 . A-6
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work? The Caller ID Appears on the Display When You Telephone Rings The Caller ID is Stored in Your MFC Memory Viewing Caller ID List Printing Caller ID List Telephone Service for New Zealand FaxAbility	. A-2 . A-3 . A-3 . A-3 . A-4 . A-4 . A-4 . A-5 . A-5 . A-6 . A-6
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work? The Caller ID Appears on the Display When You Telephone Rings The Caller ID is Stored in Your MFC Memory Viewing Caller ID List Printing Caller ID List Telephone Service for New Zealand FaxAbility How Will the Fax Machine Treat All Other Numbers?	. A-2 . A-3 . A-3 . A-3 . A-4 . A-4 . A-4 . A-5 . A-5 . A-6 . A-6
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work? The Caller ID Appears on the Display When You Telephone Rings The Caller ID is Stored in Your MFC Memory Viewing Caller ID List Printing Caller ID List Telephone Service for New Zealand FaxAbility How Will the Fax Machine Treat All Other Numbers? What is the Advantage of Using the FaxAbility	. A-2 . A-3 . A-3 . A-3 . A-4 . A-4 . A-4 . A-4 . A-5 . A-5 . A-6 . A-6 . A-6
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work? The Caller ID Appears on the Display When You Telephone Rings The Caller ID is Stored in Your MFC Memory Viewing Caller ID List Printing Caller ID List Telephone Service for New Zealand FaxAbility How Will the Fax Machine Treat All Other Numbers? What is the Advantage of Using the FaxAbility Function?	. A-2 . A-3 . A-3 . A-3 . A-4 . A-4 . A-4 . A-4 . A-5 . A-5 . A-6 . A-6 . A-6 . A-6
	FaxStream [®] Duet [®] Function? How does Telstra [®] FaxStream [®] Duet [®] Work? Set the Distinctive Ringing to ON Caller ID (Caller IDentification) Advantages of Caller ID How Does the Caller ID Work? The Caller ID Appears on the Display When You Telephone Rings The Caller ID is Stored in Your MFC Memory Viewing Caller ID List Printing Caller ID List Telephone Service for New Zealand FaxAbility How Will the Fax Machine Treat All Other Numbers? What is the Advantage of Using the FaxAbility	. A-2 . A-3 . A-3 . A-3 . A-4 . A-4 . A-4 . A-4 . A-5 . A-5 . A-6 . A-6 . A-6 . A-6

Caller ID (Caller IDentification)	A-9
Advantages of Caller ID	A-9
How Does the Caller ID Work?	
The Caller ID Appears on the Display When	
Telephone Rings	A-9
Viewing Caller ID List	
Printing Caller ID List	
Telephone Service for Some Countries	
Distinctive Ringing	
(For Singapore and Hong Kong)	A-11
Setting the Distinctive Ringing	A-11
Caller ID (For Singapore and Hong Kong)	A-12
Viewing Caller ID List	A-13
Printing Caller ID List	A-13
Advanced receiving operations	A-14
Operation from extension telephones	A-14
Fax/Tel mode	A-14
Fax/Tel mode in the power save condition	A-14
Using a cordless external handset	A-15
Changing the remote codes	A-15
Connecting an external device to your MFC	
Connecting an external telephone	A-16
Connecting an external telephone answering de	
(TAD)	
Sequence	A-17
Connections	A-19
Recording outgoing message (OGM) on an	
external TAD	A-19
Multi-line connections (PBX)	
(For Australia and New Zealand only)	A-20
If you are installing the MFC to work with a	
PBX	
Custom features on your phone line	A-20
Appendix B	P_1
On-screen programming	
Menu table	
Memory storage	
Navigation keys	
Entering Text	
Inserting spaces	
Making corrections	
Repeating letters	
Special characters and symbols	
	13

Glossary	G-1
Specifications Product description General Print media. Copy	
PhotoCapture Center (MFC-5840CN only) Fax Scanner Printer	S-6 S-7
Interfaces Computer requirements Consumable items Network (LAN)	S-8 S-9 S-10
Optional External Wireless Print/Scan Server (NC-2200w)	S-12
Index Remote Retrieval Access card	



Using this Guide

Thank you for buying a Brother Multi-Function Center (MFC). Your MFC is simple to use, with LCD screen instructions to guide you through programming it. You can make the most of your MFC by reading through this Guide.

Finding information

All the chapter headings and subheadings are listed in the Table of Contents. You will be able to find information about a specific feature or operation by checking the Index at the back of this Guide.

Symbols used in this Guide

Throughout this Guide you will see special symbols alerting you to important warnings, notes and actions. To make things clearer and to help you press the correct keys, we used special fonts and added some of the messages that will appear in the LCD.

Bold	Bold typeface identifies specific keys on the MFC control panel.
Italics	Italicized typeface emphasizes an important point or refers you to a related topic.
Courier New	Courier New type face identifies the messages on the LCD of the MFC.



Warnings inform you what to do to avoid possible personal injury.



Cautions specify procedures you must follow or avoid to prevent possible damage to the MFC.



Notes tell you how you should respond to a situation that may arise or give tips about how the current operation works with other features.



Improper Setup alerts you to devices and operations that are not compatible with the MFC.

Control panel overview

MFC-5440CN





Fax and Telephone keys:

Hook

Press before dialling if you want to make sure a fax machine will answer, and then press **Mono Start** or **Colour Start**.

Redial/Pause

Redials the last number you called. It also inserts a pause in quick dial numbers.

Fax Resolution

Sets the resolution when you send a fax.

Copy keys (Temporary settings):

Options

You can quickly and easily select temporary settings for copying.

Quality

Use this key to temporarily change the quality for copying.

Enlarge/Reduce

Lets you enlarge or reduce copies depending on the ratio you select.

Paper Type (MFC-5440CN only)

You can select which type of paper you want to use for the next copy.

Tray Select (MFC-5840CN only)

You can select which tray you want to use for the next copy.

Oial Pad

Use these keys to dial telephone or fax numbers and as a keyboard for entering information into the MFC.

The **#** key lets you temporarily switch the dialling mode during a telephone call from Pulse to Tone.

Mode keys:



Lets you access Fax mode.



Lets you access Scan mode.



Lets you access Copy mode.

Stop/Exit

6

6

7



Stop/Exit

Stops an operation or exits from the menu.

Colour Start

Colour Start

Lets you start sending faxes or make copies in full colour.

Also lets you start a scanning operation (in colour or black, depending on the scanning setting on your PC).

Mono Start

Mono Start

Lets you start sending faxes or make copies in black and white.

Also lets you start a scanning operation (in colour or black, depending on the scanning setting on your PC).

8 Power Save

You can turn the MFC to power save condition.

Navigation keys:

Menu/Set

The same key is used for Menu and Set operations.

Lets you access the Menu to program and store your settings in the MFC.

() ()

When using the one-way speaker or during ringing in fax mode, you can press these keys to adjust the volume.

▲ Search/Speed Dial

Lets you look up numbers that are stored in the dialling memory. It also lets you dial stored numbers by pressing # and a two-digit number.

◀

Press to scroll backward to a menu selection.

▲ or ▼

Press to scroll through the menus and options.

Liquid Crystal Display (LCD)

Displays messages on the screen to help you set up and use your MFC.

Print keys:

Job Cancel (MFC-5440CN only)

Cancels the current print job and clear data from the printer memory.

Reports (MFC-5440CN only)

Lets you print lists of information about your MFC.

Ink Management

Lets you clean the print head, check the print quality, and check the available ink volume.

Photo keys: (MFC-5840CN only)

PhotoCapture

Lets you access the PhotoCapture Center[™] mode.

Print Index

You can quickly and easily print the index with thumbnail images from your media card.

Turning the MFC to Power Save condition

When the MFC is idle, you can turn it to Power Save condition by pressing the Power Save key. In Power Save mode, the MFC will receive telephone calls as normal. For further information on receiving faxes in the power save condition, please see the table on page 1-6. The delayed faxes that have been set up will be sent. You can even retrieve faxes using Remote Retrieval if you are away from your MFC. If you want to do other operations, you must turn the MFC back on.

Turning the MFC to Power Save condition

Press and hold down the **Power Save** key until the LCD shows:

The LCD light will go off.

Turning the MFC to Power Save condition off

Press and hold down the **Power Save** key until the LCD shows:

The LCD will show the date and time (Fax mode).

Even if you have turned the MFC off, it will periodically clean the print head to preserve print quality.

If you unplug the AC power cord, no MFC operations will be available.

You can turn the MFC Off by customizing the **Power Save** key as shown next page. In this Off mode, no MFC operation will be available. (See *Power Save Setting* on page 1-6.)

The external telephone or TAD is always available.

Please Wait

Shutting Down

Power Save Setting

You can customize the machine's **Power Save** key. The default mode is Fax Receive:On, so your machine can receive faxes or calls even when the machine is in Power Save mode. If you do not want your machine to receive faxes or calls, turn this setting to Fax Receive:Off. (See *Turning the MFC to Power Save condition* on page 1-5.)

- 1 Press Menu/Set, 1, 5.
- **2** Press ▲ or ▼ to select Off (or On).
- 3 Press Menu/Set.
- 4 Press Stop/Exit.

On/Off Setting	Receive Mode	Available Operations
Fax Receive:On (default)	Fax Only External TAD	Fax Receive, Fax Detect, Delayed Fax, Remote Fax Option, Remote Retrieval:
		You cannot receive a fax with Mono Start or Colour Start.
		Delayed Fax and Remote Fax Option should be set before you switch off the MFC.
	Manual	Delayed Fax, Fax Detect:
	Fax/Tel*	You cannot receive a fax with Mono Start or Colour Start.
		You cannot receive a fax automatically even if you have set the receive mode to Fax/Tel.
		Delayed Fax should be set before you switch off MFC.
Fax Receive:Off	—	No MFC operations will be available.

Load documents

You can send a fax, make copies, and scan from the ADF (automatic document feeder) or from the scanner glass.

Using the automatic document feeder (ADF)

The ADF can hold up to 35 pages and feeds each sheet individually. Use standard (80 gsm) paper and always fan the pages before putting them in the ADF.

Recommended environment


Temperature:	20° C - 30° C
Humidity:	50% - 70%
Paper:	80 gsm A4

O DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, pasted or taped.


DO NOT use cardboard, newspaper or fabric. (To fax, copy or scan this kind of document, see *Using the scanner glass* on page 1-9.)

Make sure documents written with ink are completely dry.

Documents to be faxed must be from 14.8 to 21.6 cm wide and 14.8 to 35.6 cm long. 1 Unfold the ADF Document Support.

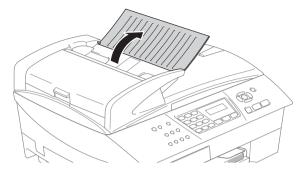

- **2** Fan the pages well and stagger them at an angle. Make sure you put the documents **face up, top edge first** in the ADF until you feel them touch the feed roller.
- **3** Adjust the paper guides to fit the width of your documents.
- **4** Unfold the ADF Document Output Support Flap.

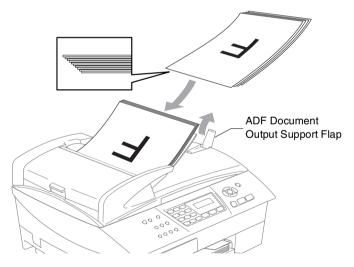


- **DO NOT** pull on the document while it is feeding.
 - To use the ADF, the scanner glass must be empty.

Using the scanner glass

You can use the scanner glass to fax pages of a book or one page at a time. Documents can be up to A4 size (21.6 to 29.7 cm).

To use the scanner glass, the ADF must be empty.

1 Lift the document cover.

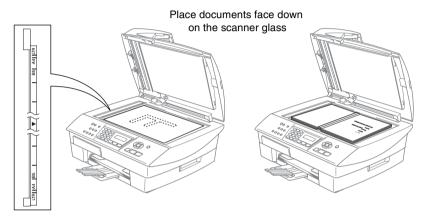

- **2** Using the document guidelines on the left, center the document face down on the scanner glass.
- 3 Close the document cover.
 - If the document is a book or is thick, do not slam the cover or press on it.

About paper

The print quality can be affected by the type of paper you use in the MFC.

To get the best print quality for the settings you've chosen, always set the Paper Type to match the type of paper you load.

You can use plain paper, inkjet paper (coated paper), glossy paper, transparencies and envelopes.

We recommend testing various paper types before purchasing large quantities.

For best results, use the recommended paper.

- When you print on inkjet paper (coated paper), transparencies and glossy paper, be sure to select the proper media in the "Basic" tab of the printer driver or in the Paper Type setting of the menu (**Menu/Set**, **1**, **2**).
 - When you print on Brother glossy paper, load the instruction sheet included with the glossy paper in the paper tray first, and then place the glossy paper on the instruction sheet.
 - When you use transparencies or glossy paper, remove each sheet immediately to prevent smudging or paper jams.
 - Avoid touching the printed surface of the paper immediately after printing; the surface may not be completely dry and may stain your fingers.

Recommended Paper

To get the best print quality, we suggest using Brother paper. (See table below.)

If Brother Paper is not available in your country, we recommend testing various papers before purchasing large quantities.

We recommend using "3M Transparency Film" when you print on transparencies.

Brother Paper

Paper Type	Item	
A4 Plain	BP60PA	
A4 Glossy	BP60GLA	
A4 Inkjet (Photo Matte)	BP60MA	

 
1-10 INTRODUCTION

Handling and using special paper

- Store paper in its original packaging, and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.
- The coated side of glossy paper is shiny. Avoid touching the shiny (coated) side. Load glossy paper with the shiny side facing down.
- Avoid touching either side of transparencies, because they absorb water and perspiration easily, and this may cause decreased output quality. Transparencies designed for laser printers/copiers may stain your next document. Use only transparencies recommended for inkjet printing.

Do not use paper:

that are damaged, curled, wrinkled, or irregularly shaped



- that are extremely shiny or highly textured
- that were previously printed by a printer
- that cannot be arranged uniformly when stacked
- that are made with a short grain

Paper Type	Paper Size			Usage	ge	
			Fax	Copy	PhotoCapture (MFC-5840CN only)	Printer
Cut Paper	Letter	216 x 279 mm (8 1/2" x 11")	Yes*	Yes*	Yes	Yes*
	A4	210 x 297 mm (8.3" x 11.7")	Yes*	Yes*	Yes	Yes*
	Legal	216 x 356 mm (8 1/2" x 14")	Yes*	Yes*	1	Yes*
	Executive	184 x 267 mm (7 1/4" x 10 1/2")				Yes*
	JIS B5	182 x 257 mm (7.2" x 10.1")	ı	ı	1	Yes*
	A5	148 x 210 mm (5.8" x 8.3")	1	Yes	1	Yes
	A6	105 x 148 mm (4.1" x 5.8")	ı	ı	1	Yes
Cards	Photo	102 x 152 mm (4" x 6")		Yes	Yes	Yes
	Photo L	89 x 127 mm (3 1/2" x 5")				Yes
	Photo 2L	127 x 178 mm (5" x 7")	1	ı	Yes	Yes
	Index Card	127 x 203 mm (5" x 8")	ı	ı	1	Yes
	Post Card 1	100 x 148 mm (3.9" x 5.8")	ı	ı	1	Yes
	Post Card 2 (Double)	148 x 200 mm (5.8" x 7.9")	ı			Yes
Envelopes	C5 Envelope	162 x 229 mm (6.4" x 9")		1		Yes
	DL Envelope	110 x 220 mm (4.3" x 8.7")	ı	1	1	Yes
	COM-10	105 x 241 mm (4 1/8" x 9 1/2")	ı		1	Yes
	Monarch	98 x 191 mm (3 7/8" x 7 1/2")	I			Yes
	JE4 Envelope	105 x 235 mm (4.1" x 9.3")				Yes
Transparencies	Letter	216 x 279 mm (8 1/2" x 11")	I	Yes	ı	Yes
	A4	210 x 297 mm (8.3" x 11.7")		Yes		Yes
* Tray#2 is als	* Tray#2 is also available. (MFC-5840CN only)	-5840CN only)				

Paper type and size for each operation

1-12 INTRODUCTION

Paper Type		Weight Thickness		No. of sheets
Cut Paper	Plain Paper	64 to 120 gsm	0.08 to 0.15 mm	100*1*2
		(17 to 32 lb)	(0.003" to 0.006")	250 ^{*3} (Tray#2) (MFC-5840CN only)
	Inkjet Paper	64 to 200 gsm (17 to 53 lb)	0.08 to 0.25 mm (0.003" to 0.01")	20
	Glossy Paper	Up to 220 gsm (Up to 58 lb)	Up to 0.25 mm (Up to 0.01")	20
Cards	Photo Card	Up to 240 gsm (Up to 64 lb)	Up to 0.28 mm (Up to 0.01")	20
	Index Card	Up to 120 gsm (Up to 32 lb)	Up to 0.15 mm (Up to 0.006")	30
	Post Card	Up to 200 gsm (Up to 53 lb)	Up to 0.23 mm (Up to 0.01")	30
Envelopes		75 to 95 gsm (20 to 25 lb)	Up to 0.52 mm (Up to 0.02")	10
Transparencies		-	-	10

Paper weight, thickness and capacity

*1 Up to 50 sheets for Legal size paper (80 gsm).

*² Up to 100 sheets of 80 gsm.

*³ Up to 250 sheets of 80 gsm.


*⁴ 75 to 95 gsm (20 to 25 lb)

Paper capacity of the output paper tray

Tray Transparencies picked up from	Up to 50 sheets of 80 gsm (A4)	
	parencies or glossy paper must be d up from the output paper tray one at a time to avoid smudging.	
	Legal paper	paper cannot be stacked on the output tray.

Printable area

The printable area depends on the settings in the application you are using. The figures below show the unprintable areas on cut sheet paper and envelopes.

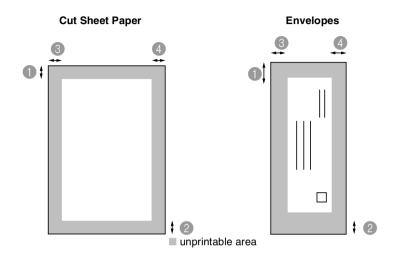

	Top	2Bottom	3Left	4 Right
Cut Sheet	3 mm (0 mm)* ¹			
Envelopes	12 mm	24 mm	3 mm	3 mm



*1 When you set the Borderless feature to On.

Printable area depends on the Printer driver settings.

- The figures above are approximate and the printable area may vary depending on the type of cut sheet paper you are using.
- (MFC-5840CN only)
 You can use the borderless feature with Tray#1 only.

How to load paper, envelopes and post cards




For Tray#2, see To load paper in the paper tray#2 (MFC-5840CN only) on page 1-17.


(MFC-5840CN only) If you are using Auto Select, after refilling the paper tray you should open and close the scanner cover to reset it.

To load paper or other media


1 Pull the paper tray completely out of the MFC and remove the output paper tray.

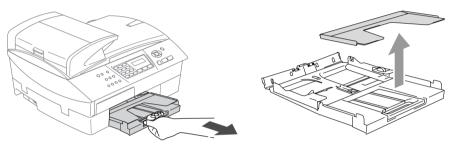

2 Press and slide the paper side guide to fit the paper width.

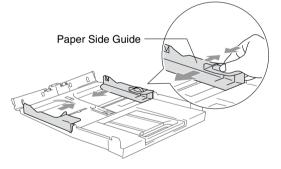


 3 Pull out the paper support and unfold the paper support flap.



Use the paper support flap for Letter, Legal and A4.

4 Fan the stack of paper well to avoid paper jams and mis-feeds.

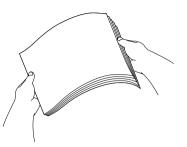


5 Gently insert the paper into the paper tray print side face down and the leading edge (top of the paper) in first.

Check that the paper is flat in the tray and below the maximum paper mark.




- Make sure the paper side guides touch the sides of the paper.
 - Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems.
- 6 Put the output paper tray back on and push the paper tray firmly back into the MFC.

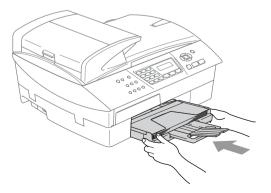


To load paper in the paper tray#2 (MFC-5840CN only)

You can use only plain paper sizes Letter, Legal, A4, Executive or B5 in Tray#2.


1 Pull the paper tray completely out of the MFC.

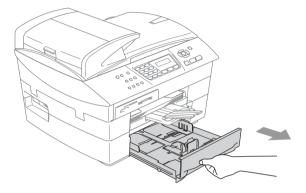


2 Press and slide the paper side guide and paper length guide to fit the paper width and length.

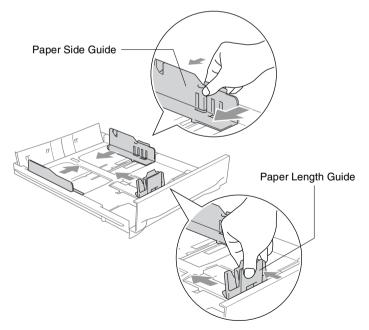

For Legal size paper, press and hold the universal guide release button as you slide out the front of the paper tray.

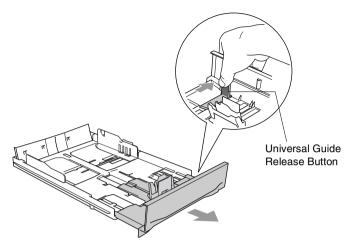


3 Fan the stack of paper well to avoid paper jams and mis-feeds.

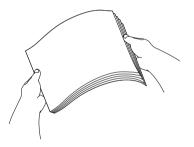


4 Gently insert the paper into the paper tray print side face down and the leading edge (top of the paper) in first.

Check that the paper is flat in the tray and below the maximum paper mark.

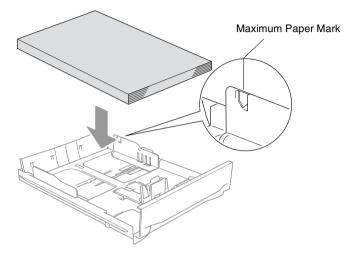

- Make sure the paper side guides and paper length guide touch the sides of the paper.
- **5** Put the paper tray firmly back into the MFC.

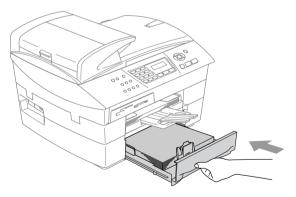


To load envelopes

- Use envelopes that weigh from 75-95 g/m².
- Some envelopes require margin settings in the application. Make sure you do a test print first.

To prevent possible damage to the feeding mechanism, do not use the types of envelopes shown below.


DO NOT USE ENVELOPES:

- that are of a baggy construction
- that are embossed (have raised writing on them)
- that have clasps on them
- that are not sharply creased
- that are preprinted on the inside

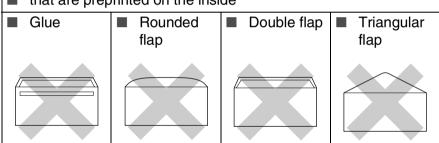


How to load envelopes

 - **1** Before loading, press the corners and sides of the envelopes to make them as flat as possible.
- If the envelopes are 'double-feeding,' put one envelope in the paper tray at a time.




 
2 Insert the envelopes into the paper tray with the address side down and the leading edge (top of the envelopes) in first. Slide the paper side guide to fit the width of the envelopes.



If you have problems when printing on envelopes, try the following suggestions:

  
- **1** Open the envelope flap.
- **2** Make sure the open flap is either to the side of the envelope or to the back edge of the envelope when printing.
- *3* Adjust the size and margin in your application.





To load post cards

1 Raise the paper stop and insert the post cards into the paper tray. Slide the paper side guide to fit the width of the post cards.

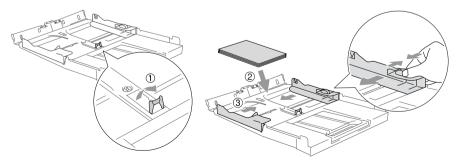

About fax machines

Fax tones and handshake

When someone is sending a fax, the MFC sends fax calling tones (CNG tones). These are quiet, intermittent beeps every 4-seconds. You'll hear them after you dial and press Mono Start or Colour Start and they will continue for about 60 seconds after dialling. During that time, the sending machine must begin the "handshake", or connection, with the receiving machine.

Each time you use automatic procedures to send a fax, you are sending CNG tones over the phone line. You will soon learn to listen for these guiet beeps each time you answer a phone on your fax line, so you will know if you are receiving a fax message.

The receiving fax responds with fax receiving tones, which are loud, chirping sounds. A receiving fax chirps for about 40 seconds over the phone line, and the LCD shows Receiving.

If your MFC is set to the Fax Only mode, it will answer every call automatically with fax receiving tones. If the other person hangs up, your MFC will continue to send the "chirps" for about 40 seconds, and the LCD continues to show Receiving. To cancel receiving, press Stop/Exit.

The fax 'handshake' is the time in which the sending machine's CNG tones and the receiving machine's "chirps" overlap. This must be for at least 2 to 4 seconds, so both machines can understand how each is sending and receiving the fax. The handshake cannot begin until the call is answered, and the CNG tones only last for about 60 seconds after the number is dialled. So it is important for the receiving machine to answer the call in as few rings as possible.



When you have an external Telephone Answering Device (TAD) on your fax line, your TAD will decide the number of rings before the call is answered.

ECM (Error Correction Mode)

The Error Correction Mode (ECM) is a way for the MFC to check a fax transmission while it is in progress. If the MFC detects errors during fax transmission, it resends the pages of the fax that had an error. ECM transmissions are only possible between fax machines that both have this feature. If they do, you may send and receive fax messages that are continuously being checked by the MFC.

Your MFC must have enough memory for this feature to work.



Initial Setup

Setting the Date and Time

When the MFC is not in use it will display the date and time. If you set up the Station ID, the date and time displayed by your MFC will be printed on every fax you send. If there is a power failure, you may have to reset the date and time. No other settings will be affected.

Initial Setup 2.Date/Time

- 1 Press Menu/Set, 0, 2.
- **2** Enter the last two digits of the year. Press **Menu/Set**.

Press **Menu/Set**. **3** Enter two digits for the month.

Press Menu/Set.

(For example, enter 09 for September, or 10 for October.)

- 4 Enter two digits for the day. Press **Menu/Set**. (For example, enter 06 for 6th.)
- **5** Enter the time in 24-Hour format.

Press Menu/Set. (For example, enter 15:25 for 3:25 P.M.)

6 Press Stop/Exit.

The LCD now shows the date and time whenever the MFC is in Fax mode.

Setting Tone or Pulse dialling mode (Not available in New Zealand)

- **1** Press **Menu/Set**, **0**, **4**.
- 2 Press ▲ or ▼ to select Pulse (or Tone). Press Menu/Set.
- 3 Press Stop/Exit.

Setting the Station ID

You should store your name or company name and fax number so they print on all fax pages you send.

It is important that you enter the fax number in the internationally standardized format, i.e. in accordance with the following strict sequence:

- The "+" (plus) character (by pressing ★ key)
- Vour Country Code (e.g. "61" for Australia, "64" for New Zealand)
- Your local area code minus any leading "0"
- A space
- Your number on the local exchange, using spaces to aid readability as appropriate.

As an example, if the machine is installed in the United Kingdom and the same line is to be used for both fax and voice calls, and your national telephone number is 0161 444 5555, then you must set the fax and telephone number parts of your station ID as: +44 161 444 5555.

- **1** Press **Menu/Set**, **0**, **3**.
- 2 Enter your fax number (up to 20 digits). Press **Menu/Set**.

Initial Setup 3.Station ID

You cannot enter a hyphen in the fax number. To enter a space press ► once between numbers.

- Use the dial pad to enter your name (up to 20 characters).
 (See *Entering Text* on page B-12.)
 Press Menu/Set.
- 4 Press Stop/Exit.

If the Station ID has already been programmed, the LCD will ask you to press **1** to make a change or **2** to exit without changing.

Setting the Phone Line Type

If you are connecting the MFC to a line that features a PABX (PBX) or ADSL to send and receive faxes, it is also necessary to change the Phone Line Type accordingly by completing the following steps.

- 1 Press Menu/Set. 0. 5.
- 2 Press ▲ or ▼ to select PBX (For Australia and New Zealand only), ADSL (or Normal).

Press Menu/Set.

3 Press Stop/Exit.

PABX and TRANSFER


The MFC is initially set to be connected with PSTN (Public Switched Telephone Network) lines. However, many offices use a central telephone system or Private Automatic Branch Exchange (PABX). Your MFC can be connected to most types of PABX. The MFC's recall feature supports timed break recall only (TBR). TBR will work with most PABX systems allowing you to gain access to an outside line, or transfer calls to another extension. The feature works when the **Hook** key is pressed.

You can program a **Hook** keypress as part of a number stored in a Speed-Dial location. When programming the Speed-Dial number (Menu/Set 2-3-1) press Hook first (the screen displays "!"), then enter the telephone number. If you do this, you do not need to press **Hook** each time before you dial using a Speed-Dial location. (See Storing numbers for easy dialling on page 5-1.)

General Setup

Setting the Mode Timer

The MFC has three temporary mode keys on the control panel: Fax, Scan and Copy. The PhotoCapture key (MFC-5840CN only) is also a temporary mode key. You can change the number of seconds or minutes that the MFC takes after the last Scan, Copy or PhotoCapture operation before it returns to Fax mode. If you select off, the MFC stays in the mode you used last.

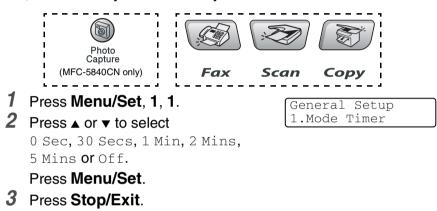

Setting the Paper Type

To get the best print quality, set the MFC for the type of paper you are using.

- **1** Press **Menu/Set**, **1**, **2**.
- 2 Press ▲ or ▼ to select Plain, Inkjet, Glossy or Transparency.

Press Menu/Set.

3 Press Stop/Exit.



- The MFC ejects paper with printed surfaces face up onto the paper tray in the front of the machine. When you use transparencies or glossy paper, remove each sheet immediately to prevent smudging or paper jams.
- (MFC-5840CN only)
 You can only use plain paper in Tray#2.

General Setup 2.Paper Type

Setting the Paper Size

You can use five sizes of paper for printing copies: Letter, Legal, A4, A5, and 10 x 15 cm and three sizes for printing faxes: Letter, Legal and A4. When you change the type of paper you load in the MFC, you will need to change the setting for Paper Size at the same time so your MFC can fit an incoming fax on the page.

1 Press Menu/Set, 1, 3.

2	(MFC-5840CN only)				
	Press ▲ or ▼ to select Tray#1 or				
	Tray#2.				

General Setup 3.Paper Size

Press Menu/Set.

- 3 Press ▲ or ▼ to select Letter, Legal, A4, A5 or 10x15cm. Press Menu/Set.
- 4 Press Stop/Exit.
 - (MFC-5840CN only)

You can only use plain paper sizes Letter, Legal or A4 in Tray#2.

Setting the Ring Volume

You can turn the ring Off or you can select the ring volume level.

- **1** Press **Menu/Set**, **1**, **4**, **1**.
- 2 Press ▲ or ▼ to select Low, Med, High or Off. Press Menu/Set
- 3 Press Stop/Exit.

```
-OR-
```

You can adjust the ring volume when your MFC is idle (not being used). In Fax mode (, press () or () to adjust the volume level. Every time you press these keys, the MFC will ring so you can hear the active setting as the LCD shows it. The volume changes with each key press. The new setting will stay until you change it again.

Setting the Beeper Volume

You can change the beeper volume. The default (factory) setting is Low. When the beeper is on, the MFC will beep when you press a key, make a mistake or whenever you send or received fax.

- **1** Press **Menu/Set**, **1**, **4**, **2**.
- 2 Press ▲ or ▼ to select your option. (Low, Med, High or Off)

Press Menu/Set.

3 Press Stop/Exit.

Vo	lume
1.	Ring

Volume 2.Beeper

Setting the Speaker Volume

You can adjust the speaker volume.

- 1 Press Menu/Set, 1, 4, 3.
- 2 Press ▲ or ▼ to select Low, Med, High or Off. Press Menu/Set.

3 Press Stop/Exit.

Volume 3.Speaker

Setting the LCD Contrast

You can adjust the LCD contrast for a sharper and more vivid display. If you are having difficulty reading the LCD from your position, try changing the contrast setting for improved viewing.

- **1** Press **Menu/Set**, **1**, **6**.
- 2 Press ▲ or ▼ to select Light or Dark.

Press Menu/Set.

3 Press Stop/Exit.

Setting the Tray Use for Copy mode (MFC-5840CN only)

You can change the default tray that will be used for copying.

- **1** Press **Menu/Set**, **1**, **7**.
- 2 Press ▲ or ▼ to select Tray#1 Only, Tray#2 Only, or Auto Select.

Press Menu/Set.

3 Press Stop/Exit.



- If both trays are set to the same size and type of paper, Auto Select will let your MFC take from Tray#1 first, then take from Tray#2 if Tray#1 runs out of paper.
- You can only use plain paper sizes Letter, Legal or A4 in Tray#2.

General Setup 6.LCD Contrast

General Setup 7.Tray Use:Copy

Setting the Tray Use for Fax mode (MFC-5840CN only)

You can change the default tray that will be used for printing received faxes.

1 Press Menu/Set, 1, 8.

```
2 Press ▲ or ▼ to select
```

General Setup 8.Tray Use:Fax

```
Tray#1 Only, Tray#2 Only, or
Auto Select.
```

Press **Menu/Set**.

3 Press Stop/Exit.



Auto Select will allow your MFC to take paper from Tray#1 first, or take from Tray#2 if:

- Tray#1 is out of paper.
- Tray#2 is set to a different paper size that is more suitable for the received faxes.
- Both trays are using the same size paper and Tray#1 is not set to use plain paper.
- You can only use plain paper sizes Letter, Legal or A4 in Tray#2.



How to enter Fax mode

Before sending faxes, make sure () (Fax) is illuminated in

green. If not, press (Fax) to enter Fax mode. The default setting is Fax.



How to dial

You can dial in any of the following ways.

Manual dialling

Press all of the digits of the phone or fax number.




Press **Search/Speed Dial**, **#**, and then the two digit Speed-Dial number. (See *Storing Speed-Dial numbers* on page 5-1.)



If the LCD shows Not Registered when you enter the Speed-Dial number, a number has not been stored for it.

Search

You can search for names you have stored in the Speed-Dial memories. Press **Search/Speed Dial** and the navigation keys to search. (See *Storing Speed-Dial numbers* on page 5-1.)

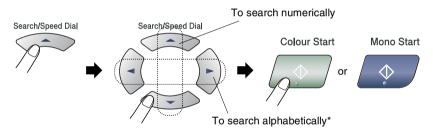

* To search alphabetically, you can use the dial pad to enter the first letter of the name you are looking for.

Fax Redial

If you are sending a fax manually and the line is busy, press **Redial/Pause**, and then press **Mono Start** or **Colour Start** to try again. If you want to make a second call to the last number dialled, you can save time by pressing **Redial/Pause** and **Mono Start** or **Colour Start**.

Redial/Pause only works if you dialled from the control panel. *If you are sending a fax automatically* and the line is busy, the MFC will automatically redial up to three times at five minutes intervals.

How to Fax (B&W and Colour)

Colour fax transmission

Your MFC can send a colour fax to machines that support this feature.

However, colour faxes cannot be stored in the memory. When you send a colour fax, the MFC will send it in real time (even if Real Time TX is set to Off).

Delayed fax and Polling Transmit features are not available in colour.

Faxing from the ADF

Put the document face up in the ADF. To cancel, press Stop/Exit.

- 1 If it is not illuminated in green, press (Fax).
- **2** Load your document.
- **3** Dial the fax number.

Press **Mono Start** or **Colour Start**. The MFC starts scanning the first page.

If the memory is full and you are faxing a single page, it will be sent in real time.

Faxing from the scanner glass

You can use the scanner glass to fax pages of a book or one page at a time. The documents can be up to A4 size. To cancel, press Stop/Exit.

- 1 If it is not illuminated in green, press (Fax).
- 2 Load your document on the scanner glass.
- 3 Dial the fax number.

Press Mono Start or Colour Start.

- If you press **Mono Start**, the machine starts scanning the first page.
- If you press **Colour Start**, the machine starts sending.
- 4 To send a single page, press 2 (or press Mono Start again).

Next Page? 1.Yes 2.No(Dial)

The MFC starts sending the document.

__OR__

To send more than one page, press 1 and go to Step 5.

5 Place the next page on the scanner glass.

Set Next Page Then Press Set

Press Menu/Set

The MFC starts scanning. (Repeat Steps 4 and 5 for each additional page.)

- If the memory is full and you are faxing a single page, it will be sent in real time.
- You cannot send multiple pages for colour faxes.



Automatic transmission

This is the easiest way to send a fax.

- 1 If it is not illuminated in green, press
- **2** Load your document.
- **3** Enter the fax number using the dial pad, Speed-Dial or Search. (See *How to dial* on page 3-1.)

(Fax).

4 Press Mono Start or Colour Start.

Manual transmission

Manual transmission lets you hear the dialling, ringing and fax-receiving tones while sending a fax.

- 1 If it is not illuminated in green, press (Fax).
- **2** Load your document.
- **3** Pick up the handset of the external phone and listen for a dial tone.
- **4** Dial the fax number you want to call.
- **5** When you hear the fax tone, press **Mono Start** or **Colour Start**.
- 6 If you picked up the handset of an external phone, replace it.

Basic sending operations

Sending faxes using multiple settings

When you send a fax you can choose any combination of these settings: contrast, resolution, overseas mode, delayed fax timer, polling transmission or real time transmission.

If it is not illuminated in green, press (Fax).
 After each setting is accepted, the LCD will ask if you want to enter more settings:

2 Press 1 to select more settings. The LCD will return to the Setup Send menu.

Next 1.Yes 2.No

—OR—

Press **2** if you have finished choosing settings and go to the next step.

Contrast

If your document is very light or very dark, you may want to change the contrast.

Use Light to send a light document.

Use Dark to send a dark document.

- 1 If it is not illuminated in green, press
- **2** Load your document.
- 3 Press Menu/Set, 2, 2, 1.
- 4 Press ▲ or ▼ to select Auto, Light or Dark.

Press Menu/Set.



Setup Send 1.Contrast

Fax Resolution

You can use the **Fax Resolution** key to change the setting temporarily (for this fax only). In Fax mode , press **Fax Resolution** and \blacktriangle or \checkmark to select the setting you want, and then press **Menu/Set**.

-OR-

You can change the default setting:

- 1 If it is not illuminated in green, press
- **2** Load your document.
- 3 Press Menu/Set, 2, 2, 2.
- 4 Press ▲ or ▼ to select the resolution you want.

Setup Send 2.Fax Resolution

(Fax).

Press Menu/Set.

Standard	Suitable for most typed documents.
Fine	Good for small print and transmits a little slower than Standard resolution.
S.Fine	Good for small print or artwork and transmits slower than Fine resolution.
Photo	Use when the document has varying shades of gray or is a photograph. This has the slowest transmission time.

Dual Access (Not available for colour faxes)

You can dial a number, and begin scanning the fax into memoryeven when the MFC is sending from memory or receiving faxes. The LCD shows the new job number and available memory.



Your MFC normally uses Dual Access. However, to send a colour fax, the MFC will send the document in real time (even if Real Time TX is Off).

The number of pages you can scan into the memory will vary depending on the data that is printed on them.

If you get an Out of Memory message while scanning the first page of a fax, press Stop/Exit to cancel scanning. If you get an Out of Memory message while scanning a subsequent page, you can press Mono Start to send the pages scanned so far, or press Stop/Exit to cancel the operation.

Real Time Transmission

When you are sending a fax, the MFC will scan the documents into the memory before sending. Then, as soon as the phone line is free, the MFC will start dialling and sending.

If the memory becomes full, the MFC will send the document in real time (even if Real Time TX is set to Off).

Sometimes, you may want to send an important document immediately, without waiting for memory transmission. You can set Real Time TX to On for all documents or for the next fax only.

If you want to fax multiple pages from the scanner glass, Real Time Transmission should be set to <code>Off</code>.

- 1 If it is not illuminated in green, press
- **2** Load your document.
- 3 Press Menu/Set, 2, 2, 5.
- 4 To change the default setting, press
 ▲ or ▼ to select On (or Off).

Press Menu/Set.

__OR__

For the next fax transmission only, press \blacktriangle or \blacktriangledown to select Next Fax Only.

Press Menu/Set and go to Step 5.

5 For the next fax only, press ▲ or ▼ to select On (or Off). Press Menu/Set.

In Real Time Transmission, the redial feature does not work.

If you are sending a colour Fax, the MFC will send it in real time (even if Real Time TX is set to Off).

Setup Send 5.Real Time TX



3 - 10 SETUP SEND

Checking job status

Check which jobs are still waiting in the memory to be sent. (If there are no jobs, the LCD shows No Jobs Waiting.)

- 1 Press Menu/Set, 2, 6.
- 2 If you have more than one job waiting, press ▲ or ▼ to scroll through the list.
- 3 Press Stop/Exit.

Cancelling a fax in progress

If you want to cancel a fax, while the MFC is scanning, dialling or sending it, press **Stop/Exit**.

Cancelling a scheduled job

You can cancel a fax job that is stored and waiting in the memory.

1 Press **Menu/Set**, **2**, **6**.

Any jobs that are waiting will appear on the LCD.

2 If you have more than one job waiting, press ▲ or ▼ to select the job you want to cancel.

Press Menu/Set.

-OR-

If you only have one job waiting, go to Step 3.

3 Press **1** to cancel.

To cancel another job go to Step 2.

-OR-

Press 2 to exit without cancelling.

4 Press Stop/Exit.

Fax	
6.Remaining	Jobs

Fax 6.Remaining Jobs

Advanced sending operations

Broadcasting (Not available for colour faxes)

Broadcasting is when the same fax message is automatically sent to more than one fax number. You can include Groups, Speed-Dial numbers and up to 50 manually dialled numbers in the same broadcast.

Press Menu/Set between each of the numbers. Use

Search/Speed Dial to help you choose the numbers easily. (To set up Group dial numbers, see *Setting up Groups for Broadcasting* on page 5-3.)

After the broadcast is finished, a Broadcast Report will be printed to let you know the results.

- 1 If it is not illuminated in green, press (Fax).
- **2** Load your document.
- **3** Enter a number using Speed-Dial, a Group number, Search or manual dialling using the dial pad.

(Example: Group number)

4 When the LCD displays the fax number or name of the other party, press **Menu/Set**.

You will be asked to enter the next number.

- 5 Enter the next number.(Example: Speed-Dial number)
- **6** When the LCD displays the fax number or name of the other party, press **Menu/Set**.
- 7 After you have entered all fax numbers, go to Step 8 to start the broadcast.
- 8 Press Mono Start.

- If you did not use up any of the numbers for Groups, access codes or credit card numbers, you can 'broadcast' faxes to as many as 90 (MFC-5440CN) or 150 (MFC-5840CN) different numbers.
 - The available memory will vary depending on the types of jobs in the memory and the number of locations used for broadcasting. If you broadcast to the maximum numbers available, you will not be able to use Dual Access and Delayed fax.
 - Enter the long dialling sequence numbers as you would normally, but remember that each Speed-Dial number counts as one number, so the number of locations you can store becomes limited.
 - If the memory is full, press Stop/Exit to stop the job or if more than one page has been scanned, press Mono Start to send the portion that is in the memory.

Overseas Mode

If you are having difficulty sending a fax overseas due to possible interference on the phone line, we recommend that you turn on the Overseas Mode. After you send a fax using this feature, the feature will turn itself off.

1 If it is not illuminated in green, press



- **2** Load your document.
- 3 Press Menu/Set, 2, 2, 7.
- 4 Press ▲ or ▼ to select On (or Off). Press Menu/Set.

Setup Send	
7.Overseas	Mode

 
Delayed Fax (Not available for colour faxes)

During the day you can store up to 50 faxes in the memory to be sent within 24 hours. These faxes will be sent at the time of day you enter in Step 4.

1 If it is not illuminated in green, press



- 2 Load your document.
- 3 Press Menu/Set, 2, 2, 3.
- 4 Press Menu/Set to accept the displayed time.



__OR__

Enter the time you want the fax to be sent (in 24-hour format).

Press Menu/Set.

(For example, enter 19:45 for 7:45 PM.)

The number of pages you can scan into the memory depends on the amount of data that is printed on each page.

Delayed Batch Transmission (Not available for colour faxes)

Before sending the delayed faxes, your MFC will help you economize by sorting all the faxes in the memory by destination and scheduled time. All delayed faxes that are scheduled to be sent at the same time to the same fax number will be sent as one fax to save transmission time.

 
- 1 If it is not illuminated in green, press
- 2 Press Menu/Set, 2, 2, 4.
- **3** Press \blacktriangle or \checkmark to select On (or Off). Press Menu/Set
- 4 Press Stop/Exit.

Setup for Polled Transmit (Standard) (Not available for colour faxes)

Polled Transmit is when you set up the MFC to wait with a document so another fax machine can retrieve it.

- 1 If it is not illuminated in green, press
- 2 Load your document.
- 3 Press Menu/Set, 2, 2, 6.
- Δ **Press** ▲ or **v** to select Standard. Press Menu/Set

(Fax).



(Fax).


Setup for Polled Transmit with Secure Code (Not available for colour faxes)

When you choose Polled TX:Secure, anyone who polls the machine must enter the polling secure code.

- 1 If it is not illuminated in green, press
- 🕅 (Fax).

- **2** Load your document.
- 3 Press Menu/Set, 2, 2, 6.
- 4 Press ▲ or ▼ to select Secure. Press Menu/Set.
- **5** Enter a four-digit number.

Press Menu/Set.

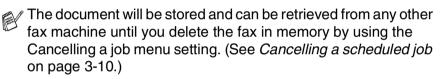

You can use Secure Polling only with another Brother fax machine.

TX Lock (Key Lock for some countries)

TX Lock lets you prevent unauthorized access to the MFC.

While TX Lock is On the following operations are available:

- Receiving faxes
- Fax Forwarding (If Fax Forwarding was already On)
- Remote Retrieval (If Fax Storage was already On)
- PC Fax Receive

While TX Lock is On the following operations are NOT available:

- Sending faxes
- Сору
- PC printing
- PC scanning
- PhotoCapture (MFC-5840CN only)
- You will not be able to continue to schedule Delayed Faxes or Polling jobs. However, any pre-scheduled Delayed Faxes will be sent when you turn TX Lock On, so they won't be lost.

If you have selected Fax Forwarding or Fax Storage (**Menu/Set**, **2**, **5**) *before* you turn TX Lock On, then Fax Forwarding and Remote Retrieval will continue to work.

To print the faxes in memory, turn TX Lock Off.

Setting up the password

If you forget the TX Lock password, please contact your Brother dealer or Brother for assistance.

- **1** Press **Menu/Set**, **2**, **0**, **1**.
- 2 Enter a 4-digit number for the password. Press **Menu/Set**.
- **3** If the LCD shows Verify:, re-enter the password. Press **Menu/Set**.
- 4 Press Stop/Exit.

Changing the TX Lock password

- **1** Press **Menu/Set**, **2**, **0**, **1**.
- 2 Press ▲ or ▼ to select Set Password. Press Menu/Set.
- *3* Enter a 4-digit number for the current password. Press **Menu/Set**.
- **4** Enter a 4-digit number for a new password. Press **Menu/Set**.
- **5** If the LCD shows Verify:, re-enter the password. Press **Menu/Set**.
- 6 Press Stop/Exit.

Turning TX Lock on

- **1** Press **Menu/Set**, **2**, **0**, **1**.
- 2 Press ▲ or ▼ to select Set TX Lock. Press Menu/Set.
- *3* Enter the registered 4-digit password. Press **Menu/Set**.

The MFC goes offline and the LCD shows ${\tt TX} \ {\tt Lock} \ {\tt Mode}.$

Turning TX Lock off

- 1 Press Menu/Set.
- 2 Enter the registered 4-digit password.

Press Menu/Set

TX lock is automatically turned off.



If you enter the wrong Password, the LCD shows Wrong Password and stays offline. The MFC will stay in TX Lock Mode until the registered password is entered.

Faxing letter size documents from the scanner glass

When documents are letter size, you need to set Scan Glass Size to letter, if you do not, the side portion of the faxes will be missing.

- 1 Press Menu/Set, 2, 2, 0.
- **2** Press \blacktriangle or \checkmark to select Letter (or A4). Press Menu/Set
- 3 Press Stop/Exit.

4 Setup Receive

Basic receiving operations

Choosing the Receive Mode

There are four different Receive Modes for your MFC. You can choose the mode that best suits your needs.


LCD	How it works	When to use it
Fax Only (automatic receive)	The MFC automatically answers every call as a fax.	For dedicated fax lines.
Fax/Tel (fax and telephone) (with an external or extension telephone)	The MFC controls the line and automatically answers every call. If the call is a fax it will receive the fax. If the call is not a fax it will ring (pseudo/double ring) for you to pick up the call.	Use this mode if you expect to receive lots of fax messages and few telephone calls. You cannot have an answering machine on the same line, even if it is on a separate wall socket/phone socket on the same line. You cannot use the telephone company's Voice Mail in this mode.
External TAD (with an external answering machine only)	The external answering machine (TAD) automatically answers every call. Voice messages are stored on the external TAD. Fax messages are printed.	Use this mode if you have connected an answering machine to your MFC. The External TAD setting works only with an external answering machine. Ring Delay does not work in this setting.
Manual (manual receive) (with an external or extension telephone)	You control the phone line and must answer every call yourself.	Use this mode if you do not receive many fax messages. If you answer and hear fax tones, wait until the MFC takes over the call, then hang up. (See <i>Fax Detect</i> on page 4-4.) Note: If you use a computer modem on the same line MFC Faxing will not operate correctly.

To select or change your Receive Mode

- **1** Press **Menu/Set**, **0**, **1**.
- 2 Press ▲ or ▼ to select Fax Only, Fax/Tel, External TAD or Manual.

Press Menu/Set.

3 Press Stop/Exit.

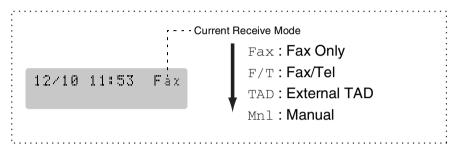

Setting the Ring Delay

The Ring Delay sets the number of times the MFC rings before it answers in Fax Only or Fax/Tel mode. If you have extension phones on the same line as the MFC or subscribe to the telephone company's service, keep the Ring Delay setting of 4.

(See *Operation from extension telephones* on page A-14 and *Fax Detect* on page 4-4.)

- 1 If it is not illuminated in green, press (Fax).
- 2 Press Menu/Set, 2, 1, 1.
- Press ▲ or ▼ to select how many times the line rings before the MFC answers (02 10 for Australia, 01 10 for New Zealand, 00 10 for some countries).

Press Menu/Set.

(If you select 00, the line won't ring at all.)

4 Press Stop/Exit.

Setting the F/T Ring Time (Fax/Tel mode only)

If you set the Receive Mode to Fax/Tel, you'll need to decide how long the MFC will signal you with its special pseudo/double-ring when you have a *voice* call. (If it's a fax call, the MFC prints the fax.)

This pseudo/double-ring happens after the initial ringing from the phone company. Only the MFC rings and no other phones on the same line will ring with the special pseudo/double-ring. However, you can still answer the call on any telephone on the same line as the MFC. (See *Fax/Tel mode* on page A-14.)

1 If it is not illuminated in green, press



- 2 Press Menu/Set, 2, 1, 2.
- 3 Press ▲ or ▼ to select how long the MFC will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds and 20, 30, 40 or 55 seconds for New Zealand).

Press Menu/Set.

4 Press Stop/Exit.

Even if the caller hangs up during the pseudo/double-ringing, the MFC will continue to ring for the set time.

Fax Detect

When you use this feature, you don't have to press **Mono Start**, **Colour Start**, or the Fax Receive Code *** 51** (*** 91** for New Zealand) when you answer a fax call. Selecting On allows the MFC to receive fax calls automatically, even if you lift the handset of an extension or external phone. When you see Receiving on the LCD or when you hear 'chirps' through the handset of an extension phone connected to another wall socket/phone socket, just replace the handset and your MFC will do the rest.

- If this feature is set to On, but your MFC does not connect a fax call when you lift an extension or external phone handset, press the Fax Receive Code ★ 51 (★ 91 for New Zealand).
 - If you send faxes from a computer on the same phone line and the MFC intercepts them, set Fax Detect to Off.
 - Selecting Off means you'll have to activate the MFC yourself by lifting the handset of an external or extension phone, and then press Mono Start or Colour Start on the MFC.

__OR__

by pressing \times **51** (\times **91** for New Zealand) if you are not at your MFC. (See *Operation from extension telephones* on page A-14.)

- 1 If it is not illuminated in green, press (Fax).
- 2 Press Menu/Set, 2, 1, 3.
- **3** Use ▲ or ▼ to select On (or Off). Press Menu/Set.
- Press Menu/Set.
- 4 Press Stop/Exit.

Printing a reduced incoming fax (Auto Reduction)

If you choose On, the MFC automatically reduces an incoming fax to fit on one page of A4, letter or legal size paper. The MFC calculates the reduction ratio by using the page size of the document and your Paper Size setting (**Menu/Set**, **1**, **3**).

- 1 If it is not illuminated in green, press
- **2** Press **Menu/Set**, **2**, **1**, **5**.
- 3 Use ▲ or ▼ to select On (or Off). Press Menu/Set.
- 4 Press Stop/Exit.



Setup Receive 5.Auto Reduction

Turn on this setting if you receive faxes that are split onto two pages. However, if the document is too long the MFC may still print it on two pages.

■ If left and right margins are cut off, turn on this setting.

Printing a fax from the memory

If you have selected Fax Forwarding or Fax Storage (**Menu/Set**, **2**, **5**, **1**), you can still print a fax from the memory when you are at your MFC. (See *Setting Fax Storage* on page 6-2.)

- 1 Press Menu/Set, 2, 5, 3.
- 2 Press Mono Start.

Reception into memory (Not available for colour fax reception)

As soon as the paper tray becomes empty during fax reception, the screen will display No Paper Fed; please put some paper in the paper tray. (See *How to load paper, envelopes and post cards* on page 1-15.)

If the Memory Receive is On at this time ...

The current fax reception will continue, with the remaining page(s) being stored in memory, subject to available memory. Subsequent incoming faxes will also be stored into memory until the memory is full, following this no further incoming fax calls will be automatically answered. To print all data put fresh paper in the paper tray and press **Mono Start** or **Colour Start**.

If the Memory Receive is Off at this time ...

The current fax reception will continue, with the remaining page(s) being stored in memory, subject to available memory. Subsequent incoming fax calls will not be automatically answered until fresh paper is put in the paper tray. To print the last fax received, put paper in the paper tray and press **Mono Start** or **Colour Start**.

1 If it is not illuminated in green, press



- 2 Press Menu/Set, 2, 1, 6.
- 3 Use ▲ or ▼ to select On (or Off). Press Menu/Set.
- 4 Press Stop/Exit.

Polling

Polling is the process of retrieving faxes from another fax machine. You can use your MFC to 'poll' other machines, or you can have someone poll your MFC.

Everyone who is involved in Polling needs to set up their fax machines for Polling. When someone polls your MFC to receive a fax, they pay for the call. If you poll someone's fax machine to receive a fax, you pay for the call.

Some fax machines do not respond to the Polling feature.

Secure Polling

Secure Polling is a way to keep your documents and others from falling into the wrong hands while the MFC is set up for polling. You can use Secure Polling only with another Brother fax machine. Anyone who polls to receive a fax must enter the polling secure code.

Setup for Polling Receive (Standard)

Polling Receive is when you call another fax machine to receive a fax from it.

- 1 If it is not illuminated in green, press (Fax).
- **2** Press **Menu/Set**, **2**, **1**, **7**.
- 3 Press ▲ or ▼ to select Standard. Press Menu/Set.
- 4 Enter the fax number you are polling. Press Mono Start or Colour Start.

Setup for Polling Receive with Secure Code

You need to make sure you are using the same secure code as the other party.

- 1 If it is not illuminated in green, press
- **2** Press **Menu/Set**, **2**, **1**, **7**.
- **3** Press ▲ or ▼ to select Secure. Press Menu/Set.
- 4 Enter a four-digit secure code. This is the same as the security code of the fax machine you are polling.

Press Menu/Set.

- **5** Enter the fax number you are polling.
- 6 Press Mono Start or Colour Start.

Setup Delayed Polling Receive

You can set the MFC to begin Polling Receive at a later time.

1 If it is not illuminated in green, press

3∖ (**Fax**).

- 2 Press Menu/Set, 2, 1, 7.
- 3 Press ▲ or ▼ to select Timer. Press Menu/Set.
- Enter the time (in 24-hour format) you want to begin polling.
 For example, enter 21:45 for 9:45 PM.
 Press Menu/Set.
- 5 Enter the fax number you are polling. Press Mono Start or Colour Start.

The MFC makes the polling call at the time you entered.

You can set up only one Delayed Polling.

(Fax).

Sequential Polling

The MFC can request documents from several fax units in a single operation. You just specify several destinations in Step 5. Afterwards, a Sequential Polling Report will be printed.

- 1 If it is not illuminated in green, press (Fax).
- 2 Press Menu/Set, 2, 1, 7.
- **3** Press ▲ or ▼ to choose Standard, Secure or Timer.

Press **Menu/Set** when the screen displays the setting you want.

- 4 If you selected Standard, go to Step 5.
 - If you selected Secure, enter a four-digit number and press Menu/Set, and then go to Step 5.
 - If you selected Timer, enter the time (in 24-hour format) you want to begin polling and press Menu/Set, and then go to Step 5.
- 5 Specify the destination fax machines, which you wish to poll by using Speed-Dial, Search, a Group (see Setting up Groups for Broadcasting on page 5-3) or the dial pad. You must press Menu/Set between each location.

6 Press Mono Start or Colour Start.

The MFC polls each number or group in turn for a document.

Press **Stop/Exit** while the MFC is dialling to cancel the polling process.

To cancel all sequential polling receive jobs, press **Menu/Set**, **2**, **6**. (See *Cancelling a scheduled job* on page 3-10.)

5 Quick-Dial numbers and dialling options

Storing numbers for easy dialling

You can set up your MFC to do two types of easy dialling: Speed-Dial and Groups for Broadcasting faxes. When you dial a quick-dial number, the LCD shows the name, if you stored it, or the number.

If you lose electrical power, the quick-dial numbers that are in the memory will not be lost.

Storing Speed-Dial numbers

You can store Speed-Dial numbers, so that when you dial you will only have to press a few keys (**Search/Speed Dial**, **#**, the two-digit number, and **Mono Start** or **Colour Start**). The MFC-5440CN can store 40 Speed-Dial numbers and the MFC-5840CN can store 100 numbers.

1 Press **Menu/Set**, **2**, **3**, **1**.

Set Quick-Dial 1.Speed-Dial

- 2 Use the dial pad to enter a Speed-Dial location number (01-40 for MFC-5440CN, 00-99 for MFC-5840CN.) (For example, press 05.) Press Menu/Set.
- *3* Enter the phone or fax number (up to 20 digits). Press **Menu/Set**.

4 Use the dial pad to enter the name (up to 15 characters). Press **Menu/Set**.

(You can use the chart on page B-12 to help you enter letters.) —**OR**—

Press **Menu/Set** to store the number without a name.

5 Go to Step 2 to store another Speed-Dial number.

__OR__

Press Stop/Exit.

Changing Speed-Dial numbers

If you try to store a Speed-Dial number where a number has already been stored, the LCD will show the name that has been stored there (or number) and will ask you to do one of the following:

1 Press **1** to change the stored number.

```
----OR----
```

Press 2 to exit without making a change.

How to change the stored number or name:

- If you want to change a character, use ◄ or ➤ to position the cursor under the character you want to change, and then type over it.
- If you want to erase the whole number or whole name, press Stop/Exit when the cursor is under the first digit or letter. The characters above and to the right of the cursor will be deleted.
- **2** Enter a new number.

Press Menu/Set.

3 Follow the directions beginning at Step 4 in Storing Speed-Dial numbers. (See page 5-1.)

Setting up Groups for Broadcasting

Groups allow you to send the same fax message to many fax numbers by pressing only a few keys (Search/Speed Dial, #, the two-digit number, and Mono Start). First, you'll need to store each fax number as a Speed-Dial number.

Then, you can combine them into a Group. Each Group uses up a Speed-Dial number. You can have up to six Groups, or you can assign up to 39 numbers (MFC-5440CN) or up to 99 numbers (MFC-5840CN) to one large Group.

(See Storing Speed-Dial numbers on page 5-1 and Broadcasting (Not available for colour faxes) on page 3-11.)

1 Press Menu/Set, 2, 3, 2.

2 Use the dial pad to enter the two-digit Speed-Dial number where you want to store the Group.

Press Menu/Set.

(For example, press 07 and Menu/Set.)

3 Use the dial pad to enter the Group number (1 to 6).

Setup Groups Setup Group:G01

Press Menu/Set.

(For example, press 1 for Group 1.)

The Group number must be between 1 and 6.

4 To include Speed-Dial numbers in the Group, press them as follows:

For example, for Speed-Dial numbers 05 and 09. Press Search/Speed Dial. 05.

Search/Speed Dial, 09. The LCD shows: #05#09.

Setup Groups G01:#05#09

Set Quick-Dial 2.Setup Groups

Setup Groups Speed-Dial? #

- **5** Press **Menu/Set** to accept the Speed-Dial numbers for this Group.
- **6** Use the dial pad and the chart on page B-12 to enter a name for the Group.

Press Menu/Set.

(For example, type NEW CLIENTS).

7 Press Stop/Exit.

You can print a list of all the Speed-Dial numbers. Group numbers will be marked in the "GROUP" column. (See *Printing reports* on page 7-3.)

Dialling options

There are three ways to dial. (See *How to dial* on page 3-1.)

Access codes and credit card numbers

Sometimes you may want to choose from several long distance carriers when you make a call. Rates may vary depending on the time and destination. To take advantage of low rates, you can store the access codes or long-distance carriers and credit card numbers as Speed-Dial numbers. You can store these long dialling sequences by dividing them and setting them up on separate Speed Dial numbers in any combination. You can even include manual dialling using the dial pad. (See *Storing Speed-Dial numbers* on page 5-1.)

For example, perhaps you have stored '555' on Speed-Dial #03 and '7000' on Speed-Dial #02. If you press **Search/Speed Dial**, **#03**, **Search/Speed Dial**, **#02**, and **Mono Start** or **Colour Start**, you will dial '555-7000'.

To temporarily change a number, you can substitute part of the number with manual dialling using the dial pad.

For example, to change the number to 555-7001 you could press **Search/Speed Dial**, **#03** and then press **7001** using the dialling pad.

If you must wait for another dial tone or signal at any point in the dialling sequence, store a pause in the number by pressing **Redial/Pause**. Each key press adds a 3.5-second delay.

Pause

Press **Redial/Pause** to insert a 3.5-second pause between numbers. If you are dialling overseas, you can press **Redial/Pause** as many times as needed to increase the length of the pause.

Tone or Pulse (Not available in New Zealand)

If you have a Pulse dialling service, but need to send Tone signals (for example, for telephone banking), follow the instructions below. If you have Touch Tone service, you will not need this feature to send tone signals.

- 1 Lift the handset of the external phone.
- **2** Press **#** on the MFC's control panel. Any digits dialled after this will send tone signals.

When you hang up, the MFC will return to the Pulse dialling service.

6 Remote Fax Options (Not available for colour faxes)

You can only use one remote fax option at a time: Fax Forwarding—OR—Fax Storage—OR—PC FAX Receive —OR—Off.

You can change your selection at any time (**Menu/Set**, **2**, **5**, **1**). (See *Turning off Remote Fax Options* on page 6-3.)

Setting up Fax Forwarding

When you select Fax Forward, your MFC stores the received fax in the memory. The MFC will then dial the fax number you've programmed and forward the fax message.

 
- **1** Press **Menu/Set**, **2**, **5**, **1**.
- 2 Press ▲ or ▼ to select Fax Forward. Press Menu/Set.

The LCD will ask you to enter the fax number to which faxes will be forwarded.

3 Enter the forwarding number (up to 20 digits).

Press Menu/Set.

4 Press ▲ or ▼ to select Backup Print:On or Backup Print:Off.



Press Menu/Set.

- If you select Backup Print:On, the MFC will also print the fax at your MFC so you will have a copy if there is a power failure before it is forwarded.
 - If Fax Forwarding is turned on your machine cannot receive a colour fax unless the sending machine converts it to monochrome before sending.
- **5** Press **Stop/Exit**.

Setting Fax Storage

If you select Fax Storage, your MFC stores the received fax in the memory. You will be able to retrieve fax messages from another location using the Remote Retrieval commands.

- **1** Press **Menu/Set**, **2**, **5**, **1**.
- 2 Press ▲ or ▼ to select Fax Storage. Press Menu/Set.
- 3 Press Stop/Exit.
- If you have turned on Fax Storage, a backup copy will automatically be printed at the MFC.
 - If Fax Storage is turned on your machine cannot receive a colour fax unless the sending machine converts it to monochrome.

Setting PC Fax Receive

If you select PC Fax Receive, your MFC will temporarily store your received fax messages in its memory, and then automatically send the faxes to the PC. You can then use your PC to view and store these faxes.

- **1** Press **Menu/Set**, **2**, **5**, **1**.
- 2 Press ▲ or ▼ to select PC Fax Receive. Press Menu/Set.
- 3 Press ▲ or ▼ to select Backup Print:On or Backup Print:Off. Press Menu/Set
- 4 Press Stop/Exit.

PC Fax Receive Backup Print:On

- Before you can set up PC Fax Receive you must install the MFL-Pro Suite software on your PC, make sure your PC is connected and turned on. (For details, see Using Brother PC-FAX software on page 5-1 in Software User's Guide on the CD-ROM.)
 - If you select Backup Print: On, the MFC will also print the fax at your MFC so you will have a copy if there is a power failure before it is sent to the PC.
 - If you get an error message and the MFC cannot print the faxes in memory, you can use this setting to transfer your faxes to your PC. (For details, see *Error messages* on page 11-1.)
 - When PC Fax Receive is turned on your machine can only print the colour faxes it receives. It cannot store them it memory.

Turning off Remote Fax Options

If you set the Remote Fax Options to <code>Off</code> and there are faxes in your MFC's memory, the LCD will give you two options.

- If you press 1, all unprinted faxes will be printed and erased before the setting turns off. If a backup copy has already been printed it will not be printed again.
- If you press 2, the memory will not be erased and the setting will be unchanged.

(See Printing a fax from the memory on page 4-5.)

Setting your Remote Access Code

The remote access code lets you access the Remote Retrieval features when you are away from your MFC. Before you use the remote access and retrieval features, you have to set up your own code. The default code is inactive code (--- \star).

1 Press **Menu/Set**, **2**, **5**, **2**.

2 Enter a three-digit code using numbers 0-9 or *. Press Menu/Set. (The preset '*' cannot be changed.)

Do not use the same code used for your Fax Receive Code (*51, *91 for New Zealand) or Telephone Answer Code (#51, #91 for New Zealand).

(See Operation from extension telephones on page A-14.)

- 3 Press Stop/Exit.
- You can change your code at any time by entering a new one. If you want to make your code inactive, press **Stop/Exit** in Step 2 to restore the inactive setting (--- *).

Remote Retrieval

You can call your MFC from any touch tone telephone or fax machine, then use the Remote Access Code and remote commands to retrieve fax messages.

Using your Remote Access Code

- **1** Dial your fax number from a telephone or another fax machine using touch tone.
- 2 When your MFC answers, immediately enter your Remote Access Code (3 digits followed by *).
- **3** The MFC signals if it has received fax messages:

1 long beep — Fax messages

No beeps — No messages

- **4** The MFC gives two short beeps to tell you to enter a command. The MFC will hang up if you wait longer than 30 seconds to enter a command. The MFC will beep three times, if you enter an invalid command.
- **5** Press **90** to reset the MFC when you've finished.
- 6 Hang up.
- If your MFC is set to Manual mode and you want to use the remote retrieval features, you can access your MFC by waiting about 2 minutes after it starts ringing, and then entering the Remote Access Code within 30 seconds.

Remote commands

Follow the commands below to access features when you are away from the MFC. When you call the MFC and enter your Remote Access Code (3 digits followed by \star), the system will give two short beeps and you must enter a remote command.

Remote commands		Operation details
95	Change the Fax Forwarding or Fax Storage settings	
	1 OFF	You can select Off after you have retrieved or erased all your messages.
	2 Fax Forwarding	If you hear one long beep, the change has
	4 Fax Forwarding number	been accepted. If you hear three short beeps, you cannot change it because the conditions
	6 Fax Storage	have not been met (for example, registering a Fax Forwarding number). You can register your Fax Forwarding number by entering 4. (See <i>Changing your Fax Forwarding number</i> on page 6-7.) Once you have registered the number, Fax Forwarding will work.
96	Retrieve a fax	
	2 Retrieve all faxes	Enter the number of a remote fax machine to receive stored fax message(s). (See page 6-7.)
	3 Erase faxes from the memory	If you hear one long beep, fax messages have been erased from the memory.
97	Check the receiving status	
	1 Fax	You can check whether your MFC has received any faxes. If yes, you will hear one long beep. If no, you will hear three short beeps.
98	Change the Receive Mode	
	1 External TAD	If you hear one long beep, your change has
	2 Fax/Tel	been accepted.
	3 Fax Only	
90	Exit	Press 90 to exit Remote Retrieval. Wait for the long beep, then replace the handset.

Retrieving fax messages

You can call your MFC from any touch tone phone and have your fax messages sent to a fax machine.

- 1 Dial your fax number.
- 2 When your MFC answers, immediately enter your Remote Access Code (3 digits followed by \star). If you hear one long beep, you have messages.
- 3 As soon as you hear two short beeps, use the dial pad to press 962
- 4 Wait for the long beep, and then use the dial pad to enter the number of the remote fax machine where you want your fax messages sent to followed by ## (up to 20 digits).




You cannot use \star and **#** as dial numbers. However, press **#** if you want to store a pause.

5 Hang up after you hear your MFC beep. Your MFC will call the other machine, which will then print your fax messages.

Changing your Fax Forwarding number

You can change the default setting of your fax forwarding number from another telephone or fax machine using touch tone.

- 1 Dial your fax number.
- 2 When your MFC answers, immediately enter your Remote Access Code (3 digits followed by \star). If you hear one long beep, you have messages.
- *3* When you hear two short beeps, use the dial pad to press **954**.
- 4 Wait for the long beep, and then use the dial pad to enter the new number of the remote fax machine where you want your fax messages forwarded followed by ## (up to 20 digits).

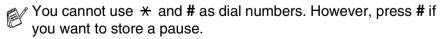

5 Hang up after you hear your MFC beep.



Fax settings and activity

You need to set up the Transmission Verification Report and Journal Period in the menu table.

Press Menu/Set, 2, 4, 1.

-OR-

Press Menu/Set, 2, 4, 2.

Customizing the Transmission Verification Report

You can use the Transmission Report as proof that you sent a fax. This report lists the time and date of transmission and whether the transmission was successful (OK). If you select On or On+Image, the report will print for every fax you send.

If you send a lot of faxes to the same place, you may need more than the job numbers to know which faxes you must send again. Selecting On+Image or Off+Image will print a section of the fax's first page on the report to help you remember.

- When the Verification Report is turned Off or Off+Image, the Report will only print if there is a transmission error, with NG in the RESULT column.
- **1** Press **Menu/Set**, **2**, **4**, **1**.
- 2 Press ▲ or ▼ to select Off+Image, On, On+Image or Off. Press Menu/Set.
- *3* Press Stop/Exit.

Setting the Journal Period

You can set the MFC to print a journal at specific intervals (every 50 faxes, 6, 12 or 24 hours, 2 or 7 days). If you set the interval to Off, you can print the report by following the steps on the next page.

The default setting is Every 50 Faxes.

1 Press Menu/Set, 2, 4, 2.

Report Setting 2.Journal Period

2 Press \blacktriangle or \checkmark to choose an interval. Press Menu/Set.

(If you choose 7 days, the LCD will ask you to choose a day on which to begin the 7-day countdown.)

3 Enter the time to begin printing in 24-hour format.

Press Menu/Set.

(For example: enter 19:45 for 7:45 PM.)

- 4 Press Stop/Exit.
- If you select 6, 12, 24 hours, 2 or 7 days, the MFC will print the report at the selected time and then erase all jobs from its memory. If the MFC's memory becomes full with 200 jobs before the time you selected has passed, the MFC will print the Journal early and then erase all jobs from memory. If you want an extra report before it is due to print, you can print it without erasing the jobs from memory.

If you select Every 50 Faxes, the MFC will print the Journal when the MFC has stored 50 jobs.

Printing reports

Following reports are available:

1.Help List	Prints the Help List so you can see at-a-glance how to quickly program your MFC.
2.Quick-Dial	Lists names and numbers stored in the Speed-Dial memory, in numerical order.
3.Fax Journal	Lists information about the last incoming and outgoing faxes. (TX means Transmit.) (RX means Receive.)
4.XMIT Verify	Prints a Transmission Verification Report for your last transmission.
5.User Settings	Lists your settings.
6.Network Config	Lists your Network settings.

How to print a report

- 1 For MFC-5440CN, press **Reports**. For MFC-5840CN, press **Menu/Set**, **6**.
- 2 Press ▲ or ▼ to select the report you want. Press Menu/Set.

-OR-

Enter the number of the report you want to print. For example, press **1** to print the Help List.


3 Press Mono Start.



Using the MFC as a copier

You can use your MFC as a copier, making up to 99 copies at a time.

Enter Copy mode

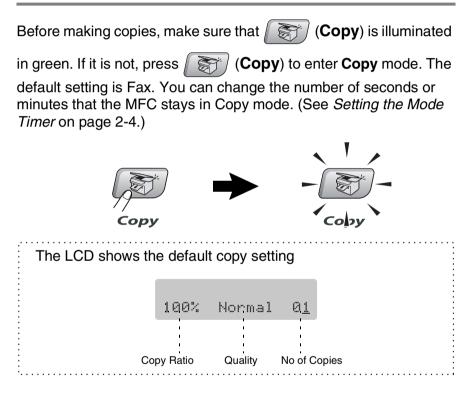

Making a single copy

- **1** Press (Copy) to illuminate it in green.
- **2** Load your document.

(See Load documents on page 1-7.)

3 Press Mono Start or Colour Start.

To stop copying, press Stop/Exit.

Making multiple copies

- **1** Press (Copy) to illuminate it in green.
- 2 Load your document.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press Mono Start or Colour Start.


To sort the copies, press the **Options** key. (See Using the temporary Copy keys on page 8-3.)

Stop copying

To stop copying, press Stop/Exit.

Using the temporary Copy keys

When you want to quickly change the copy settings temporarily for the next copy, use the temporary Copy keys. You can use different combinations.

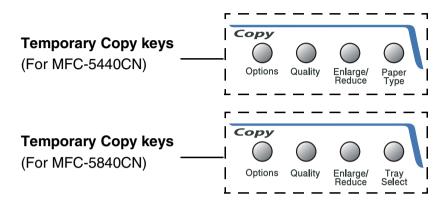

- These settings are temporary, and the MFC returns to its default settings 60 seconds after it finishes copying. However if you have set the Mode Timer to 0 or 30 seconds, the MFC returns to the default settings after the number of seconds that has been set for mode timer. (See *Setting the Mode Timer* on page 2-4.)
 - You can save the copy settings you use most often by setting them as default. See *Changing the default copy settings* on page 8-15.

Increasing copy speed or quality

You can select the copy quality. The default setting is Normal.

Press Quality	Normal	Recommended mode for ordinary printouts. Good copy quality with adequate copy speed.
and	Fast	Fast copy speed and lowest ink consumption. Use FAST to save time (document to be proof-read, large documents or many copies).
	Best	Use this mode to copy precise images such as photographs. BEST uses the highest resolution and slowest speed.

- **1** Press (Copy) to illuminate it in green.
- 2 Load your document.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press Quality.
- 5 Press ▲ or ▼ to choose the copy quality (Fast, Normal or Best).

Press Menu/Set.

6 Press Mono Start or Colour Start.

Enlarging or reducing the image copied

You can select the following enlargement or reduction ratios.

Custom(25-400%) allows you to enter a ratio from 25% to 400%.

Press Enlarge/Reduce	Custom(25-400%)
\sim	200%
	198% 10x15cm→A4
Enlarge/ Reduce	186%10x15cm→LTR
and (Or (to select	142% A5→A4
Enlarge/Reduce	104% EXE→LTR
	100%
	97% LTR→A4
	93% A4→LTR
	83% LGL→A4
	78% LGL→LTR
	69% A4→A5
	50%

- **1** Press (Copy) to illuminate it in green.
- 2 Load your document.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press Enlarge/Reduce.
- **5** Press \blacktriangle or \checkmark to select the enlargement or reduction ratio you want.

Press Menu/Set.

-OR-

You can select Custom (25-400%) and press Menu/Set.

Use the dial pad to enter an enlargement or reduction ratio from 25% to 400%.

Press Menu/Set.

(For example, press 53 to enter 53%.)

6 Press Mono Start or Colour Start.

Special Copy Options 2 in 1 (P), 2 in 1 (L), 4 in 1 (P), 4 in 1 (L) or Poster are not available with Enlarge/Reduce.

Setting the paper type (MFC-5440CN only)

If you are copying on special paper, be sure to select the type of paper you are using so you will get the best print quality.

- **1** Press (Copy) to illuminate it in green.
- 2 Load your document.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press Paper Type.
- 5 Press ▲ or ▼ to select the type of paper you are using (Plain, Inkjet, Glossy or Transparency).

Press Menu/Set.

6 Press Mono Start or Colour Start.

You can change the default Paper Type setting at any time. (See *Setting the Paper Type* on page 2-4.)

Using the Tray Select key (MFC-5840CN only)

You can change the tray that will be used for next copy only.

- **1** Press **(Copy**) to illuminate it in green.
- 2 Load your document.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press Tray Select.
- 5 Press ▲ or ▼ to select Auto, #1(xxx) or #2(xxx). Press Menu/Set.
- 6 Press Mono Start or Colour Start.
- If both trays are set to the same and type of paper, Auto will let your MFC take from Tray#1 first, then take from Tray#2 if Tray#1 runs out of paper.
 - You can only use plain paper sizes Letter, Legal or A4 in Tray#2.

Changing the temporary copy settings

Use the **Options** key to quickly set the following copy settings temporarily for the next copy.

Press Options	Menu Selections	Options select	Factory Setting	Page
Options	Paper Type (MFC-5840CN only)	Plain/Inkjet/ Glossy/ Transparency	Plain	8-9
	Paper Size	Letter/Legal/ A4/A5/ 10(W) x 15(H)cm	A4	8-9
	Brightness	+	+	8-10
	Contrast	+	+	8-10
	Stack/Sort	Stack/Sort	Stack	8-11
	Page Layout	Off(1 in 1)/ 2 in 1 (P)/ 2 in 1 (L)/ 4 in 1 (P)/ 4 in 1 (L)/ Poster(3 x 3)	Off (1 in 1)	8-11
	No. of Copies	No. of Copies:01 (01-99)	01	

After you choose your settings by pressing **Menu/Set**, the LCD shows Set temporarily.

Press **Mono Start** or **Colour Start** if you're finished choosing settings.

-OR-

Press \blacktriangle or \checkmark to select more settings.

Setting paper type (MFC-5840CN only)

If copying on paper other than plain paper, select the type of paper that you are using to get the best print quality.

- **1** Press (Copy) to illuminate it in green.
- 2 Load your document.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press Options and ▲ or ▼ to select Paper Type. Press Menu/Set.
- 5 Press ▲ or ▼ to select the type of paper you are using (Plain, Inkjet, Glossy or Transparency).

Press Menu/Set.

You can only use plain paper in Tray#2.

6 Press Mono Start or Colour Start.

You can change the default Paper Type setting at any time. (See *Setting the Paper Type* on page 2-4.)

Setting paper size

If copying on paper other than A4 size, you will need to change the paper size setting.



- You can copy on Letter, Legal, A4, A5 or Photo Card (10(W) x 15(H)cm) paper.
- You can only use this setting with Tray#1.
- **1** Press (Copy) to illuminate it in green.
- 2 Load your document.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press Options and ▲ or ▼ to select Paper Size. Press Menu/Set.

- 5 Press ▲ or ▼ to select the size of paper you are using (Letter, Legal, A4, A5 or 10(W) x 15(H)cm). Press Menu/Set.
- 6 Press Mono Start or Colour Start.

Adjusting brightness

You can adjust the copy brightness to make copies darker or lighter.

- **1** Press (Copy) to illuminate it in green.
- 2 Load your document.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press Options and ▲ or ▼ to select Brightness. Press Menu/Set.
- **5** Press \blacktriangle to make a lighter copy.

-OR-

Press ▼ to make a darker copy.

Press Menu/Set.

6 Press Mono Start or Colour Start.

Adjusting contrast

You can adjust the copy contrast to help an image look sharper and more vivid.

- 1 Press (Copy) to illuminate it in green.
- 2 Load your document.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press Options and ▲ or ▼ to select Contrast. Press Menu/Set.

5 Press \blacktriangle to increase the contrast.

-OR-

Press \checkmark to decrease the contrast.

- Press Menu/Set.
- 6 Press Mono Start or Colour Start.

Sorting copies using the ADF

You can sort multiple copies. Pages will be stacked in the order 321, 321, 321, and so on.

- 1 Press (Copy) to illuminate it in green.
- 2 Load your document.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press Options and ▲ or ▼ to select Stack/Sort. Press Menu/Set.
- 5 Press ▲ or ▼ to select Sort. Press Menu/Set.
- 6 Press Mono Start or Colour Start.

Making N in 1 copies or a poster (Page Layout)

You can reduce the amount of copies by using the N in 1 copy feature. This allows you to copy two or four pages onto one page, allowing you to save paper. It is also possible to create a poster. When you use the Poster feature your MFC divides your document into sections, then enlarges the sections so you can assemble them into a poster. If you want to print a poster, use the scanner glass.

- Please make sure Paper Size is set to A4 or Letter.
 - You can use N in 1 copy feature with 100% copy size only.
 - \blacksquare (P) means Portrait and (L) means Landscape.

- 1 Press **(Copy**) to illuminate it in green.
- 2 Load your document.
- **3** Use the dial pad to enter the number of copies you want (up to 99).
- **4** Press **Options** and **▲** or **▼** to select Page Layout. Press Menu/Set
- **5** Press \blacktriangle or \checkmark to select 2 in 1 (P), 2 in 1 (L), 4 in 1 (P), 4 in 1 (L), Poster(3 x 3) **Or** Off(1 in 1). Press Menu/Set
- 6 Press Mono Start or Colour Start to scan the document.
- 7 If you are making a poster or placed the document in the ADF, the MFC scans document and starts printing.

If you are using the scanner glass:

8 After the MFC scans the page, the LCD shows:

Next	Page?
1.Yes	2.No

Press 1 to scan the next page.

9 Put the next document on the scanner glass.

 
Set Next Page Then Press Set

Press Menu/Set.

Repeat Steps 8 and 9 for each page of the layout.

10 After all the pages of the document have been scanned, press 2 to end.


If Glossy has been selected in the Paper Type setting for N in 1 copies, the MFC will print the images as if Plain paper had been selected.




For Poster copies, you cannot make more than one copy.

If you are copying from the ADF, insert the document face *up* in the direction shown below.

2 in 1 (P)

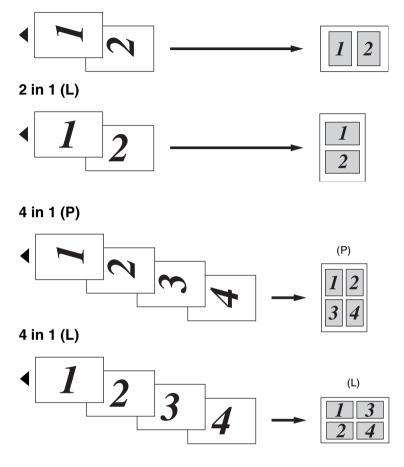

If you are copying from the scanner glass, place the document face *down* in the direction shown below.

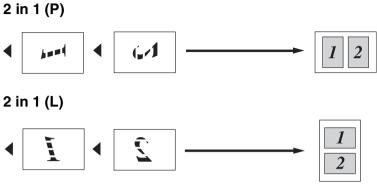

4 in 1 (P)




4 in 1 (L)



Poster (3X3)

You can make a poster size copy of a photograph.

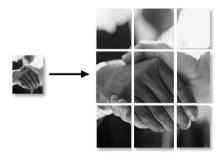

Changing the default copy settings

You can save the copy settings you use most often by setting them as default. These settings will remain until you change them again.

Increasing copy speed or quality

- 1 Press Menu/Set, 3, 1.
- 2 Press ▲ or ▼ to select Normal, Best or Fast. Press Menu/Set.
- 3 Press Stop/Exit.

Adjusting brightness

- **1** Press **Menu/Set**, **3**, **2**.
- **2** Press \blacktriangle to make a lighter copy.

-OR-

Press ▼ to make a darker copy.

- Press Menu/Set.
- 3 Press Stop/Exit.

Adjusting contrast

You can change the contrast to help an image look sharper and more vivid.

- 1 Press Menu/Set, 3, 3.
- **2** Press \blacktriangle to increase the contrast.

-OR-

Press ▼ to decrease the contrast.

Press Menu/Set.

3 Press Stop/Exit.

Adjusting colour saturation

- **1** Press **Menu/Set**, **3**, **4**.
- 2 Press ▲ or ▼ to select Red, Green or Blue. Press Menu/Set.
- 3 Press ▲ to increase the colour saturation.
 —OR—

Press ▼ to decrease the colour saturation. Press **Menu/Set**.

4 Return to Step 2 to select the next colour.

----OR----

Press Stop/Exit.

Legal limitations

Colour reproductions of certain documents are illegal and may result in either criminal or civil liability. This memorandum is intended to be a guide rather than a complete listing of every possible prohibition. In case of doubt, we suggest that you check with relevant authorities as to any particular questionable documents.

The following are examples of documents which should not be copied:

- Money
- Bonds or other certificates of debt
- Certificates of Deposit
- Service or Draft paper of the Armed Forces.
- Passports
- Postage Stamps (cancelled or uncancelled)
- Immigration Papers
- Welfare documents
- Cheques or Drafts drawn by Governmental Agencies
- Documents, badges or insignias of identification
- Licences and Certificates of Title to motor vehicles


Works subject to Copyright cannot be copied. Sections of works subject to Copyright can be copied for 'fair use'. Multiple copies would indicate improper use.

Works of art should be considered as works subject to Copyright.



Introduction

Even if your MFC is not connected to your computer, you can print photos directly from the digital camera media. Your Brother MFC includes five media drives (slots) for use with popular digital camera media: CompactFlash[®], SmartMedia[®], Memory Stick[®], SecureDigital[™], and xD-Picture Card[™].

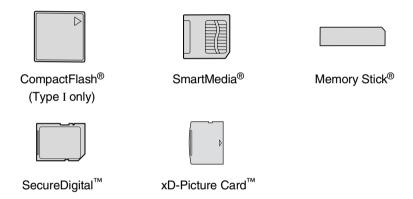

The PhotoCapture Center[™] feature lets you print digital photos from your digital camera at high resolution to get photo quality printing.

- miniSD[™] can be used with miniSD[™] adapter.
- I Memory Stick Duo[™] can be used with Memory Stick Duo[™] adapter.
- Adapters are not included with the MFC. Contact a third party supplier for adapters.

You cannot use Tray#2 with the PhotoCapture Center[™] feature.

PhotoCapture Center[™] requirements


To avoid error conditions, please remember:

- The DPOF file on the media card must be in a valid format. (See DPOF printing on page 9-8.)
- The image file extension must be .JPG (Other image file extensions .JPEG, .TIF, .GIF and so on will not be recognized).
- Walk-up PhotoCapture Center[™] printing must be performed separately from PhotoCapture Center[™] operations using the PC. (Simultaneous operation is not available.)
- IBM Microdrive[™] is not compatible with the MFC.
- The MFC can read up to 999 files in a media card.
- Use only Smart media cards with a 3.3v voltage rating.
- CompactFlash[®] Type II is not supported.
- When printing the INDEX or IMAGE, the PhotoCapture Center[™] will print all the valid images, even if one or more images have been corrupted. A portion of the corrupted image may be printed.
- Your MFC is designed to read media cards that have been formatted by a digital camera.

When a digital camera formats a media card it creates a special folder into which it copies image data. If you need to modify the image data stored on a media card with your PC, we recommend that you do not modify the folder structure created by the digital camera. When saving new or modified image files to the media card we also recommend you use the same folder your digital camera uses. If the data is not saved to the same folder the MFC may not be able to read the file or print the image.

Getting started

Firmly insert the card into the appropriate slot.

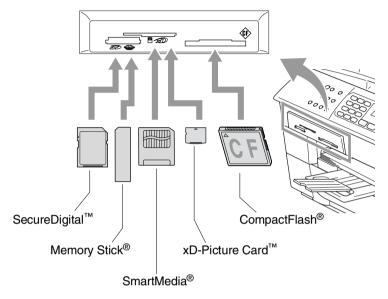

PhotoCapture key indications:

- PhotoCapture light is ON, the media card is inserted properly.
- PhotoCapture light is OFF, the media card is not properly inserted.
- PhotoCapture light is BLINKING, the media card is being read or written to.



Do NOT unplug the power cord or remove the media card from the media drive (slot) while the MFC is reading or writing to the card (the **PhotoCapture** key is blinking). **You will lose your data or damage the card.**

The MFC can only read one media card at a time so do not insert more than one card.

The steps below give a brief outline of the Direct Printing feature. Please see the remaining pages of this chapter for more detailed instructions.

1 Insert the media card firmly into the media drive (slot).

When you insert your media card into the proper slot, the LCD shows.

C.Flash Active Press PhotoCapture key...

The media active message will be shown for 60 seconds and then disappear. Even in that case, you can enter the PhotoCapture mode by pressing **PhotoCapture**.

2 Press PhotoCapture.

If your digital camera supports DPOF printing, see *DPOF printing* on page 9-8.

3 Print the index that shows thumbnail views of images stored on your media card. Your MFC will assign an image number to each thumbnail.

Press Print Index.

Press Colour Start to start printing the index sheet.

(See Printing the Index (Thumbnails) on page 9-5.)

4 To print images, press ▲ or ▼ to select Print Images and then press Menu/Set.

Enter the image number and press Menu/Set.

Press Colour Start to start printing.

(See Printing images on page 9-6.)

You can change the settings for printing images, such as the Paper Type & Paper Size, Print Size and number of copies. (See *Printing images* on page 9-6.)

Printing the Index (Thumbnails)

The PhotoCapture Center[™] assigns numbers for images (such as No.1, No.2, No.3, and so on).



No. 1 01. 01. 2003 DELJPG 100KB

It does not recognize any other numbers or file names that your digital camera or PC have used to identify the pictures. You can print a thumbnail page (Index page with 6 or 5 images per line). This will show all the pictures on the media card.

1 Make sure you have inserted the media card.

Press PhotoCapture. (See page 9-3.)

- 2 Press Print Index.
- 3 Press ▲ or ▼ to select 6 Images/Line or 5 Images/Line. Press Menu/Set.

5 Images/Line

Index

6	Images/Line

4 Press Colour Start to start printing.

Print time for 5 Images/Line will be slower than 6 Images/Line, but the quality is better. To print an image, see *Printing images* on page 9-6.

Printing images

Before you can print an individual image, you have to know the image number.



Print the Index first. (See Printing the Index (Thumbnails) on page 9-5.)

1 Make sure you have inserted the media card. Press PhotoCapture. (See page 9-3.)

2 Press ▲ or ▼ to choose Print Images. Press Menu/Set.

If your media card contains valid DPOF information, the LCD shows DPOF Print: Yes, please go to DPOF printing on page 9-8

3 Use the dial pad to enter the image number that you want to print from the Index page (Thumbnails).

Enter	δ.	Set	Key
No.:1,	З,	6	

Press Menu/Set.

Repeat this step until you have entered all the image numbers that you want to print.

 $_{\rm for}$ You can enter all the numbers at one time by using the $\, imes \,$ key for a comma or the # key for hyphen. (For example, Enter $1 \times 3 \times 6$ - to print images No.1, No.3 and

No.6. Enter 1#5 to print images No.1 to No.5).

 
4 After you have selected all the image numbers,

press Menu/Set again, and go to Step 5.

---OR---

If you have finished choosing settings, press Colour Start.

Paper Type & Paper Size



Press Menu/Set.

If you selected Letter or A4, go to Step 6.

If you selected another size, go to Step 7.

__OR__

If you have finished choosing settings, press Colour Start.


Print Size

6 If you selected Letter or A4, press ▲ or ▼ to select the print size (10 x 8cm, 13 x 9cm, 15 x 10cm, 18 x 13cm, 20 x 15cm or Max. Size).

Press Menu/Set, and go to Step 7.

-OR-

If you have finished choosing settings, press **Colour Start**. Printed Position for A4 paper

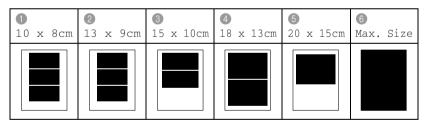

Number of Copies

7 Use the dial pad to enter the number of copies you want. Press **Menu/Set**.



Your temporary settings will be kept until you take out the media card from the drive (slot), print images or press **Stop/Exit**.

DPOF printing

DPOF stands for Digital Print Order Format.

Major Digital Camera manufacturers (Canon Inc., Eastman Kodak Company, Fuji Photo Film Co. Ltd., Matsushita Electric Industrial Co. Ltd. and Sony Corporation.) created this standard to make it easier to print images from a digital camera.

If your digital camera supports DPOF printing, you will be able to select on the Digital Camera display the images and number of copies you want to print.

When the memory card (CompactFlash[®], SmartMedia[®], Memory Stick[®], SecureDigital[™] and xD-Picture Card[™]) containing DPOF information is put into your MFC, you can print the selected image easily.

1 Insert your media card into the proper drive (slot).

C.Flash Active Press PhotoCapture key...

- The media active message will be shown for 60 seconds and then disappear. Even in that case, you can enter the PhotoCapture mode by pressing **PhotoCapture**.
- 2 Press PhotoCapture.
- **3** Press ▲ or ▼ to select Print Images.
 - Press Menu/Set.
- **4** If there is a DPOF file on the card, the LCD shows:

ĺ	Selea	ct	δc	Set	
	DPOF				

5 Press ▲ or ▼ to select DPOF Print:Yes.

Press Menu/Set.

6 Press ▲ or ▼ to select Letter Glossy, 10x15cm Glossy, 13x18cm Glossy, A4 Glossy, Letter Plain, A4 Plain, Letter Inkjet, A4 Inkjet Or 10x15cm Inkjet.

Press Menu/Set.

If you chose Letter or A4, press ▲ or ▼ to choose the print size (10 x 8cm, 13 x 9cm, 15 x 10cm, 18 x 13cm, 20 x 15cm or Max. Size).

Press Menu/Set.

7 Press Colour Start to print.

Changing the default settings

You can save the PhotoCapture Center[™] settings you use most often by setting them as default. These settings will remain until you change them again.

Increasing print speed or quality

- **1** Press **Menu/Set**, **4**, **1**.
- 2 Press ▲ or ▼ to select Normal or Photo.

Press Menu/Set.

3 Press Stop/Exit.

Setting the paper & size

1 Press **Menu/Set**, **4**, **2**.

2 Press \blacktriangle or \checkmark to select

Letter Glossy,10x15cm Glossy,13x18cm Glossy, A4 Glossy,Letter Plain,A4 Plain,Letter Inkjet, A4 Inkjet **Or** 10x15cm Inkjet.

Press Menu/Set.

If you selected Letter or A4, press ▲ or ▼ to select the print size (10 x 8cm, 13 x 9cm, 15 x 10cm, 18 x 13cm, 20 x 15cm or Max. Size).

Press Menu/Set.

3 Press Stop/Exit.

PhotoCapture 1.Print Quality

PhotoCapture 2.Paper & Size

Adjusting brightness

- 1 Press Menu/Set. 4. 3.
- **2** Press \blacktriangle to make a lighter print. -OR-

Press ▼ to make a darker print. Press Menu/Set.

3 Press Stop/Exit.

Adjusting contrast

You can choose the contrast setting. More contrast will make an image look sharper and more vivid.

- **1** Press **Menu/Set**, **4**, **4**.
- **2** Press \blacktriangle to increase the contrast.

__OR__

Press v to decrease the contrast.

Press Menu/Set

3 Press Stop/Exit.

Colour enhancement

You can turn on the colour enhancement feature to print more vivid images. Printing time will be slower.

- 1 Press Menu/Set, 4, 5.
- **2** Press \blacktriangle or \checkmark to select On.

Press Menu/Set

```
-OR-
```

Select Off and press Menu/Set, then go to Step 5.



/ If you select On, you can customize the White Balance, Sharpness or Colour Density.

PhotoCapture 3.Brightness

•	

5.Color Enhance

PhotoCapture

PhotoCapture 4.Contrast

- 3 Press ▲ or ▼ to select White Balance, Sharpness or Color Density.
 - Press Menu/Set.
- 4 Press ▲ or ▼ to adjust the degree of the setting. Press Menu/Set.
- 5 Press Stop/Exit.

White Balance

This setting adjusts the hue of the white areas of an image. Lighting, camera settings and other influences will effect the appearance of white. The white areas of a picture may be slightly pink, yellow or some other colour. By using this adjustment you can correct this effect and bring the white areas back to pure white.

Sharpness

This setting enhances the detail of an image. It is similar to adjusting the fine focus on a camera. If the image is not in true focus and you cannot see the fine details of the picture, then adjust the sharpness.

Colour Density

This setting adjusts the total amount of colour in the image. You can increase or decrease the amount of colour in an image to improve a washed out or weak picture.

 
Cropping

If your photo is too long or wide to fit the available space on your selected layout, part of the image will be automatically cropped.

The default setting is <code>On.</code> If you want to print the whole image, turn this setting to <code>Off</code>.

- **1** Press **Menu/Set**, **4**, **6**.
- **2** Press ▲ or ▼ to select Off (or On).
 - Press Menu/Set.
- 3 Press Stop/Exit.

Cropping:On



Cropping:Off



Borderless

This feature expands the printable area to fit the edges of the paper. Printing time will be slightly slower.

- **1** Press **Menu/Set**, **4**, **7**.
- 2 Press ▲ or ▼ to select Off (or On). Press Menu/Set.
- 3 Press Stop/Exit.

Understanding the Error Messages

Once you are familiar with the types of errors that can occur while you're using the PhotoCapture Center[™], you can easily identify and troubleshoot any difficulties.

When an error message appears on the LCD, the MFC will beep to get your attention.

Media Error—This message will appear if you insert a media card that is either bad or not formatted, or when there is a problem with the media drive. To clear this error, take out the media card.

No File—This message will appear if you try to access a media card in the drive (slot) that does not contain a .JPG file.

Out of Memory—This message will appear if you are working with images that are too large for the MFC's memory.

Using PhotoCapture Center[™] from your PC

You can access the media card that is in the media drive (slot) of the MFC from your PC.

(See Using the PhotoCapture CenterTM from your PC on page 6-1 in Software User's Guide on the CD-ROM or Using the PhotoCapture CenterTM from a Macintosh[®] (not available for MFC-3240C and MFC-5440CN) on page 8-47 in the Software User's Guide on the CD-ROM.)

Using PhotoCapture Center[™] for scanning documents

You can scan documents and save them onto a media card to quickly and easily make documents portable. (See *Scan to Card (not available for MFC-3240C, MFC-210C and MFC-5440CN)* on page 2-23 in Software User's Guide on the CD-ROM.)

10 Important information

Important Information for Australia

IMPORTANT-For Your Safety.

To ensure safe operation the three-pin plug supplied must be inserted only into a standard three-pin power point which is effectively grounded through the normal household wiring.

Extension cords used with the equipment must be three-conductor and be correctly wired to provide connection to ground. Incorrectly wired extension cords are a major cause of fatalities.

The fact that the equipment operates satisfactorily does not imply that the power is grounded and that the installation is completely safe. For your safety, if in any doubt about the effective grounding of the power, consult a qualified electrician.

Disconnect device

This machine must be installed near a power outlet, which is easily accessible. In case of emergencies, you must disconnect the power cord from the power outlet in order to shut off power completely.

LAN connection

Caution

Do not connect this product to a LAN connection that is subject to over-voltages.

International ENERGY STAR[®] Compliance Statement

The purpose of the International ENERGY STAR[®] Program is to promote the development and popularization of energy-efficient office equipment.

As an ENERGY STAR[®] Partner, Brother Industries, Ltd. has determined that this product meets the ENERGY STAR[®] guidelines for energy efficiency.



Important safety instructions

- **1** Read all of these instructions.
- 2 Save them for later reference.
- **3** Follow all warnings and instructions marked on the product.
- **4** Unplug this product from the wall socket before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- **5** Do not use this product near water.
- **6** Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 7 Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should never be placed in a built-in installation unless proper ventilation is provided.
- 8 This product should be operated from the type of power source indicated on the label. If you are not sure of the type of power available, call your dealer or local power company.

- **9** This product is equipped with a 3-wire grounded plug, a plug having a third (grounded) pin. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounded plug.
- **10** Do not allow anything to rest on the power cord. Do not place this product where people can walk on the cord.
- **11** Do not place anything in front of the machine that will block received faxes. Do not place anything in the path of received faxes.
- **12** Do not touch a document during printing.
- **13** Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 14 Do not attempt to service this product yourself, because opening or removing covers may expose you to dangerous voltage points and/or other risks. Refer all servicing to service personnel.
- **15** Wait until pages have exited the machine before picking them up.
- **16** Unplug this product from the wall outlet and refer servicing to Authorized Service Personnel under the following conditions:
 - When the power cord is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.

Important Information for New Zealand

Important Safety Instructions

- **1** Read all of these instructions.
- 2 Save them for later reference.
- **3** Follow all warnings and instructions marked on the product.
- **4** Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- **5** The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
- **6** This equipment does not fully meet Telecom's impedance requirements. Performance limitations may occur when used in conjunction with some parts of the network. Telecom will accept no responsibility should difficulties arise in such circumstances.
- 7 If a charge for local calls is acceptable, the "Dial Button" should not be used for local calls. Only the 7-digits of the local number should be dialled from your telephone. Do not dial the area code digit or the "0" prefix.
- *8* This equipment shall not be set to make automatic calls to the Telecom '111' Emergency Service.
- **9** This equipment should not be used under any circumstances which may constitute a nuisance to other Telecom customers.
- **10** Not all telephones will respond to incoming ringing when connected to the extension socket.
- **11** The answer delay setting of this equipment shall not be set to less than the default setting as this will destroy Caller ID information.

- 12 All persons using this device for recording telephone conversations shall comply with New Zealand Iaw. This requires that at least one party to the conversation is to be aware that it is being recorded. In addition, the Principles enumerated in the Privacy Act 1993 shall be complied with in respect to the nature of the personal information collected, the purpose for its collection, how it is to be used and what it disclosed to any other party.
- **13** Do not place this product on an unstable surface, stand, or table. The product may fall, causing serious damage to the product.
- **14** Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should not be placed in a built-in installation unless proper ventilation is provided.
- **15** This product should be operated from the type of power source indicated on the label. If you are not sure of the type of power available, consult with your dealer or local power company.
- **16** This product is equipped with a 3-wire earthed plug. This plug will fit into only an earthed socket. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete socket. Do not defeat the purpose of an earthed plug.
- **17** Do not allow anything to rest on the power cord. Do not locate this product where people can walk on the cord.
- **18** Do not place anything in front of the machine that will block received faxes. Do not place anything in the path of received faxes.
- **19** Do not touch a document during printing.
- **20** Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in a risk of fire or electric shock. Never spill liquid of any kind on the product.

- 21 Do not attempt to service this product yourself, because opening or removing covers may expose you to dangerous voltage points and/or other risks. Refer all servicing to service personnel.
- **22** Unplug this product from the mains power and telephone line sockets, and refer servicing to qualified Service Personnel under the following conditions:
 - If the power cord is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.
- 23 This unit will only work in conjunction with a tone signalling (DTMF) telephone, but some telephones are not compatible. Since noise or speech from the telephone can upset dialling from this unit, errors may result if the devices are used together in other than quiet conditions.
- 24 Where it is necessary to dial prefix digits, such as a Caller Display override code ("0196" or "0197"), this unit will have to be used in conjunction with an associated tone signalling (DTMF) telephone.
- **25** Note that some telephones are not compatible with this unit and dialling errors may result if the two devices are used together in other than quiet conditions. The Telecom Faults Service is not to be called should such problems arise. In such cases, it is recommended that the prefix and wanted number are dialled manually.
- **26** This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

IMPORTANT-For Your Safety

To ensure safe operation the three-pin plug supplied must be inserted only into a standard three-pin power point which is effectively grounded through the normal household wiring.

Extension cords used with the equipment must be three-conductor and be correctly wired to provide connection to ground. Incorrectly wired extension cords are a major cause of fatalities.

The fact that the equipment operates satisfactorily does not imply that the power is grounded and that the installation is completely safe. For your safety, if in any doubt about the effective grounding of the power, consult a qualified electrician.

Disconnect device

This machine must be installed near a power outlet, which is easily accessible. In case of emergencies, you must disconnect the power cord from the power outlet in order to shut off power completely.

IMPORTANT NOTICE

Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use in emergencies.

LAN connection

Caution

Do not connect this product to a LAN connection that is subject to over-voltages.

Important Information for Some Countries

Important Safety Instructions

- **1** Read all of these instructions.
- **2** Save them for later reference.
- **3** Follow all warnings and instructions marked on the product.
- **4** Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- **5** Do not place this product near water.
- **6** Do not place this product on an unstable cart, stand, or table. The product may drop, causing serious damage to the product.
- 7 Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or on a radiator or heater. This product should never be placed in a built-in installation unless proper ventilation is provided.
- 8 This product should be operated from the type of power source indicated on the label. If you are not sure of the type of power available, consult with your dealer or local power company.
- 9 This product is equipped with a 2-wire grounding type plug or a 3-wire grounding type plug (Only for Singapore, Malaysia, Hong Kong and India), a plug having two or three pins. This plug will only fit into only a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.
- **10** Do not allow anything to rest on the power cord. Do not place this product where people can walk on the cord.

- **11** If an extension cord is used with this product, make sure that the total ampere ratings on the products plugged into the extension cord do not exceed the extension cord ampere rating.
- **12** Do not place anything in front of the machine that will block received faxes. Do not place nything in the path of received faxes.
- **13** Do not touch a document during printing.
- 14 Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in the risk of fire or electric shock. Never spill liquid of any kind on the product.
- **15** Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points and/or other risks, and may void your warranty. Please refer all servicing to our Authorized Service Personnel. A list of Authorized Service Centres has been included for your convenience, or you may contact the Brother Dealer for Service.
- **16** Unplug this product from the wall outlet and refer servicing to Authorized Service Personnel under the following conditions:
 - If the power cord is damaged or frayed.
 - If the product has been spilled by liquid.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.

- **17** To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).

For protection against the risk of electrical shock, always disconnect all cables from the wall outlet before servicing, modifying or installing the equipment.

This equipment may not be used on coin service lines provided by the telephone company or connected to party lines.

Brother cannot accept any financial or other responsibilities that may be the result of your use of this information, including direct, special or consequential damages. There are no warranties extended or granted by this document.

LAN connection

Caution

Do not connect this product to a LAN connection that is subject to over-voltages.

Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd. Brother is a registered trademark of Brother Industries, Ltd.

Multi-Function Link is a registered trademark of Brother International Corporation.

© 2004 Brother Industries, Ltd. All rights reserved.

Windows and Microsoft are registered trademarks of Microsoft in the U.S. and other countries.

Macintosh and TrueType are registered trademarks of Apple Computer, Inc.

PaperPort and OmniPage OCR are registered trademarks of ScanSoft, Inc.

Presto! PageManager is a registered trademark of NewSoft Technology Corporation.

Microdrive is a trademark of International Business Machine Corporation.

SmartMedia is a registered trademark of Toshiba Corporation.

CompactFlash is a registered trademark of SanDisk Corporation.

Memory Stick is a registered trademark of Sony Corporation.

SecureDigital is a trademark of Matsushita Electric Industrial Co.Ltd., SanDisk Corporation and Toshiba Corporation.

SanDisk is a licensee of the SD and miniSD trademarks.

xD-Picture Card is a trademark of Fujifilm Co.Ltd., Toshiba Corporation and Olympus Optical Co. Ltd.

Memory Stick Duo and MagicGate are trademarks of Sony Corporation.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

All other brand and product names mentioned in this User's Guide, the Software User's Guide, and the Network User's Guide are registered trademarks of their respective companies.

11 Troubleshooting and routine maintenance

Troubleshooting

Error messages

As with any sophisticated office product, errors may occur. If this happens, your MFC identifies the problem and displays an error message. The most common error messages are shown below.

You can correct most problems by yourself. If you need additional help, the Brother Solutions Center offers latest FAQs and troubleshooting tips.

ERROR MESSAG	ERROR MESSAGES			
ERROR MESSAGE	CAUSE	ACTION		
Comm.Error	Poor phone line quality caused a communication error.	Try the call again. If the problem continues, call the telephone company and ask them to check your phone line.		
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Check the other fax machine's polling setup.		
Cover is Open	The scanner cover is not closed completely.	Lift the scanner cover and then close it again.		
Data Remaining	Print data remains in the MFC's memory.	Re-start printing from your computer.		
	Print data remains in the MFC's memory. The USB cable was unplugged while the computer was sending the data to the MFC.	Press Job Cancel for MFC-5440CN or Stop/Exit for MFC-5840CN. The MFC will cancel the job and eject the page that is being printed.		
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again.		

Visit us at http://solutions.brother.com.

ERROR MESSAGES			
ERROR MESSAGE	CAUSE	ACTION	
Document Jam	The document scanned from ADF was longer than about 90 cm.	See Using the automatic document feeder (ADF) on page 1-7.	
	The document is jammed in the MFC.	See Document jams on page 11-5.	
High Temperature	The print head is too warm.	Allow the MFC to cool down.	
Ink Empty	One or more of the ink cartridges is empty. The MFC will stop all print operations. While memory is available, black and white faxes will be received into memory. If a sending machine has a colour fax, the MFC's 'handshake' will request that the fax be sent as black and white. If the sending machine has the ability to convert it, the colour fax will be received into memory as a black and white fax.	Replace the ink cartridges. (See <i>Replacing the ink cartridges</i> on page 11-25.)	
Low Temperature	The print head is too cold.	Allow the MFC to warm up.	
Media Error (MFC-5840CN only)	The media card is either corrupted, improperly formatted, or there is a problem with the media drive.	Re-insert the card firmly into the slot to make sure it is in the proper position. If the error remains, check the media drive by inserting another media card that you know is working.	
Near Empty	One or more of the ink cartridges are running out of ink. If a sending machine has a colour fax, the MFC's 'handshake' will request that the fax be sent as black and white. If the sending machine has the ability to convert it, the colour fax will be received into memory as a black and white fax.	Order a new ink cartridge.	
No Cartridge	An ink cartridge is not properly installed.	Take out the ink cartridge and put it in again seating it properly. (See <i>Replacing the ink cartridges</i> on page 11-25.)	
No File (MFC-5840CN only)	The media card in the media drive does not contain a .JPG file.	Re-insert the correct media card.	

ERROR MESSAG	ERROR MESSAGES			
ERROR MESSAGE	CAUSE	ACTION		
(For MFC-5440CN) No Paper Fed	The MFC is out of paper.	Add paper, and then press Mono Start or Colour Start .		
(For MFC-5840CN) No Paper Fed #1	The paper is jammed in the MFC.	See Printer jam or paper jam on page 11-6.		
No Paper Fed #1	The paper loaded in Tray#2 is the wrong size or type. (For MFC-5840CN only)	Check the paper loaded in Tray#2. You can only use plain paper sizes Letter, Legal, A4, Executive or B5 in this way.		
No Response/Busy	The number you dialled does not answer or is busy.	Verify the number and try again.		
Not Registered	You tried to access a Speed Dial number that is not programmed.	Set up the Speed Dial number. (See <i>Storing Speed-Dial numbers</i> on page 5-1.)		
Out of Memory	The MFC's memory is full.	(Fax sending or copy operation in process) Press Stop/Exit and wait until the other operations in progress finish and then try again. OR Clear the data in the memory. To gain extra memory, you can turn off Fax Storage. (See <i>Setting Fax Storage</i> on page 6-2.) OR Print the faxes that are in the memory. (See <i>Printing a fax from the memory</i> on page 4-5.) (Printing operation in process) Reduce print resolution.		
Paper Jam	Paper is jammed in the MFC.	(See Printer jam or paper jam on page 11-6.)		
Wrong Paper Size	Paper is not the correct size.	Reload the correct size of paper (Letter, Legal or A4), and then press Mono Start or Colour Start .		


ERROR MESSAGES				
ERROR MESSAGE	CAUSE	ACTION		
Unable to Change Unable to	The MFC has a mechanical problem. — OR — A foreign obstacle, such as a clip	Open the scanner cover and remove any foreign obstacles from inside the MFC. If the error message continues, please follow the steps below before disconnecting the MFC so		
Clean	or ripped paper, is in the MFC.	you will not lose any important messages. Then, disconnect the MFC from the power source for several minutes (which will erase all		
Unable to Init.		faxes), and then reconnect it. Check whether the MFC has faxes in the		
Unable to Print		memory 1. Press Menu/Set, 9, 0, 1. 2. If the MFC has no faxes, disconnect the MFC		
Unable to Scan		from the power source for several minutes and then reconnect it. — OR —		
		If faxes are present, you can transfer them to another fax machine. Go to step 3. — OR—		
		You can forward the faxes to your PC. Please see Transfer faxes to your PC .		
		Transfer faxes to another fax machine		
		If you have not set up your Station ID, you cannot enter fax transfer mode.		
		3. Enter the fax number to which faxes will be forwarded.		
		 Press Mono Start. After the faxes are transferred, disconnect the MFC from the power source for several minutes and then reconnect it. 		
		You can transfer the Fax Journal report to another fax machine by pressing Menu/Set , 9 , 0 , 2 in step 1.		
		Transfer faxes to your PC You can move the faxes from your MFC's memory to your PC.		
		 Press Menu/Set, 2, 5, 1. Using ▲ or ▼, select PC Fax Receive, and then press Menu/Set. 		
		The LCD will ask if you want to transfer a fax to your PC.		
		3. To transfer all faxes to your PC, press 1. —OR— To keep all faxes in the MFC's memory,		
		 4. After the faxes are transferred, disconnect the MFC from the power source for several minutes and then reconnect it. 		
		(For details, see Using Brother PC-FAX software on page 5-1 in Software User's Guide on the CD-ROM.)		

Document jams

If the document is jammed, follow the steps below.

Document is jammed in the top of the ADF unit.

- **1** Take out any paper from the ADF that is not jammed.
- **2** Open the ADF cover.
- **3** Pull the jammed document out as shown in the illustration below.

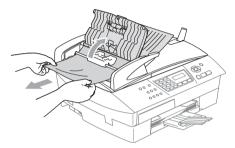

4 Close the ADF cover. Press **Stop/Exit**.

Document is jammed inside the ADF unit.

- 1 Take out any paper from the ADF that is not jammed.
- **2** Lift the document cover.
- 3 Pull the jammed document out to the right.




- 4 Close the document cover. Press **Stop/Exit**.
- 11 5 TROUBLESHOOTING AND ROUTINE MAINTENANCE

Printer jam or paper jam


Remove the jammed paper depending on where it is jammed in the MFC.

Paper is jammed inside the paper tray

1 Pull the paper tray out of the MFC.

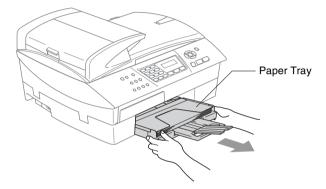


2 Slowly pull out the jammed paper to remove it.

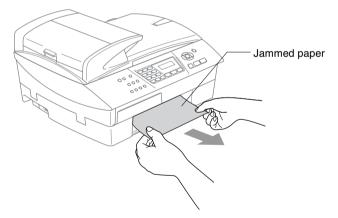


Paper is jammed inside the MFC


- 1 Lift the scanner cover from the right-hand side of the MFC until it locks securely into the open position.
- 2 Remove the jammed paper.

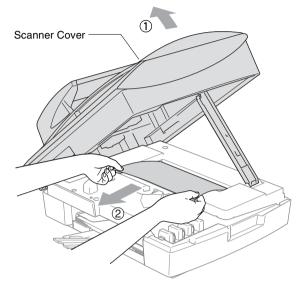

If the paper is jammed underneath the print head, disconnect the MFC from the power source so you can move the print head and take out the paper. **3** If you can not pull out the jammed paper, remove the Jam Clear Cover. Pull the jammed paper out of the MFC.

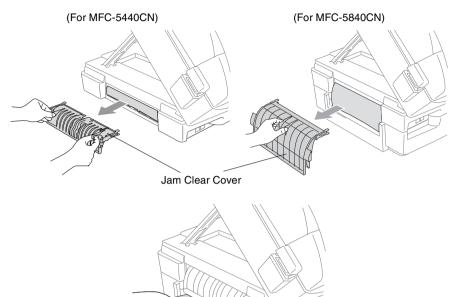

- **4** Re-insert the Jam Clear Cover.
- **5** Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover.

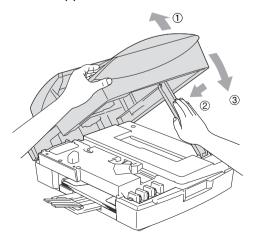

If you are having difficulty with your MFC

If you think there is a problem with your MFC, check the chart below and follow the troubleshooting tips.

The Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at http://solutions.brother.com.

DIFFICULTY	SUGGESTIONS
Printing	
No printout.	Check the interface cable connection on both the MFC and your computer.
	Check that the MFC is plugged in and not in the Power Save condition.
	One or more ink cartridges are empty. (See <i>Replacing the ink cartridges</i> on page 11-25.)
	Check to see if the LCD is showing an error message. (See Error messages on page 11-1.)
Poor quality print.	Check the print quality. (See Checking the print quality on page 11-16.)
	Make sure the Printer Driver or Paper Type setting in the menu matches the type of paper you are using. (See <i>Media Type</i> on page 1-8 in Software User's Guide on the CD-ROM and <i>Setting the Paper Type</i> on page 2-4.)
	Make sure your ink cartridges are fresh. Cartridges remain fresh for up to two years if kept in their original packaging, after that the ink may become clogged. Cartridge expiration dates are printed on the package.
	Try using the recommended types of paper. (See <i>About paper</i> on page 1-10.)
	The recommended environment for your MFC is between 20°C to 33°C.
White horizontal lines appear	Clean the print head. (See Cleaning the print head on page 11-15.)
in text or graphics.	Try using the recommended types of paper. (See <i>About paper</i> on page 1-10.)
	If horizontal bands appear when using plain paper, use the 'Enhanced Normal Printing' mode to help avoid banding on some types of plain paper. In the printer driver 'Basic' tab, click 'Settings', and check 'Enhanced Normal Printing'. If you continue to have horizontal bands, change the Media Type selection to 'Slow Drying Paper' in the printer driver 'Basic' tab to help enhance the print quality.
MFC prints blank pages.	Clean the print head. (See Cleaning the print head on page 11-15.)
Characters and lines are stacked.	Check the printing alignment. (See <i>Checking the printing alignment</i> on page 11-18.)
Printed text or images are skewed.	Make sure the paper is loaded properly in the paper tray and the paper side guide is adjusted correctly. (See <i>How to load paper, envelopes and post cards</i> on page 1-15.)
Smudged stain at the top center of the printed page.	Make sure the paper is not too thick or not curled. (See <i>About paper</i> on page 1-10.)

DIFFICULTY	SUGGESTIONS
Printing (Continued)	
Printing appears dirty or ink seems to run.	Make sure you are using the proper types of paper. (See <i>About paper</i> on page 1-10.) Don't handle the paper until the ink is dry.
Stains appear on the reverse side or at the bottom of the	Make sure the Printer Platen is not dirty with ink. (See <i>Cleaning the MFC printer platen</i> on page 11-24.)
page.	Make sure you are using the paper support flap. (See <i>How to load paper, envelopes and post cards</i> on page 1-15.)
There are some dense lines.	Check 'Reverse Order' in the Basic tab of the printer driver.
The printouts are wrinkled.	In the printer driver 'Basic' tab, click the 'Settings', and uncheck the 'Bi-Directional Printing'.
Cannot perform '2 in 1 or 4 in 1' printing.	Check that the Paper Size setting in the application and in the printer driver are the same.
Print speed is too slow.	Changing the Printer Driver setting may improve the print speed. Highest resolution needs longer data processing, transfer and printing time. Try the other settings of quality in the printer driver 'Basic' tab. Also, click the 'Settings' tab, and make sure you uncheck the Colour Enhancement.
	Borderless printing is slower than normal printing. If you want to print more quickly, set the Borderless feature off. (See <i>Borderless</i> on page 9-12.)
Colour Enhancement is not working properly.	If the image data is not full colour in your application (Such as 256 colour), Colour Enhancement will not work. Please use at least 24 bit colour data with the Colour Enhancement feature.
MFC feeds multiple pages.	Make sure the paper is loaded properly in the paper tray. (See How to load paper, envelopes and post cards on page 1-15.)
	Check that more than two types of paper are not loaded in the paper tray at any one time.
Auto Select function does not work after refilling the paper tray.	Open and close the scanner cover to reset the paper tray.
Printed pages are not stacked neatly.	Make sure you are using the paper support flap. (See How to load paper, envelopes and post cards on page 1-15.)
Machine does not print from Paint Brush.	Try setting the Display setting to '256 colours.'
Machine does not print from Adobe Illustrator.	Try to reduce the print resolution.
Printing Received Faxes	
Condensed print and white streaks across the page or the top and bottom of sentences are cut off.	This can be caused by static or interference on the telephone line. You can make a copy using the Mono Start key to see if the same problem occurs. If the copy looks good then the problem is probably the phone line and not your MFC.
Vertical black lines when receiving.	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
Received colour fax prints only in black and white.	Replace the colour ink cartridges that are empty or nearly empty, and then ask the other person to send the colour fax again. (See <i>Replacing</i> <i>the ink cartridges</i> on page 11-25.) Check that Fax Storage is set to OFF. (See <i>Setting Fax Storage</i> on page 6-2.)
Left and Right margins are cut off or a single page is printed on two pages.	Turn on Auto Reduction. (See <i>Printing a reduced incoming fax (Auto Reduction)</i> on page 4-5.)

DIFFICULTY	SUGGESTIONS			
Phone Line or Connections				
Dialling does not work.	Check the MFC is plugged in.			
(No dial tone)	Check for a dial tone. If possible, call your MFC to hear it answer. If there is still no answer, check the telephone line cord connection and make sure all telephone connections are secured. If there is no ringing when you call your MFC, ask your telephone company to check the line.			
	Change Tone/Pulse setting. (See <i>Setting Tone or Pulse dialling mode (Not available in New Zealand)</i> on page 2-1.)			
Receiving Faxes				
Cannot receive a fax.	Make sure the MFC is in the correct receiving mode for your setup. (See <i>Basic receiving operations</i> on page 4-1.)			
	If you frequently encounter interference on the phone line, try changing the menu setting of Compatibility to Basic or Normal. (See <i>Compatibility</i> on page 11-14.)			
	If you connect your MFC to PBX, PABX or ADSL, set the menu setting of Phone Line Type to your phone type. (See <i>Setting the Phone Line</i> <i>Type</i> on page 2-3.)			
Sending Faxes	•			
Cannot send a fax.	Make sure that the Fax (key is illuminated. (See <i>How to enter Fax mode</i> on page 3-1.)			
	Ask the other party to check that receiving machine has paper.			
	Print the Transmission Verification Report and check for an error. (See <i>Printing reports</i> on page 7-3.)			
Transmission Verification Report says 'Result:NG' or 'Result:ERROR'.	There is probably temporary noise or static on the line. Try sending the fax again. If you send a PC FAX message and get 'Result:NG' on the Transmission Verification Report, your MFC may be out of memory.			
	To gain extra memory, you can turn off Fax Storage (see <i>Setting Fax Storage</i> on page 6-2), print fax messages in memory (see <i>Printing a fax from the memory</i> on page 4-5) or cancel a Delayed Fax or Polling Job (see <i>Cancelling a scheduled job</i> on page 3-10). If the problem continues, ask the telephone company to check your phone line.			
	If you frequently get transmission error with possible interference on the phone line, try to change the menu setting of Compatibility to Basic or Normal. (See <i>Compatibility</i> on page 11-14.)			
	If you connect your MFC to PBX, PABX or ADSL, set the menu setting of Phone Line Type to your phone type. (See <i>Setting the Phone Line</i> <i>Type</i> on page 2-3.)			
Poor sending quality.	Try changing your resolution to ${\tt Fine}$ or ${\tt S}$. Fine. Make a copy to check your MFC's scanner operation.			
Vertical black lines when sending.	If the copy you made shows the same problem, your scanner is dirty. (See <i>Cleaning the scanner</i> on page 11-23.)			

DIFFICULTY	SUGGESTIONS
Handling Incoming Calls	
MFC 'Hears' Voice as CNG Tone.	If your MFC is set to Fax Detect On, it is more sensitive to sounds. Your MFC may mistakenly interpret certain voices or music on the line as a calling fax machine and respond with fax receiving tones. Deactivate the fax by pressing Stop/Exit . Try avoiding this problem by turning Fax Detect to Off. (See <i>Fax Detect</i> on page 4-4.)
Transferring a Fax Call to the MFC.	If you answered on an external or extension phone, press your Fax Receive Code (default setting is (\pm 51). When your MFC answers, hang up.
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, Ring Master, an alarm system or any other custom feature on a single phone line with your MFC, it may create a problem sending or receiving faxes. For example: If you are sending or receiving a fax message while a custom feature signal comes through on the line, the signal can temporarily interrupt or disrupt the faxes. Brother's ECM feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive data on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, we recommend a separate phone line with no custom features.
Copying Difficulties	
Cannot make a copy.	Make sure that the Copy 🔊 key is illuminated. (See Enter Copy mode on page 8-1.)
Vertical streaks appear in copies.	Sometimes you may see vertical streaks on copies. Clean the scanner. (See <i>Cleaning the scanner</i> on page 11-23.)
Poor copy results when using the ADF.	Try using the scanner glass. (See Using the scanner glass on page 1-9.)
Scanning Difficulties	
TWAIN/WIA errors appear while scanning.	Make sure the Brother TWAIN/WIA driver is selected as the primary source. In PaperPort [®] , click Scan in the File menu and select the Brother TWAIN/WIA driver.
Poor scanning results when using the ADF.	Try using the scanner glass. (See Using the scanner glass on page 1-9.)
Software Difficulties	
Cannot install software or print.	Run the Repair MFL-Pro Suite program on the CD-ROM. This program will repair and reinstall the software.
'Device Busy'	Make sure the MFC is not showing an error message on the LCD.

DIFFICULTY	SUGGESTIONS
PhotoCapture Center [™] Difficu	Ities (MFC-5840CN only)
Removable Disk does not work properly.	 a) Have you installed the Windows[®] 2000 update? If not, do the following: Disconnect the USB cable. Install the Windows[®] 2000 update. Please see the Quick Setup Guide. After the installation the PC will be automatically restarted. Wait about 1 minute after you reboot the PC, and then connect the USB cable. b) Take out the media card and put it back in again. c) If you have tried "Eject" from within Windows[®], you must take out the media card before you continue. d) If an error message appears when you try to eject the media card, it means the card is being accessed. Wait a while and then try again. e) If all of the above do not work, please turn off your PC and MFC, and then turn them on again. (You will have to unplug the power cord of the MFC to turn it off.)
Cannot access Removable Disk from Desktop icon.	Make sure you have inserted the media card into the media slot.
Network Difficulties	
I cannot print over the Network.	Make sure that your MFC is powered on and is On Line and in Ready mode. Print Network Configuration list. (See <i>Printing reports</i> on page 7-1.) Then the current settings of the network are printed. Reconnect the LAN cable to the hub to verify that the cabling and network connections are good. If possible, try connecting the MFC to a different port on your hub using a different cable. If the connections are good, the machine shows LAN Active for 2 seconds.

Compatibility

If you are having difficulty sending or receiving a fax due to possible interference on the phone line, we recommend that you adjust the Equalization for compatibility. The MFC adjusts the modem speed for fax operations.

- **1** Press **Menu/Set**, **2**, **0**, **2**.
- 2 Press ▲ or ▼ to select Normal, Basic (or High).

Press Menu/Set.

3 Press Stop/Exit.

Miscellaneous 2.Compatibility

- Basic reduce the default modem speed to 9600 bps. Unless interference is a recurring problem on your phone line, you may prefer to use it only when needed.
 - Normal sets the modem speed at 14400 bps.
 - High sets the modem speed at 33600 bps. (Default)

How to improve print quality

Cleaning the print head

To ensure good print quality, the MFC will regularly clean the print head. You can start the cleaning process manually if needed.

Clean the print head and ink cartridges if you get a horizontal line in the text or graphics on your printed pages. You can clean Black only or three colours at a time (Cyan/Yellow/Magenta), or all four colours at once.

Cleaning the print head consumes ink. Cleaning too often uses ink unnecessarily.



Do NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

- 1 Press Ink Management.
- **2** Press ▲ or ▼ to select Cleaning.
 - Press Menu/Set
- **3** Press ▲ or ▼ to select Black, Color or All.

Press Menu/Set

The MFC will clean the print head. When cleaning is finished, the MFC will go back to standby mode automatically.



If you clean the print head at least five times and the print has not improved, call your Brother dealer for service.

Checking the print quality

If faded or streaked colours and text appear on your output, some of the nozzles may be clogged. You can check this by printing the Print Quality Check Sheet and looking at the nozzle check pattern.

- **1** Press Ink Management.
- 2 Press ▲ or ▼ to select Test Print. Press Menu/Set.
- 3 Press ▲ or ▼ to select Print Quality. Press Menu/Set.
- 4 Press Colour Start.

The MFC begins printing the Print Quality Check Sheet.

5 Follow the instructions given on the sheet to see if the quality is OK.

Colour block quality check

The LCD shows:

Is Quality	OK?
Is Quality 1.Yes 2.No	

- **6** Check the quality of the four colour blocks on the sheet.
- If all lines are clear and visible, press 1 (Yes), and go to Step 10.
 —OR—

If you can see missing short lines as shown below, press 2 (No).

OK	Poor

The LCD will ask you if the print quality is OK for black and three colours.

Black OK? 1.Yes 2.No 8 Press 2 (No) for Black or three colours with a problem.

The LCD shows:

Press 1 (Yes).

Start Cleaning? 1.Yes 2.No

The MFC will start cleaning the print head.

9 After cleaning is finished, press **Colour Start**. The MFC will start printing the Print Quality Check Sheet again and then return to Step 5.

10 Press Stop/Exit.

If you still see missing ink in this Print Quality Check Sheet, repeat the cleaning and test print procedures at least five times. If ink is still missing after the fifth cleaning and test print, replace the ink cartridge for the clogged colour. (Perhaps the ink cartridge was in your MFC over six months or the expiration date written on the cartridge package has passed. Or, the ink may not have been stored properly before use.)

After replacing the ink cartridge, check it by printing another Print Quality Check Sheet. If the problem still exists, repeat the cleaning and test print procedures at least five times for the new ink cartridge. If ink is still missing, call your Brother dealer for service.

Caution

Do NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.





When a print head nozzle is clogged, the printed sample looks like this.



After the print head nozzle is cleaned, the horizontal lines are gone.

 
Checking the printing alignment

You should rarely need to adjust the printing alignment however, if after transporting the machine your printed text becomes blurred or images become faded then adjustment may need to be made.

- **1** Press Ink Management.
- 2 Press ▲ or ▼ to select Test Print. Press Menu/Set.
- 3 Press ▲ or ▼ to select Alignment. Press Menu/Set.
- 4 Press Mono Start or Colour Start.

The MFC begins printing the Alignment Check Sheet.

The LCD shows:



5 Check the 600 dpi and 1200 dpi test prints to see if number 5 most closely matches number 0. If the number 5 sample of both the 600 dpi and 1200 dpi are the best matches, press **1** (Yes) to finish Alignment Check, and go to Step 8.

-OR-

If another test print number is a better match for either 600 dpi or 1200 dpi, press 2 (No) to select it.

- 6 For 600 dpi, press the number of the test print that most closely matches the number 0 sample (1-8).
- 7 For 1200 dpi, press the number of the test print that most closely matches the number 0 sample (1-8).
- 8 Press Stop/Exit.

600dpi	Adjust		
Select	Best #	5	

1200dpi	. Adjı	ıst	-	
Select	Best	#	5	

Checking the ink volume

You can check the ink that is left in the cartridge.

- **1** Press Ink Management.
- 2 Press ▲ or ▼ to select Ink Volume. Press Menu/Set.
- **3** Press ▲ or ▼ to select the colour you want to check.

Ink	Volume	
Bk:	+	\$

The LCD shows the ink volume.

- 4 Press Stop/Exit.
- You can check the ink volume from your computer. (See MFC Remote Setup (not available for DCP-110C, DCP-310CN and MFC-210C) on page 4-1 in Software User's Guide on the CD-ROM or MFC Remote Setup (Mac OS[®] X 10.2.4 or greater) (not available for DCP-110C, DCP-310CN and MFC-210C) on page 8-45 in Software User's Guide on the CD-ROM.)

Packing and shipping the MFC

Whenever you transport the MFC, use the packing materials that came with your MFC. If you do not pack the MFC properly, you could void vour warrantv.




Caution

It is important to allow the MFC to 'park' the print head after a print job. Listen carefully to the MFC before disconnecting it from the power source to ensure that all mechanical noise has stopped. Not allowing the MFC to complete this parking process may lead to print problems and possible damage to the print head.

- 1 Lift the scanner cover from the right-hand side of the MFC until it locks securely into the open position.
- 2 Remove all the ink cartridges and attach the protective parts. (See Replacing the ink cartridges on page 11-25.)


When attaching the protective parts. make sure it clips into place as shown in the diagram.

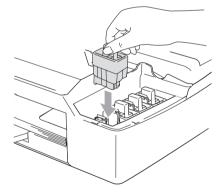

Caution

If you are not able to find the protective parts, do NOT remove the ink cartridges before shipping. It is essential that the MFC be shipped with either the protective parts or the ink cartridges in position. Shipping without them will cause damage to your MFC and may void your warranty.


3 Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover.

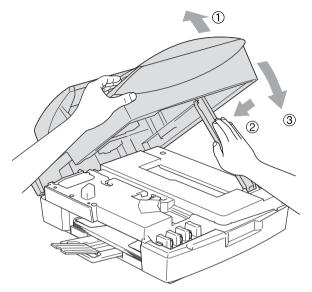


- **4** Unplug the MFC from the telephone wall socket and remove the telephone line cord from MFC.
- **5** Unplug the MFC from the electrical socket.
- **6** Unplug the USB cable or LAN cable from the MFC, if it is connected.
- 7 Wrap the MFC in the bag and place it in the original carton with the original packing material.



 8 Pack the printed materials in the original carton as shown below. Do not pack the used ink cartridges in the carton.

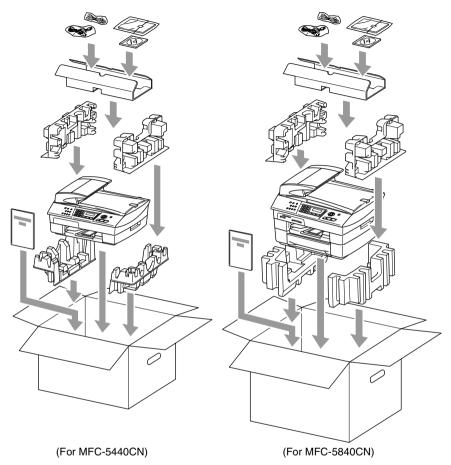





Routine maintenance

Cleaning the scanner

Lift the document cover. Clean the scanner glass with isopropyl alcohol on a soft lint-free cloth.

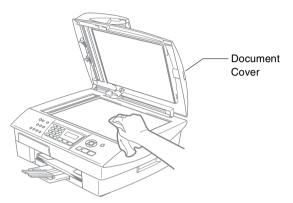


Clean the white bar and the glass strip under the film with isopropyl alcohol on a lint-free cloth.

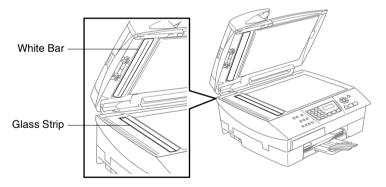

Cleaning the MFC printer platen

- Be careful not to touch the paper feed star wheels or encoder film.
- Be sure to unplug the MFC from the electrical socket before cleaning the printer platen.
- If ink is scattered on or around the printer platen be sure to wipe it off with a soft, dry, lint-free cloth.

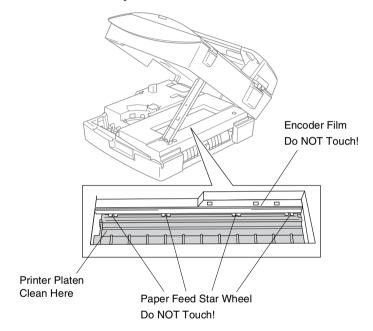

Replacing the ink cartridges

Your MFC is equipped with an ink dot counter. The ink dot counter automatically monitors the level of ink in each of the four cartridges. When the MFC detects an ink cartridge is running out of ink, the MFC will notify you with a message on the LCD.


The LCD will inform you which ink cartridge is low or needs replacing. Be sure to follow the LCD prompts to replace the ink cartridges in the correct order.


Even though the MFC informs you that an ink cartridge is empty, there will be a small amount of ink remaining in the ink cartridge. It is necessary to keep some ink in the ink cartridge to prevent air from drying out and damaging the print head assembly.

1 Lift the scanner cover from the right-hand side of the MFC until it locks securely into the open position.

If one or more ink cartridges are empty, for example Black, the LCD shows Ink Empty Black and Replace Ink.

2 Pull the ink cartridge hook toward you and remove the ink cartridge for the colour shown on the LCD.

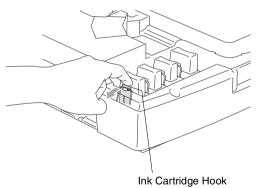

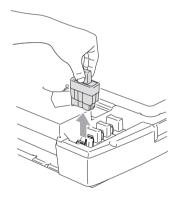

3 Open the new ink cartridge bag for the colour shown on the LCD, and then take out the ink cartridge.


4 Remove the cartridge covers.



 \bigcirc Do not touch the area shown in the illustration above.

If the cartridge cover comes off when you open the bag the cartridge will not be damaged.

5 Each colour has its own correct position. Keep the ink cartridge in an upright position when you insert it into slot. Press down on the ink cartridge until the hook snaps over it.

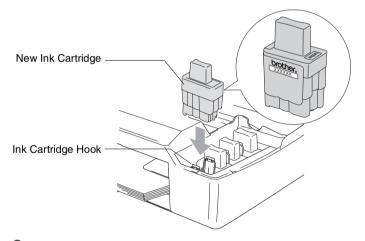

6 Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover.

7 If you replaced an ink cartridge while Near Empty was displayed on the LCD, the LCD may ask you to verify that it was a brand new one. Example: Did You Change Blck? 1.Yes 2.No. For each *new* cartridge you installed, press 1 on the dial pad to automatically reset the ink dot counter for that colour. If the ink cartridge you installed is not a brand new one, please be sure to select 2.



/ If you wait until Ink Empty message is displayed on the LCD, the MFC will automatically reset the ink dot counter.

If the Install message is on the display after you have installed ink cartridges, check that the ink cartridges are installed properly.

If ink gets in your eyes, irrigate them with water immediately and call a doctor if you are concerned.



- Do not remove ink cartridges if you do not need to replace them. If you do so, it may reduce the ink quantity and the MFC will not know the quantity of ink left in the cartridge.
- Do not touch the cartridge insertion slots. If you do so, the ink may stain your skin.
- If ink stains your skin or clothing, wash with soap or detergent immediately.
- If you install an ink cartridge in the wrong colour position, you must clean the print head several times before you start printing (after correcting the cartridge installation) because the colours were mixed.
- Once you open an ink cartridge, install it in the MFC and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.
- Do not dismantle or tamper with the ink cartridge, this can cause the ink to leak out of the cartridge.
- Brother multifunction machines are designed to work with ink of a particular specification and work to a level of optimum performance when used with genuine Brother ink cartridges. Brother cannot guarantee this optimum performance if ink or ink cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than genuine Brother cartridges with this machine or the refilling of empty cartridges with ink from other sources. If damage is caused to the print head or other parts of this machine as a result of the use of ink or ink cartridges other than genuine Brother products due to the incompatibility or lack of suitability of those products with this machine, any repairs required as a result will not be covered by the warranty.



Telephone Service for Australia

Telstra[®] FaxStream[®] Duet[®] (Distinctive Ringing)

Telstra[®] FaxStream[®] Duet[®] is an enhanced Public Switched Telephone Service (PSTS) offered by Telstra[®] that allows you to have an additional number on one phone line, with its own distinctive ring pattern. Telstra[®] FaxStream[®] Duet[®] is a call handling feature that helps users distinguish voice and facsimile calls. With FaxStream[®] Duet[®], incoming calls to a fax number are announced by a different, distinctive ring signal. Only one call can be answered (or made) at any one time and while this call is in progress, incoming calls to either number will be presented with a busy tone.

Your MFC has a Distinctive Ringing function, allowing you to dedicate one phone number just for receiving faxes.

After you have set the Distinctive Ring feature to On, the receive mode is set to Manual automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, Manual mode means you must answer all the calls yourself. You can not change the receive mode to the other mode while the Distinctive Ring is set to on.

What is the Advantage of using Telstra[®] FaxStream[®] Duet[®] Function?


Using Telstra[®] FaxStream[®] Duet[®] is the most efficient way to receive both fax and telephone calls on the same line. When the voice call comes in, all phones (extension and external) and the fax machine will ring to alert you to pick it up. On the other hand, if a fax call comes in, the fax machine will answer automatically without ringing, whereas the extension and external phones will ring with a distinctive ring pattern. It is also a more efficient way of operating a Fax machine with an extension phone as you do not have to use the remote activation codes. It gives you two independent numbers without the higher cost of a second line.

How does Telstra[®] FaxStream[®] Duet[®] Work?

Incoming calls to the voice number, will have the standard ring pattern of long, long tone, followed by a pause, repeated, while the new fax number will have a different ring pattern of three short bursts of ring, repeated at regular intervals.

When FaxStream[®] Duet[®] is On and you receive a voice call all extension and external phones will ring with a standard ring pattern. The fax machine will ring on the third ring with a standard ring pattern. All external and the extension phones will continue to ring. Either you or a telephone answering device can answer the voice number.

When FaxStream[®] Duet[®] is On and you receive a fax call on the Duet[®] number the Fax machine will answer and automatically receive the fax message without ringing. On the other hand, all extension and external phones will ring with a distinctive ring pattern. Do not pick it up as you are receiving a fax message.

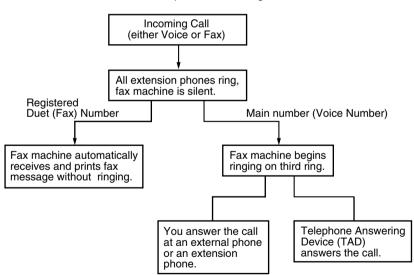

Flowchart Sequence of Incoming call

Set the Distinctive Ringing to ON

- **1** Disconnect the fax machine from any TAD or telephone company voice mail.
- Press Menu/Set, 2, 0, 3.
 The screen displays the current setting of this feature.
- **3** Press ▲ or ▼ to select On (or Off).
- 4 Press Menu/Set.
- 5 Press Stop/Exit.

Caller ID (Caller IDentification)

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number or name as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your MFC memory.

To get the Caller ID Service: apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID

For Business

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

Miscellaneous 3.Distinctive

The Caller ID Appears on the Display When Your **Telephone Rings**

As your telephone rings, the display shows you the caller's phone number or name if the name has stored in the One-Touch and Speed-Dial. Once you pick up the handset, the caller's ID disappears. You will see up to the first 16 characters of the number on the display.



- If Out of Area appears on the display, it means that the call came from outside your caller ID service area or a public phone. *
 - If Private Call appears on the display, it means the caller intentionally blocked the transmission of his/her ID. *

* Depends on network Function.

The Caller ID is Stored in Your MFC Memory

The MFC can store a maximum of the last 30 incoming caller IDs in the memory, along with the time and date of reception. The 31st call will cause the oldest ID to be erased.

The Caller ID information stored in the memory can be used for the following.

Printing the Caller ID List.

You can review calls you received by checking the Caller IDs in memory. This report will list the Date, Time, Phone Number (Caller ID) name, and type of Call (Comment) if available.

Viewing Caller ID List

Caller ID memory stores information for up to thirty calls; when the thirty-first call comes in, information about the first call is erased. You can scroll through Caller ID information to review those calls made to your MFC.

- **1** Press **Menu/Set**, **2**, **0**, **4**.
- 2 Press ▲ or ▼ to select Display# and press Menu/Set.

Miscellan	leous
4.Caller	ID

If the name was not received, it will not be displayed.

3 Press ▲ or ▼ to scroll through the Caller ID memory to select the Caller ID you want to view and press Menu/Set.

The next screen shows the caller's telephone number and the date and time of the call.

4 Press Stop/Exit to exit.

Printing Caller ID List

- **1** Press **Menu/Set**, **2**, **0**, **4**.
- **2** Press ▲ or ▼ to select Print Report.
- 3 Press Menu/Set.
- 4 Press Start.

Telephone Service for New Zealand

FaxAbility

FaxAbility is a service offered by Telecom that allows you to have an additional number on one phone line, with its own distinctive ring pattern. This way, when you get an incoming call, you can identify the number being called by its ring.

How Will the Fax Machine Treat All Other Numbers?


FaxAbility mode ensures that the machine will answer calls to the FaxAbility (secondary) number. When a call comes in to your main number, all the phones will ring. You can set an external answering device (TAD) to answer calls on the other number(s). (See the chart in the following page.)

What is the Advantage of Using the FaxAbility Function?

Using FaxAbility is the most efficient way to receive both fax and telephone calls on the same line. It is much easier for your callers who dial manually. The fax machine will answer with receiving tones so they will not have to press an activation code. And the people who call to talk on your main number will not have to talk to your fax machine. Basically, it gives you two independent numbers without the higher cost of a second line.

How Does FaxAbility Work?

Your telephone number will have the standard ring pattern of long, long tone, while the new number will have a ring pattern of long, silence, long, etc. When FaxAbility is On, you will not hear the first ring of all incoming calls on the fax machine. Extension phones will ring as usual. If the fax machine recognizes the ring pattern, all ringing will stop and the fax machine will answer and automatically receive the fax message. Otherwise, you will hear the extension phones and the fax machine continue to ring. The fax machine always listens to the ring pattern before it answers, so do not pick up the phone during that time. You will quickly learn to recognize the ring pattern for faxes, so you will not be tempted to answer that number. Either you or a telephone answering device can answer the main number(s).

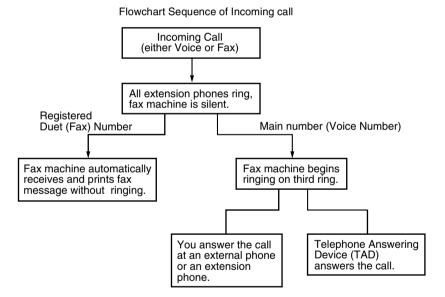

After you have set the FaxAbility feature to On, the receive mode is set to Manual automatically. Unless you have a TAD or Voice Mail set up on the FaxAbility number, Manual mode means you must answer all the call yourself. You can not change the receive mode to the other mode while the FaxAbility is set to on.

How to Turn FaxAbility OFF or ON

The FaxAbility function is designed to accommodate the FaxAbility service provided by Telecom. To change the setting, repeat Steps 1-3; Step 2 is where you can select either On or Off.

Call Waiting beeps caused by incoming calls on your main number can affect fax transmissions. If you have FaxAbility Service but don't have Call Waiting, you need do nothing at this stage. If you do have Call Waiting as well as FaxAbility, set the Call Waiting menu option to On. See below.

1 Press **Menu/Set**, **2**, **0**, **3**. The screen displays

Miscellaneous	
3.Faxability	

2 Press ▲ or ▼ to set FaxAbility to On or Off.

If you have FaxAbility service, select On.

- *3* Press Menu/Set.
- 4 Press ▲ or ▼ to set Call Waiting to On or Off. If you have Call Waiting service, select On to avoid the trouble caused by Call Waiting.
- **5** Press **Menu/Set**.
- 6 Press Stop/Exit.

Caller ID (Caller IDentification)

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number and name if available as the telephone rings. It is a fast way to screen your calls. You can respond guickly to calls you missed, because Caller IDs are received and stored in your MFC memory.



To get the Caller ID Service: apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID

For Business

All businesses profit from a guicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

How Does the Caller ID Work?

The Caller ID Appears on the Display When Your **Telephone Rings**

As your telephone rings, the display shows you the caller's phone number and name if available. Once you pick up the handset, the caller's ID disappears. You will see up to the first 16 characters of the number and name if available on the display.



If Out of Area appears on the display, it means that the call came from outside your caller ID service area. *

If Private Call appears on the display, it means the caller intentionally blocked the transmission of his/her ID. *

* Depends on network Function.

Viewing Caller ID List

Caller ID memory stores information for up to thirty calls; when the thirty-first call comes in, information about the first call is erased. You can scroll through Caller ID information to review those calls made to your MFC.

- **1** Press **Menu/Set**, **2**, **0**, **4**.
- 2 Press ▲ or ▼ to select Display# and press Menu/Set.

Miscellaneous 4.Caller ID

If the name was not received, it will not be displayed.

3 Press ▲ or ▼ to scroll through the Caller ID memory to select the Caller ID you want to view and press Menu/Set.

The next screen shows the caller's telephone number and the date and time of the call.

4 Press Stop/Exit.

Printing Caller ID List

- **1** Press **Menu/Set**, **2**, **0**, **4**.
- **2** Press ▲ or ▼ to select Print Report.
- 3 Press Menu/Set.
- 4 Press Start.

If you use the Caller ID for Dial back...

- Please be sure that you use appropriate dialling procedures for local and national call.
- Please be sure that you make sure of the details of the exact number to be called back, and the need to insert prefix(es) for manual dialling.
- Please understand that your MFC may not display precisely the digits to be called.

Telephone Service for Some Countries

Distinctive Ringing (For Singapore and Hong Kong)

This MFC feature lets you use the Distinctive Ringing subscriber service offered by some telephone companies, which allows you to have several telephone numbers on one phone line. Each phone number has its own Distinctive Ringing pattern, so you will know which phone number is ringing. This is one way you can have a separate phone number for your MFC.

Your MFC has a Distinctive Ringing function, allowing you to dedicate one phone number just for receiving faxes. You will need to set Distinctive Ringing to On.



You can switch it off temporarily, then turn it back on. When you get a new fax number, make sure you reset this function.

- The MFC will answer only calls to the Distinctive Ringing number.
- After you have set the Distinctive Ring feature to On, the receive mode is set to Manual automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, Manual mode means you must answer all the call yourself. You can not change the receive mode to the other mode while the Distinctive Ring is set to on.

Setting the Distinctive Ringing

- 1 Press Menu/Set, 2, 0, 3.
- **2** Press \blacktriangle or \checkmark to select On (or Off).
- 3 Press Menu/Set.
- 4 Press Stop/Exit.

Miscellaneous 3.Distinctive

Caller ID (For Singapore and Hong Kong)

The Caller ID feature of this MFC lets you use the Caller ID subscriber service offered by many local phone companies. This service provides you, by means of the screen display, the telephone number (or name) of your caller as the line rings. (See *Printing Caller ID List* on page A-13.)

After a few rings, the screen displays the telephone number of your caller (or name, if available). Once you pick up the handset, the Caller ID information disappears from the screen, but the call information remains stored in the Caller ID memory.

- You will see the first 16 characters of the number or name.
- Out of Area display means call originates outside your Caller ID service area.
- Private Call display means the caller has intentionally blocked transmission of information.
 - You can print a list of Caller ID information received by your MFC.

Caller ID service varies with different carriers. Call your local phone company to determine the kind of service available in your area.

Viewing Caller ID List

Caller ID memory stores information for up to thirty calls; when the thirty-first call comes in, information about the first call is erased. You can scroll through Caller ID information to review those calls made to your MFC.

- **1** Press **Menu/Set**, **2**, **0**, **4**.
- 2 Press ▲ or ▼ to select Display# and press Menu/Set.

Miscellar	leous
4.Caller	ID

If the name was not received, it will not be displayed.

3 Press ▲ or ▼ to scroll through the Caller ID memory to select the Caller ID you want to view and press Menu/Set.

The next screen shows the caller's telephone number and the date and time of the call.

4 Press Stop/Exit.

Printing Caller ID List

- **1** Press **Menu/Set**, **2**, **0**, **4**.
- **2** Press ▲ or ▼ to select Print Report and press Menu/Set.
- 3 Press Start.

Advanced receiving operations

Operation from extension telephones

If you answer a fax call on an extension telephone, or an external telephone into the correct socket on the MFC, you can make your MFC take the call by using the Fax Receive Code. When you press the Fax Receive Code ± 51 (± 91 for New Zealand), the MFC starts to receive a fax. (See *Fax Detect* on page 4-4.)

If the MFC answers a voice call and pseudo/double-rings for you to take over, use the Telephone Answer Code **#51** (**#91** for New Zealand) to take the call at an extension phone. (See *Setting the F/T Ring Time (Fax/Tel mode only)* on page 4-3.)

If you answer a call and no one is on the line, you should assume that you're receiving a manual fax.

Press * 51 (* 91 for New Zealand) and wait for the chirp or until the MFC's LCD displays Receiving, and then hang up.

Your caller will have to press Start to send the fax.

Fax/Tel mode

When the MFC is in Fax/Tel mode, it will use the F/T Ring Time (pseudo/double-ringing) to alert you to pick up a voice call.

Lift the external telephone's handset, and then press **Hook** to answer.

If you're at an extension phone, you'll need to lift the handset during the F/T Ring Time and then press **#51** (**#91** for New Zealand) between the pseudo/double rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the MFC by pressing \times 51 (\times 91 for New Zealand).

Fax/Tel mode in the power save condition

Fax/Tel mode does not work in the power save condition. The MFC will not answer telephone or fax calls and will keep ringing.

If you are at an external or extension phone, lift the handset of the extension phone and talk. If you hear fax tones, hold the handset until Fax Detect activates your MFC. If the other party says they want to send you a fax, activate the MFC by pressing ± 51 (± 91 for New Zealand).

Using a cordless external handset

If the base unit of your cordless telephone is connected (see page A-16) and you typically carry the cordless handset elsewhere, it is easier to answer calls during the Ring Delay. If you let the MFC answer first, you will have to go to the MFC so you can press **Hook** to transfer the call to the cordless handset.

Changing the remote codes

Remote Codes might not work with some telephone systems. The preset Fax Receive Code is ± 51 (± 91 for New Zealand). The preset Telephone Answer Code is #51 (#91 for New Zealand).

- If you are always disconnected when accessing your external TAD remotely, try changing the Fax Receive Code and Telephone Answer Code to another three-digit code (such as ### and **999**).
- 1 If it is not illuminated in green, press




- 2 Press Menu/Set, 2, 1, 4.
- 3 Press ▲ or ▼ to select On (or Off). Press Menu/Set.
- **4** Enter the new Fax Receive Code. Press **Menu/Set**.
- **5** Enter the new Telephone Answer Code. Press **Menu/Set**.
- 6 Press Stop/Exit.

Connecting an external device to your MFC

Connecting an external telephone

You can connect a separate telephone as shown in the diagram below.

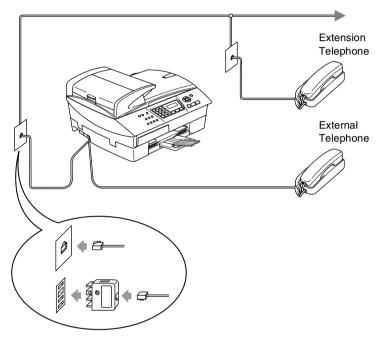

When you are using an external or extension telephone, the LCD shows Telephone.

 
Connecting an external telephone answering device (TAD)


Sequence

You may choose to connect an additional answering device. However, when you have an **external** TAD on the same telephone line as the MFC, the TAD answers all calls and the MFC "listens" for fax calling (CNG) tones. If it hears them, the MFC takes over the call and receives the fax. If it does not hear CNG tones, the MFC lets the TAD continue playing your outgoing message so your caller can leave you a voice message.

The TAD must answer within four rings (the recommended setting is two rings). The MFC cannot hear CNG tones until the TAD has answered the call, and with four rings there are only 8 to 10 seconds of CNG tones left for the fax "handshake". Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.

If you do not receive all your faxes, reduce the Ring Delay setting on your external TAD to one or two rings.



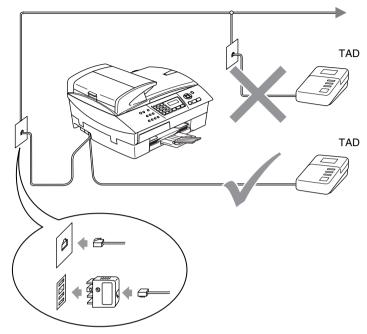

When you are using a TAD, the LCD shows Telephone.

Connections

The external TAD must be connected as shown above.

- 1 Set your external TAD to one or two rings. (The MFC's Ring Delay setting does not apply.)
- **2** Record the outgoing message on your external TAD.
- **3** Set the TAD to answer calls.
- 4 Set the Receive Mode to External TAD. (See Choosing the Receive Mode on page 4-1.)

Recording outgoing message (OGM) on an external TAD

Timing is important in recording this message. The message sets up the ways to handle both manual and automatic fax reception.

- Record 5 seconds of silence at the beginning of your message. (This allows your MFC time to listen for the fax CNG tones of automatic transmissions before they stop.)
- 2 Limit your speaking to 20 seconds.
- We recommend beginning your OGM with an initial 5-second silence because the MFC cannot hear fax tones over a resonant or loud voice. You may try omitting this pause, but if your MFC has trouble receiving, then you must re-record the OGM to include it.

Multi-line connections (PBX) (For Australia and New Zealand only)

Most offices use a central telephone system. While it is often relatively simple to connect the MFC to a key system or a PBX (Private Branch Exchange), we suggest that you contact the company that installed your telephone system and ask them to connect the MFC for you. It is advisable to have a separate line for the MFC.

If the MFC is to be connected to a multi-line system, ask your installer to connect the unit to the last line on the system. This prevents the unit from being activated each time a telephone call is received.

If you are installing the MFC to work with a PBX

- 1 It is not guaranteed that the unit will operate properly under all circumstances with a PBX. Any cases of difficulty should be reported first to the company that handles your PBX.
- 2 If all incoming calls will be answered by a switchboard operator, it is recommended that the Receive Mode be set to Manual. All incoming calls should initially be regarded as telephone calls.

Custom features on your phone line

If you have Voice Mail, Call Waiting, Call Waiting/Caller ID, RingMaster, an answering service, an alarm system, EFTPOS, PC/Fax Modem or other custom feature on one phone line it may create a problem with the operation of your MFC. (See *Custom features on a single line.* on page 11-12.)



On-screen programming

Your MFC is designed to be easy to use with LCD on-screen programming using the navigation keys. User-friendly programming helps you take full advantage of all the menu selections your MFC has to offer.

Since your programming is done on the LCD, we have created step-by-step on-screen instructions to help you program your MFC. All you need to do is follow the instructions as they guide you through the menu selections and programming options.

Menu table

You can probably program your MFC without the User's Guide if you use the Menu table that begins on page B-3. These pages will help you understand the menu selections and options that are found in the MFC's programs.



You can program your MFC by pressing Menu/Set, followed by the menu numbers.

For example to set Fax Resolution to Fine: Press Menu/Set, 2, 2, 2 and ▲ or v to select Fine. Press Menu/Set.

Memory storage

If there is a power failure, you will not lose your menu settings because they are stored permanently. Temporary settings (such as Contrast, Overseas Mode, and so on) will be lost. You may also have to reset the date and time.

Navigation keys

		Access the menu
Menu Set	Menu Set	Go to the next menu level
)	Accept an option
	(\mathbf{i},\mathbf{j})	Scroll through the current menu level
	•	Go back to the previous menu level
	Stop/Exit	Exit the menu

You can access the menu mode by pressing **Menu/Set**. When you enter the menu, the LCD scrolls.

Press **1** for General Setup menu

—OR—

Press 2 for Fax menu

-OR-

Press 3 for Copy menu

Press **0** for Initial Setup

Select ▲ 1.General	V & Set l Setup
Select ▲ 2.Fax	▼ & Set
Select A	▼ & Set
Select 🛆	V & Set l Setup

You can scroll more quickly through each menu level by pressing the arrow for the direction you want: \blacktriangle or \blacktriangledown .

Select an option by pressing **Menu/Set** when that option appears on the LCD.

The LCD will then show the next menu level.

Press \blacktriangle or \checkmark to scroll to your next menu selection.

Press Menu/Set.

When you finish setting an option, the LCD shows Accepted.



Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1.General Setup	1.Mode Timer	_	5 Mins 2 Mins 1 Min 30 Secs 0 Sec Off	Sets the time to return to Fax mode.	2-4
	2.Paper Type	_	Plain Inkjet Glossy Transparency	Sets the type of paper in the paper tray.	2-4
	3.Paper Size (MFC-5440CN only)	_	Letter Legal A4 A5 10x15cm	Sets the size of the paper in the paper the tray.	2-5
	3.Paper Size (MFC-5840CN only)	1.Tray#1	Letter Legal A4 A5 10x15cm	Sets the size of paper in Tray#1.	2-4
		2.Tray#2	Letter Legal A4	Sets the size of paper in Tray#2.	2-4
	4.Volume	1.Ring	High Med Low Off	Adjusts the ring volume.	2-6
		2.Beeper	High Med Low Off	Adjusts the volume level of the beeper.	2-6
		3.Speaker	High Med Low Off	Adjusts the speaker volume.	2-7

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1.General Setup (Continued)	5.P.Save Setting	-	Fax Receive:On Fax Receive:Off	Customizes the Power Save key not to receive fax in power save condition.	1-6
	6.LCD Contrast	—	Light Dark	Adjust the contrast of the LCD.	2-8
	7.Tray Use:Copy (MFC-5840CN only)	_	Tray#1 Only Tray#2 Only Auto Select	Select the tray that will be used for Copy mode.	2-8
	8.Tray Use:Fax (MFC-5840CN only)	_	Tray#1 Only Tray#2 Only Auto Select	Select the tray that will be used for Fax mode.	2-9
2.Fax	1.Setup Receive (In Fax mode only)	1.Ring Delay	02-10 (02) (Example for Australia)	Sets the number of rings before the MFC answers in Fax Only or Fax/Tel mode.	4-2
		2.F/T Ring Time	70 Sec 40 Sec 30 Sec 20 Sec (Example for Australia)	Sets the pseudo/double-ring time in Fax/Tel mode.	4-3
		3.Fax Detect	On Off	Receives fax messages without pressing the Mono Start or Colour Start key.	4-4
		4.Remote Code	On (*51, #51) (*91, #91 for New Zealand) Off	You can answer all calls at an extension or external phone and use codes to turn the MFC on or off. You can personalize these codes.	A-15
		5.Auto Reduction	On Off	Reduces the size of incoming faxes.	4-5
		6.Memory Receive	On Off	Automatically stores any incoming faxes in its memory if it runs out of paper.	4-6
		7.Polling RX	Standard Secure Timer	Sets up your MFC to poll another fax machine.	4-7

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2.Fax (Continued)	2.Setup Send (In Fax mode only)	1.Contrast	Auto Light Dark	Changes the lightness or darkness of faxes you send.	3-6
		2.Fax Resolution	Standard Fine S.Fine Photo	Sets the default resolution for outgoing faxes.	3-7
		3.Delayed Fax	_	Set the time of day in 24 hour format that the delayed faxes will be sent.	3-13
		4.Batch TX	On Off	Combines delayed faxes to the same fax number at the same time of day into one transmission.	3-14
		5.Real Time TX	Off On Next Fax Only	You can send a fax without using the memory.	3-9
		6.Polled TX	Standard Secure	Sets up the document on your MFC to be retrieved by another fax machine.	3-14
		7.Overseas Mode	On Off	If you are having difficulty sending faxes overseas, set this to On.	3-12
		0.Scan Size	Letter A4	Adjust the scan area of the scanner glass to the size of the document.	3-18
	3.Set Quick-Dial	1.Speed-Dial	_	Stores Speed-Dial numbers, so you can dial by pressing only a few keys (and Start).	5-1
		2.Setup Groups	—	Sets up a Group number for Broadcasting.	5-3



Main Menu	Submenu	Menu Selections	Options	Descriptions	Page	
2.Fax (Continued)	4.Report Setting	1.Tramission	On On+Image Off Off+Image	Initial setup for Transmission Verification Report and Journal Report.	7-1	
		2.Journal Period	Every 7 Days Every 2 Days Every 24 Hours Every 12 Hours Every 6 Hours Every 50 Faxes Off		7-2	
	5.Remote Fax Opt	1.Forward/ Store	Off Fax Forward Fax Storage PC Fax Receive	Sets the MFC to forward fax messages, to store incoming faxes in the memory (so you can retrieve them while you are away from your MFC), or to send faxes to your PC.	6-2	
		2.Remote Access	*	You must set your own code for Remote Retrieval.	6-4	
	6.Remaining Jobs 0.Miscellaneous	-	3.Print Document	_	Prints incoming faxes stored in the memory.	4-5
			_	—	Checks which jobs are in the memory and lets you cancel selected jobs.	3-10
		1.TX Lock (1.Key Lock)	_	Prohibits most functions except receiving faxes.	3-16	
		2.Compatibility	High Normal Basic	Adjusts the Equalization for transmission problems.	11-14	

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
3.Сору	1.Quality	_	Best Normal Fast	Selects the Copy resolution for your type of document.	8-15
	2.Brightness	_		Adjusts the brightness.	8-15
	3.Contrast	_		Adjusts the contrast for copies.	8-15
	4.Color Adjust	1.Red	R:-00000+ R:-00000+ R:-00000+ R:-00000+	Adjusts the amount of Red in copies.	8-16
		2.Green	G:-00000+ G:-00000+ G:-00000+ G:-00000+ G:-00000+	Adjusts the amount of Green in copies.	
		3.Blue	B:-00000+ B:-00000+ B:-00000+ B:-00000+ B:-00000+	Adjusts the amount of Blue in copies.	
	The factory s	ettings are sh	own in Bold.		



Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
4.PhotoCapture (MFC-5840CN	1.Print Quality	—	Normal Photo	Selects the print quality.	9-9
only)	2.Paper & Size	_	Letter Glossy 10x15cm Glossy 13x18cm Glossy A4 Glossy Letter Plain A4 Plain Letter Inkjet A4 Inkjet 10x15cm Inkjet	Selects the paper and print size.	9-9
	3.Brightness	_		Adjusts the brightness.	9-10
	4.Contrast	_		Adjusts the contrast.	9-10
	5.Color Enhance	On Off	1.White Balance - 00000 + - 00000 + - 00000 + - 00000 + - 00000 +	Adjusts the hue of the white areas.	9-10
			2.Sharpness - 00000 + - 00000 + - 00000 + - 00000 + - 00000 +	Enhances the detail of the image.	
			3.Color Density - 0000 + - 0000 + - 0000 + - 0000 + - 0000 +	Adjusts the total amount of colour in the image.	

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
4.PhotoCapture (MFC-5840CN only) (Continued)	6.Cropping	_	On Off	Crops the image around the margin to fit the paper size or print size. Turn this feature Off if you want to print whole images or prevent unwanted cropping.	9-12
	7.Borderless	_	On Off	Expands the printable area to fit the edges of the paper	9-12
	8.Scan to Card	1.Quality	B/W 200x100 dpi B/W 200 dpi Color 150 dpi Color 300 dpi Color 600 dpi	Selects the Scan resolution for your type of document.	2-25*1
		2.B/W File Type	TIFF PDF	Selects the default file format for black and white scanning.	2-26*1
		3.ColorFile Type	PDF JPEG	Selects the default file format for colour scanning.	2-27* ¹
4.LAN (MFC-5440CN) 5.LAN (MFC-5840CN)	1.Setup TCP/IP	1.BOOT Method	Auto Static RARP BOOTP DHCP	You can choose the BOOT method that best suits you needs.	See Network User's Guide on the CD-ROM
		2.IP Address	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.	
		3.Subnet Mask	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.	
		4.Gateway	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.	
		5.Host Name	BRN_XXXXXX	Enter the Host name.	



The factory settings are shown in Bold. *¹ See the complete Software User's Guide on the CD-ROM.

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
4.LAN (MFC-5440CN) 5.LAN (MFC-5840CN) (Continued)	1.Setup TCP/IP (Continued)	6.WINS Config	Auto Static	You can choose the WINS configuration mode.	See Network User's Guide on the CD-ROM
		7.WINS Server	(Primary) 000.000.000.000	Specifies the IP address of the primary or secondary server.	
		8.DNS Server	(Primary) 000.000.000.000	Specifies the IP address of the primary or secondary server.	
		9.APIPA	On Off	Automatically allocates the IP address from the link-local address range.	
	2.Setup Misc.	1.Ethernet	Auto 100B-FD 100B-HD 10B-FD 10B-HD	Selects Ethernet link mode.	
		2.Time Zone	GMT+10:00 (Example for Australia)	Sets the time zone for your country.	
	0.Factory Reset	—	_	Restore all network settings to factory default.	
6.Print	1.Help List	_	—	You can print these	7-3
Reports (MFC-5840CN	2.Quick-Dial	-	—	lists and reports.	
only)	3.Fax Journal	—	—		
	4.XMIT Verify	_	_		
	5.User Settings	_	_		
	6.Network Config	—	—	İ	



Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
0.Initial Setup	1.Receive Mode	—	Fax Only Fax/Tel External TAD Manual	You can choose the receive mode that best suits your needs.	4-1 4-2
	2.Date/Time	_	_	Puts the date and time on the LCD and in headings of faxes you send.	2-1
	3.Station ID	_	Fax: Name:	Program your name and fax number to appear on each page you fax.	2-2
	4.Tone/Pulse (Not available in New Zealand)	_	Tone Pulse	Selects the dialling mode.	2-3
	5.Phone Line Set	_	Normal ADSL PBX (For Australia and New Zealand only)	Select the phone line type.	2-3



Entering Text

When you are setting certain menu selections, such as the Station ID, you may need to type text into the MFC. Most number keys have three or four letters printed above them. The keys for 0, # and \star do not have printed letters because they are used for special characters.

Press Key	one time	two times	three times	four times
2	А	В	С	2
3	D	E	F	3
4	G	н	I	4
5	J	К	L	5
6	М	Ν	0	6
7	Р	Q	R	S
8	т	U	V	8
9	W	х	Y	Z

By pressing the appropriate number key repeatedly, you can access the character you want.

Inserting spaces

To enter a space in the fax number, press \blacktriangleright once between numbers. To enter a space in the name, press \blacktriangleright twice between characters.

Making corrections

If you entered a letter incorrectly and want to change it, press < to move the cursor under the incorrect character. Then press **Stop/Exit**. All letters above and to the right of the cursor will be deleted. Re-enter the correct character. You can also back up and type over incorrect letters.

Repeating letters

If you need to enter a character that is on the same key as the previous character, press ► to move the cursor to the right before you press the key again.

Special characters and symbols

Press *, # or **0**, and then press \triangleleft or \triangleright to move the cursor under the special character or symbol you want. Then press **Menu/Set** to select it.

Press X	for	(space)!" # \$ % & ' () ★ + , / €
Press #	for	:;<=>?@[]^_
Press 0	for	Ä Ë Ö Ü À Ç È É 0



- **ADF (automatic document feeder)** The document can be placed in the ADF and scanned one page at a time automatically.
- Auto Reduction Reduces the size of incoming faxes.
- Automatic fax transmission Sending a fax without picking up the handset of an external phone.
- Automatic Redial A feature that enables your MFC to redial the last fax number after five minutes if the fax did not go through because the line was busy.
- **Backup Print** Your MFC prints a copy of every fax that is received and stored in memory.

This is a safety feature so you will not lose messages during a power failure.

- **Batch Transmission** (Black and white faxes only) As a cost saving feature, all delayed faxes to the same fax number will be sent as one transmission.
- **Brightness** Changing the Brightness makes the whole image lighter or darker.
- **Beeper Volume** Volume setting for the beep when you press a key or make an error.
- **Broadcasting** The ability to send the same fax message to more than one location.
- **Cancel Job** Cancels a programmed job, like Delayed Fax or Polling.
- **CNG tones** The special tones (beeps) sent by fax machines during automatic transmission to tell the receiving machine that a fax machine is calling.
- **Coding method** Method of coding the information contained in the document. All fax machines must use a minimum standard of Modified Huffman (MH). Your MFC is capable of greater compression methods, Modified Read (MR), Modified Modified Read (MMR) and JPEG, if the receiving machine has the same capability.

- **Communication error (or Comm. Error)** An error during fax sending or receiving, usually caused by line noise or static.
- **Compatibility group** The ability of one fax unit to communicate with another. Compatibility is assured between ITU-T Groups.
- **Contrast** Setting to compensate for dark or light documents, by making faxes or copies of dark documents lighter and light documents darker.
- **Colour Enhancement** Adjusts the colour in the image for better print quality by improving sharpness, white balance and colour density.
- **Delayed Fax** Sends your fax at a specified later time that day.
- **Distinctive Ring** A subscriber service purchased from the telephone company that gives you another phone number on an existing phone line. The Brother MFC uses the new number to simulate a dedicated fax line.
- **Dual Access** Your MFC can scan outgoing faxes or scheduled jobs into memory at the same time it is sending a fax or receiving or printing an incoming fax.
- **ECM (Error Correction Mode)** Detects errors during fax transmission and resends the pages of the fax that had an error.
- **Extension phone** A telephone on the fax number that is plugged into a separate wall socket.
- **External phone** A TAD (telephone answering device) or telephone that is connected to your MFC.
- **F/T Ring Time** The length of time that the Brother MFC rings (when the Receive Mode setting is Fax/Tel) to notify you to pick up a voice call that it answered.
- **Fax Detect** Enables your MFC to respond to CNG tones if you interrupt a fax call by answering it.
- **Fax Forwarding** Sends a fax received into the memory to another pre-programmed fax number.
- **Fax Journal** Lists information about the last 200 incoming and outgoing faxes. TX means Transmit. RX means Receive.
- Fax Receive Code Press this code (\times 51, \times 91 for New Zealand) when you answer a fax call on an extension or external phone.

Fax Storage You can store faxes in memory.

- **Fax tones** The signals sent by sending and receiving fax machines while communicating information.
- **Fax/Tel** You can receive faxes and telephone calls. Do not use this mode if you are using a telephone answering device (TAD).
- **Fine resolution** Resolution is 203 x 196 dpi. It is used for small print and graphs.
- **Gray scale** The shades of gray available for copying and faxing photographs.
- **Group number** A combination of Speed-Dial numbers that are stored in a Speed-Dial location for Broadcasting.
- **Help list** A printout of the complete Menu table that you can use to program your MFC when you do not have the User's Guide with you.
- **Journal Period** The pre-programmed time period between automatically printed Fax Journal Reports. You can print the Fax Journal on demand without interrupting the cycle.
- **LCD (liquid crystal display)** The display screen on the MFC that shows interactive messages during On-Screen Programming and shows the date and time when the MFC is idle.
- Manual fax When you lift the handset of your external telephone so you can hear the receiving fax machine answer before you press Mono Start or Colour Start to begin transmission.
- Menu mode Programming mode for changing your MFC's settings.
- **OCR (optical character recognition)** The bundled ScanSoft[®] OmniPage[®] software application converts an image of text to text you can edit.
- **Out of Paper Reception** Receives faxes into the MFC's memory when the MFC is out of paper.
- **Overseas Mode** Makes temporary changes to the fax tones to accommodate noise and static on overseas phone lines.
- **Pause** Allows you to place a 3.5 second delay in the dialling sequence stored on Speed-Dial numbers. Press **Redial/Pause** as many times as needed for longer pauses.

- PhotoCapture Center[™] (MFC-5840CN only) Allows you to print digital photos from your digital camera at high resolution for photo quality printing.
- **Photo resolution** A resolution setting that uses varying shades of gray for the best representation of photographs.
- **Polling** The process of a fax machine calling another fax machine to retrieve waiting fax messages.
- **Pulse** A form of rotary dialling on a telephone line.
- **Quick Dial List** A listing of names and numbers stored in Speed-Dial memory, in numerical order.
- **Real Time Transmission** When memory is full, you can send faxes in real time.
- **Remaining jobs** You can check which jobs are waiting in memory and cancel jobs individually.
- **Remote Access Code** Your own four-digit code (--- *) that allows you to call and access your MFC from a remote location.
- **Remote Retrieval Access** The ability to access your MFC remotely from a touch tone phone.
- **Resolution** The number of vertical and horizontal lines per inch. See: Standard, Fine, Super Fine and Photo.
- **Ring Delay** The number of rings before the MFC answers in Fax Only and Fax/Tel mode.
- Ring Volume Volume setting for the MFC's ring.
- **Scanning** The process of sending an electronic image of a paper document into your computer.
- Scan to Card (MFC-5840CN only) You can scan a black and white or colour document into a Media Card. Black and white images will be in TIFF or PDF file format and colour images may be in PDF or JPEG file format.
- **Search** An electronic, alphabetical listing of stored Speed-Dial and Group numbers.
- **Speed-Dial** A pre-programmed number for easy dialling. You must press the **Search/Speed Dial** key, **#**, and the two digit code, and **Mono Start** or **Colour Start** to start the dialling process.

- **Standard resolution** 203 x 97 dpi. It is used for regular size text and quickest transmission.
- **Station ID** The stored information that appears on the top of faxed pages. It includes the sender's name and fax number.
- **Super Fine resolution** 392 x 203 dpi. Best for very small print and line art.
- **TAD (telephone answering device)** You can connect an external TAD to your MFC.
- **Temporary settings** You can select certain options for each fax transmission and copy without changing the default settings.
- **Tone** A form of dialling on the telephone line used for Touch Tone telephones.
- **Transmission** The process of sending faxes over the phone lines from your MFC to the receiving fax machine.
- **User Settings** A printed report that shows the current settings of the MFC.
- Xmit Report (Transmission Verification Report) A listing for each transmission, that shows its date, time and number.




Product description


General


16 MB		
Up to 35 pages Temperature: 20°C - 30°C Humidity: 50% - 70% Paper: 80 gsm A4 size		
100 Sheets (8	0 gsm)	
250 Sheets (80 gsm)		
Ink Jet		
Piezo with 74×5 nozzles		
16 characters	× 2 lines, Back light (MFC-5840CN only)	
220 - 240V 50,	/60Hz	
(MFC-5440CN)		
Power Save Mode: Standby: Operating: (MFC-5840CN Power Save Mode: Standby: Operating:	22 Wh or less	
	Up to 35 page Temperature: Humidity: 50% Paper: 80 gsm 100 Sheets (8 250 Sheets (8 250 Sheets (8 1nk Jet Piezo with 74 : 16 characters 220 - 240V 50 (MFC-5440CN Power Save Mode: Standby: Operating: (MFC-5840CN Power Save Mode:	


Dimensions

    (MFC-5440CN)









Weight	8.0 kg (MFC-5440CN) 9.9 kg (MFC-5840CN)		
Noise	Operating:	42.5 to 51 dB*	
		* It depends on printing conditions	
Temperature	Operating:	10 - 35°C	
	Best Print Quality:	20 - 33°C	
Humidity	Operating: Best Print	20 to 80% (without condensation)	
	Quality:	20 to 80% (without condensation)	

Print media

Donor Innut	Denor Trov
Paper Input	Paper Tray
	 Paper type: Plain paper, inkjet paper (coated paper), glossy
	paper* ² , transparencies* ^{1*2} and envelopes
	Paper size:
	Letter, Legal ^{*3} , Executive, A4, A5, A6, JIS_B5, envelopes (commercial No.10, DL, C5, Monarch, JE4), Photo card, Index card and Post card.
	For more details, see <i>Paper weight, thickness and capacity</i> on page 1-13.
	 Maximum paper tray capacity: Approx. 100 sheets of 80 gsm plain paper
	Paper Tray#2 (MFC-5840CN only)
	Paper type:
	Plain paper
	Paper size:
	Letter, Legal, Executive, A4, JIS_B5
	 Maximum paper tray capacity: Approx. 250 sheets of 80 gsm plain paper
Paper Output	Up to 50 sheets of A4 plain paper (Face up print delivery to the output paper tray)* ²
	*1 Use only transparencies recommended for inkjet printing. *2 For glossy paper or transparencies, we recommend removing printed pages from the output paper tray immediately after they exit the machine to avoid setudation.

exit the machine to avoid smudging. *³ Legal paper cannot be stacked on the output paper tray.

Сору

Colour/Black	Colour/Black
Document Size	ADF Width:148 mm to 216 mmADF Height:148 mm to 356 mmScanner Glass Width:Max. 216 mmScanner Glass Height:Max. 297 mm
Copy Speed	Black Up to 17 pages/minute (A4 paper)* Colour Up to 11 pages/minute (A4 paper)* * Does not include the time it takes to feed the paper. Based on Brother standard pattern. (Fast Mode/Stack Copy) Copy speeds vary with the complexity of the document.
Multiple Copies	Stacks/Sorts up to 99 pages
Enlarge/Reduce	25% to 400% (in increments of 1%)
Resolution	Up to 600 x 1200 dpi copy resolution for plain, 1200 x 1200 dpi for inkjet, glossy paper and OHP/transparency.

PhotoCapture Center (MFC-5840CN only)

Available Media	(Compact I/O of and Compact M SmartMedia [®] (3. (Not available f Memory Stick [®]	for use with ID) for music data with MagicGate [™])		
File Extension				
(Media Format)	DPOF, EXIF, DO	CF		
(Image Format)	Photo Print:	JPEG*		
	Scan to Card:	JPEG, PDF (Colour) TIFF, PDF (Black)		
	* Progressive JPEG format is not supported.			
Number of Files	Up to 999 files in the media card			
Folder	File must be in the 3rd folder level of the Media Card.			
Borderless	Letter, A4, Photo	o Card		

Fax

Compatibility	ITU-T Group 3
Coding System	MH/MR/MMR/JPEG
Modem Speed	Automatic Fallback
	33600 bps
Document Size	ADF Width: 148 mm to 216 mm
	ADF Height: 148 mm to 356 mm
	Scanner Glass Width: Max. 216 mm
	Scanner Glass Height: Max. 297 mm
Scanning Width	208 mm
Printing Width	204 mm
Gray Scale	256 levels
Polling Types	Standard, Secure, Timer Sequential: (B&W only)
Contrast Control	Automatic/Light/Dark
	(manual setting)
Resolution	Horizontal 203 dot/inch (8 dot/mm)
	Vertical Standard -
	3.85 line/mm (Black)
	7.7 line/mm (Colour)
	Fine - 7.7 line/mm (Black/Colour)
	Photo - 7.7 line/mm (Black)
	Superfine - 15.4 line/mm (Black)
Speed-Dial	40 stations (MFC-5440CN)
	100 stations (MFC-5840CN)
Broadcasting	90 stations (MFC-5440CN)
	150 stations (MFC-5840CN)
Automatic Redial	3 times at 5 minute intervals
Auto Answer	2, 3, 4, 5, 6, 7, 8, 9 or 10 rings (for Australia)
	1, 2, 3, 4, 5, 6, 7, 8, 9 or 10 rings (for New Zealand)
	0, 1, 2, 3, 4, 5, 6, 7, 8, 9 or 10 rings (for some
	countries)
Communication Source	Public switched telephone network.

Memory Transmission	Up to 200* ¹ /170* ² pages (MFC-5440CN) Up to 480* ¹ /400* ² pages (MFC-5840CN)
Out of Paper Reception	Up to 200* ¹ /170* ² pages (MFC-5440CN) Up to 480* ¹ /400* ² pages (MFC-5840CN)

*1 "Pages" refers to the "Brother Standard Chart No. 1" (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

*2 "Pages" refers to the "ITU-T Test Chart #1" (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

Scanner

Colour/Black	Colour/Black
TWAIN Compliant	Yes (Windows [®] 98/98SE/Me/2000 Professional/XP) Mac OS [®] 8.6-9.2/Mac OS [®] X 10.2.4 or greater
WIA Compliant	Yes (Windows [®] XP)
Colour Depth	48 bit colour processing (Input) 24 bit colour processing (Output)
Resolution	Up to 19200 × 19200 dpi (interpolated)* Up to 1200 × 2400 dpi (optical) * Maximum 1200 x 1200 dpi scanning with Windows [®] XP (resolution up to 19200 x 19200 dpi can be selected by using the Brother scanner utility)
Scanning Speed	Colour: up to 4.76 sec. Black: up to 3.50 sec. (A4 size in 100 × 100 dpi)
Document Size	ADF Width:148 mm to 216 mmADF Height:148 mm to 356 mmScanner Glass Width:Max. 216 mmScanner Glass Height:Max. 297 mm
Scanning Width Gray Scale	210 mm 256 levels

 $\mathbb{E}^{\mathbb{P}}$ Mac OS[®] X scanning is supported in Mac OS[®] X 10.2.4 or greater.

Printer

Printer Driver	Windows [®] 98/98SE/Me/2000 Professional and XP driver supporting Brother Native Compression mode and bi-directional capability Apple [®] Macintosh [®] QuickDraw [®] Driver For Mac OS [®] 8.6-9.2/Mac OS [®] X 10.2.4 or greater
Resolution	Up to 1200 x 6000 dots per inch (dpi)*
	1200 x 1200 dots per inch (dpi)
	600 x 600 dots per inch (dpi)
	600 x 150 dots per inch (dpi)
	 Output image quality varies based upon many factors including but not limited to input image resolution and quality and print media.
Print Speed	up to 20 pages/minute (Black)*
	up to 15 pages/minute (Colour)*
	* Based on Brother standard pattern. A4 size in draft mode.
B · · · · · · · · · · · · · · · · · · ·	Does not include the time it takes to feed the paper.
Printing Width	204 mm (216 mm)*
	* When you set the Borderless feature to On.
Disk-Based Fonts	35 TrueType
Borderless	Letter, A4, A6, Photo Card, Index Card, Post Card
	(Not available for Tray#2 use (MFC-5840CN only)

Interfaces

USB	A Full-Speed USB 2.0 cable that is no longer than 2.0 m.*
	* Your MFC has a Full-Speed USB 2.0 interface. This interface is compatible with Hi-Speed USB 2.0; however, the maximum data transfer rate will be 12 Mbits/s. The MFC can also be connected to a computer that has a USB 1.1 interface.
LAN cable	Ethernet UTP cable category 5 or greater.

Computer requirements

equirements				
Computer Platform & Operating System Version		Minimum RAM	Recommended RAM	Available Hard Disk Space
				for Drivers
98, 98SE	Pentium II or	32 MB	64 MB	90 MB
Me	equivalent			
2000 Professional		64 MB	128 MB	
XP* ²		128 MB	256 MB	150 MB
Mac OS [®] 8.6 (Printing and PC-FAX Send* ⁴ Only)	All base models meet minimum Requirements		64 MB	80 MB
Mac OS [®] 9.X (Printing, Scanning ⁺³ , PhotoCapture Center [™] and PC-FAX Send ⁺⁴ Only)				
Mac OS [®] X 10.2.4 or greater		128 MB	160 MB	
	98, 98SE Me 2000 Professional XP* ² Mac OS® 8.6 (Printing and PC-FAX Send* ⁴ Only) Mac OS® 9.X (Printing, Scanning* ³ , PhotoCapture Center [™] and PC-FAX Send* ⁴ Only) Mac OS® X 10.2.4 or	B& Operating System Processor Minimum Speed 98, 98SE Pentium II or equivalent equivalent 2000 Professional XP*2 Mac OS® 8.6 (Printing and PC-FAX Send*4 Only) All base model Mac OS® 9.X (Printing, Scanning*3, PhotoCapture Center™ and PC-FAX Send*4 Only) All base model Mac OS® X 10.2.4 or Mac OS® X 10.2.4 or	Back Operating System Processor Minimum Speed Minimum RAM 98, 98SE Pentium II or equivalent 32 MB 98, 98SE Pentium II or equivalent 64 MB 2000 Professional 128 MB XP*2 All base models meet minimum Requirements Mac OS® 8.6 (Printing and PC-FAX Send*4 Only) All base models meet minimum Requirements Mac OS® 9.X (Printing, Scanning*3, PhotoCapture Center™ and PC-FAX Send*4 Only) 128 MB	A Operating SystemProcessor Minimum SpeedMinimum RAMRecommended RAM98, 98SEPentium II or equivalent32 MB64 MB2000 Professional64 MB128 MB128 MB2000 Professional128 MB256 MBMac OS® 8.6 (Printing and PC-FAX Send*4 Only)All base models meet minimum Requirements64 MBMac OS® 9.X (Printing, Scanning*3, PhotoCapture Center™ and PC-FAX Send*4 Only)All base models meet minimum Requirements64 MBMac OS® X 10.2.4 or128 MB160 MB

*1 Microsoft[®] Internet Explorer 5 or greater.

*2 Maximum 1200 x 1200 dpi scanning with Windows[®] XP. (Resolutions up to 19200 x 19200 dpi can be selected using the Brother Utility.)

*³ Dedicated "Scan" key and direct Network Scanning supported in Mac[®] Operating Systems Mac OS[®] X 10.2.4 or greater.

*⁴ PC Fax supports black and white faxing only.

Consumable items

Ink	The MFC uses individual Black, Yellow, Cyan and Magenta ink cartridges that are separate from the print head assembly.
Service Life of Ink Cartridge	Standard Black - Approximately 500 pages at 5% coverage
	HIgh Yield Black - Approximately 900 pages at 5% coverage
	Yellow, Cyan and Magenta - Approximately 400 pages at 5% coverage
	The above figures are based upon the following assumptions:
	 Continuous printing at a resolution of 600 x 600 dpi in normal mode after installing new ink cartridge;
	 The printing frequency;
	 The number of pages printed;
	• Periodic, automatic, print head assembly cleaning (Your MFC will clean the print head assembly periodically. This process will use a small amount of ink); and,
	 Ink remaining in cartridge identified as "empty" (It is necessary to leave a small amount of ink in the ink cartridge to prevent air from drying out and damaging the print head assembly).
Replacement	<standard black=""> LC47BK</standard>
Consumables	<high black="" yield=""> LC47HYBK</high>
	<cyan> LC47C</cyan>
	<magenta> LC47M</magenta>
	<yellow> LC47Y</yellow>

Network (LAN)

LAN	You can connect your MFC to a network for Network Printing, Network Scanning and PC Fax Send. Also included is Brother BRAdmin Professional Network Management software.
Support for	Windows [®] 98/98SE/Me/2000/XP Mac OS [®] 8.6-9.2, Mac OS [®] X 10.2.4 or greater* Ethernet 10/100 BASE-TX Auto Negotiation
Protocols	TCP/IP RARP, BOOTP, DHCP, APIPA, NetBIOS, WINS LPR/LPD, Port9100, SSDP, mDNS, FTP
	 * Network Printing and PC-FAX are available for Mac OS[®] 8.6-9.2, Mac OS[®] 10.2.4 or greater. * Mac OS[®] 8.6-9.2 (Quick Draw over TCP/IP) * Mac OS[®] X 10.2.4 or greater (mDNS) * Network Scanning and Remote Setup are available for Mac OS[®] 10.2.4 or greater. * Media drive is not available for Mac OS[®] 8.6.
	Included Utilities: BRAdmin Professional (Windows [®])
	BRAdmin Professional is not supported in Mac OS®.

Optional External Wireless Print/Scan Server (NC-2200w)

NC-2200w External Wireless Print/Scan Server (Optional)	Connecting the optional External Wireless Print/Scan Server (NC-2200w) to your MFC will allow you to print and scan over a wireless network.
Network types	IEEE 802.11b wireless LAN
Support for	Windows [®] 98/98SE/Me/2000/XP Mac OS [®] X 10.2.4 or greater
Protocols	TCP/IP ARP, RARP, BOOTP, DHCP, APIPA (Auto IP), WINS/NetBIOS, DNS, LPR/LPD, Port9100, SMB Print, IPP, RawPort, mDNS, TELNET, SNMP, HTTP
	You can assign the scan key to one networked



computer only.

Index

Α

Access codes, storing and dialling5-5
ADF (automatic document
feeder) 1-7, 3-3
Answering machine
(TAD) A-17
connecting A-19
Automatic
fax receive 4-1
Fax Detect 4-4
fax redial 3-2
transmission3-5

В

Broadcasting	3-11
setting up Groups for	5-3

С

Cancelling	
Fax Forwarding	6-6
fax jobs in memory	3-10
jobs awaiting redial	3-10
Cleaning	
print head 1	
printer platen 1	1-24
scanner 1	
CNG tones	1-22
Connecting	
external TAD	4-17
external telephone	4-16
Consumable items	S-10
Control panel overview	. 1-2
Сору	
brightness	8-10
colour adjustment 8	3-16
contrast	8-15

D

Date and Time	2-1
Delayed Batch	
Transmission	3-14
Dialling	
a pause	5-5
access codes and credit	
card numbers	5-5
automatic fax redial	3-2
automatic transmission	3-5
Groups	
manual	3-1
Speed-Dial	3-2
Distinctive Ring	
Dual Access	
	_

Е

ECM

2011
(Error Correction Mode) 1-23
Envelopes1-14
Equalization11-14
Error messages on LCD 11-1
Comm. Error 11-1
Ink Empty11-2
Near Empty11-2
No Paper Fed11-3
Not Registered3-2
Out of Memory11-3
Unable to Change11-4
Unable to Clean11-4
Unable to Init11-4
Unable to Print11-4
Unable to Scan11-4
Extension telephone,
usingA-14
External telephone,
connectingA-16

F

Fax codes
changing 6-4, A-15
Fax Receive CodeA-14
Remote Access Code6-4
Telephone Answer
CodeA-14
Fax Detect4-4
Fax Forwarding
changing remotely6-6, 6-7
programming a number6-1
Fax Storage6-2
printing from memory4-5
turning on6-2
Fax, stand-alone
receiving4-1
compatibility11-14
difficulties11-10

Fax Forwarding	6-6
from extension	
phone	. A-14
reducing to fit on	
paper	4-5
retrieving from a remote	te
site	6-7
Ring Delay, setting	4-2
sending	3-1
automatic	3-5
Broadcasting	3-11
cancelling from	
memory	
colour fax	
compatibility	
contrast	
enter Fax mode	3-1
from memory	
(Dual Access)	
from scanner glass	
manual	
overseas	3-12
Real Time	
Transmission	
resolution	3-7
Fax/Tel mode	
answering at extension	
phones	A-14
double-ringing	
(voice calls)	4-3
F/T Ring Time	4-3
Fax Receive Code	
receiving faxes	
Ring Delay	4-2
Telephone Answer	
Code	A-14

G

Gray scale	S	-6, S-7
Groups for	Broadcasting	5-3

HELP

ı

Help list7	-3
LCD messagesB	
using navigation keys B	-2
Menu Table B-1, B	-3

I

11-19
11-25
11-25

J

Jams	
document	11-5
paper	11-5

L

LCD (liquid crystal display)	1
B-	I, B-2
contrast	2-8
Help List	7-3

Μ

Maintenance, routine 11-23
Manual
dialling 3-1
receive 4-1
transmission 3-5
Memory Security 3-15, 3-18
Memory Storage B-1
Menu Selection Table B-1
Mode Timer 2-4
Mode, entering
Сору 8-1
Fax 3-1
Scan 1-3
Multi-line connections
(PBX)A-20

1 1	1-5 1-5
splay) B-1,	2-8
11	-23
	4-1

Paper1-10, S-3
size2-5
Туре2-4
Phone line
connectionsA-19
difficulties 11-11
multi-line (PBX)A-20
set2-3
set2-3 PhotoCapture Center [™]
Borderless9-12
Colour Enhancement 9-10
CompactFlash [®]
Cropping9-12
Default Settings 9-9
DPOF printing9-8
Memory Stick [®] 9-1
Printing images9-6
Printing Index
SecureDigital [™] 9-1
SmartMedia [®] 9-1
specificationsS-5
xD-Picture Card [™] 9-1
Power failureB-1
Print
area 1-14
difficulties 11-9, 11-10
driversS-8
fax from memory 4-5
improving quality 11-15
paper jams11-6
report7-3
resolutionS-8
specificationsS-8
Programming your MFC
B-1, B-2

Quality key (copying)8-3 Quick-Dial
Access codes and credit card
numbers
setting up5-5
Broadcasting3-11
using Groups3-11
Group dial
changing5-2
setting up Groups for
Broadcasting5-3
Search3-2
Speed-Dial
changing5-2
setting up5-1
using

R

Receive Mode External TAD Fax Only Fax/Tel Manual Redial/Pause	. 4-1 . 4-1 . 4-1 . 4-1
Reducing	
copies	.4-5 .6-5 .6-6 .6-7 .7-1 .7-3 .7-2 .7-3
Network Configuration	

Quick-Dial List Transmission Verification	
User Settings	7-3
Resolution	
сору	S-4
fax (Standard, Fine,	
SuperFine, Photo)	S-6
print	S-8
scan	S-7
setting for next fax	3-7
Ring Delay, setting	4-2

S

Safety Instructionsii, Setting tray use Setup	
•	
Date and Time	2-1
Station ID (fax header)	
entering text	2-2
Shipping the machine1	1-20
Speed-Dial	
changing	5-2
dialling	
storing	

Т

TAD (telephone answering
device), external4-1, A-17
connectingA-17, A-19
receive mode4-1
recording OGM A-19
Telstra [®] FaxStream [®] Duet A-1
Temporary copy settings8-3
Text, entering B-12
special characters B-13
tray use, setting
copy2-8
fax2-9


T 11 1 12 44.4
Troubleshooting 11-1 checking ink volume 11-19
÷
document jam 11-5
error messages
on LCD 11-1
if you are having difficulty
copying 11-12
incoming calls 11-12
Network 11-13
phone line 11-14
phone line
difficulties 11-11
PhotoCapture
Center [™] 11-13
printing 11-9
printing or receiving
faxes 11-10
Printing Received
Faxes 11-10
receiving faxes 11-11
scanning 11-12
sending faxes 11-11
software 11-12
paper jam 11-6
print quality 11-15
TX Lock


V

Volume, setting 2-	6
beeper2-	6
ring 2-	6
speaker 2-	7

Remote Retrieval Access card

If you plan to receive fax messages while away from your MFC, carrying the Remote Retrieval Access Card printed below will serve as a convenient reminder of the retrieval procedures. Simply cut out the card and fold it to fit your wallet or organizer. Keeping it handy will help you derive the full benefit of your MFC's Fax Forwarding, and Remote Retrieval features.

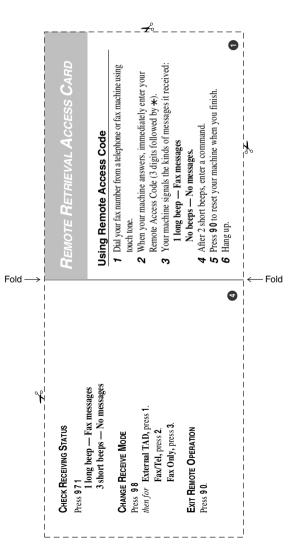

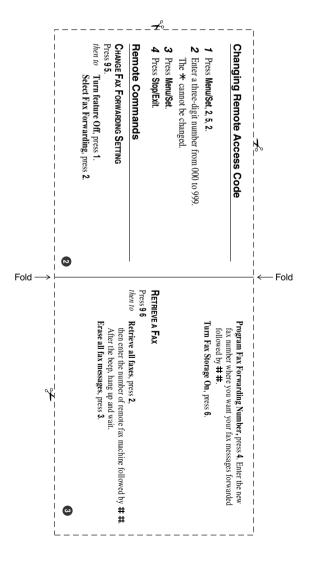



Visit us on the World Wide Web http://www.brother.com

This machine is approved for use in the country of purchase only, local Brother companies or their dealers will only support machines purchased in their own countries.

