 
 


In case the need for Servicing arises

Don't hesitate to call any nearby AS center
with your name, address and telephone number
when anything wrong with your product occurs.

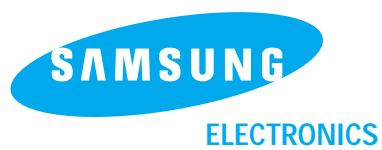

AH68-10331J



 


OWNER'S INSTRUCTIONS

Z-30S/300S



VIDEO-CD CD PLAYER

Before operating the unit, please
read this manual thoroughly, and
retain for future reference.

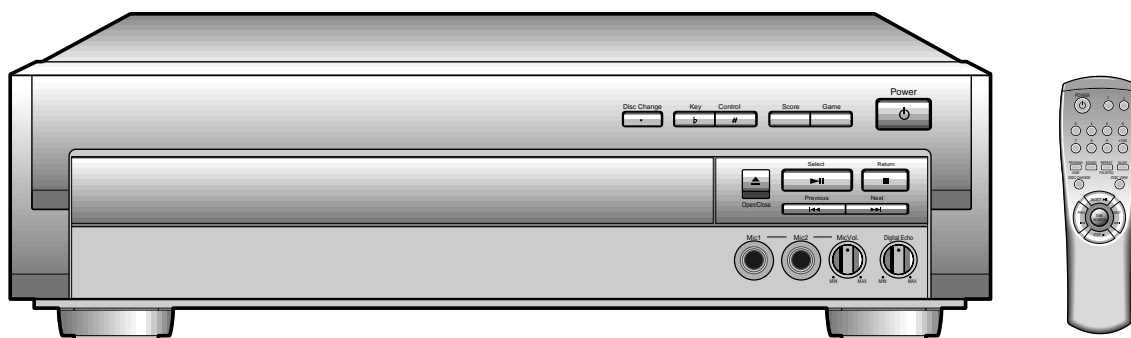

This player does not apply to business use
and CD-ROM/CD graphic discs
cannot be played with this player.

  SAFETY PRECAUTIONS

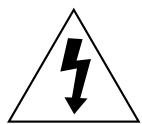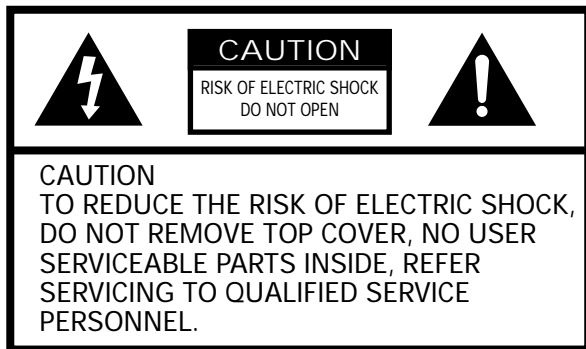

DANGER

This symbol is intended to alert you to the presence of dangerous voltage within the product.



CAUTION

This symbol is intended to alert you to the presence of important instruction accompanying the product.

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Enter information here for future reference.

Date of Purchased: _____
 Model No: _____
 Serial No: _____
 Selling Dealer: _____
 Dealer Address: _____
 Dealer Phone No: _____

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product

Use of controls adjustments or performance of procedures other than those specified herein may result in hazardous radiation.

CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTER LOCK DEFEATED, AVOID EXPOSURE TO BEAM.

SPECIAL NOTICE

Warning:

- This unit contains no user serviceable parts. Never remove covers unless qualified to do so. This unit contains dangerous voltages, always remove main plug from the socket before any service operation and when not in use for a long period.

Important:

- This unit is designed for your enjoyment in your home. We cannot be liable for the quality of the unit if you use it for commercial use. So please do not use this unit for commercial use.

 
IMPORTANT NOTICE

NOTE TO CATV SYSTEM INSTALLER;

- This reminder is provided to call the CATV system installer's attention to article 820-40 of the NEC provides guidelines for proper the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.


SAFETY INSTRUCTIONS

SAFETY INSTRUCTIONS

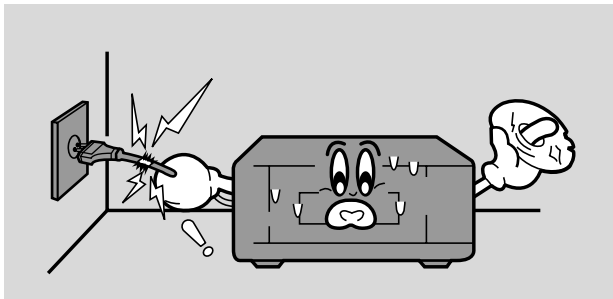

- Do not damage the power cord. Damage to the power cord may cause a fire or shock hazard.
- When unplugging the power cord, please hold by the plug and remove it carefully in standby mode.
- When you finish operating the unit, always turn off the power. Leaving a disc loaded for a long time with power turned on may damage the disc.
- When you insert the disc, please do not insert over another disc.
- This product should not be used in business applications.

 WHEN MOISTURE CONDENSATION GETS IN THE UNIT

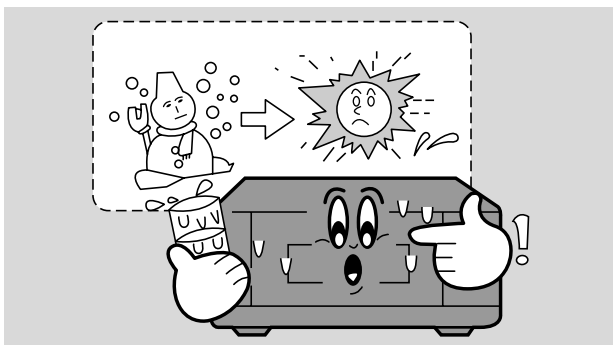

- When the unit is moved from a cold area to a warm area suddenly, moisture may condense on the mechanical parts which restricts the laser signal from normal operation.
- If this occurs, leave the unit with the power turned on for 1~2 hours. (without a disc)

CONTENTS

SAFETY INSTRUCTIONS	3
CONTROLS AND COMPONENTS	6
REMOTE CONTROL	8
TO INSERT BATTERIES	8
SYSTEM CONNECTIONS	9
VIDEO-CD PLAYBACK	10
DISC VIEW FUNCTION	12
REPEAT/FUNCTION	13
GAME FUNCTION	14
PROGRAM FUNCTION	18
SEARCHING FUNCTIONS	20
KARAOKE FUNCTION	22
TROUBLE SHOOTING	24
WHEN VIDEO IS DISPLAYED THROUGH SET	25
GENERAL INFORMATION ABOUT THE DISC	25
CARE OF PLAYER AND DISCS	25
SPECIFICATIONS	26

SAFETY INSTRUCTIONS

READ INSTRUCTIONS

- All the safety and operating instructions should be read before the appliance is operated.

RETAIN INSTRUCTIONS

- The safety and operating instructions should be retained for future reference.

HEED WARNINGS

- All warnings on the appliance and in the operating instructions should be adhered to.

FOLLOW INSTRUCTIONS

- All operating and use instructions should be followed.

WATER AND MOISTURE

- Do not use this video product near water—for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

OVERLOADING

- Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

VENTILATION

- Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video product and to protect it from overheating these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface. This video product should never be placed near or over a radiator or heat register. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been followed.

POWER CORD PROTECTION

- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

CLEANING

- Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

LIGHTNING

- For added protection of this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

OBJECT AND LIQUID ENTRY

- Never push objects of any kind into this product through openings as they may touch dangerous

voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

ACCESSORIES

- Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.

CART

- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

POWER SOURCES

- This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of supply to your home, consult your appliance dealer or local power company. For video products intended to be operated from battery power, or other sources, refer to the operating instructions.

POWER LINES

- An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

POLARIZATION

 
- This video product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other.) This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

OUTDOOR ANTENNA GROUNDING

- If an outside antenna is connected to the antenna terminal, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges.
- In the U.S.A section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See the figure below.

ATTACHMENTS

- Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

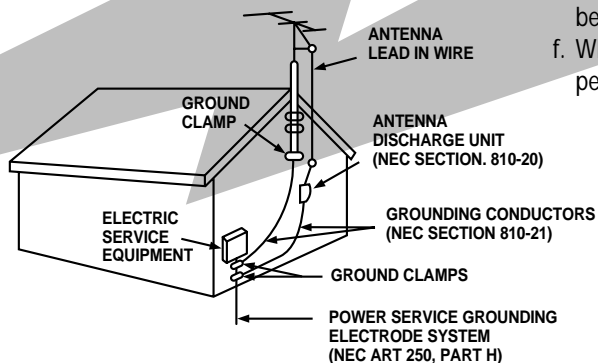

SERVICING

- Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards.
- Refer all servicing to qualified service personnel.

REPLACEMENT PARTS

- When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or having the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

SAFETY CHECK

 
- Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.

DAMAGE REQUIRING SERVICE

- Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions.
 - a. When the power-supply cord or plug is damaged.
 - b. If liquid has been spilled, or objects have fallen into the video product.
 - c. If the video product has been exposed to rain or water
 - d. If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
 - e. If the video product has been dropped or the cabinet has been damaged.
 - f. When the video product exhibits a distinct change in performance - this indicates a need for service.

CONTROLS AND COMPONENTS


FRONT PANEL

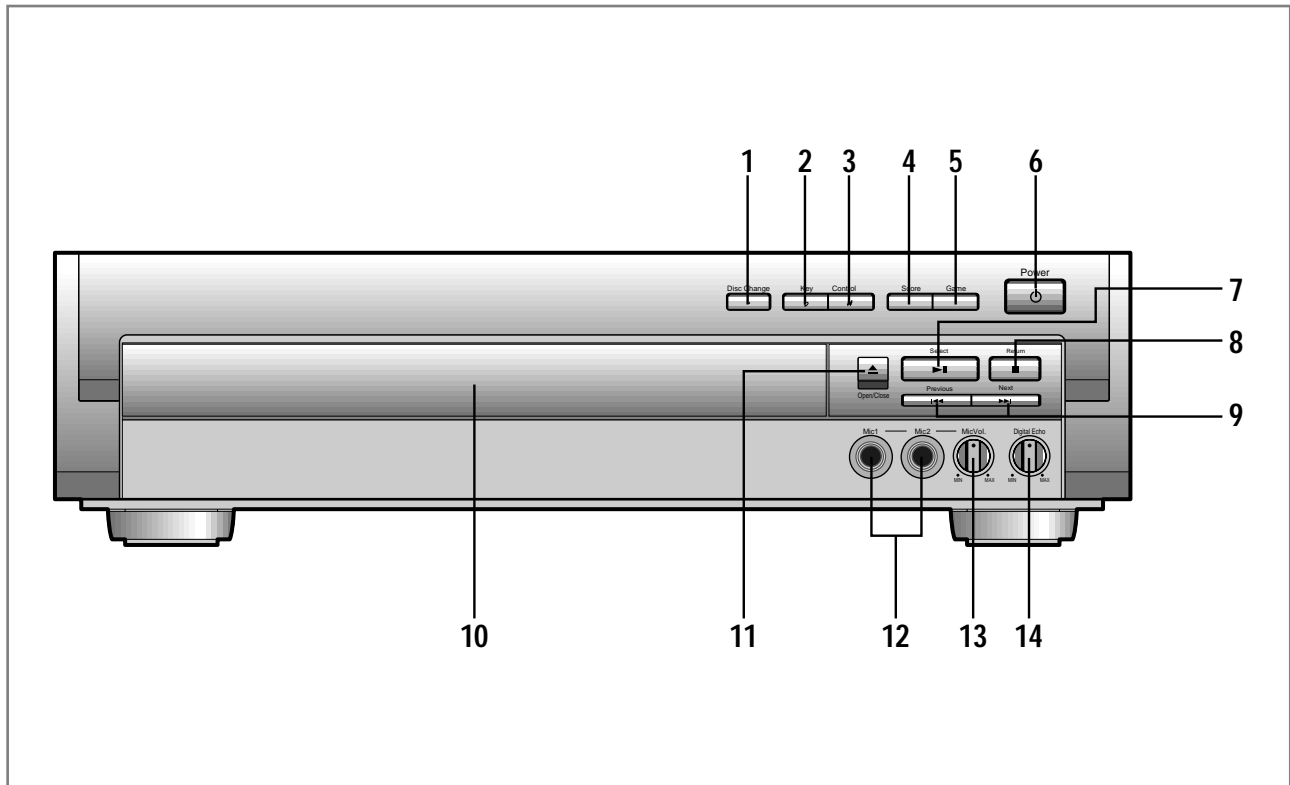

- | | |
|------------------------------------|------------------------------|
| 1. Disc Change button | 8. Return(Stop) button |
| 2. Key Control \downarrow button | 9. Previous/Next buttons |
| 3. Key Control $\#$ button | 10. DISC TRAY |
| 4. Score button | 11. Open/Close button |
| 5. Game button | 12. Mic jacks |
| 6. Power button | 13. Mic Volume knob |
| 7. Select(Play/Pause) button | 14. Digital Echo Volume knob |

CONTROLS AND COMPONENTS

 
REAR PANEL

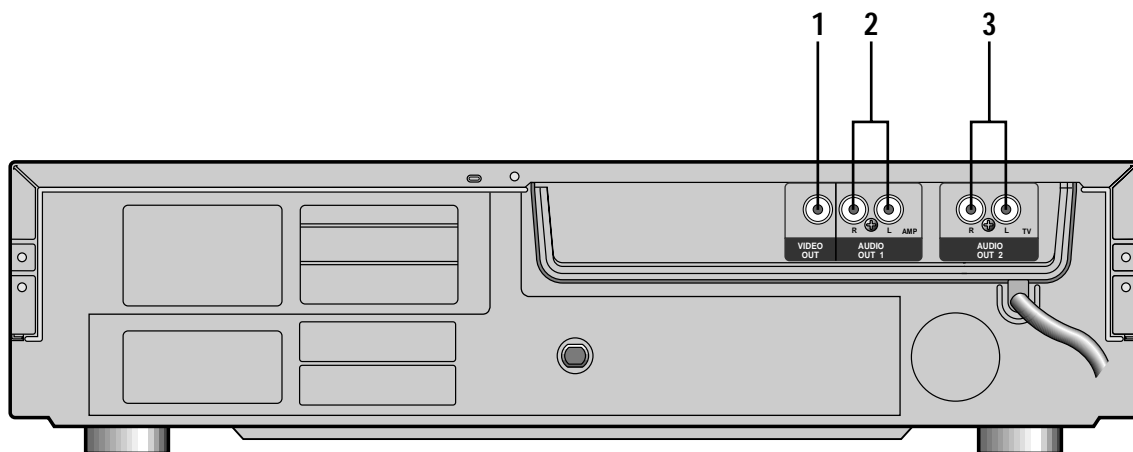


1. VIDEO OUTPUT
- Connect to the VIDEO IN of your TV set.
2. AUDIO OUTPUT (AMP)
- Connect to the AUDIO IN of your STEREO AMPLIFIER.

3. AUDIO OUTPUT (TV)
- Connect to the AUDIO IN of your TV set.

 ACCESSORIES

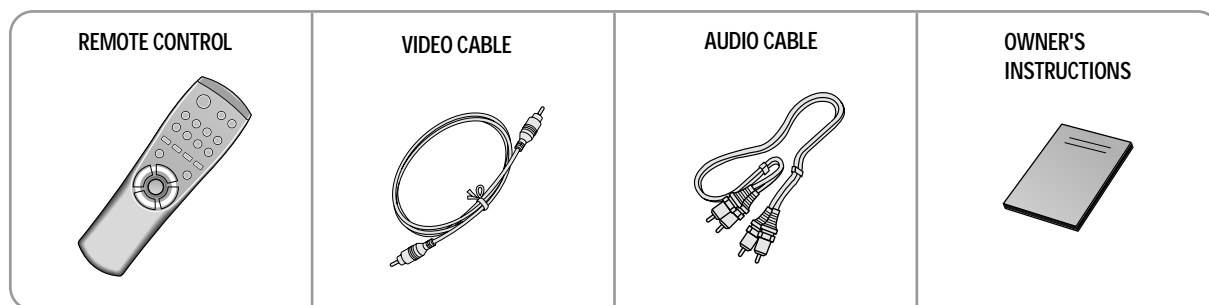


REMOTE CONTROL

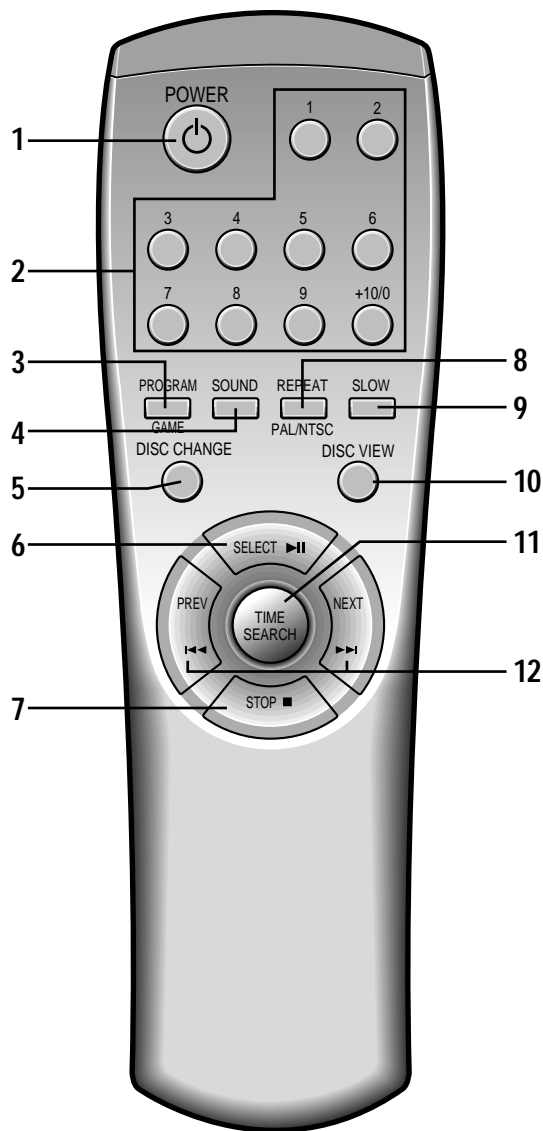 


1. POWER button
2. DIGIT buttons
3. PROGRAM/GAME button
4. SOUND SELECTOR button
5. DISC CHANGE button
6. SELECT(PLAY / PAUSE) button
7. STOP button
8. REPEAT/PAL/NTSC button
9. SLOW button
10. DISC VIEW button
11. TIME SEARCH(LAST MEMORY) button
12. PREVIOUS / NEXT(SKIP) button

TO INSERT BATTERIES

 
1 Open the battery compartment cover.

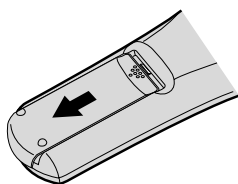

 2 Install two "AA" batteries observing the correct polarity as shown in compartment.

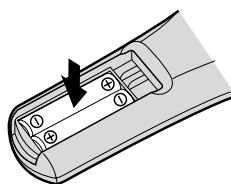

3 Replace the cover.

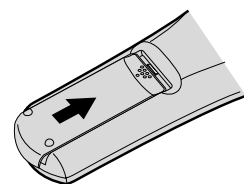 


SYSTEM CONNECTIONS

VCD AND CDP + TV

1. Connect AUDIO OUT jack of the VCD and CDP to AUDIO IN jack of the TV.
2. Connect VIDEO OUT jack of the VCD and CDP to VIDEO IN jack of the TV.

 
SET REAR

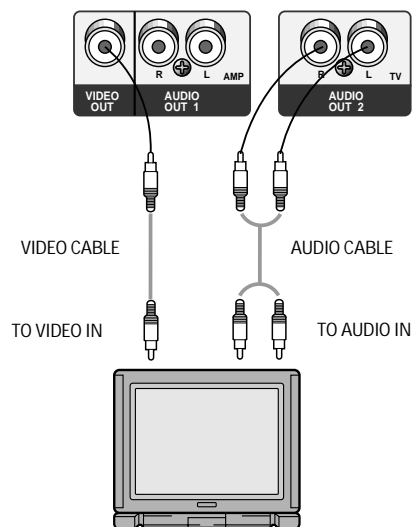

VCD AND CDP + TV + AMPLIFIER

1. Connect VIDEO OUT jack of the VCD and CDP to VIDEO IN jack of the TV.
2. Connect AUDIO OUT jack of the VCD and CDP to the AUX or CD INPUT jacks of the AMPLIFIER.

 SET REAR

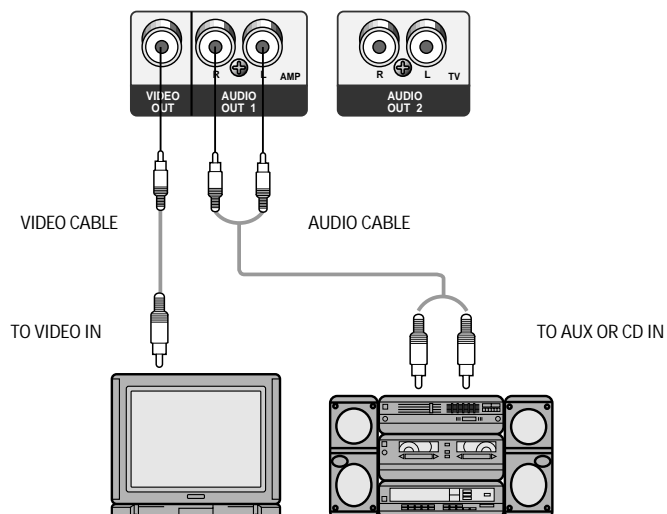


VIDEO-CD PLAYBACK


HOW TO PLAYBACK VIDEO-CD version 2.0

- Turn on the Power button.

 - 1** Press the Open/Close button.
- The tray is ejected.

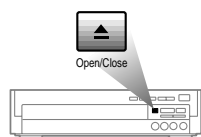

 
- 2** Insert a VIDEO-CD disc and press the Open/Close button.

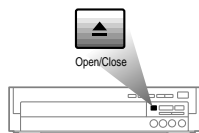

- 3** Press the SELECT (PLAY/PAUSE) button.

- In version 1.1 disc menu is not displayed and play function is operated.
- Only in version 2.0 disc menu is displayed.
- If you press directly the digit key at STOP MODE, start to play the track of selected digit No without menu picture (PBC OFF, MENU OFF MODE).

 
Ex) When playing a VIDEO-CD version 2.0 disc

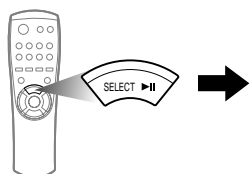

Main menu

1. The collection of videos
2. Videorche.
3. Music video
4. Movie
5. High definition static image

 - 4** Select a number from the menu and press it.
- Ex) In the case of selecting No. 1 the collection of videos.

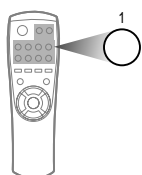


1. Prologue

1. Prologue
2. Beauty of Korea
3. Beautiful landscape of the South Pacific Ocean
4. A woman's day

- 5** Select a number from the menu and press it.

 
Ex) When selecting No. 4 A woman's day.

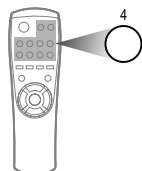

TO RETURN TO THE PREVIOUS MENU

Press the Return button.

 
- When a wrong menu is selected or other menu is about to be selected, hold down the Return button more than one second.

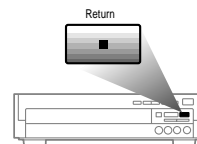

When the Return button is pressed shortly in VIDEO-CD version 2.0, the disc may be stopped.

- When you want to stop playing at the VIDEO-CD version 2.0 menu on mode, press the Return button short.

 Press the NEXT button, the next menu will be displayed.
Press the PREV button, the previous menu will be displayed.

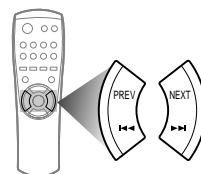

NOTE

In the case of menu mode

- PROGRAM, TIME SEARCH, REPEAT, DISC VIEW, SCORE functions do not work.

 
How to select a song or a video without using menu function.

- Select a track number from the disc jacket and press it at the stop mode.
- When playing version 2.0 disc which has no MENU screen or is not in PLAY.
Press SELECT button or NEXT button to see MENU screen or the next screen.

SLOW MOTION


Press the SLOW button on the remote control when the play function is on.

- Voices do not come out when the SLOW button is pressed.
- Slow playing is 1/2 of the normal playing speed at 1st press.
- Slow playing is 1/4 of the normal playing speed at 2nd press.
- Slow playing is 1/8 of the normal playing speed at 3rd press.
- Slow playing is canceled at 4th press.
- The sound is muted during the slow playing.

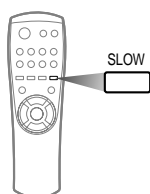


To return to normal operation

 - Press the SELECT(PLAY/PAUSE) button.

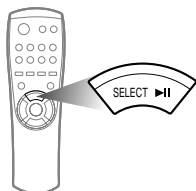

NTSC/PAL SELECTION METHOD

 - Press the PAL/NTSC(REPEAT) button for 1 sec or longer.
You can matching the picture display on your TV.

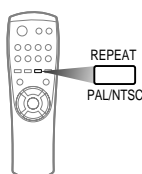


SELECT SOUND TO YOUR PREFERENCE

PREPARATION

1. Press the POWER button.
(The audio is set to the stereo mode automatically)
2. Insert a disc and press the PLAY button.

1 Press the SOUND button.

 - Every time you press this button, sound changes as show below

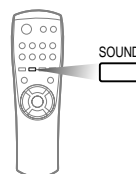

	Screen on your TV monitor	Audio Output	
		L-ch	R-ch
1st press.	L ch	L-signal	L-signal
2nd press.	R ch	R-signal	R-signal
3rd press.	L/Rch	L-signal	R-signal

- 3 seconds after selecting sound mode, display will disappear.

 
DISC VIEW FUNCTION

- Desired music or video display can be used directly without by menu functions (VER 2.0 Mode). This function is possible in Ver 1.1 and Ver 2.0 menu off mode.



TRACK VIEW

- This function is used for show the first views by nine in track.
ex) VCD 1.1 Version



- Press the PLAY button to playback.

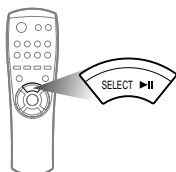

  
- Press the DISC VIEW button.
 - DISC VIEW MENU is displayed.

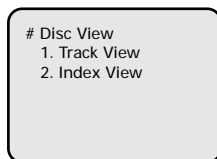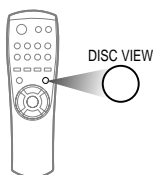

  
- Press the DIGIT button 1 to select Track View.
 - Nine tracks are presented with sound.

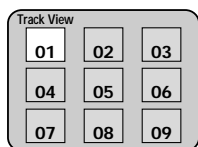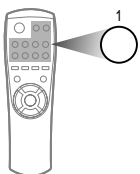

 - Press the DIGIT button to select the desired track.
 - The selected track is displayed on the small screen with sound played.
EX) When selecting No 4.

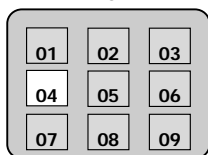

 
- Press the SELECT(PLAY/PAUSE) button.
 - Displayed in full screen.

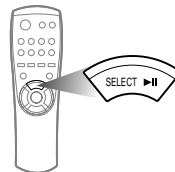

In case of cancelling the TRACK VIEW function.


Repress the DISC VIEW button.

 - If playbacks as original case.

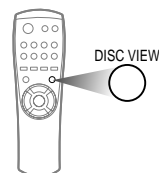

In case the number of tracks is more than ten.

 - Press the NEXT button watching the track bellow.
Press the PREVIOUS button. watching the former track.
EX) If the disc has 14 tracks.

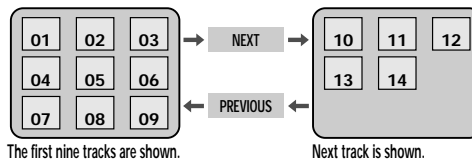

When pressing the DIGIT button.



The 11th track is displayed on the small screen.

When pressing the select(play/pause) button it's displayed in full screen.

 
NOTE

Track View will not be operated, if more than 99 tracks.

In case of directly selecting the TRACK VIEW function.

Press the DISC VIEW button in stop state.

- TRACK VIEW function is selected and nine tracks are displayed in screen with sound in sequence.

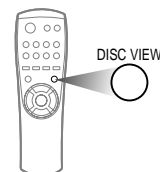


REPEAT/ FUNCTION

- Turn on the TV.
- Load and play a disc.


INDEX VIEW

- This function acts as displaying the track in playing sequentially by time and so it's convenient for searching desired video.
ex) VCD 1.1 Version

 - 1 Press the PLAY button to playback.

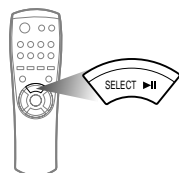


 - 2 Press the DISC VIEW button.
 - DISC VIEW MENU is displayed.

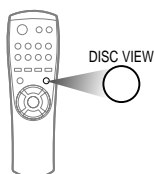

- 3 After step 1,2 Press the DIGIT button 2 to select Index View.

 - The display as dividing into nine equal parts in displayed together with relevant sound.

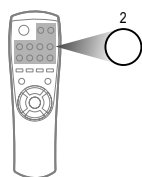


- 4 Press the DIGIT button to play back the desired part number.
 - It's displayed from the selected part in full screen.

1.TO REPEAT ONE TRACK

Press the REPEAT button.

 
- "REPEAT" indicating the one track repeat lights and the one track is played repeatedly.

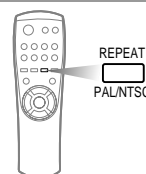

TO REPEAT ONE DISC

Press the REPEAT button again.

 
- "REPEAT" indicating the one disc repeat lights and the one disc is played repeatedly.

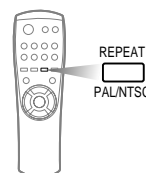

TO REPEAT ALL DISCS

Press the Repeat button three times.

 
- "REPEAT" indicating the all discs repeat lights and all of the discs are played repeatedly.

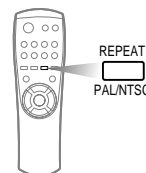

TO END REPEAT PLAY

Press the Repeat button at the all discs repeat mode

 
- "REPEAT" indicator will be turned off and it becomes all discs continuous play mode.


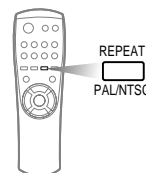


GAME FUNCTION


- First, press the power button to turn the power off.

BLACK JACK

  
- 1** Press the Game button.
- The GAME MENU screen appears.
 - During the GAME, '  ' appears on the display part.

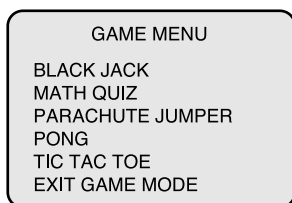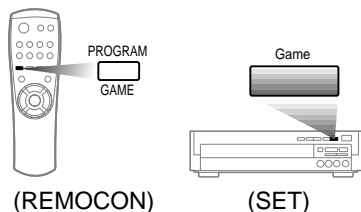


 
- 2** Press the SELECT, STOP button to select the game.
- Select the BLACK JACK game.

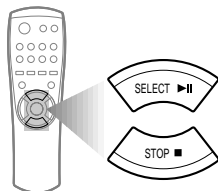

 - 4** Press the SELECT and the STOP button to select the GAME OPTION.


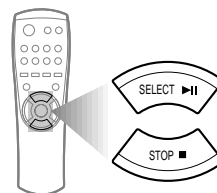


  - 5** Press the PREV and the NEXT button to adjust.

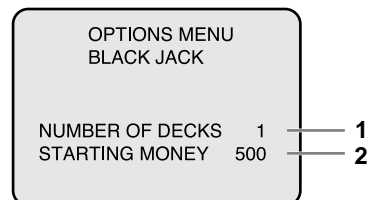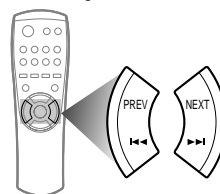


1. Number of the rounds of cards: You can select 1~7.
2. The initial stake: You can select 100 ~ 10,000 by the unit of 100.

  - 3** Press the DISC VIEW button.
- The OPTIONS MENU screen appears.

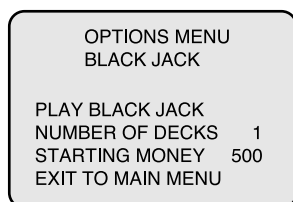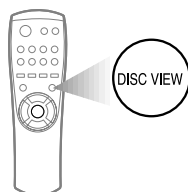

 
- 6** Press the SELECT and the STOP button to select PLAY BLACK JACK.

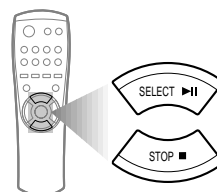

NOTE

- You can use the GAME FUNCTION only in the PAL TV SYSTEM.
- Set the distinction of the TV below the half before starting the game.

 
- 7** Press the DISC VIEW button.
- The game screen appears.

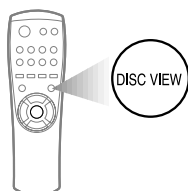


TO PLAY THE GAME BLACK JACK.

The part that has the cards number closer to 21 wins the game.
(If the number is over 21, you will lose the game.)

 - 1** Press the SELECT and the STOP button to select the betting amount.
- SELECT button: increasing the bet.
 - STOP button: decreasing the bet.


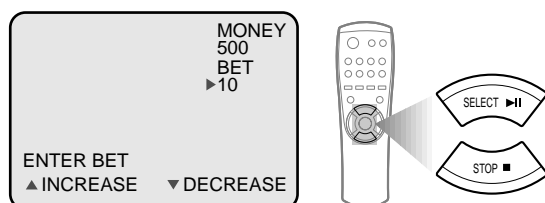


 - 2** Press the DISC VIEW button, and then press the PREV, NEXT, STOP, SELECT button to play the game.
- PREV button: receiving a card
 - NEXT button: card stop.
 - STOP button: a new game.
 - SELECT button: adjusting the betting amount.

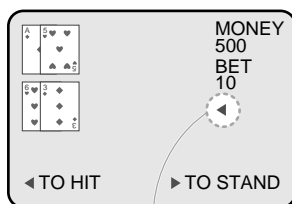



The part with the mark is the player.

  TO STOP THE PLAYING GAME.

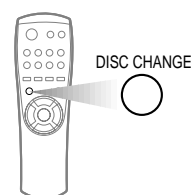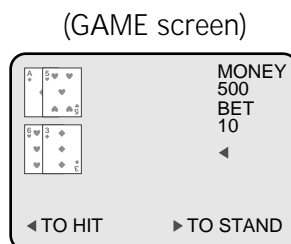



Press the DISC CHANGE button.

  (OPTIONS MENU screen)

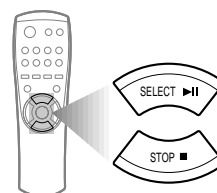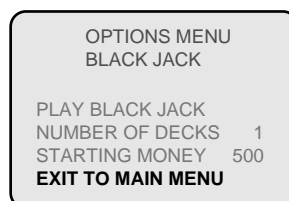

  Press the SELCET and the STOP button to select EXIT TO MAIN MENU, and then press the DISC VIEW button.

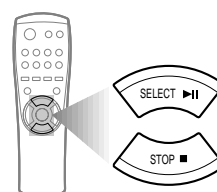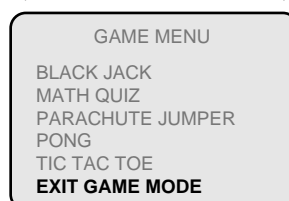


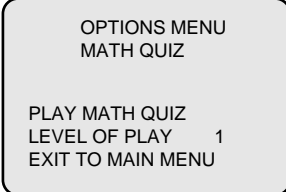 




(GAME MENU screen)



Press the SELCET and the STOP button to select EXIT GAME MODE, and then press the DISC VIEW button.

 
GAME FUNCTION

MATH QUIZ




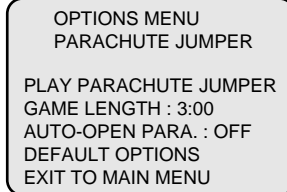 

 


- 1 Press the GAME button. 
- 2 Press the SELECT and the STOP button to select MATH QUIZ. 
- 3 Press the DISC VIEW button. 

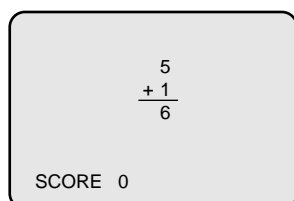- 4 Press the SELECT and the STOP button to select LEVEL OF PLAY. 
- 5 Press the PREV and the NEXT button to adjust. 
 - You can select level 1~9. The higher the level is, the more difficult the game is.
- 6 Press the SELECT and the STOP button to select PLAY MATH QUIZ. 
- 7 Press the DISC VIEW button. 

HOW TO PLAY THE GAME MATH QUIZ.

The game is the addition or multiplication of the math. Enter the answer with the number buttons, and then press the SEARCH/ENTER button.



PARACHUTE JUMPER

- 1 Press the GAME button. 
- 2 Press the SELECT and the STOP button to select PARACHUTE JUMPER. 
- 3 Press the DISC VIEW button. 

- 4 Press the SELECT and the STOP button to select the item to adjust. 
- 5 Press the PREV and the NEXT button to adjust. 
 - GAME LENGTH: Repeatedly in the order of 1 min → 3 min → 5 min → 10 min → DON'T END, you can select one.
 - AUTO-OPEN PARA.: repeatedly ON → OFF is selected.
 - DEFAULT OPTIONS: the general option.
- 6 Press the SELECT and the STOP button to select PLAY PARACHUTE JUMPER. 
- 7 Press the DISC VIEW button. 

HOW TO PLAY THE GAME PARACHUTE JUMPER.

The game is to land on the marked point after jumping from the plane.

 
AUTO-OPEN PARA.: when ON is selected.

Press STOP button to jump and then press the PREV/NEXT button to adjust the position.






 


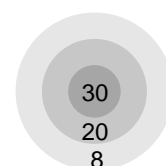AUTO-OPEN PARA.: when OFF is selected.

Press STOP button to jump and press the DISC VIEW button to release the parachute, and then press the PREV/NEXT button to adjust the position.

- According to the landing position, the score will differ.






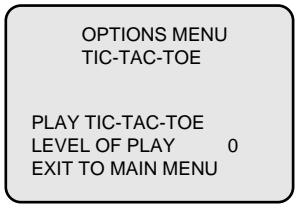 

 


PONG

- 1 Press the GAME button. 
- 2 Press the SELECT and the STOP button to select PONG. 
- 3 Press the DISC VIEW button. 

- 4 Press the SELECT and the STOP button to select BALL SPEED. 
- 5 Press the PREV and the NEXT button to adjust. 
 - You can select the ball speed of 1~7. The higher the number is, the faster the ball speed is.
- 6 Press the SELECT and the STOP button to select PLAY PONG. 
- 7 Press the DISC VIEW button. 

HOW TO PLAY THE GAME PONG.

The part on the right side of the screen is the player.
 The game is to move the bar up or down to hit the ball.
 Press the SELECT, STOP button to move the bar up or down.

TIC TAC TOE

- 1 Press the GAME button. 
- 2 Press the SELECT and the STOP button to select TIC TAC TOE. 
- 3 Press the DISC VIEW button. 

- 4 Press the SELECT and the STOP button to select LEVEL OF PLAY. 
- 5 Press the PREV and the NEXT button to adjust. 
 - You can select 0~2. The higher the number is, the more difficult the game is.
- 6 Press the SELECT and the STOP button to select PLAY TIC-TAC-TOE. 
- 7 Press the DISC VIEW button. 

HOW TO PLAY THE GAME TIC TAC TOE.

The part marked with × is the player. To win the game, line up the × marks across, vertically, or diagonally.
 Press the PREV, NEXT, SELECT, STOP button to move and press the DISC VIEW button to mark an . ×

NOTE

- To stop the game, see the page 15.

 
PROGRAM FUNCTION

- This function can program up to 30 tracks during STOP mode.

ex) To program No.4 track of No.2 disc


1 Press the PROGRAM button.

- "PROGRAM" lights on the display section.

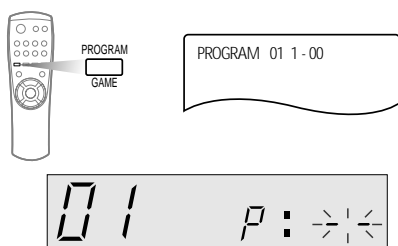


4 In a second

 - After step 3, you must press the PROGRAM button again then the selected number (2-04) is programmed.
- Up to 30 tracks can be programmed by repeating step 2 to 4.

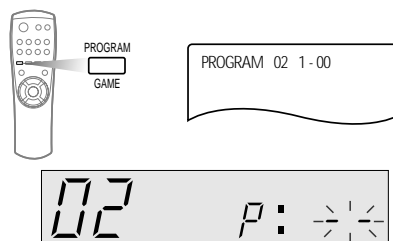


2 Select the disc by pressing the DISC CHANGE button.

 - Press the DISC CHANGE button.

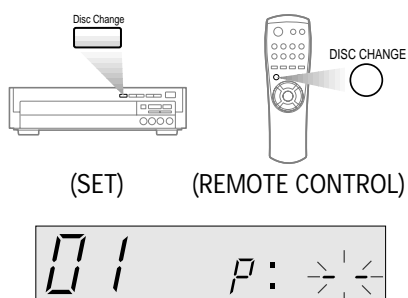

5 Press the PLAY/PAUSE button.


 
- Programming is completed, and the first track of the program is played.
- When the PREV/NEXT button is pressed, the next or previous programmed track is played.

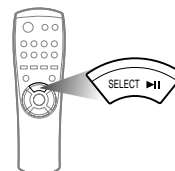

3 Press the track number to be programmed.


- Press the digit buttons.

  Ex) Select track 4

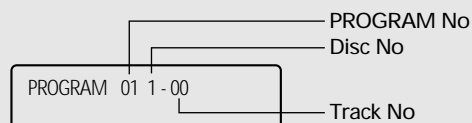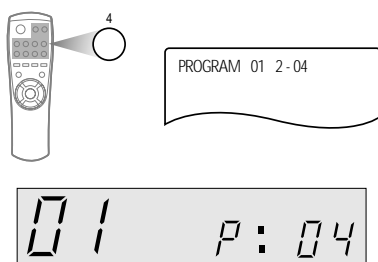

Note

 
- If the Program button is pressed during programming, it can not be programmed anymore, press again to continue.
- "PROGRAM" will light on the display section after programming is completed during the play.
- If the Open/Close button is pressed during playing, this function will do not work.



TO REPEAT A PROGRAMMED TRACK


Press the Repeat button at the programmed mode

 - When the repeat button is pressed once, " REPEAT" indicating the one track repeat will light and one track will be repeated.
- When the repeat button is pressed one more time, "REPEAT ALL" will be indicated and all of the programmed tracks will be repeated.

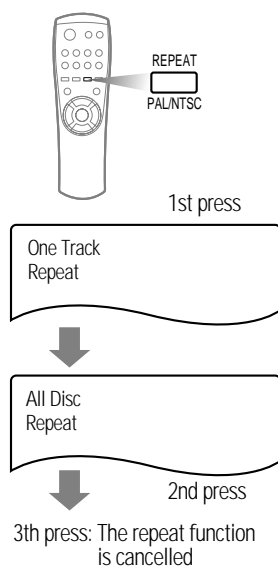


TO CANCEL THE PROGRAM

 - Press the STOP button during the STOP mode.

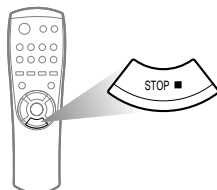

Note

 - The program will be cancelled if the OPEN/CLOSE or the power is turned off.



SEARCHING FUNCTIONS

 
- Turn on the TV.
- Load and play the disc.

CD DISC VIEW PLAY

This function can be used conveniently when searching a desired track in the CD disc.


Press the DISC VIEW button on the remote controller.

- When playing a disc with sections or tracks, a section or track will be played for beginning 10 seconds, then the next section or track will be played, and continue in this way.

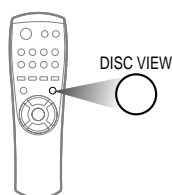


To continue with normal play

 - Press the PLAY/PAUSE button at the desired location during the DISC VIEW Scan play.

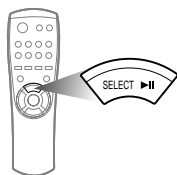

To stop

 - Press the STOP button.

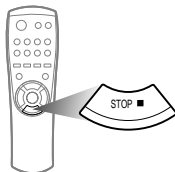


NOTE

- When the DISC VIEW button is pressed during the play, the DISC VIEW SCAN will start from the next track.
- If the Open/Close button is pressed during the DISC VIEW scan playing, this function will do not work.

HIGH SPEED SEARCH

This function is used to searching disc for desired location. Press and hold down the Search button during the play.

 - Hold down the PREV/NEXT button on the front panel more than one second.
- When " ►► " button is pressed, it advances to the next scene, When " ◄◄ " button is pressed, it returns to the previous scene.

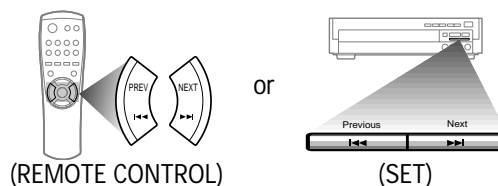


To play normally

- When the pressed button is released, it returns to the normal play.

SKIP

Press the Previous/Next(◄◄ , ►►) buttons.

 - Press the Previous/Next(◄◄ , ►►) button on the front panel repeatedly within one second.
- When the Previous/Next button is pressed, it quickly advances to the Previous/Next Track.
- When the " ◄◄ " button is pressed, it returns to the beginning of the currently playing track. If pressed again, it returns to the previous track.
- Picture moves to the beginning of the next track whenever " ►► " button is pressed.
- When the Previous or Next button is pressed while playing a disc such as a movie disc, it quickly advances 5 minutes in the forward/reverse direction.

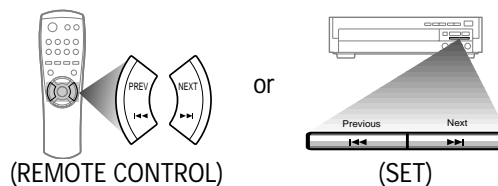


NOTE

In case of high speed search


- When searching a CD disc, the volume is lowered and it advances in high speed.
- If the search does not operate properly due to the noise, release the button momentarily and press it again.
- When the search for a VIDEO-CD is released, mosaic screen might appear or the screen might advance slower than the audio for a short period of time.

TIME SEARCH

 
1 Press the TIME SEARCH button.

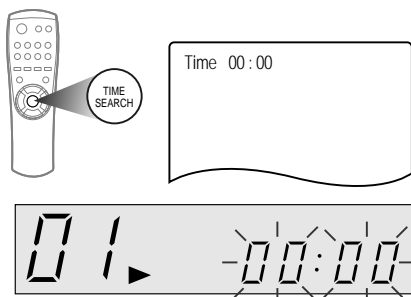

 2 Enter the time by pressing the DIGIT button.

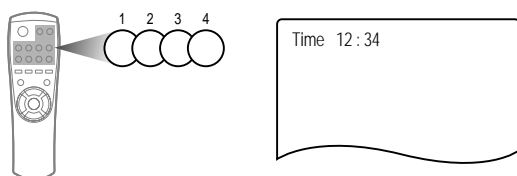

3 Press the SELECT(PLAY/PAUSE) button.

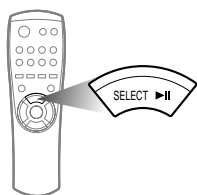 

NOTE

 
- 1.If entering the time is greater than total time of the disc, it will not be entered.
- 2.If entering the time is greater than track time it will play next track.
- 3.This function works only for playing mode.
- 4.This function can operate only for Menu off mode of VIDEO-CD.

LAST MEMORY FUNCTION

- If you press the STOP or POWER button during VIDEO-CD playback, a playback position slightly ahead of the current time is stored in the unit's memory.
- You can easily find the memorized position just press the LAST MEMORY button.

METHOD

- When you press the stop or POWER button to finish the operation,
- Press TIME SEARCH(LAST MEMORY) button and this unit will search for original position.

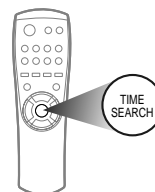

NOTE

- 1.Last memory play is always operated as menu off mode even if last status is menu on.
2. If you press stop and open, this function will be cancelled.

KARAOKE FUNCTION

- Turn on the TV.
- Load and play a disc.

 
1 Connect the MIC.

- The key control will be displayed on the screen.

KEY STEP ± 00

2 Load a disc and select a desired track.

- Eject the tray by pressing the Open/Close button, load a disc and close the tray.

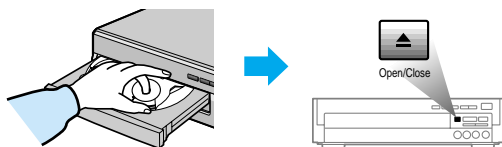

KEY CONTROL FUNCTION

- Make sure to be at the karaoke mode.

Press the Key Control button

- Press the Key Control button to adjust the key to suit to your voice. (the 33 step key control)

KEY STEP - 01

 
ex) In case of pressing # :

KEY STEP + 01

On screen Display will disappear in 3 seconds.

3 Use the microphone.

- Two microphones can be used at the same time.

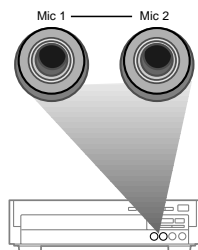


ex) In case of pressing # once more:

KEY STEP + 02


Note

 - Depending on a type of VIDEO-CD 2.0 disc, it may be not operated Key Control function in still picture.




Adjust the Digital Echo.

 - This will add an echo to your voice, giving you the feeling of singing on stage. Adjust it as desired.

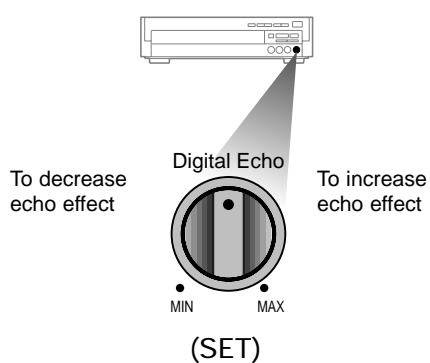

SCORE FUNCTION

 - Connect the mic.
- Press the Score button on the front panel. Then it will pause automatically at the end of the track.
- When you finish singing a song, the SCORE will be displayed on your TV monitor.

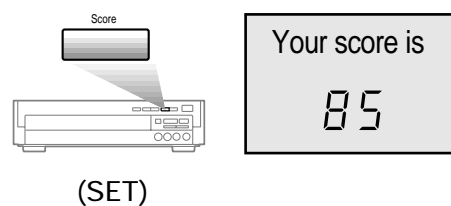


To decrease or increase the volume of the Microphone:

- Turning to the left decreases Mic Vol. Turning to the right increases Mic Vol.



If howling occurs:

 - Reduce the microphone volume.
- Change the direction that the microphone faces.
- Move the microphone away from the speaker.



TROUBLE SHOOTING

SYMPTOM	CHECK AND ACTION
Tray is not ejected.	-Check if the power is turned on.
The unit does not play	-Check if a disc is loaded.
Tray is ejected.	-Check if a disc is contaminated or damaged. Remove disc, clean it and insert again. -Check if a disc is seated properly.
Video or audio is muted, or tray is ejected after 2-5 seconds.	-Check for condensation in unit. -Removed disc, leave the unit with the power turned on for 1-2 hours. The unit will operate only after the condensation is cleared.
Picture appears late when SELECT(PLAY/PAUSE) button is pressed.	-Repeated pressing of PLAY/STOP/OPEN caused disc drive motor to over heat, and protection circuit activated until motor cools down.
Does not have video although disc is turned.	-Check if TV power is turned on. -Check if connection is secure. -Check if the unit is bypassed.
Picture shakes vertically.	-Picture may shakes momentarily during transition from dark to bright.
Picture quality of a particular disc is poor and picture shakes	-Check if disc is damaged or deformed. -Check if disc is contaminated.
SKIP or SEARCH takes too much time.	-Some discs may require longer time to read encoded information. -Check disc.
TIME SEARCH searches different time.	-Check if disc is contaminated or deformed. -When picture shakes disc may be contaminated or deformed causing malfunction. Clean disc
After pressing the SELECT(PLAY/PAUSE) button, there is a long delay before picture appears on screen.	-If the PLAY/STOP/OPEN/DISC CHANGE operations are repeated within short period of time, the Disc Drive Motor overheats. The disc will not rotate until the motor cools down. This is a normal condition. Wait a few minutes for the motor to cool down.
The disc rotates well, but you do not have picture on the screen, You can see the picture on screen, but the quality is poor and the picture shakes.	-Check if the TV power is turn ON. -Check if the connection is good. -Check if the disc is in good condition.
No sound	-Check if disc is loaded upside down. -Insert disc with label side up. -Check if disc is severely deformed. Clean the disc

WHEN VIDEO IS DISPLAYED THROUGH SET

-Source : VIDEO-CD DISC




-Display :TV monitor

SET MODE	TV SYSTEM	DISC	DISPLAY	REMARK
PAL	PAL	PAL	OK	PAL 50Hz
		NTSC	OK	PAL 50Hz
	NTSC	PAL	NG	No sync
		NTSC	NG	No sync
NTSC	PAL	PAL	NG	No color
		NTSC	NG	No color
	NTSC	PAL	OK	
		NTSC	OK	NTSC 60Hz

* Color or sync is in trouble according to TV set.

GENERAL INFORMATION ABOUT THE DISC


GENERAL INFORMATION ABOUT THE DISC

Compact Disc 8cm (3 inch) 	Digital Audio (Max. 20 min.) Single
Compact Disc (CD) 12cm (5 inch) 	Digital Audio (Max: 74min) Single
Video Compact Disc 74min.) (VCD) 12cm (5 inch) 	Digital Video and Audio (Max. Single


CARE OF PLAYER AND DISCS

CARE OF DISCS

 
Use a soft, dry cloth for cleaning.

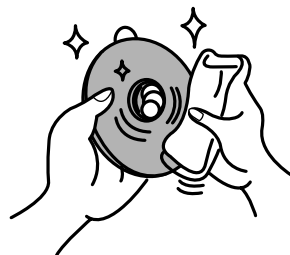

 
Clean the disc with water diluted with neutral detergent solution and wipe from inside to outside using dry cloth.

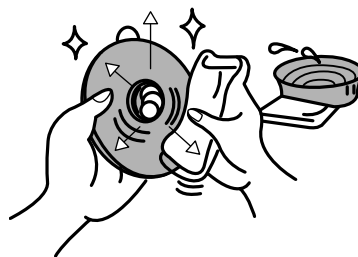


 Store a disc away from direct sunlight or heat source.

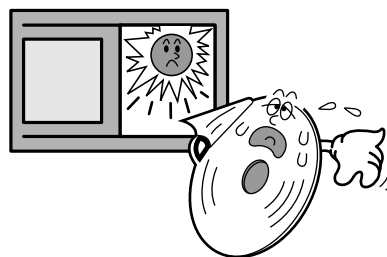

Keep the disc free from dust.

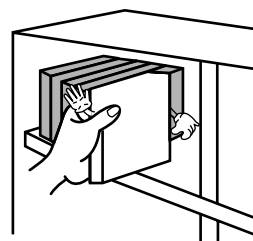 

 

CARE OF PLAYER AND DISCS

Cleaning the Player

 
- Use soft cloth or the dusting attachment of your vacuum cleaner to dust the exposed surface of the player.
- Use the vacuum cleaner attachment to remove dust from the ventilation holes on the top, back, sides, and bottom of the cabinet.

- Some of plastic surfaces are easily scratched, and they can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet are non-porous and the residue will accumulate more dust.

CARE OF DISC


Handling Discs

- When loading or removing discs, do not touch the playing surface.

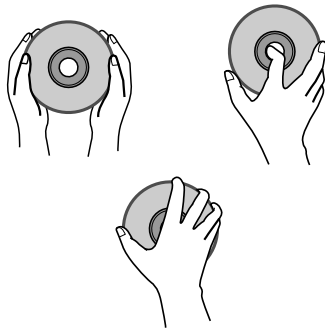

DO NOT PLAY CRACKED OR WARPED DISCS.

 -Never play cracked, scratched, or warped disc.
This may damage the player cause it to malfunction.

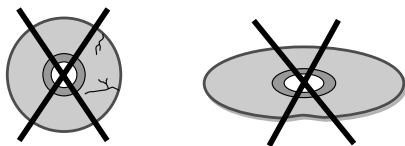

SPECIFICATIONS

GENERAL SPECIFICATIONS			-Power consumption: 8.5W -Weight: 3.7 kg -Dimensions 420 (W) x334(D) x 111 (H) mm -Operating temperature: +5°C~+35°C (41°F~95°F)
DISC USABLE			NTSC/PAL
CD	12cm	single	74 min
	8 cm	single	20 min
VCD	12cm single	Audio + Video	74 min
VIDEO OUTPUT			-Output level: 1Vp-p (for 75 ohm load) 1channels
AUDIO OUTPUT			-2 Channels (L/R) -Output level1: 2 Vrms (1KHz, 0 dB) -Output level2: 0.5 Vrms (1KHz, 0 dB) -Audio characteristics: frequency response: 20Hz-20KHz Signal to Noise: 85dB total harmonic distortion: 0.1%(at 1KHz, 0dB)

