


"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products.

 is a trademark of Sony Corporation.

# Cassette-Player

Operating instructions  
使用说明书 ( 反面 )




WM-EX194

©2004 Sony Corporation Printed in China





**A**

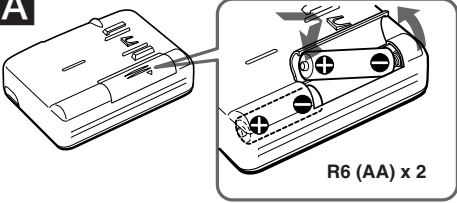

R6 (AA) x 2

**B**

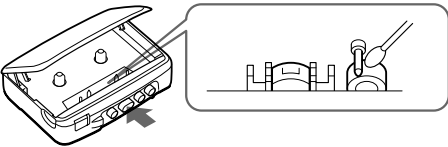

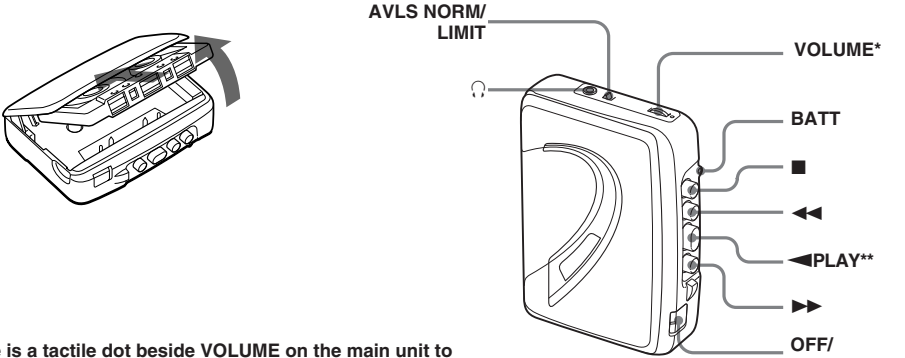

AVLS NORM/  
LIMIT

VOLUME\*

BATT

■

◀◀

▶▶

▶▶

OFF/  
MEGA BASS

\* There is a tactile dot beside VOLUME on the main unit to show the direction to turn up the volume.

\*\* The button has a tactile dot.

## English

## Preparations **A**

### To Insert batteries

#### Note

- The BATT indicator dims when the batteries become weak or exhausted. Replace them with new ones.

## Playing a tape

Insert a cassette and press ◀PLAY.

To	Press
Stop playback	■ (stop)
Wind rapidly*	▶▶ or ◀◀

\* Be sure to press ■ (stop) after the tape has been wound or rewound.

### To limit the maximum volume automatically

Set AVLS (Automatic Volume Limiter System) to LIMIT. The maximum volume is kept down to protect your ears, even if you turn the volume up.

### To emphasize bass sound

Set the OFF/MEGA BASS switch to MEGA BASS to produce deep and powerful sound.

#### Note

- Do not open the cassette holder while the tape is running.

## Troubleshooting

### The volume cannot be turned up.

- AVLS is set to LIMIT.

### Poor tape playback quality.

- Clean the headphones/earphones plug.
- Clean the tape head and tape path using a cotton swab and commercially available cleaning solvent after every 10 hours of use. **B**

## Precautions

### On batteries

- Do not carry dry batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- When you are not going to use your Walkman for a long time, remove the batteries to prevent damage from battery leakage and corrosion.

### On handling

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- We do not recommend the use of tape longer than 90 minutes. They are very thin and tend to be stretched easily. This may cause malfunction of the unit or sound deterioration.
- If the unit has not been used for a long time, set it in the playback mode to warm it up for a few minutes before inserting a cassette.
- For cleaning the case, use a soft cloth slightly moistened with mild detergent solution. Do not use alcohol, benzine or thinner.

### On headphones/earphones

#### Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

 
#### Preventing hearing damage

Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.



#### Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

A

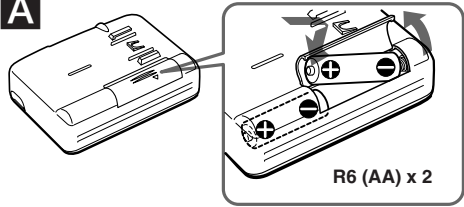

B

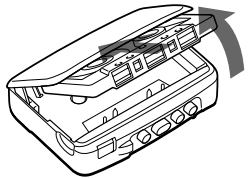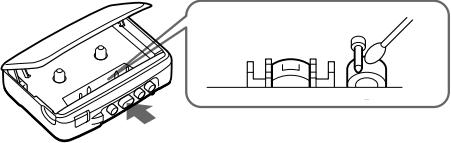  

- \* 在主机上 VOLUME 旁边有一个触感圆点，表示转大音量的方向。
- \*\* 按钮有触感圆点。

AVLS NORM/  
LIMIT



VOLUME\*

BATT



◀PLAY\*\*



OFF/  
MEGA BASS

## Specifications

### Power requirement

Two R6 (size AA) batteries: 1.5 V DC × 2

### Dimensions

83.7 × 111.5 × 28.4 mm (w/h/d) excl. projecting parts and controls

### Mass

Approx. 115 g (main unit only)

### Supplied accessories

Stereo headphones or Stereo earphones (1)/Belt clip (1)

Design and specifications are subject to change without notice.

### Battery life\* (approximate hours)

	Sony alkaline LR6 (SG)**	Sony R6P (SR)
playback	25	7.5

\* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association). (Using a Sony HF series cassette tape)

\*\* When using Sony LR6(SG) alkaline dry batteries (produced in Japan).

### Note

The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.

## 规格

### 电源要求

- 两节 R6 电池（AA 型）：1.5 V DC × 2

### 尺寸

83.7 × 111.5 × 28.4 mm（宽/高/纵深），不包括控制器和突出部分

### 质量

约 115 g（仅主机）

### 附件

立体声头戴耳机或立体声耳机(1)/ 皮带夹(1)

设计和规格如有变更，恕不另行通知。

### 电池寿命\*（近似小时数）

	Sony 碱性电池 LR6(SG)**	Sony R6P(SR)
放音	25	7.5

\* 按 JEITA（Japan Electronics and Information Technology Industries Association）标准测定的值。（使用 Sony HF 系列磁带）

\*\* 使用 Sony LR6(SG)碱性干电池（日本生产）时。

### 注意

根据使用情况、环境温度以及电池类型，电池的寿命可能会缩短。

## 中文

## 准备工作 A

### 装入电池

#### 注意

- 当电池电量变弱或耗尽时，BATT 指示灯暗淡。请更换新电池。

## 播放磁带

插入磁带并按 ◀PLAY 键。

功能	功能键
停止放音	■（停止）键
快绕 *	▶▶ 键或 ◀◀ 键

\* 当磁带已绕完或前绕完之后，请一定按下 ■（停止）键。

### 自动限制最大音量

将 AVLS（自动音量限制系统）开关设在 LIMIT 位置。此时，即使您调高音量，最大音量也会被限制在适当的水平以保护您的听觉。

### 增强低音

将 OFF/MEGA BASS 开关设在 MEGA BASS 位置，可以产生深沉而有力的低音。

#### 注意

- 在播放磁带过程中请不要打开磁带舱。

## 故障检修

不能调高音量。

- AVLS 设在 LIMIT 位置。

录音带放音质量差。

- 清洁头戴耳机 / 耳机插头。
- 每使用 10 小时后，用棉签和市售的清洁液清洁磁头和磁带通道。 B

## 使用前注意事项

### 电池须知

- 请勿将干电池与硬币或其他金属件混在一起携带。如果金属件偶然将电池的正极和负极连接起来，将会产生热量。
- 长期使用 Walkman 时，请取出电池以避免因电池漏液而腐蚀受损。

### 操作须知

- 请勿将本机置于热源附近，或阳光直射、尘沙过多、潮湿、会淋到雨、有机械冲击的地方，或车窗紧闭的汽车里。
- 建议不要使用长度在 90 分钟以上的磁带。这种磁带很薄，容易被拉长。使用这种磁带可能导致本机故障或音质下降。
- 如果长时间不使用本机，在插入磁带前，请先将其置于放音状态预热几分钟。
- 清洁机壳时，请用蘸有少许中性清洁剂的软布擦拭，不可使用酒精、汽油或稀释剂。

### 头戴耳机 / 耳机使用须知

#### 交通安全

请勿在驾车、骑车或操纵任何机动车辆时使用头戴耳机 / 耳机，否则可能导致交通事故，并且在有些地区是违法的。即使在步行时，特别是在过马路时，头戴耳机 / 耳机的音量过高也会有潜在的危险。在可能有危险的情况下，必须加倍小心或停止使用。

#### 防止听力损伤

请勿高音量地使用头戴耳机 / 耳机。耳科专家告诫不要连续、高音量和长时间使用耳机。如果有耳鸣现象，请调低音量或停止使用。

#### 为他人着想

请保持适当的音量，这使您能听到外界的声音，并且不打扰周围的人。