Printed using VOC (Volatile Organic Compound)-free

Cassette Player

Operating Instructions 使用說明書(反面) ()

http://www.sony.net/

"WALKMAN" is a trademark of Sony Corporation.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

C E 標誌的有效性,僅限於那些有法律限制的國家,主要在 EEA (歐洲經濟區)國家。


EEA (




WM-EX527

Sony Corporation ©2002 Printed in Malaysia



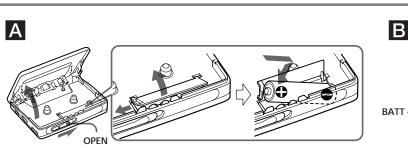

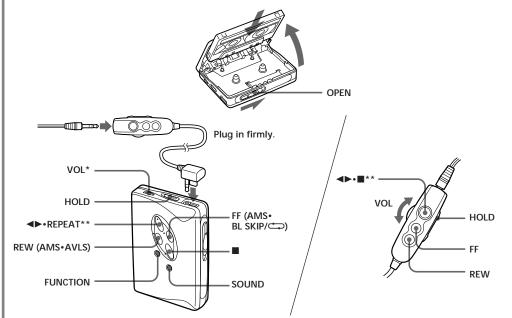

There is a tactile dot beside VOL on the main unit to show the direction to turn up the volume. ** The button has a tactile dot.

Specifications

- Frequency response Playback: 30 - 18 000 Hz
- Output
- Load impedance 8 300 Ω
- Power requirements
- One R6 (size AA) battery
- Dimensions (w/h/d)
- Approx. 78.1 x 108.0 x 28.1 mm (excluding projecting parts and controls)
- Mass

• 頻率範圍

輸出

尺寸

Approx. 161 g (main unit only)

: 30 - 18 000Hz

1.5 V 使用一個 R6 (AA, 3號)電池

• 附件 立體聲頭戴耳機或耳機(帶遙控器)(1)

設計和規格有所變更時,恕不另行奉告。

頭戴耳機(○插孔)

• 質量 約 161g (僅限於主機)

161 g(

負載阻抗 8 - 300

Stereo headphones or earphones with remote control (1)

Design and specifications are subject to change without notice.

大約 78.1×108.0×28.1mm (寬/高/縱深) (不含突起部份和控制器)

and battery type.

Battery life* (Approx. hours)

電池壽命*	(近似小時數)		
		Sony鹼電池LR6	(SG)	**
磁帶放音		35		

Sony alkaline LR6 (SG)*

35

Measured value by the standard of JEITA(Japan Electronics

and Information Technology Industries Association) (Using a Sony HF series cassette tape).

**When using a Sony LR6(SG) "STAMINA" alkaline dry battery(produced in Japan).

• The battery life may be shorter depending on the

operating condition, the surrounding temperature

按JEITA (Japan Electronics and Information Technology Industries Association) 標準測定的值(使用Sony牌HF系列 錄音帶)。 ** 使用LR6 (SG)型Sony "STAMINA" 鹼電池(日本製)時。

---・電池壽命,可能因操作條件,環境溫度和電池型式而縮短 ・些。

: 30 - 18 000 Hz 8 - 300 Ω R6(AA (w/h/d) 78.1 x 108.0 x 28.1 mm(

(1) 가

LR6(SG) Sony 35

* JEITA(Japan Electronics and Information Technology Industries Association: (Sony HF

** LR6(SG) Sony STAMINA

English

Preparations

To Insert battery A

- 1 Slide the OPEN switch to open the cassette
- **2** Release the catch to open the battery compartment lid, and insert one R6 (size AA) dry battery with correct polarity.

• For maximum performance we recommend that you use a Sony alkaline battery.

When to replace the battery B

Replace the battery with a new one when the BATT

• After the battery is replaced, the settings of the FUNCTION and SOUND buttons will be erased.

Playing a Tape

- 1 If the HOLD function is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.
- 2 Insert a cassette and press **◆▶•**REPEAT on the main unit, or if using the remote control, press **◄►** (play) • **■** (stop). Adjust the volume with VOL.

When adjusting the volume on the main unit Set the VOL control on the remote control at maximum.

When adjusting the volume on the remote control Set the VOL control on the main unit slightly above the appropriate level.

Operation on the main unit

То	Press	
Switch playback to the other side	▼►• REPEAT during playback	
Stop playback		
Fast forward*	FF during stop	
Rewind*	REW during stop	
Repeat the current track (Repeat Single Track function)	◆►• REPEAT one second or more during playback <i>To stop a single repeat, press it again</i>	

Operation on the remote control

Press	
◄▶•■ one second or more during playback	
◄▶•■ once during playback	
FF during stop	
REW during stop	
◄►• ■ twice during playback <i>To stop a single repeat, press</i> ◄►• ■ <i>once.</i>	

Other Tape Operations

То	Press
Play the next track/ succeeding 9 tracks from the beginning (AMS**)	FF once/repeatedly during playback
Play the current track/ previous 8 tracks from the beginning (AMS**)	REW once/ repeatedly during playback
Play the other side from the beginning (Skip Reverse function)	FF one second or more during stop
Play the same side from the beginning (Rewind Auto Play function)	REW one second or more during stop

- forward or rewind, the Walkman switches to playback
- ** Automatic Music Sensor

Using Other Functions

Adjusting playback mode

While holding down FUNCTION, press the FF button. The BL SKIP/ → lamp will light as long as FUNCTION is pressed. Both sides of the tape is played repeatedly (mode), and the tape are fastforwarded to the next track if there is a blank space.

To cancel the BL SKIP/ mode, hold down FUNCTION and then press FF. The BL SKIP/ ☐ lamp goes out. Both sides of the tape are played once (if you start from the reverse side (opposite to the lid), only that side will be played).

Protecting Your Hearing (AVLS)

When AVLS (Automatic Volume Limiter System) is turned on, the maximum volume is kept down to protect your ears.

While holding down FUNCTION, press REW. The AVLS lamp will light as long as FUNCTION is pressed.

To cancel the AVLS, while holding down FUNCTION, press REW. The AVLS lamp goes out.

Notes on FUNCTION

- When FUNCTION is pressed, the LED lamp will light to show the present mode.
- When you enter a function mode, you will hear a short beep and when you cancel it, you will hear two short beeps.

Emphasizing Bass

Press SOUND. Each time you press the button, the SOUND mode changes as below.

NORM (normal): off ↓ a short beep MB (Mega bass): emphasizes bass sound a long beep GRV (Groove): emphasizes deeper

bass sound

two short beeps

Notes

- If the sound is distorted with the mode "GRV", turn down the volume of the main unit or select other
- · Bass emphasis may not show great effect if the volume is turned up too high.

Locking the controls — HOLD **Function**

Slide the HOLD switch in the direction of the arrow

Precautions

On batteries

- · Do not carry dry batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.

 • When you are not going to use your Walkman for a long time.
- remove the battery to prevent damage from battery leakage and corrosion

On handling

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows
- Do not use cassettes longer than 90 minutes except for long continuous playback.
- If the unit has not been used for a long time, set it in the playback mode to warm it up for a few minutes before you

On the remote control

Use the supplied remote control only with this unit.

On headphones/earphones Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage


Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or


Caring for others


Keep the volume to a moderate level. This will allow you to hear outside sounds and to be considerate to the people around

On maintenance

- \bullet Clean the tape head and tape path, using a cotton swab and commercially available cleaning solvent after every 10 hours
- To clean the exterior, use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinne
- Clean the headphones/earphones and remote control plugs periodically

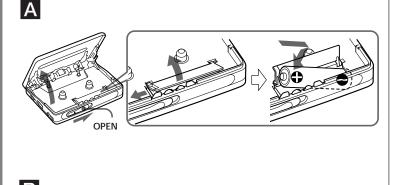

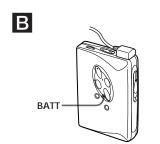

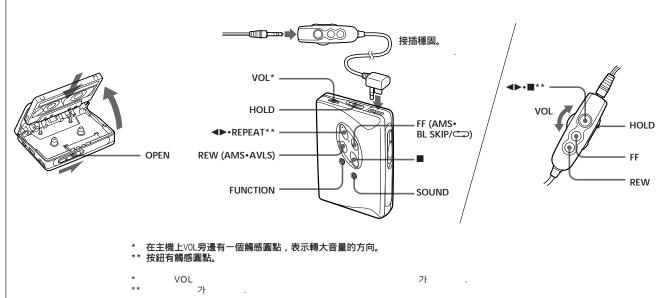

中文

使用準備

裝電池 A

- 1 滑動OPEN(啟開)開關以打開卡帶架。
- 2 釋放鎖鍵以打開電池室蓋,然後對準確電池電極 地裝入一個R6(AA,3號)乾電池。

註

• 為能發揮機器的最大性能,最好請利用Sony牌鹼電池。

何時須更換電池 B

當BATT(電池)指示燈熄滅時,便請更換新電池。

•更換了電池之後,FUNCTION(功能)和SOUND(聲)按 鈕的設定內容都將被抹去。

播放磁帶

- 1 如果HOLD (保持)功能開著,即請相反於箭頭所 指方向滑動HOLD開關以解鎖各控制器。
- 2 裝入卡帶並按主機上的 ◀▶•REPEAT, 如果是用遙 控器操作,則按 ◀▶(放音)•■(停止)。 用VOL調整音量。

在主機上調整音量時

請把遙控器上的VOL控制設定於最大電平。

在遙控器上調整音量時

請把主機的VOL控制設定於略高於適當電平的位置。

主機上的操作

要	請按
切換播放另外一面時	在播放中,請按 ◀▶•REPEAT
停止播放時	
快進繞時*	停止中,請按FF
	停止中,請按REW
反復現在播放中曲子時 (反復單曲功能)	在播放中,請按 ◀▶•REPEAT 1秒以上 要停止單曲反復操作時,請再 按一次同按鈕。

遙控器上的操作

要	請按
切換播放另一面時	播放中,請按 ◀▶•■ 1秒以上
停止播放時	播放中,請按一次 ◀▶•■
快進繞時*	停止中,請按FF
重繞時*	停止中,請按REW
反復播放現在曲子時 (反復單曲功能)	播放中,按兩次 ◀▶•■ 要停掉單曲反復功能時,請按 一次 ◀▶•■。

其他磁帶操作

請按
播放中,按一次/反復按 FF
播放中,按一次/反復按 REW
停止中,按FF 1秒以上
停止中,按REW 1秒以上
#

- * 在快進繞或重繞中,如果按了遙控器上的 ◀▶•■ 時, Walkman即將切換為播放磁帶。
- **自動樂曲深測

使用其他功能

調整放音模式

按下FUNCTION,同時按 FF 按鈕。而按住 FUNCTION 按鈕多久,BL SKIP/ ◯ 燈也隨著點亮多久。 將反復播放磁帶的雙面 (◯ 模式)。播放中遇 到空白部分時,磁帶將自動地快進繞到下一首

要解除BL SKIP/ ➡ 模式時 , 請按住FUNCTION , 然後按FF。 BL SKIP/ ➡ 燈即告熄滅。

磁帶便只播放一次雙面(如果是從倒繞面(蓋子的相反面)開始播放,便只能播放該一面就停止 了)。

保護您的聽覺 (AVLS)

當打開了AVLS(自動音量限制系統)時,最大音量 將受限制以便保護您的耳朵。


按下FUNCTION,同時按 REW。 按住FUNCTION多久,AVLS指示燈即點亮多久。 要解除AVLS功能時,請按下FUNCTION,同時按 REW。AVLS指示燈將熄滅。

FUNCTION須知

- 當按了FUNCTION操作按鈕時,即將點亮發光二極管燈以 表示現在的操作模式。
- 當輸入功能模式時,都可聽到一短嘟聲,當您解除功能 時,裝可聽到兩短嘟聲。

加強低音

按SOUND。每次按此按鈕, SOUND(聲)模式即作如 下變化。

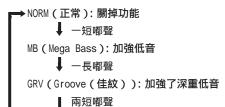

註

- " GRV "(最佳狀態) 模式時 , 如果聲音發生失真 , 即請轉小 主機的音量,或選擇其他模式
- 如果把音量轉得太大,低音加強功能可能不發生太大效果。

鎖定控制器 — HOLD功能

沿箭頭所指方向滑動HOLD開關以鎖定控制器。

使用前須注意

電池須知

• 請勿將乾電池與硬幣或其他金屬小件混在一起攜帶。如果電池 的正極和負極意外地接觸了金屬小件,將會發熱。 長期不使用Walkman時,請取出電池以避免因電池漏液而腐蝕受

本機須知

- 請勿將本機置於熱源附近,或受陽光直射、極多塵沙、潮濕、 會淋到雨、有機械衝擊的地方,或緊閉的汽車裡。
 請不要使用90分鐘以上長度的磁帶,除非需要長時間連續放音
- 如果長時間未使用本機,在重新開始使用之前,請先將其置於 放音狀態預熱幾分鐘。

遙控器須知

本機請限使用附帶的遙控器。

頭戴耳機/耳機須知

交通安全

請勿在駕車、騎車或操縱任何機動車輛時使用頭戴耳機/耳機 否則可能導致交通事故,有些地區是違法的。即使在步行時,特別是在過馬路時,高音量地使用頭戴耳機/耳機也會有潛在的危 在可能有危險的情況下,必須減小音量或暫停使用。

防止損傷聽力

請勿高音量地使用頭戴耳機/耳機。耳科專家告誠不要連續、高音量和長時間使用耳機。有耳鳴經驗的人也請調低音量或不連續


為他人著想

請保持適當的音量,使您能聽到外界的聲音,並不騷擾周圍的人。


維修須知


- 每使用了1 0 個小時,即請用棉棒和市售清潔液清潔一下磁頭和
- 磁帶通道。 •請用軟布輕蘸濕清水擦拭機器外殼。切勿使用酒精,汽油或稀
- 疏劑。 請定期地清潔頭戴耳機/耳機和遙控器的插頭。

Α 1 OPEN R6(AA Sony В BATT

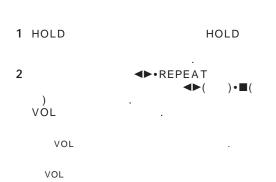

FUNCTION SOUND

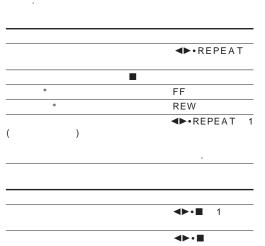


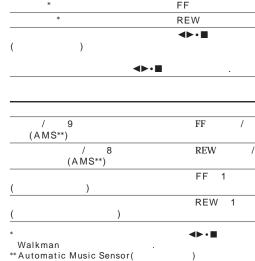

	(AVLS)
AVLS(Automatic	Volume Limiter System,
)	
FUNCTION	REW

FUNCTION AVLS 가 AVLS **FUNCTION** . AVLS REW **FUNCTION** FUNCTION 가 LED 가

SOUND SOUND

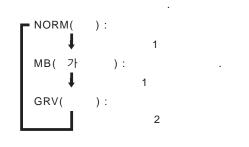

• "GRV" 가 가

— HOLD HOLD

Walkman

가

가 • 10

FUNCTION BL SKIP/⇔ **FUNCTION** 가 (🗢 BL SKIP/☎ **FUNCTION** FF BL SKIP/⇔ 가