

Radio Cassette Player

Operating Instructions
使用说明书



WM-FX888

Sony Corporation ©2001 Printed in Malaysia

||

A

B

D

C

FWD (forward) side
FWD (正) 面

REV (reverse) side
REV (反) 面

FF (AMS)

REW (AMS)

◀▶•REPEAT•▶▶

HOLD

VOL*

MENU

SET

Plug in firmly.
接插稳固。

VOL

HOLD

FF

REW

▶▶•■**

* There is a tactile dot beside VOL on the main unit to show the direction to turn up the volume.

** The button has a tactile dot.

** 在主机上 VOL 旁边有一个触感圆点，表示转大音量的方向。

** 按钮有触感圆点。

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Certain countries may regulate disposal of the battery used to power this product. Please consult your local authority.

Preparations

Prepare a dry battery (not supplied) or the rechargeable battery (supplied).

Dry Battery A

Attach the supplied battery case, and then insert one R6 (size AA) battery with correct polarity.

Note

For maximum performance we recommend that you use a Sony alkaline battery.

Rechargeable Battery B

1 Insert the supplied rechargeable battery (NC-6WM) into the rechargeable battery compartment with correct polarity.

2 Connect the supplied AC power adaptor to the charging stand, plug in the AC power adaptor to the house current (mains).

3 Place the main unit on the charging stand. The CHARGE lamp will light up. Full charging takes about 10 hours.

Note on the AC power adaptor
Use only the supplied AC power adaptor. Do not use any other AC power adaptor.

When to replace/charge the battery C

Replace or charge the battery when "□" flashes in the display.

Battery life (Approx. hours)	(JEITA*)
Sony alkaline LR6 (SG)**	
Tape playback	36
Radio reception	32

Rechargeable battery (NC-6WM)	
Tape playback	10
Radio reception	10

Sony alkaline LR6 (SG)** and Rechargeable NC-6WM	
Tape playback	45
Radio reception	42

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association). (Using a Sony HF series cassette tape)
**When using a Sony LR6 (SG) "STAMINA" alkaline dry battery (produced in Japan).

Note

- The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.

Playing a Tape D

1 Insert a cassette and if the HOLD function is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.

2 Press ◀▶(play) •■(stop) on the remote control and adjust the volume with VOL. (On the main unit, press ◀▶•REPEAT.)

When adjusting the volume on the main unit

Set the VOL control on the remote control at maximum.

When adjusting the volume on the remote control

Set the VOL control on the main unit to around 6.

Operation on the remote control

To	Press
Switch playback to the other side	◀▶•■ for 2 seconds or more during playback
Stop playback	◀▶•■ once during playback
Repeat the current track (Repeat Single Track function)	◀▶•■ twice during playback <i>To stop a single repeat, press ◀▶•■ once.</i>

Operation on the main unit

To	Press
Switch playback to the other side	◀▶•REPEAT during playback
Stop playback	■ (stop)
Repeat the current track (Repeat Single Track function)	◀▶•REPEAT for 2 seconds or more during playback <i>To stop a single repeat, press it again.</i>

Other tape operations

To	Press
Fast forward*	FF
Rewind*	REW
Play the next track/succeeding 9 tracks from the beginning (AMS**)	FF once/repeatedly during playback
Play the current track/previous 8 tracks from the beginning (AMS**)	REW once/repeatedly during playback
Play the other side from the beginning (Skip Reverse function)	FF for 2 seconds or more during stop
Play the same side from the beginning (Rewind Auto Play function)	REW for 2 seconds or more during stop

When to replace/charge the battery C

Replace or charge the battery when "□" flashes in the display.

Battery life (Approx. hours)	(JEITA*)
Sony alkaline LR6 (SG)**	
Tape playback	36
Radio reception	32

Rechargeable battery (NC-6WM)	
Tape playback	10
Radio reception	10

Sony alkaline LR6 (SG)** and Rechargeable NC-6WM	
Tape playback	45
Radio reception	42

Adjusting playback modes

To select playback direction mode

Press MENU repeatedly to set the cursor in the display to MODE. Then press SET to select the desired mode.

To play	Select
both sides repeatedly	↺↻
both sides once from the FWD side	↺↻

To skip a long space between tracks (BL SKIP* function)
On the main unit:
1 Press MENU repeatedly to set the cursor in the display to BL SKIP.
2 Press SET to show "⏮".

On the remote control:
1 Press MODE repeatedly to show "BL SKIP".

* The tape is fast-forwarded to the next track if there is a blank space longer than 12 seconds.

To play a tape recorded with Dolby* NR system
Press MENU repeatedly to set the cursor in the display to ⏮ NR (Dolby noise reduction). Then press SET to show "⏮".

* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

中文

警告

为防火灾或触电危险，切勿让机器暴露于雨中或潮湿处。

别把装置安装在例如书橱或壁橱等密不通风的地方。

为防止火灾，注意别让报纸，桌巾，窗帘等盖住装置的通风孔。也不把可燃的蜡烛放在装置上。

为防火灾或触电的危险，请别将装满液体的，例如花瓶等放在装置上面。

一部分国家对本产品的电源用电池的处置，可能有所规定。此请咨询当地有关当局。

播放录音带 D

1 装入盒带，如果遥控器的 HOLD 功能仍开着，即请沿相反于箭头方向滑动 HOLD 开关以释放控制器。

2 按遥控器上的 ◀▶（放音）•■（停止）并用 VOL 旋钮调节音量。(主机上，则请按 ◀▶•REPEAT。)

在主机上调节音量时

请把遥控器上的 VOL 控制设定于最大。

在遥控器上调节音量时

请把主机上的 VOL 控制设定于 6 左右。

在遥控器上的操作

要	请按
换播放另一面	播放中按 ◀▶•■ 2 秒以上
停止播放	播放中按一次 ▶▶•■
反复现在放音中曲子（反复一曲功能）	播放中按两次 ◀▶•■ <i>要停止一曲反复放音时，请按一次 ◀▶•■。</i>

在主机上的操作

要	请按
换播放另一面	播放中按 ◀▶•REPEAT
停止播放	按 ■（停止）
反复现在放音中曲子（反复一曲功能）	播放中按 ◀▶•REPEAT 2 秒钟以上。 <i>要停止一曲反复放音时，请再按一次。</i>

准备工作

准备干电池（无附带）或充电电池（附带）。

干电池 A

安装附带的电池盒，然后对正确极性装入一节 R6（AA，3 号）电池。

注

- 为获得最佳效果，建议您使用 Sony 牌碱电池。

充电电池 B

1 以正确极性将附带的充电电池(NC-6WM)装入充电器。
2 将附带的 AC 电源转接器连接到充电器架，将 AC 电源转接器接插到家庭用电源插座（主电源）。
3 把主机放在充电器架上。
CHARGE 灯将点亮。
完全充电需时大约 10 小时。

充电电池大约可充电使用 300 次。

注

- 充电中，请别使用机器，要使用机器时，须把机器从充电器架上卸下来。
 - 充电中，您如果操作机器，电池便不能进行充电了。
 - 充电中，您如果操作机器，便可能引起故障。
 - 别把没有安装电池的机器装放在充电器架上。否则便可引起故障。

AC 电源转接器须知

限使用附带的 AC 电源转接器。请别利用任何别的 AC 电源转接器。

何时更换电池 / 给电池充电 C

"□"在显示窗中闪烁时，即请更换电池或给电池充电。

电池寿命（大约时数）	(JEITA*)
Sony 碱电池 LR6(SG)**	
录音带放音	36
听收音机	32

充电池(NC-6WM)	
录音带放音	10
听收音机	10

同时使用Sony碱电池 LR6(SG)** 和充电池NC-6WM

录音带放音	45
听收音机	42

* 按 JEITA (Japan Electronics and Information Technology Industries Association)（日本电子和信息产业协会）标准测定的值。（使用 Sony HF 系列磁带）
**使用 LR6(SG)型 Sony "STAMINA" 碱电池（日本制）时。

注

- 电池寿命，可能因操作条件，环境温度和电池型式而缩短些。

其他磁带操作

要	请按
快进绕*	FF
重绕*	REW
从头播放下一曲 / 按下 9 首曲子(AMS**)	播放中按一次 / 反复按 FF
从头播放现在放音中曲子 / 前面 8 首曲子(AMS**)	播放中按一次 / 反复按 REW
从头播放另外一面（跳越倒绕功能）	停止中按 FF 2 秒以上
从头播放同一面（重绕自动播放功能）	停止中按 REW 2 秒以上

* 如果在快进绕或重绕过程中按了遥控器上的 ◀▶•■，Walkman 将转换为放音。

** 自动乐曲探测

调整放音模式

要选择播放方向模式时

请反复按 MENU 把显示器中的游标设定于 MODE。然后按 SET 以选择所要模式。

要	请选择
反复放双面	↺↻
从 FWD 面放一次双面	↺↻

要跳越曲子间的长空间时（BL SKIP* 功能）

在主机上：
1 反复按 MENU，将显示器中的游标设定于 BL SKIP。
2 按 SET，便显示 "⏮"。

在遥控器上：

1 反复按 MODE 以显示 "BL SKIP"。

* 如果曲间空白长于 12 秒，磁带即将快进绕到下一曲。

要播放用杜比 * 减噪系统录的录音带时

反复按 MENU 把显示器中的游标设定于 ⏮ NR（标比减噪），然后按 SET 以显示 "⏮"。


* 经杜比实验室授权生产。

"杜比"，"Dolby" 和双 D 标志是杜比实验室的商标。


（接反面）

(turn over)


E

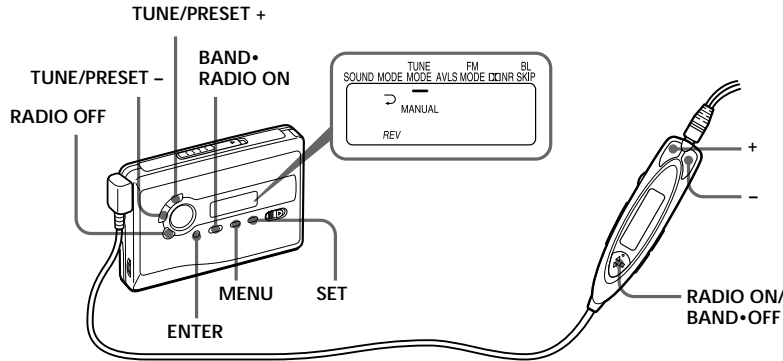

F

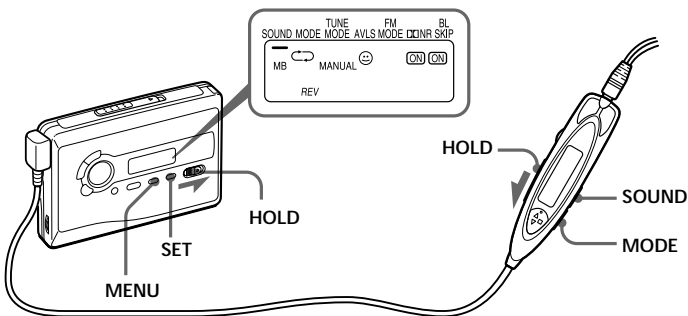

G

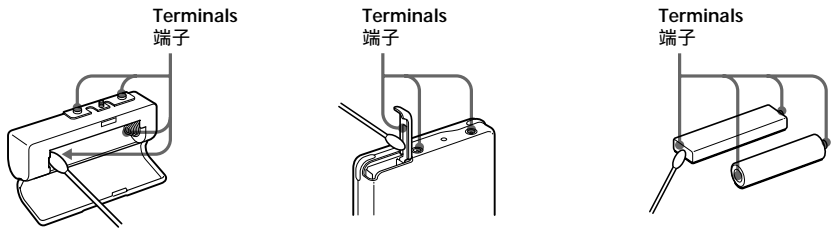

Specifications

Radio section	General
Frequency range FM: 87.5 - 108 MHz 76.0 - 90.0 MHz (Japan) AM: 530 - 1 710 kHz (North, Central, and South America) 531 - 1 602 kHz (other countries) 531 - 1 710 kHz (Japan)	Power requirements 1.5 V Rechargeable battery One R6 (size AA) battery Dimensions (w/h/d) Approx. 108.4 × 77.7 × 23.0 mm (4 ¹ / ₄ × 3 ¹ / ₄ × ² / ₁₆ inches) Mass Approx. 160 g (5.7 oz) Supplied accessories • AC power adaptor (1) • Battery case (1) • Stereo headphones or earphones with remote control (1) • Charging stand (1) • Rechargeable battery (NC-6WM, 1.2 V, 600 mAh, Ni-Cd) (1) • Rechargeable battery carrying case (1) • Carrying pouch (1)
Tape section	
Frequency response (Dolby NR off) Playback: 40 - 15 000 Hz	
Output Headphones (🔊) Jack Load impedance 8 - 300 Ω	
Design and specifications are subject to change without notice.	

规格	一般规格
收音机部分	电源 1.5V 充电池 一节 R6 (AA , 3 号) 电池
频率范围	尺寸 (宽 / 高 / 纵深) 大约 108.4 × 77.7 × 23.0mm
FM: 87.5-108MHz 76.0-90.0MHz (日本) AM: 530-1 710kHz (北美洲、 中美洲和南美洲) 531-1 602kHz (其他国家) 531-1 710kHz (日本)	重量 大约 160g
录音带部分	附件 • AC 电源转换器 (1) • 电池盒 (1) • 带遥控器的立体声头戴耳机或耳机 (1) • 电池充电座 (1) • 充电池 (NC-6WM, 1.2V, 600mAh, Ni-Cd) (1) • 充电池携带盒 (1) • 携带软袋 (1)
频率响应 (Dolby NR 关掉) 收音: 40-15 000Hz	设计和规格有所变更时, 恕不另行通知。
输出 头戴耳机 (🔊) 插孔 负载阻抗 8-300Ω	

English

Listening to the Radio

- Press BAND•RADIO ON to turn on the radio.
- Press BAND•RADIO ON repeatedly to select AM, FM1, or FM2.
- Press MENU on the main unit repeatedly and set “—” (the cursor) in the display to TUNE MODE.
- For manual tuning
 - Press SET to choose MANUAL.
 - Press TUNE/PRESET + or – repeatedly to tune in to the desired station. Hold down TUNE/PRESET + or – for a few seconds to scan for stations.

- For preset tuning
- Press SET to choose PRESET.
 - Press TUNE/PRESET + or – repeatedly to recall the desired preset station. To use preset tuning, preset stations first (see “Presetting Radio Stations”).

To turn off the radio
Press RADIO OFF.

- To improve the broadcast reception
- For AM: Reorient the unit itself.
 - For FM: Extend the remote control cord (antenna). If the reception is still not good, press MENU repeatedly to set the cursor in the display to FM MODE. Then press SET to choose from “MONO” (monaural), “LOCAL” or none (stereo) for best reception.

To operate from the remote control
To turn on the radio, press RADIO ON/BAND•OFF for more than one second (while the tape is in stop mode only).
To select the band, press RADIO ON/BAND•OFF for more than one second while the radio is on.
To tune in or recall a preset station, press + or –.
To turn off the radio, press RADIO ON/BAND•OFF.

Presetting Radio Stations

You can store radio stations into the unit’s memory. You can preset up to 32 stations —12 each for FM1 and FM2 and 8 for AM (for the JPN area*, up to 16 stations — 8 each for FM and AM).

* See “Receiving Stations Outside Your Country (Excluding European, Saudi Arabian, and Chinese model)”.

Tuning in to and Storing Radio Stations Automatically (Auto-Memory Scanning function)

- Press BAND•RADIO ON to turn on the radio.
- Press BAND•RADIO ON repeatedly to select AM, FM1, or FM2.
- Press ENTER until “A” appears in the display. The Walkman starts searching and storing stations. Then the preset number appears.

Note

- Do not remove the power sources until all the stations are stored.

Storing Radio Stations Manually (Manual-Memory function)

You can preset the stations in any order.

- Press BAND•RADIO ON to turn on the radio.
- Press BAND•RADIO ON repeatedly to select AM, FM1, or FM2.
- Press ENTER. The frequency digits will flash in the display.
- Press TUNE/PRESET + or – repeatedly to tune in to the desired station and press ENTER. The preset number will flash in the display.
- Press TUNE/PRESET + or – repeatedly to select the desired preset number and press ENTER. The station is preset to the number of your choice.

- Notes
- If you cannot complete step 4 or 5 while the indications are flashing, repeat from step 3.
 - If you preset a new station to the same preset number, the previously stored station will be erased.

To cancel the stored station
Follow the procedure above and in step 4, instead of tuning in to a station, press and hold TUNE/PRESET + or – until “----” is displayed. Press ENTER while “----” is flashing. The preset number will flash in the display. Press TUNE/PRESET + or – repeatedly to select the preset number you want to cancel and press ENTER.

Receiving Stations Outside Your Country (Excluding European, Saudi Arabian, and Chinese model)

- Press BAND•RADIO ON to turn on the radio.
- Press ENTER. The frequency digits will flash in the display.
- Press and hold BAND•RADIO ON until “Eur”, “JPN”, or “USA” flashes.
- Press BAND•RADIO ON repeatedly to select “Eur”, “JPN”, or “USA” and press ENTER.
- Tune in to and store stations as necessary following the procedure of “Listening to the Radio” and “Presetting Radio Stations”.

Area*	Frequency range FM (MHz)	AM(kHz)
Eur	87.5 - 108	531 - 1 602
JPN	76 - 90	531 - 1 710
USA	87.5 - 108	530 - 1 710

* Eur : European and other countries
JPN : Japan
USA : USA, Canada, and Central and South America

Using Other Functions

Locking the Controls — HOLD Function

Slide the HOLD switch in the direction of the arrow to lock the controls of the Walkman or the remote control.

Emphasizing Sound

- On the main unit:
- Press MENU repeatedly to set the cursor in the display to SOUND.
 - Press SET repeatedly to select the sound emphasis of your choice.

- On the remote control:
- Press SOUND repeatedly. With each press, the indications change.

The indications change as follows:
RV : Sound Revitalizer.
Emphasizes treble sound.
MB : Mega Bass.
Emphasizes bass sound (moderate effect).
GRV : Groove.
Emphasizes bass sound (strong effect).
no message : normal (no effect).

Note

- If the sound is distorted with the mode “GRV”, turn down the volume of the main unit or select other modes.

Protecting Your Hearing — AVLS (Automatic Volume Limiter System)

- On the main unit:
- Press MENU repeatedly in the playback, stop or radio mode to set the cursor to AVLS in the display . Then press SET to show “☺”.

On the remote control:
Hold down MODE until “AVLS” appears in the display.

To cancel the AVLS function
Press SET so that “☺” disappears from the display on the main unit.
On the remote control, hold down MODE again until “AVLS” disappears..

Note

- The AVLS setting will be canceled when you replace the battery.

Precautions

On charging

- Remove the AC power adaptor from the wall outlet as soon as possible after the rechargeable battery has been charged. Overcharging may damage the rechargeable battery.
- The charging stand and the rechargeable battery may become warm during charging, but this is not a problem.
- Do not tear off the film on the rechargeable battery.
- Use only the supplied charging stand to charge the supplied rechargeable battery.
- Be sure not to short-circuit the battery. When you carry it with you, use the supplied carrying case. If you are not using the case, do not carry the battery with other metallic objects such as keys, rings in your pocket.
- If the rechargeable battery is new or has not been used for a long time, it may not be charged completely until you use it several times.

On batteries

- Do not charge a dry battery.
- Do not carry the dry or rechargeable batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- When you do not use the Walkman for a long time, remove the battery to avoid any damage caused by battery leakage and subsequent corrosion.

On handling

- Do not drop the unit or give a shock to the unit, or it may cause a malfunction.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- The LCD display may become hard to see or slow down when using the unit at high temperatures (above 40°C/104°F) or at low temperatures (below 0°C/32°F). At room temperature, the display will return to its normal operating condition.
- Do not use cassettes longer than 90 minutes except for long continuous playback.
- If the unit has not been used for long period of time, set it in the playback mode and warm it up for a few minutes before you start using again.

On the remote control

Use the supplied remote control only with this unit.

On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/ earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Do not use headphones/ earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume to a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

On maintenance

To clean the tape head and path
Use the cleaning cassette CHK-1W/C-1KW (not supplied) every 10 hours of use.
Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.
Clean the headphones/earphones and remote control plugs periodically with a cotton swab or a soft cloth as illustrated. Clean the terminals periodically with a cotton swab or a soft cloth as illustrated. 📺

中文

听收音机

- 按 BAND•RADIO ON 打开收音机。
- 反复按 BAND•RADIO ON 选择 AM、FM1 或 FM2。
- 反复按主机上的 MENU，将主机显示窗中的 “—” (游标) 设为 TUNE MODE。
- 要手动调谐时
 - 按 SET 选择 MANUAL。
 - 反复按 TUNE/PRESET+ 或 – 调入所要的电台。按住 TUNE/PRESET+ 或 – 数秒以扫描电台。

- 要预约电台时
- 按 SET 选择 PRESET。
 - 反复按 TUNE/PRESET+ 或 – 选出所要的预约电台。要使用预约电台时，请先预约电台 (参见 “预约电台”)。

要关掉收音机时

- 按 RADIO OFF 键。

要改善广播接收效果时

- 收听 AM 节目时：调转机器方位。
- 收听 FM 节目时：请拉直遥控器导线 (天线)。如果接收效果仍不好，请反复按 MENU 将主机显示窗中的游标设为 FM MODE。然后按 SET 从 “MONO” (单耳声)、 “LOCAL” 或无 (立体声) 方式中进行选择以获最佳接收效果。

要用遥控器操作时

- 要打开收音机时，请按 RADIO ON/BAND•OFF 1 秒以上 (限当录音带处于停止状态时)。
- 要选择波段时，请在打开着收音机时，按下 RADIO ON/BAND•OFF 1 秒以上。
- 要调入或选出预约电台时，请向上 / 向下逐渐调整 + 或 –。
- 要关掉收音机时，请按 RADIO ON/BAND•OFF。

预约电台

您可以在本机的存储器中储存广播电台。您最多可以预调 32 个电台 - FM1、FM2 各 12 个，AM 8 个 (在 JPN 地区*，最多 16 个电台 - FM 和 AM 各 8 个)。

* 请参见“接收国外电台 (欧洲、沙特阿拉伯和中国型号除外)”。

自动调入和储存广播电台 (自动储存扫描功能)

- 按 BAND•RADIO ON 打开收音机。
- 反复按 BAND•RADIO ON 选择 AM、FM1 或 FM2。
- 按 ENTER 键。频率数字将闪烁于显示窗中。按 SET 直到 “A” 出现于显示窗中。Walkman 开始搜索并储存电台。随后出现预约号。

注

- 在所有电台储存完毕之前请勿关掉电源。

手动储存广播电台 (手动储存功能)

您可以按任意顺序预调电台。

- 按 BAND•RADIO ON 打开收音机。
- 反复按 BAND•RADIO ON 选择 AM、FM1 或 FM2。
- 按 ENTER 键。频率数字将闪烁于显示窗中。
- 反复按 TUNE/PRESET+ 或 – 调入所要的电台并按 ENTER 键。预约号将闪烁于显示窗中。
- 反复按 TUNE/PRESET+ 或 – 选择所要的预约号并按 ENTER 键。电台即被预约为您所选择的号码。

注

- 如果您不能在指示闪烁时完成步骤 4 或 5，请从步骤 3 开始重复。
- 如果您给一个新电台预设了相同的预约号，则以前所储存的电台将被抹去。

要取消已储存的电台时

请按照上述步骤操作，在步骤 4，不调入电台而按住 TUNE/PRESET+ 或 – 直到 “----” 显示出来。“----” 闪烁着时按 ENTER 键。预约号将闪烁于显示窗中。反复按 TUNE/PRESET+ 或 – 选择您要取消的预约号并按 ENTER 键。

接收国外电台

(欧洲、沙特阿拉伯和中国型号除外)

- 按 BAND•RADIO ON 打开收音机。
- 按 ENTER 键。频率数字将闪烁于显示窗中。
- 按住 BAND•RADIO ON 直到 “Eur”、“JPN” 或 “USA” 闪烁。
- 反复按 BAND•RADIO ON 选择 “Eur”、“JPN” 或 “USA” 并按 ENTER 键。
- 按照“听收音机”和“预约电台”的步骤操作，调入并储存所要的电台。

地区指示和频率范围		
地区 *	频率范围 FM (MHz)	AM (kHz)
Eur	87.5-108	531-1 602
JPN	76-90	531-1 710
USA	87.5-108	530-1 710

* Eur：欧洲和其他国家
JPN：日本
USA：美国、加拿大和中南美

利用其他功能

锁定控制器 - HOLD 功能
沿箭头所指方向滑动 HOLD 开关以锁定 Walkman 或遥控器上的控制器。

增强声音

在主机上：
1 反复按 MENU 把显示器中的游标设定于 SOUND。
2 反复按 SET 以选择所喜欢的声加强模式。

在遥控器上：
1 反复按 SOUND，每按一下，指示灯显示。

指示灯呈如下显示：
RV：Sound Revitalizer (声音再生器)。增强高音。
MB：Mega Bass (强低音)。增强低音 (中等效果)。
GRV：Groove (最佳状态)。增强低音 (强烈效果)。
无提示：普通 (无效果)。

注

- GRV 模式时，如果声音失真了，即请转小主机音量或选其他模式。

保护您的听觉 - AVLS (自动音量限制系统)

在主机上：
在播放，停止或收音机模式中反复按 MENU 把显示器中的游标设定于 AVLS，然后按 SET 以显示 “☺”。

在遥控器上：
按下 MODE 至显示器中出现 “AVLS”。

要解除 AVLS 功能时
按 SET 使主机上的显示器中的 “☺” 消失显示。遥控器上则再按住 MODE 至 “AVLS” 消失显示。

注

- 当更换电池时，AVLS 设定将被抹去。

使用前须注意

充电池和充电器须知

- 充电池充满电时，即迅速从墙上电源插座卸下充电器装置。因为过度的充电可能会损坏充电池。
- 进行充电中，充电座和充电池都可能变热。这是正常现象不成问题。
- 别将下充电池上的薄膜。
- 利用带附带的充电座给附带的充电池进行充电。
- 电池切勿使发生短路。要携带电池时，请用附带的携带盒。如果没装在盒里，则请不要和其他金属小件，诸如钥匙，金属件等混合在一起携带。
- 全新的，或长期没用的充电池，可能要经充电使用数次以后才能完全充满电。

电池须知

- 别试图给干电池充电。
- 请勿将干电池与硬币或其他金属小件混在一起携带。如果电池的正极和负极意外地接触了金属小件，将意外生热。
- 长期不使用 Walkman 时，请取出电池以避免因电池漏液而腐蚀性受损。

本机须知

- 请勿摔落或撞击本机，否则会引起故障。
- 请勿将本机置于热源附近，或受阳光直射、极多尘沙、潮湿、会淋到雨、有机械冲击的地方，或紧闭的汽车里。
- 在高温 (40 以下) 或低温 (0 以下) 环境使用机器时，液晶显示器可能变得不易看清或转变变慢。但拿到室温处，即将恢复正常的操作条件。
- 请不要使用 90 分钟以上长度的磁带，除非需要长时间连续放音或录音。
- 如果长时间未使用本机，在重新开始使用之前，请先将其置于放音状态预热几分钟。

遥控器须知

本机限使用附带的遥控器。

头戴耳机 / 耳机须知

交通安全

请勿在驾车、骑车或操纵任何机动车辆时使用头戴耳机 / 耳机，否则可能导致交通事故，有些地区是违法的。即使在步行时，特别是在过马路时，高音量地使用头戴耳机 / 耳机也会有潜在的危险。在可能有危险的情况下，必须减小音量或暂停使用。

防止损伤听力

请勿高音量地使用头戴耳机 / 耳机。耳科专家告诫不要连续、高音量和长时间使用耳机。有耳鸣经验的人也请调低音量或不连续使用。

为他人着想
请保持适当的音量，使您能听到外界的声音，而且不骚扰周围的人。

维修须知

要清洁磁头和磁带通道时
机器每使用过 10 个小时，即请用清洁用盒带 CHK-1W/C-1KW (无附带) 进行清洁。
限利用推夹的清洁用盒带。

要清洁机壳外表时
请用软布蘸湿清水擦拭。不可使用酒精、油精或稀释剂清洁。请定期地用图示棉棒或软布擦拭清洁头戴耳机 / 耳机和遥控器插头部分。
请定期地用图示 📺 棉棒或软布擦拭清洁端子部分。