

Radio Cassette-Corder

Operating instructions/使用说明书

WALKMAN

随身听

WM-GX788

Printed using VOC
(Volatile Organic
Compound)-free
vegetable oil based ink.

eco

©2003 Sony Corporation Printed in Malaysia

http://www.sony.net/

"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products.

WALKMAN is a trademark of Sony Corporation.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area). CE 标志的有效性，仅限于那些有法律限制的国家，主要在 EEA (欧洲经济区) 国家。

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.


Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

警告




为防火灾或触电危险，切勿让机器暴露于雨中或潮湿处。

别把机器安装在例如书橱或壁柜等密闭不通风的地方。





A

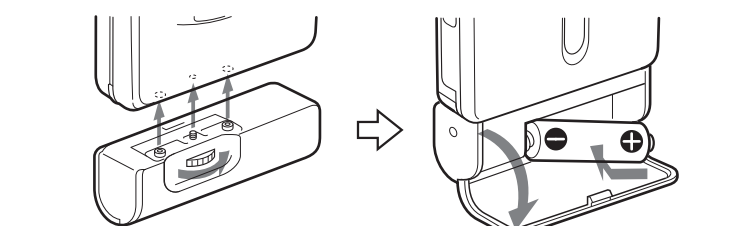



B

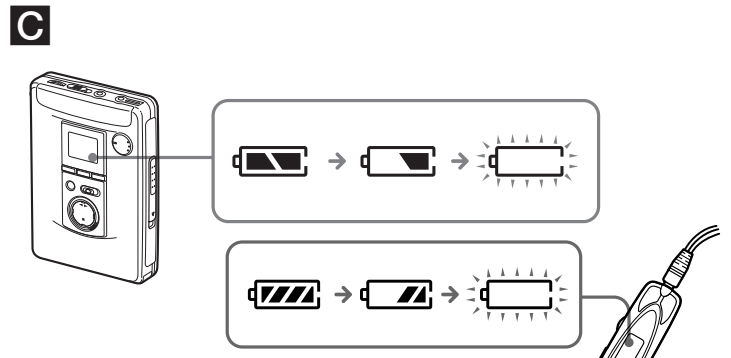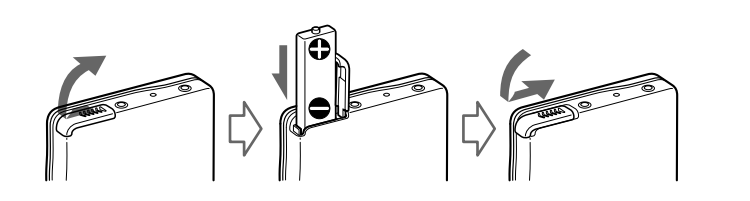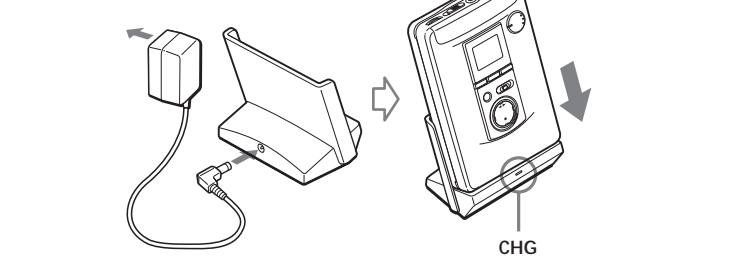

D

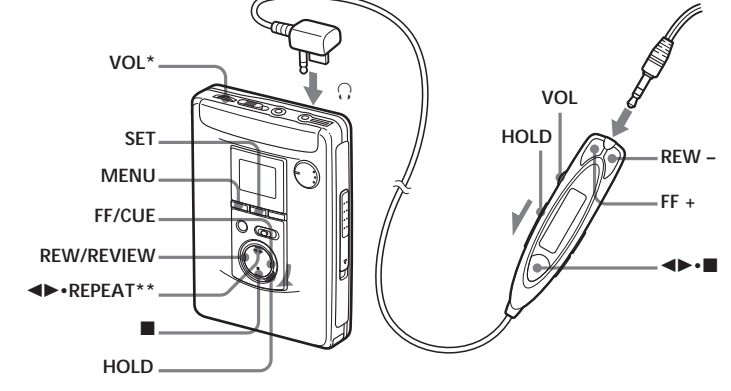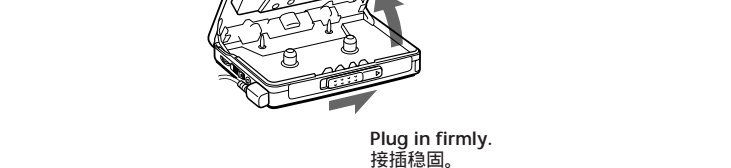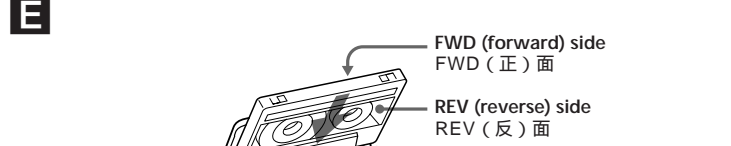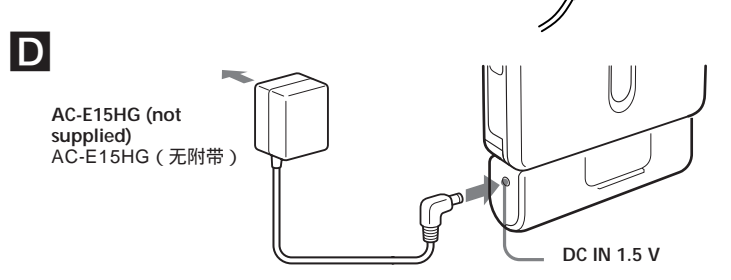

F

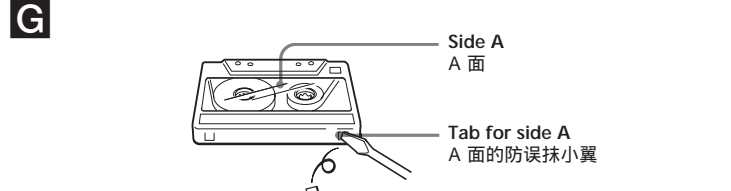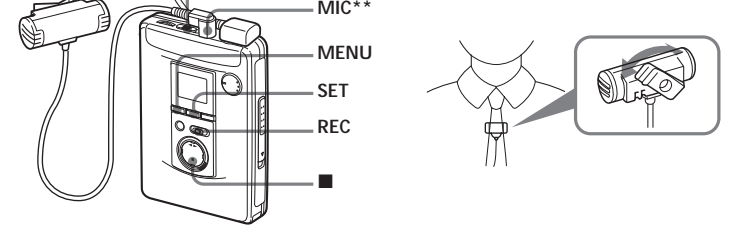

* There is a tactile dot beside VOL on the main unit to show the direction to turn up the volume.
** The button or jack has a tactile dot.
* 在主机上 VOL 旁边有一个触感圆点，表示转大音量的方向。
** 按钮或插孔有触感圆点。

English

Note
Tapes recorded with setting to "2x" cannot be played properly on a cassette player/tape recorder without this function.

- To prevent fire, do not cover the ventilation of the apparatus with newspapers, table-cloths, curtains, etc. And don't place lighted candles on the apparatus.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

Preparations

Prepare a dry battery (not supplied) or the rechargeable battery (supplied).

Dry Battery A

Attach the supplied battery case, and then insert one R6 (size AA) battery with correct polarity. Note For maximum performance we recommend that you use a Sony alkaline battery.

Rechargeable Battery B

Charge the rechargeable battery before using it for the first time.

- Insert the supplied rechargeable battery NH-14WM (A) into the rechargeable battery compartment with correct polarity.
- Connect the supplied AC power adaptor to the charging stand, plug in the AC power adaptor to the house current (mains). If the plug does not fit to your mains, attach the supplied AC plug adaptor (Saudi Arabian model only).
- Place the main unit on the charging stand. The CHG lamp will light up. Full charging takes about 6 hours. The CHG lamp will go off when the battery is fully charged.

Note
Do not use the unit while charging. Remove the unit from the charging stand when using it.
- If you operate the unit while charging, the battery will not be charged.
- If you operate the unit while charging, it may cause malfunction.
- Do not place the unit on the charging stand without the rechargeable battery. Otherwise, it may cause malfunction.

When to replace/charge the battery C

Replace or charge the battery when " " flashes in the display.

Battery life* (Approx. hours)	
Sony alkaline LR6 (SG)**	
Tape playback	44
Radio reception	56
MIC recording	15
Radio recording	12

Rechargeable battery NH-14WM (A)	
Tape playback	26
Radio reception	34
MIC recording	9
Radio recording	7

Sony alkaline LR6 (SG)** and Rechargeable NH-14WM (A)	
Tape playback	70
Radio reception	90
MIC recording	24
Radio recording	19

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association). (Using a Sony HF series cassette tape)
** When using a Sony LR6(SG) "STAMINA" alkaline dry battery (produced in Japan).
Notes
• The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.
• The AVLS setting (see "Using the Menu") will be cancelled when you replace the battery.

House Current D

You must purchase an AC power adaptor AC-E15HG to operate this unit using house current. Remove the rechargeable battery if inserted. Attach the battery case and connect the AC power adaptor AC-E15HG (not supplied) to the DC IN 1.5 V jack of the battery case and to the wall outlet. Do not use any other AC power adaptor. Specifications for AC-E15HG vary for each area. Check your local voltage and the polarity of the plug before purchasing.

Playing a Tape E

- Insert a cassette and if the HOLD function is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.
- Press MENU repeatedly to set " " (the cursor) in the display to REC/PB. Then press SET to select "2x" or none (normal speed) which is the same position as that used for recording. To playback commercially available music tape, etc., select normal (no indication).
- Press <▶▶>•REPEAT on the main unit and adjust the volume with VOL. (On the remote control, press <▶▶>•(play)•(stop).)

When adjusting the volume on the remote control Set the VOL control on the main unit to around 6.

When adjusting the volume on the main unit Set the VOL control on the remote control at maximum.

Operation on the remote control	
To	Press
Switch playback to the other side	<▶▶>• for 2 seconds or more during playback
Stop playback	<▶▶>• once during playback

Operation on the main unit	
To	Press
Switch playback to the other side	<▶▶>•REPEAT during playback
Stop playback	(stop)

Other tape operations	
To	Press
Fast forward*	FF/CUE (FF + on the remote control) during stop
Rewind*	REW/REVIEW (REW - on the remote control) during stop
Search forward during playback (CUE)	Press and hold FF/CUE (FF + on the remote control) and release it at the point you want.
Search backward during playback (REVIEW)	Press and hold REW/REVIEW (REW - on the remote control) and release it at the point you want.

- A-B Repeat stops automatically after repeating 50 times.
- Do not use the A-B Repeat function with tapes longer than 90 minutes. If you do, the tape may be damaged.

Recording F

You can record radio programs from the built-in radio, or record with the supplied microphone. In either case, use a new or fully charged battery.

Note If the record-protect tab is broken, you cannot record on that side.

- Insert a normal (TYPE I) tape.

To record on both sides Insert the cassette with the side to be first recorded on as the FWD (forward) side*.

* Make sure that "FWD" is displayed. If not, press and hold until "REV" changes to "FWD".

To record on one side only Insert the cassette with the side to be recorded on as the REV (reverse) side*. "Make sure that "REV" is displayed. If not, press and hold until "FWD" changes to "REV".

Note When the cassette holder is opened, the direction of the tape will be automatically set to "FWD".

- Press <▶▶>•REPEAT for 2 seconds or more during playback to tag point A. "A-" will flash in the display of the main unit.
- Press <▶▶>•REPEAT again to tag point B. "A-B" will flash and the tape will move rapidly to point A. Then "REP" appears in the display and the specified portion is played repeatedly.

On the remote control
1 Press <▶▶>• twice quickly during playback to tag point A.
2 Press <▶▶>• once more to tag point B.

To stop the A-B Repeat playback

Press <▶▶>•REPEAT on the main unit.

On the remote control, press <▶▶>•.

To reset A-B Repeat

When you want to change a specific portion, stop the A-B Repeat playback and tag point A and point B again.

Notes
• You cannot specify a repeat portion shorter than 2 seconds.
• After repeated operation, the actual portion that is played back may shift somewhat from the exact portion specified with the tags due to tape slack.

- Slide REC. "REC" appears in the display and recording starts after about 2 seconds.

If you have started recording from the FWD side, recording will switch to reverse side automatically at the end of the FWD side.

To stop recording

Press <▶▶>• (on the remote control, press <▶▶>• to stop recording).

To reduce noise while recording AM programs

Set the ISS (Interference Suppress Switch) to the position that reduces noise the most.

To monitor the recording sound

You can monitor the recording sound through headphones/earphones. Adjust monitoring level using VOL.

Note You may hear some noise in the monitor sound in the RV, MB, or GRV mode (see "Using the Menu"), but this does not affect recording.

- The recording level is fixed.
- Sound emphasis (RV, MB, or GRV) and AVLS settings do not affect recording.
- Actual recording will start about 2 seconds (3 seconds when "2x" is selected for recording time) after you slide the REC button.

- When recording on both sides, recording will not be made for about 10 seconds while the tape is switching sides.
- Do not use a high-position (TYPE II) or metal (TYPE IV) tape. If you do, the sound may be distorted when you play back the tape, or the previous recording may not be erased completely.
- Do not connect or disconnect the headphones/earphones to/from while recording from the radio. The recording condition may change abruptly, or noise may be recorded.

- To avoid noise interference, do not place it near a lamp cord or a fluorescent lamp when recording with the microphone.
- If a howling effect occurs, turn down the volume.
- All other operation cannot be made while recording. For other operation, stop recording first.

To prevent a tape from being accidentally recorded over G

Break off the tabs from side A and/or B. To reuse the tape for recording, cover the tab hole with adhesive tape.

(turn over)

中文

注
用 "2x" 设置录音的磁带如没有本功能，将不能在盒带播放机/磁带录音机上正常播放。

- 为防止火灾，请勿让报纸、桌布、窗帘等盖住装置的通风孔。也不可把点燃的蜡烛放在装置上。
- 为防止火灾或触电的危险，请勿将装满液体的物体，例如花瓶等放在装置上。
- 一部分国家对本产品的电源用电池的处置，可能有所规定。此请咨询当地有关当局。

准备工作

准备干电池（无附带）或充电式电池（附带）。

干电池 A

安装附带的电池盒，然后按正确极性装入一节 R6 (AA) 电池。

注 为获得最佳效果，建议您使用 Sony 牌碱性电池。

充电式电池 B

- 以正确极性将附带的充电式电池 NH-14WM (A) 装入充电式电池室。
- 将附带的 AC 电源转换器连接到充电座，将 AC 电源转换器插接到家庭用电源插座（主电源）。

- 如果装上充电式电池，请将其取出。装上电池盒，将 AC-E15HG AC 电源转换器（无附带）连接到电池盒的 DC IN 1.5 V 插孔和墙上插座。
- 把主机放在充电座上。CHG 灯将点亮。完全充电需时大约 6 小时。当电池完全充满电时，CHG 灯将熄灭。

注 充电中，请勿使用机器，要使用机器时，须把机器从充电座上卸下来。

- 充电中，您如果操作机器，电池便不能进行充电了。
- 充电中，您如果操作机器，便可能引起故障。
- 别把没有安装充电式电池的机器放在充电座上。否则便可引起故障。

要使用家用电源为本机供电，您必须购买 AC-E15HG AC 电源转换器。

如果装上充电式电池，请将其取出。装上电池盒，将 AC-E15HG AC 电源转换器（无附带）连接到电池盒的 DC IN 1.5 V 插孔和墙上插座。

请勿使用任何其他的 AC 电源转换器。

AC-E15HG 的规格根据地区而异，在购买之前请检查您所在地区的电压和插头的电极。

家用电源 D

要使用家用电源为本机供电，您必须购买 AC-E15HG AC 电源转换器。

如果装上充电式电池，请将其取出。装上电池盒，将 AC-E15HG AC 电源转换器（无附带）连接到电池盒的 DC IN 1.5 V 插孔和墙上插座。

请勿使用任何其他的 AC 电源转换器。

AC-E15HG 的规格根据地区而异，在购买之前请检查您所在地区的电压和插头的电极。

何时更换电池 / 给电池充电 C

" " 在显示窗中闪烁时，即请更换电池或给电池充电。

电池寿命* (大约时数)	
Sony 碱电池 LR6 (SG)**	
录音带放音	44
听收音机	56
MIC 录音	15
收音机录音	12

充电式电池 NH-14WM (A)	
录音带放音	26
听收音机	34
MIC 录音	9
收音机录音	7

同时使用 Sony 碱电池 LR6 (SG)** 和充电式电池 NH-14WM (A)	
录音带放音	70
听收音机	90
MIC 录音	24
收音机录音	19

- 按 JEITA (Japan Electronics and Information Technology Industries Association) 标准测定的值。（使用 Sony HF 系列磁带）
- **使用 LR6 (SG) 型 Sony "STAMINA" 碱电池（日本制）时。

注 • 电池寿命可能因操作条件、环境温度 and 电池类型而缩短些。
• 当更换电池时，AVLS 设定（参见“使用项目单”）将被取消。

播放录音带 E

- 装入盒带，如果遥控器的 HOLD 功能仍打开着，即请沿相反于箭头方向滑动 HOLD 开关以释放控制钮。
- 反复按 MENU 以便在显示屏中将 " " (光标) 设到 REC/PB。然后按 SET 选择 "2x" 或无（正常速度），此位置应和录音时使用的位置一样。要播放市售音乐带等，选择正常（无显示）。
- 按主机上的 <▶▶>•REPEAT 并用 VOL 调节音量。（在遥控器上，则请按 <▶▶>•（放音）•（停止）。）

在遥控器上调节音量时 请把主机上的 VOL 控制按钮设定于 6 左右。

在主机上调节音量时 请把遥控器上的 VOL 控制按钮设定于最大。

在遥控器上的操作	
要	请按
换播放另一面	播放中按 <▶▶>• 2 秒以上
停止播放	播放中按一次 <▶▶>•

在主机上的操作	
要	请按
换播放另一面	播放中按 <▶▶>•REPEAT
停止播放	按 (停止)

其他磁带操作	
要	请按
快速进*	停止中，请按 FF/CUE (在遥控器上按 FF +)
重绕*	停止中，请按 REW/REVIEW (在遥控器上按 REW -)
播放期间向前搜索 (CUE)	按住 FF/CUE (在遥控器上按 FF +)，在所要的点上释放。
播放期间向后搜索 (REVIEW)	按住 REW/REVIEW (在遥控器上按 REW -)，在所要的点上释放。

要

播放中按一次 / 按下 9 首曲子 (AMS**) (在遥控器上按 FF +)

要

从音频播放现在放音中曲子 / 前面 8 首曲子 (AMS*)

要

从音频播放另外一面 (跳过倒放功能)

要

从音频播放同一面 (重绕自动播放功能)

要

在快进绕或重绕过程中按遥控器上的 <▶▶>•

A-B 反复

- A-B 反复功能反复播放您所指定的录音带的任一部分。请在放音中标记该部分的始点 (A 点) 和终点 (B 点)。
- 在放音中按 <▶▶>•REPEAT 键 2 秒钟以上标记 A 点。
- 再按一下 <▶▶>• 标记 B 点。录音带被快速卷绕到 A 点。随后 "REP" 出现于显示窗中，反复播放所指定的部分。

在主机上 1 在放音中按 <▶▶>•REPEAT 键 2 秒钟以上标记 A 点。

在遥控器上 1 在放音中快速按两下 <▶▶>• 标记 A 点。

2 再按一下 <▶▶>• 标记 B 点。录音带被卷绕到 A 点。随后反复播放所指定的部分。

要停止 A-B 反复放音时

请按下 A 面和 / 或 B 面的防误抹小翼。要重新用该录音带录音，用胶带盖住折断防误抹小翼的缺口。

注 • 您不能指定跨越录音带两面的重复部分。
• 您不能指定短于 2 秒钟的重复部分。
• 在反复操作之后，由于录音带的松弛，实际播放的部分可能和所标记指定的部分稍有不同。
• 在反复 50 次后，A-B 反复放音自动停止。
• 请勿用长度 90 分钟以上的磁带去使用 A-B 反复功能。否则，该磁带可能会损坏。

录音 F

您可以从内置的收音机录制广播节目，也可以用附带的麦克风进行录音。不管是哪种情况，都请使用新的或充足了电的电池。

注 如果防误抹小翼已被折断，则无法在该面录音。

您可以头戴式耳机 / 耳机来监听正在录制的声音。可用 VOL 控制旋钮调节监听音量。

- 插入一盒普通 (TYPE I) 录音带。要在两面录音时 将要先录音的面作为 FWD (正) 面* 插入录音带。

* 确认是否显示 "FWD"。如果没有，请按住 直到 "REV" 变为 "FWD"。

只要录一面时 将要录音的面作为 REV (反) 面** 插入录音带。

* 确认是否显示 "FWD"。如果没有，请按住 直到 "FWD" 变为 "REV"。

注 录音带座打开着时，走带方向将由被自动地设定为 "FWD"。

- 反复按 MENU 在显示屏中将光标设到 REC/PB。然后按 SET 选择 "2x" 或无（正常速度）。

2x (2.4cm/s): 使录音时间增加一倍 (例如，使用 60 分钟磁带的两边录 120 分钟)。适合于进行会议录音或对口述进行录音。不建议用于录制音乐。

- 选择录音源：要用麦克风录音时 将附带的麦克风连接到 MIC (PLUG IN POWER) 插孔。

如图所示，您可以将麦克风夹在您的衣服上。

要从收音机录音时 请调入您想录音的电台（参见“听收音机”）。

- 滑动 REC。 "REC" 即出现于显示窗中，约 2 秒钟之后，开始录音。

如果您是 从 FWD 面开始录音的，在录完 FWD 面时，录音将自动转换到反面。

要停止录音时 请按 (或按遥控器上 <▶▶>•) 以停止录音。

要减小录制 AM 节目时的噪声 请将 ISS (干扰抑制开关) 设定为能将噪声减至最小的位置。

要监听录音中的声音 您可以头戴式耳机 / 耳机来监听正在录制的声音。可用 VOL 控制旋钮调节监听音量。

- 录音电平被固定。
- 声音增强功能 (RV、MB 或 GRV) 和 AVLS 设定不影响录音。
- 实际的录音将在您滑动 REC 按钮约 2 秒钟 (当录音时间设为 "2x" 时为 3 秒钟) 之后开始。
- 当录音时间设为 "2x" 时为 3 秒钟之前滑动 REC 按钮，否则您将错过录音的开始部分。
- 在两面录音时，在录音带换面过程中，录音将有约 10 秒钟不进行。
- 请勿用高位 (TYPE II) 或金属 (TYPE IV) 型的录音带录音。否则播放录音带时声音可能会失真，以前的录音内容也可能不会被完全抹消。
- 从收音机录音时，请勿将头戴式耳机 / 耳机接到 / 拔出 插孔。否则录音条件可能会突然改变，也可能录下噪音。
- 用麦克风录音时，请勿将麦克风靠近电线或日光灯，以避免噪音干扰。
- 如果发生啸叫，请调低音量。
- 在录音时所有其他操作都无法进行。要进行其他操作，请先停止录音。

要防止录音带被误录时 G 请折断 A 面和 / 或 B 面的防误抹小翼。要重新用该录音带录音，用胶带盖住折断防误抹小翼的缺口。

注 • 您不能指定跨越录音带两面的重复部分。
• 您不能指定短于 2 秒钟的重复部分。
• 在反复操作之后，由于录音带的松弛，实际播放的部分可能和所标记指定的部分稍有不同。
• 在反复 50 次后，A-B 反复放音自动停止。
• 请勿用长度 90 分钟以上的磁带去使用 A-B 反复功能。否则，该磁带可能会损坏。

要防止录音带被误录时 G 请折断 A 面和 / 或 B 面的防误抹小翼。要重新用该录音带录音，用胶带盖住折断防误抹小翼的缺口。

注 • 您不能指定跨越录音带两面的重复部分。
• 您不能指定短于 2 秒钟的重复部分。
• 在反复操作之后，由于录音带的松弛，实际播放的部分可能和所标记指定的部分稍有不同。
• 在反复 50 次后，A-B 反复放音自动停止。
• 请勿用长度 90 分钟以上的磁带去使用 A-B 反复功能。否则，该磁带可能会损坏。

要防止录音带被误录时 G 请折断 A 面和 / 或 B 面的防误抹小翼。要重新用该录音带录音，用胶带盖住折断防误抹小翼的缺口。

注 • 您不能指定跨越录音带两面的重复部分。
• 您不能指定短于 2 秒钟的重复部分。
• 在反复操作之后，由于录音带的松弛，实际播放的部分可能和所标记指定的部分稍有不同。
• 在反复 50 次后，A-B 反复放音自动停止。
• 请勿用长度 90 分钟以上的磁带去使用 A-B 反复功能。否则，该磁带可能会损坏。

要防止录音带被误录时 G 请折断 A 面和 / 或 B 面的防误抹小翼。要重新用该录音带录音，用胶带盖住折断防误抹小翼的缺口。

注 • 您不能指定跨越录音带两面的重复部分。
• 您不能指定短于 2 秒钟的重复部分。
• 在反复操作之后，由于录音带的松弛，实际播放的部分可能和所标记指定的部分稍有不同。
• 在反复 50 次后，A-B 反复放音自动停止。
• 请勿用长度 90 分钟以上的磁带去使用 A-B 反复功能。否则，该磁带可能会损坏。

要防止录音带被误录时 G 请折断 A 面和 / 或 B 面的防误抹小翼。要重新用该录音带录音，用胶带盖住折断防误抹小翼的缺口。

注 • 您不能指定跨越录音带两面的重复部分。
• 您不能指定短于 2 秒钟的重复部分。
• 在反复操作之后，由于录音带的松弛，实际播放的部分可能和所标记指定的部分稍有不同。
• 在反复 50 次后，A-B 反复放音自动停止。
• 请勿用长度 90 分钟以上的磁带去使用 A-B 反复功能。否则，该磁带可能会损坏。




要防止录音带被误录时 G 请折断 A 面和 / 或 B 面的防误抹小翼。要重新用该录音带录音，用胶带盖住折断防误抹小翼的缺口。

注 • 您不能指定跨越录音带两面的重复部分。
• 您不能指定短于 2 秒钟的重复部分。
• 在反复操作之后，由于录音带的松弛，实际播放的部分可能和所标记指定的部分稍有不同。
• 在反复 50 次后，A-B 反复放音自动停止。
• 请勿用长度 90 分钟以上的磁带去使用 A-B 反复功能。否则，该磁带可能会损坏。

要防止录音带被误录时 G 请折断 A 面和 / 或 B 面的防误抹小翼。要重新用该录音带录音，用胶带盖住折断防误抹小翼的缺口。

注 • 您不能指定跨越录音带两面的重复部分。
• 您不能指定短于 2 秒钟的重复部分。
• 在反复操作之后，由于录音带的松弛，实际播放的部分可能和所标记指定的部分稍有不同。
• 在反复 50 次后，A-B 反复放音自动停止。
• 请勿用长度 90 分钟以上的磁带去使用 A-B 反复功能。否则，该磁带可能会损坏。

要防止录音带被误录时 G 请折断 A 面和 / 或 B 面的防误抹小翼。要重新用该录音带录音，用胶带盖住折断防误抹小翼的缺口。

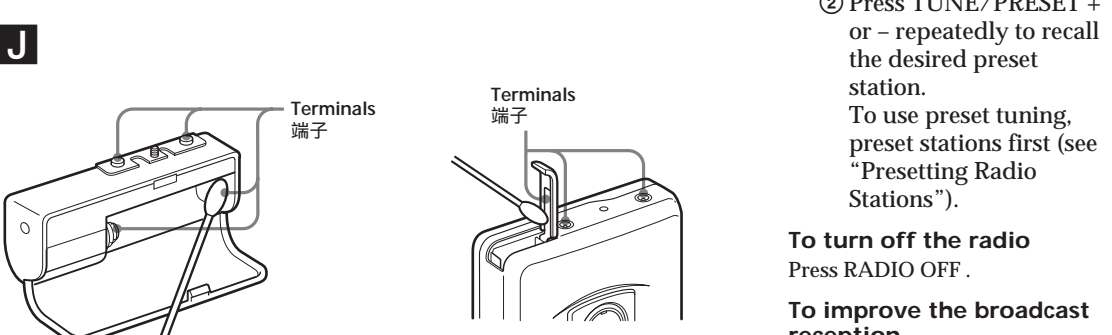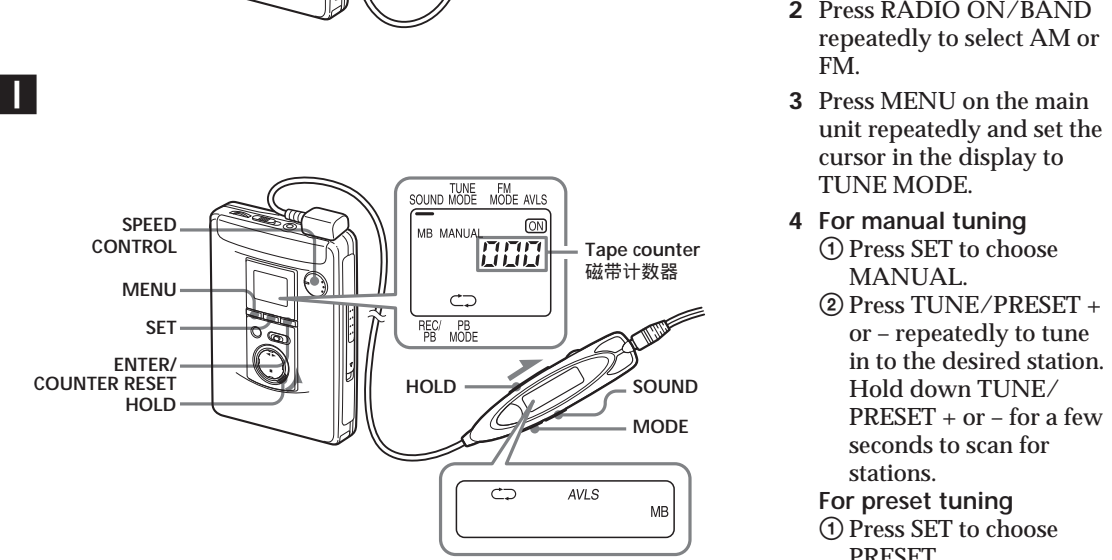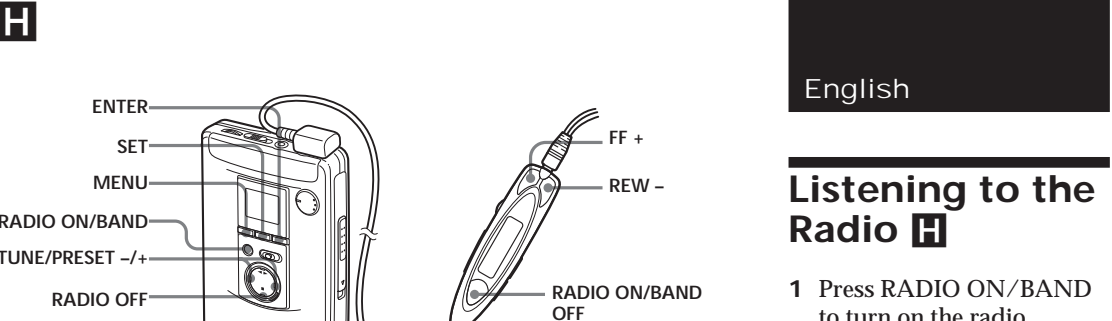

English

Listening to the Radio

- Press RADIO ON/BAND to turn on the radio.
- Press RADIO ON/BAND repeatedly to select AM or FM.
- Press MENU on the main unit repeatedly and set the cursor in the display to TUNE MODE.
- For manual tuning
 - Press SET to choose MANUAL.
 - Press TUNE/PRESET + or - repeatedly to tune in to the desired station. Hold down TUNE/PRESET + or - for a few seconds to scan for stations.

For preset tuning
① Press SET to choose PRESET.
② Press TUNE/PRESET + or - repeatedly to recall the desired preset station.
To use preset tuning, preset stations first (see "Presetting Radio Stations").

To turn off the radio
Press RADIO OFF.

To improve the broadcast reception

- For AM: Reorient the unit itself.
- For FM: Extend the remote control cord (antenna). If the reception is still not good, press MENU repeatedly to set the cursor in the display to FM MODE. Then press SET to choose from "MONO" (monaural), "LOCAL" or none (stereo) for best reception.

To operate from the remote control

To turn on the radio, press RADIO ON/BAND•OFF for more than 1 second (while the tape is in stop mode only). To select the band, press RADIO ON/BAND•OFF for more than 1 second while the radio is on. To tune in or recall a preset station, press FF + or REW -. To turn off the radio, press RADIO ON/BAND•OFF.

Presetting Radio Stations

You can preset up to 30 stations—20 for FM and 10 for AM (for the JpN area*, up to 16 stations—8 for FM and 8 for AM).

* Only if available. See "Receiving Stations Outside Your Country/Region".

Presetting Automatically Scanned Stations

- Press RADIO ON/BAND to turn on the radio.
- Press RADIO ON/BAND repeatedly to select AM or FM.
- Press and hold ENTER for more than 3 seconds. Preset number 1 will flash in the display and the main unit starts scanning the stations from the lower frequencies and stops for about 5 seconds when a station is received.

- If you wish to preset the currently received station, press ENTER while the preset number is flashing. The received station is preset on preset number 1 and the unit starts scanning for the next receivable station.
- Repeat step 4 until all receivable stations are preset.

To stop scanning
Press RADIO OFF. The radio is turned off at the same time.

- If stations are already stored, the newly preset stations replace the old ones when the above procedure is completed.
- If stations cannot be preset automatically, preset them manually.

Presetting Stations Manually

- Press RADIO ON/BAND to turn on the radio.
- Press RADIO ON/BAND repeatedly to select AM or FM.
- Press ENTER. The frequency digits will flash in the display.
- While the frequency digits are flashing, tune in to a station you wish to store using TUNE/PRESET + or - and press ENTER.

- The preset number will flash in the display.
- While the frequency digits are flashing, select the preset number you want using TUNE/PRESET + or - and press ENTER.

- Notes**
- If you cannot complete step 4 or 5 while the indicators are flashing, repeat from step 3.
 - If a station is already stored, the new station replaces the old one.

Playing the Preset Radio Stations

- Press RADIO ON/BAND to turn on the radio.
- Press RADIO ON/BAND repeatedly to select AM or FM.
- Press MENU repeatedly to set the cursor in the display to TUNE MODE. Then press SET to display "PRESET".
- Press TUNE/PRESET + or -.

To cancel a stored station

- Follow the procedure above and in step 4, select the preset number you want to cancel and then press ENTER. The frequency digits will flash in the display.
- Press and hold TUNE/PRESET + or -. The frequency digit starts running up or down. Keep holding down the button until "----" is displayed.
- Press ENTER while "----" is flashing. A preset number will flash in the display.
- Press ENTER to cancel the stored station.

Scanning the Preset Radio Stations — DAPS (Digital Auto Preset Scanning)

- Press RADIO ON/BAND to turn on the radio.
- Press RADIO ON/BAND repeatedly to select AM or FM.
- Press and hold RADIO ON/BAND for 2 seconds or more.

The preset stations of the selected band will be played for about 5 seconds each. (During DAPS the indicators in the display flash.)

- Press RADIO ON/BAND again to select the station while the desired preset station is being played.

- Notes**
- If there are no stations stored, the DAPS function does not work.
 - Until a station is selected in step 4, the DAPS function turned on in step 3 will continue.

Receiving Stations Outside Your Country/Region (Excluding European, Saudi Arabian, and Chinese models)

- Press RADIO ON/BAND to turn on the radio.
- Press ENTER. The frequency digits will flash in the display.

- Press and hold RADIO ON/BAND until "Eur", "USA" or "JpN" flashes.
- Press RADIO ON/BAND repeatedly to select "Eur", "USA" or "JpN" and press ENTER.

- Tune in to and store stations as necessary following the procedure of "Listening to the Radio" and "Presetting Radio Stations".

Area indication and frequency range

Area*	Frequency range FM (MHz)	AM(kHz)
Eur	87.5 - 108	531 - 1 602
USA	87.5 - 108	530 - 1 710
JpN	76.0 - 90.0	531 - 1 710

* Eur : European and other countries /regions
USA : USA, Canada, and Central and South America
JpN: Japan

Using the Menu

Adjusting Playback Modes

On the main unit: Press MENU repeatedly to set the cursor in the display to PB MODE. Then press SET to select the desired mode.

On the remote control: Press MODE repeatedly. With each press, the indications change.

To play	Select
both sides repeatedly	
both sides once	
from the FWD side	

Emphasizing Sound

- On the main unit:
- Press MENU repeatedly to set the cursor in the display to SOUND.
 - Press SET repeatedly to select the sound emphasis of your choice.

On the remote control: 1 Press SOUND repeatedly. With each press, the indications change.

The indications change as follows:

- RV : Sound Revitalizer Emphasizes treble sound.
- MB : Mega Bass Emphasizes bass sound (moderate effect).
- GRV : Groove Emphasizes bass sound (strong effect).

no message : normal (no effect)

Note
If the sound is distorted with the mode "GRV", turn down the volume of the main unit or select other modes.

Protecting the Preset Hearing — AVLS (Automatic Volume Limiter System)

The maximum volume is kept down to protect your ears.

On the main unit:

Press MENU repeatedly in the playback, stop or radio mode to set the cursor in the display to AVLS. Then press SET to show "AVLS".

On the remote control: Hold down MODE for more than 10 seconds until "AVLS" appears in the display.

To cancel the AVLS function

Press SET so that "AVLS" disappears from the display on the main unit.

On the remote control: Hold down MODE again for more than 3 seconds until "AVLS" disappears.

Using Other Functions

Adjusting the Tape Playback Speed

You can adjust the playback speed using SPEED CONTROL. Turn SPEED CONTROL to: - (slow) to play back at a slower speed. Center position to play back at normal speed. + (fast) to play back at a faster speed.

Note

The SPEED CONTROL works in the playback mode only. Recording will be made independent of this control.

Locking the Controls — HOLD Function

Slide the HOLD switch in the direction of the arrow to lock the controls of the main unit or the remote control.

Using the Tape Counter

The tape counter is displayed on the main unit during playback, recording, fast forward, rewind, CUE, REVIEW and stop (except when the radio is turned on). The number will increase when playing back the FWD side, and decrease when playing back the REV side. To reset the counter to "000", press ENTER/COUNTER RESET.

Notes

- The tape counter may show some deviation.
- The tape counter will not be displayed when the cassette compartment is empty.

Precautions

On charging

- The supplied charging stand can be used only with this unit. No other model can be charged using this stand.
- Remove the AC power adaptor from the wall outlet as soon as possible after the rechargeable battery has been charged. Overcharging may damage the rechargeable battery.

- The charging stand and the rechargeable battery may become warm during charging, but this is not a problem.
- Do not tear off the film on the rechargeable battery.
- Use only the supplied charging stand to charge the supplied rechargeable battery.
- Be sure not to short-circuit the battery. When you carry it with you, use the supplied carrying case. If you are not using the case, do not carry the battery with other metallic objects such as keys, rings in your pocket.
- If the rechargeable battery is new or has not been used for a long time, it may not be charged completely until you use it several times.

On batteries

- Do not charge a dry battery.
- Do not carry the dry or rechargeable batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- When you do not use the main unit for a long time, remove the battery to avoid any damage caused by battery leakage and subsequent corrosion.

On AC power adaptor

- Use only the supplied AC power adaptor (for charging stand) and recommended AC power adaptor (for battery case). Do not use any other AC power adaptor.



- Connect the AC power adaptor to an easily accessible AC outlet. Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.
- Do not touch the AC power adaptor with wet hands.

On handling

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- We do not recommend the use of tape longer than 90 minutes. They are very thin and tend to be stretched easily. This may cause malfunction of the unit or sound deterioration.
- The LCD display may become hard to see or slow down when using the unit at high temperatures (above 40°C/104°F) or at low temperatures (below 0°C/32°F). At room temperature, the display will return to its normal operating condition.
- If the unit has not been used for long, set it in the playback mode to warm up for a few minutes before you start using again.

On the remote control

Use the supplied remote control only with this unit.

On headphones/earphones/Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to area your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume to a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

On maintenance

- Clean the tape head and tape path, using a cotton swab and commercially available cleaning solvent after every 10 hours of use.
- To clean the exterior, use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.
- Clean the headphones/earphones and remote control plugs periodically.
- Clean the battery case terminals (both inside and outside) and the terminals periodically with a cotton swab or soft cloth as illustrated.

Troubleshooting

The sound drops out or comes with excessive noise.

- Clean the headphones/earphones and remote control plugs.
- The unit does not operate at all.
- Charge the battery or replace the dry battery with a new one.
- HOLD is activated. Deactivate HOLD.

Tape operation is not possible.

- Insert a cassette tape.

The volume cannot be turned up.

- If AVLS is on, turn it off.

A beep sounds and recording is not possible when REC is slid.

- If the tab of the tape is broken off, cover the tab hole with adhesive tape.

The display and the operations are not normal.

- Remove the power sources for 15 seconds or more, and then set them again.

The radio and playback operates but recording is not possible.

- This condition may occur when the battery becomes weak. Replace or charge the battery.

Specifications

Radio section

Frequency range

FM: 76.0 - 90.0 MHz (Japan)

87.5 - 108 MHz (other countries /regions)

AM: 531 - 1 710 kHz (Japan)

530 - 1 710 kHz (North, Central, and South America)

531 - 1 602 kHz (other countries /regions)

Tape section

Frequency response

Playback: 40 - 15 000 Hz

Recording / playback: 100 - 8 000 Hz

Output

Headphones (⌚) jack

Load impedance 8 - 300 Ω

Input

Microphone (MIC) jack

General

Power requirements

1.5 V

Rechargeable battery

One R6 (size AA) battery

Dimensions (w/h/d)

Approx. 77.1 × 108.0 × 22.5 mm

(3¼ × 4¼ × ¾ inches) excl. projecting parts and controls

Mass

Approx. 152 g (5.4 oz) (main unit only)

Supplied accessories

AC power adaptor (1), Battery case (1)

Stereo headphones or earphones with remote control (1), Charging stand (1)

AC plug adaptor (1) (Saudi Arabian model only)

Rechargeable battery (NH-14WM(A), 1.2 V, 1 350 mAh (min), Ni-MH) (1)

Rechargeable battery carrying case (1)

Carrying pouch (1)

Stereo microphone (1)

Design and specifications are subject to change without notice.

中文

听收音机

- 按 RADIO ON/BAND 打开收音机。
- 反复按 RADIO ON/BAND 选择 AM 或 FM。
- 反复按主机上的 MENU，将显示窗中的光标设为 TUNE MODE。
- 要手动调台时
 - 按 SET 选择 MANUAL。
 - 反复按 TUNE/PRESET + 或 - 调入所要的电台。按住 TUNE/PRESET + 或 - 数秒以扫描电台。

要预设电台时
① 按 SET 选择 PRESET。
② 反复按 TUNE/PRESET + 或 - 选出所要的预设电台。要使用预设调谐时，请先预设电台（参见“预设电台”）。

要关掉收音机时

按住 RADIO OFF 键。

要改善广播接收效果时

- 收听 AM 节目时：调转机器方位。
- 收听 FM 节目时：请拉长按控器导线（天线）。如果接收效果仍不好，请反复按 MENU 将显示窗中的光标设为 FM MODE，然后按 SET 从 "MONO"（单立声）或 "LOCAL" 或无（立体声）方式中进行选择以获最佳接收效果。

要从遥控器进行操作时

要打开收音机时，请按 RADIO ON/BAND•OFF 1 秒以上（限当录音带处于停止状态时）。

要选择波段时，请在打开着收音机时，按下 RADIO ON/BAND•OFF 1 秒以上。

要调入或选出预设电台时，按 FF + 或 REW -。

要关掉收音机时，请按 RADIO ON/BAND•OFF。

预设电台

您可以预设多达 30 个电台—20 个 FM 台，10 个 AM 台。（在 JpN 地区*，最多可以预设 16 个台—8 个 FM 台，8 个 AM 台）。

* 如果可以预设，请参见“接收到的国家/地区的电台”。

自动地预设扫描的电台

- 按 RADIO ON/BAND 打开收音机。
- 反复按 RADIO ON/BAND 选择 AM 或 FM。

3 反复按 MENU，将显示窗中的光标设定于 TUNE MODE。然后按 SET 以显示“PRESET”。

- 按 TUNE/PRESET + 或 -。

要取消所存储的电台时

- 按照上述方法而在步骤 4 里选择所要取消的预设号，然后按 ENTER。显示窗中即闪烁着频率数。

- 按住 TUNE/PRESET + 或 -。频率数开始增大或减小。按住该键至显示了“----”。

- 当闪烁着“----”时按 ENTER。显示窗中即闪烁着预设号。

- 按 ENTER 以取消存储的电台。

3 按 ENTER 3 秒钟以上。

预设号 1 将在显示屏上闪烁。主机开始从低频段扫描电台，在接收到电台时停止约 5 秒钟。

- 如果您要预设接收到的电台，请在预设号闪烁着时按 ENTER。

接收到的电台即被预设于预设号 1，本机将开始扫描下一个可接收的电台。

- 重复步骤 4 直至所有可接收电台均被预设。

停止扫描

按 RADIO OFF，收音机将同时关掉电源。

注

- 如果已预设了电台，当完成上述步骤时，新预设的电台将取代原有的电台。

- 步骤 3 里的 DAPS 功能将继续打开着—直到在步骤 4 里已选择了电台为止。

手动预设电台

- 按 RADIO ON/BAND 打开收音机。
- 反复按 RADIO ON/BAND 选择 AM 或 FM。
- 按 ENTER。

显示窗中即闪烁着频率数字。

- 当频率数字闪烁时，请用 TUNE/PRESET + 或 - 键调入您想存储的电台，按 ENTER。

显示窗中即将闪烁着预设号。

- 当预设号闪烁着时，请用 TUNE/PRESET + 或 - 选择所要预设号并按 ENTER。

注

- 如果上述指示闪烁时您不能完成步骤 4 或步骤 5，请从步骤 3 开始重复操作。

- 如果已存储有电台，新电台即将取代原有的电台。

地区指示和频率范围

地区*	频率范围 FM (MHz)	AM (kHz)
Eur	87.5 - 108	531 - 1 602
USA	87.5 - 108	530 - 1 710
JpN	76.0 - 90.0	531 - 1 710

* Eur : 欧洲和其他国家 / 地区
USA : 美国、加拿大和中南美
JpN : 日本

播放预设电台

- 按 RADIO ON/BAND 打开收音机。
- 反复按 RADIO ON/BAND 选择 AM 或 FM。

3 反复按 MENU，将显示窗中的光标设定于 TUNE MODE。然后按 SET 以显示“PRESET”。

- 按 TUNE/PRESET + 或 -。

要取消所存储的电台时

- 按照上述方法而在步骤 4 里选择所要取消的预设号，然后按 ENTER。显示窗中即闪烁着频率数。

- 按住 TUNE/PRESET + 或 -。频率数开始增大或减小。按住该键至显示了“----”。

- 当闪烁着“----”时按 ENTER。显示窗中即闪烁着预设号。

- 按 ENTER 以取消存储的电台。

扫描预设电台—DAPS (Digital Auto Preset Scanning)

- 反复按 MENU 把显示窗中的光标设定于 SOUND。
- 反复按 SET 以选择所喜欢的声加强模式。
- 在遥控器上：
 - 反复按 SOUND，每按一下，指示灯改变。

指示灯改变为：

- RV : Sound Revitalizer (声音再生器)。
- 增强高音。
- MB : Mega Bass (强低音)。
- 增强低音 (中等效果)。
- GRV : Groove (最佳状态)。
- 增强低音 (强烈效果)。
- 无信息：普通 (无效果)。

注

- 如果没有存储电台，DAPS 功能将不起作用。

- 步骤 3 里的 DAPS 功能将继续打开着—直到在步骤 4 里已选择了电台为止。

接收别的国家 / 地区的电台

(欧洲、沙特阿拉伯和中国型号除外)

- 按 RADIO ON/BAND 打开收音机。
- 按 ENTER 键。

频率数字将闪烁于显示窗中。