



Contents/  
Before Use

Making and  
Receiving Calls

Using the  
Phone Book

Using Mail

Using the Camera

Using EZweb

EZnaviWalk

Entering  
Characters

Other Features/  
Index

# Basic Manual/A5506T

# Introduction

Thank you for purchasing the A5506T. Before using your A5506T, be sure to read the A5506T Basic Instruction Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

## Printed Manuals for the A5506T (Japanese)

The A5506T comes with the Basic Instruction Manual, Instruction Manual, and Smart Mode Operation Manual.

### A5506T Basic Instruction Manual

Equivalent to this English PDF manual.



### A5506T Smart Mode Operation Manual

English version is not available.



### A5506T Instruction Manual

English version is not available.



In some of the screens used for descriptions in this manual, the indicator display areas at the top may be omitted to simplify descriptions. Also, the typeface and shape of fonts used for characters may differ from those used for characters in actual screens or some characters may be omitted.

# Cell Phone Etiquette

## Etiquette for Cell Phone Use

- The cell phone always emits weak radio waves when the power is on.
- Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

- The use of cell phones is not allowed in some places
  - Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
  - Using a cell phone in an aircraft is prohibited by law. Be sure to turn the cell phone off.



- Radio waves from cell phones may interfere with medical electrical equipment
  - Some people close to you in busy places such as crowded trains may be using a pacemaker. Turn the cell phone off in such places.
  - Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.



- Be considerate of where you use the cell phone and how loudly you talk
  - Do not make calls from cinemas, theaters, museums, libraries, and other similar places. Turn the power off or set the manner mode to prevent others around you from being inconvenienced by ring tones for incoming calls or mail.



- Do not use the cell phone in places where you will be in the way of others.
- Move to areas where you will not inconvenience others on trains or in hotel lobbies.
- Take care not to talk too loudly during calls.



- Obtain the permission of other people before you take their photos with the cell phone's camera.



- Do not use the cell phone's camera for recording information in bookstores and other locations where taking photos is not permitted.

# Cell Phone Basics

## Cell Phone Features

### Phone

Your cell phone is packed with useful features such as a phone book, call history, and manner mode.




Read from  
page **23**

### Camera

You can take photos and movie clips, and then send them easily by e-mail.



Read from  
page **55**

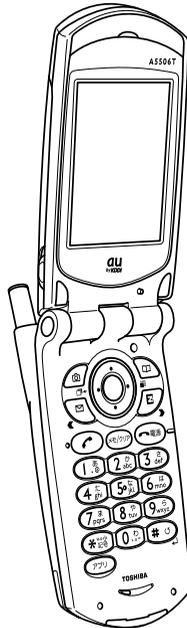

### Mail

You can send mail to other cell phones and personal computers.




Read from  
page **40**

### EZnaviWalk

You can confirm your current location and navigate to your destination.

### EZweb (Internet)

You can read the news, or download melodies and wallpaper.

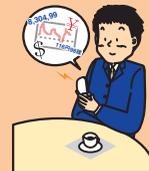

Read from  
page **64**

# Manner Mode and Voice Memo

## Manner Mode



You can turn off the incoming call ring tone and other tones so as not to inconvenience other people.

When the standby screen is displayed, press  (side key 2), use  to select *Normal*, and press  (Select).

See page

27

## Voice Memo



When you cannot answer calls, the cell phone can play an answering message (Japanese) and record memos.

When the standby screen is displayed, hold down  for at least one second.

See page

28

# Checking the Power, Signal Strength, and Battery Level

## Normally, you should leave the cell phone turned on



To make and receive calls, you need to turn the power on.

Hold down  for at least one second.



See page

11

## If a signal is not being received, you cannot talk on the cell phone



Even in service areas, there are some places where it is difficult to receive a signal.

 indicates the signal strength.



See page

11

## Pay attention to the battery level



When the battery level is low, the cell phone may not function properly.

 indicates the battery level.



See page

11

# Spam and One-ring Calls

## If you receive spam:

You can set the mail filters to reject only specific mail or mail indicated by "未承諾広告※" (unsolicited advertisement), which often tends to be spam.

The following mail filters are available for rejecting spam:

- ・ 未承諾広告フィルター (Unsolicited advertisement filter)
- ・ アドレスフィルター (Address filters)
  - 指定拒否設定 (for not receiving specific mail)
  - 指定受信設定 (for receiving specific mail only)



See page

50

## If you receive a call from an unknown number:



It may be an attempt to get you to return a call to a service with very high charges.

Incom History		
01	03-0002-XXXX	6/30 16:00
02	030001XXXX	6/28 15:35
03	Tom Daniels	6/28 14:48
04	0900003XXXX	6/27 13:30

This is known as a "one-ring call" and is indicated by the red indicator  in the incoming history.

See page

26

# Contents

<b>●Cell Phone Etiquette</b>	<b>1</b>
Etiquette for Cell Phone Use	1
<b>●Cell Phone Basics</b>	<b>2</b>
Cell Phone Features	2
Manner Mode and Voice Memo	3
Checking the Power, Signal Strength, and Battery Level	4
Spam and One-ring Calls	5
<b>●Contents</b>	<b>6</b>
<b>●Before Use</b>	<b>8</b>
Checking the Contents of the Box	8
Names of Parts	9
Charging the Battery Pack	10
Extending the Antenna	11
Turning On the Power	11
Learning the Basics	12
Using Menus	14
Indicators	16
Personal Identification Numbers and Passwords	17
Making Initial Settings	18
Switching the Display Language to English	20
Checking Your Phone Number and E-mail Address	22
<b>●Making and Receiving Calls</b>	<b>23</b>
Making a Call	23
Answering a Call	24
Redialing and Returning Calls (Outgoing/Incoming History)	25
One-ring Calls	26
Setting the Manner Mode	27
Setting the Voice Memo	28
Playing a Voice Memo	29
Changing the Incoming Ring Tone	30
Adjusting the Incoming Ring Tone Volume	32
Adjusting the Earpiece Volume during a Call	33
<b>●Using the Phone Book</b>	<b>34</b>
Saving a Phone Book Entry	34
Calling a Phone Number from the Phone Book	37
Editing Phone Book Entries	38
Saving a Phone Number from the Incoming/Outgoing History	39

<b>●Using Mail</b>	<b>40</b>
Using E-mail	40
Displaying the E-mail Menu	40
Creating and Sending E-mail Messages	41
Reading Received E-mail Messages	44
Replying to Received E-mail Messages	46
Changing Your E-mail Address	48
Rejecting Spam	50
Using C-mail	51
Displaying the C-mail Menu	51
Creating and Sending C-mail Messages	52
Reading Received C-mail Messages	54
<b>●Using the Camera</b>	<b>55</b>
Camera Image Features	55
How to Skillfully Take Photos and Record Movies	56
Data Sizes	57
Taking Still Images (Photos)	58
Viewing Still Images (Photos)	59
Recording Moving Images (Movies)	60
Playing Back Moving Images (Movies)	62
Attaching Photos/Movies to E-mail Directly After Capture	63
Photo Mail Service	63
<b>●Using EZweb</b>	<b>64</b>
EZweb (Internet)	64
Accessing Sites	65
Viewing Sites	66
Bookmarking Frequently Accessed Pages	67
Downloading Melodies	68
Viewing Bookmarked Pages	69
Checking Charges	70
<b>●EZnaviWalk</b>	<b>71</b>
EZnaviWalk Features	71
Registering Your Current Location as Your Home (My Spot)	74
Going Home	75
<b>●Entering Characters</b>	<b>76</b>
Character Entry Modes	76
Entering Single-byte Alphanumeric Characters	76
Entering E-mail Addresses	78
Entering Pictograms	80
<b>●Other Features</b>	<b>81</b>
<b>●Troubleshooting</b>	<b>82</b>
<b>●Index</b>	<b>83</b>

# Before Use

## Checking the Contents of the Box

Before Use


The box contains the cell phone and accessories.




- Cell phone



- Battery pack (built-in)

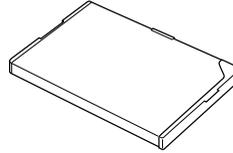


- Desktop holder

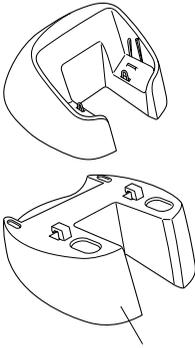

Attachment for data communication

- Toshiba AC adapter 02

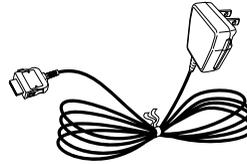

- Basic Manual (Japanese)



- Instruction Manual (Japanese)





- Smart Mode Operation Manual (Japanese)






- Warranty (Japanese)
- Safety Precautions (Japanese)

# Names of Parts

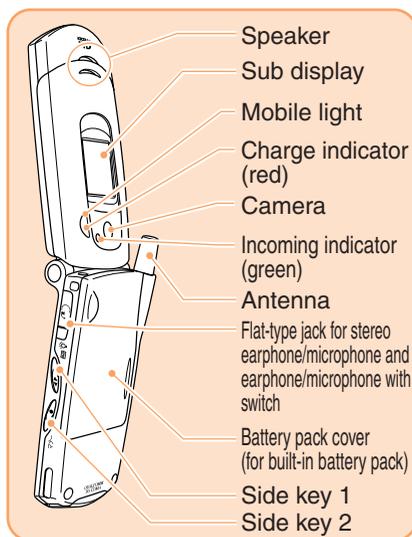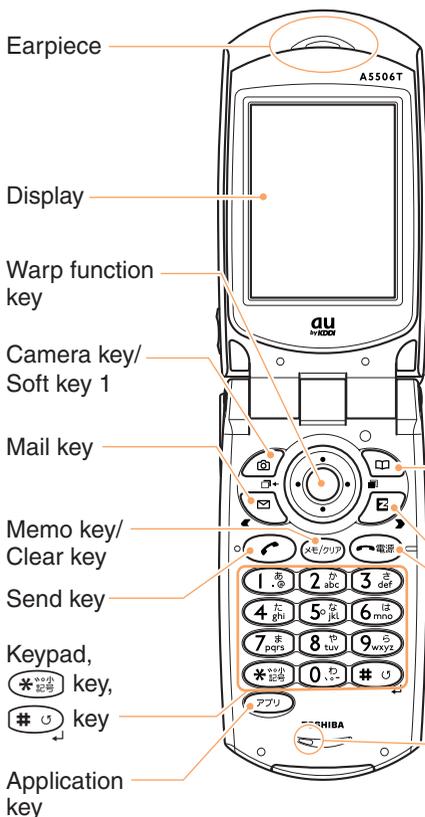

Before Use

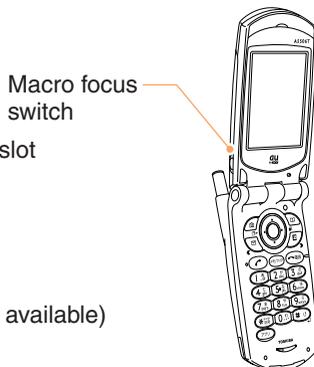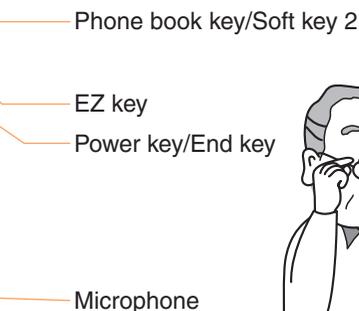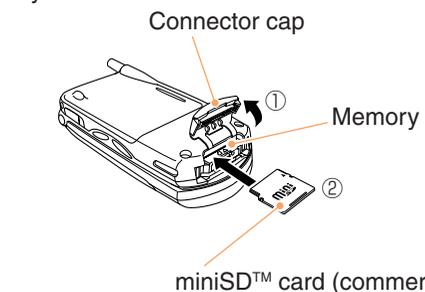


# Charging the Battery Pack

The battery pack is insufficiently charged at the time of purchase. Before you use the cell phone for the first time, charge the built-in battery pack.



Before Use

## How to Charge the Battery Pack

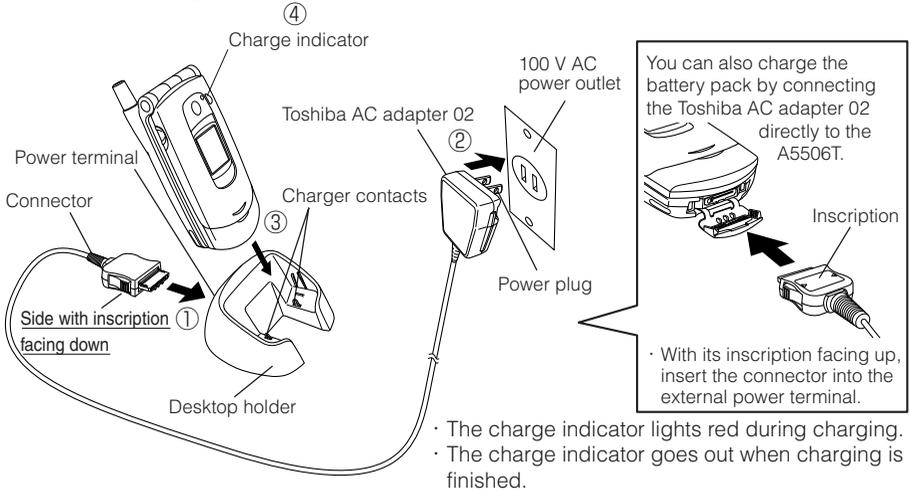

If you attach the attachment for data communication to the desktop holder, you can perform data communication during charging.

### 1 Connect the Toshiba AC adapter 02 to the desktop holder.

➔ With inscription of the connector facing down, connect the Toshiba AC adapter 02 to the power terminal on the rear of the desktop holder.

### 2 Connect the Toshiba AC adapter 02's power plug to a 100 V AC power outlet.

### 3 While the A5506T is closed and the battery pack attached, insert it into the desktop holder as shown in the figure.

### 4 Confirm that the charge indicator lights.




Hold the desktop holder while removing the A5506T.



Use the battery level indicator (see page 11) on the display as a guide for charging.

# Extending the Antenna

Hold the tip of the antenna and fully extend the antenna in the direction of the arrow.

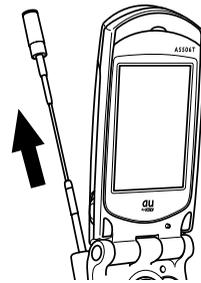

 If the antenna is not fully extended, a sufficient signal may not be able to be sent and received. Also, if the antenna is extended perpendicular to the ground, it is easier to send and receive a signal.

 When retracting the antenna, hold the base of the antenna and slide it straight back into the A5506T. Holding the tip and using excessive force while retracting the antenna may result in the antenna being damaged.

# Turning On the Power



**1** Hold down  for at least one second.




➔ The power turns on and the standby screen appears.

**Check the signal strength.**

				
Strong	Medium	Weak	Very weak	Out of range

- You cannot receive or make calls if  is displayed.
- Sometimes, you cannot receive or make calls if  is displayed.

Standby screen

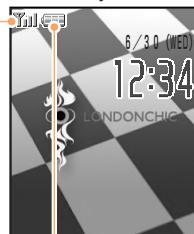

**Check the battery level.**

				
Full	Low	Very low (requires charging)	Empty	Charging


 To turn off the power, hold down  for at least one second.

# Learning the Basics



## Key Assignment

- : Opens the incoming history (see page 25)
- : Accesses the camera (see from page 55)
- : Sends/receives e-mail, etc. (see from page 41)
- : Makes/answers calls (see pages 23 and 24)
- ~ : Enters phone numbers/characters (see from page 76)
- # key"/> : Starts EZ applications

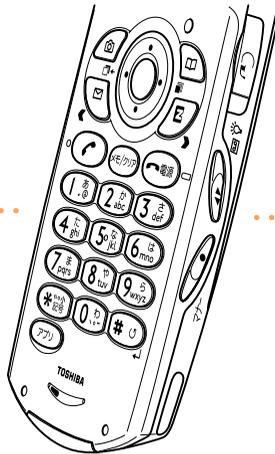

- : Opens the outgoing history (see page 25)
- : Accesses the phone book (see from page 34)
- : Connects to EZweb (Internet) (see from page 64)
- : Sets/cancels voice memo (see page 28), deletes characters (see page 77), and cancels operations
- : Turns on/off the power (see page 11) and ends calls (see pages 23 and 24)
- : Turns on/off the mobile light
- : Accesses manner mode settings (see page 27)


- : Macro focus switch



If you are unsure of an operation or you make a mistake, press to return to the previous screen or press to return to the standby screen.

## Warp Function Key


Press the up, down, left, or right button to perform operations such as selecting an item or moving the cursor, and press the center button to confirm a selected item.

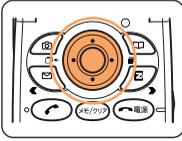

	Selects items and moves the cursor up, down, left, or right.
	Confirms the selected item or starts the selected operation.

## Soft Keys

When indications such as the following are displayed at the bottom of the display, you can press the corresponding soft keys to perform the indicated operations. The soft key indications vary depending on the screen.

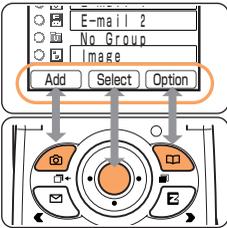


Soft key 1 	Performs the operation indicated at the bottom left of the screen.
Center key 	Performs the operation indicated at the bottom center of the screen.
Soft key 2 	Performs the operation indicated at the bottom right of the screen.

# Using Menus

## Launcher Menu

You can access various A5506T functions from the Launcher menu. The Launcher menu contains the following items.

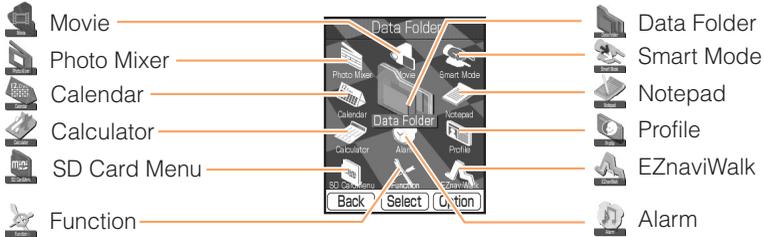

**1** When the standby screen is displayed, press .

While the power is on, press the center button of the warp function key.

➔The Launcher menu appears.




Launcher menu



**2** Use  to select an item.

Press the up, down, left, or right button of the warp function key.

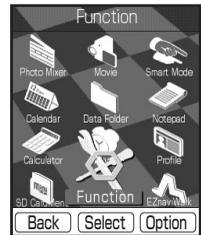

**3** Press  (Select).


➔The item selected in the Launcher menu appears.



 If you are unsure of an operation or you make a mistake, press  to return to the previous screen or press  to return to the standby screen.

## Option Menus

If you press  when  is displayed in a screen for making function settings, entering characters, or performing other operations, an Option menu for performing various related operations opens.

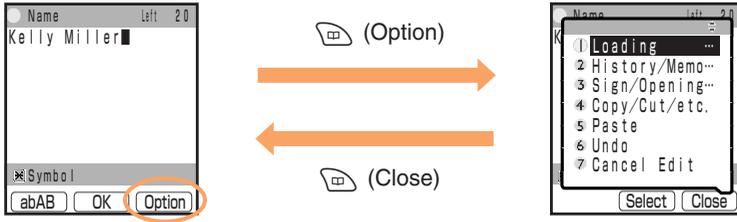


# Indicators


The indicators (pictures that indicate functions or states) allow you to check whether you have new incoming mail, the current settings of functions, and other information. It is useful to memorize the main indicators.

Before Use

## Display and Sub Display Indicators

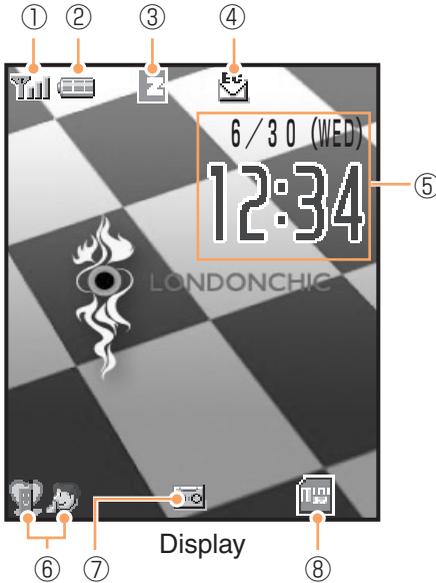

- ① Indicates the signal strength
- ② Indicates the battery level
- ③ : Indicates EZweb (Internet) is in use
- : Indicates a call is in progress
- ④ Indicates received or unread e-mail/c-mail
- ⑤ Indicates the current time and date
- ⑥ Indicates the manner mode is set
- ⑦ Indicates the voice memo or manner mode is set
- ⑧ Appears on the standby screen when a miniSD™ card (commercially available) is inserted. You can save moving and still images directly to a miniSD™ card.
- ⑨ Indicates new incoming mail or missed call

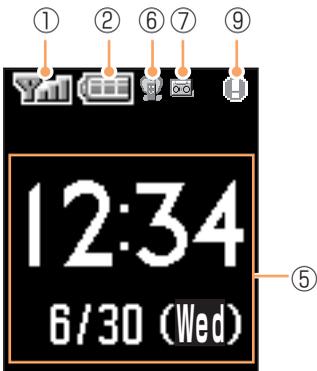

The time indication is set automatically to the current time and date.



The layouts and content of screens appearing in descriptions are only examples for the purpose of explanation and contain some indicators that cannot appear at the same time.

# Personal Identification Numbers and Passwords

The following personal identification numbers and passwords are available for use of your A5506T. Take care not to forget them because they are required for performing various operations and using subscription services.

## PIN

Usage Examples	<ul style="list-style-type: none"> <li>① Remotely operating the answering service and call forwarding service from a regular phone.</li> <li>② Making inquiries, applications, and changes while using au customer center voice guidance, au web pages, and EZweb.</li> <li>③ Changing various settings from Other Setup of E-mail Setup.</li> </ul>
Initial Setting	The four-digit number you wrote on your subscription form.

## Lock No.

Usage Examples	Changing various settings of the cell phone, etc.
Initial Setting	1234

## EZ Password

Usage Examples	Concluding/canceling subscriptions for EZweb fee-based content.
Initial Setting	The number (four digits) set when first subscribing for fee-based content.

## Premium EZ Password

Usage Examples	<ul style="list-style-type: none"> <li>① Concluding/canceling subscriptions for EZweb fee-based content paid for using "まとめてau支払い" (the combined au payment service).</li> <li>② Purchasing products from EZweb sites that use "まとめてau支払い" (the combined au payment service).</li> </ul>
Initial Setting	The number (four to eight digits) set when first using "まとめてau支払い" (the combined au payment service).


"プレミアムEZ回収代行サービス" will change to "まとめてau支払い" (the combined au payment service) from June 1, 2004.

# Making Initial Settings

## Initial Settings for the A5506T

**1** When the standby screen is displayed, press .

➔The 初期設定 (Initial Settings) menu appears.

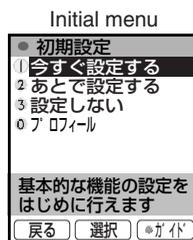

**2** Use  to select **設定しない (Do Not Setup)** and press  (**選択 [Select]**).

➔The Launcher menu appears.



-  Even if you do not make the initial settings, you can still make and answer calls.
-  The initial settings include changing the lock number and setting the character size, Caller ID, and incoming call ring tone.
-  You only need to make initial settings when first using the cell phone. Furthermore, you can also change the initial settings later.
-  After making initial settings, you can switch the display language to English (see page 20).
-  If you select **設定しない (Do Not Setup)**, the initial settings are as shown below.

Lock No.	1234	EZweb	Normal
Telephone	Normal	Character Input	Normal
E-mail	Normal	Notify Call ID	ON
C-mail	Normal	Incoming Call	Pattern 1


## Making Initial Settings for E-mail and EZweb (Internet)

To use e-mail and EZweb (Internet), you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact the au Customer Service Center or an au shop. Also, before use, be sure to make the initial settings. Your e-mail address is assigned automatically when you make the initial settings. For details on changing this e-mail address, see page 48.

\*If you are not going to use e-mail and EZweb, proceed to the next section.

### 1 When the standby screen is displayed, press , , or

.

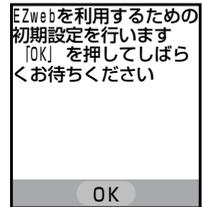

### 2 Press (OK).

➔Wait a short while until the screen on the right appears to notify you that the settings are complete.




### 3 Press (OK).

➔The E-mail menu appears if you started the initial settings by pressing , the EZ menu appears if you started the initial settings by pressing , and the EZ application screen appears if you started the initial settings by pressing .



Each menu is shown below.

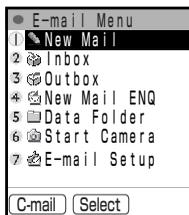

When started with 

When started with  An image appears.

When started with 

# Switching the Display Language to English

You can switch the display language for function names and other items to English.

**1** When the standby screen is displayed, press .


➔The Launcher menu appears.



Launcher menu




**2** Use  to select  (機能 [Function]) and press  (選択 [Select]).

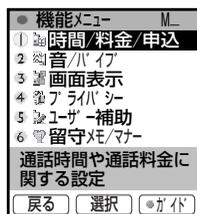

**3** Use  to select **特別/その他** (Extra) and press  (選択 [Select]).

➔The 特別/その他(Extra) menu appears.

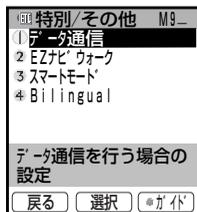

- 4 Use  to select *Bilingual* and press  (選択 [Select]).

→The Bilingual menu appears.



- 5 Use  to select *English* and press  (Select).

→The display language is set to English.



# Checking Your Phone Number and E-mail Address

**1** When the standby screen is displayed, press .

➔The Launcher menu appears.



Launcher menu



**2** Use  to select (Profile) and press  (Select).

➔The Profile screen appears and you can check your phone number and e-mail address.




From the standby screen, you can also check your phone number and e-mail address by pressing  and . However, no e-mail address will appear if you have not made the e-mail and EZweb (Internet) initial settings.

# Making and Receiving Calls

## Making a Call

- 1 When the standby screen is displayed, use  to  to enter the recipient's phone number.

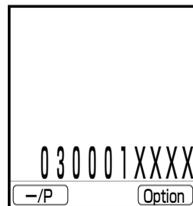

### Calling a regular phone

Enter the phone number starting with the area code.

### Calling a cell phone or PHS

Enter all 11 digits of the phone number starting with 0.

-  After you enter a phone number, you can add 184 or 186 to the phone number if you press  (Option), use  to select *Add/Off SP No...*, press  (Select), select *184* or *186*, and press  (Select).  
Add 184 if you do not want to notify the recipient of your phone number.  
Add 186 if you want to notify the recipient of your phone number.

- 2 Press .

- ➔ If the recipient's name is in the phone book, the name is also displayed.
- ➔ Wait a short while until you hear the ring tone.
- ➔ When you have finished the call, press .



# Answering a Call

## 1 The ring tone plays.

The phone number is displayed. If the caller's name is in the phone book, the name is also displayed.

- When "ID Unsent" is displayed, the caller has not sent Caller ID.
- When "Pay Phone" is displayed, the call is from a pay phone.
- When "Not Support" is displayed, the call is from a phone that cannot send Caller ID.



## 2 To answer the call, press .

➔When you have finished the call, press .



### Missed Call Notification

If you missed a call, you are notified of the call on the display.

To check the caller's phone number, use  to select  *Call* and press . You can then return the call (see page 25).




# Redialing and Returning Calls (Outgoing/Incoming History)

Example: Returning a call to a phone number in the incoming history

**1** When the standby screen is displayed, press .

→The Incoming History screen appears.

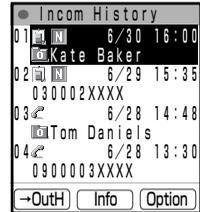


 To display the outgoing history, press  when the standby screen is displayed.

 The phone numbers are displayed in order of the most to least recent.

**2** Use  to select the phone number you want to call and press  (Info).

→The call information appears.

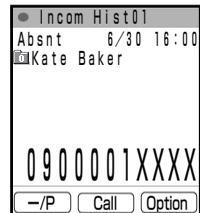

 To make a call without checking the information, press .

 If you press  (→OutH), the Outgoing History screen is displayed.

**3** Press  (Call) or .

→A call is made to the phone number displayed.



 The cell phone can store up to 20 phone numbers in each of the incoming history and outgoing history in order of the most to least recent.


# One-ring Calls

## What is a One-ring Call?

This is a call from an unknown caller that only rings once and is stored in the incoming history. The caller is attempting to get you to return a call to a service, such as a dating service, with very high charges.

## One-ring Indicator

When you have received a one-ring call (the ring tone played for less than three seconds), the red indicator  is displayed in the incoming history and "Absent" is displayed in the information for the call. Be careful when you return a call to an unknown caller.

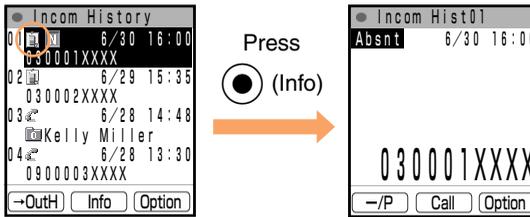


# Setting the Manner Mode

The cell phone informs you of a call by vibrating.

- 1 When the standby screen is displayed, press  (side key 2).

→ The Manner Mode menu appears.

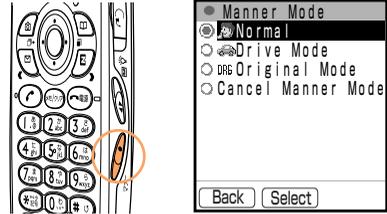

## Indicators

-  (Normal mode) : Sound related settings are turned off. This mode is convenient for times when sound would disturb other people such as during conferences, etc.
-  (Drive mode) : When answering calls is difficult such as during driving, have the voice memo answer calls for you.
-  (Original mode) : This mode allows you to configure the sound, vibrator, and other settings however you want.

- 2 Use  to select *Normal* and press  (Select).

→ The manner mode is set and  and  are displayed on the standby screen. The voice memo is set at the same time and  is also displayed on the standby screen.



 You can also set the manner mode by holding down  for at least one second when the standby screen is displayed.

## Canceling the Manner Mode

When the standby screen is displayed, hold down  for at least one second.

→ The manner mode is canceled and  and  disappear. The voice memo, which was set at the same time, is also canceled and  disappears.




 Even if the manner mode is set, the record start/end tone and shutter sound can still be heard during camera use.

# Setting the Voice Memo

- 1 When the standby screen is displayed, hold down  for at least one second.

→The answering message (Japanese) is played, then the voice memo is set and  appears on the standby screen.

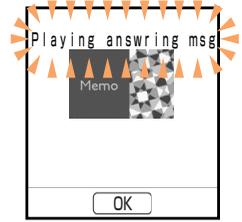

## Canceling the Voice Memo

When the standby screen is displayed, hold down  for at least one second.

→The voice memo is canceled and  disappears.



-  The cell phone can record a maximum of three messages, each up to 30 seconds long.
-  Use the answering service when you have turned off the power or are in a location where a signal cannot be received.
-  The cell phone can record up to a total of three voice memos and call voice memos. A call voice memo is for recording the voice of the other party during a call.

# Playing a Voice Memo

## If a voice memo is recorded

➔ *Memo* and the number of memos appear on the standby screen.



The number of memos is displayed next to the voice memo indicator on the standby screen.


x: Indicates that the cell phone has recorded x voice memos and has space to record.

x: Indicates that the cell phone has recorded x voice memos and has no space to record.

: Indicates that the cell phone has recorded only call voice memos and has no space to record.

## 1 Use to select *Memo* and press .

➔The Play Voice Memo list appears.

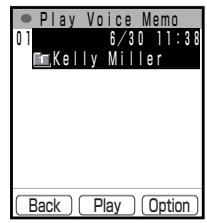

## 2 Use to select the voice memo you want to play and press (Play).

➔A voice memo plays.



To stop the voice memo, press (Stop).



To delete the voice memo that is playing, press (Option), select *Delete*, and press (Select). Then, use to select *Yes* and press (OK).

# Changing the Incoming Ring Tone

You can select an incoming ring tone from 14 fixed patterns, 6 fixed melodies, 7 effect sounds, and a melody in Data folder (1 melody by default), or search for a melody on EZweb.

**1** When the standby screen is displayed, press .

→The Launcher menu appears.



Launcher menu




**2** Use  to select (Function) and press  (Select).




**3** Use  to select *Sound/Vibrator* and press  (Select).

→The Sound/Vibrator menu appears.

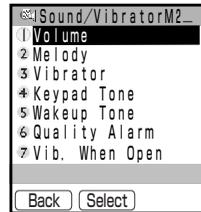


**4** Use  to select *Melody* and press  (Select).

→The Melody menu appears.

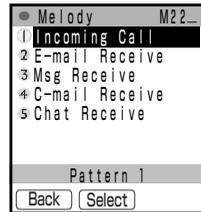


**5** Use  to select *Incoming Call* and press  (Select).

➔The Incoming Call menu appears.

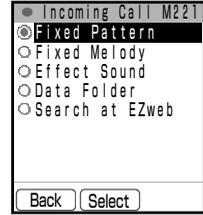

**6** Use  to select *Fixed Pattern* and press  (Select).

➔The Fixed Pattern menu appears.

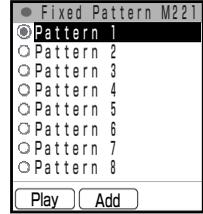

**7** Use  to select *Pattern 3* and press  (Play).

 If you press  (Back) or , the tone stops playing and you can select another tone.



**8** Press  (OK).

➔The incoming ring tone is set.



 The A5506T comes with incoming ring tones pre-installed.

# Adjusting the Incoming Ring Tone Volume

**1** When the standby screen is displayed, press .

→ The Launcher menu appears.



Launcher menu



**2** Use  to select (Function) and press  (Select).




**3** Use  to select *Sound/Vibrator* and press  (Select).

→ The Sound/Vibrator menu appears.




**4** Use  to select *Volume* and press  (Select).

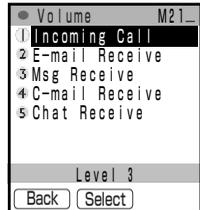

## 5 Use to select *Incoming Call* and press (Select).

➔The screen for adjusting the incoming call ring tone appears.

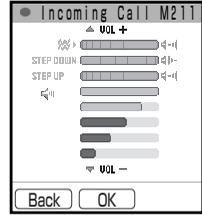

## 6 Use to adjust the volume and press (OK).

Each press of  increases or decreases the volume.



After the cell phone vibrates, the incoming ring tone plays at a gradually increasing volume.

STEP DOWN:

The incoming ring tone plays at a gradually decreasing volume.

STEP UP:

The incoming ring tone plays at a gradually increasing volume.

 Maximum: The incoming ring tone plays at the set volume.

 ↑

 Standard (default)

 ↓

 Minimum



The incoming ring tone does not play.



You can use  to select  (OFF) below  (Minimum).


# Adjusting the Earpiece Volume during a Call

## 1 During a call, press .

➔The Speaker Volume screen appears.

: Increases the volume.

: Decreases the volume.

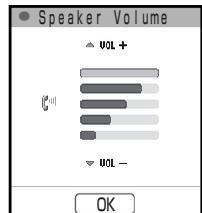

## 2 Press (OK).




If approximately two seconds elapses without you performing an operation, the previous screen is redisplayed.

# Using the Phone Book

## Saving a Phone Book Entry




Hold down   
for at least one second

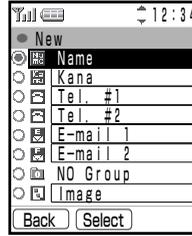

- 1 Use  to select *Name* and press  (Select).

➔The Name entry screen appears.

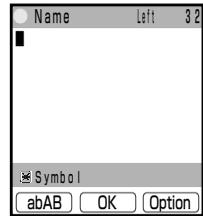

- 2 Enter a name and press  (OK).


➔The kana (reading) for the name is entered automatically.



 For details on entering characters, see page 76.

- 3 Use  to select *Tel. #1* and press  (Select).

➔The Tel. #1 entry screen appears.

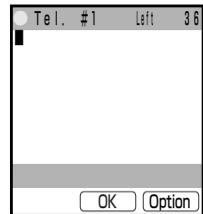

## 4 Enter a phone number and press (OK).

➔The Tel. #1 Class menu appears.



If the phone number is for a regular phone, enter the phone number starting with the area code. If the phone number is for a cell phone or PHS, be sure to enter all 11 digits of the phone number.



You can also open, for example, the outgoing history or incoming history to select a phone number to enter. Press  (Option), use  to select *History/Memo...*, press  (Select), and use  to select *Outgo History* (Outgoing History), *Incom History* (Incoming History), or another item.


## 5 Use to select a phone number class and press (Select).

➔The New screen reappears.




## 6 Use to select *E-mail 1* and press (Select).

➔The E-mail 1 entry screen appears. To skip entering an e-mail address, proceed to Step 9.

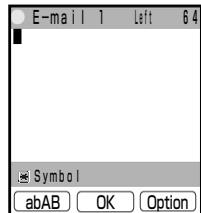

## 7 Enter an e-mail address and press (OK).

➔The E-mail 1 Class menu appears.

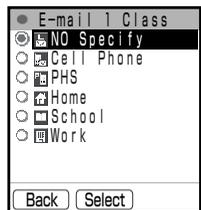

For details on entering e-mail addresses, see page 78.



You can also open, for example, the sent history to select an e-mail address to enter. Press  (Option), use  to select *History/Memo...*, press  (Select), and use  to select *Sent History* or another item.

**8** Use  to select an e-mail address class and press  (Select).

➔ The New screen reappears.



**9** Press  (Add) and press  (Add).

➔ The entry is saved as the phone book memory number 000.



The cell phone automatically saves the entry as the lowest available memory number from 000 to 499.



You can save two phone numbers and two e-mail addresses to each phone book entry.



You can also set other items such as a group, postal address, birthday, and URL.

# Calling a Phone Number from the Phone Book

- 1 When the standby screen is displayed, press  to display the phone book list.



To scroll through the screens, use .  
The entries are in the Japanese syllabary order (あ to 他).



- 2 Use  to select the entry containing the phone number you want to dial and press  (Select).

➔The information saved to the entry appears.



- 3 Select the phone number and press .

➔A call is made to the phone number in the selected entry.




 If there is more than one phone number in the entry, use  to select the phone number you want to dial and then press .

# Editing Phone Book Entries



**1** Press  (Option), use  to select *Edit*, and press  (Select).

➔The Edit screen appears.

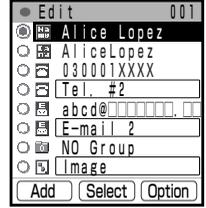

**2** Edit the contents and press  (Add).



 For details on entering names, phone numbers, and e-mail addresses, see pages 34 and 35.

**3** Use  to select *Overwrite* and press  (OK).

➔The contents of the phone book entry are edited.




# Saving a Phone Number from the Incoming/Outgoing History

Example: Saving a phone number from the incoming history to the phone book


- 1 When the standby screen is displayed, press   and use  to select the phone number you want to save.

➔The Incoming History screen appears.

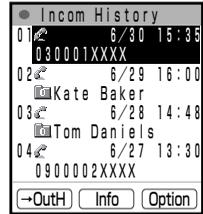

- 2 Press , use  to select *Add to Ph Book*, and press .

➔The Add Phone Book menu appears.

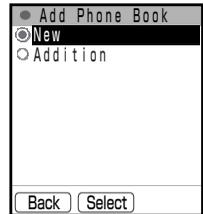

- 3 Use  to select *New* and press .

➔The New screen appears.



 For details on saving a phone book entry, see page 34.

 To open the outgoing history for saving a phone number to the phone book, press  in Step 1.

# Using Mail


## Using E-mail

To use e-mail, you need to apply for an EZweb (Internet) subscription. If you did not apply for an EZweb subscription at the time of purchase, contact the au Customer Service Center or an au shop. Also, before use, be sure to make the initial settings. If you have not yet made the initial settings, see page 19.


The e-mail service enables you to use an Internet e-mail address for exchanging text information (messages) with e-mail compatible cell phones, personal computers, and other devices. The cell phone is capable of sending messages containing up to 10,000 single-byte characters (5000 double-byte characters), as well as moving images (movies), still images (photos) and other information.

E-mail fees are charged as data communication fees that vary according to the amount of data (packet data) you send and receive via e-mail.

Using Mail

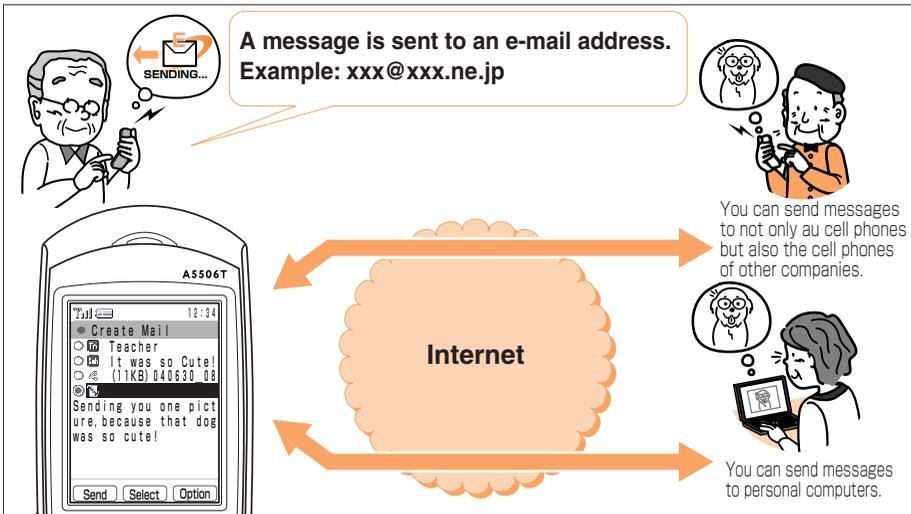

## Displaying the E-mail Menu

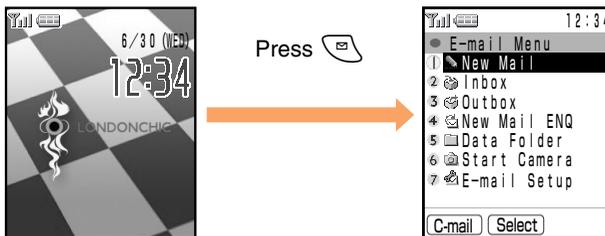

# Creating and Sending E-mail Messages

## 1 From the E-mail menu, use

 to select *New Mail* and press  (Select).

➔The Create Mail screen appears.




You can enter an e-mail address directly or open, for example, the phone book or sent history to select an e-mail address to enter. Press  (Option) and use  to select *Use Phone Book*, *Use Sent Hist* (Use Sent History), or another item.



You can attach a photo (still image), movie (moving image), or other data.

## 2 Use to select *To* and press (Select) twice.

➔The Addr: To (Address: To) entry screen appears.

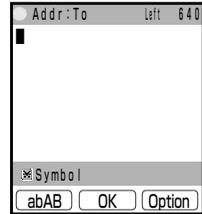

There are three types of address field: To, Cc, and Bcc.

**To:** An address in this field is used as the direct address. If you do not enter an address in this field, the E-mail message cannot be sent.

**Cc:** Use this field when broadcasting (sending the message to more than one recipient). This differs from the Bcc field in that each recipient can see the other addresses to which the message was sent.

**Bcc:** Use this field when broadcasting. This differs from the Cc field in that each recipient cannot see the other addresses to which the message was sent. If you want none of the recipients to know to which addresses the message was sent, enter your address in the To field and the addresses of all the recipients in the Bcc field.



You can set a total of up to 5 addresses in the To, Cc, and Bcc fields (a total of up to 640 single-byte characters).


**3** Enter an address and press  (OK).

➔ Enter the part of the address after @ as well. You can also enter ".co.jp," ".com," etc. from the Internet menu. Press  (abAB), use  to select *Sentence*, press  (Select), use  to select *Internet*, and press  (Select).




 For details on entering e-mail addresses, see page 78.

**4** Press  (OK).

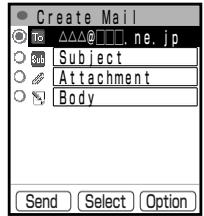

**5** Use  to select *Subject* and press  (Select).

➔ The Subject entry screen appears.

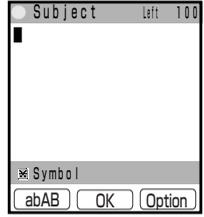


**6** Enter a subject and press  (OK).

 For details on entering characters, see page 76.



**7** Use  to select *Body* and press  (Select).

➔ The Body entry screen appears.

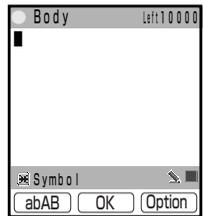

## 8 Enter the body of the message and press (OK).



 For details on entering characters, see page 76.

## 9 Press (Send).

➔The Way of Send menu appears.




 With **フォトメール便送信** (Photo Mail Service), e-mail addresses are changed automatically to ensure that even recipients with non-au cell phones can view any attached images properly. For details on the photo mail service, see page 63.


 **マイ絵文字送信** (My Pictogram) and **おてがる絵文字送信** (Easy Pictogram) are fee-based services. To use these services, you need to apply for the separate **絵文字め〜る** (Pictogram Mail) subscription for EZweb content.

## 10 Use to select *Send* and press (Select).

➔The animation for sending e-mail is displayed and the e-mail message is sent.

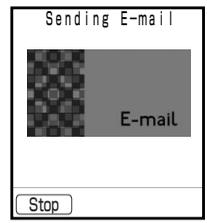

➔The message on the right appears to indicate that the e-mail message has been sent.

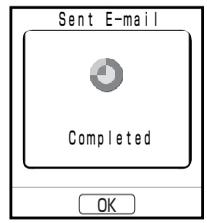

 From the second time you send a message to the same recipient, it is convenient to enter the address in the following way after you select *To* and press  (Select) twice in Step 2.

(1) Press  (Option), use  to select *History/Memo...*, and press  (Select). Then, select *Sent History* and press  (Select).

(2) Use  to select an address and press  (Select).

 If you pressed  to suspend the creation of the last message without sending, saving, or discarding the message, "There is unfinished mail. Continue?" appears after you press  when the standby screen is displayed.

# Reading Received E-mail Messages

You can read received e-mail messages and view a photo or other attachment. Received e-mail messages are saved to the Inbox.

## When you receive an e-mail message

➔ "Email x item" appears on the standby screen.



**1** Use  to select  *Email* and press .

➔The Inbox opens.

### Indicators

 : Indicates a folder containing a new message.



**2** Press  (Select).

➔The Main folder opens.

### Indicators

 : Indicates a read message.

 : Indicates an unread message.

 : Indicates a message with a photo or other attachment.



**3** Use  to select the new message and press  (Select).

➔If there is an attached photo, it is displayed.

 If there is no photo or other attachment, the body of the message is displayed.



## 4 Press (Body).

→ You can read the message.



If you do not perform any operation for approximately 30 seconds while an attached photo is displayed, the body of the message is displayed automatically.

## Viewing a Received Message

The subject of the message is displayed.

The sender's name or e-mail address is displayed.

If there is an attached image, it is displayed.



The time and date the message was received are displayed.

The body of the message is displayed.



The procedure may differ depending on the e-mail settings.

## Reading an E-mail Message in the Inbox

When the standby screen is displayed, press  to display the E-mail menu. Then, use  to select *Inbox* and press  (Select).

### Indicator

 : Indicates an unread message(s). The number on the right indicates the number of unread messages.

Use  and  (Select) to select the message you want to read in the Main folder.




# Replying to Received E-mail Messages

1 From the E-mail menu, use

 to select *Inbox* and press  (Select).

➔The Inbox opens.

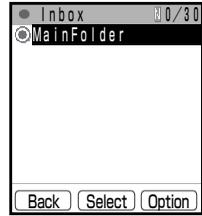

2 Press  (Select).

➔The Main folder opens.



3 Use  to select the message you want to reply to and press  (Select).

➔If there is an attached photo, it is displayed.



 If there is no photo or other attachment, the body of the message is displayed.

4 Press  (Body).

➔You can read the message.



 If you do not perform any operation for approximately 30 seconds while an attached photo is displayed, the body of the message is displayed automatically.

## 5 Press (Return).

➔The Create Mail screen appears. "Re:" is prefixed to the subject, and the body of the message is quoted.




## 6 Refer to "Creating and Sending E-mail Messages" (Steps 7 and 8 on pages 42 and 43) and enter the body of the message.




## 7 Press (Send).

➔The Way of Send menu appears.

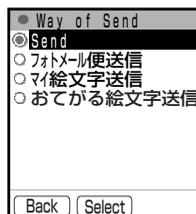

## 8 Use to select *Send* and press (Select).

➔The animation for sending e-mail is displayed and the e-mail message is sent.

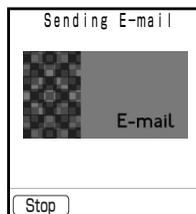

➔The message on the right appears to indicate that the e-mail message has been sent.



# Changing Your E-mail Address



You can change the account name part of the e-mail address as indicated on the right.

E-mail address




Account name  
(can be changed)

Domain name  
(cannot be changed)

- From the E-mail menu, use to select *E-mail Setup* and press (Select).


→The E-mail Setup menu appears.

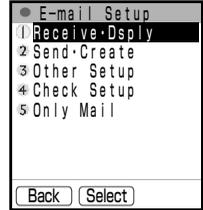


- Use to select *Other Setup* and press (Select) to display the *Connect to server?* screen. Use to select *Yes* and press (OK).



- Use to select *Eメールアドレスの変更* (Change E-mail Address), press (Select), use to select the entry box, and press (Edit).

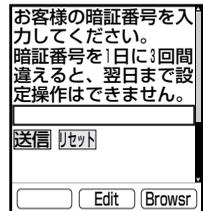

- Enter your PIN, press (OK), use to select *送信* (Send), press (Select), use to select *承諾する* (Accept), and press (Select).

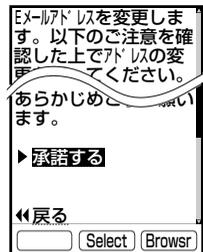

## 5 Use to select the entry box, press (Edit), and enter an account name.

→The Character Entry screen appears.



Example: Entering "taro."

t: Press  once.

a: Press  once.

r: Press  three times.

o: Press  three times.

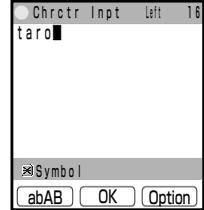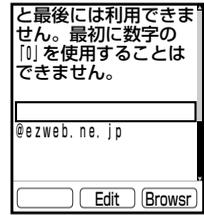


For details on entering e-mail addresses, see page 78.

## 6 Press (OK), use to select 送信 (Send), and press (Select).



### When You Cannot Change Your E-mail Address

- The e-mail address you entered is already in use. Enter another e-mail address.
- An unsupported character(s) was entered. Enter supported characters only (see page 78).

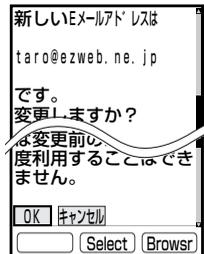

## 7 Use to select OK, press (Select).

→Check that the e-mail address has been updated and press  (OK).



For details on checking your e-mail address, see page 22.

# Rejecting Spam

You can set the mail filters to reject spam or to receive only specific mail. The mail filters can also reject mail indicated by "未承諾広告※" (unsolicited advertisement), which tends to be spam.

## Setting Mail Filters

When the standby screen is displayed, press .

- ➔ Use  to select *E-mail Setup* and press  (Select).
- ➔ Use  to select *Other Setup* and press  (Select).
- ➔ Use  to select *Yes* and press  (OK) to connect to the server.
- ➔ Use  to select *メールフィルター* (Mail Filter) and press  (Select).
- ➔ Use  to select the entry box and press  (Edit).
- ➔ Enter your PIN and press  (OK).
- ➔ Use  to select *送信* (Send) and press  (Select).

Mail Filters Setting screen



## 未承諾広告フィルター (Unsolicited Advertisement Filter) and アドレスフィルター (Address Filters)

1. Unsolicited advertisement filter  
Rejects mail that has a subject containing "未承諾広告※" (unsolicited advertisement).
2. Address filters

全受信	All mail is received.
指定受信設定	You can set the rejection of messages made to appear like they come from cell phones or PHSs when they do not. There are settings to specify from where messages can be received. You can select Internet and cell phone domain options (一括設定) and enter e-mail addresses, domains, and account names (part of the address before @) individually (個別指定).
指定拒否設定	This setting allows you to specify from where messages will be rejected. Enter e-mail addresses, domains, and account names (part of the address before @) individually.
なりすまし規制	If you select the 規制する (Restrict) option when you set 全受信 (Receive all), only messages made to appear like they come from cell phones or PHSs, when they do not, are rejected.

\* You can also set the rejection of messages from specific addresses after you have set 指定受信設定.




The setting of mail filters to reject spam is recommended.



You can also fend off spam by changing your e-mail address. For details on changing your e-mail address, see page 48.


# Using C-mail

The c-mail service enables you to use a phone number for exchanging messages with c-mail compatible au cell phones. The cell phone is capable of sending messages containing up to 100 single-byte characters (50 double-byte characters).

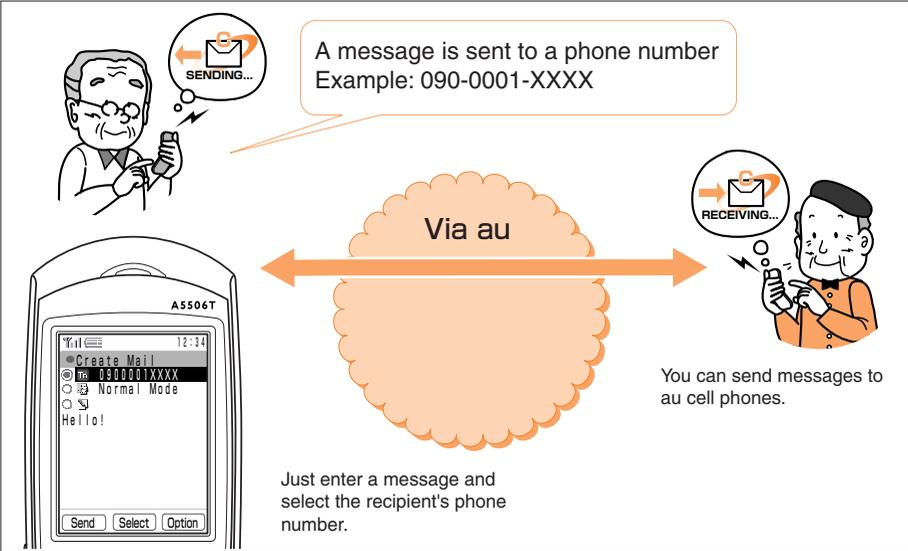

 Subscribers in the Kanto and Chubu areas do not need a separate subscription to use this service. For subscribers located outside of these areas, a separate subscription is required.


# Displaying the C-mail Menu

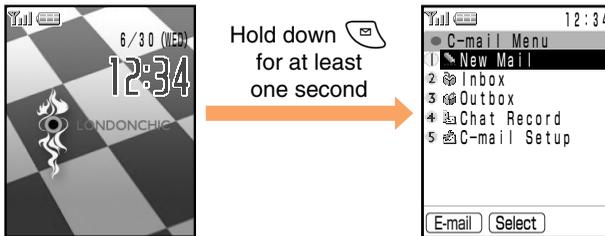

# Creating and Sending C-mail Messages


- 1 From the C-mail menu, use  to select *New Mail* and press  (Select).

➔The Body entry screen appears.

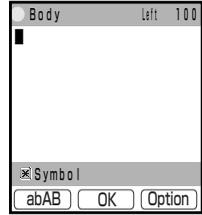

- 2 Enter the body of the message and press  (OK).

➔The Send Mode menu appears.

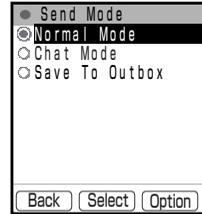

 For details on entering characters, see page 76.

## Send Modes


**Normal mode:** Enables you to send a normal c-mail message to a c-mail compatible au cell phone. (This mode is for exchanging messages one at a time.)

**Chat mode:** Enables you to exchange chat mode messages continuously in real time with a chat-mode compatible au cell phone.

**Save to Outbox:** Enables you to save an incomplete message to the Outbox.


- 3 Use  to select *Normal Mode* and press  (Select).

➔The To menu appears.

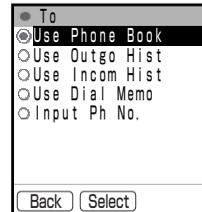

**4** Use  to select *Input Ph No.* (Input Phone Number) and press  (Select).

➔The Ph Number (Phone Number) entry screen appears.

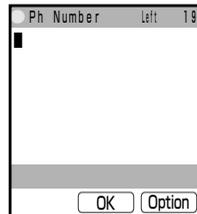

 You can also select an address to enter if you use  to select *Use Phone Book*, *Use Outgo Hist* (Outgoing History), *Use Incom Hist* (Incoming History), or *Use Dial Memo*.


**5** Enter a phone number and press  (OK).

➔The Create Mail screen appears.



**6** Press  (Send).

➔The animation for sending c-mail is displayed and the c-mail message is sent.

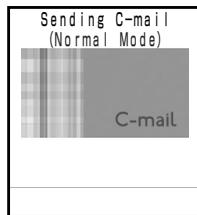

➔The message on the right appears to indicate that the c-mail message has been sent.




# Reading Received C-mail Messages

Received c-mail messages are saved to the Inbox.


## When you receive a c-mail message

➔ "Cmail x item" appears on the standby screen.

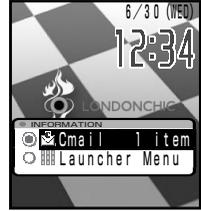

**1** Use to select *Cmail* and press .

➔The Inbox opens.

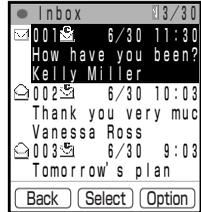


**2** Use to select the new message and press (**Select**).

➔The contents of the message appear.



## Reading a C-mail Message in the Inbox

When the standby screen is displayed, hold down for at least one second to display the C-mail menu. Then, use to select *Inbox*, press (**Select**), and use and (**Select**) to select the message you want to read from the Inbox.

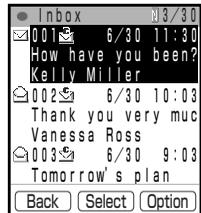

### Indicators

: The number on the right of the indicator indicates the number of unread messages.

: Indicates a read message.

: Indicates an unread message.

# Using the Camera

You can use the megapixel camera to take high-quality still images (photos) and record smooth moving images (movies). The camera is also equipped with a self-timer.

Still images (photos) and moving images (movies) functions are prepared with several types of shooting and recording modes, and by selecting these various modes, you can skillfully take photos or record movies. Images can be used for the standby screen and sent attached to e-mail.


## Camera Image Features

### Using Images




You can use images for screens such as the standby screen and call screen, as well as register them to phone book entries.

### Sending Images

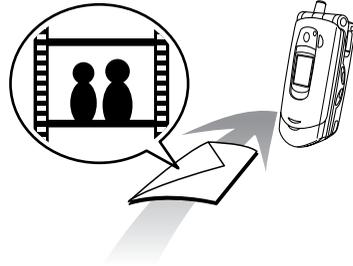

You can send images up to 100 KB attached to e-mail.

### Captured Images

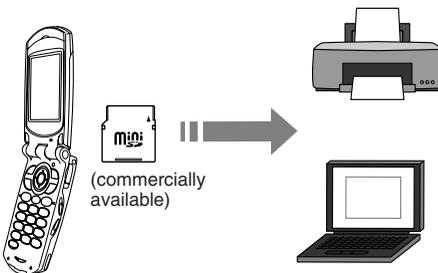

When you want to display the images on a personal computer or print them out with a printer, you can use a miniSD™ card (commercially available) to transfer the images to the personal computer or printer. You need to use a separate miniSD™ adapter (commercially available) with, for example, a personal computer equipped with an SD™ card slot.

#### Supports Exif Print

The camera supports Exif Print, a standard that enables photographic information for image files to be incorporated into the results of the printing process.



### Displaying and Printing Images


# How to Skillfully Take Photos and Record Movies

When taking still images (photos) or recording moving images (movies), frame the subject within the display or sub display and hold the A5506T steadily with both hands to avoid shaking.

## How to Take Still Images (Photos)


### Photo Mail, Wallpaper, and Multiple Modes

Orient the A5506T so as  appears in the upper right of the display.

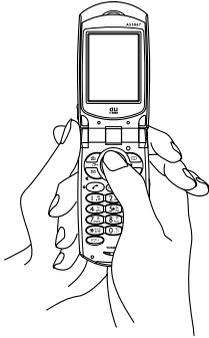

### VGA and SXGA Modes

Orient the A5506T so as  appears in the upper left of the display.

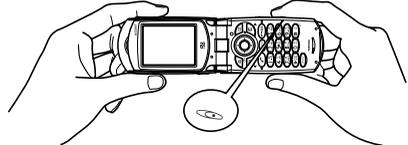


Take photos while the A5506T is horizontal.

### While the Cell Phone is Closed

This feature is mainly for taking photos of yourself.

Orient the A5506T while taking note of the location of .

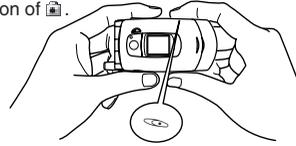


\* The illustration depicts taking photos in VGA or SXGA mode.

## How to Record Moving Images (Movies)

### Recording Moving Images (Movies)

Orient the A5506T so as  appears in the upper left of the display.

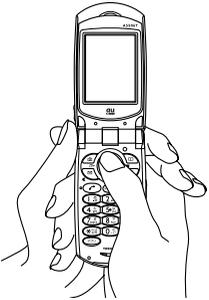

Take care not to cover the microphone during recording.

### While the Cell Phone is Closed

This feature is mainly for recording movies of yourself.

Orient the A5506T so as  appears in the upper right of the sub display.



Certain recording conditions may result in the volume being too low to hear any sound during playback.




If you press  () while the monitor screen is displayed, the key-operation guidance screen is displayed for approximately 15 seconds.

# Data Sizes

The following shows the number of photos/movies you can capture in each mode when all photos/movies are captured in the same mode and the Data folder has the same amount of space as at the time of purchase. However, the following numbers may vary depending on photography/recording conditions.

## Still Images (Photos)


Mode	Image Quality	Size of Each Image	Maximum Number of Images
Photo Mail	—	Approx. 9 KB	400
Wallpaper/Multiple	—	Approx. 30 KB	133
VGA	Fine Mode	Approx. 120 KB	33
	Normal Mode	Approx. 60 KB	66
	Mail Mode	Approx. 40 KB	100
SXGA	Fine Mode	Approx. 300 KB	13
	Normal Mode	Approx. 170 KB	23
	Mail Mode	Approx. 100 KB	40

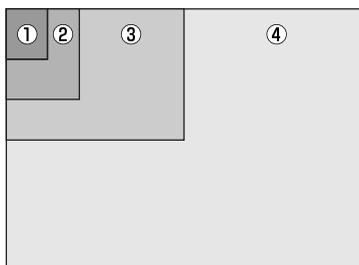

- ① Photo mail size: 144 (W) × 176 (H)
- ② Wallpaper size: 240 (W) × 320 (H)
- ③ VGA size: 640 (W) × 480 (H)
- ④ SXGA size: 1280 (W) × 960 (H)

## Moving Images (Movies)

Mode	Recording Time	Size of Each Movie	Maximum Number of Movies
S (For Mail)	15 sec.	Approx. 69 KB	57
M (For Mail)	15 sec.	Approx. 83 KB	47
M (For Video)	150 sec.	Approx. 800 KB	5

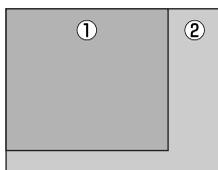

- ① S (For Mail): 96 (W) × 80 (H)
- ② M (For Mail)/ M (For Video): 128 (W) × 96 (H)

# Taking Still Images (Photos)

**1** When the standby screen is displayed, press .

➔The monitor screen appears.



To switch between photo mode and movie mode while the monitor screen is displayed, press ( / ).

**2** Point the lens at the subject and press (Shot) or (side key 2).

➔The shutter sound is heard and the photo (preview screen) appears.

➔If you do not want to save the photo, press , use to select *Yes*, and press (OK).



To turn on the mobile light, press (Side key 1). Each press of the key toggles the mobile light between on and off.

## Saving Photos

Press (Save).

➔The photo is saved and the monitor screen reappears.

As shown in the table below, the save location differs depending on the mode used and whether a miniSD™ card (commercially available) is inserted.

Mode	miniSD™ card is Not Inserted	miniSD™ Card is Inserted
Photo Mail	The Photo Folder in the Data Folder of the cell phone.	The Photo Folder in the Data Folder of the cell phone.
Wallpaper/Multiple		
VGA		The Digi Camera folder in the Data Folder of the miniSD™ card.
SXGA		

If you do not save a photo within approximately 60 seconds, the standby screen reappears. The next time you press , "Have unsaved image. Display" appears. However, if the power is turned off, the photo is deleted.

The format used for the titles of photos in the Data Folder is as shown below. Example:

040630 1330 01

Date: June 30, 2004    Time: 13:30    Serial number: First photo

There are five photo modes: Photo Mail, Wallpaper, VGA, SXGA, and Multiple.

## Sending Photos Attached to E-mail Messages

For details, see page 63.

# Viewing Still Images (Photos)


- 1 When the standby screen is displayed, press .

→The monitor screen appears.



- 2 Press  (Option), use  to select *Photo Data*, and press  (Select).

→The Photo Folder opens.

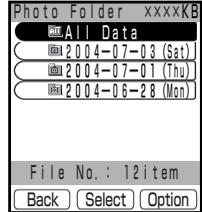


- 3 Use  to select the folder containing the photo you want to view and press  (Select).

→The folder data appears.



- 4 Use  to select the photo you want to view and press  (Play).

 →The photo appears.



 You can send the photo attached to an e-mail message if you press  (Option), use  to select *Attach E-mail*, and press  (Select).

# Recording Moving Images (Movies)

- 1 When the standby screen is displayed, hold down  for at least one second.

➔The monitor screen appears.



 To switch between movie mode and photo mode while the monitor screen is displayed, press  ().

- 2 Point the lens at the subject and press  (Rec) or  (side key 2).

➔The recording start sound is heard and  REC lights when recording starts.



 To turn on the mobile light, press  (Side key 1). Each press of the key toggles the mobile light between on and off.

## Stopping Recording

Press  (Stop).

## When you stop recording or the recording time elapses

The recording end sound is heard and the first frame recorded (preview screen) appears.

➔If you do not want to save the movie, press , use  to select *Yes*, and press  (OK).



Preview screen

## To play back a movie before it is saved

Press , use  to select *Play*, and press  (Select).

## Saving Movies

Press  (Save).

➔The movie is saved and the monitor screen reappears.



As shown in the table below, the save location differs depending on the mode used and whether a miniSD™ card (commercially available) is inserted.


Mode	miniSD™ card is Not Inserted	miniSD™ Card is Inserted
<b>S (For Mail)</b>	The Movie Folder in the Data Folder of the cell phone.	The Movie Folder in the Data Folder of the cell phone.
<b>M (For Mail)</b>		
<b>M (For Video)</b>		The Movie Folder in the Data Folder of the miniSD™ card.



If you do not save a movie within approximately 60 seconds, the standby screen reappears. The next time you hold down  for at least one second, "Have unsaved movie. Display" appears. However, if the power is turned off, the movie is deleted.



The format used for the titles of movies in the Data Folder is as shown below. Example:

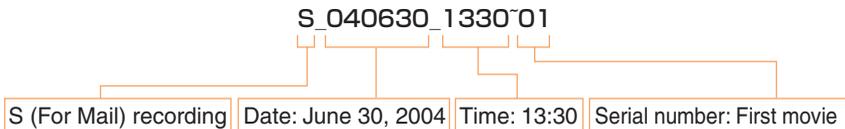

There are three movie-recording modes: S (For Mail), M (For Mail), and M (For Video).

## Sending Movies Attached to E-mail Messages

For details, see page 63.


# Playing Back Moving Images (Movies)

- 1 When the standby screen is displayed, hold down  for at least one second.



→The monitor screen appears.

- 2 Press  (Option), use  to select *Shot Data*, and press  (Select).

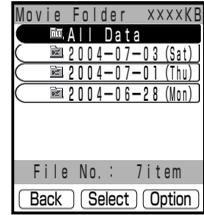

→The Movie Folder opens.

- 3 Use  to select the folder containing the movie you want to play back and press  (Select).



→The folder data appears.

- 4 Use  to select the movie you want to play back and press  (Play).



→The movie plays back.



You can send the movie attached to an e-mail message if you press  (Option), use  to select *Attach E-mail*, and press  (Select).

# Attaching Photos/Movies to E-mail Directly After Capture


**1** After capturing a photo/movie (preview screen), press  (E-mail).

→The image is attached to a message and the Create Mail screen appears.

 The  (file attachment) indicator changes automatically to  to indicate that an image has been attached. For details on creating e-mail, see page 41.

## Photo Mail Service

You can use the photo mail service to convert an image automatically to a format that can be viewed properly even if the recipient is not using a compatible au cell phone. To use the photo mail service, it is necessary to change the recipient's e-mail address to a photo mail service address. If you select **フォトメール便送信** (Photo Mail Service) from the menu on the right when sending a message, the recipient's address is changed automatically as follows.

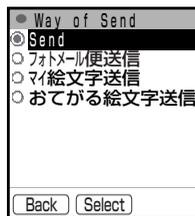

Using the Camera

Phone Company of Cell Phone	E-mail Address	E-mail Address after Change
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
Vodafone	△△△@□*.vodafone.ne.jp	△△△@□*.vodafone.nepm.jp
TU-KA and movie mail incompatible au cell phones.	△△△@ezweb.ne.jp	△△△@ezweb.nepm.jp

\* □ varies depending on the subscription region.


 **マイ絵文字送信** (My Pictogram) and **おてがる絵文字送信** (Easy Pictogram) are fee-based services. To use these services, you need to apply for the separate **絵文字め〜る** (Pictogram Mail) subscription for EZweb content.

# Using EZweb

## EZweb (Internet)


To use EZweb (Internet), you need to apply for an EZweb (Internet) subscription. If you did not apply for an EZweb subscription at the time of purchase, contact the au Customer Service Center or an au shop. Also, before use, be sure to make the initial settings. If you have not yet made the initial settings, see page 19.

EZweb is an information service that allows you to enjoy the Internet on your cell phone. With EZweb, you can obtain melodies, the latest news, and other content (information) from information sites (websites of information providers).

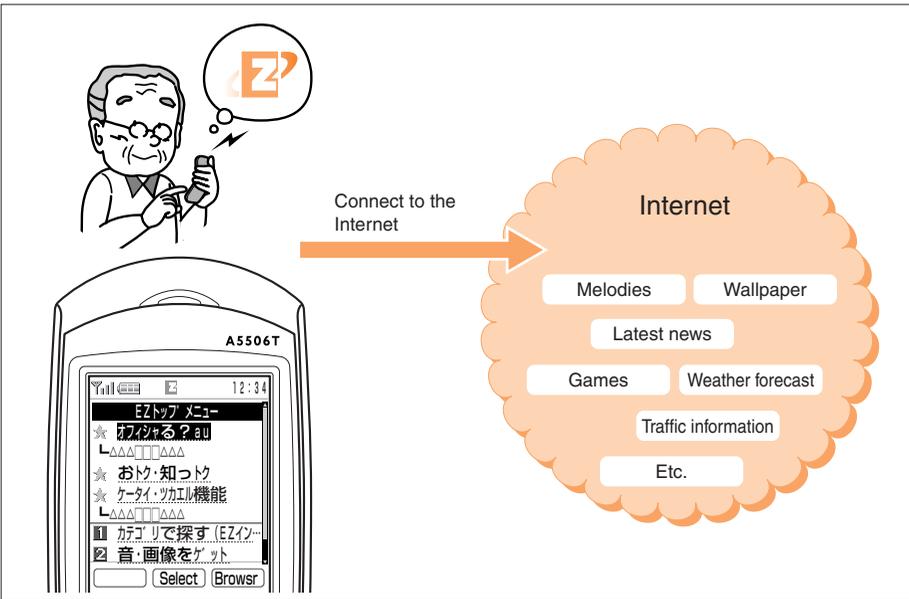


The layouts and content of screens appearing in descriptions are only examples for the purpose of explanation. The layouts and content of actual screens are subject to change.

# Accessing Sites

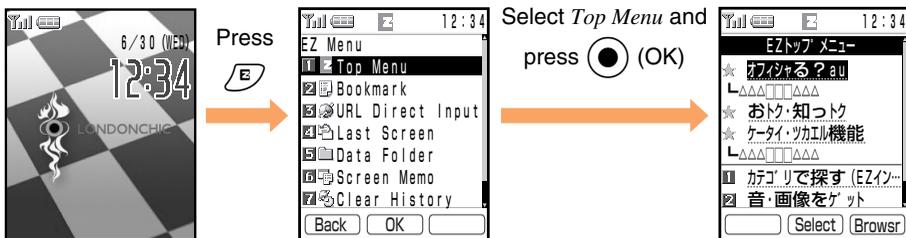

## Accessing Sites (Information Web Pages)

Use to select the site you want to access and press (OK).

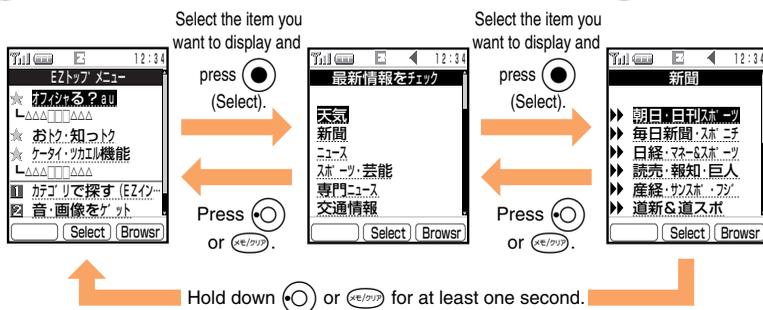

Press or to redisplay the previous screen, hold down or for at least one second to redisplay the EZ Top menu, and press to exit EZweb (Internet).

To scroll up and down, use .

When all of the information does not fit in the display, press to scroll up one page and to scroll down one page.

In addition to communication charges, some sites charge for providing information.

# Viewing Sites

You can connect to EZweb (Internet) from the EZ Top menu. EZweb provides access to useful and fun information sites (Information Web pages).



<b>オフィシャル? au</b>	Information such as the latest EZweb information recommended by au.
<b>おトク・知ッtok</b>	Sites that offer presents and prizes.
<b>ケータイ・ツカエル機能</b>	Introduces recommended useful and fun sites for cell phones.
<b>カテゴリで探す (EZインターネット)</b>	Allows you to access all official sites by category.
<b>音・画像をゲット</b>	Sites that allow you to download EZ "Chaku-Uta™" and melodies for the incoming ring tone, wallpaper, and other data.
<b>最新情報をチェック</b>	Portal to sites providing information such as news, weather, and stock prices.
<b>生活情報を調べる</b>	Portal to useful lifestyle information.
<b>ショッピングする</b>	Shopping sites offering a wide variety of goods.
<b>コミュニケーションする</b>	Portal to greeting mail, bulletin board, chat, and other sites.
<b>遊ぶ・楽しむ</b>	Provides various entertainment and fun information.
<b>検索・数字でアクセス</b>	Provides access to sites by allowing you to enter key words or Internet numbers.
<b>料金・申込・インフォ</b>	Allows you to check charges and view au information.
<b>地域情報</b>	Provides regional information.
<b>解説付トップメニュー</b>	Provides EZ Top menu explanations.



The layouts and content of screens appearing in descriptions are only examples for the purpose of explanation. The layouts and content of actual screens are subject to change.



In addition to communication charges, some sites charge for providing information.

# Bookmarking Frequently Accessed Pages

You can save the titles and URLs of up to 100 frequently accessed pages to enable easy access to them.

**1** When a page is displayed, press  (**Browser**).

→The Browser menu appears.



**2** Use  to select *New bookmark* and press  (**Select**).

→The screen for saving the title and URL appears.



**3** Press  (**Add**).

→The displayed page is bookmarked.



You cannot bookmark some pages.

# Downloading Melodies

- 1 From the Top menu, use  to select **音・画像をゲット** (Get Sounds and Images) and press  (Select).

➔The 音・画像をゲット (Get Sounds and Images) menu appears.



- 2 Use  to select **着信メロディ** (Melodies) and press  (Select).

➔The 着信メロディ (Melodies) menu appears.



- 3 Use  to select the site you want to access and press  (Select).

➔The download procedure appears. Follow the procedure.

 


 To use information sites that charge for providing information, you need to enter your EZ password. If this is your first time to use such sites, you need to set your EZ password. Keep a note of the EZ password you set to help remind you of it. For details, see page 17.

- 4 To play a downloaded melody, press  (Play).


 Downloaded data is saved automatically to the Data Folder.

 You can use the same procedure to download images for setting as wallpaper, etc.



## 5 During playback, press (Add).

→The Register to where? menu appears.

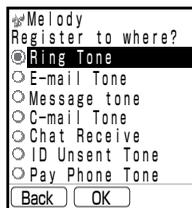

## 6 Use to select the tone you want to use the melody for and press (OK).

→The melody is set as a tone.



This procedure is only an example for the purpose of explanation and may differ from actual procedures. Follow the instructions on the site from which you want to download the data.

# Viewing Bookmarked Pages

## 1 When the standby screen is displayed, press .

→The EZ menu appears.



## 2 Use to select *Bookmark* and press (OK).

→The Bookmark list appears.



## 3 Use to select the bookmark for the page you want to view and press (Connct).

→The cell phone connects to the site and displays the page.



# Checking Charges

From EZweb (Internet), you can check call charges, communication charges, and other information.

- 1 From the Top menu, use  to select **料金・申込・インフォ** (Charges, Applications, and Information) and press  (Select).




➔The **料金・申込・インフォ** (Charges, Applications, and Information) menu appears.



To check a list of pay sites that you have used, select **有料サービス利用情報** (Information on Pay Sites Used).

- 2 Use  to select **料金照会** (Check Charges) and press  (Select).

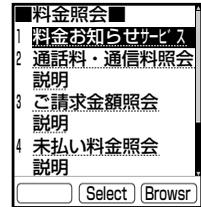


➔The **料金照会** (Check Charges) menu appears. Select the items you want to check.

# EZnaviWalk

To use EZnaviWalk, you need to apply for an EZweb (Internet) subscription. If you did not apply for an EZweb subscription at the time of purchase, contact the au Customer Service Center or an au shop. Also, before use, be sure to make the initial settings. If you have not yet made the initial settings, see page 19. EZnaviWalk has the following features.


## EZnaviWalk Features

### Current Map

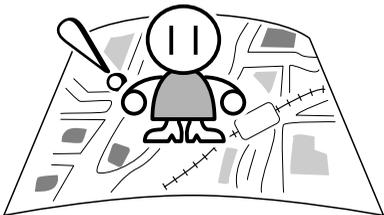


Shows your current position on a map in real time.

### Outing Menu

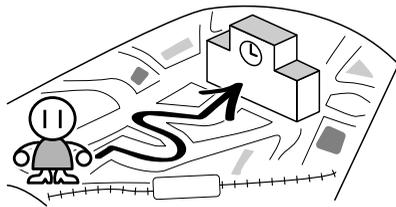


Displays the menu items of various navigation services useful for an outing.

## GPS Information

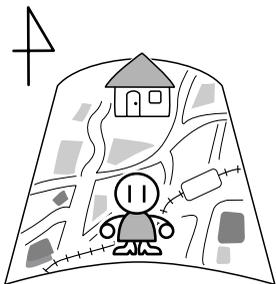

This easy-to-operate feature navigates you from your current position to your home.

### Go Home

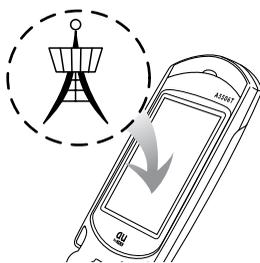

Register the information of places to navigate to such as places you visit frequently.

### My Spot



Create mail to notify somebody of your current position.

### Current Mail



The EZnaviWalk application is required to use EZnaviWalk. If you do not have the application, the cell phone will download it automatically when you attempt to use EZnaviWalk. Follow the on-screen instructions.




Registration with the EZnaviWalk service (pay service) is required to use EZnaviWalk.



The layouts and content of screens appearing in descriptions are only examples for the purpose of explanation. The layouts and content of actual screens are subject to change.

## Cell Phone with Navigation System!

EZnaviWalk is a full-fledged pedestrian navigation system to guide you to your destination. It includes various easy-to-use features to help when you are on an outing or lost. Let's try it out.

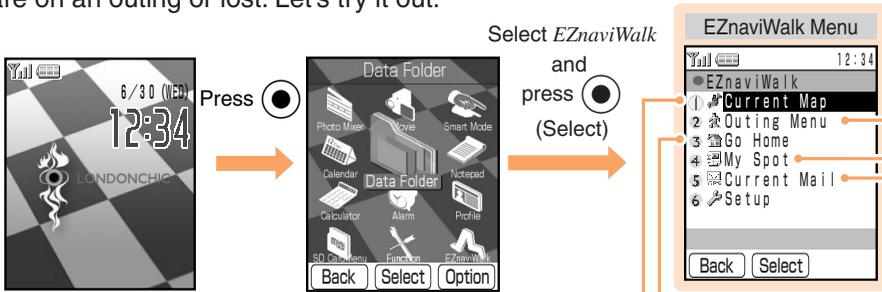

### ① When you want to know where you are, use Current Map.


Use this feature to find out where you are when you first visit somewhere or are lost. Just selecting *Current Map* displays a map of your current location in real time.



Your first positioning result is indicated by ★. Once the map has been displayed, your current position is continuously obtained and then indicated by in real time.

### ③ When you want to know the way home, use Go Home.

No matter where you are, you will receive easy-to-follow navigation information on the route home if you have registered the location of your home beforehand. This feature is also extremely useful for finding out where to change trains and scheduled arrival times.

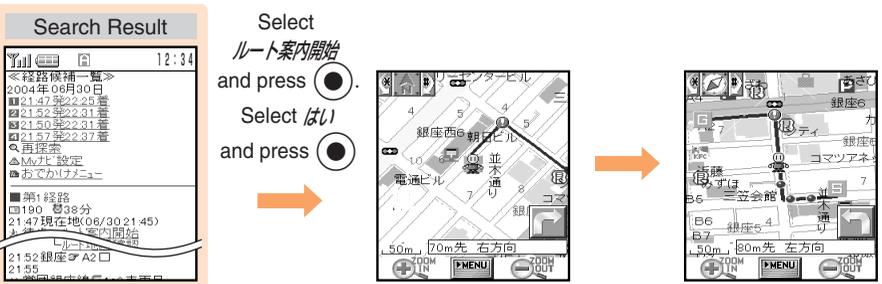

## ② When you are on an outing, use Outing Menu.

### ●おすすりスポット (Recommended Spots)

Introduces popular spots for people who want to always go to different places, such as people dating.

### ●電車／終電ナビ (Train Schedule/Last Train Navigation)

Search for information on changing trains and the time of the last train by specifying departure and arrival stations.

### ●地図検索 (Map Search)


Use various search methods to find a place. You can also register a place as a new My Spot entry.

### ●道路交通情報 (Road Traffic Information)

Use the vehicle information and communication system to check traffic information on any of the main roads nationwide in real time.

## ④ When you find a place you like, register it as a My Spot entry.


Register places you go to frequently and enjoyed (home, company, friend's house, store, etc.) so as to easily navigate to them from wherever you are.

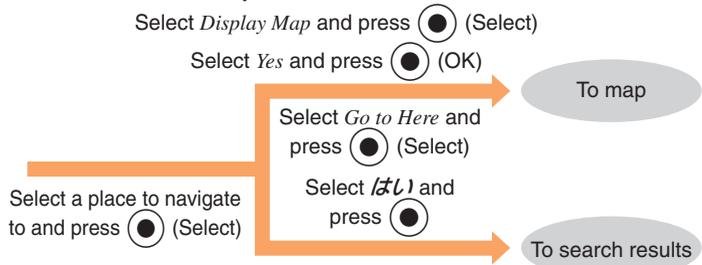

## ⑤ When you want to let somebody know where you are, use Current Mail.

When, for example, you have arranged to meet somebody, send a message to let the person know your current location. The person can then navigate to your location (EZnaviWalk compatible cell phones only).

### ●Sending message

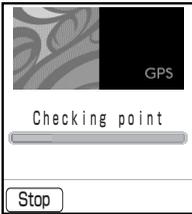

Press (OK)



Press (Send)

Select the way of sending the message and press (Select)



The Current Mail is sent

### ●Once received



Select the URL and press (Select)



Select *Display Map* and press (Select)

Select *Yes* and press (OK)

Select *Go to Here* and press (Select)

Select *はい* and press (Select)

To map

To search results

# Registering Your Current Location as Your Home (My Spot)

Register the information of places you go to frequently and enjoyed (home, company, friend's house, store, etc.) to My Spot and use that information to check maps of the surrounding areas.


- 1** From the EZnaviWalk menu, use  to select *My Spot*, and press  (Select).

➔The My Spot menu appears.



- 2** Use  to select *Home*, press  (Option), use  to select *Add GPS Info*, and press  (Select).

➔The Pick GPS Info menu appears.

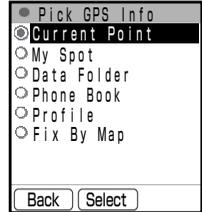

- 3** Use  to select *Current Point*, press  (Select) to obtain the GPS information, and press  (OK).

➔Your current location is registered as your home.





# Entering Characters

## Character Entry Modes

When a character entry screen is displayed, you can select the character entry mode if you press .

### Menu Items

Kanji: Kanji conversion mode

a A: Double-byte alphanumeric mode


abAB: Single-byte alphanumeric mode

1 2: Double-byte number mode

1234: Single-byte number mode

Use  to select a character entry mode and

press  (Select).

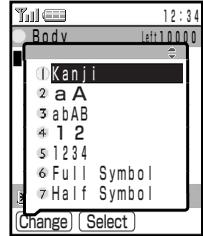

## Entering Single-byte Alphanumeric Characters



Before you enter single-byte alphanumeric characters, switch to the single-byte alphanumeric mode.

You can use the keys  to  to enter characters. More than one character is assigned to each key. For example, each press of  changes the displayed character to the next character assigned to the key in the order of a → b → c → A → B → C → 2.

The following table shows the key assignment for entering characters.


Key	Number of Times to Press the Key											
	1	2	3	4	5	6	7	8	9	10	11	12
	.	@	—	—	/	:	~	?	,	'	!	1
	a	b	c	A	B	C	2					
	d	e	f	D	E	F	3					
	g	h	i	G	H	I	4					
	j	k	l	J	K	L	5					
	m	n	o	M	N	O	6					
	p	q	r	s	P	Q	R	S	7			
	t	u	v	T	U	V	8					
	w	x	y	z	W	X	Y	Z	9			
	0											
	Single-byte symbols (switches an unconfirmed character between uppercase and lowercase)											
	Adds a line break and displays characters in the opposite order											

When you change your e-mail address, you cannot use the characters in  for the account name (part of the address before @).

## Entering Characters Assigned to the Same Key Consecutively

After you enter the first character, press  to move the cursor (■) to the right and then enter the next character.

Example: Entering "ab"

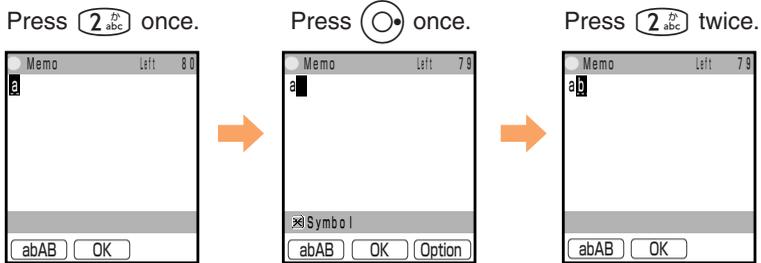

## Deleting Characters

To delete one character at a time, move the cursor to the character you want to delete and press . To delete all characters after the cursor, hold down  for at least one second. If there are no characters after the cursor, holding down  for at least one second deletes all characters.

## Starting a New line

Press .

➔ You cannot add a line break in the c-mail entry screen and some other entry screens.

# Entering E-mail Addresses



Before you enter an e-mail address, switch to single-byte alphanumeric mode.

## E-mail Address Compatible Characters

For the account name (part before @), you can enter up to 20 single-byte alphanumeric characters including hyphens (-) and periods (.). However, you cannot enter periods consecutively or at the beginning or end, or enter a zero (0) at the beginning.

## How to Enter E-mail Addresses



To enter ".co.jp," etc., you can use the Sentence Category menu.

Use to to enter characters and numbers.

Example: Entering "taro.23@toshiba.co.jp" for the recipient's e-mail address

1

### Enter "taro.23."

t : Press once.

a : Press once.

r : Press three times.

o : Press three times.

. : Press once.

2 : Press and press once.

3 : Press and press once.



2

### Enter "@".

@ : Press twice.




### 3 Enter "toshiba" and press (OK).

- t : Press  once.
- o : Press  three times.
- s : Press  four times.
- h : Press  twice and press .
- i : Press  three times.
- b : Press  twice and press .
- a : Press  once.



### 4 Press , use to select *Sentence*, and press (Select).

➔The Sentence Category menu appears.

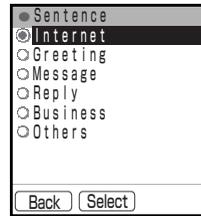

### 5 Use to select *Internet* and press (Select).

➔The Internet menu appears.



### 6 Use to select *.co.jp* and press (Select).

➔".co.jp" is entered.




 Press  once to enter "." and press  twice to enter "@".

# Entering Pictograms

**1** When a character entry screen is displayed, press  (abAB).

➔The character entry mode menu appears.

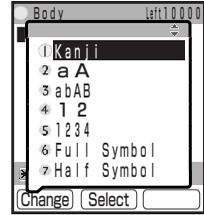

 You can also enter symbols, emoticons, and useful sentences (fixed text) from the character mode entry menu.

**2** Use  to select   and press  (Select).

➔The Pictogram screen appears.



**3** Use  to select the pictogram you want to enter and press  (Select).

➔The pictogram is entered in the character entry screen.



 You can enter pictograms consecutively if you press  (Repeat) instead of  (Select).

 Pictograms are not displayed properly on non-au cell phones, personal computers, and other devices.

# Other Features

In addition to the features described in this manual, the A5506T also has the following useful features.

## Only Mail

Send a message with a movie or photo attachment to a specific recipient without opening the A5506T.

## Cuckoo Clock

On the hour, a movie is played on the sub display to inform you of the time.

## EZ Chaku-Uta™

Set a song of an artist as is as an incoming ring tone.

## Movie Setting

Set a movie you recorded yourself as an incoming ring tone or incoming screen.

## Edit Movie

Add subtitles (2 lines of 10 characters) and record a voiceover after recording a movie.

## EZ Applications (BREW™)

Enjoy various applications including high-volume games rich in expressive features and standby applications.

## Photo Mixer

Use an animation template with melody to create your own original animation from a mixture of photos and text. You can send the animation attached to e-mail.

## Smart Mode

By switching to smart mode, you can ensure cell phone operation is simple by limiting functions to those used frequently such as the phone, phone book, camera, mail, and EZweb (Internet).

# Troubleshooting

Symptom	Check	Measure	Reference Page
Cannot turn the power on.	● Is the battery pack charged?	Charge the battery pack.	Page 10
	● Did you hold down  for at least one second?	Hold down  for at least one second.	Page 11
Cannot make calls.	● Is  (out of range indicator) displayed on the display?	Fully extend the antenna, move to a location where  is not displayed, and try again.	Page 11
	● Did you enter the phone number starting with the area code?	When making a call to a phone other than a cell phone, you need to enter the area code first even if you are inside the same area.	Page 23
	● Is the antenna extended?	Hold the tip of the antenna and fully extend the antenna.	Page 11
	● Is the power turned on?	Hold down  for at least one second.	Page 11
Cannot receive calls.	● Is  (out of range indicator) displayed on the display?	Fully extend the antenna and move to a location where  is not displayed.	Page 11
	● Is the power turned on?	Hold down  for at least one second.	Page 11
No response when a key is pressed.	● Is the power turned on?	Hold down  for at least one second.	Page 11
A warning tone sounds and the power turns off.	● Is there enough power left in the battery pack?	Charge the battery pack.	Page 10
Calls are answered automatically.	● Is the voice memo set?	Hold down  for at least one second to cancel the voice memo.	Page 28
Cannot hear the other party.	● Is the earpiece volume level too low?	Use  to increase the volume during a call.	Page 33
When making a call, a beeping sound is heard from the earpiece and a connection cannot be established.	● Are you out of the service area or in a location where the signal is too weak?	Fully extend the antenna, move to a location where  (out of range indicator) is not displayed, and try again.	Page 11
	● Is the wireless line busy or the recipient in the middle of a call?	End the call and try again later.	Page 23
The incoming indicator flashes but the ring tone does not play.	● Is the manner mode set?	Hold down  (Side key 2) for at least one second to cancel the manner mode.	Page 27
	● Is the incoming call ring tone set to  (silent indicator)?	Increase the volume of the incoming call ring tone.	Page 32
Cannot charge the battery pack.	● Is the Toshiba AC adapter 02 inserted in the power outlet?	Insert the adapter in the power outlet properly.	Page 10

# Index

## A

- Accessories ..... 8
- Antenna ..... 11

## B

- Basics ..... 12
- Battery level ..... 11
- Battery pack ..... 8, 9, 10

## C

- Calls
  - 184/186 ..... 23
  - Answering a call ..... 24
  - Making a call ..... 23
  - Redialing and Returning Calls ..... 25
- Camera
  - Moving images (movies) ..... 60
  - Still images (photos) ..... 58
  - Using the camera ..... 55
- Charging the battery ..... 10
- Checking charges ..... 70
- C-mail ..... 51
  - Creating and sending c-mail ..... 52
  - Reading c-mail ..... 54

## D

- Desktop holder ..... 8, 10
- Display ..... 16
- Domains ..... 48
- Downloading melodies ..... 68

## E

- Earpiece volume ..... 33
- E-mail ..... 40
  - Attaching images (photos, movies) ..... 63
  - Creating and sending e-mail ..... 41
  - Initial settings ..... 19
  - New mail ..... 44

- Reading e-mail ..... 44
- Replying to e-mail ..... 46
- E-mail address ..... 22
  - Changing e-mail address ..... 48
  - Entering e-mail address ..... 78
- Entering characters ..... 76
  - Character entry modes ..... 76
  - Consecutively entering characters assigned to the same key ..... 77
- Etiquette ..... 1
- EZnaviWalk ..... 71
  - Current mail ..... 71, 73
  - Current map ..... 71, 72
  - Go home ..... 71, 72, 75
  - My spot ..... 71, 73, 74
  - Outing menu ..... 71, 73
- EZ Top menu ..... 65, 66
- EZweb ..... 64
  - Accessing sites ..... 65
  - Initial settings ..... 19

## I

- Images (photos, movies)
  - Attaching to e-mail ..... 63
  - Photo mail service ..... 63
- Incoming history ..... 25
- Incoming indicator ..... 9, 24
- Indicators ..... 16
- Initial settings ..... 18, 19
- Internet ..... 64
  - Sites ..... 65, 66

## K

- Keys ..... 12

## L

- Language ..... 20
- Launcher menu ..... 14

**M****Mail**

- C-mail .....51
- Creating and Sending c-mail ..52
- Creating and Sending e-mail ..41
- E-mail .....40
- Reading c-mail .....54
- Reading e-mail .....44
- Replying to e-mail.....46

**Manner mode** .....27

**miniSD™ card** .....9

**Moving images (movies)**

- Attaching to e-mail .....63
- Playback .....62
- Recording .....60

**N**

**Names of Parts** .....9

**O**

**One-ring calls** .....26

**Option menu** .....15

**Outgoing history** .....25

**P**

**Phone book** .....34

- Editing entries .....38

- Making calls .....37

- Saving data .....34

- Saving phone numbers from  
incoming/outgoing history ...39

**Phone Number** .....22

**Pictograms** .....80

**Playback/viewing**

- Movies .....62

- Photos .....59

- Voice memo .....29

**Power**

- Turning on .....11

- Turning off .....11

**R****Ring tone**

- Adjusting volume .....32

- Changing ring tone .....30

**S**

**Signal** .....11

**Sites** .....65, 66

- Saving bookmarks .....67

- Viewing bookmarked pages ...69

**Soft keys** .....9, 13

**Spam** .....50

**Standby screen** .....11

**Still images (photos)**

- Attaching to e-mail .....63

- Photo mails service .....63

- Taking photos .....58

- Viewing photos .....59

**Sub Display** .....16

**V****Voice memo**

- Playback .....29

- Setting .....28

**W**

**Warp function key** .....9, 13

**What the cell phone features** .....2

**For inquiries, call:**  
au Customer Service Center (General Information)

**From regular phones:**

 **0077-7-111**

(toll free)

**From au cellphones**

**157 area code not required**

(toll free)

Pressing "zero" will connect you  
to an operator, after calling "157"  
on your au cellphone.

Sales: KDDI CORPORATION

OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by: **TOSHIBA CORPORATION**



モバイルリサイクルネットワーク  
www.phs.or.jp

Cellphone and PHS operators collect and recycle unused  
telephones, batteries and battery chargers at stores bearing the  
♻️ logo regardless of brand and manufacturer to protect the  
environment and reuse valuable resources.

June 2004 Edition