

# Basic Manual



## A5509T

by TOSHIBA

Contents/  
Getting Ready

Making and  
Answering Calls

Character Input

Phone Book

Mail

Camera

EZweb

EZnaviWalk

Limit Mode

Smart Mode

Others/Index

**au** by KDDI

# Introduction

Thank you for purchasing the A5509T. Before using your A5509T, be sure to read the A5509T Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

## Printed Manuals for the A5509T (Japanese)

The A5509T comes with the Basic Manual and Instruction Manual.

### A5509T Basic Manual



Equivalent to this English PDF manual.

### A5509T Instruction Manual



English version is not available.

The following manuals are also available on the au homepage.

- Keyword searchable au Online Manual

(<http://www.au.kddi.com/manual/index.html>)

You can also access the au Online Manual from EZweb.

<EZweb Access>  ⇒  Top Menu

⇒  料金・申込・インフォ (Charges, Applications, and Information)

⇒ auオンラインマニュアル (au Online Manual)

## Note

- The typeface and shape of fonts used for characters in the sample screens in this manual may differ from those used for characters in actual screens, or some characters may be omitted.

# Cell Phone Etiquette

## Etiquette for Cell Phone Use

- The cell phone always emits weak radio waves when power is on.
- Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

### ● The use of cell phones is not allowed in some places

- Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
- Using a cell phone in an aircraft is prohibited by law. Be sure to turn the cell phone off.



### ● Radio waves from cell phones may interfere with medical electrical equipment

- Some people close to you in busy places such as crowded trains may be using a pace-maker. Turn the cell phone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.



### ● Be considerate of where you use the cell phone and how loudly you talk

- Do not make calls from cinemas, theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode to prevent others around you from being inconvenienced by ring tones for incoming calls or mail.



- Do not use the cell phone in places where you will be in the way of others.
- Move to areas where you will not inconvenience others on trains or in hotel lobbies.
- Take care to avoid talking in a loud voice.



- Obtain the permission of other people before you take their photos with the cell phone's camera.



- Do not use the cell phone's camera for recording information in bookstores and other locations where taking photos are not permitted.

# Cell Phone Basics

## Cell Phone Features

### Making/ Answering Calls

Your cell phone is packed with useful features such as a phone book, call history, and manner mode.

 


Page  
**26**

### Limit Mode/ Smart Mode

You can select a mode that restricts operation, or a mode that allows simplified operation.

Pages  
**78,84**

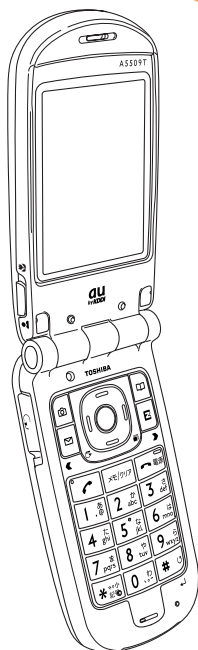

### Camera

You can take photos and movie clips and then send them easily by e-mail.



Page  
**59**

### Mail

You can send mail to other cell phones and personal computers.



Page  
**47**

### EZnaviWalk

A map and voice information lets you know your current location and the route to your destination.

Page  
**74**

### EZweb

You can download "Chaku-Uta®," wallpaper, and other data.




Page  
**67**

## Manner Mode and Voice Memo

### Manner Mode

You can use manner mode to turn off the incoming call ring tone and other tones so as not to inconvenience other people.



When the standby screen is displayed, hold down  (side key 2) for at least one second.

 
Page

30

### Voice Memo

When you cannot answer calls, the cell phone can play an answering message (Japanese) and record memos.



When the standby screen is displayed, hold down  for at least one second.

Page

31

## Checking the Power, Signal Strength, and Battery Level

### Normally, you should leave the cell phone turned on



 
To make and receive calls, you need to turn on power.

Hold down  for at least one second.


Page

11

### If a signal is not being received, you cannot talk on the cell phone



Even in service areas, there are some places where it is difficult to receive a signal.

 indicates the signal strength.


Page

11

### Pay attention to the battery level



When the battery level is low, the cell phone may not function properly.

 indicates the battery level.

Page

11

## Do not use the cell phone while driving!

Holding a cell phone, talking on a cell phone, looking at a cell phone display to send mail or perform some other operation while driving is against the law in Japan.

(Revised Traffic Control Law, effective November 1, 2004)



× Looking at mail on a cell phone display.







 
× Holding a cell phone in your hand while talking.

## Turn off your cell phone or put it in Drive Mode while driving.

### Drive Mode

In Drive Mode, a message that says "ただいま移動中ですので電話に出ることができません。…" is played when a call is received, and the cell phone uses voice memo to record a message.

When the standby screen is displayed, press  (side key 2), use  to select  Drive Mode, and then press  (Select).

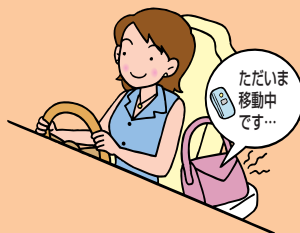

## Spam and One-ring Calls

### If you receive spam:

You can set the mail filters to reject only specific mail or mail indicated by 未承諾広告※ (unsolicited advertisement), which often tends to be spam.

The following mail filters are available for rejecting spam:

- ・ 未承諾広告フィルター  
(Unsolicited advertisement filter)
- ・ アドレスフィルター (Address filters)
  - 指定拒否設定  
(for not receiving specific mail)
  - 指定受信設定  
(for receiving specific mail only)



Page

56

### If you receive a call from an unknown phone number:

It may be an attempt to get you to return a call to a service with very high charges.



Incom History			
01	N	2/14 16:00	030002XXXX
02		2/13 15:35	030001XXXX
03		2/12 14:48	Tom Daniels
04		2/11 13:30	090003XXXX

The red 📞 in the Incoming History indicates that there was a call which rang three seconds long or shorter.

Page

29



# Contents

● <b>Cell Phone Etiquette</b>	<b>1</b>
Etiquette for Cell Phone Use .....	1
● <b>Cell Phone Basics</b>	<b>2</b>
Cell Phone Features .....	2
Manner Mode and Voice Memo .....	3
Checking the Power, Signal Strength, and Battery Level .....	3
Do not use the cell phone while driving! .....	4
Spam and One-ring Calls .....	5
● <b>Contents</b>	<b>6</b>
● <b>Getting Ready</b>	<b>8</b>
Checking the Contents of the Box .....	8
Names of Parts .....	9
Charging the Battery Pack .....	10
Built-in Antenna .....	11
Turning On Power .....	11
Learning the Basics .....	12
Configuring Initial Settings .....	14
Switching the Display Language to English .....	15
Using Menus .....	16
Indicators .....	18
Initializing E-mail and EZweb .....	19
Checking Your Phone Number and E-mail Address .....	20
Changing Your E-mail Address .....	21
Using Extra Large Characters .....	23
Personal Identification Numbers and Passwords .....	25
● <b>Making and Answering Calls</b>	<b>26</b>
Making a Call .....	26
Answering a Call .....	27
Redialing (Outgoing History/Incoming History) .....	28
One-ring Calls .....	29
Turning On Manner Mode .....	30
Turning On Voice Memo .....	31
Playing a Voice Memo .....	32
Changing the Incoming Ring Tone .....	33
Adjusting the Incoming Ring Tone Volume .....	35
Adjusting the Earpiece Volume during a Call .....	36
● <b>Character Input</b>	<b>37</b>
Character Entry Modes .....	37
Entering Single-byte Alphanumeric Characters .....	37
Entering E-mail Addresses .....	39
Entering Pictograms .....	41
● <b>Phone Book</b>	<b>42</b>
Saving a Phone Book Entry .....	42
Dialing from the Phone Book .....	44
Editing Phone Book Entries .....	45
Saving a Phone Number from the Incoming/Outgoing History .....	46



 
● <b>Mail</b>	<b>47</b>
Using E-mail	47
Using C-mail	47
Creating and Sending E-mail Messages	48
Reading Received E-mail Messages	51
Reading an E-mail Message with an Attached Photo	53
Replying to Received E-mail Messages	54
Rejecting Spam	56
Creating and Sending C-mail Messages	57
Reading Received C-mail Messages	58
● <b>Camera</b>	<b>59</b>
Camera Image Features	59
Photo and Movie Shooting Tips	60
Data Sizes	61
Taking a Photo	62
Recording a Movie	63
Viewing Photos/Movies	65
Attaching Photos/Movies to E-mail Messages	66
Photo Mail Service	66
● <b>EZweb</b>	<b>67</b>
What is EZweb?	67
Accessing Sites	68
Viewing Sites	69
Downloading Chaku-Uta(TM)	70
Bookmarking Frequently Accessed Pages	72
Viewing Bookmarked Pages	73
Checking Charges	73
● <b>EZnaviWalk</b>	<b>74</b>
EZnaviWalk Features	74
Using EZnaviWalk	76
Registering Your Home Location	76
Looking Up the Way Home	77
● <b>Limit Mode</b>	<b>78</b>
Changing the Limit Mode Password	78
Setting the Use Limit	80
Turning Limit Mode On and Off	82
Checking the Limit Mode Status of Use	83
● <b>Smart Mode</b>	<b>84</b>
Entering Smart Mode	84
Exiting Smart Mode	85
Using the Smart Mode Launcher Menu	86
Saving a Phone Book Entry Using Smart Mode	88
One-touch Phone Number Recording	90
One-touch Dialing	91
Creating and Sending E-mail/C-mail Messages in Smart Mode	92
Using the Camera in Smart Mode	94
● <b>Other Functions</b>	96
● <b>Troubleshooting</b>	97
● <b>Index</b>	98

# Getting Ready



## Checking the Contents of the Box

The box contains the cell phone and accessories.

- Cell phone
- Battery pack (attached to the cell phone)

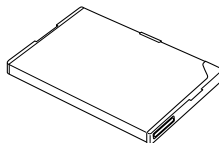

  - Desktop holder
- Toshiba AC adapter 02

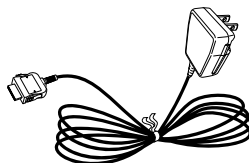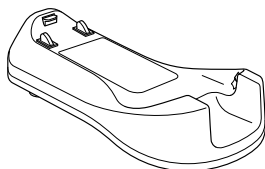



- Basic Manual (Japanese)
- Instruction Manual (Japanese)



- Warranty (Japanese)
- Safety Precautions (Japanese)




# Names of Parts

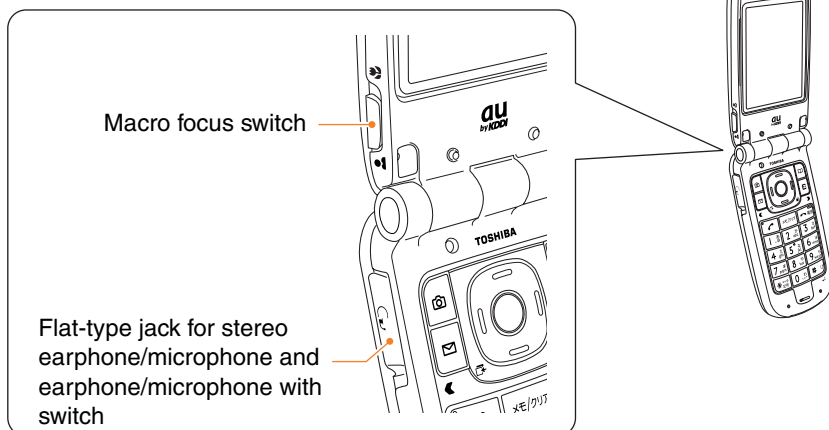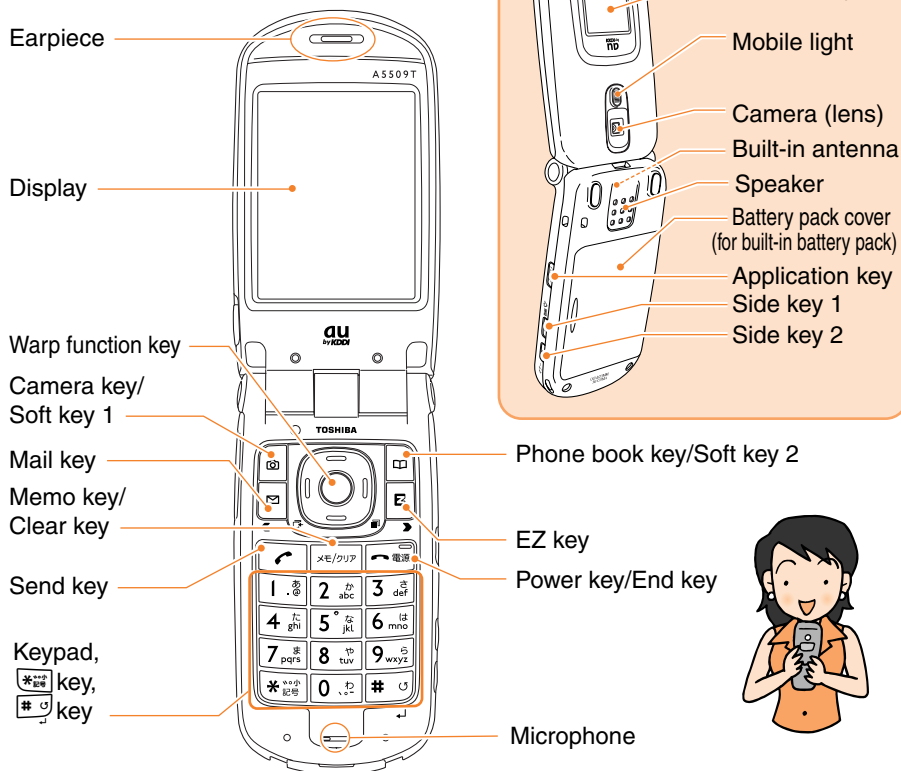  

## Charging the Battery Pack

The battery pack is not fully charged at the time of purchase.

 Be sure to charge the battery pack before using the cell phone for the first time.

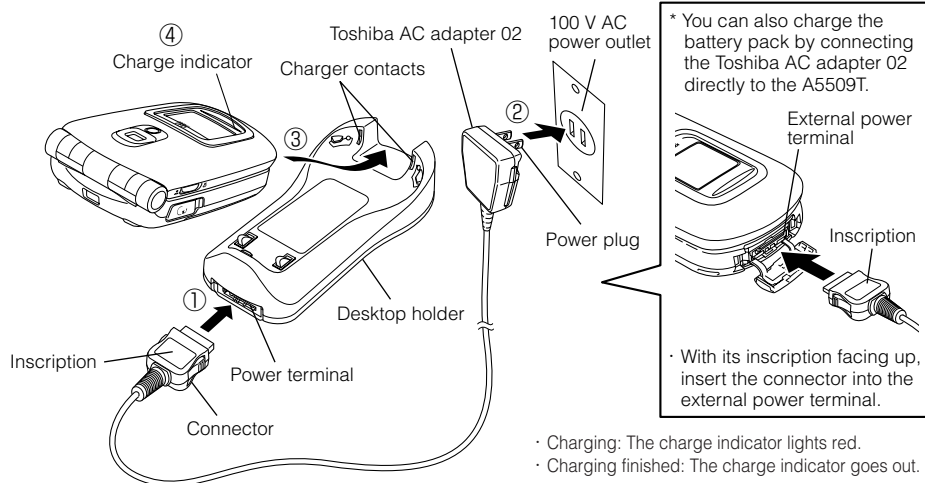

### 1 Connect the Toshiba AC adapter 02 to the desktop holder.

- With inscription of the connector facing up, connect the Toshiba AC adapter 02 to the power terminal of the desktop holder.

### 2 Connect the Toshiba AC adapter 02's power plug to a 100 V AC power outlet.

### 3 While the A5509T is closed and the battery pack attached, insert it into the desktop holder as shown in the figure.

### 4 Confirm that the charge indicator lights.

#### Note

 
- Hold the desktop holder while removing the A5509T.

## Built-in Antenna

The antenna of the A5509T is built into its case.

### Note

- Since the antenna of the A5509T is built into the case, there is no protruding antenna. Touching or covering the area around the built-in antenna may weaken a signal. In particular, do not affix any stickers or other decorations in the area around the built-in antenna.

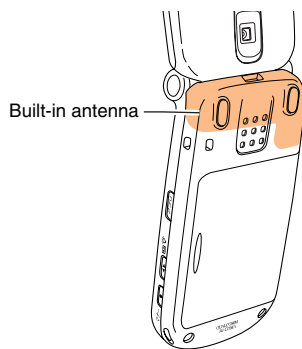






## Turning On Power

# 1

Hold down  for at least one second.








Check the signal strength.

				
Strong	Medium	Weak	Very weak	Out of range

- You cannot receive or make calls if  is displayed.

Check the battery level.

				
Full	Low	Very low (requires charging)	Empty	Charging

Standby screen




## Turning Off Power

Hold down  for at least one second.





 
 


 
### Note




 




- In rare cases, you may not be able to receive or make calls even though  (Out of range) is not displayed for the signal strength indicator.

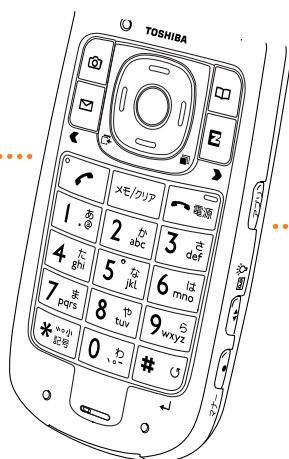
# Learning the Basics

 
## Key Assignment

-  : Incoming History
-  : Camera
-  : E-mail
-  : Make and receive calls
-  : Phone number and character input
-  : Phone number and character input




-  : Outgoing History
-  : Phone Book
-  : EZweb
-  : Voice memo setting/delete; character delete; operation cancel
-  : Power on/off; end call
-  : EZ application startup
-  : Mobile light on/off
-  : Manner mode

-  : Macro focus switch

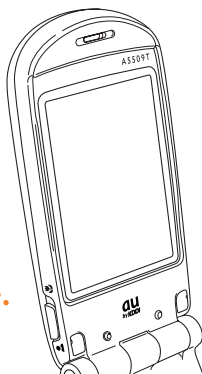

## Warp Function Key

 
Use the up, down, left, and right parts of the key to select items and to move the cursor. Press the center of the key to confirm a selected item.

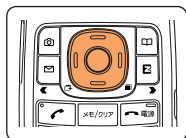

	Selects items, and moves the cursor up, down, left and right.
	Confirms the selected item or starts the selected operation.

## Soft Keys

 
When indications such as the following are displayed at the bottom of the display, you can press the corresponding soft keys to perform the indicated operations. The soft key indications vary depending on the screen.

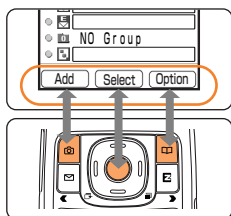

Soft key 1 	Performs the operation indicated at the bottom left of the screen.
Center key 	Performs the operation indicated in the bottom center of the screen.
Soft key 2 	Performs the operation indicated at the bottom right of the screen.

## If you lose track of where you are or if you make a mistake...

 Perform one of the following operations when you lose track of where you are or if you make a mistake while operating the cell phone.

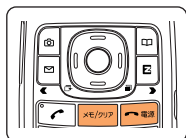


	Returns to the previous screen.
	Returns to the standby screen.

## Configuring Initial Settings

 - 1** When the standby screen is displayed, press .



Initial menu

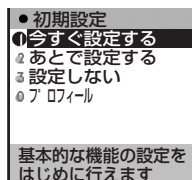

- 2** Press  **設定しない (Do Not Setup).**



Launcher menu



### Note

- Even if you do not configure the initial settings, you can still make and answer calls.
- The initial settings include changing the lock number, setting the character size, setting the Notify Call ID, and setting the call ring tone.
- You need to configure initial settings before using the cell phone for the first time only. Furthermore, you can also change each of the initial settings later.
- After configuring initial settings, you can switch the display language to English (see page 15).
- If you select **設定しない (Do Not Setup)**, the initial settings are as shown below.

Lock No.	1234	EZWeb	Normal
Telephone	Normal	Character Input	Normal
E-mail	Normal	Notify Call ID	ON
C-mail	Normal	Incoming Call	Pattern 1





## Switching the Display Language to English

 
You can switch the display language for function names and other items to English.

- 1** When the standby screen is displayed, press .

→The Launcher menu appears.




- 2** Use  to select **機能** (Function) and then press  (**選択 [Select]**).

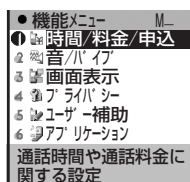

- 3** Press  **画面表示** (Display).

 →The 画面表示 (Display) menu appears.

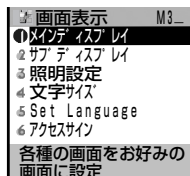



- 4** Press  **Set Language**.



→The Set Language menu appears.



## Switching the Display Language to English (continued)

- 5** Use  to select *English* and then press  (Select).



- 6** Use  to select *Alphabet* and then press  (Select).

 
→The display language is set to English.




## Using Menus

### Launcher Menu


The Launcher menu provides you with access to various A5509T functions. The Launcher menu contains the following items.

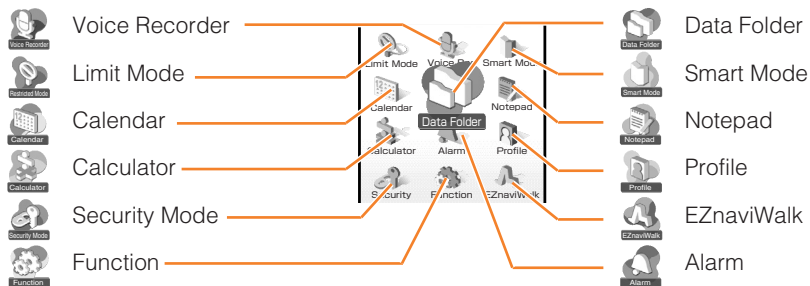


- 1** When the standby screen is displayed, press .



#### Launcher menu

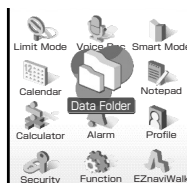 


## 2 Use to select an item.

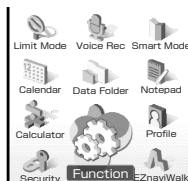 



## 3 Press (Select).

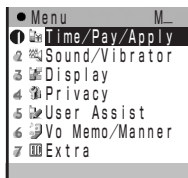 → The item selected in the Launcher menu appears.




### Note

 
- If the alert window is displayed on the standby screen, select  *Launcher Menu* and then press  to display the Launcher menu.

Alert Window



## Option Menus




An Option menu for performing various related operations will open if you press  when **Option** is displayed in a screen for configuring function settings, entering characters, or performing other operations.

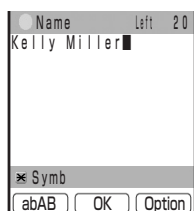

 (Option)



    (Close)

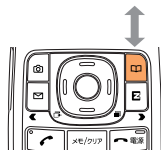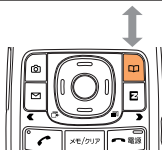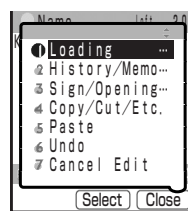


## Indicators

Display indicators keep you informed when new e-mail arrives, about the status of function settings, etc.



 Indicator	Description
①	Indicates signal strength.
②	Indicates battery level.
③	Indicates that EZweb is in use.
④	Indicates a call is in progress.
⑤	Indicates received or unread e-mail/c-mail.
⑥	— Indicates the current date and time.
⑦	Indicates that manner mode is turned on.
⑧	Indicates that voice memo or manner mode is turned on.

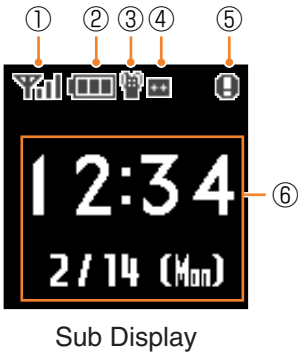

Indicator	Description
①	Indicates signal strength.
②	Indicates battery level.
③	Indicates that the manner mode is turned on.
④	Indicates that the voice memo or manner mode is turned on.
⑤	Indicates new mail or an unanswered call.
⑥	— Indicates the current date and time.

### Note

- The date and time are set automatically.
- The layouts and content of screens appearing in descriptions are only examples for the purpose of explanation and contain some indicators that cannot appear at the same time.

## Initializing E-mail and EZweb

To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

Also, before use, be sure to configure initial settings. Your e-mail address is assigned automatically when you initialize e-mail and EZweb.

- 1 When the standby screen is displayed, press .



EZwebを利用するための  
初期設定を行います  
「OK」を押してしま  
うお待ちください

- 2 Press  (OK).

➡After a short while, the screen shown to the right will appear. This indicates that the setup is complete.



ようこそEZwebへ  
お客様のEメールアドレスは  
△△△△△△△△△△△△△△@ezweb.ne.jp  
です。  
—ヒント—  
Eメールアドレスの変更は

- 3 Press  (OK).

➡The E-mail Menu appears.



### Note



- You can also perform initialization by pressing  or .

# Checking Your Phone Number and E-mail Address

 
- 1** When the standby screen is displayed, press .

→ The Launcher menu appears.


 


- 2** Use  to select *Profile* and then press  (Select).

→ Your phone number and e-mail address appear.

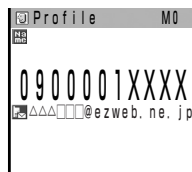


## Note

 - From the standby screen, you can also check your phone number and e-mail address by pressing  and .

## Changing Your E-mail Address

You can change the account name part of the e-mail address as indicated to the right.

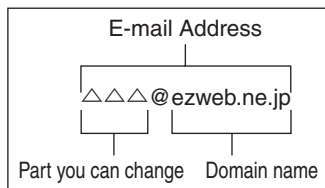



- 1** When the standby screen is displayed, press and then press **E-mail Setup**.

→The E-mail Setup menu appears.




- 2** Press **Other Setup**, use to select **Yes**, and then press (OK).

  
→The cell phone connects to the server.

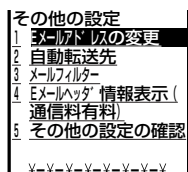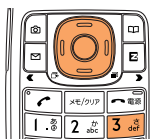

  - 3** Use to select **Eメールアドレスの変更** (Change E-mail Address), press (Select), use to select the entry box, and then press (Edit).

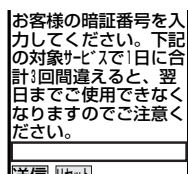

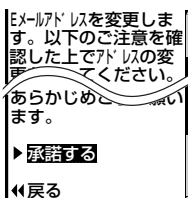

- 4** Enter your PIN, press (OK), use to select **送信** (Send), press (Select), use to select **承諾する** (Accept), and then press (Select).



- Any time the wrong PIN is entered three times during a single day, the e-mail address change operation will be disabled until the following day.
- Your PIN is the four-digit number you wrote on your subscription form.

## Changing Your E-mail Address (continued)

- 5** Use  to select the entry box, press  (Edit), and enter an e-mail address using single-byte alphanumeric characters.



と最後には利用できません。最初に数字の「0」を使用することはできません。

@ezweb.ne.jp

• For details on entering e-mail addresses, see page 39.

- 6** Press  (OK), use  to select 送信 (Send), and then press  (Select).



せん。最初に数字の「0」を使用することはできません。

@@@ @ezweb.ne.jp

送信 リセット





新しいEメールアドレスは

@@@ @ezweb.ne.jp

です。  
よろしいですか？


は変更前の  
度利用することは  
できません。

OK キャンセル

- 7** Use  to select OK and then press  (Select).



Update is complete.

• Check that the e-mail address has been updated and then press  (OK).

### Note

- Your e-mail address will not be changed if the address you enter above is already being used. If this happens, enter a different e-mail address.





## Using Extra Large Characters

 
Turning on extra large characters will display the names of callers and addressees on the Call Screen, the phone book list, etc.

- 1 When the standby screen is displayed, press .

→The Launcher menu appears.





- 2 Use  to select *Function* and then press  (Select).

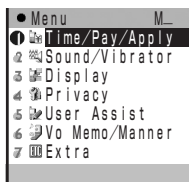


- 3 Press  *Display*.

 →The Display menu appears.

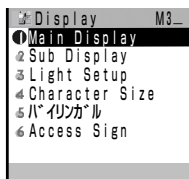

- 4 Press  *Character Size*.

 
→The Character Size menu appears.

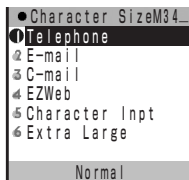



## Using Extra Large Characters (continued)

 **5** Press  *Extra Large*.

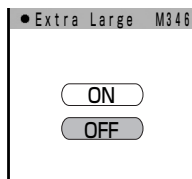→ The Extra Large setting screen appears.



**6** Use  to select *ON* and then press  (OK).



## Personal Identification Numbers and Passwords

You can use the personal identification numbers and passwords described below to restrict use of your A5509T.

Take care not to forget numbers and passwords, because they are required for performing various operations and using subscription services.

### PIN

Usage Examples	①Remotely operating the answering service and call forwarding service from a regular phone. ②Making inquiries, applications, and changes while using au customer center voice guidance, au web pages, and EZweb. ③Changing various settings from <i>Other Setup</i> of E-mail Setup.
Initial Setting	The four-digit number you wrote on your subscription form.

### Lock No.

Usage Examples	Changing various settings of the cell phone, etc.
Initial Setting	1234 (four digits)

### Limit Mode Password

Usage Examples	①Limit Mode set/cancel. ②Changing the Limit Mode password.
Initial Setting	12345678 (eight digits)

### EZ Password

Usage Examples	Concluding/canceling subscriptions for EZweb fee-based content.
Initial Setting	The number (four digits) specified when first subscribing for fee-based content.

### Premium EZ Password

Usage Examples	①Concluding/canceling subscriptions for EZweb fee-based content paid by using "まとめてau支払い" (the combined au payment service). ②Purchasing products from EZweb sites that use "まとめてau支払い" (the combined au payment service).
Initial Setting	The number (four to eight digits) specified the first time you use "まとめてau支払い" (the combined au payment service).

# Making and Answering Calls

## Making a Call

- 1** When the standby screen is displayed, use **[0]** to **[9]** to enter the phone number you want to call.



030001XXXX

- When calling to a regular phone, you also need to enter the area code.

- 2** Press **[Call]**.

- If the caller's name is in the phone book, the name is also displayed.
- When you have finished the call, press **[End Call]**.




### Note

- After you enter a phone number, you can add 184 or 186 to the phone number if you press **[Option]**, press **[2]** *Add/Off SP No...*, and then press **[1]** 184 or **[2]** 186.
  - Select **[1]** 184 if you do not want to inform the party you are calling of your phone number.
  - Select **[2]** 186 if you want to inform the party you are calling of your phone number.

# Answering a Call

## 1 To answer the call, press .

- When you have finished the call, press .





## Display When a Call is Received




The phone number of the caller appears. If the caller's name is in your phone book, the name is also displayed. When the phone number of the caller is not displayed, one of the following indicators may appear.

Indicator	Meaning
ID Unsent	The caller did not send a Caller ID.
Pay Phone	The call is from a pay phone.
Not Support	The call is from a phone that does not support Caller ID.



## Missed Call Notification

If you did not answer a call,  and  Call are displayed to let you know that you missed a call.


To check the caller's phone number, use  to select  Call and then press . You can then return the call (see page 28).








 

# Redialing (Outgoing History/Incoming History)



Example: Returning a call to a phone number in the incoming history


**1** When the standby screen is displayed, press .

- Pressing  while the standby screen is displayed displays the Outgoing History screen.
- The phone numbers are displayed in order of the most recent to the oldest.




Incom History		
01	 Kate Baker	2/14 16:00
02	 030002XXXX	2/13 15:35
03	 Tom Daniels	2/12 14:48
04	 0900003XXXX	2/12 13:30
 OutH  Info  Option		

**2** Use  to select the phone number you want to call and then press  (Info).

- If you press  (→OutH), the Outgoing History screen will be displayed.



Incom Hist01		
Absnt 2/14 16:00		
 Kate Baker		
0900001XXXX		

**3** Press  (Call) or .



## Note


- The cell phone can store up to 20 phone numbers in each of the incoming history and outgoing history in order of the most to least recent.

 
## One-ring Calls

### What is a One-ring Call?

A one-ring call is a call from an unknown caller that only rings once, causing it to be stored in the incoming history. One-ring calls are often used to get the receiver to return the call, which will connect you to a dating service or some other service that charges caller at high rates.


### One-ring Indicator

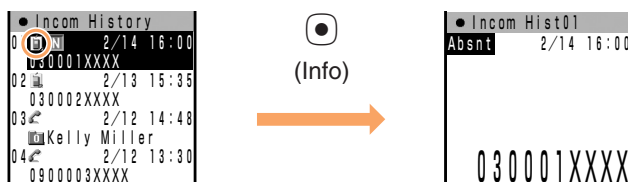


A red  indicator on the display indicates you have received a one-ring call (the ring tone played for less than three seconds), and the call is marked with **Absnt** on the incoming history screen. Be careful when you return a call to an unknown caller.




## Turning On Manner Mode

 
The cell phone informs you of a call by vibrating.




- 1 When the standby screen is displayed, hold down  (side key 2) for at least one second.

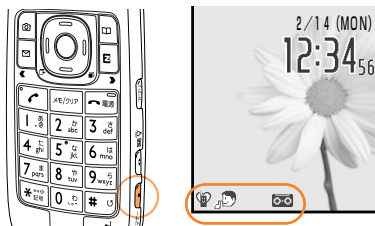
➔ This turns on manner mode, and displays  and  on the standby screen. This also turns on voice memo, which is indicated by  on the standby screen.



## Turning Off Manner Mode

 When the standby screen is displayed, hold down  (side key 2) for at least one second.

➔ Turning off manner mode causes  and  to disappear from the standby screen. Voice memo is also turned off, which is indicated by  disappearing from the standby screen.

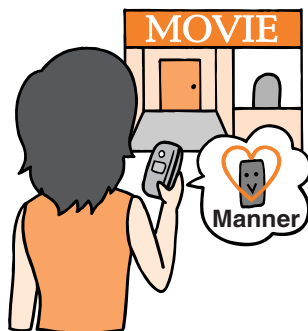



### Note

 
- The cell phone will continue to emit the record start/end tone and shutter sound during camera use even when manner mode is turned on.




## Turning On Voice Memo

**1** When the standby screen is displayed, hold down  for at least one second.

→ The answering message (Japanese) is played, then voice memo is turned on, which is indicated by  on the standby screen.

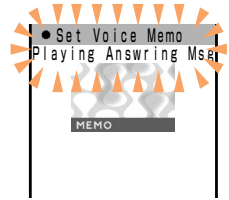

## Turning Off Voice Memo

 When the standby screen is displayed, hold down  for at least one second.

→ Voice memo is turned off and  disappears from the standby screen.




## Note


- The cell phone can record a maximum of three messages, each up to 30 seconds long.
- The cell phone can record up to a total of three call voice memos. A call voice memo is for recording the voice of the other party during a call.
- Voice memo is a function that automatically answers calls and allows callers to record messages. Use the answering service when you have the phone is turned off or when you are in a location where a signal cannot be received.

## Playing a Voice Memo

 
### If a voice memo is recorded



→  *Memo* and the number of memos appear on the standby screen.




**1** Use  to select  *Memo* and then press .

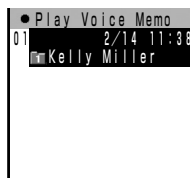→ The Play Voice Memo list appears.



 
**2** Use  to select the voice memo you want to play and then press  (Play).

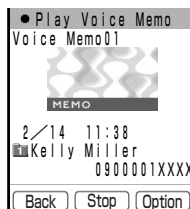

• To stop the voice memo, press  (Stop).





### Deleting a Voice Memo

On the Play Voice Memo list, use  to select the voice memo you want to delete.

→ Press  (Option) and then press  *Delete*.

→ Use  to select *Delete One* and then press  (Select).



→ Use  to select *Yes* and then press  (OK).

 
# Changing the Incoming Ring Tone

- 1 When the standby screen is displayed, press .

→The Launcher menu appears.





- 2 Use  to select *Function* and then press  (Select).

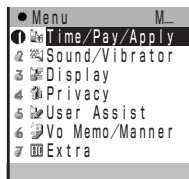


- 3 Press  *Sound/Vibrator*.

 →The Sound/Vibrator menu appears.

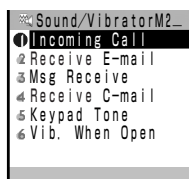


- 4 Press  *Incoming Call*.

 →The Incoming Call menu appears.

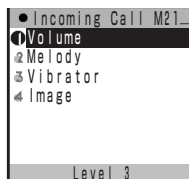

- 5 Press  *Melody*.

 
→The Melody menu appears.

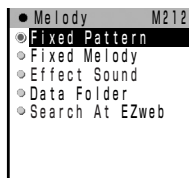





## Changing the Incoming Ring Tone (continued)

 - 6** Use  to select *Fixed Pattern* and then press  (Select).

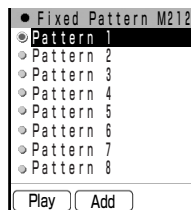→ The Fixed Pattern menu appears.



 - 7** Use  to select *Pattern 3* and then press  (Play).

- If you press  (Back) or , the tone stops playing and you can select another tone.



- 8** Press  (OK).

→ The incoming ring tone is set.



### Note



- You can select from among fixed patterns, fixed melodies, effect sounds, data folder contents, and EZweb search for your ring tone.
- The initial default setting is the *Pattern 1* fixed pattern.

 
# Adjusting the Incoming Ring Tone Volume

- 1 When the standby screen is displayed, press .

→ The Launcher menu appears.




- 2 Use  to select *Function* and then press  (Select).

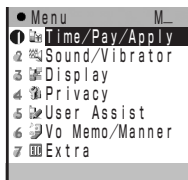


- 3 Press  *Sound/Vibrator*.

 → The Sound/Vibrator menu appears.

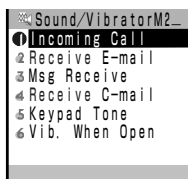


- 4 Press  *Incoming Call*.

 → The Incoming Call menu appears.

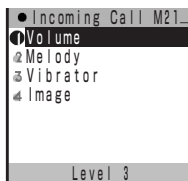



- 5 Press  *Volume*.

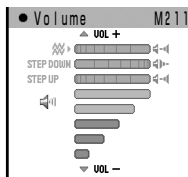 → The screen for adjusting the incoming call ring tone appears.










## Adjusting the Incoming Ring Tone Volume (continued)

- 6** Use  to adjust the volume and then press  (OK).



- Each press of  changes the volume one step.

	After a vibration alert, the ring tone sounds while gradually increasing in volume.
STEP DOWN	The ring tone sounds while gradually decreasing in volume.
STEP UP	The ring tone sounds while gradually increasing in volume.
 Maximum  ↑  Standard  ↑  Minimum	The ring tone sounds at the set volume.
 (Silent)	The incoming ring tone does not sound.


- To select  (Silent), select  (Minimum) and then press .

## Adjusting the Earpiece Volume during a Call

 
During a call, you can use Loud Volume or adjust the earpiece volume to one of five levels (1 to 5).


- 1** During a call, press .

→ The Speaker Volume screen appears.

: Increases the volume.

: Decreases the volume.

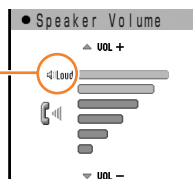

Turning on  Loud (Loud Volume) will increase the volume of the earpiece output to make it easier to hear.

- 2** Press  (OK).



### Note

- Loud Volume can be used only during a call.



 
# Character Input



## Character Entry Modes

When a character entry screen is displayed, you can select the character entry mode if you press .


 
### Menu Items

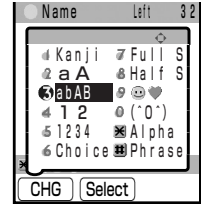 
- Kanji : Kanji conversion mode
- a A : Double-byte alphanumeric mode
- abAB : Single-byte alphanumeric mode
- 1 2 : Double-byte number mode
- 1234 : Single-byte number mode

 
 

 
 

 

 
 
 
 



Use  to select a character entry mode and then press  (Select).

## Entering Single-byte Alphanumeric Characters

You can use the keys  to  to enter characters. More than one character is assigned to each key.

For example, each press of  changes the displayed character to the next character assigned to the key in the order of a ⇒ b ⇒ c ⇒ A ⇒ B ⇒ C ⇒ 2. The following table shows the key assignment for entering characters.



Key	Number of Times to Press the Key											
	1	2	3	4	5	6	7	8	9	10	11	12
	.	@	—	—	/	:	~	?	,	'	!	1
	a	b	c	A	B	C	2					
	d	e	f	D	E	F	3					
	g	h	i	G	H	I	4					
	j	k	l	J	K	L	5					
	m	n	o	M	N	O	6					
	p	q	r	s	P	Q	R	S	7			
	t	u	v	T	U	V	8					
	w	x	y	z	W	X	Y	Z	9			
	0											
	Single-byte symbols (switches an unconfirmed character between uppercase and lowercase)											
	Adds a line break and displays characters in the opposite order											

When you change your e-mail address, you cannot use the characters in  for the account name (part of the address to the left of @).

 
### Note


- Before you enter single-byte alphanumeric characters, switch to the single-byte alphanumeric mode.

## Entering Two or More Characters Assigned to the Same Key


After you enter the first character, press  to move the cursor () to the right and then enter the next character.


Example: Entering "ab"


Press  once.

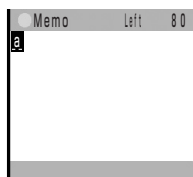 




Press  once.

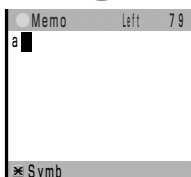 

 Press  twice.

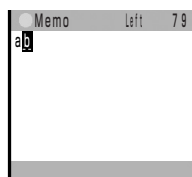 

## Deleting Characters

   To delete one character at a time, move the cursor to the character you want to delete and then press . To delete all characters to the right of the cursor, hold down  for at least one second. If there are no characters to the right of the cursor, holding down  will delete all the characters.

## Starting a New line

Press .

### Note

- Certain functions such as c-mail does not support entering new lines.



# Entering E-mail Addresses

## E-mail Address Compatible Characters

- Before you enter an e-mail address, switch to single-byte alphanumeric mode.
- For the account name (part to the left of @), you can enter up to 20 single-byte alphanumeric characters and some symbols. Note the following points.
  - Two or more periods (.) cannot be used in succession.
  - Zero (0) cannot be used as the first character.

 
## How to Enter E-mail Addresses

Use **[1.2]** to **[0.0]** to enter characters and numbers.

Example: Entering "taro.23@toshiba.co.jp" for the recipient's e-mail address


### 1 Enter "taro.23".

- t : Press **[8.8]** once.  
 a : Press **[2.2]** once.  
 r : Press **[7.7]** three times.  
 o : Press **[6.6]** three times.  
 . : Press **[1.2]** once.  
 2 : Press **[2.2]** and then press **[\* 0]** once.  
 3 : Press **[3.3]** and then press **[\* 0]** once.

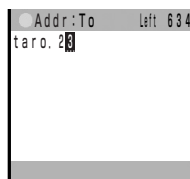

### 2 Enter "@".

 - @: Press **[1.2]** twice.

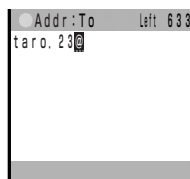


### 3 Enter "toshiba" and then press **[OK]**.



- t : Press **[8.8]** once.  
 o : Press **[6.6]** three times.  
 s : Press **[7.7]** four times.  
 h : Press **[4.3]** twice and then press **[OK]**.  
 i : Press **[4.3]** three times.  
 b : Press **[2.2]** twice and then press **[OK]**.  
 a : Press **[2.2]** once.



 - 4** Press  (abAB) and then press  *Phrase*.

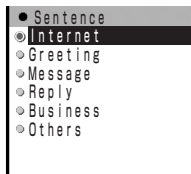➔The category list appears.



- 5** Use  to select *Internet* and then press  (Select).

➔The sentence list appears.



- 6** Use  to select *.co.jp* and then press  (Select).

➔".co.jp" is entered.




## Note

 - To enter ".co.jp," etc., you can use the Sentence menu.

# Entering Pictograms


## 1 When a character entry screen is displayed, press (abAB).

- ➔ The character entry mode menu appears.
  - You can also enter symbols, emoticons, and useful sentences (fixed text) from the character mode entry menu.

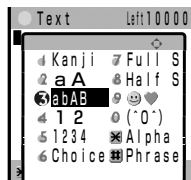



## 2 Press .

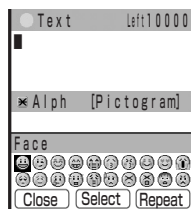 - ➔ The Pictogram screen appears.



## 3 Use to select the pictogram you want to enter and then press (Select).


- ➔ This enters the pictogram.
  - You can enter pictograms consecutively if you press  (Repeat) instead of  (Select).
  - Pictograms are not displayed properly on non-au cell phones, personal computers, and other devices.



# Phone Book

 
## Saving a Phone Book Entry





Hold down   
for at least one second.

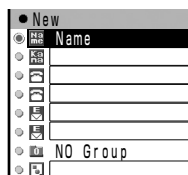



New Screen




- Use  to select **Na me** (Name) and then press  (Select).

 
→The Name entry screen appears.

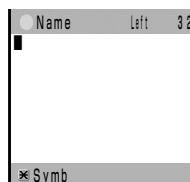

- Enter a name and then press  (OK).


→The  (reading) for the name is entered automatically.

 - For details on entering characters, see page 37.

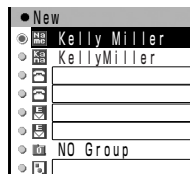

- Use  to select  (Tel. #1) and then press  (Select).

 
→The Tel. #1 entry screen appears.

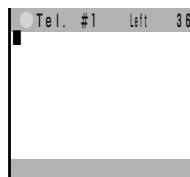



- Enter a phone number and then press  (OK).

 →The Tel. #1 Class menu appears.

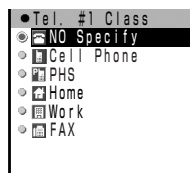
- If the phone number is for a regular phone, enter the phone number starting with the area code.



- 5** Use  to select a phone number class and then press  (Select).


➔The New screen reappears.

 - Follow the next two steps to enter an e-mail address. If you do not want to enter an e-mail address, proceed to Step 8.

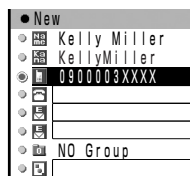

- 6** Use  to select  (E-mail 1) and then press  (Select).

 ➔The E-mail 1 entry screen appears.

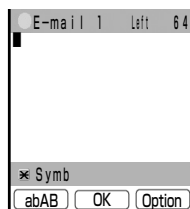



- 7** Enter the e-mail address, press  (OK), select a class, and then press  (Select).

➔The New screen reappears.

- For details on entering e-mail addresses, see page 39.



- 8** Press  (Add) and then press  (Add).

➔This saves the data to memory No. 000.


- The cell phone automatically saves the entry to the lowest available memory number from 000 to 499.





## Note

- You can save two phone numbers and two e-mail addresses for each phone book entry.
- You can also assign a group, and enter address, birthday, URL, and other information.

## Dialing from the Phone Book

- 1 When the standby screen is displayed, press  to display the phone book name list.



 
- 2 Use  to select the entry containing the phone number you want to dial and then press  (Select).




- 3 Press .



## Editing Phone Book Entries

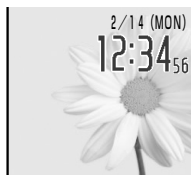

 Select the entry you want to edit, press (Select).

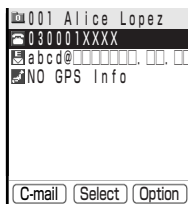

- Press (Option) and then press *Edit*.



- Edit the contents and then press (Add).





 
- Use to select *Overwrite* and then press (OK).


 



## Saving a Phone Number from the Incoming/Outgoing History

Example: Saving a phone number from the incoming history to the phone book

- 1 When the standby screen is displayed, press  and use  to select the phone number you want to save.

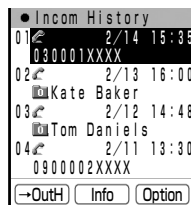

 
- 2 Press  (Option) and then press  *Add to Ph Book*.

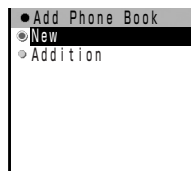

- 3 Use  to select *New* and then press  (Select).




- For details on saving a phone book entry, see page 42.
- To open the Outgoing History screen for saving a phone number to the phone book, press  in Step 1.



## Using E-mail

 To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, be sure to configure initial settings.

You can send and receive e-mail with another cell phone that supports e-mail, or with a computer. In addition to text messages that can contain up to 5,000 double-byte characters, you can also send photos and movies by e-mail.

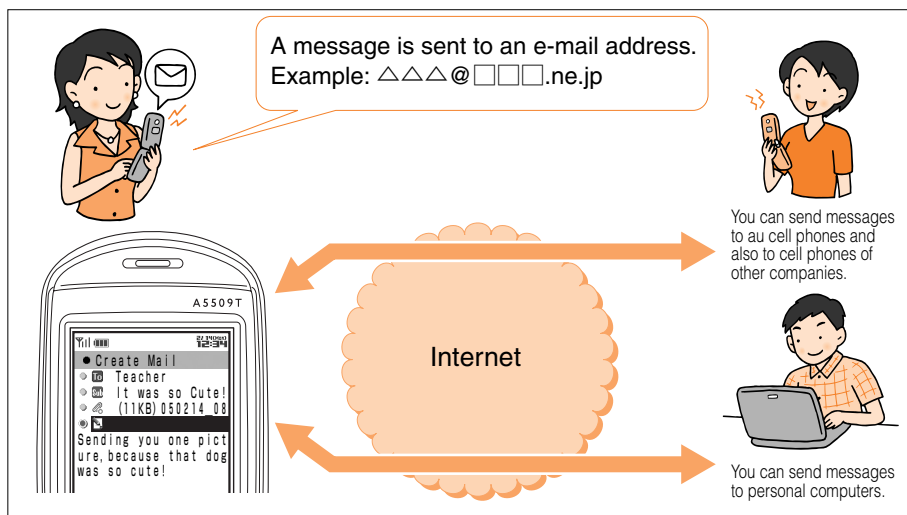



- \* You can send an e-mail message to up to five different addressees at one time.
- \* You can send up to 1,000 e-mail messages per day (a message with multiple recipients is counted as more than one message).

## Using C-mail

 
C-mail is a service that makes it possible to exchange text messages between two au cell phones that support c-mail. A c-mail message can contain up to 50 double-byte (or 100 single-byte) characters.



Subscribers in the Kanto and Chubu areas do not need a separate subscription to use c-mail. For subscribers located outside of these areas, a separate subscription is required.

# Creating and Sending E-mail Messages

- 1 When the standby screen is displayed, press  and then press  *Create New*.

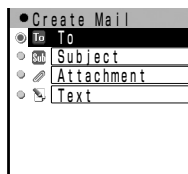
 
→The Create Mail screen appears.



- 2 Use  to select *To* and then press  (**Select**).

→The Address List screen appears.



- 3 Press  (**Option**) and then press  *Use Phone Book*.

→The phone book name list appears.

 
- You can specify up to 5 addresses for the To, Cc, and Bcc fields (up to 640 single-byte characters).



- 4 Use  to select an addressee, press  (**Select**) and then press  (**OK**).




- 5 Press  (**OK**).

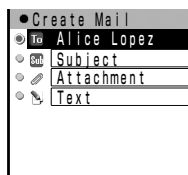


## 6 Use to select *Subject* and then press (Select).

 →The Subject entry screen appears.

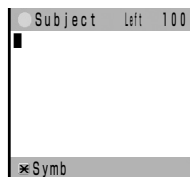

## 7 Enter a subject and then press (OK).

 
- You cannot enter single-byte Japanese characters or a new line in a subject.

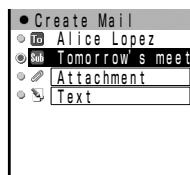

Mail


## 8 Use to select *Text* and then press (Select).

 →The Text entry screen appears.

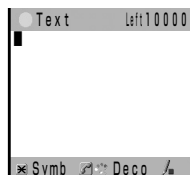


## 9 Enter the text of the message and then press (OK).

 - You cannot enter single-byte Japanese characters in the text of a message.

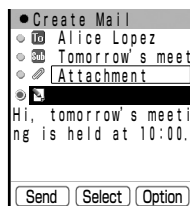

## 10 Press (Send).

 →The Way of Send menu appears.

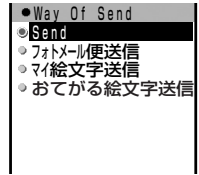

## 11 Use to select *Send* and then press (Select).

→The animation for sending e-mail is displayed and the e-mail message is sent.



### Note




- You can also display the Sent History and use it to select an addressee.

# Reading Received E-mail Messages

## When you receive an e-mail message

➔ "Email" appears on the standby screen along with the number of messages received.



**1** Use  to select  *Email* and then press .

➔The Inbox opens.



 
### Indicators

 : Indicates a folder containing a new message.


Mail


**2** Press  (Select).

➔The Main Folder opens.

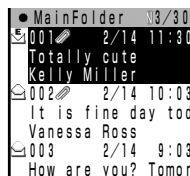



### Indicators

 
 : Indicates a read message.

 : Indicates an unread message.


 : Indicates a message that has an attachment.

**3** Use  to select the new message and then press  (Select).

➔You can read the message.

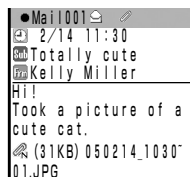

## Viewing a Received Message

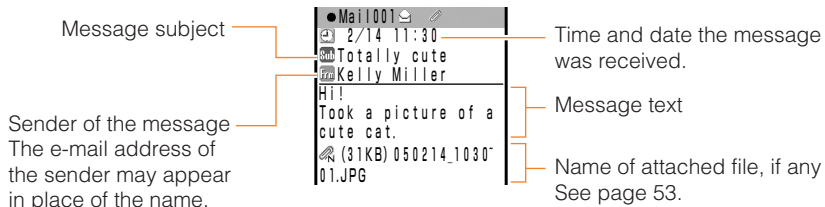 


### Note

- The procedure may differ depending on the e-mail settings.

## Changing the Text Size

 While an e-mail message is displayed, you can press **アプリ** to temporarily change the size of the displayed text (One-touch Text Size Switching).

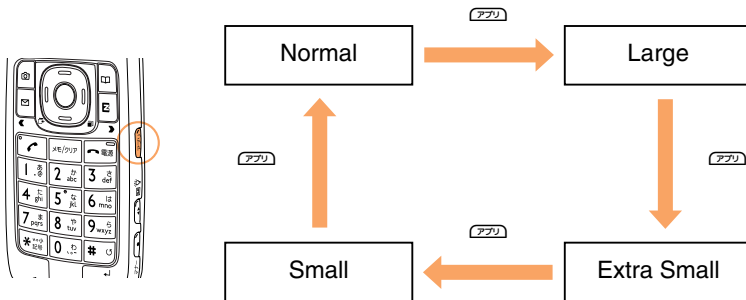


## Reading an E-mail Message from the E-mail Menu

When the standby screen is displayed, press **☑** to display the E-mail Menu and then press **2** **Inbox**.

### Indicators

 
**☑** X/X : The number on the right of the indicator indicates the number of unread messages.

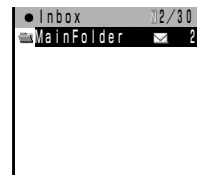

For other operations, see "Reading Received E-mail Messages" (Steps 2 and 3 on page 51).

## Reading an E-mail Message with an Attached Photo

 **1** Display the e-mail message (page 51).

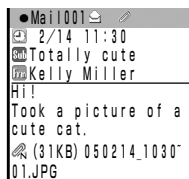

**2** Use  to select the file name and then press  (Rcv).


➡ This receives the photo.



**3** Press  (Play).





### Note

- Some photos will already be displayed on the screen in Step 1, while other photos will require that you select the file name, and then press  (Play) (Step 2). It depends on the file size.

# Replying to Received E-mail Messages

  
- 1 When the standby screen is displayed, press  and then press  **Inbox**.

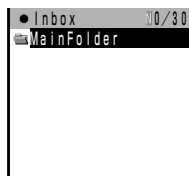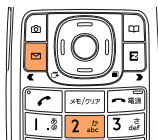

➔The Inbox opens.



 - 2 Press  (**Select**).

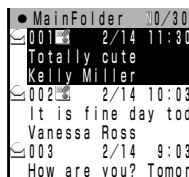➔The Main Folder opens.



- 3 Use  to select the message you want to reply to and then press  (**Select**).

➔You can read the message.



- 4 Press  (**Reply**).

➔The Create Mail screen appears. "Re:" is prefixed to the subject, and the text of the message is quoted.



 


- 5** Refer to "Creating and Sending E-mail Messages" (Steps 8 and 9 on page 49) and enter the text of the message.



- 6** Press  (Send).

➡The Way of Send menu appears.

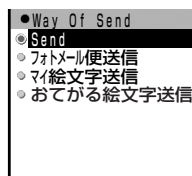

- 7** Use  to select *Send* and then press  (Select).

➡The animation for sending e-mail is displayed and the e-mail message is sent.



# Rejecting Spam



The setting of mail filters to reject spam is recommended.



## Setting Mail Filters


When the standby screen is displayed, press .


➡ Press  *E-mail Setup*.

➡ Press  *Other Setup*.



➡ Use  to select *Yes* and then press  (OK) to connect to the server.

➡ Use  to select **メールフィルター** (Mail Filter) and then press  (Select).

 
➡ Use  to select the entry box and then press  (Edit).

➡ Enter your PIN and then press  (OK).

• Your PIN is the four-digit number you wrote on your subscription form.

➡ Use  to select **送信** (Send) and then press  (Select) to display the mail filter setting screen.

Mail Filters Setting screen

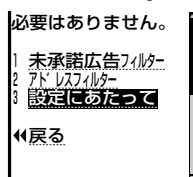

## Unsolicited Advertisement Filter and Address Filters

### 1. Unsolicited advertisement filter

Rejects mail that has a subject containing the expression "未承諾広告※" (unsolicited advertisement).

### 2. Address filters



全受信	All mail is received.
指定受信設定	This setting lets you specify sources from which messages can be received. You can select Internet and cell phone domain options (一括指定) and enter e-mail addresses, domains, and account names (part of the address to the left of @) individually (個別指定).
指定拒否設定	This setting lets you specify sources from which messages will be rejected. Enter e-mail addresses, domains, and account names (part of the address to the left of @) individually.
なりすまし規制	This setting lets you reject messages that appear to come from cell phones or PHS phones, but actually do not. You can use なりすまし規制 in combination with 全受信 (Receive all), 指定受信設定 (Receive specific mail only), and 指定拒否設定 (Reject specific mail) settings. If you select the 規制する (Restrict) option while 全受信 (Receive all) is selected, for example, only messages made to appear like they come from cell phones or PHS phones, when they do not, are rejected.

\* You can also configure a list of specific e-mail addresses for mail rejection after configuring 指定受信設定 (Receive specific mail only).

 
## Note

• You can also prevent spam by changing your e-mail address. For details on changing your e-mail address, see page 21.

# Creating and Sending C-mail Messages


- 1 When the standby screen is displayed, hold down  for at least one second, and then press  *Create New*.

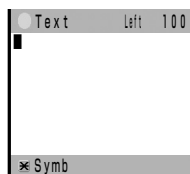

➔The Text entry screen appears.



 
- 2 Enter the text of the message and then press  (OK).

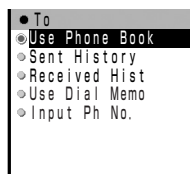➔The To menu appears.





- 3 Use  to select *Use Phone Book* and then press  (Select).

➔The phone book name list appears.

- You can also select an address by using  to select *Sent History* (Outgoing History), *Received Hist* (Incoming History), etc., and then selecting an address from the displayed list.



 
- 4 Use  to select an addressee and then press  (Select) twice.

➔The Create Mail screen appears.



- 5 Press  (Send).

➔The animation for sending c-mail is displayed and the c-mail message is sent.

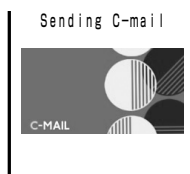





# Reading Received C-mail Messages

Received c-mail messages are saved to the Inbox.

 
## When you receive a c-mail message

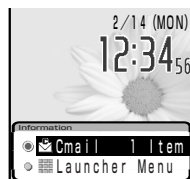→ "Cmail" appears on the standby screen along with the number of received messages.





 **1** Use  to select  *Cmail* and then press .

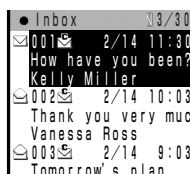

→The Inbox opens.




### Indicators

  : Indicates a read message.


 
 : Indicates an unread message.

**2** Use  to select the new message and then press  (Select).


→You can read the message.

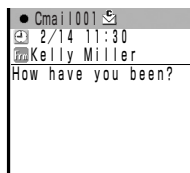


## Reading a C-mail Message from the C-mail Menu

 When the standby screen is displayed, hold down  for at least one second to display the C-mail Menu, and then press  *Inbox*.

### Indicators

 X/X : The number on the right of the indicator indicates the number of unread messages.

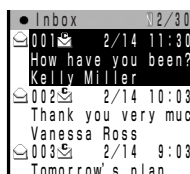

Use  to select the message you want to read and then press  (Select).

# Camera

Your cell phone has a mega pixel camera that you can use to shoot photos (snapshots) and movies. It also has a self-timer for taking photos. You can use images you record for the standby screen, and you can attach them to e-mail messages.

## Camera Image Features

 
### Using Images



Captured Images

You can use images for screens such as the standby screen and call screen, and you can include them in phone book entries.

### Sending Images

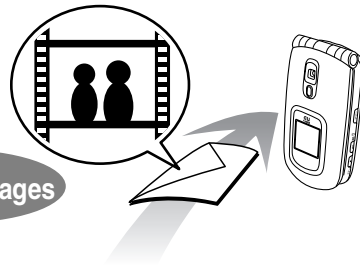

You can attach images up to 150 KB in size to e-mail messages.

### Supports Exif Print (Exif2.2).

The camera supports Exif Print, a standard that makes it possible to record photographic information that can be reflected in printed output.


**Exif Print**


## Photo and Movie Shooting Tips

When shooting photos (snapshots) or movies, frame the subject within the display or sub display and hold the A5509T steady with both hands to avoid shaking.


### Taking a Photo


#### Photo Mail, Wallpaper, and Multiple Modes

 Orient the A5509T so  appears in the upper right of the display.

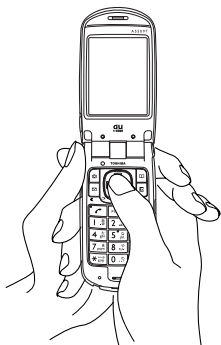

#### VGA and SXGA Modes

 
Orient the A5509T so  appears in the upper left of the display.

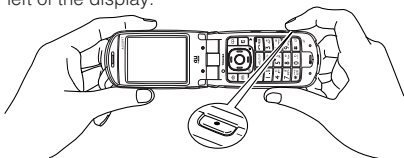


Orient the A5509T sideways when taking the photo.

#### While the Cell Phone is Closed

 This feature is mainly for taking photos of yourself.

Orient the A5509T so  appears in the upper right of the sub display.

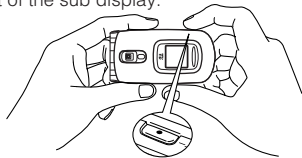


\* The illustration shows how the camera is held when taking with VGA or SXGA mode.

### Recording a Movie
 
#### Recording a Movie


Orient the A5509T so  appears in the upper left of the display.

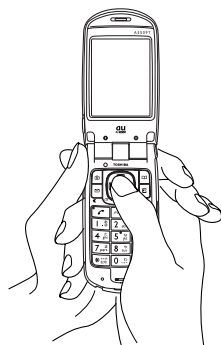

Take care not to cover the microphone during recording.

#### While the Cell Phone is Closed

This feature is mainly for recording a movie of yourself.

Orient the A5509T so  appears in the upper right of the sub display.



 
Certain recording conditions may result in the volume of the movie audio being too low to hear any sound during playback.

## Data Sizes

The following shows the number of photos/movies you can capture in each mode when all photos/movies are captured in the same mode and the Data folder has the same amount of space as at the time of purchase. However, the following numbers may vary depending on photography/recording conditions.

### Photo

Mode	Photo Quality	Approximate Data Size Per Image	Maximum Number of Images
Photo Mail	—	9 KB	500
Wallpaper/Multiple	—	30 KB	500
VGA	Fine Mode	120 KB	170
	Normal Mode	60 KB	341
	Mail Mode	40 KB	500
SXGA	Fine Mode	300 KB	68
	Normal Mode	170 KB	120
	Mail Mode	100 KB	204

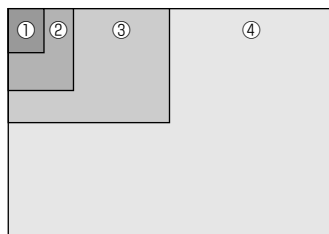


- ① Photo Mail : 144 (W) x 176 (H) dots
- ② Wallpaper/Multiple : 240 (W) x 320 (H) dots
- ③ VGA : 640 (W) x 480 (H) dots
- ④ SXGA : 1,280 (W) x 960 (H) dots

### Movie

 Mode	Recording Time	Approximate Data Size Per Image	Maximum Number of Movies
Standard S (Mail)	15 sec.	69 KB	292
Standard M (Mail)	15 sec.	83 KB	243
Standard M (Video)	150 sec.	800 KB	25


\* The data size and number of movie values are average values for recording up to the allowable recording time per movie.

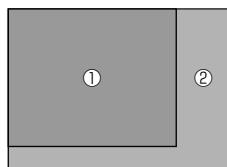

- ① Standard S (Mail) : 96 (W) x 80 (H) dots
- ② Standard M (Mail/Video) : 128 (W) x 96 (H) dots

# Taking a Photo

## 1 When the standby screen is displayed, press .

- ➔ The monitor screen appears.
- To turn on the mobile light, press  (side key 1) while the monitor screen is displayed.



Monitor Screen



## 2 Point the lens at the subject and then press (Shot) or (side key 2).

- ➔ The photo you just recorded appears (preview screen).





 


Preview Screen



### Saving Photos

Press  (Save).

### Note

- If you press  () while the monitor screen is displayed, the key-operation guidance screen will appear for approximately 15 seconds.
- Photos are saved in the Photo Folder, which is located in the Data Folder.
- If you do not want to save the photo, press , use  to select *Yes*, and then press  (OK).
- The following shows how to read the file name in the Data Folder when you take a photo in the Wallpaper size.

File Name Example : 050214\_1330~01

Recording Date: February 14, 2005


Time: 13:30

Serial Number: Photo 1


- See page 66 for information about attaching photos to e-mail.



# Recording a Movie

- 1** When the standby screen is displayed, hold down  for at least one second.



➔ The monitor screen appears.

- To turn on the mobile light, press  (side key 1) while the monitor screen is displayed.



Monitor Screen



- 2** Point the lens at the subject and then press  (Rec) or  (side key 2).

➔ The cell phone emits a recording start sound, and ● REC lights when recording starts.



## Stopping Recording

Press  (Stop).



## When you stop recording or the recording time elapses

The first frame of the movie you just recorded appears (preview screen).

Preview Screen





 


## To play back a movie before it is saved

Press  (Option) and then press  Play.


## Saving Movies

Press  (Save).

## Note

- If you press  () while the monitor screen is displayed, the key-operation guidance screen will appear for approximately 15 seconds.
- Movies are saved in the Movie Folder, which is located in the Data Folder.
- If you do not want to save the movie, press , use  to select *Yes*, and then press  (OK).
- The following shows how to read the file name in the Data Folder when you record a movie in the Standard S (Mail) mode.

 
File Name Example : S\_050214\_1330~01

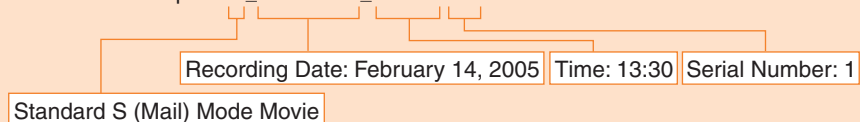

- See page 66 for information about attaching movies to e-mail.

# Viewing Photos/Movies

Example: Viewing a photo

 
**1** When the standby screen is displayed, press .



→The monitor screen appears.



**2** Press  (Option) and then press  *Photo Data*.

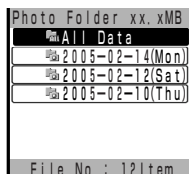

→The Photo Folder opens.





**3** Use  to select a folder and then press  (Select).

→The folder data appears.




 

**4** Use  to select the photo you want to view and then press  (Play).

→The photo appears.

- You can attach the photo to an e-mail message by pressing  (Option), selecting *Attach E-mail*, and then pressing  (Select).





## Note

- To view a movie, hold down  for at least one second while the standby screen is displayed. When the movie monitor screen appears, press  (Option) and then press  *Shot Data*.

# Attaching Photos/Movies to E-mail Messages

## 1 While the preview screen is displayed after shooting a photo or movie, press (E-mail).

 
- ➔ The photo or movie is attached to an e-mail message and the Create Mail screen appears.
- The  (Attachment) indicator changes automatically to , indicating that an image has been attached. For details on creating an e-mail message, see page 48.

## Photo Mail Service

The Photo Mail Service automatically converts photos and movies so they can be viewed on a non-au cell phone.

When sending an e-mail message, select **フォトメール便送信** (Photo Mail Service) on the Way of Send screen.

This will automatically send the message to a special address.

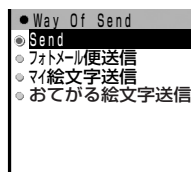

Phone Company of Cell Phone	E-mail Address	E-mail Address after Change
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
Vodafone	△△△@□*.vodafone.ne.jp	△△△@□*.vodafone.nepm.jp
TU-KA and movie mail incompatible au cell phones	△△△@ezweb.ne.jp	△△△@ezweb.nepm.jp

\* □ varies depending on the subscription region.

## Note

 
- **マイ絵文字送信** (My Pictogram) and **おてがる絵文字送信** (Easy Pictogram) are fee-based services. To use these services, you need to apply for the separate **絵文字め〜る** (Pictogram Mail) subscription for EZweb content.

## What is EZweb?

EZweb is an information service that allows you to enjoy using the Internet on your cell phone. You can also download Chaku-Uta(TM), news, and other data from information web pages.

To use e-mail and EZweb, you need to apply for an EZweb subscription.

If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, be sure to configure initial settings.

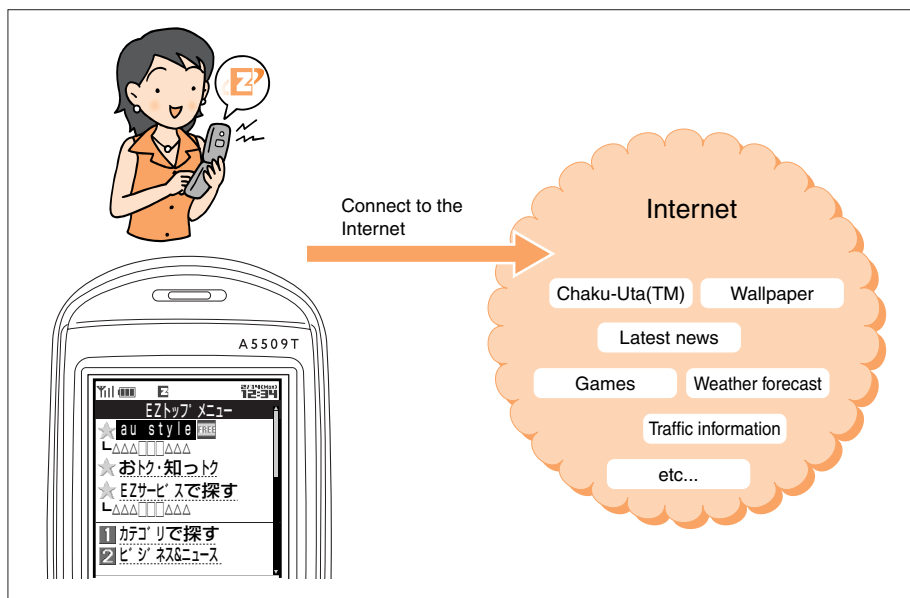


### Note


- The layout and content of the screens in the sample screens in this manual are only for the purpose of explanation. The layout and content of actual screens may be different from the ones shown here.

## Accessing Sites
 
### Displaying the Top Menu

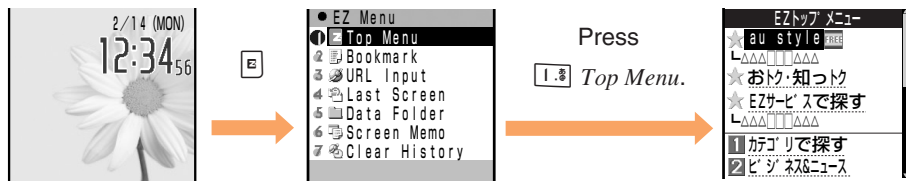

 Use to select the site you want to access and then press (Select).  
Pressing or returns to the previous screen. Holding down either key returns to the Top menu.

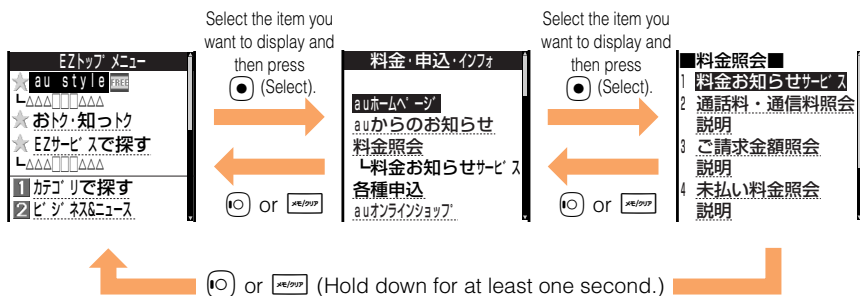

### Note

 
- The following describes the basic operations that are available while accessing sites.

Key Operation	Description
	Exits EZ web and returns to the standby screen.
	Moves the cursor up and down. When there is data available above or below the current screen, the screen is scrolled line-by-line.
、	When there is data available above or below the current screen, scrolls the screen is page-by-page. : Scrolls one page up.  : Scrolls one page down.

- In addition to communication charges, some sites charge for providing information.


## Viewing Sites

You can access EZweb from the Top menu. A variety of useful and fun sites are available on EZweb.


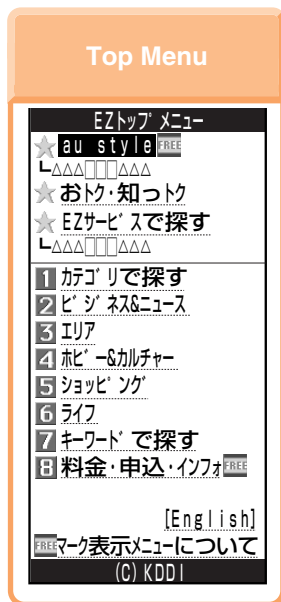




<b>au style</b>
au campaign information and recommended sites
<b>おトク・知っトク</b>
Useful and fun sites for cell phone users
<b>EZサービスで探す</b>
Search engine for specific EZ services
<b>1. カテゴリで探す</b>
Site search by category
<b>2. ビジネス&amp;ニュース</b>
Hot news, weather, etc.
<b>3. エリア</b>
Travel information, residential area information
<b>4. ホビー&amp;カルチャー</b>
Music, games, and other information news
<b>5. ショッピング</b>
Cell phone shopping information
<b>6. ライフ</b>
Useful information for daily living
<b>7. キーワードで探す</b>
Set search by keyword
<b>8. 料金・申込・インフォ</b>
Information about charges, various apply, and the au online manual
<b>English</b>
English sites

# Downloading Chaku-Uta(TM)

  - 1** From the Top menu, press  **カテゴリで探す (Category Search).**

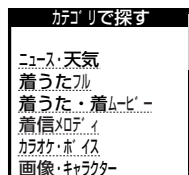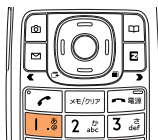

→The カテゴリで探す (Category Search) screen appears.



- 2** Use  to select **着うた®・着ムービー (Chaku-Uta(TM)/Chaku-Movie)** and then press  (**Select**).

→The 着うた®・着ムービー (Chaku-Uta(TM)/Chaku-Movie) screen appears.



- 3** Use  to select the site you want to access and then press  (**Select**).

→The download procedure appears.

- To use information sites that charge for providing information, you need to enter your EZ password. If this is your first time to use such sites, you need to set your EZ password. Your EZ password is the four-digit number you specified when you subscribed for fee-based content.



- 4** Follow the instructions that appear on the display.

→Download is completed.




- 5** Press  (**Play**).

→The downloaded Chaku-Uta® plays.  
• Downloaded data is saved automatically to the Data Folder.





## 6 During playback, press

 (Add).

➡The Register to where? menu appears.



Melody  
Register to where?  
● Ring Tone  
● E-mail Tone  
● Message Tone  
● C-mail Tone  
● ID Unsent Tone  
● Pay Phone Tone  
● Not Support Tone

## 7 Use to select the tone you want to use the Chaku-Uta(TM) for and then press (OK).

➡The Chaku-Uta(TM) is set as a tone.

- You can use the same operation to download an image and set it to the standby screen, etc.




### Note

 
- This procedure is only an example for the purpose of explanation and may differ from actual procedures. Follow the instructions on the site from which you want to download the data.

# Bookmarking Frequently Accessed Pages

You can save the titles and URL of sites you often visit, which makes it easy to return to them when you want.

- 1** When the page you want to bookmark is displayed, press  (**Browser**).

→The Browser menu appears.

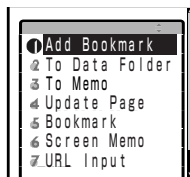

- 2** Press  **Add Bookmark.**

→The title and URL entry screen appears.  
• Some pages cannot be bookmarked.



- 3** Press  (**Add**).


→The displayed page is bookmarked, and its title and URL are added to the Bookmark list.




## Note

 
- The Bookmark list can contain up to 100 titles and bookmarks.

## Viewing Bookmarked Pages


- 1 When the standby screen is displayed, press .

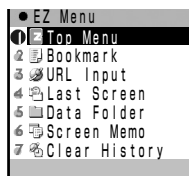

→The EZ menu appears.

 

- 2 Press  **Bookmark**.

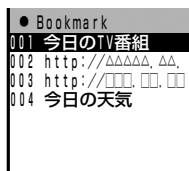 →The Bookmark list appears.



- 3 Use  to select the bookmark for the page you want to view and then press  (**Access**).

→The cell phone connects to the site and displays the page.






## Checking Charges

  You can use EZweb to check call charges, communication charges, and other information.


- 1 When the standby screen is displayed, press .

→The Launcher menu appears.



- 2 Press   and then press .

 
→The 料金照会 (Check Charges) screen appears. Select the items you want to check.

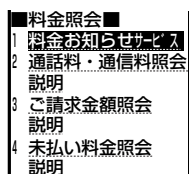

## EZnaviWalk Features

### Cell Phone Based Navigation System!

 EZnaviWalk is a powerful pedestrian navigation system that guides you to your destinations.

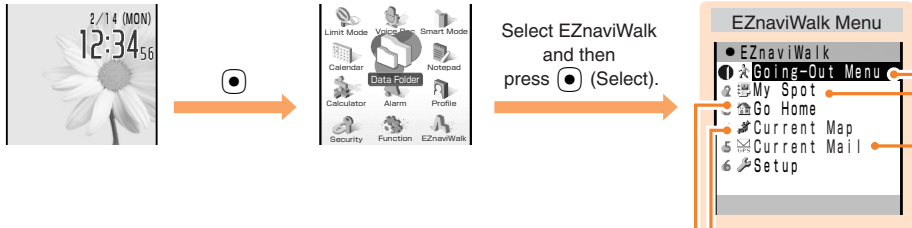


#### ④ When you want to know where you are, use Current Map.

Just selecting *Current Map* displays a map of your current location in real time.




#### ③ When you want to know the way home, use Go Home.

 Simple preset the location of where you live, and you will be sent easy-to-follow navigation information on the route back home.

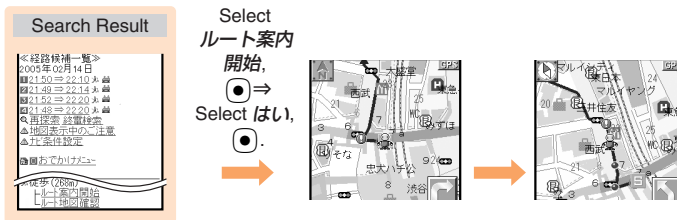

## ① When you are on an outing, use Going-Out Menu.

 Outing Menu provides a choice of useful options while you are out.

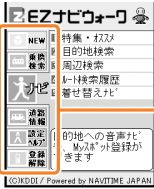

NEW	New information and announcements.
Transfer Search	Searchable source of train transfer and timetable information.
Navigation	Voice navigation to a destination, "My Spot" registration. "着せかえナビ": Changes the voice to that of a famous person, and icons to animated characters.
Traffic Information	Searchable source of real-time Japan-wide traffic information.
Setup Help	Frequently asked questions and other information about settings.
Memberships	Membership registration, cancellation, etc.

## ② When you find a place you like, register it as a My Spot entry.

Register a favorite location, the location of your home, or anywhere else for quick and easy navigation whenever you need it.



Select the navigation item and then press ☐ (Select).

Select Display Map, press ☐ (Select), select Yes, and then press ☐ (OK).

To map

 
Select Go There, press ☐ (Select), select はい, and then press ☐.

To search results

## ⑤ When you want to let somebody know where you are, use Current Mail.

When, for example, you have arranged to meet somebody, you can send a message to let the person know your current location.

### ● Sending message

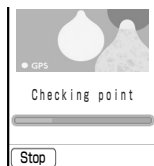

☐ (OK)



Press ☐ (Send), select the send method, and then press ☐ (Select).




The Current Mail is sent

### ● Once received



 Select the URL, press ☐ (Select).

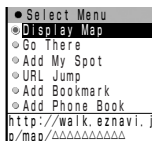

Select Display Map, press ☐ (Select), select Yes, and then press ☐ (OK).


To map

Select Go There, press ☐ (Select), select はい, and then press ☐.


To search results

# Using EZnaviWalk
 
## ① Registering Your Home Location

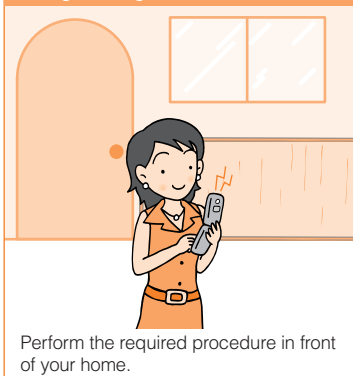

## ② Looking Up the Way Home

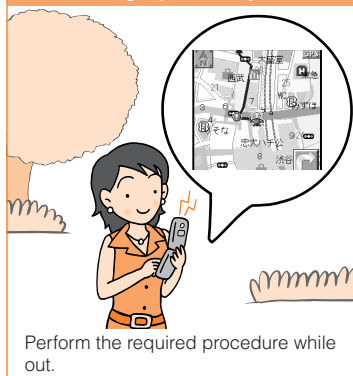 

## Note

- Before use, be sure to configure initial settings. If you have not yet configured initial settings, see page 19.
- To use this service, you need to apply for an EZweb subscription.
- The layout and content of the screens in the sample screens in this manual are only for the purpose of explanation. The layout and content of actual screens may be different from the ones shown here.

## Registering Your Home Location

Example: Registering your current location as "Home"

 
### 1 From the EZnaviWalk menu (page 74), press **2** *My Spot*.




→The My Spot menu appears.



### 2 Use **[Option]** to select *Home*, press **[Option]** (Option), and then press **1** *Add GPS Info*.

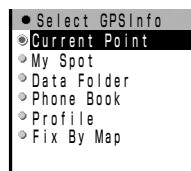→The Select GPS Info menu appears.






- 3** Use  to select *Current Point*, press  (Select) to obtain the GPS information, and then press  (OK).




→Your current location is registered as your home.





## Looking Up the Way Home

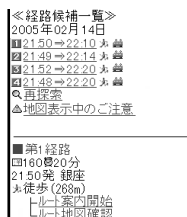 Using this feature makes it easy to navigate from your current location to the location indicated by GPS information you registered as your home using My Spot.

- 1** From the EZnaviWalk menu (page 74), press  *Go Home*, use  to select **はい** (Yes), and then press .



→The route search result appears.

- 2** Use  to select **ルート案内開始** (Start Route Guidance), press , use  to select **はい** (Yes), and then press .




→A map of your current location appears and the map scrolls automatically in accordance with your movement.

# Limit Mode

 Limit Mode allows parents or superiors to impose limits on the how much each function can be used. This helps to prevent overuse of the cell phone by offspring or subordinates. Restrictions can be placed on incoming and outgoing calls, incoming and outgoing e-mail and c-mail, EZweb use, and EZ application (including EZnaviWalk) use.


## Displaying the Limit Mode Screen

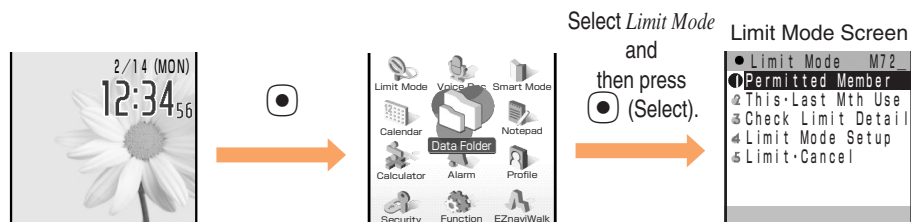

## Changing the Limit Mode Password

The Limit Mode password protects against unauthorized modification of Limit Mode settings.

 
- 1 On the Limit Mode screen (above), press *Limit Mode Setup*.

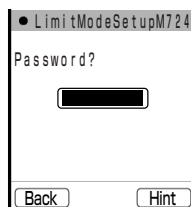



 - 2 Enter the current Limit Mode password and then press (OK).

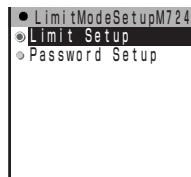



- The initial default password is "12345678".
- If you registered a hint to help you remember the password, press (Hint) to display it.





 
- 3** Use  to select *Password Setup* and then press  (Select).

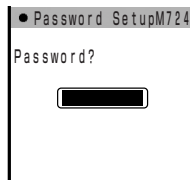

- 4** Enter the current Limit Mode password and then press  (OK).







- 5** Enter the new password and then press  (OK).

➔ This registers the new password and displays the hint confirmation check screen.

- The new password can be anywhere from one to eight digits long.



- 6** Use  to select *Yes*, press  (OK), enter the hint, and then press  (OK).

- If you do not want to enter a hint, select *No* and then press  (OK).



## Note

- For the hint, enter something that will help to remind you of the password.

 
Example: Password :20050214

Hint :Day I bought A5509T

## Setting the Use Limit

You can configure the cell phone to prohibit outgoing calls and mail send if a monthly use limit amount is exceeded.


- 1 On the Limit Mode screen (page 78), press **4** *Limit Mode Setup*.

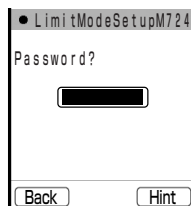


- 2 Enter the current Limit Mode password and then press **(OK)**.



 
• If you registered a hint to help you remember the password, press **(Hint)** to display it.

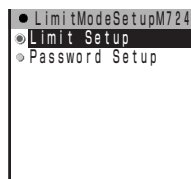

 
- 3 Use **(Left Arrow)** to select *Limit Setup* and then press **(Select)**.

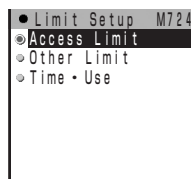

  
- 4 Use **(Left Arrow)** to select *Time Use* and then press **(Select)**.

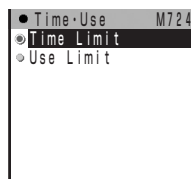

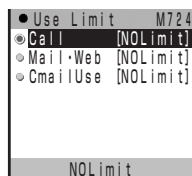

 
- 5** Use  to select *Use Limit* and then press  (Select).

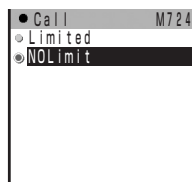

- 6** Use  to select *Call* and then press  (Select).



 - 7** Use  to select *Limited* and then press  (Select).

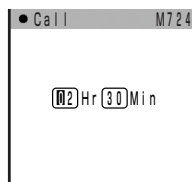

- 8** Enter the call limit amount and then press  (OK).




## Note

 - In addition to the limit by the status of use, you can also limit use of specific functions (Access Limit), and the amount of time each function can be used (Time Limit).

## Turning Limit Mode On and Off


- 1 On the Limit Mode screen (page 78), press **5** **Limit**. *Cancel.*

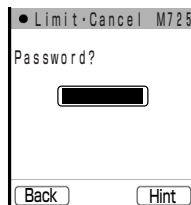

- 2 Enter the current Limit Mode password and then press **OK**.



 - If you registered a hint to help you remember the password, press **Hint** to display it.

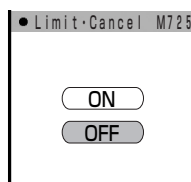


- 3 Use **OK** to select **ON** and then press **OK**.




## Checking the Limit Mode Status of Use

 - 1 On the Limit Mode screen (page 78), press **2** abc *This·Last Mth Use.*

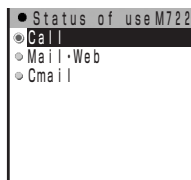

- 2 Use **Call** to select *Call* and then press **Select**.

 
- Press **LstMth** (LstMth) to display last month's use.

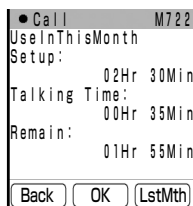


# Smart Mode



Setting Smart Mode limits phone function, phone book, camera, mail, EZweb and other often-used functions, which keeps operation simple.

 
## Entering Smart Mode

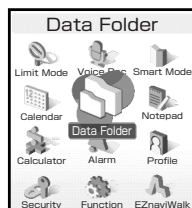

- 1 When the standby screen is displayed, press .

 
→ The Launcher menu appears.



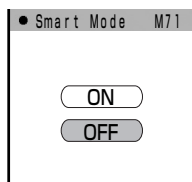

 - 2 Use  to select *Smart Mode* and then press  (Select).

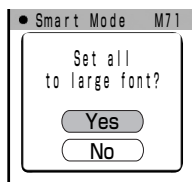

- 3 Use  to select *ON* and then press  (OK).




- 4 Use  to select *Yes* and then press  (OK).


→ This enters Smart Mode.




## Exiting Smart Mode

 
- 1** When the standby screen is displayed, press .

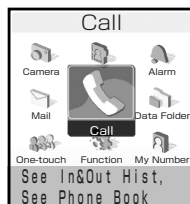

→The Launcher menu appears.




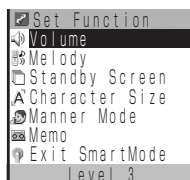 

- 2** Use  to select *Function* and then press  (Select).

 →The Set Function menu appears.

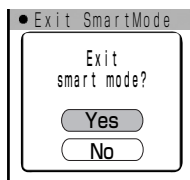

- 3** Use  to select *Exit SmartMode* and then press  (Select).



- 4** Use  to select *Yes* and then press  (OK).

→This exits Smart Mode.











### Note

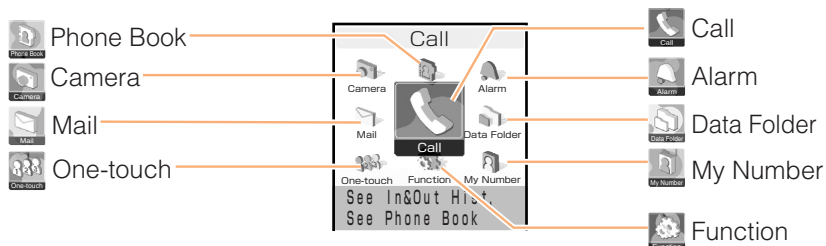 - Entering Smart Mode causes settings that were previously configured to change to Smart Mode settings.



## Using the Smart Mode Launcher Menu

The Smart Mode Launcher menu contains the following items.




Indicator	Function Name		Description	See:
	Camera		Photo/movie recording	P.94
	Phone Book		Phone book recall/add	P.88
	Alarm		Alarm sounds at preset time	—
	Mail		E/C mail creation/reading	P.92
	Call	See Phone Book	Phone book number recall for dialing	P.44
		See incom hist	Calling History recall for dialing	P.28
		See outgo hist		
		One-touch	One-touch phone number registration/dialing	P.90
		Add Phone Book	Phone book data registration	P.88
		See my number	Display of own phone number and e-mail address	P.20
	Data Folder		Data folder data and photo/movie file display/playback	P.95
	One-touch		One-touch phone number registration/dialing	P.90



Indicator	Function Name		Description	See:
	Function	Volume	Call ring tone setting	—
		Melody		
		Standby Screen	Standby screen setting	—
		Character Size	Display character size setting	—
		Manner Mode	Normal manner mode setting	—
		Memo	Voice memo setting/voice recorder recording	—
		Exit SmartMode	Smart mode exit	P.85
	My Number		Display of own phone number and e-mail address	P.20

## Saving a Phone Book Entry Using Smart Mode



- 1** When the standby screen is displayed, press .



 
Register new  
phone book item?


Yes

No


- 2** Use  to select *Yes* and then press .

→The Name entry screen appears.

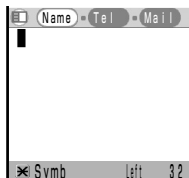



- 3** Enter a name and then press .

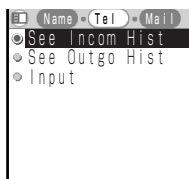 
→The phone number input method menu appears.




- 4** Use  to select *Input* and then press .

→The phone number input screen appears.

 
- If you do not want to enter a phone number, press  (OK) and advance to Step 6.
- You can also use  to select *See Incom Hist* or *See Outgo Hist* and enter a phone number from there.

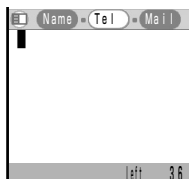

- 5** Enter a phone number and then press .



 →The e-mail address input method menu appears.

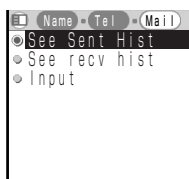
- If the phone number is for a regular phone, enter the phone number starting with the area code.



## 6 Use to select *Input* and then press (Select).



 ➔The e-mail address input screen appears.

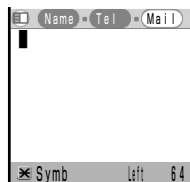
- If you do not want to enter an e-mail address, press  (OK) and advance to Step 8.
- You can also use  to select *See Sent Hist* or *See rcv hist* and enter an e-mail address from there.



## 7 Enter an e-mail address and then press (OK).

 ➔The New screen appears.

- You can use  to select an item and then press  (Edit) to edit something you have already entered, or to configure call ring tone and mail ring tone settings.

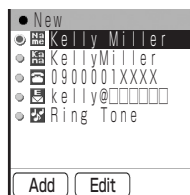
 

 




## 8 Press (Add).

➔The entry is saved in the phone book.



### Note

- After you store data in the phone book, pressing  while the standby screen is displayed displays a phone book list. To store new phone book data, press  (New) and perform Steps 3 through 8 of the above procedure.
- To edit phone book contents, press  while the standby screen is on the display, use  to select the address book entry you want to edit, press  (Select), and then press  (Edit).
- For other details, see page 42.

# One-touch Phone Number Recording

You can make up to three phone numbers one-touch numbers for quick and easy dialing.


## 1 When the standby screen is displayed, press .

 
→The One-touch list appears.



## 2 Use to select *NO entry* and then press (Edit).


→The phone number input method menu appears.


- You can change an existing one-touch number by selecting it on the list in Step 1.
- Pressing  (Cancel) clears the contents of the currently selected one-touch number.

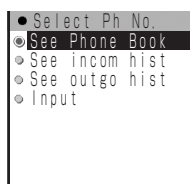

## 3 Use to select *See Phone Book* and then press (Select).

→The phone book list appears.

 - You can also use  to select *See incom hist*, *See outgo hist* or *Input* and select a phone number from there.

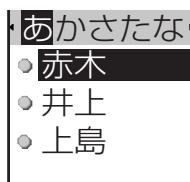

## 4 Use to select the person you want to register and then press (Select).

→The selected person is registered as a one-touch number.



 
### Note



- When you want to view the recipient's name on the One-touch list, perform one-touch registration of the name and phone number address book.
- Remember that Incoming History, Outgoing History, and direct input numbers assigned as one-touch numbers are not registered in the phone book. Because of this, you cannot recall such numbers from the phone book or after you exit Smart Mode.


# One-touch Dialing

**1** When the standby screen is displayed, press .

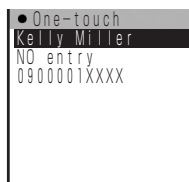→ The One-touch list appears.



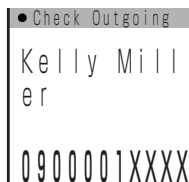 


**2** Use  to select the entry containing the phone number you want to dial and then press  (Select).



**3** Press .




## Note

 
- To append 184 or 186 to the displayed phone number, press , use  to select 184 or 186, and then press .
- Select 184 if you do not want to inform the party you are calling of your phone number.
- Select 186 if you want to inform the party you are calling of your phone number.



## Creating and Sending E-mail/C-mail Messages in Smart Mode

Example : Creating and sending an e-mail message


- 1 When the standby screen is displayed, press .

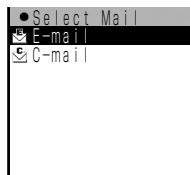

→ The Select Mail menu appears.



 
- 2 Use  to select *E-mail* and then press  (Select).

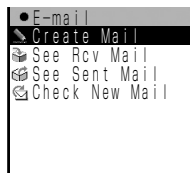

- To create a c-mail message, select *C-mail*. With c-mail you enter the text first and then enter the address.



 
- 3 Use  to select *Create Mail* and then press  (Select).

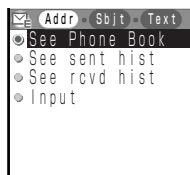
→ The Address input method menu appears.





- 4 Use  to select *See Phone Book* and then press  (Select).

 → The phone book list appears.

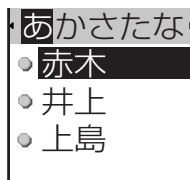- You can specify only one address.
- Only entries that include an e-mail address are displayed.
- You can also use  to select *See sent hist*, *See rcvd hist* or *Input* and select an address from there.




- 5 Use  to select the recipient you want to send to and then press  (Select).

→ The Subject input screen appears.






## 6 Enter a subject and then press (OK).

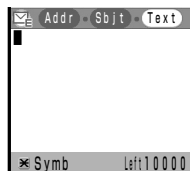 
➔The Text entry screen appears.



## 7 Enter the text of the message and then press (OK).

 ➔The Create Mail screen appears.

- You can edit the currently selected item by pressing  (Edit). You can also save the mail message in the Outbox by pressing  (Save).
- You can attach a photo or other data in the Data Folder by using  to select *Attachment*. You can also change or remove the current attachment. A mail message can have only one attachment.

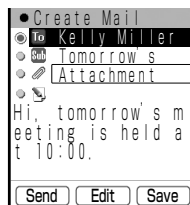


## 8 Press (Send).

➔The animation for sending e-mail is displayed and the e-mail message is sent.



### Note

 
- If the Inbox is full of unread mail, a message telling you that there is no room in the Inbox will appear when you select *E-mail* and press  (Select) on the Select Mail menu. If this happens, delete any mail you don't need from the Inbox.

## Using the Camera in Smart Mode

### Taking a Photo


- 1 When the standby screen is displayed, press .

➔The Camera menu appears.

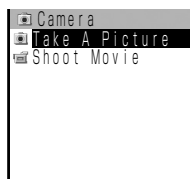

- 2 Use  to select *Take A Picture* and then press  (Select).

➔The monitor screen appears.

- You can change the mode by pressing  (Size).



- 3 Perform Step 2 of the procedure under "Taking a Photo" on page 62.





## Viewing a Photo

- 1 When the standby screen is displayed, press .


➔The Launcher menu appears.



 
- 2 Use  to select *Data Folder* and then press  (Select).

➔The Data Folder menu appears.



- 3 Use  to select *Photo Folder* and then press  (Select).

➔The Photo Folder opens.

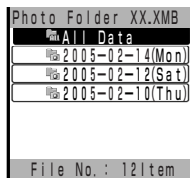

- 4 Perform Steps 3 and 4 under "Viewing Photos/Movies" on page 65.

# Other Functions

---

In addition to the functions covered in this Basic Manual, the A5509T also has the following features.

## Only Mail

You can send a message with a movie or photo attachment to a specific recipient without opening the A5509T.

## Cuckoo Clock

A movie is played on the sub display to inform you of the time, every hour on the hour.

## EZ Chaku-Uta(TM)

You can specify the actual song of a particular artist as an incoming ring tone.

## Movie Setting

You can specify a movie you recorded as an incoming ring tone or incoming screen.

## Edit Movie

You can add subtitles (two lines of 10 characters each) and record a voiceover after recording a movie.

## EZ Applications (BREW®)

You can enjoy using various applications including large-volume games that are rich in expressive content, and standby applications.





 









## Photo Mixer

You can use an animation template with melody to create your own original animation from a mixture of photos and text. You can attach animations to e-mail messages.

## Voice Recorder

 You can record voice memos while the cell phone is in standby. This feature comes in handy for recording during a meeting of seven or eight people, when having a discussion with few people, etc.

# Troubleshooting

Symptom	Check	Measure	Reference Page
Cannot turn on power.	● Is the battery pack charged?	Charge the battery pack.	10
	● Did you hold down  for at least one second?	Hold down  for at least one second.	11
Cannot make calls.	● Is power turned on?	Hold down  for at least one second.	11
	● Is  (out of range indicator) displayed?	Move to a location where  (out of range indicator) is no longer displayed, and try again.	11
	● Is your hand covering the area around the built-in antenna?	Make sure your fingers or any other part of your hand is not touching or covering the area around the built-in antenna.	11
	● Did you enter the phone number starting with the area code?	When making a call to a phone other than a cell phone, you need to enter the area code first even if you are inside the same area.	26
Cannot receive calls.	● Is  (out of range indicator) displayed?	Move to a location where  (out of range indicator) is no longer displayed.	11
	● Is power turned on?	Hold down  for at least one second.	11
No response when a key is pressed.	● Is power turned on?	Hold down  for at least one second.	11
A warning tone sounds and power turns off.	● Is there enough power left in the battery pack?	Charge the battery pack.	10
Calls are answered automatically.	● Is voice memo turned on?	Hold down  for at least one second to turn off voice memo.	31
Cannot hear the other party.	● Is the earpiece volume level too low?	While talking, press the top of  . Increase the earpiece volume.	36
When making a call, a beeping sound is heard from the earpiece and a connection cannot be established.	● Are you out of the service area or in a location where the signal is too weak?	Move to a location where  (out of range indicator) is no longer displayed.	11
	● Is the wireless line congested or is the phone you are calling busy?	End the call and try again later.	26
The incoming indicator flashes but the ring tone does not play.	● Is manner mode turned on?	Hold down  (side key 2) for at least one second to turn off manner mode.	30
	● Is  (silent indicator) displayed on the standby screen?	Increase the volume of the incoming call ring tone.	35
Cannot charge the battery pack.	● Is the Toshiba AC adapter 02 plugged into a power outlet?	Insert the adapter in the power outlet properly.	10

# Index

## A

Accessories .....	8
Adjusting earpiece volume .....	36
Antenna .....	11

## B

Battery level .....	11
Battery pack .....	8,9,10

## C

Camera .....	59
Movies .....	63
Photos .....	62
Cell phone etiquette .....	1
Cell phone features .....	2
Character input .....	37
Character entry mode .....	37
Charging the battery pack .....	10
Checking charges .....	73
C-mail .....	47
Creating and sending .....	57
Reading .....	58

## D

Desktop holder .....	8,10
Display .....	9,18
Domain .....	21
Downloading Chaku-Uta(TM) .....	70

## E

E-mail .....	47
Attaching images (photos/movies) .....	66
Creating and sending .....	48
Initial settings .....	19
New mail .....	51
Reading .....	51
Replying .....	54
Viewing attached images .....	53
E-mail address .....	20
Changing .....	21

Enter .....	39
Entering characters .....	37
Entering characters from the same key .....	38
Entering pictograms .....	41
Extra large characters .....	23
EZnaviWalk .....	74
Current Mail .....	75
Current Map .....	74
Go Home .....	74,77
Going-Out Menu .....	75
My Spot .....	75,76
EZweb .....	67
Accessing sites .....	68
Initial settings .....	19
Top menu .....	68,69

## I

Images (photos/movies)	
Attaching to e-mail .....	66
Photo mail service .....	66
Incoming history .....	28
Incoming indicator .....	9
Indicators .....	18
Initial settings .....	14,19
Internet .....	67
Sites .....	68,69

## K

Key assignments .....	12
-----------------------	----

## L

Language .....	15
Launcher menu .....	16
Learning the basics .....	12
Limit Mode .....	78
Changing the password .....	78
Checking the status of use .....	83
Setting the use limit .....	80
Turning on and off .....	82
Loud volume .....	36

## M

### Mail

- C-mail .....47
- E-mail .....47

### Manner mode .....30

### Movies

- Attaching to e-mail .....66
- Photo mail service .....66
- Recording .....63
- Viewing .....65

## N

### Names of parts .....9

## O

### One touch text size switching .....52

### One-ring calls .....29

### Option menu .....17

### Outgoing history .....28

## P

### Password .....25

### Phone (call)

- Answering .....27
- Making .....26
- Redialing .....28
- 184/186 .....26

### Phone book .....42

- Dialing .....44
- Editing .....45
- Saving .....42
- Saving a phone number from  
Incoming/outgoing history .....46

### Phone number .....20

### Photo mail service .....66

### Photos (snapshots)

- Attaching to e-mail .....66
- Photo mail service .....66
- Taking .....62
- Viewing .....65

### PIN .....25

### Playback

- Movies .....65

### Photos .....65

### Voice memo .....32

### Power supply

- Turning off power .....11
- Turning on power .....11

## R

### Ring tones

- Changing the type .....33
- Changing the volume .....35

## S

### Signal .....11

### Sites .....68,69

- Bookmarking .....72
- Viewing from bookmarks .....73

### Smart mode .....84

- Creating and sending e-mail and  
C-mail messages .....92
- Entering .....84
- Exiting .....85
- One-touch dialing .....91
- One-touch phone number recording 90
- Saving a phone book entry .....88
- Using the camera .....94
- Using the Launcher menu .....86

### Soft key .....9,13

### Spam .....56

### Standby screen .....11

### Sub display .....9,18

## V

### Voice memo

- Playback .....32
- Turning on .....31

## W

### Warp function key .....9,13

## For inquiries, call:

au Customer Service Center (General Information)

From regular phones:



**0077-7-111**

(toll free)

From **au** cellphones:

**157** area code not required


(toll free)

Pressing "zero" will connect you to an operator,  
after calling "157" on your au cellphone.



### モバイル・リサイクル・ネットワーク

携帯電話・PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and  
recycle unused telephones, batteries and  
battery chargers at stores bearing the   
logo regardless of brand and  
manufacturer to protect the environment  
and reuse valuable resources.

Sales: KDDI CORPORATION・

OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by: **TOSHIBA CORPORATION**

February 2005 Edition