

# English Simple Manual





 
 
## Turning the Power On and Off

### ■ Turning the Power On/Off


 
Press and hold  for more than one second.

## Setting the Date and Time

You can set the phone to display the date and time on the stand-by screen. When this setting is enabled, the phone will receive current information for the local service area, and update its date and time settings accordingly.

Press  → press  → press  → press .

## Checking Your Own Phone Number and E-mail Address

Press  → press .

## Making a Call / Answering a Call

### ■ Making a Call

Enter the phone number you want to call → press .

To adjust the earpiece volume during a call : press .

To end the call : press .

### ■ Answering a Call




 
Press  while the phone is ringing.

## Storing Data in the Address Book / Displaying the Address Book

### ■ Storing Data in the Address Book






Press  for more than one second → press  to select the item you want to store → press  → enter the data → press  → press .

### ■ Displaying the Address Book

Press  to display the Gyo(hiragana row) search screen → press  to select the hiragana row under which the entry is stored → press  to select the appropriate name → press  to display the detail screen of the Address Book.

## Setting the E-mail and EZweb Default Settings

Before you can begin using the E-mail and EZweb services, you must set the default settings. When you set the default settings, your E-mail address will be registered, allowing you to send and receive E-mail as well as access the internet.


 
 




 
 





 
 

 
Press ,  or  → press  → set the default settings → press .

## Using E-mail and C-mail

### ■ E-mail

If you subscribed to the EZweb service when you purchased your phone, you will be able to use the E-mail service immediately. If you did not, please contact the au shop where you purchased your phone for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See "Setting the E-mail and EZweb Default Settings" above.)

#### ■ Sending an E-mail Message

Press  → press  → press  to select the  input field → press  → press  → press  → enter the recipient's address → press  → press  to select the  input field → press  → enter the subject → press  → press  to select the  input field → press  → enter the message → press  → press  → press .

#### ■ Reading a Received E-mail Message


 

 

When you receive an E-mail message, "EX-llX件"(X New E-mail), where X represents the number of messages received, will be displayed on the stand-by screen.

Press  to select "EX-llX件" → press  → press  to select "メインフォルダ"(Main folder) → press  → press  to select the E-mail message you want to read → press .

### ■ C-mail


 
Subscribers in areas other than the metropolitan area and Chubu district need to apply for a separate subscription to use C-mail.

#### ■ Sending a C-mail Message

Press  for more than one second → press  → enter the message → press  → press  → enter the recipient's phone number → press .

#### ■ Reading a Received C-mail Message

When you receive an C-mail message, "CX-llX件"(X New C-mail), where X represents the number of messages received, will be displayed on the stand-by screen.

Press  to select "CX-llX件" → press .

## Using EZweb

EZweb is an information service that allows you to enjoy easy internet access from your mobile phone. If you subscribed to the EZweb service when you purchased your phone, you will be able to use the EZweb service immediately. If you did not, please contact the au shop where you purchased your phone for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See "Setting the E-mail and EZweb Default Settings" above.)

Press  → press  → select the website you want to view.

## Using the Camera (Photo/Movie)

### ■ Taking a Photo

 
Press → press to select " "(Camera) → press → press → press to take the photo → press to save the image.

### ■ Recording a Movie Clip

Press → press to select " "(Camera) → press → press → press to start recording the movie clip → press to stop recording → press to save the image.

## Making an International Call

Example: To call United States, number 212-123-XXXX.



## English Announcement Function

This function allows you to set the phone so that Voice Mail service operation instructions and answering messages are played in english.

Press → press → press → press → press .

## Other Handy Features

### ■ Setting the Manner Mode

Press for more than one second.

To disable the Manner Mode, press for more than one second from the stand-by screen.

### ■ Setting the Voice Record Function

Press for more than one second.

To disable the Voice Record function, press for more than one second from the stand-by screen.

## For inquiries, please contact

au Customer Service Center (General Information)

■ If you are calling from a landline phone : 0077-7-111 (toll free)

■ If you are calling from an au mobile phone : 157 (toll free)