

Basic Manual



W53S

by Sony Ericsson

CDMA 1X
WIN

au by KDDI

Contents/
Before use

Phone call

Text input

Phone book
Pair Function

Mail

Camera

EZweb

EZ Navi

LISMO

Troubleshooting/
Remote Ctrl Lock

Other features/
Index

Welcome

Thank you for purchasing a W53S.

Before using your W53S, read this W53S Basic Manual (PDF manual) to ensure correct use of your W53S. After you have finished reading this manual, save this PDF manual on your PC or recordable media, and store the printed manuals in a safe place so you can retrieve them whenever they are needed.

If you lose any of these manuals, contact an au shop or Customer Service Center.

Printed manuals for W53S (Japanese)

The W53S comes with the "W53S かんたんマニュアル" and the "W53S 取扱説明書."



The following manuals are also available from the au homepage:

- The downloadable "W53S かんたんマニュアル" and "W53S 取扱説明書"
(<http://www.au.kddi.com/torisetsu/index.html>)
- The au online manual (Japanese) for searching by keyword
(<http://www.au.kddi.com/manual/index.html>)

The au online manual (Japanese) is also available from the EZweb:

<To access>

☑(EZ)→☑(EZweb)→"Top menu"→"auお客さまサポート" (au Customer Support)
→"調べる"→"オンラインマニュアル"

If you have any trouble with your cellphone, please visit the "auお客様サポート" (au Customer Support) "故障診断/困ったときは" web site and find out your problem before calling for professional repairs.

- From your W53S ⇒ ☑(EZ)→☑(EZweb)→"Top menu"→"auお客様サポート" (au Customer Support)
→"調べる"→"オンラインマニュアル"→"故障診断Q&A"
- From your PC ⇒ (<http://www.kddi.com/customer/service/au/trouble/kosho/index.htm>)



The font, typeface, shape and color used in this manual may differ from those used on actual screen or may be omitted.

Etiquette

Cellphone etiquette

- Cellphones always emit weak signals while its power is on.
- Enjoy using your cellphone safely without disturbing those around you.

■ ■ Some places forbid the use of cellphones.

- Do not use your cellphone while you are driving. Doing so is dangerous and against the law.
- The use of a cellphone on aircraft is against the law. Be sure to turn your cellphone off before you board an aircraft.



■ ■ Consider where to use your cellphone and be careful of how loud you are speaking.

- Do not make calls while in cinemas, theaters, museums, libraries or other similar places. Turn your cellphone off or set it to the manner mode to prevent others around you from being disturbed by the ringtone.
- Use your cellphone in places where you are not blocking traffic from passing.
- Move to areas where you do not disturb others on trains or in hotel lobbies.
- Take care not to speak too loudly during conversations.
- Ask for other people's permission before taking their photos with your cellphone's camera.



■ ■ Signals from cellphones may adversely effect medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may have a pacemaker. Turn your cellphone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or possess cellphones.



Basics of the cellphone

What W53S offers

Mail

You can send mails to other cellphones or PCs.



Page
48

Camera

You can take photos or record movies and send them by e-mail easily.



Page
62

EZweb

You can download Chaku-Uta[®](ringtones), Chaku-Uta-Full[®](full songs) or wallpapers.



Page
68

EZ Navi

W53S supports "EZ Navi Walk," "Passenger Seat Navi," "Evacuate Navi" and "Security Navi" functions to confirm various location information.



Page
74

LISMO

W53S can be used as a portable music player.



Page
76


EZ FeliCa

You can use W53S as electronic money for shopping, member's cards, point cards, or to get e-coupon information as well.



+JOG (plus jog)


With +JOG, you can directly call up W53S features and perform operations simply.

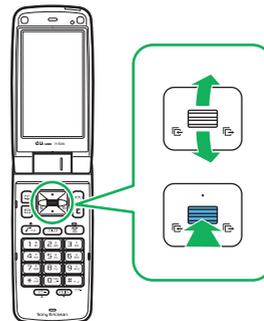

Page
16

Custom Menu

You can customise your own menu by setting frequently used functions.

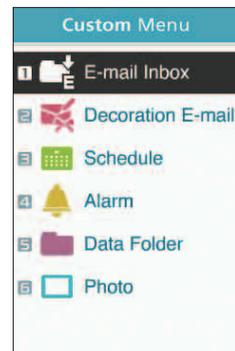

 For details on other useful features, see page 82.

Manner mode and record message

Manner mode

You can use the manner mode to turn ringtones and other tones off to prevent others from being disturbed.

Hold down  for at least one second in the idle screen.



Page
29

Record message

You can record messages from other parties using answering message when you are unable to answer the call.

Hold down  for at least one second in the idle screen.



Page
32

Check the power, the signal, and the battery!

Usually, keep the cellphone's "power" on.

To make or receive calls, turn the power on.

Hold down  for at least one second.



Page
17

You cannot connect where you are not able to get a "signal."

It is sometimes difficult to get a signal in places even within the service area.

 indicates the reception strength.



Page
17

Pay attention to the remaining "battery" power.

The cellphone may not function properly if the remaining battery power is low.

 indicates the remaining battery power.



Page
17

Do not use the cellphone while driving

It is against the law to even handle a cellphone while driving.

(November 1, 2004 Implementation of the Revised Road Traffic Law Enforcement)



✗ Glancing at the screen to see mail



✗ Holding the cellphone to talk

Use drive mode or turn the power off while driving

■ ■ Drive mode

When the drive mode is set, the answering message saying "I am driving right now. Please leave your name and message after the beep." plays in Japanese and the caller's message can be recorded.

Press  in the idle screen, and use  and  to select "Drive."



Watch out for spam and one-ring call!

■ ■ If you get incoming spam...

You can use the mail filter function to block the mail you specify/spoof e-mail.

The following are the main mail filter functions available for preventing spam:

- Reject e-mails marked with "未承諾広告※."
- Reject specified e-mails.
- Reject spoof e-mail.



■ ■ If you have an incoming call from an unknown number...

Such calls may be a scam to get you to return a call to the service with very high charges. This is called a "one-ring call."



The icon  will appear in the Received calls when you receive a one-ring call.

Be careful when you return a call to a number you don't know.

	Received	Dialed
	9/14 11:06	
	1 030001XXXX	
	9/14 10:00	
	2 030004XXXX	
	9/14 9:00	
	3 Carol Adam 	
	9/13 22:00	
	4 John Smith 	
	9/13 17:05	
	5 Ron Edward 	

Disaster Message Board Service

If a large scale disaster occurs, you can register your vital information through EZweb. The registered vital information can be viewed from anywhere in Japan through EZweb or the Internet.

Registering the vital information

- ◆ If a large scale disaster occurs, you can use your au cellphone to register your vital information such as your condition or comments to the "Disaster Message Board" created on EZweb.
- ◆ After registering your vital information, you can notify it by e-mail to your preregistered family or acquaintances. They will be able to know that you posted your vital information on the "Disaster Message Board."

Viewing the vital information

- ◆ You can view the vital information of a person you want to know by entering the phone number from EZweb or the Internet.^{**1}
^{**1} You can view the vital information from other carriers' cellphones, PHS or PC by accessing <http://dengon.ezweb.ne.jp/>.


災害用伝言板
 伝言板トップ
 ~サービス提供中~
 安否情報の登録・確認が
 できます。

[登録しご利用可能地域
の方のみ登録可能です。](#)
[確認](#)
[削除](#)
[安否お知らせメール設定](#)
[サービス概要](#)
[ご利用地域情報](#)
[お問合せ](#)
[災害対策への取り組み](#)
[災害関連情報](#)

[English](#)

To access	<input type="checkbox"/> (EZ)→use <input type="checkbox"/> to select <input checked="" type="checkbox"/> (EZweb)→use <input type="checkbox"/>
	and <input type="checkbox"/> to select "Top menu"→"災害用伝言板"
http://dengon.ezweb.ne.jp/	

- The registered information is saved for up to 72 hours.
- Up to 10 entries can be registered per phone number. When the number of entries exceeds 10, the oldest entry will be overwritten.
- A demonstration for this service can be viewed from (EZ) →use to select (EZweb)→use and to select "Top menu"→"auお客さまサポート" (au Customer Support) →"災害用伝言板(デモ版)."
- You can use the English version by selecting "English."

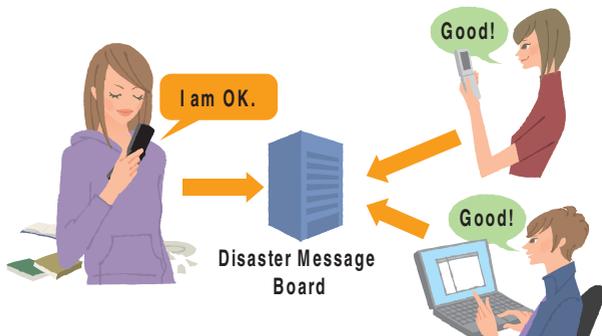

Contents


Etiquette	1
Cellphone etiquette	1
Basics of the cellphone	2
What W53S offers	2
Manner mode and record message	4
Check the power, the signal, and the battery!	4
Do not use the cellphone while driving	5
Use drive mode or turn the power off while driving	5
Watch out for spam and one-ring call!	6
Disaster Message Board Service	7
Before use	10
Checking the package	10
Names of parts	11
How to charge the battery	12
How to attach Style-Up Panel	13
How to connect stereo earphone to W53S	14
How to use the keys	15
Turning the power on	17
Default settings	18
Before using English display	18
How to read the display	18
Displaying the menu	20
Initial settings for e-mail and EZweb	22
Confirming your cellphone number/e-mail address	23
Changing your e-mail address	24
Phone call	26
Making a call	26
Making an international call	26
Receiving a call	27
Redialing the number (Dialed/Received)	28
Changing the volume during a call	29
Setting the manner mode	29
Changing the volume and tone of the ringtone	30
Setting the record message	32
Playing back recorded messages	33
Text input	34
Changing the input mode	34
Inputting text	35
Phone book	40
Saving to the phone book	40
Editing the phone book	42
Making a call from the phone book	44
Saving from Dialed/Received calls	45
Pair Function	46
Saving to the Pair Function	46
Making a call by using Pair Function	47
Mail	48
Using e-mail	48

	Creating and sending e-mail	49
	Opening a received e-mail	52
	Replying to a received e-mail.....	54
	Reading e-mails with photo or movie attached	55
	Filtering spam	56
	Using C-mail	57
	Creating and sending C-mail	58
	Opening a received C-mail	60
Camera		62
	What you can do with the camera.....	62
	Successful taking of photos	63
	Taking photos.....	64
	Viewing photos you have taken	66
	Attaching a photo to e-mail	67
EZweb		68
	About EZweb	68
	Displaying the EZ Top menu	68
	Saving your favorite sites	70
	Viewing a site saved to the Bookmark.....	70
	Confirming your call costs.....	71
	Downloading Chaku-Uta® (ringtones)/Chaku-Uta-Full® (full songs).....	72
EZ Navi		74
	What you can do with EZ Navi.....	74
LISMO		76
	What you can do with LISMO	76
	Playing back an audio/movie file.....	77
Troubleshooting		79
Remote Ctrl Lock		80
	In case you have lost your W53S.....	80
Other features		82
Index		84

Before use

Checking the package


◆ Main unit

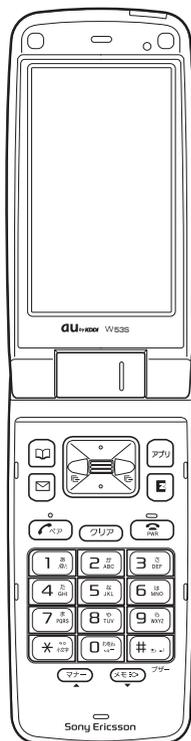


◆ Battery pack



◆ Desktop holder

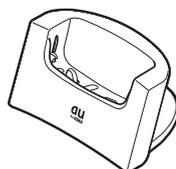

◆ USB cable (sample)

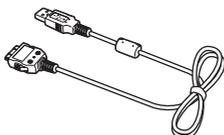

◆ CD-ROM



◆ Sony Ericsson round-type earphone jack conversion adaptor 01



◆ Stereo earphone (sample)



◆ "W53S かんたんマニュアル" (Japanese)



◆ "W53S 取扱説明書" (Japanese)



◆ Warranty (Japanese)

◆ Safety Precautions (Japanese)




◆ Others (Japanese)

- GLOBAL EXPERT User's Guide (Leaflet)
- Osai-fu-Keitai® Basic Manual (Leaflet)
- LISMO Installation Guide (Japanese)
- Promotional Fliers (Japanese)

 "Memory Stick Duo" (sold separately) and Memory Stick Duo adaptor (sold separately) are not included in this package.

 AC adaptor is not included in this package. Please purchase our standard AC adaptor 01 (optional).

Names of parts

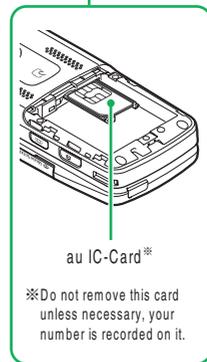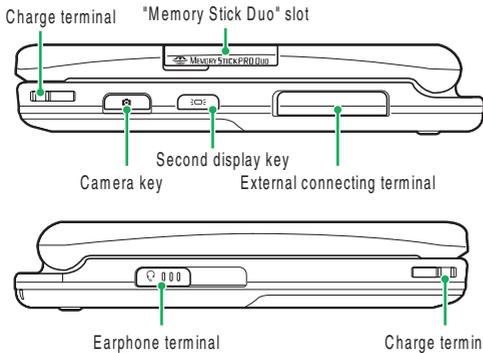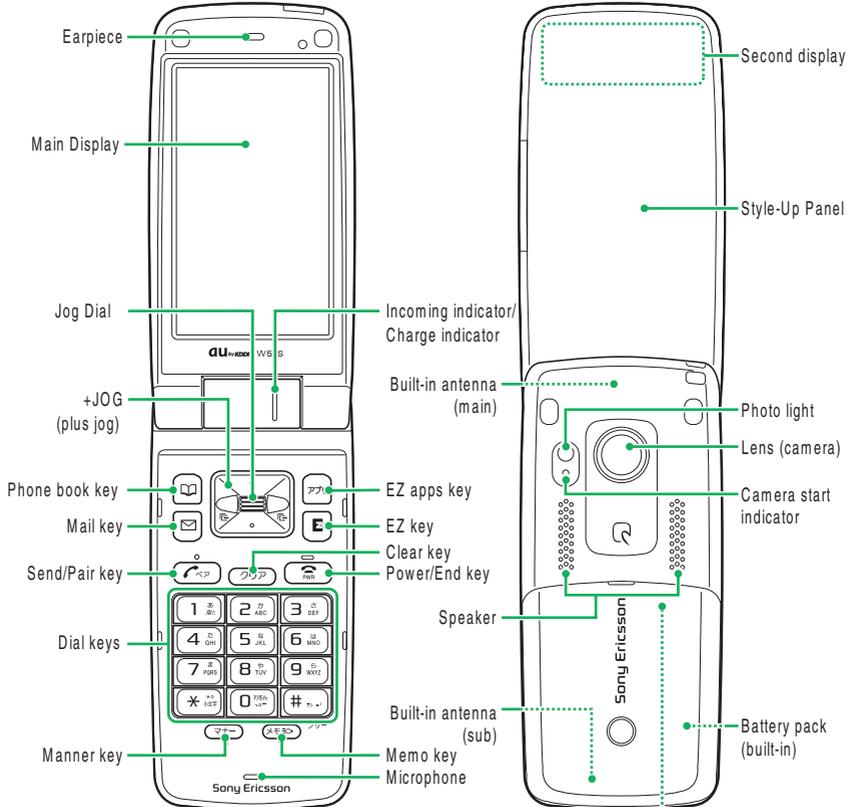

How to charge the battery


The battery pack is not fully charged at the time of purchase.
Before you use the W53S, charge the battery pack.

1 Connect the standard AC adaptor 01 (optional) to the connecting terminal of the desktop holder.

 Carefully check the connector shape, and then connect it.

2 Fold out the power plug of the standard AC adaptor 01 (optional), and plug it into a 100 V AC power outlet.

3 Place W53S (closed, Battery pack attached) onto the desktop holder.

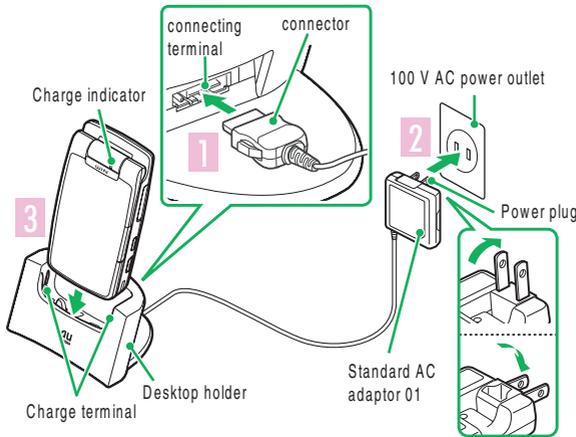

• **Charging is in progress**

Charge start tone sounds and the charge indicator lights up in red.

 appears.

• **Charging is finished**


Charge completed tone sounds and the charge indicator light turns off.

 When the battery is fully charged, pull out W53S upwards.

■ ■ Charging by directly connecting the standard AC adaptor 01 (optional)

You can also charge the battery pack by directly connecting the standard AC adaptor 01 (optional) to the W53S.


 Carefully check the connector shape, and then connect it.

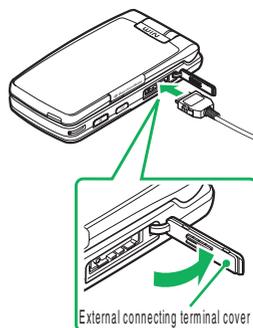

How to attach Style-Up Panel


■ ■ To remove

- ① Open the slot cover.
- ② Lift the panel up from the center of the bottom edge (shown as **A**) and remove.

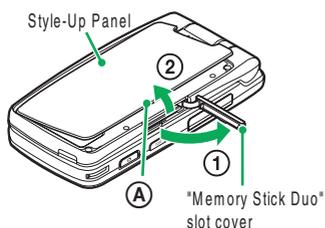

■ ■ To attach

- ① Open the slot cover.
- ② Set protruding edges to corresponding notches on W53S as shown below.
- ③ Attach the panel in the direction of the arrow.
Push the **B** part downwards until it clicks into place.
- ④ Close the slot cover.

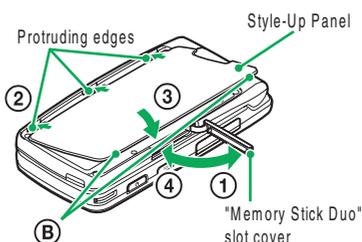


 Be sure to close "Memory Stick Duo" slot cover completely (the slot cover is also used to lock the Style-Up Panel).

How to connect stereo earphone to W53S

Before use

1 Connect the stereo earphone to the Sony Ericsson round-type earphone jack conversion adaptor 01.

2 Slide the earphone terminal cover to open in the direction of the arrow, as shown below. Then insert the Sony Ericsson round-type earphone jack conversion adaptor 01 plug straight to the terminal.

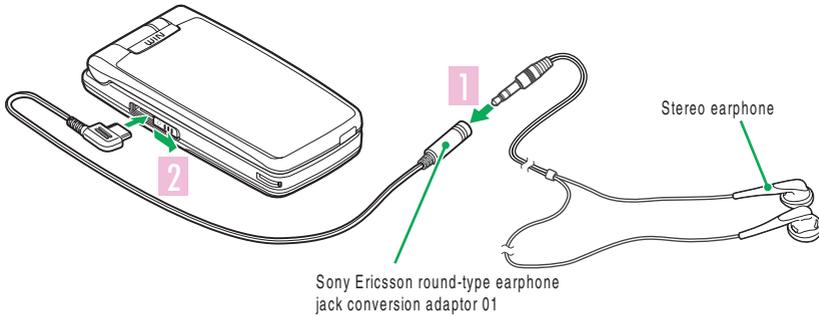

 Do not force to connect in the wrong direction. Otherwise, it may cause damage. Please connect in the direction as shown in the illustration above.

How to use the keys

[E]: Open phone book
Hold down (1 second): Save to the phone book

[E]: Open E-mail menu
Hold down (1 second): Open C-mail menu

[Call]: Make or receive a call
 Open pair function

[クリア]: Cancel operation
When entering characters: Delete characters

[マナー]: Open manner display
Hold down (1 second): Set or cancel the manner mode


[アプリ]: Open EZ apps(BREW[®]) menu

[E]: Open EZ Service menu

[Call]: End a call or operation
Hold down (1 second): Turn power on
Hold down (2 seconds): Turn power off

[0] ~ [9]、[*]、[#]: Enter phone numbers/ * /# /characters/other symbols

[メモ]: Open memo function
Hold down (1 second): Set or cancel the record message

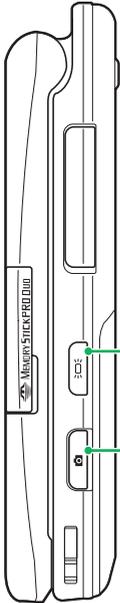

[CAM]: When main unit closed, switch the contents shown on the second display
Camera ON: Switch photo/movie
au Music Player active: Increase the volume

[CAM]: Start photo function
Hold down (1 second): Start movie function
Camera ON: Take photos/record movies
au Music Player active: Decrease the volume


Before use

Continued on the next page

How to use +JOG

With W53S, you can call up features or select items by using +JOG (plus jog) and Soft Keys. +JOG contains cross key and "Jog Dial" in the center. When selecting items, press cross key or turn the Jog Dial up and down to move the cursor to where you want to place it. Then press the Jog Dial to enter your selection.

·In this manual, operations to move the cursor are explained with cross key movement.

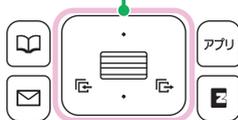


Display	Description in this manual	Operation	Explanation
	 	 	<p>Press up and down Turn the Jog Dial up and down Move the cursor up and down</p> <p>Operations in the idle screen</p> <p> Hold down (1 second): Open schedule</p> <p> Hold down (1 second): Open data folder (page 66)</p> <p> :Open schedule :Open data folder</p>
			<p>Press left and right Move the cursor left or right Display previous or next screen</p> <p>Operations in the idle screen</p> <p> :Open Received calls (page 28) :Open Dialed calls (page 28)</p>
			<p>Press Jog Dial Select the item</p> <p>Operations in the idle screen Open Main menu</p> <p>Hold down (1 second): Set or cancel keylock</p>

Soft keys

Soft keys work according to the displayed indication as shown below.


The displayed indications and function of the keys will vary depending on the operation selected.

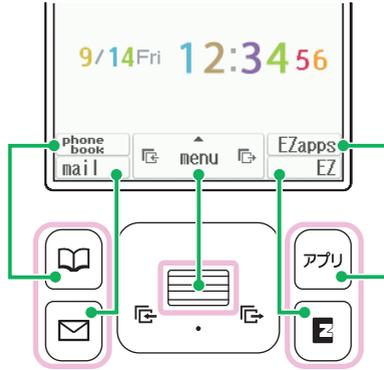

Turning the power on

1

 Hold down  for at least one second.



Retrieving card(UIM) info (user operation is disabled)

Check the remaining battery power.


			
Fully charged	Medium	Low	Fully discharged

- Charge the battery pack when the power is low.
- "" appears during charging.

Check the reception strength.

				
Strong	Medium	Weak	Very weak	Out of service area

- You cannot receive or make calls when "" (Out of service area) is displayed.
- You may not be able to receive or make calls when "" (Very weak) is displayed.

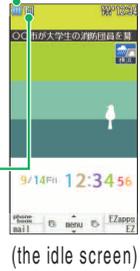

(the idle screen)

To turn the power off

Hold down  for at least two seconds.

Default settings

The followings are set by default.



Chg Lock No. (Change Lock No.)	1234	Font size	General font : Large EZweb font : Middle E-mail font : Middle C-mail font : Large Input font : Large
Caller ID	ON		

Before using English display

■ ■ To set English display

- ① Press (メニユー) in the idle screen → press .
- ② Press to select "English," and press (選択).

How to read the display

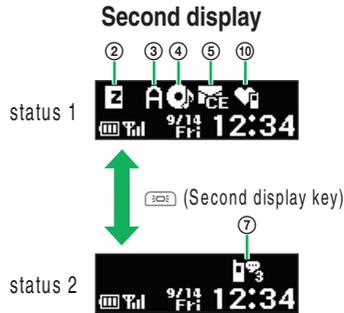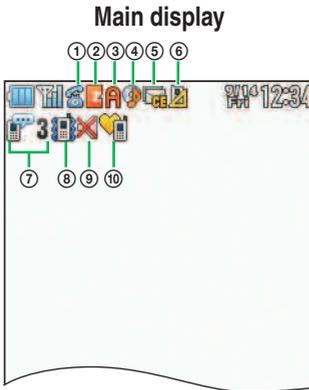


Icon ^{※1}	Description
①	- During a call
②	While you are using EZ Service menu/EZweb
③	While you are using EZ apps
④	While you are using au Music Player
⑤	When mail was received but not yet read
⑥	- When you missed an incoming call
⑦	While record message is set The number of recorded messages (1 to 3)
⑧	- When the vibrator is set to "ON"
⑨	- When the ring volume is set to "OFF"
⑩	While the manner mode is set

※1 Main display icon is on the left, Second display icon is on the right.

Notification Icons

Notification Icons appear on screen when you have missed calls or unread mails, other function-related information to notify, etc. On main display, you can see that information using  to move the cursor on the icon and press  (select).

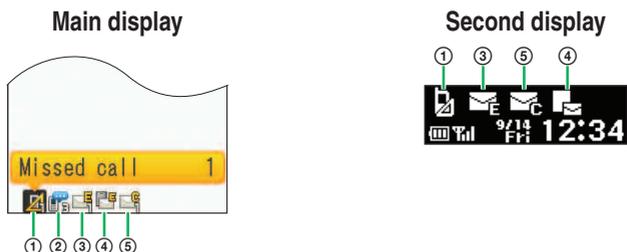

Icon ^{※1}	Description
① 	When there is a missed call
② 	-
③ 	When an e-mail was received
④ 	When there is an unreceived e-mail stored at the center
⑤ 	When a C-mail was received


※1 Main display icon is on the left, Second display icon is on the right.

 To open Main menu from the screen with Notification Icons, press  or  to move the cursor away from the icon and press  (menu).

Displaying the menu

You can access "Main menu" and "EZ Service menu" to use various settings and functions of W53S. Use  and  for operation.

■ ■ Main menu

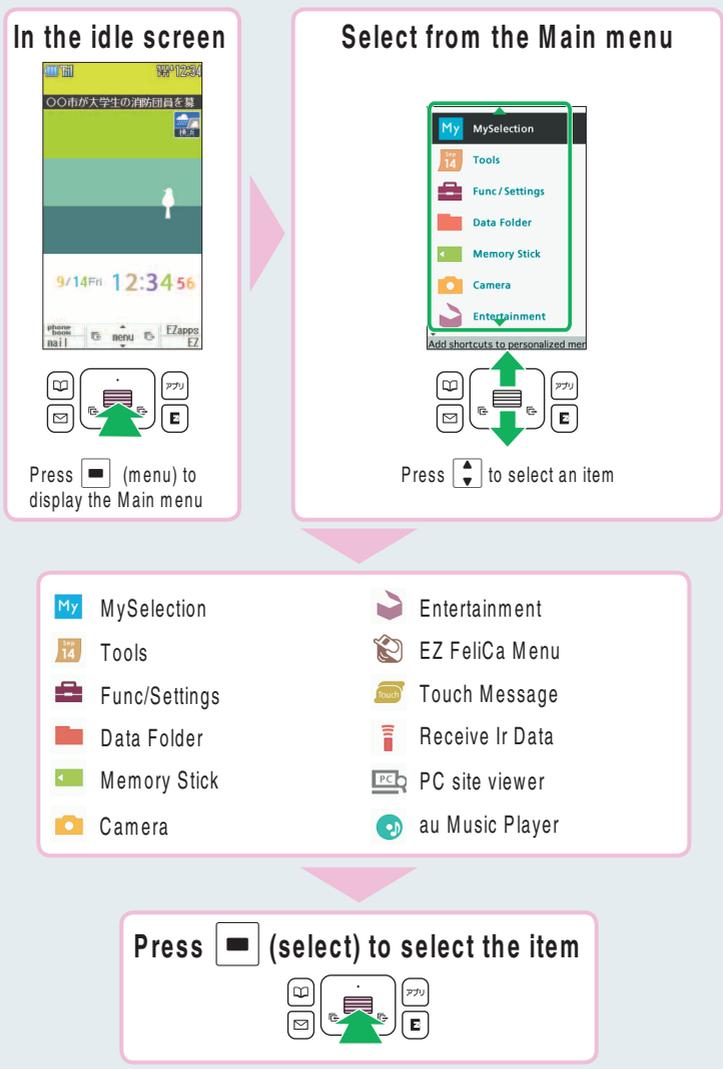

EZ Service menu


You can access the information sites on EZweb and use EZ Navi, EZ Channel-Plus/
EZ Channel, etc.

In the idle screen




Press **E** (EZ) to display
the EZ Service menu

Select from the EZ Service menu

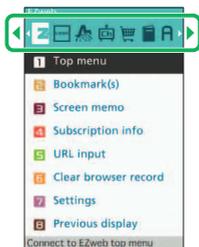

Press **←** **→** to select a
category

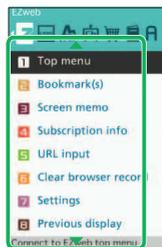

Press **↑** **↓** to select an
item

- | | |
|---|---|
|  EZweb |  Shopping&Auctions |
|  LISMO |  EZ Book |
|  EZnavi |  EZapps |
|  EZ Channel-plus | |

Press **■** (select) to select the item




Initial settings for e-mail and EZweb

If you subscribed to the EZweb service, make the following initial settings.

1

Press  (mail) in the idle screen, and press  (ok).

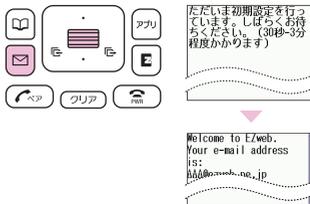

2

Press  (OK).



 Without EZ News Flash settings, EZ News Flash setting screen appears.

 You can also initialize the settings by pressing  (EZ) or  (EZapps).

 Your e-mail address is automatically determined when you initialize the settings.


If you have not subscribed to EZweb service yet

Contact an au shop or Customer Service Center. You need to subscribe to the EZweb service to use e-mail, EZweb or other EZ services.

Confirming your cellphone number/e-mail address

1

Press  (menu) in the idle screen.

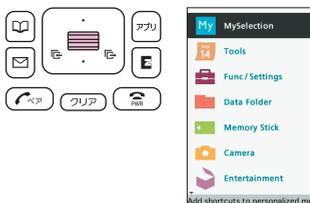

2


Press .

You can confirm your cellphone number and e-mail address.



 You can also confirm your cellphone number and e-mail address by pressing  (menu) in the idle screen, and use  and  to select "Func/Settings" → "Profile."

Changing your e-mail address

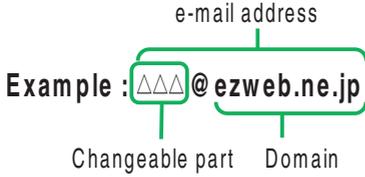


Before use


1 Press (mail) in the idle screen.
Press to select "Settings," and press (select).




2 Press to select "Other," and press (select).
Press to select "Yes," and press (select).

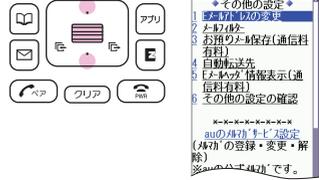

3 Press to select "Eメールアドレスの変更," and press (Select).

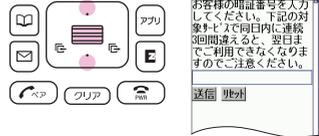

4 Press to select the input field, and press (Edit).
Enter your security code, and press (ok).

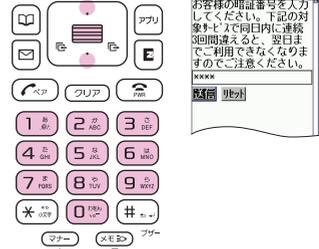


- Security code is the 4-digit number that you wrote in the application form when subscribing.
- Note that no setting operation is allowed until the following day if you enter the wrong security code three times a day.

5

Press  to select "送信," and
press  (Select).

 Press  to select "承諾する,"
and press  (Select).



メールアドレスを変更します。
ご希望のメールアドレスを入力してください。

メールアドレスの注意※
初回は利用できません。最初に数字の「0」を使用することはできません。

@ezweb.ne.jp
送信 印刷
前のページへ

6

Press  to select the input field,
and press  (Edit).

Enter the text before @, and press
 (ok).



メールアドレスを変更します。
ご希望のメールアドレスを入力してください。

 
メールアドレスの注意※
初回は利用できません。最初に数字の「0」を使用することはできません。

AAA
@ezweb.ne.jp
送信 印刷
前のページへ

 For details on how to input e-mail addresses, see page 35.

7

Press  to select "送信," and
press  (Select).



新しいメールアドレスは
AAA@ezweb.ne.jp

です。
よろしいですか？

 
送信 印刷

When the e-mail address cannot be changed

The e-mail address that you entered is already used. Enter a different e-mail address.

8

Press  to select "OK," and
press  (Select).



Update is complete.

 For details on how to confirm your e-mail address, see page 23.

The display if you are unable to answer a call

If you are unable to answer a call, you are notified that you had a call on the display.

If you press  (select), you can confirm the phone number of the other party that called you and redial that party.



 
Redialing the number (Dialed/Received)

1

Press  in the idle screen.

 (): Display Received calls.

 (): Display Dialed calls.



Icons of Received calls

 : The call that you did not answer (missed call)

 : The call within three seconds of incoming time (one-ring call)

 : The message stored at the Voice Mail center

2

Press  to select the phone number you want to call, and press

 .



The call is connected to the phone number you selected.



In each memory, the phone numbers of last 30 calls can be saved.

Changing the volume during a call

Press  during a call.

: The volume increases
(Level 1 to 5).

: The volume decreases
(Level 5 to 1).



Setting the manner mode

The W53S vibrates to notify you of incoming calls.

Hold down  for at least one second in the idle screen.

The manner mode is set, and  and  appear in the display.
At the same time, record message is set, and  appears in the display.



To cancel the manner mode

Hold down  for at least one second in the idle screen.


 
 There are four types of manner settings: "Manner," "Silent," "Drive" and "Original."

Changing the volume and tone of the ringtone

Example: When setting a "preset" ringtone

1

Press  (menu) in the idle screen.

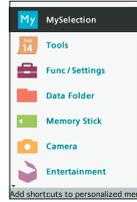



2

Press  to select "Func/Settings," and press  (select).




3

 Press  to select "Sound/Vibrator," and press  (select).

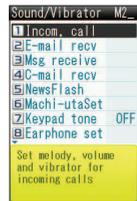


4

 Press  to select "Incom. call," and press  (select).



5

 Press  to select "Volume," and press  (select).



6

Press  to adjust the volume, and press  (ok).



"OFF" :The ringtone does not sound.

"1" to "5" :The ringtone sounds at the level you set.

 
"Step down":The volume of the ringtone decreases.

"Step up" :The volume of the ringtone increases.

 "Step down" and "Step up" can be selected by pressing  over "5."

7


Press  to select "Melody," and press  (select).



 "Modern" is set by default.

8

 Press  to select "Preset," and press  (select).




 If you press  (play), the ringtone you selected plays back.

If you press  (■) while the ringtone is being played, W53S stops playing.

9

 Press  to select a ringtone, and press  (save).



Setting the record message

1

Hold down  for at least one second in the idle screen.

Record message is set, and  appears in the display.



 You can also use the record message to record a message from the other party by pressing  (memo) while receiving a call.

 You can record up to three messages within 20 seconds each.

To cancel record message

Hold down  for at least one second in the idle screen.

 If the record message still contains any message,  1 remains in the display even after canceling record message.  disappears when record message data is deleted.

 When you turn the power off or when you are in a place where the signal is weak, use Answering Service (Voice Mail).

Playing back recorded messages

When a message is recorded

A message and  1 (number of recorded messages) appear in the idle screen.



 
1

Press  in the idle screen.





2

Press  to select "Record msg," and press  (select).





3

 Press  to select "Play msg," and press  (select).

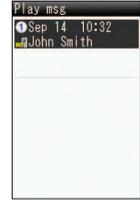

4

 Press  to select the recorded message to play back, and press  (play).

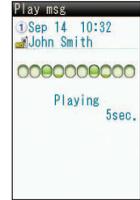

 You can delete recorded messages by pressing  (delete) while the recorded message is playing back, or by pressing  (delete) after playing the recorded message.

Text input

Changing the input mode

Input text by changing the input modes below.



Input mode


-  : Kanji/Hiragana mode
-  : Kana mode (single/double byte)
-  : English mode (single/double byte)
-  : Number mode (single/double byte)

1

Press  (mode) in the text input screen.



Each time you press  (mode), the input mode changes in following order:
English → Number → Kanji/Hiragana → Kana → English...

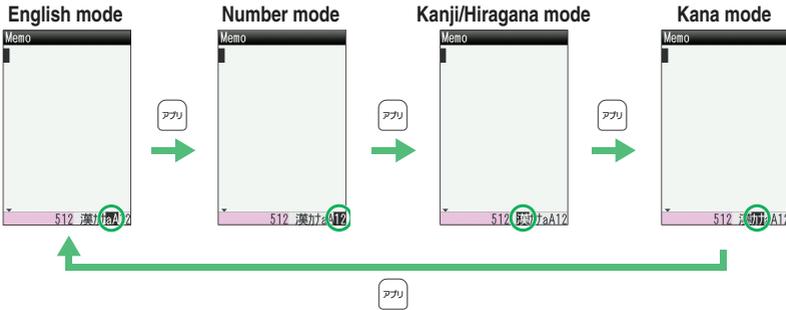


The input mode that you can select is different depending on the current input screen.

Inputting text

To input alphanumerics

 In the text input screen, press the keys as described in the table below.




◆ Character key assignment table (single byte alphanumerics)

Key	Number of times to press the key												
	1	2	3	4	5	6	7	8	9	10	11	12	13
	.	@	/	:	-	_	~	1					
	a	b	c	A	B	C	2						
	d	e	f	D	E	F	3						
	g	h	i	G	H	I	4						
	j	k	l	J	K	L	5						
	m	n	o	M	N	O	6						
	p	q	r	s	P	Q	R	S	7				
	t	u	v	T	U	V	8						
	w	x	y	z	W	X	Y	Z	9				
	Space	!	?	-	,	'	;	()	"	&	¥	0
	!	?	-	,	'	;	()	"	&	¥		
	Break lines												
	Back space function when entering characters ^{※2}												

※1 is also used to switch between uppercase and lowercase of current displayed characters.

 ※2 When you enter the characters by pressing keys, is used to reverse the order of characters to be appeared (Back Space function).



You can input your e-mail address using up to 30 single bytes alphanumeric in lowercase including "-" (hyphen), "." (dot), and "_" (underscore). Note, however, "." (dot) and "0" cannot be used at the beginning of your e-mail address. Characters and symbols with blue background in the above table cannot be used before "@" of "△△△@ezweb.ne.jp."

Continued on the next page

Example: To input "tomy1" in the mail address

Input the text before @.

t : Press **8** once.

o : Press **6** three times and press **▶** once.

m : Press **6** once.

y : Press **9** three times.

1 : Press **1** eight times.

Or, press **1** once and press **#** once.




 For details on how to input "@ezweb.ne.jp," see page 39.

■ ■ To consecutively input characters assigned to the same key

Input the first character, press  and press the next character key.

After inputting the first character, no operation for about four seconds automatically moves entering position.


Example: To input "ab"

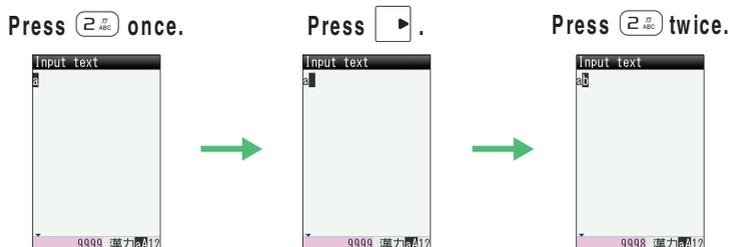

■ ■ To input uppercase characters

Example:    

 a → A → a



■ ■ To delete characters

Example: Press  once.

abcd  → abcd 

Hold down  for at least one second.

abcd  → 
(All characters are deleted.)

 Continued on the next page


☐☐ To input pictorial characters, symbols and emoticons

1

Press **E** (😊/smb) in the text input screen.



Each time you press **E** (😊/smb), the character group changes in following order: Pictorial characters→Symbols (double byte)→Symbols (single byte)→Emoticons→Pictorial characters...


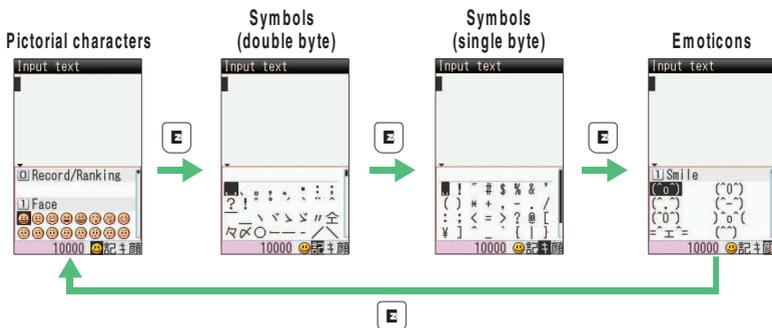


You can switch categories of pictorial characters or emoticons by pressing (category) on each selection screen.

Text input

2

 Press to select the character group you want to use, and press (select).

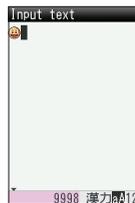

The character group that you can select is different depending on the current input screen.


☐☐ To input useful sentences

You can enter your frequently used sentences using our useful sentence list.

Example: To input "@ezweb.ne.jp" in the mail address


1

Press  (option) in the text input screen.

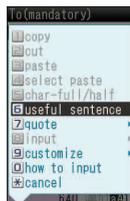


2

 Press  to select "useful sentence," and press  (select).





3

 Press  to select "Internet," and press  (select).



4

 Press  to select "@ezweb.ne.jp," and press  (select).

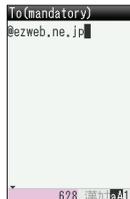


Phone book

You can save up to 1,000 phone numbers or e-mail addresses.

Saving to the phone book


1

Hold down  (phone book) for at least one second in the idle screen.

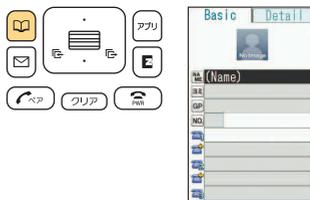


2

Press  to select **NAME** (Name), and press  (select).

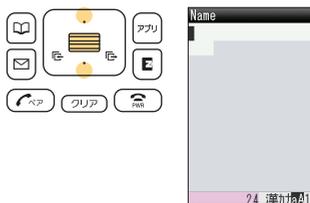

3


Enter the name, and press  (ok).
 (JP reading) is automatically entered.

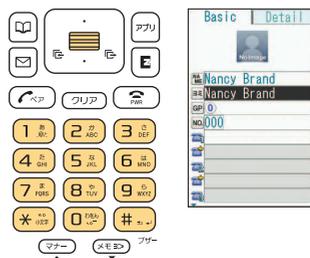

 For details on how to enter text, see page 34.

4

Press  to select  (Phone no.1), and press  (select).

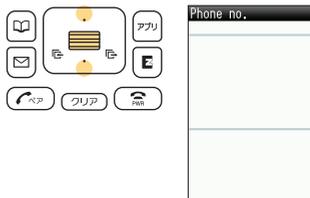

5

Enter the phone number, and press  (ok).

" Mobile" is automatically entered to  (phone type).


 


 When saving a regular phone number, start with the area code.

 To end saving to the phone book, jump to step 8.

6

Press  to select  (Mail address1), and press  (select).

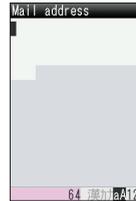

7

Enter the e-mail address, and press  (ok).

 
" Mobile" is automatically entered to  (e-mail address type).



 For details on how to enter e-mail addresses, see page 35.

8

Press  (cmplt).



 The entry is automatically saved to the smallest available memory number from 000 to 999.

 
 You can also save other items such as groups, ringtones, postal addresses and birthdays.

Editing the phone book

Example: To edit phone numbers

1

Press  (phone book) in the idle screen.



To switch from the "あ" to "ETC" display lines

Press  .



2

Press  to select the entry to edit, and press  (select).



3

Press  (edit).



4


Press  to select the item you want to edit (in this case, ,) and press  (select).



5


Edit the information, and press

 (ok).

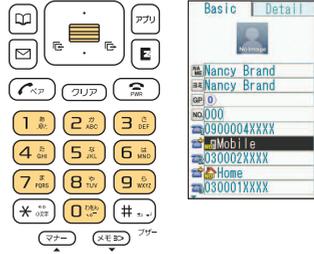

6

 Press  (cmplt).



Deleting the phone book

 
Example: To delete one entry

- ① Press  (phone book) in the idle screen. Press  to select the entry to delete, and press  (select).
- ② Press  (option). Press  to select "delete," and press  (select).
- ③ Press  to select "Yes," and press  (select).

Making a call from the phone book

1

Press  (phone book) in the idle screen.



To switch from the "あ" to "ETC" display lines

Press  .




2

Press  to select the person to call, and press  (select).



3

Press  to select the phone number, and press .

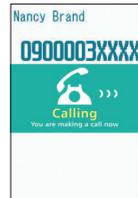

Saving from Dialed/Received calls

1

Press  in the idle screen.

 (): Display Received calls.

 (): Display Dialed calls.



2

Press  to select the phone number to save in the phone book, and press  (save).

"New": Create and save a new address.

"Add": Add and save newly added information.



3

Press  to select "New," and press  (select).

The phone book edit screen appears. The phone number you selected is automatically entered.



 For details on how to save information in the phone book, see steps 2 to 8 on pages 40 and 41.

Pair Function

Saving to the Pair Function

You can save up to five phone numbers (like frequently used ones) from the phone book, and make calls or send mails with a simple operation.

You need to save Pair Partners to the phone book beforehand. For details on how to save numbers in the phone book, see pages 40 and 41.

1

Press  in the idle screen, press   to display the tab you want to save a partner to.



2

Press  (set).



3

Press  to select the person to save, and press  (save).



Name, Phone no., Mail address and image of the person you selected are saved.



Deleting Pair Partner's data from the phone book also cancel the Pair Function for those data.

Making a call by using Pair Function


1

Press  in the idle screen.




2

Press   to select the person to call.

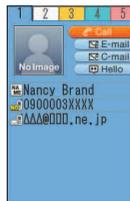

3

Press   to select  (Call), and press  (select).

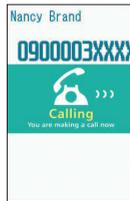

To send mail

Press   to select  (E-mail) or  (C-mail), and press  (select) in step 3.

-  For details on how to create or send e-mail, see steps 7 to 11 on pages 50 and 51.
-  For details on how to create or send C-mail, see steps 3 to 4 on page 58.

Mail

Using e-mail


 EZweb subscription required

About e-mail

E-mail allows you to exchange mail with PCs or cellphones that supports e-mail. You can send mail comprising up to 5,000 double/10,000 single byte characters, also photos and movies.

Before using e-mail

- You need to subscribe to the EZweb service to use the e-mail service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase.
- Make initial settings before using the e-mail and EZweb services. See page 22 to make initial settings.
- You can send e-mail to up to five recipients at a time.
- You can send up to 1,000 e-mails (counted by recipients of messages) in one day.
- It may take a short while to send/receive mails when they have attachments.

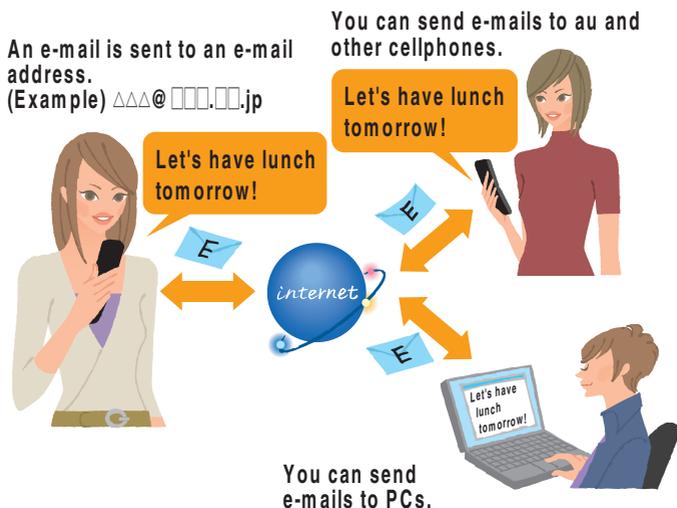


 Data communications fee (varied by the data amount) is charged when sending/receiving e-mail.

Creating and sending e-mail

1

Press  (mail) in the idle screen.

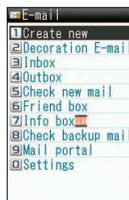

2

Press  to select "Create new," and press  (select).



Icons

To (E-mail address) : The e-mail address of the recipient


 
Sub (Subject) : The subject of the e-mail

 (Attached data) : The data attached to e-mail

 (Text) : The main text of the e-mail

3


Press  to select **To** (E-mail address), and press  (select).

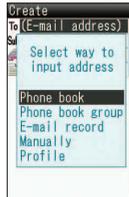

 There are three types of destinations: To, Cc and Bcc. You can send e-mail to up to five destinations at a time (up to 640 single byte characters including To, Cc and Bcc).



 Continued on the next page

 4 Press  to select "Phone book," and press  (select).



 You can select an address from sent/received record or enter an address manually.

 
5 Press  to select a person you want to send an e-mail to, and press  (select).

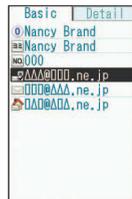

6 Press  to select an e-mail address, and press  (select).



 7 Press  to select Sub (Subject), and press  (select).





8 Enter the subject, and press  (ok).



9

 Press   to select  (Text), and press  (select).

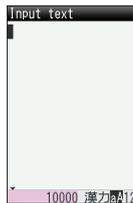

10

Enter the main text, and press

 (ok).



11

Press  (send).

The e-mail is sent.



Opening a received e-mail

When you receive an e-mail

A message and  appear in the idle screen.


 


1

Press  (select).

Icon

: The folder containing new mail

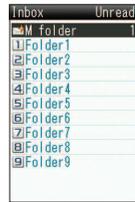

2

 
Press  to select the folder containing new mail, and press

 (select).

Icons

: The "read mail" that has already been read



: The "unread mail" that has not yet been read



3

Press  to select the new mail, and press  (viewer).

 How to view received mail

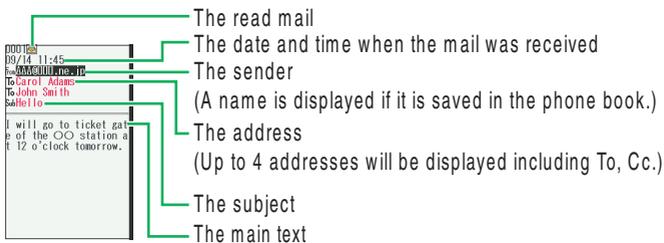


 Hold down  for at least one second to change the font size.

 Press  or  to return to the received messages.

☐ To open an e-mail in the Inbox

1

Press  (mail) in the idle screen.

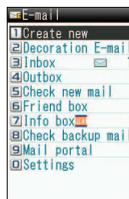


Icon

:The "unread mail" that has not yet been read
The number on the right side is the number of unread mails.

2

 Press  to select "Inbox," and press  (select).





3

Press  to select the folder containing the mail you want to read, and press  (select).



4

 Press  to select the mail you want to read, and press  (viewer).

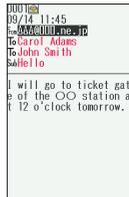

Replying to a received e-mail


1

See steps 1 to 4 in "To open an e-mail in the Inbox" (page 53) to display the e-mail to reply.



2


Press  (reply).

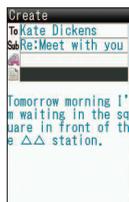

 **Sub** (Subject) is prefixed with "Re:," and the main text of the e-mail is quoted.

3

Press  to select , and press  (select).

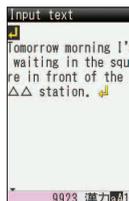

4

Input the main text, and press  (ok).



5

Press  (send).



The e-mail is sent.


Reading e-mails with photo or movie attached

Example: To read an e-mail with photo and movie attached

1

See steps 1 to 3 in "Opening a received e-mail" (page 52) to view a mail.


The photo is displayed.

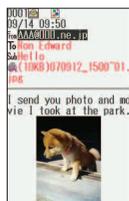

2

Press to select Attached data field, and press (select).


 
The Attachment list screen appears.



3

Press to select a file name, and press (recv).

 The movie is received. Press (play) to view the movie.

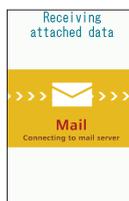

Press to select a photo, and press (view) to display the entire photo on the screen.

Some attached data do not appear automatically depending on their size. If they do not appear, go to step 3.

It may take a short while to send/receive mails depending on the data attached to them or the reception strength of the place you are in.

Filtering spam


We recommend that you set our mail filter function to block spam.

Using Supportive setting, you can set mail filter function with simple operations answering onscreen questions.

Setting the mail filter

Example: To access the Supportive setting

- ① Press  (mail) in the idle screen. Press   to select "Settings" → "Mail filter," and press  (select).
- ② Press   to select "Yes," and press  (select).
Press   to select "次へ," and press  (Select).
- ③ Enter your security code. Press   to select "送信," and press  (Select).
- ④ Press   to select the item you want to confirm, and press  (Select).

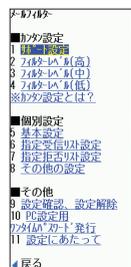

Simple settings

サポート設定 Supportive setting

You can set your mail filter preferences by answering questions.

This is recommended for those who want to confirm one's preferences step by step.

フィルターレベル(高) Filter level (Strict)

You can block all incoming e-mails from PC.

This is recommended for those who use e-mail only between cellphones.

フィルターレベル(中) Filter level (Moderate)


You can block the incoming e-mail from specified sender, also the e-mail with "未承諾広告※" in its title, and spoof e-mail.

This is recommended for those who have troubles with spam sender.

フィルターレベル(低) Filter level (Normal)

You can block the incoming e-mail containing "未承諾広告※" in its title, and spoof e-mail.

This is recommended for all e-mail users.

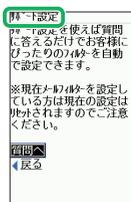


By changing your e-mail address, you can prevent spam from being received. For details on how to change e-mail address, see pages 24 and 25.

Using C-mail

■ ■ About C-mail

C-mail allows you to exchange mail among other au cellphones that supports C-mail using cellphone numbers. You can send C-mail comprising up to 50 double/100 single byte characters.

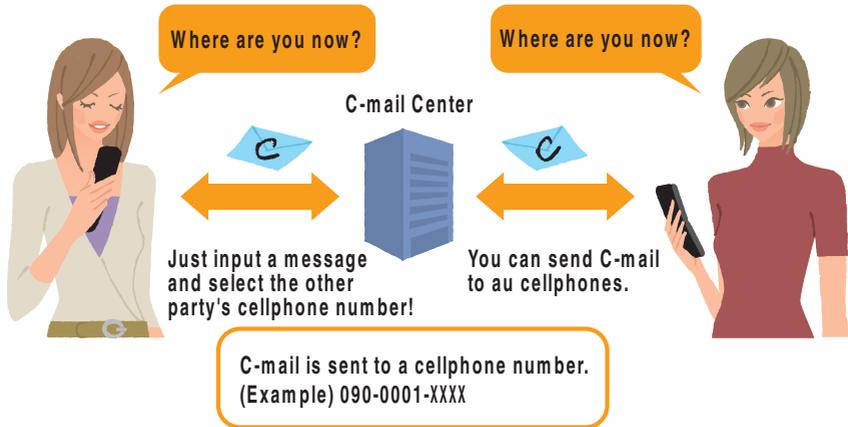

 C-mail transmission fee is charged when sending C-mail.

■ ■ C-mail Safety Block


C-mail Safety Block allows you to reject C-mails that include URL (<http://△△△>, <https://△△△>) or phone numbers in the C-mail main text.

C-mail Safety Block is valid by default. You can cancel the setting to receive C-mails that include URL or phone numbers.

Creating and sending C-mail



1

Hold down  (mail) for at least one second in the idle screen.

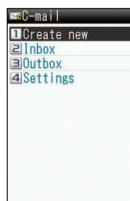


2

 Press  to select "Create new," and press  (select).

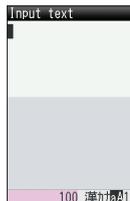

3

Enter the main text, and press  (ok).

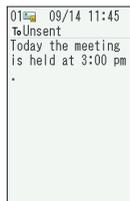


4

Press  (send).



5

 
Press  to select "Phone book," and press  (select).



You can select a phone number from sent/received messages or enter a phone number manually.


6

 Press  to select a person you want to send a C-mail to, and press  (select).



7

 
Press  to select a phone number, and press  (select).



8

Press  (select).

 The C-mail is sent.



Opening a received C-mail

When you receive a C-mail

A message and  appear in the idle screen.



1


Press  (select).



To open a C-mail in the Inbox

1

Hold down  (mail) for at least one second in the idle screen.

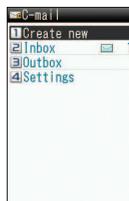

Icon

 


The "unread mail" that has not yet been read

The number on the right side is the number of unread mails.



2

Press   to select "Inbox," and press  (select).



3

 Press   to select the C-mail you want to read, and press  (viewer).

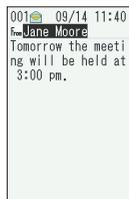

Camera

The W53S has a 2.01 Megapixel camera and allows you to take photos and record movies.

What you can do with the camera

■ ■ You can use images on the W53S.

You can set photos you took as the image for the idle screen, set them to display when you have an incoming call, or save photos or movies to the phone book.



■ ■ You can mail photos and movies.

You can send images up to 500 KB^{※1} by attaching to an e-mail.


※1 It may take a short while to send/receive mails depending on the reception strength of the place you are in.



Page
67

■ ■ You can print out photos or browse them using a PC.


You can save photos you took in the "Memory Stick Duo" (sold separately) and print them out with a printer or at a DPE shop, or browse them using a PC.

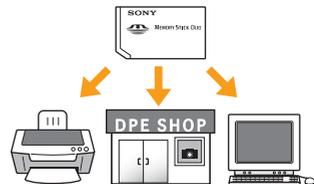


Successful taking of photos

How to hold the W53S

To take "QVGA," "QQVGA" or "WideQVGA" photos

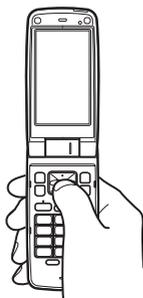

To take "0.3M," "1M," "1.5M(Wide)," "2M" photos or record movie

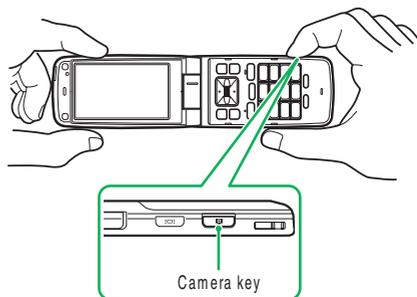

How to set the W53S

① **Hold your bent arm tight against your body.**

② **Hold the main unit not to shake it.**

If your armpits are open or your arms are stretched, the main unit may move and it may cause a blur.

③ **Be sure not to cover the lens with your fingers.**

Smeared lens (with fingerprint, etc.) can blur your images.

To stabilize the shot

① **Do not move the main unit.**

Do not move the main unit after you press the shutter until the shutter sound stops.

Be careful especially when you shoot in the dark.

② **Use self-timer.**


You can prevent a blur caused by pressing the shutter.

Taking photos

1


Press  (camera key) on the side of your cellphone in the idle screen.

The photo monitor screen appears.

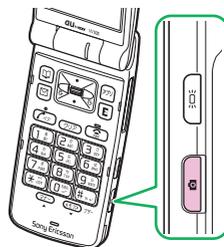

2

View the subject you want to take on the photo monitor screen.

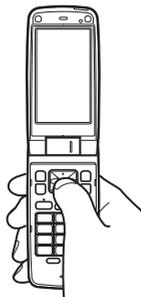

3

Press  (AFlock).

W53S camera automatically focuses on the subject. And you hear a short sound then frame's color turns into green from white.



To automatically focus on the subject, half-press  (camera key) on the side continuously. When you hear a short sound and frame's color turns into green from white, full-press  (camera key).

4

Press  (shoot).

You hear the shutter sound, and the photo you have taken is displayed (preview screen).



Press  (save).



"Saved in data folder" appears, and the display returns to the monitor screen.

 You can also save photos by pressing  (camera key) on the side of your cellphone.

 Photos are saved in the "Photo folder" of the data folder. Each photo is titled as follows:

Example of a photo title



 Seven photo shooting modes (shown below) are available.

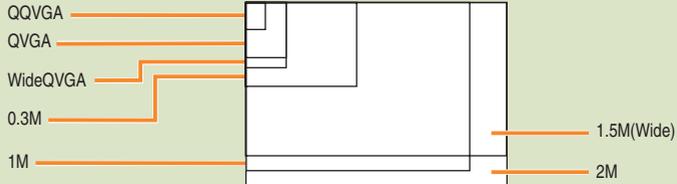


Photo titles are different from the above if "0.3M," "1M," "1.5M(Wide)," or "2M" photos are taken.

About the "Memory Stick Duo" (sold separately)

If you take photos with "0.3M," "1M," "1.5M(Wide)," or "2M" with inserting the "Memory Stick Duo" in the W53S, the images are saved in the "DigiCame folder" in the "Memory Stick Duo".

Viewing photos you have taken


 
1

Hold down  for at least one second in the idle screen.




2

Press  to select "Photo folder," and press  (select).

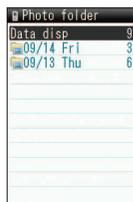


3

Press  to select the date folder containing the photo you want to view, and press  (select).

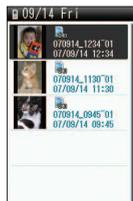

4

 Press  to select the photo you want to view, and press  (view).



Attaching a photo to e-mail

 
1

Press  (E-mail) in the preview screen immediately after you have taken the image.



2

Press  to select "Create E-mail," and press  (select).



The create screen appears.

For details on how to create and send e-mail, see steps 3 to 11 on page 49 to 51.


-  The photo or the movie you have taken is automatically attached to an e-mail  (Attached data).
-  "Other phone cannot play size over case happen" may appear. Press  to select "Attach on," and press  (select).
-  "Cannot attach over 500KB Resize?" may appear. Press  to select "Yes," and press  (select) to select the size.

EZweb

 EZweb subscription required

About EZweb

You need to subscribe to the EZweb service to use the EZweb service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase. Make initial settings before using. If you have not made initial settings yet, see page 22. EZweb is an information service that allows you to enjoy the Internet on your cellphone. With EZweb, you can obtain Chaku-Uta-Full® (full songs), the latest news, and other contents from information sites.

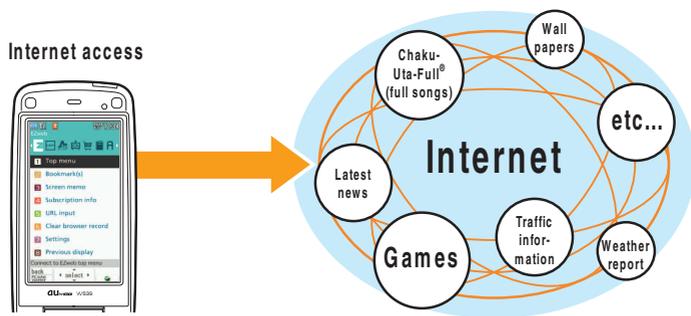


 Data communications fee (varied by the sent/received data amount, regardless of the connection time) is charged when connecting EZweb.

Displaying the EZ Top menu


Press **E** (EZ) in the idle screen.

Press **◀ ▶** to select **EZ** (EZweb).

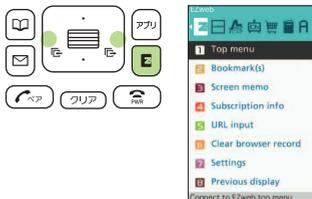

 Press **E** () in the EZweb screen, and you can access to "SonyEricsson@ez."

 Press  to select
 "Top menu," and press
 (select).



キーワード検索機能 (Keyword search function)	Provides information search function by keywords
カテゴリで探す (Search by category)	Searches for a site by category
EZサービスで探す (Search by useful EZ services)	Introduces useful and amusing recommended services special to EZweb
トップニュース (Top news)	Provides the automatically-updated latest news
最新オススメ情報 (Latest recommended information)	Introduces various genre's special features or contents on EZweb
デイリーツール (Daily tool)	Provides daily weather forecast or fortune-telling and useful transit information service
ビジネス&ニュース (Business & News information)	Provides the latest news such as weather, and other information beneficial for business
エリア (Regional information)	Provides regional information such as transit or map search
ショッピング&オークション (Shopping & Auction information)	Provides information about shopping malls where you can purchase goods with your cellphone and the information about the auction where you can put up or go for easily
ライフ (Useful daily life information)	Provides information beneficial for daily life
ホビー & カルチャー (Hobby & Culture information)	Provides the latest information on hobby such as games, music and e-book, and entertainment trends
コミュニティ (Community)	Provides appealing information about features like SNS, Blog, etc. you might want to try
au My Page	Provides various information, useful tools or mass storage capabilities to suit your needs
au style	Introduces au-recommended information and sites
とくする情報 (Valuable information)	Provides gifts and beneficial information exclusively for EZweb service subscribers for free
auお客さまサポート (au Customer Support)	Provides phone bills, procedures, au information, and au on-line manual
カンタンアクセス・オープンサイト (Simple Access & Open Site)	Introduces Simple Access and Open Site
災害用伝言板 (Disaster Message Board)	Registers/checks the vital information in disasters
ENGLISH	Introduces English sites

 It may take a short while for each screen to appear.

 The screen layout and contents are just examples. These are subject to change.

Saving your favorite sites

1

Display the site you want to save, and press  (Browser Menu).



2

Press   to select "New bookmark," and press  (Select).



3

Press  (cmplt).




 You can save up to 100 sites in the Bookmark. However, some sites may not be saved.

Viewing a site saved to the Bookmark


1

Press  (EZ) in the idle screen.
Press   to select  (EZweb).

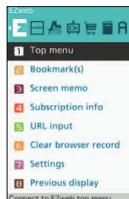

2

Press   to select "Bookmark(s)," and press  (select).

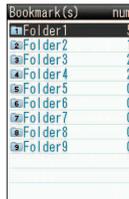


3

Press  to select a folder, and press  (select).



4

 Press  to select the site you want to view, and press  (select).




Confirming your call costs

You can confirm call and communication charges.

1

Press  (menu) in the idle screen.

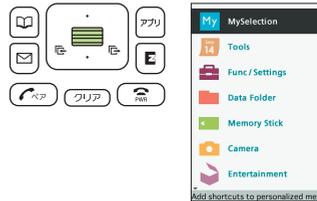

2

Press  .
Press  to select "Yes," and press  (select).


Select the item you want to confirm.



Downloading Chaku-Uta®(ringtones)/Chaku-Uta-Full®(full songs)


1

Press **E** (EZ) in the idle screen.
Press **◀▶** to select **EZweb**.

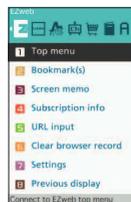


2

Press **▲▼** to select "Top menu,"
and press **■** (select).

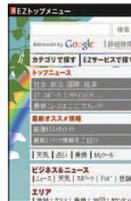


3

 Press **▲▼** to select "カテゴリで
探す," and press **■** (OK).



4

 
Press **▲▼** to select "着うた" or
"着うたフル・ビデオクリップ,"
and press **■** (Select).



5

Press **▲▼** to select the desired
site, and press **■** (Select).

 Follow the on-screen instructions to select
the melody you want to download.



6

Select and download a melody.

Download the melody by following the on-screen instructions.



 To use paid information site, you must enter the EZ Password or the Premium EZ Password. EZ Password or Premium EZ Password is any 4-digit number that you wrote in the application form.


 The screen layout and contents are just examples. These are subject to change.

EZ Navi

What you can do with EZ Navi

 EZweb subscription required

EZ Navi is a convenient system based on the geographic (GPS) information.

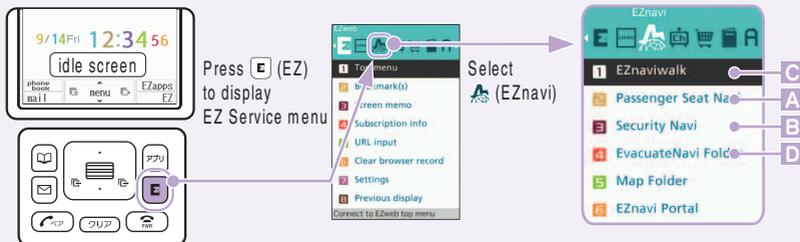

A When the front passenger check for driving route information: "Passenger Seat Navi"

Passenger Seat Navi is the service for the passenger (sitting next to the driver) to provide the optimum route information to the destination using map and voice navigation.




B When you want to know where your child is: "Security Navi"

"Security Navi" application provides three features.

"Auto Position Search" (paid), "Area Message" (free), "Position Search Mail" (free)

With the operation from W53S, you can check the position of an au cellphone supporting "Position Search." Also, W53S automatically sends a notice message to specified au cellphone under the following condition; during specified time frame, the person (with W53S) enters (or stays)/leaves (or is no longer in) specified area.

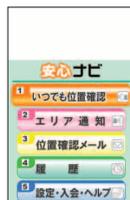

C When you go out: "EZ Navi Walk"

You can display various menus convenient for going out.



ナビをする★	Route information (voice prompt) for your destination or search shops/facilities around
地図を見る(無料)★	See your current position or selected map
乗換検索する(無料※1)★	Search transit/time table or railway information
道路情報を見る	See real time route information nationwide
もっとナビウォーク	Help information for various settings or search by web
インフォメーション	Membership registration or inquiries

The star symbol shows that you can use your voice to enter search terms. This is called "Voice input" function.

※1 Some menus are paid service.

Your Current Position Map



The result of the first measurement is displayed as ★ on the map. Your current location will be displayed as 人 In real time by successive measurement.

3D Navi



Change to 3D display around guidance point or your destination. Navigation engine by NAVITIME JAPAN Map: Shobunsha Publications, Inc./ Sumitomo Electric Industries, Ltd. 3D data: ZENRIN CO., LTD./ GEO Technical Laboratory Co., Ltd. Z06A-No. 2137

D When you try to find nearest evacuation sites or your way home: "Evacuate Navi"

Even when you have difficulty to get connected due to large scale disaster, W53S provides map/route information for evacuation sites or your way home using preset map data ("Evacuate Area Map"). Also, you can download various application programs from "Evacuate Navi" EZwebsite (for example, "Route Home Map" program provides map/route information between two places you specified, like "Office to Home").

- To get these map/route information, you need to save GPS information of your home to phone book on au cellphone, and set it as destination beforehand.
- To use some of the programs, application fee is charged respectively.

Evacuate Area Map



Route Home Map




Map: Shobunsha Publications, Inc./
Preparation: Asia Air Survey Co., Ltd.

- 📍 For the use of EZ Navi, data communications fee is charged. And to use some of the services, information fee is charged in addition to the data communications fee.
- 📍 Regarding evacuation sites or other disaster related information, follow instructions by police, fire brigade, or local authority. Those instructions always take priority over the provided map/route information on the screen.
- 📍 For the use of "Evacuate Navi," it may take a short while to get GPS information of your current location depending on the GPS satellite conditions.
- 📍 The screen layout and contents are just examples, and may differ from the actual screen.

LISMO

What you can do with LISMO

You can enjoy a variety of music with LISMO services.

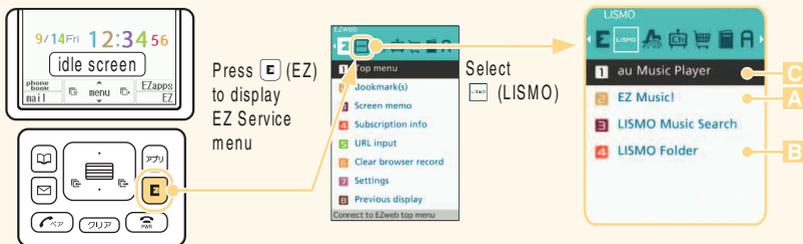

A To download Chaku-Uta-Full® (full song): "EZ Music!"

You can download Chaku-Uta-Full® (full song) by accessing official site.

B To save audio files/movie files/Play lists: "LISMO Folder"

Downloaded Chaku-Uta-Full® (full song)/Video clip/Play lists are saved in LISMO Folder. Transferred audio/movie files from au Music Port (files from CDs, Chaku-Uta-Full®/Video clip purchased from LISMO Music Store) are also saved in LISMO folder.

C To enjoy music: "au Music Player"



You can use au Music Player to play downloaded Chaku-Uta-Full® (full song)/Video clip, or data transferred from au Music Port. au Music Player also allows you to make the list of your favorite music and send that list by e-mail. You can enjoy music with "Uta-tomo[®]" function or "LISMO Music Search" function.




The screen layout and contents are just examples. These are subject to change.

Playing back an audio/movie file


1

Press **E** (EZ) in the idle screen.
Press **◀▶** to select **LISMO** (LISMO).

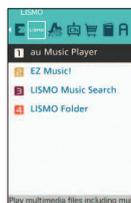


2

 Press **▲▼** to select "au Music Player," and press **■** (select).




3

 Press **▲▼** to select "ライブラリ," and press **■** (選択).




4

 Press **▲▼** to select "全曲一覧," and press **■** (選択).



5

 Press **▲▼** to select an audio/movie file you want to play, and press **■** (選択).



➡ Continued on the next page

 You can enjoy sounds through speaker (with no stereo earphone connected). When you do not want to play back from the speaker, connect stereo earphone to W53S beforehand (page 14).

 The screen layout and contents are just examples. These are subject to change.

Operations during playing back

-  : Skip to the beginning of the current audio/movie file
-  (1 second) : Rewind
-  : Skip to the next audio/movie file
-  (1 second) : Fast forward
-  : Pause/play back
-  : Adjust the volume

Troubleshooting

Symptom	Items to check	Solution	Page
Unable to turn the power on.	Is the battery pack properly installed?	Properly install the battery pack.	—
	Is the battery pack charged?	Charge the battery pack.	12
	Did you hold down  for at least one second?	Hold down  for at least one second.	17
Unable to make calls.	Is  displayed on the screen?	Make a call from a location where  is not displayed.	17
	Did you enter the area code when entering the phone number?	When making a call to a phone other than a cellphone, first enter the area code even when both parties are inside the same city.	26
	Is the power turned on?	Hold down  for at least one second.	17
	Did you press  ?	Press  .	26
Unable to receive calls.	Is  displayed on the screen?	Move to a location where  is not displayed.	17
	Is the power turned on?	Hold down  for at least one second.	17
No reaction when a key is pressed.	Is the power turned on?	Hold down  for at least one second.	17
	Is the keylock set?	Hold down  for at least one second to cancel keylock.	16
Warning tone sounds, and power turns off.	There is not enough power remaining in the battery pack.	Charge the battery pack.	12
Incoming calls are automatically answered.	Is the record message set?	Hold down  for at least one second to cancel the record message.	32
Unable to hear the other party.	Is the volume during a call set too low?	Press  while you are talking. The volume during a call will increase.	29

Please visit the au web site for more information.

- From W53S ⇒  (EZ) →  (EZweb) → "Top menu" → "auお客様サポート" (au Customer Support) → "調べる" → "オンラインマニュアル" → "故障診断Q&A"
- From your PC ⇒ (<http://www.kddi.com/customer/service/au/trouble/kosho/index.html>)

Remote Ctrl Lock

In case you have lost your W53S

Using Remote Ctrl Lock, you can lock your W53S (Auto lock, FeliCa lock and Phone book restrict) remotely against unauthorized use.

■ ■ To set up the working environment of Remote Ctrl Lock

Auto lock, FeliCa lock and Phone book restrict are enabled by calling to your W53S specific times from the phone number specified beforehand.

- ① Press  (menu) in the idle screen → press   .
- ② Enter Lock No., and press  (ok).



- ③ Press  to select "Rmt.CtrlLock," and press  (select). Set each item below:
 - "Set" : Select "ON"/"OFF."
 - "Duration" : Enter the time (1 to 10 minutes) as for the time frame starting with the first incoming call to be ended with set times call.
 - "Frequency" : Enter the times of incoming call (3 to 10 times) to set and release Remote Ctrl Lock.
 - "Caller" : Register phone number (up to 3 numbers) to use when setting and releasing Remote Ctrl Lock.
- ④ Press  to select "Data erase" → "Erase"/"Not erase," and press  (select).

Set whether to delete saved data when setting Remote Ctrl Lock or not.
- ⑤ Press  to select "Local unlock" → "ON"/"OFF," and press  (select).

Set whether to release Remote Ctrl Lock by entering Lock No. or not.
- ⑥ Press  (back).

To set Auto lock, FeliCa lock and Phone book restrict on W53S by Remote Ctrl Lock

Make a call to W53S under the working condition (Duration, Frequency, Caller) set by Remote Ctrl Lock.

Remote Ctrl Lock is set, and announcement is played notifying that Remote Ctrl Lock is set.

-  Remote Ctrl Lock cannot be set if W53S is turned off or in the area where reception strength is not good.
-  "Not erase" (for "Data erase") and "OFF" (for "Local unlock") are set by default.

To lock on W53S by Security Lock Service

With no Remote Ctrl Lock setting has been made, call au Customer Service Center or visit our web site from your PC to set Auto lock, FeliCa lock and Phone book restrict. You can use Security Lock Service with no charge.

au Customer Service Center

From au cellphones: 113 area code not required (toll free)

From other operators'/regular phones:  0077-7-113 (toll free)
(24 hrs a day)

Follow the voice guidance to set the lock.

MyKDDI

Visit our MyKDDI web site (<http://my.kddi.com/>) and follow the onscreen instructions to set the lock.

※Application required for the first time use (we also accept your application after the loss).

-  You cannot set the lock if W53S is turned off or in the area where reception strength is not good.

Other features

Safety Buzzer

To show that you are in emergencies, you can use the Safety Buzzer function in extreme volume sound. To use this function, set the Safety Buzzer to "ON" beforehand.

■ ■ To set the Safety Buzzer "ON"

- ① Press  (menu) in the idle screen → press  .
- ② Press  to select "ON," and press  (select).

 While Safety Buzzer is set to "OFF," you can set Safety Buzzer "ON" by holding down  for at least one second in the idle screen.

■ ■ To use the Safety Buzzer

Hold down  for at least one second in the idle screen.

To stop the Safety Buzzer sound

Enter the Lock No..

Security buzzer

 Stop security buzzer with lock no. input

-  The Safety Buzzer sound continues until Lock No. is entered or battery is fully discharged.
-  Even with the manner mode set or stereo earphone connected, the Safety Buzzer sounds from speaker.
-  While the Safety Buzzer sound continues, you cannot turn W53S off or perform other operations. But you can dial 110 (Police), 118 (Japan Coast Guard), and 119 (Fire brigade).

GLOBAL EXPERT

W53S supports GLOBAL EXPERT Service using au IC-Card.

GLOBAL EXPERT is an international roaming service for the customers to insert the au IC-Card to a GSM compatible cellphone for overseas use.

No special application procedure or daily/monthly fee is required, and the call cost is added to domestic call, making the payment procedure simple.

EZ keitai-arrange

You can set/change ringtones or designs of the idle screen, icons, etc. collectively. Also, you can use downloaded data for those settings.

au My Page

You can save data such as a phone book, e-mail, or the data in the data folder to au My Page.

Various ways to get audio files

You can enjoy your favorite songs by EZ "Chaku-Uta-Full[®]" (full songs), the full length music download service, and also enjoy other audio files transferred from your music CDs via au Music Port.

EZ apps (BREW[®])

You can download game software from EZweb sites and play games.

Infrared data exchange feature

You can exchange data such as a phone book, profile, or the data in the data folder between au cellphones that support infrared data exchange.

Hello Messenger

You can chat with registered members while sending or receiving texts, photos you took. Voice talks with the members are also available.

PC Site Viewer

You can view WEB sites intended for PC on W53S with smooth high-speed data communication.

Index

Symbol

+JOG..... 16

A

accessories..... 10

au IC-Card..... 11

B

battery pack..... 10

battery power, remaining..... 4

before use..... 10

Bookmark

saving..... 70

viewing..... 70

C

C-mail..... 57

C-mail Safety Block..... 57

creating and sending..... 58

icon..... 61

opening..... 60, 61

receiving..... 60

camera..... 62

photo..... 64

successful taking..... 63

cellphone etiquette..... 1

charge indicator..... 12

charging the battery pack..... 12

confirming your call costs..... 71

confirming your cellphone number
..... 23

D

desktop holder..... 12

Dialed calls..... 28

Disaster Message Board Service

(demonstration)..... 7

display..... 18

domain..... 24

downloading Chaku-Uta-Full®

(full songs)..... 72

downloading Chaku-Uta®(ringtones)

..... 72

drive mode..... 5

E

e-mail..... 48

attaching photo..... 67

creating and sending..... 49

icons..... 49, 52, 53

initial settings..... 22

opening..... 52, 53

receiving..... 52

replying..... 54

viewing attached photo/movie..... 55

e-mail address

changing..... 24

confirming..... 23

English display..... 18

EZ Navi..... 74

EZ Service menu..... 21

EZ Top menu..... 68

EZweb..... 68

Bookmark..... 70

confirming your call costs..... 71

initial settings..... 22

I

icons..... 18, 19

idle screen..... 17

ID Unsent..... 27

incoming indicator..... 11

initial settings..... 22

international call..... 26

Internet (See "EZweb")

J

Jog Dial..... 16

L

LISMO..... 76

Playing back..... 77

M	
mail	
C-mail.....	57
e-mail.....	48
mail filter	56
Main menu	20
manner mode	4, 29
N	
names of parts	11
O	
one-ring call	6
optional accessories	10
P	
Pair Function	46
making a call.....	47
saving.....	46
phone book	40
deleting.....	43
editing.....	42
making a call.....	44
saving.....	40
saving from dialed/received calls.....	45
Phone call	26
if you are unable to answer.....	28
making.....	26
making an international call.....	26
notify/not notify the other party.....	26
receiving.....	27
photo	
attaching to e-mail.....	67
saving.....	65
taking.....	64
viewing.....	66
playing back audio/movie files	77
plus jog (See "+JOG")	
power	4
R	
Received calls	28
reception strength	4
record message	4, 32
playing back.....	33
redialing	28
Remote Ctrl Lock	80

ringtone	30
S	
Safety Buzzer	82
Security Lock Service	81
soft key	17
spam	6, 56
stereo earphone	14
Style-Up Panel	13
T	
text input	34
alphanumerics.....	35
Back Space function.....	35
changing input mode.....	34, 35
character key assignment table.....	35
characters assigned to the same key.....	37
deleting characters.....	37
emoticons.....	38
pictorial characters.....	38
sentences.....	39
symbols.....	38
uppercase characters.....	37
troubleshooting	79
V	
volume during a call	29

For inquiries, call:

au Customer Service Center

From EZweb site:

How to access

- EZ ▶ EZweb ▶ Top menu
- ▶ auお客さまサポート
(au Customer Support)
- ▶ お問い合わせ (Inquiries)



※Menu structure is subject to change without prior notice.

■ For general information and charges

From regular phones:

 **0077-7-111**
フリーコール (toll free)

From au cellphones:

157 area code not required
(toll free)

■ For loss, theft or damage and operation information

From regular phones:

 **0077-7-113**
フリーコール (toll free)

From au cellphones:

113 area code not required
(toll free)

Pressing "zero" will connect you to an operator,
after calling "157" on your au cellphone.

Sales : KDDI Corporation

Okinawa Cellular Telephone Company

Manufacturer : Sony Ericsson Mobile Communications Japan, Inc.



Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♻️ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Read this to access to
au online manual



A-CR7-100-11(1)
August 2007, 1st Edition