

Note:
Although the DXG-567V has a built-in memory of 32MB, this is reserved for the unit's software. You will need to buy a separate memory card to record video clips.

1001 Lawson Street, City of Industry, CA 91748
Telephone: (626) 581-3742
Fax: (626) 839-3674

 
DXG USA

Visit our website at www.dxgusa.com for any product updates or special announcements. You can also check out our online support desk where you can register your product, send email to our technical support team, and find a list of Frequently Asked Questions (FAQs).

All trademarks are the properties of their respective holders. Design and specifications are subject to change without prior notice.

Getting to Konw Your Camcorder

Set-up Mode

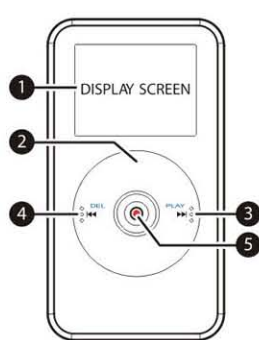

1. Display Screen:

- Video Recording viewfinder / playback screen.

2. LED Indicator:

- Light turns blue during power on.

3. PLAY

- Press **PLAY** button to Start playback of the most recent recorded video or the selected file.
- Press **PLAY** button again to stop the playback.

- Press left/right keys to view previous/next video.

4. Delete

- During playback, press **DEL**

and the last recording will appear on the screen. "DELTE VIDEO" will appear on the screen.

- During playback, press **DEL** again to confirm the delete.

- While playing, press **DEL** to pause.

- To resume playing, press **DEL** again.

5. Record & Joystick

- Press **RECORD** button to start recording.

- While recording, LED light on top left corner of the screen will turn red.

- Press **RECORD** again to stop

recording.

Select Previous/Next Video

- Move **LEFT/RIGHT** button to the left/right to select previous /next video.

Fast Backward/Forward

- While playing, move **LEFT/RIGHT** button to play fast backwards.

 
- While playing, move **LEFT/RIGHT** button to play fast forward.

STOP

- While playing/recording, press **STOP** button to stop playback/ recording.

Digital Zoom In/Out (2X)

- While recording, move **LEFT/RIGHT** button to zoom in/out.

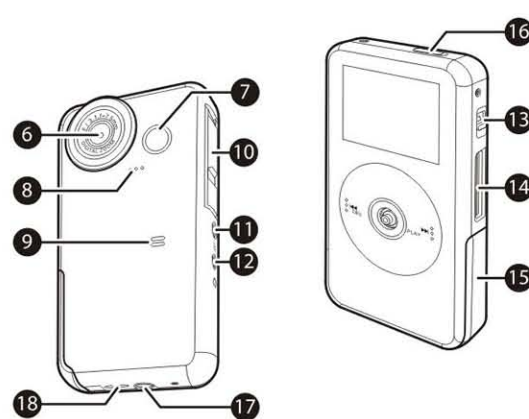

- During playback, move **UP/DOWN** button to increase/decrease the volume.

6. Lens:

- Use a soft and dry cloth to wipe clean.

7. USB Release Button:

- Press this button to release USB connector.

8. Microphone:

- Use the built-in microphone to record sound for your video.

9. Speaker:

- Allows you to connect your

camcorder to a PC. Press the USB release button to release the USB connector.

11. HD Out Jack:

- HD output for connecting the camcorder to an HDTV for high resolution in displaying videos.

12. A/V Out Jack:

- Audio/Video output for connecting to TV with the included AV cable.

13. Macro Switch:

- Allows your camcorder to keep the item in focus that is close to the camcorder

14. SD Socket:

- Insert your SD memory card into the socket for file storage.

15. Battery Door:

- Slide down to open the battery door to change batteries.

16. Power Switch:

- Slide the switch to turn on/off camcorder.

17. Tripod Mount:

- Allows you to attach a tripod.

- Attach wrist strap here.

Playing a Video Clip

1. In Record Standby mode, press **PLAY** button. The most recent file displays on the LCD screen. Press the **RECORD** button to stop.
2. To view previous/next video clip, move **LEFT/RIGHT** button.
3. To pause while playing back a video clip, press **DEL** button.
4. While viewing the video clip, move **UP/DOWN** button to increase/decrease the volume.
5. To view the video clip in the fast forward/rewind mode, move **LEFT/RIGHT** button.
6. Press **STOP** button to stop playing. Press **PLAY** button again to return to playback mode.

Set Up Mode

Press **DEL + PLAY** buttons simultaneously to enter setting options, as shown in the picture above.

 


(a) **Date and Time:** Move **UP/DOWN** button to adjust year/month/day and **LEFT/RIGHT** button to select year/month/day. Move **RECORD** button to adjust the time (hour/minute/second) in the same way. Press **STOP** button to confirm.

(b) Move **LEFT/RIGHT** button to select between **NTSC/PAL** for TV system setting. Press **STOP** button to confirm.

(c) Move **LEFT/RIGHT** button to select between **50Hz/60Hz** frequency. Press **STOP** button to confirm.

Connecting to Your HD TV

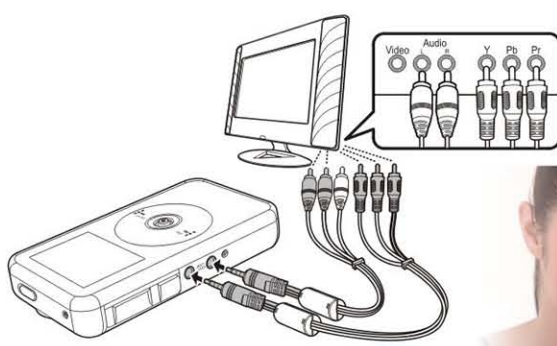

Connecting to a HDTV offers a high resolution for displaying the video clips.

1. Connect the camcorder to an HDTV as shown with the component video cable and AV cable provided.
2. Switch on the camcorder to **PLAY** mode.
3. Turn on the HDTV set and set the HDTV/VIDEO selector on the HDTV to **VIDEO**. (See your HDTV manual for instructions.)


Note: Camcorder display screen will be turned off when TV connection is activated.

4. Press **PLAY** button to start/stop playback.

Viewing Videos on Your Computer/Laptop

1. Press the USB Release button on the back of camcorder to release the USB connector.
2. Insert the USB connector into USB port on your computer.
3. Obtain a USB extension cable if USB connector is obstructed or space does not permit connection.
4. When the camcorder is connected successfully, the computer will display the message: Your new hardware is installed and ready to use.
5. A folder containing the video files in the SD card installed in the camcorder will pop-up automatically.
6. Select the video files that you want to save to the computer or share your video clips online with your family and friends or through emails.

Note: Battery power is not used while camcorder is connected to a computer.

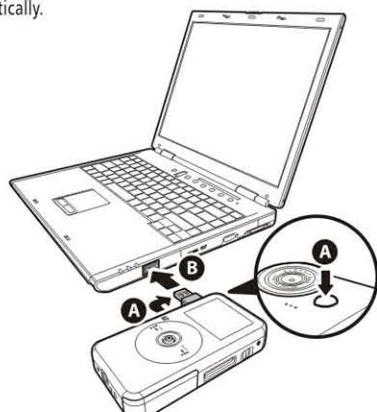

Uploading Your Video to YouTube™

The Rapid Blog Manager built in the camcorder allows you to download files from the camcorder memory card and upload video clips to the YouTube website. Follow the steps below:

1. Repeat steps 1-3 in the section "Viewing Video on Your Computer" on the previous page.
2. Select **Rapid Blog Manager** on your PC screen, and click **OK**.
3. Click **OK** to start downloading the camcorder video files to your PC. See the first picture on the right.
4. After the download is completed, the Rapid Blog Manager is displayed. See the second picture on the right.
5. Click **Upload** button and fill in all the required information.
6. Click **Upload** to begin the transfer, **Stop** to stop file upload process, or **Exit** to close the window.

Note: You must have a YouTube account before uploading your video files onto the YouTube website.



Important Safeguards

When you are using your camcorder for the first time, it is highly recommended for you to follow the basic safety precautions advised below to reduce the risk of fire, electrical shock and injury.

Risk of electric shock - Do not open!

Warnings and Precautions

- Disconnect all cables before moving your camcorder. Moving your camcorder with its cables attached may damage the cables and cause fire or electric shock danger.
- Do not immerse or expose camcorder to water.
- Do not use liquid or aerosol cleaners, as they may damage the surface.
- Do not put your camcorder under extreme environments, including excessive dust, high temperatures (above 40°C or 104°F), moisture or direct sunlight.
- Do not open battery cover while an image is being recorded. Doing so will not only make storage of the current image impossible, it can also corrupt other image data already stored in file.
- Do not try to operate your camcorder while driving a vehicle.
- Do not attempt to open the casing or attempt your own repairs. High-voltage internal components create the risk of electric shock when exposed.
- If the product or any of its accessories are not working properly, take them to your nearest qualified service center.

Cautions for Batteries

- Disconnect your camcorder and remove the batteries when not used for a long period of time.
- Do not use any other batteries than ones specified for your camcorder.
- Never use different types of batteries together (alkaline and Ni-MH) or mix old and new batteries. Use only 1.5 Volt AA batteries.
- When installing batteries, the proper polarity, or direction, must be observed. Reverse insertion of batteries can cause charging, and can result in leakage of explosion.
- Disconnect your camcorder and remove the batteries if your camcorder acts in any abnormal condition while following normal operating instructions.
- Do not short-circuit the battery. Short-circuiting the terminals may damage the battery or the connecting object.
- When the batteries reaches the end of its life, discard them as soon as possible since they are more likely to leak into camcorder.
- Dispose of batteries according to local regulations. Always recycle. Do not dispose of batteries in a fire.