



System Board User's Manual

935-P35T2I-400G
02220749

Copyright

This publication contains information that is protected by copyright. No part of it may be reproduced in any form or by any means or used to make any transformation/adaptation without the prior written permission from the copyright holders.

This publication is provided for informational purposes only. The manufacturer makes no representations or warranties with respect to the contents or use of this manual and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. The user will assume the entire risk of the use or the results of the use of this document. Further, the manufacturer reserves the right to revise this publication and make changes to its contents at any time, without obligation to notify any person or entity of such revisions or changes.

© 2007. All Rights Reserved.

Trademarks

Windows® 98, Windows® 98 SE, Windows® ME, Windows® 2000, Windows NT® 4.0 and Windows® XP are registered trademarks of Microsoft Corporation. VIA is a registered trademark of VIA Technologies, Inc. Award is a registered trademark of Award Software, Inc. Other trademarks and registered trademarks of products appearing in this manual are the properties of their respective holders.

FCC and DOC Statement on Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables must be used in order to comply with the emission limits.

Table of Contents

| | |
|--|----------------|
| About this Manual..... | 5 |
| Warranty..... | 5 |
| Registering the Product..... | 6 |
| Static Electricity Precaution..... | 8 |
| Safety Measures..... | 8 |
| About the Package..... | 9 |
| Before Using the System Board..... | 9 |
| Chapter 1 - Introduction..... | 10 |
| Specifications..... | 10 |
| Features..... | 12 |
| Français..... | 17 |
| Deutsch..... | 19 |
| Español..... | 21 |
| Русский язык..... | 23 |
| Japanese..... | 25 |
| Chapter 2 - Hardware Installation..... | 27 |
| System Board Layout | 27 |
| System Memory..... | 29 |
| CPU..... | 33 |
| Transpiper Heat Sink..... | 38 |
| Jumper Settings..... | 47 |
| Rear Panel I/O Ports..... | 56 |
| Internal I/O Connectors..... | 66 |
| Chapter 3 - BIOS Setup..... | 82 |
| Award BIOS Setup Utility..... | 82 |
| RAID BIOS..... | 129 |
| Updating the BIOS..... | 130 |
| Chapter 4 - Supported Software..... | 132 |
| Chapter 5 - RAID..... | 150 |
| Appendix A - Enabling Hyper-Threading Technology..... | 159 |
| Appendix B - System Error Message..... | 162 |
| Appendix C - Troubleshooting..... | 164 |

About this Manual

An electronic file of this manual is included in the CD. To view the user's manual, insert the CD into a CD-ROM drive. The autorun screen will appear. Click the "TOOLS" icon then click "Manual" on the main menu.


Warranty

1. Warranty does not cover damages or failures that arised from misuse of the product, inability to use the product, unauthorized replacement or alteration of components and product specifications.
2. The warranty is void if the product has been subjected to physical abuse, improper installation, modification, accidents or unauthorized repair of the product.
3. Unless otherwise instructed in this user's manual, the user may not, under any circumstances, attempt to perform service, adjustments or repairs on the product, whether in or out of warranty. It must be returned to the purchase point, factory or authorized service agency for all such work.
4. We will not be liable for any indirect, special, incidental or consequential damages to the product that has been modified or altered.


Registering the Product

We encourage you to register your DFI product online. DFI's product registration service entitles you to notifications about product updates, special discounts and/or promotional offers; and puts your licensing information on file so that we may efficiently assist you if in any case needed. Please follow the steps below to access the product registration page.


1. Run Internet Explorer then type www.dfi.com.tw in the Address bar. On DFI's homepage, click Global or the language of your choice.

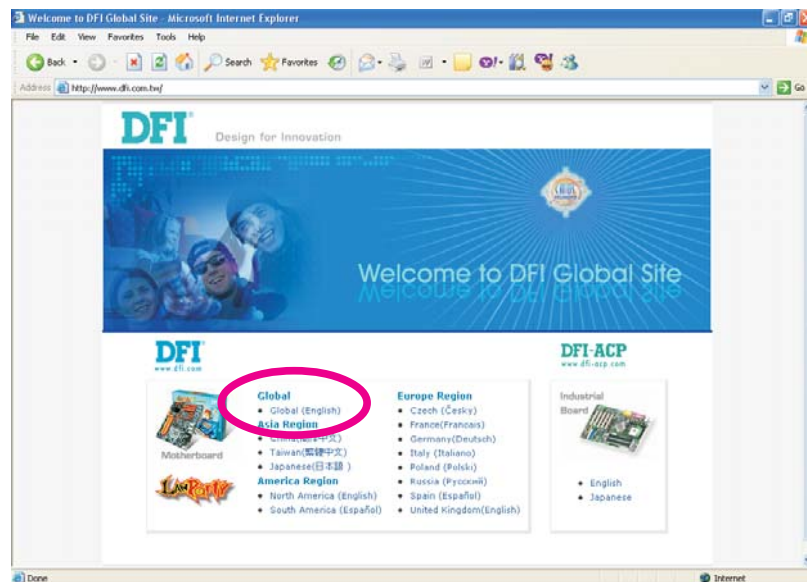

2. Click the Support menu then select Product Register Service.

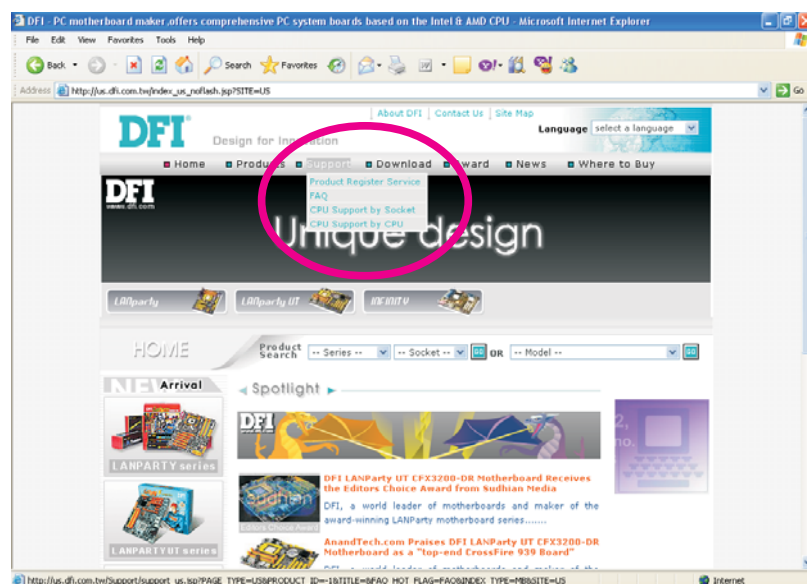

3. The DFI Product Registration page will appear. Click Next to continue.

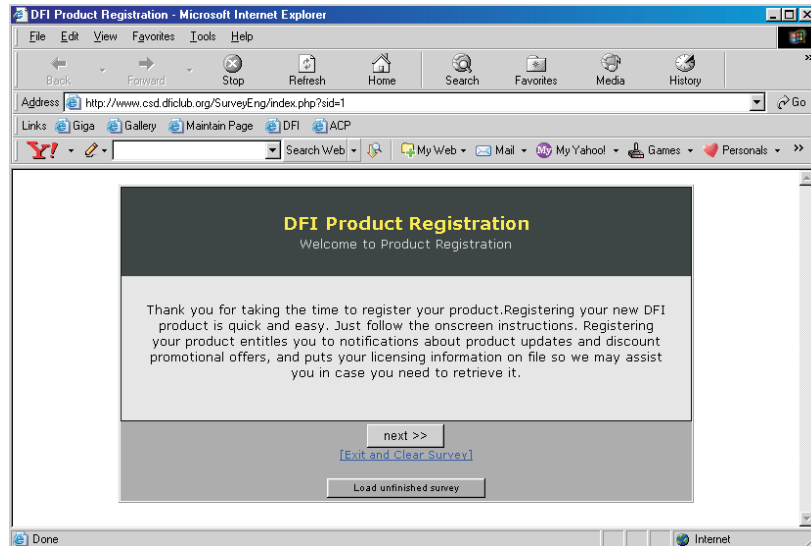

4. Select or fill in the necessary information to complete the registration.

A screenshot of the DFI Product Registration form in a Microsoft Internet Explorer browser window. The title bar reads "DFI Product Registration - Microsoft Internet Explorer". The address bar shows the URL "http://www.csd.diclub.org/SurveyEng/index.php?sid=1". The page content features a progress bar at the top showing "0%" to "100%". Below the progress bar, the form is titled "Basic Data for RMA". It contains several sections with dropdown menus and text input fields: "Product Type" (Please choose...), "Product Category" (Please choose...), "Serial Number" (with a question mark icon), "When did you purchase the product?" (with a date format example: "Format: YYYY-MM-DD (eg: 2003-12-25 for Christmas day)"), "From which sales channel did you purchase the product?" (Please choose...), and "From which country did you purchase the product?" (Please choose...). At the bottom of the form, there are navigation buttons: "<< prev", "next >>", "[Exit and Clear Survey]", and a "Save your responses so far" button.

5. Thank you for registering your DFI product.

Static Electricity Precautions

It is quite easy to inadvertently damage your PC, system board, components or devices even before installing them in your system unit. Static electrical discharge can damage computer components without causing any signs of physical damage. You must take extra care in handling them to ensure against electrostatic build-up.

1. To prevent electrostatic build-up, leave the system board in its anti-static bag until you are ready to install it.
2. Wear an antistatic wrist strap.
3. Do all preparation work on a static-free surface.
4. Hold the device only by its edges. Be careful not to touch any of the components, contacts or connections.
5. Avoid touching the pins or contacts on all modules and connectors. Hold modules or connectors by their ends.



Important:

Electrostatic discharge (ESD) can damage your processor, disk drive and other components. Perform the upgrade instruction procedures described at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

Safety Measures

To avoid damage to the system:

- Use the correct AC input voltage range.

To reduce the risk of electric shock:

- Unplug the power cord before removing the system chassis cover for installation or servicing. After installation or servicing, cover the system chassis before plugging the power cord.

Battery:

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommend by the manufacturer.
- Dispose of used batteries according to local ordinance.

About the Package

The system board package contains the following items. If any of these items are missing or damaged, please contact your dealer or sales representative for assistance.

- ☑ One system board
- ☑ One Bernstein audio module with cable
- ☑ One Transpiper kit (LP UT P35 Series only)
 - One Transpiper
 - One 90° metal pipe
 - One thermal paste
- ☑ One copper plate with mounting screws (LP UT P35 Series only)
- ☑ One IDE round cable
- ☑ One floppy round cable
- ☑ Four Serial ATA data cables
- ☑ Four Serial ATA power cables
- ☑ One I/O shield
- ☑ One RAID driver diskette
- ☑ One "Mainboard Utility" CD
- ☑ One user's manual
- ☑ One Quick Installation Guide (LP UT P35 Series only)

The system board and accessories in the package may not come similar to the information listed above. This may differ in accordance to the sales region or models in which it was sold. For more information about the standard package in your region, please contact your dealer or sales representative.

Before Using the System Board

Before using the system board, prepare basic system components.

If you are installing the system board in a new system, you will need at least the following internal components.

- A CPU
- Memory module
- Storage devices such as hard disk drive, CD-ROM, etc.

You will also need external system peripherals you intend to use which will normally include at least a keyboard, a mouse and a video display monitor.

Chapter I - Introduction

Specifications

| | |
|-----------------|---|
| Processor | <ul style="list-style-type: none">• LGA 775 socket for:<ul style="list-style-type: none">- Intel® Core™2 Quad, Intel® Core™2 Extreme, Intel® Core™2 Duo, Intel® Pentium® D or Intel® Pentium® 4• Supports Intel Enhanced Memory 64 Technology (EMT64T)• Supports Enhanced Intel SpeedStep Technology (EIST)• Supports Intel Hyper-Threading Technology• Supports 1333*/1066/800MHz system bus speed <p>*Available only on CPUs that support 1333MHz FSB</p> |
| Chipset | <ul style="list-style-type: none">• Intel® chipset<ul style="list-style-type: none">- Northbridge: Intel® P35 Express chipset (with Intel® Fast Memory Access technology)- Southbridge: Intel® ICH9R |
| System Memory | <ul style="list-style-type: none">• LP UT P35-T2R and LP LT P35-T2R<ul style="list-style-type: none">- Four 240-pin DDR2 DIMM sockets- Supports DDR2 667/800 MHz- Delivers up to 12.8Gb/s bandwidth• LP UT P35-T3R and LP LT P35-T3R<ul style="list-style-type: none">- Four 240-pin DDR3 DIMM sockets- Supports DDR3 800/1066/1333 MHz- Delivers up to 17Gb/s bandwidth• Supports dual channel (128-bit wide) memory interface• Supports up to 8GB system memory• Supports unbuffered x8 and x16 DIMMs |
| Expansion Slots | <ul style="list-style-type: none">• 3 PCI Express x16 slots (PCI-E1 at x16, PCI-E3 at x4 or x1 and PCI-E4 at x1)• 1 PCI Express x1 slot• 3 PCI slots |
| BIOS | <ul style="list-style-type: none">• Award BIOS• 8Mbit flash memory |
| Audio | <ul style="list-style-type: none">• Bernstein audio module<ul style="list-style-type: none">- Realtek ALC885 8-channel High Definition Audio CODEC- Center/subwoofer, rear R/L and side R/L jacks- Line-in, line-out (front R/L) and mic-in jacks- 2 coaxial RCA S/PDIF-in/out jacks- 1 optical S/PDIF connector- 1 CD-in connector- 1 front audio connector• DAC SNR/ADC SNR of 106dB/101dB• Full-rate lossless content protection technology |
| LAN | <ul style="list-style-type: none">• Marvell 88E8052 and Marvell 88E8053 PCIE Gigabit LAN controllers• Fully compliant to IEEE 802.3 (10BASE-T), 802.3u (100BASE-TX) and 802.3ab (1000BASE-T) standards |

| | |
|-------------------------|--|
| Storage | <ul style="list-style-type: none"> • Intel ICH9R chip <ul style="list-style-type: none"> - Intel Matrix Storage technology - Supports up to 6 SATA devices - SATA speed up to 3Gb/s - RAID 0, RAID 1, RAID 0+1 and RAID 5 • JMicron JMB363 PCI Express to SATA and PATA host controller <ul style="list-style-type: none"> - Supports up to 2 UltraDMA 100Mbps IDE devices - Supports 2 SATA devices - SATA speed up to 3Gb/s - RAID 0 and RAID 1 |
| IEEE 1394 | <ul style="list-style-type: none"> • VIA VT6307 • Supports two 100/200/400 Mb/sec ports |
| Rear Panel I/O | <ul style="list-style-type: none"> • 1 mini-DIN-6 PS/2 mouse port • 1 mini-DIN-6 PS/2 keyboard port • 1 IEEE 1394 port • 6 USB 2.0/1.1 ports • 2 RJ45 LAN ports |
| Internal I/O | <ul style="list-style-type: none"> • 3 connectors for 6 additional external USB 2.0 ports • 1 connector for an external COM port • 1 connector for an IEEE 1394 port • 1 connector for the Bernstein audio module • 1 front audio connector (on the Bernstein audio module) • 1 CD-in connector (on the Bernstein audio module) • 1 S/PDIF connector (on the Bernstein audio module) • 1 IrDA connector and 1 CIR connector • 8 Serial ATA connectors • 1 40-pin IDE connector and 1 floppy connector • 1 24-pin ATX power connector • 1 8-pin 12V power connector • 2 4-pin 5V/12V power connectors (FDD type) • 1 front panel connector • 6 fan connectors • 1 diagnostic LED • EZ touch switches (power switch and reset switch) |
| Power Management | <ul style="list-style-type: none"> • ACPI and OS Directed Power Management • ACPI STR (Suspend to RAM) function • Wake-On-PS/2 Keyboard/Mouse • Wake-On-USB Keyboard/Mouse • Wake-On-LAN and Wake-On-Ring • RTC timer to power-on the system • AC power failure recovery |
| Hardware Monitor | <ul style="list-style-type: none"> • Monitors CPU/system/Northbridge temperature and overheat alarm • Monitors Vcore/Vdimm/Vnb/VCC5/12V/V5sb/Vbat voltages • Monitors the speed of the cooling fans • CPU Overheat Protection function monitors CPU temperature and fan during system boot-up - automatic shutdown upon system overheat |
| PCB | <ul style="list-style-type: none"> • 6 layers, ATX form factor • 24.4cm (9.6") × 30.5cm (12") |

Features



LP UT P35-T2R and LP LT P35-T2R support high performance DDR2 technology whose data transfer rate delivers bandwidth of 12.8 Gb/s and beyond. That is twice the speed of the conventional DDR without increasing its power consumption. DDR2 SDRAM modules work at 1.8V supply compared to 2.6V memory voltage for DDR modules. DDR2 also incorporates new innovations such as the On-Die Termination (ODT) as well as larger 4-bit pre-fetch against DDR which fetches 2 bits per clock cycle.



LP UT P35-T3R and LP LT P35-T3R support DDR3 memory that delivers increased system bandwidth and improved performance. DDR3 offers peak data transfer rate of up to 17 Gb/s bandwidth. The advantages of DDR3 are its higher bandwidth and its increase in performance at a lower power than DDR2.



The Realtek ALC885 on the Bernstein audio module supports 6 audio jacks that provide 8-channel audio output for advanced 7.1-channel super surround sound audio system. It is also equipped with a CD-in connector, front audio connector and S/PDIF output allowing digital connections with DVD systems or other audio/video multimedia.



S/PDIF is a standard audio file transfer format that transfers digital audio signals to a device without having to be converted first to an analog format. This prevents the quality of the audio signal from degrading whenever it is converted to analog. S/PDIF is usually found on digital audio equipment such as a DAT machine or audio processing device. The S/PDIF interface on the system board sends surround sound and 3D audio signal outputs to amplifiers and speakers and to digital recording devices like CD recorders.



The JMicron JMB363 controller supports up to two UltraDMA 100Mbps IDE devices.

SATA 3Gb/s Serial ATA is a storage interface that is compliant with SATA 1.0 specification. Intel ICH9R and JMicron JMB363 both support speed of up to 3Gb/s. Serial ATA improves hard drive performance faster than the standard parallel ATA whose data transfer rate is 100MB/s.



The Intel ICH9R chip allows configuring RAID on Serial ATA devices. It supports RAID 0, RAID 1, RAID 0+1 and RAID 5.



The JMicron JMB363 chip allows configuring RAID on another 2 Serial ATA devices. It supports RAID 0 and RAID 1.



The Marvell 88E8052 and Marvell 88E8053 PCI Express Gigabit LAN controllers support up to 1Gbps data rate.



IEEE 1394 is fully compliant with the 1394 OHCI (Open Host Controller Interface) 1.1 specification. It supports up to 63 devices that can run simultaneously on a system. 1394 is a fast external bus standard that supports data transfer rates of up to 400Mbps. In addition to its high speed, it also supports isochronous data transfer which is ideal for video devices that need to transfer high levels of data in real-time. 1394 supports both Plug-and-Play and hot plugging.



CMOS Reloaded is a technology that allows storing multiple user-defined BIOS settings by using the BIOS utility to save, load and name the settings. This is especially useful to overclockers who require saving a variety of overclocked settings and being able to conveniently switch between these settings simultaneously.

**HYPER-THREADING
TECHNOLOGY**

The system board supports Intel processors with Hyper-Threading Technology. Enabling the functionality of Hyper-Threading Technology for your computer system requires **ALL** of the following platforms.

Components:

- CPU - an Intel® Pentium® 4 Processor with HT Technology
- Chipset - an Intel® chipset that supports HT Technology
- BIOS - a BIOS that supports HT Technology and has it enabled
- OS - an operating system that includes optimizations for HT Technology

For more information on Hyper-Threading Technology, go to: www.intel.com/info/hyperthreading.

**PCI
EXPRESS™**

PCI Express is a high bandwidth I/O infrastructure that possesses the ability to scale speeds by forming multiple lanes. The system board currently supports the physical layer of x1, x4 and x16 lane widths. The x1 PCI Express lane supports transfer rate of 2.5 Gigabytes (250MBbps) per second. The PCI Express architecture also provides a high performance graphics infrastructure by enhancing the capability of a x16 PCI Express lane to provide 4 Gigabytes per second transfer rate.

**CPU
OVERHEAT
PROTECTION**

CPU Overheat Protection has the capability of monitoring the CPU's temperature during system boot up. Once the CPU's temperature exceeded the temperature limit pre-defined by the CPU, the system will automatically shut-down. This preventive measure has been added to protect the CPU from damage and insure a safe computing environment.

IRDA

The system board is equipped with an IrDA connector for wireless connectivity between your computer and peripheral devices. The IRDA (Infrared Data Association) specification supports data transfers of 115K baud at a distance of 1 meter.



The system board supports USB 2.0 and USB 1.1 ports. USB 1.1 supports 12Mb/second bandwidth while USB 2.0 supports 480Mb/second bandwidth providing a marked improvement in device transfer speeds between your computer and a wide range of simultaneously accessible external Plug and Play peripherals.

WAKE-ON-RING

This feature allows the system that is in the Suspend mode or Soft Power Off mode to wake-up/power-on to respond to calls coming from an external modem or respond to calls from a modem PCI card that uses the PCI PME (Power Management Event) signal to remotely wake up the PC.



Important:

If you are using a modem add-in card, the 5VSB power source of your power supply must support a minimum of $\geq 720\text{mA}$.

WAKE-ON-LAN

This feature allows the network to remotely wake up a Soft Power Down (Soft-Off) PC. It is supported via the onboard LAN port or via a PCI LAN card that uses the PCI PME (Power Management Event) signal. However, if your system is in the Suspend mode, you can power-on the system only through an IRQ or DMA interrupt.



Important:

The 5VSB power source of your power supply must support $\geq 720\text{mA}$.

WAKE-ON-PS/2

This function allows you to use the PS/2 keyboard or PS/2 mouse to power-on the system.



Important:

The 5VSB power source of your power supply must support $\geq 720\text{mA}$.

WAKE-ON-USB

This function allows you to use a USB keyboard or USB mouse to wake up a system from the S3 (STR - Suspend To RAM) state.

**Important:**

If you are using the Wake-On-USB Keyboard/Mouse function for 2 USB ports, the 5VSB power source of your power supply must support $\geq 1.5A$. For 3 or more USB ports, the 5VSB power source of your power supply must support $\geq 2A$.

RTC

The RTC installed on the system board allows your system to automatically power-on on the set date and time.

STR

The system board is designed to meet the ACPI (Advanced Configuration and Power Interface) specification. ACPI has energy saving features that enables PCs to implement Power Management and Plug-and-Play with operating systems that support OS Direct Power Management. ACPI when enabled in the Power Management Setup will allow you to use the Suspend to RAM function.

With the Suspend to RAM function enabled, you can power-off the system at once by pressing the power button or selecting “Standby” when you shut down the system without having to go through the sometimes tiresome process of closing files, applications and operating system. This is because the system is capable of storing all programs and data files during the entire operating session into RAM (Random Access Memory) when it powers-off. The operating session will resume exactly where you left off the next time you power-on the system.

**Important:**

The 5VSB power source of your power supply must support $\geq 1A$.

**POWER FAILURE
RECOVERY**

When power returns after an AC power failure, you may choose to either power-on the system manually or let the system power-on automatically.

Français

| | |
|------------------------------|--|
| Processeur | <ul style="list-style-type: none">• LGA 775 socket pour:<ul style="list-style-type: none">- Intel® Core™2 Quad, Intel® Core™2 Extreme, Intel® Core™2 Duo, Intel® Pentium® D ou Intel® Pentium® 4• Intel Ont augmenté La Technologie De la Mémoire 64 (EMT64T)• Ont augmenté La Technologie D'Intel SpeedStep (EIST)• Intel Hyper-Filetant La Technologie (Intel Hyper-Threading)• Soutient 1333*/1066/800MHz FSB*Disponible sur les unités centrales de traitement qui soutiennent 1333MHz FSB |
| Chipset | <ul style="list-style-type: none">• Intel® chipset<ul style="list-style-type: none">- Pont nord: Intel® P35 Express chipset (avec la technologie rapide d'accès mémoire d'Intel)- Pont sud: Intel® ICH9R |
| Mémoire Système | <ul style="list-style-type: none">• LP UT P35-T2R et LP LT P35-T2R<ul style="list-style-type: none">- 4 sockets DIMM DDR2 240-pin- Supporte DDR2 667/800 MHz- Délivre jusqu'à 12.8Gb/s de bande passante• LP UT P35-T3R et LP LT P35-T3R<ul style="list-style-type: none">- 4 sockets DIMM DDR3 240-pin- Supporte DDR3 800/1066/1333 MHz- Délivre jusqu'à 17Gb/s de bande passante• L'interface de mémoire deux canaux (128-bit)• Jusqu'à 8GB de mémoire système• Non-tamponnés DIMM x8 et x16 |
| Logements d'Extension | <ul style="list-style-type: none">• 3 PCI Express x16 slots (PCIE1 à x16, PCIE3 à x4 ou x1 et PCIE4 à x1)• 1 PCI Express x1 slot• 3 PCI slots |
| BIOS | <ul style="list-style-type: none">• Award BIOS• Mémoire Flash 8Mbit |
| Audio | <ul style="list-style-type: none">• Bernstein carte audio<ul style="list-style-type: none">- 8 chaînes Realtek ALC885 haute définition audio CODEC- Center/subwoofer, rear R/L et side R/L prises audio- Line-in, line-out et mic-in prises audio- 2 ports coaxial RCA S/PDIF- 1 connecteur optique S/PDIF- 1 connecteur CD-in- 1 connecteur audio de l'avant• DAC SNR/ADC SNR de 106dB/101dB• Technologie protection de contenu lossless à toute vitesse |
| LAN | <ul style="list-style-type: none">• Marvell 88E8052 et Marvell 88E8053 PCIE Gigabit LAN• Entièrement conforme IEEE 802.3 (10BASE-T), 802.3u (100BASE-TX) et 802.3ab (1000BASE-T) standard |

| | |
|--|--|
| Dispositif de Stockage | <ul style="list-style-type: none"> • Intel ICH9R chip <ul style="list-style-type: none"> - Intel Matrix Storage Technologie - 6 dispositifs de SATA - SATA allant jusqu'à 3Gb/s - RAID 0, RAID 1, RAID 0+1 et RAID 5 • JMicron JMB363 PCI exprès contrôleur de SATA et de PATA à centre serveur <ul style="list-style-type: none"> - Soutient jusqu'à 2 dispositifs d'UltraDMA 100Mbps IDE - 2 dispositifs de SATA - SATA allant jusqu'à 3Gb/s - RAID 0 et RAID 1 |
| IEEE 1394 | <ul style="list-style-type: none"> • VIA VT6307 • Supporte 2 100/200/400 Mb/sec ports |
| Panneau Arrière I/O | <ul style="list-style-type: none"> • 1 port souris PS/2 • 1 port clavier PS/2 • 1 port IEEE 1394 • 6 ports USB 2.0/1.1 • 2 ports RJ45 LAN |
| Interne I/O | <ul style="list-style-type: none"> • 3 connecteurs pour 6 ports USB 2.0/1.1 supplémentaires • 1 connecteur pour 1 IEEE 1394 • 1 connecteur pour 1 série • 1 connecteur pour module audio Bernstein • 1 connecteur audio frontal (sur le module audio Bernstein) • 1 connecteur CD-in (sur le module audio Bernstein) • 1 port optique S/PDIF (sur le module audio Bernstein) • 1 connecteur IR et 1 connecteur CIR • 8 connecteurs Serial ATA • 1 connecteur IDE et 1 connecteur de FDD • 1 connecteur d'alimentation 24-pin ATX • 1 connecteur d'alimentation 8-pin 12V ATX • 2 prises d'alimentation 4-broches 5V/12V (type-FDD) • 1 connecteur devant panneau et 6 connecteurs de ventilateurs • 1 indicateur diagnostiques • EZ interrupteurs (bouton de power et reset) |
| Gestion de Puissance | <ul style="list-style-type: none"> • ACPI et OS Directed Power Management • ACPI STR (Suspend to RAM) fonction • Réveil-Sur-PS/2 Clavier/Souris • Réveil-Sur-USB Clavier/Souris • Eveil Sonnerie et Réveil Par Le Réseau • Minuterie RTC pour allumer le système • Récupération après Défaillance d'Alimentation CA |
| Fonctions de Moniteur de Matériel | <ul style="list-style-type: none"> • Gère l'alarme de température et de surchauffe de CPU / système / pont nord • Gère l'alarme de voltage et d'échec de Vcore/Vdimm/Vnb/VCC5/12V/V5sb/Vbat • Gère la vitesse de ventilateur du ventilateur • Protection du CPU - supporte la mise hors circuit automatique en cas de surchauffage du système |
| PCB | <ul style="list-style-type: none"> • Facteur de forme de ATX • 24.4cm (9.6") x 30.5cm (12") |

Deutsch

| | |
|--------------------------|--|
| Prozessor | <ul style="list-style-type: none">• LGA 775 CPU Einfaßung für:<ul style="list-style-type: none">- Intel® Core™2 Quad, Intel® Core™2 Extreme, Intel® Core™2 Duo, Intel® Pentium® D oder Intel® Pentium® 4• Intel Erhöhten Technologie Des Gedächtnis-64 (EMT64T)• Erhöhten Intel SpeedStep Technologie (EIST)• Intel, das Technologie Hyper-Verlegt (Intel Hyper-Threading)• Stützt 1333*/1066/800MHz FSB*Verfügbar für CPU's die 1333 MHz. FSB unterstützen |
| Chipset | <ul style="list-style-type: none">• Intel® chipset<ul style="list-style-type: none">- Nordbrücke: Intel® P35 Express chipset (mit Intel® schneller Speicherzugriffstechnologie)- Südbrücke: Intel® ICH9R |
| Systemspeicher | <ul style="list-style-type: none">• LP UT P35-T2R und LP LT P35-T2R<ul style="list-style-type: none">- 4 240-pin-Steckplätze DDR2 DIMM- DDR2 667/800 MHz- Bis zum 12.8Gb/s-Bandbreite.• LP UT P35-T3R und LP LT P35-T3R<ul style="list-style-type: none">- 4 240-pin-Steckplätze DDR3 DIMM- DDR3 800/1066/1333 MHz- Bis zum 17Gb/s-Bandbreite.• 128-bit – Speicher mit den zwei Kanälen• Bis zum 8GB-Systemspeicher• DIMMs ohne Dämpfer x8 und x16 DIMMs |
| Expansion Schlitz | <ul style="list-style-type: none">• 3 PCI Express x16-Einbauplätzen (PCI-E1 mit x16, PCI-E3 mit x4 oder x1 und PCI-E4 mit x1)• 1 PCI Express x1-Einbauplätzen• 3 PCI-Einbauplätzen |
| BIOS | <ul style="list-style-type: none">• Award BIOS• Flash-Speicher 8Mbit |
| Audio | <ul style="list-style-type: none">• Bernstein-platine<ul style="list-style-type: none">- Realtek ALC885 8-Kanal-Hohe-Definition-audio-CODEC- Center/subwoofer, rear R/L und side R/L Audio-Anschlußbuchsen- Line-in, line-out und mic-in Audio-Anschlußbuchsen- 2 S/PDIF coaxial RCA-Anschlüsse- 1 S/PDIF optischen-Anschlüsse- 1 interne Audioanschlüsse (CD-in)- 1 Frontaudioanschluß• DAC SNR/ADC SNR von 106dB/101dB• Lossless zufriedene Schutzvollwegtechnologie |
| LAN | <ul style="list-style-type: none">• Marvell 88E8052 und Marvell 88E8053 PCIE Gigabit LAN• Völlig gefällig zu IEEE 802.3 (10BASE-T), 802.3u (100BASE-TX) und 802.3ab (1000BASE-T) standards |

| | |
|------------------------------|--|
| Speichervorrichtungen | <ul style="list-style-type: none"> • Intel ICH9R chip <ul style="list-style-type: none"> - Intel Matrix Storage Technologie - 6 SATA-Vorrichtungen - SATA bis zu 3Gb/s schnell - RAID 0, RAID 1, RAID 0+1 und RAID 5 • JMicron JMB363 PCI ausdrücklich SATA und PATA zum Wirt Steuerpult <ul style="list-style-type: none"> - Stützt bis 2 Ultra DMA 100Mbps IDE Vorrichtungen - 2 SATA-Vorrichtungen - SATA bis zu 3Gb/s schnell - RAID 0 und RAID 1 |
| IEEE 1394 | <ul style="list-style-type: none"> • VIA VT6307 • Unterstützt 2 100/200/400 Mb/sec porte |
| Porte an der Rückwand | <ul style="list-style-type: none"> • 1 Mini-DIN-6-Anschluß für eine PS/2-Maus • 1 Mini-DIN-6-Anschluß für eine PS/2-Tastatur • 1 IEEE 1394-Anschlüsse • 6 USB 2.0/1.1-Anschlüsse • 2 RJ45 LAN-Anschlüsse |
| Internes I/O | <ul style="list-style-type: none"> • 3 Anschlußfassung für 6 zusätzliche externe USB 2.0/1.1-Anschlüsse • 1 Anschluß für eine externe IEEE 1394 Schnittstelle • 1 Anschluß für eine externe serieller DB-9-Anschluß • 1 Anschluß für eine Bernstein Audiomodul • 1 Front-Audioanschluss (im Bernstein Audiomodul) • 1 CD-in interne Audioanschlüsse (im Bernstein Audiomodul) • 1 S/PDIF optischen-Anschlüsse (im Bernstein Audiomodul) • 1 Anschluß für die IR-Schnittstelle und 1 CIR-Schnittstelle • 8 Serial ATA-Anschlüsse • 1 IDE-Anschlüsse und 1 Floppy-Anschlüsse • 1 24-polige Anschlußstecker für das ATX-Netzgerät • 1 8-polige 12V Anschlußstecker für das ATX-Netzgerät • 2 4-polige 5V/12V Netzstecker (für FDD) • 1 Vorderseite Füllung Anschlüsse und 6-ventilator-Anschlüsse • 1 diagnostischen Außenindikatoren • EZ Umschaltern (der Knopf der Speisung und des Auslasses) |
| Energie Management | <ul style="list-style-type: none"> • ACPI und OS Directed Power Management • ACPI STR (Suspend to RAM) funktion • Wecken bei Betätigung der PS/2 Tastatur/Maus • Wecken bei USB-Tastatur/Maus • Wecken bei Klingeln und Wecken des Systems durch das Netzwerk • RTC-Taktgeber zum Einschalten des Systems • Wiederherstellung der Wechselstromversorgung nach einem Ausfall |
| Kleinteilmonitor | <ul style="list-style-type: none"> • Überwachung der Temperatur des CPU / Systems / Nordbrücke sowie Warnsignal bei Überhitzung • Überwachung der Spannungen des Vcore/Vdimm/Vnb/VCC5/12V/V5sb/Vbat • Überwachung der Geschwindigkeit des Ventilators • Prozessor-Shutz - Die Ausschaltung bei der Überhitzung – die automatische Ausschaltung des Computers bei der Überhitzung |
| PCB | <ul style="list-style-type: none"> • ATX Formfaktor, 24.4cm (9.6") x 30.5cm (12") |

Español

| | |
|-----------------------------|--|
| Procesador | <ul style="list-style-type: none">• LGA 775 Zócalo de la CPU para:<ul style="list-style-type: none">- Intel® Core™2 Quad, Intel® Core™2 Extreme, Intel® Core™2 Duo, Intel® Pentium® D o Intel® Pentium® 4• Intel Realzaron Tecnología De la Memoria 64 (EMT64T)• Realzaron La Tecnología De Intel SpeedStep (EIST)• Intel Hiperactivo-Que rosca Tecnología (Intel Hyper-Threading)• 1333*/1066/800MHz FSB <p>*Disponible en procesadores que soporten un FSB a 1333MHz</p> |
| Chipset | <ul style="list-style-type: none">• Intel® chipset<ul style="list-style-type: none">- Puente norte: Intel® P35 Express chipset (con tecnología rápida del acceso de memoria de Intel®)- Puente sur: Intel® ICH9R |
| Memoria de Sistema | <ul style="list-style-type: none">• LP UT P35-T2R y LP LT P35-T2R<ul style="list-style-type: none">- 4 240-pin mortajas DDR2 DIMM- Soporta DDR2 667/800 MHz- Proporciona hasta 12.8Gb/s de ancho de banda• LP UT P35-T3R y LP LT P35-T3R<ul style="list-style-type: none">- 4 240-pin mortajas DDR3 DIMM- Soporta DDR3 800/1066/1333 MHz- Proporciona hasta 17Gb/s de ancho de banda• Memoria de dos canales (128-bit)• Hasta 8GB de memoria sistémica• Sólo unbuffered x8 y x16 DIMM |
| Ranuras de Expansión | <ul style="list-style-type: none">• 3 slot PCI Express x16 (PCIE1 de x16, PCIE3 de x4 o x1 y PCIE4 de x1)• 1 slot PCI Express x1• 3 slots PCI |
| BIOS | <ul style="list-style-type: none">• Award BIOS• Memoria instantane 8Mbit |
| Audio | <ul style="list-style-type: none">• Tablero de Bernstein<ul style="list-style-type: none">- Codificador de audio de alta definición de 8 canales Realtek ALC885- Center/subwoofer, rear R/L y side R/L enchufes de audio- Line-in, line-out (front R/L) y mic-in enchufes de audio- 2 puertos de S/PDIF coaxial RCA- 1 puerto de S/PDIF óptica- 1 conector de CD-in audio interno- 1 conector audio delantero• DAC SNR/ADC SNR de 106dB/101dB• Tecnología protección de la contenta lossless de exploración completa |
| LAN | <ul style="list-style-type: none">• Marvell 88E8052 y Marvell 88E8053 PCIE Gigabit LAN• Completamente a IEEE 802.3 (10BASE-T), 802.3u (100BASE-TX) y 802.3ab (1000BASE-T) estándar |

| | |
|----------------------------------|---|
| Dispositivo de Almacenaje | <ul style="list-style-type: none"> • Intel ICH9R chip <ul style="list-style-type: none"> - Intel Matrix Storage Tecnología - 6 dispositivo de Serial ATA - Velocidad SATA de hasta 3Gb/s - RAID 0, RAID 1, RAID 0+1 y RAID 5 • JMicron JMB363 PCI Expreso regulador del anfitrión de SATA y de PATA <ul style="list-style-type: none"> - Apoya hasta 2 dispositivos del UltraDMA 100Mbps IDE - 2 dispositivo de Serial ATA - Velocidad SATA de hasta 3Gb/s - RAID 0 y RAID 1 |
| IEEE 1394 | <ul style="list-style-type: none"> • VIA VT6307 • Soporta 2 ports 100/200/400 Mb/sec |
| Panel Trasero I/O | <ul style="list-style-type: none"> • 1 puerto de ratón y 1 puerto de teclado mini-DIN-6 PS/2 • 1 puerto de IEEE 1394 • 6 puertos de USB 2.0/1.1 • 2 puertos de RJ45 LAN |
| Conector Interno | <ul style="list-style-type: none"> • 3 conectores para 6 puertos de USB 2.0/1.1 externo adicional • 1 conector para un puerto de IEEE 1394 • 1 conector para un puerto de DB-9 serie externa • 1 conector para un módulo de sonido de Bernstein • 1 conector de sonido delantera (en el módulo de sonido de Bernstein) • 1 conector de CD-in (en el módulo de sonido de Bernstein) • 1 puerto de S/PDIF óptico (en el módulo de sonido de Bernstein) • 1 conector de IR y 1 conector de CIR • 8 conectores de SATA • 1 conector de IDE y 1 conector de FDD • 1 conector 24-pin de fuente de alimentación de ATX • 1 conector 8-pin 12V de fuente de alimentación de ATX • 2 4-fichas conectadores de energía de 5V/12V (FDD-tipo) • 1 conector de panel delante y 6 conectores de abanicos • 1 indicadore diagnósticos • EZ conmutadores (conmutadores de alimentación y reset) |
| Gerencia de la Energía | <ul style="list-style-type: none"> • ACPI y OS Directed Power Management • ACPI STR (Suspend to RAM) función • PS/2 Teclado/Ratón y USB Teclado/Ratón de Wake-On • Wake-On-Ring y Wake-On-LAN • Temporizador de RTC para encender el sistema • Recuperación de Fracaso de Energía AC |
| Monitor del Hardware | <ul style="list-style-type: none"> • Monitores de los CPU / sistema / Puente norte temperaturas y alarma acalorada. • Monitores de voltajes de Vcore/Vdimm/Vnb/VCC5/12V/V5sb/Vbat • Vigila la velocidad del abanico del abanido • Protección del procesador - Desconexión en caso de recalentamiento –el ordenador se desconecta automáticamente en caso de recalentamiento |
| PCB | <ul style="list-style-type: none"> • ATX forme el factor; 24.4cm (9.6") x 30.5cm (12") |

Русский язык

| | |
|---------------------------|---|
| Процессор | <ul style="list-style-type: none">• LGA 775 гнездо для:<ul style="list-style-type: none">- Intel® Core™2 Quad, Intel® Core™2 Extreme, Intel® Core™2 Duo, Intel® Pentium® D или Intel® Pentium® 4• Intel Увеличили Технологию Памяти 64 (EMT64T)• Увеличили Технологию Intel SpeedStep (EIST)• Intel Гипер-Prodeva4 нитку Технологию (Intel Hyper-Threading)• 1333*/1066/800MHz FSB <p>*Есть на процессорах, поддерживающих частоту шины 1333МГц</p> |
| Чипсет | <ul style="list-style-type: none">• Intel® Чипсет<ul style="list-style-type: none">- Северный мост: Intel® P35 курьерский Чипсет (с технологией доступа к памяти Intel® быстрой)- Южный мост: Intel® ICH9R |
| Оперативная Память | <ul style="list-style-type: none">• LP UT P35-T2R и LP LT P35-T2R<ul style="list-style-type: none">- 4 240-pin гнезда DDR2 DIMM- Поддержка память DIMM DDR2 667/800 МГц- Обеспечивается пропускная способность до 12.8Гб/с• LP UT P35-T3R и LP LT P35-T3R<ul style="list-style-type: none">- 4 240-pin гнезда DDR3 DIMM- Поддержка память DIMM DDR3 800/1066/1333 МГц- Обеспечивается пропускная способность до 17 Гб/с• двухканальную память (128-бит)• до 8ГБ системной памяти• только небуфф x8 и x16 DIMM |
| Слоты | <ul style="list-style-type: none">• 3 PCI Express x16 слотов (PCIЕ1 на x16, PCIЕ3 на x4 или x1 и PCIЕ4 на x1)• 1 PCI Express x1 слотов• 3 PCI слотов |
| BIOS | <ul style="list-style-type: none">• Award BIOS• 8Mbit внезапная память |
| ТОНАЛЬНОЗВУКОВО | <ul style="list-style-type: none">• звуковой модуль Bernstein<ul style="list-style-type: none">- 8-ми канальный кодек HD-audio Realtek ALC885- Center/subwoofer, rear R/L и side R/L гнезда для звука- Mic-in, line-in и line-out гнезда для звука- 2 coaxial RCA S/PDIF порт- 1 оптического S/PDIF порт- 1 разъем CD-in- 1 передний аудио разъем• DAC SNR/ADC SNR 106dB/101dB• Full-rate lossless содержащая технология предохранения |
| LAN | <ul style="list-style-type: none">• Marvell 88E8052 и Marvell 88E8053 PCIE Gigabit LAN• Поддерживает IEEE 802.3 (10BASE-T), 802.3u (100BASE-TX) и 802.3ab (1000BASE-T) |

| | |
|-----------------------------|---|
| приспособления | <ul style="list-style-type: none"> • Intel ICH9R chip <ul style="list-style-type: none"> - Intel Matrix Storage Технологию - 6 SATA приспособления - Скорость интерфейса SATA до 3 Гб/с - RAID 0, RAID 1, RAID 0+1 и RAID 5 • JMicron JMB363 PCI курьерский к регулятор хозяину SATA и PATA <ul style="list-style-type: none"> - поддерживает up to 2 приспособления UltraDMA 100Mbps IDE - 2 SATA приспособления - Скорость интерфейса SATA до 3 Гб/с - RAID 0 и RAID 1 |
| IEEE 1394 | <ul style="list-style-type: none"> • VIA VT6307 • Поддерживает 2 100/200/400 Mb/sec порта |
| задняя панель I/O | <ul style="list-style-type: none"> • 1 мини-DIN-6 PS/2 порт для мыши • 1 мини-DIN-6 PS/2 порт для клавиатуры • 1 IEEE 1394 порта и 6 USB 2.0/1.1 порта • 2 RJ45 LAN порт |
| внутренне I/O | <ul style="list-style-type: none"> • 3 разъем для 6-х дополнительных внешних USB 2.0/1.1 портов • 1 разъем для внешнего IEEE 1394 порта • 1 разъем для внешнего внешнего DB-9 • 1 разъем для аудио-модуле Bernstein • 1 фронтальный аудио-разъем (на аудио-модуле Bernstein) • 1 CD-in разъема (на аудио-модуле Bernstein) • 1 S/PDIF оптического (на аудио-модуле Bernstein) • 1 IR разъем, 1 CIR разъем, 1 IDE разъема и 1 разъем FDD • 8 Serial ATA разъема • 1 24-штырьковых разъемов питания ATX • 1 8-штырьковых 12V разъемов питания ATX • 2 4-штырьковых разъемов питания 5V/12V (типа FDD) • 1 Фронт панель разъем и 6 Разъемы для вентилятора • 1-х внешних диагностических индикаторов • EZ переключатели (кнопка питания и сброса) |
| управление силы | <ul style="list-style-type: none"> • ACPI и OS Directed Power Management • ACPI STR (Suspend to RAM) • Активизация На Движение Мыши • Активизация На Нажатие Кнопки USB Клавиатуры • Активизация На Входящий Звонок • Активизация На Сетевое Событие • RTC Таймер для Включения Системы • Скачки Напряжения |
| монитор оборудования | <ul style="list-style-type: none"> • Мониторинг температуры процессора / системы / Северный мост • Мониторинг напряжений Vcore/Vdimm/Vnb/VCC5/12V/V5sb/Vbat • Мониторинг скорости вращения вентилятора • Защита процессора - Выключение при перегреве – автоматическое выключение компьютера при перегреве |
| PCB | <ul style="list-style-type: none"> • фактор формы ATX, 24.4cm (9.6") x 30.5cm (12") |


日本語

| | |
|---------|---|
| プロセッサ | <ul style="list-style-type: none"> ・プロセッサ・ソケット: LGA 775 - Intel® Core™2 Quad, Intel® Core™2 Extreme, Intel® Core™2 Duo, Intel® Pentium® D または Intel® Pentium® 4 ・Intel Enhanced Memory 64 Technology (EMT64T) ・Enhanced Intel SpeedStep Technology (EIST) ・Intel Hyper-Threading Technology ● 1333*/1066/800MHz FSB *FSB 1333MHz CPU サポートは可能です |
| チップセット | <ul style="list-style-type: none"> ・Intel® チップセット - ノースブリッジ: Intel® P35 (Intel Fast Memory Access Technology) - サウスブリッジ: Intel® ICH9R |
| システムメモリ | <ul style="list-style-type: none"> ・LP UT P35-T2R および LP LT P35-T2R - 240ピンDDR2 DIMM ソケット x 4 - DDR2 667/800 DIMM をサポート - 最大12.8Gb/秒のバンド幅を提供 ・LP UT P35-T3R および LP LT P35-T3R - 240ピンDDR3 DIMM ソケット x 4 - DDR3 800/1066/1333 DIMM をサポート - 最大17Gb/秒のバンド幅を提供 ・デュアルチャネル (128ビット幅) メモリインターフェース対応 ・最大 8GB までのシステムメモリに対応 ・x8と16x、unbuffered DIMM |
| 拡張スロット | <ul style="list-style-type: none"> ・PCI Express x16 スロット x 3 (PCIE1 = x16, PCIE3 = x4 または x1 および PCIE4 = x1) ・PCI Express x1 スロット x 1 ・PCIスロット x 3 |
| BIOS | <ul style="list-style-type: none"> ・Award BIOS ・8Mビット フラッシュメモリ |
| オーディオ | <ul style="list-style-type: none"> ● Bernstein・モジュール - Realtek ALC885 8チャンネルハイディフィニションオーディオCODEC - ライン入力、ライン出力 (フロントR/L) およびマイク入力端子 - センタ/サブウーファ、リアR/LおよびサイドR/L端子 - 光学 S/PDIF x 1 - Coaxial RCA S/PDIF x 2 - CD 入力コネクタ 1 - フロントオーディオコネクタ x 1 ● 106dB/101dB のDAC SNR/ADC SNR ● 標準スピードのlossless満足な保護技術 |
| LAN | <ul style="list-style-type: none"> ・Marvell 88E8052 および Marvell 88E8053 ギガビットイーサネットコントローラ ・IEEE 802.3 (10BASE-T)、802.3u (100BASE-TX) および802.3ab (1000BASE-T) 基準に完全準拠 |


| | |
|-----------|--|
| 記憶装置 | <ul style="list-style-type: none"> ・Intel ICH9R <ul style="list-style-type: none"> - Intel Matrix Storage Technology - 6つのSATAポートをサポート - 最大3Gb/秒のSATA速度 - RAID 0, RAID 1, RAID 0+1 および RAID 5 ・JMicron JMB363 SATAおよびPATAのホストのに明白なP C I コントローラー <ul style="list-style-type: none"> - は2つまでのUltraDMA 100Mbps IDE装置を支える - 2つのSATAポートをサポート - 最大3Gb/秒のSATA速度 - RAID 0 および RAID 1 |
| IEEE 1394 | <ul style="list-style-type: none"> ・VIA VT6307 ・2つの100/200/400 Mb/秒ポートをサポート |
| リアパネルI/O | <ul style="list-style-type: none"> ・mini-DIN-6 PS/2マウスポート x 1 ・mini-DIN-6 PS/2キーボードポート x 1 ・IEEE 1394 ポート x 1 ・USB 2.0/1.1 ポート x 6 ・RJ45 LAN ポート x 2 |
| 内部I/O | <ul style="list-style-type: none"> ・6ポート外部USB 2.0/1.1ポート用コネクタ x 3 ・1つの外部COMポート用コネクタ x 1 ・外部IEEE 1394ポート用コネクタ x 1 ・Bernstein・モジュール用コネクタ x 1 ・外部ライン出力及びマイク入力ジャック用フロント オーディオ コネクタ x 1 (Bernstein・モジュール上) ・CD 入力内蔵オーディオコネクタ x 1 (Bernstein・モジュール上) ・同軸S/PDIFコネクタ x 1 (Bernstein・モジュール上) ・IrDAコネクタ x 1 ・CIRコネクタ x 1 ・SATAコネクタ x 8 ・IDEコネクタ x 1 ・フロッピーコネクタ x 1 ・24ピンATX主電源コネクタ x 1 ・8ピンATX12V電源コネクタ x 1 ・4-ピン 5V/12V 電源コネクタ x 2 (FDD タイプ) ・フロントパネルコネクタ x 1 ・ファンコネクタ x 6 ・診断LED x 1 ・E Z タッチスイッチ (電源スイッチとリセットスイッチ) |
| 電源管理機能 | <ul style="list-style-type: none"> ・ACPI およびOS自主電源管理 ・ACPI STR (サスペンド・トゥ・ラム) 機能 ・ウェイクオンPS/2キーボード/マウス ・ウェイクオンUSB キーボード/マウス ・ウェイクオンLAN (WOL) ・ウェイクオンリング (Wake-On-Ring) ・システムパワーオン用RTCタイマー ・A C 電源問題発生時のリカバリ機能 |
| ハードウェアモニタ | <ul style="list-style-type: none"> ・CPU/システム/ノースブリッジ温度のモニタリング ・Vcore/Vdimm/Vnb/VCC5/12V/V5sb/Vbat 電圧のモニタリング ・冷却ファン速度のモニタリング ・CPU オーバーヒート保護機能によるシステムブートアップ中のCPU温度モニタリング |
| PCB | 4層PCB, ATX フォームファクタ 24.4 cm (9.6") x 30.5 cm (12") |

Chapter 2 - Hardware Installation

System Board Layout

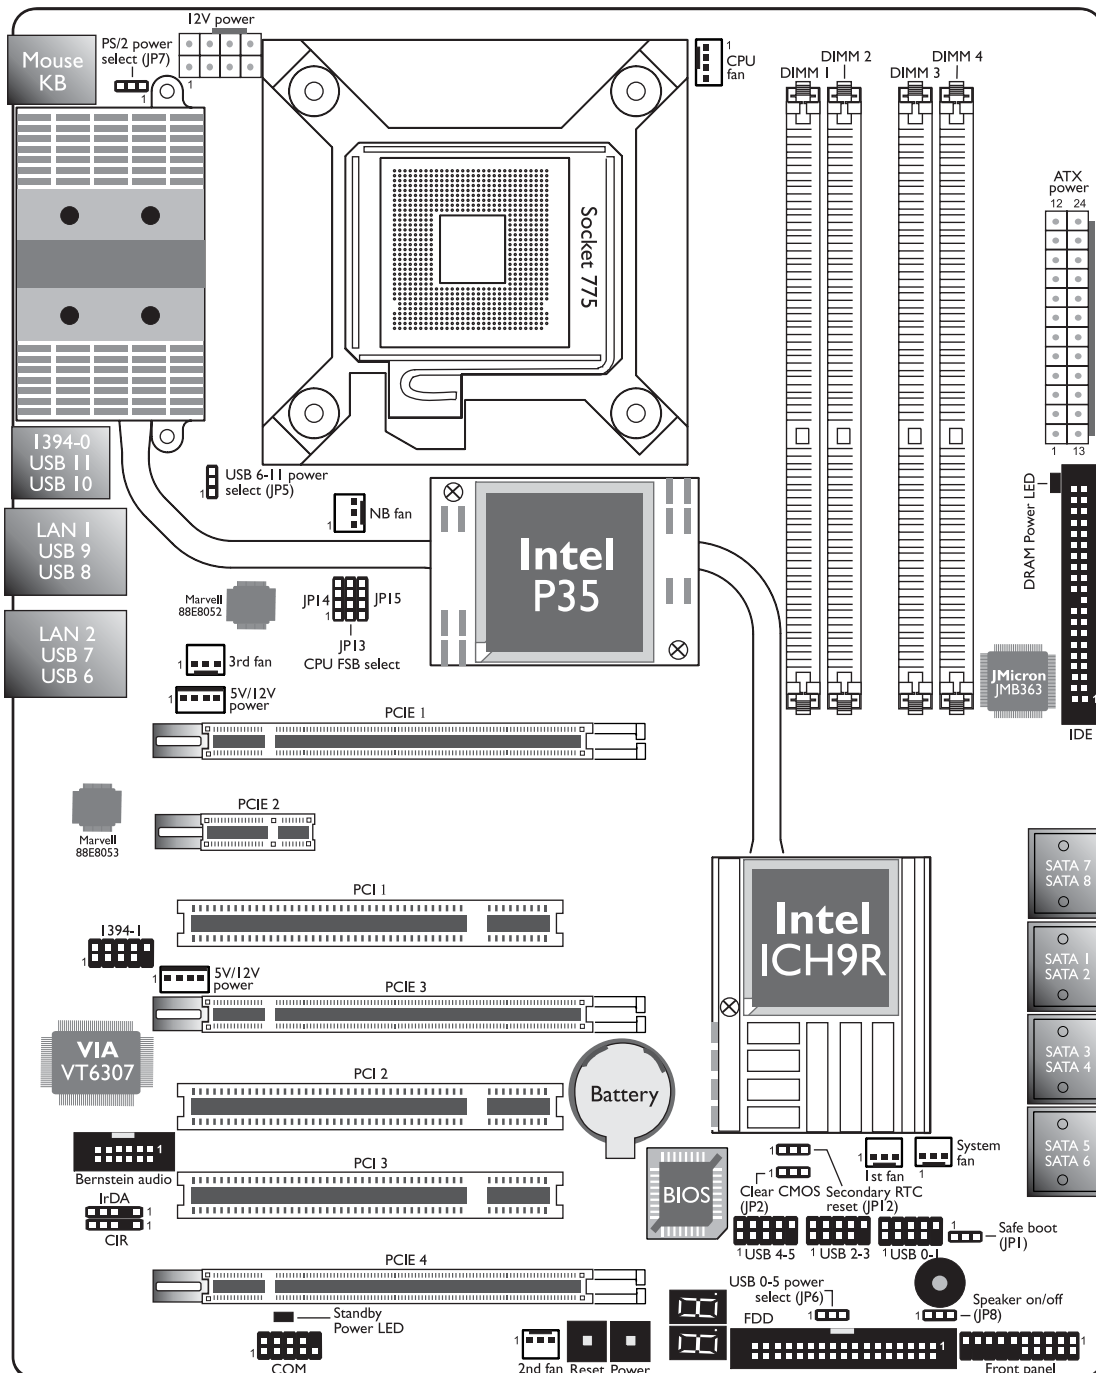

LP UT P35 Series

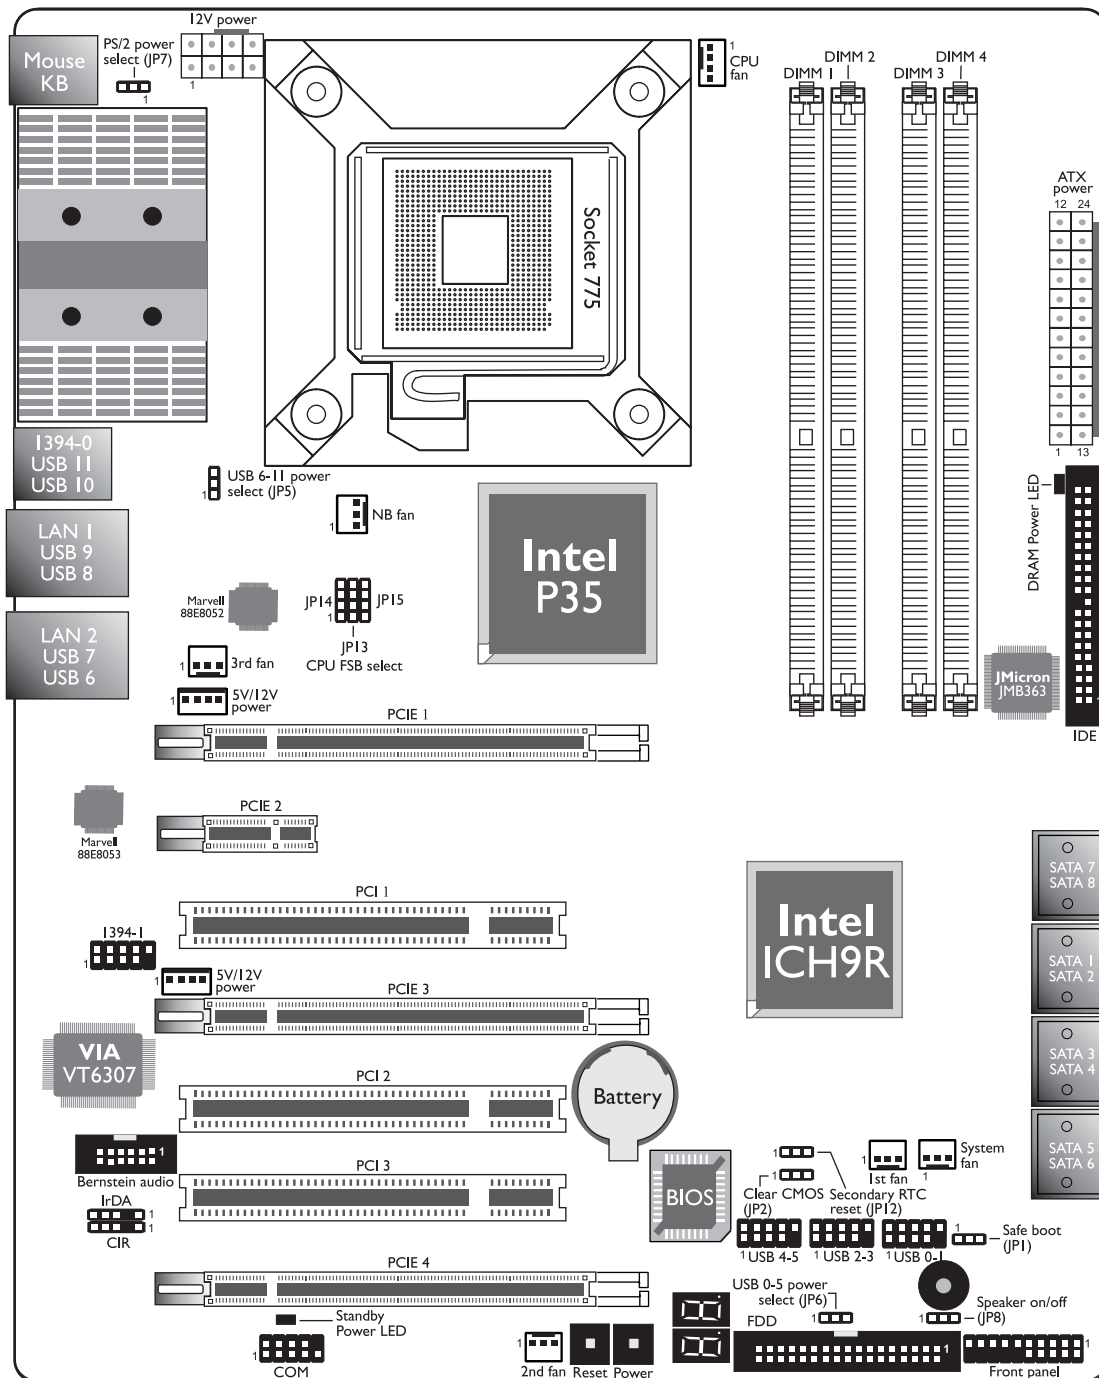

LP LT P35 Series

**Note:**

The illustrations on the following pages are based on the LP UT P35 system board.


**Warning:**

Electrostatic discharge (ESD) can damage your system board, processor, disk drives, add-in boards, and other components. Perform the upgrade instruction procedures described at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

System Memory

**Warning:**

When the DRAM Power LED lit red, it indicates that power is present on the DIMM sockets. Power-off the PC then unplug the power cord prior to installing any memory modules. Failure to do so will cause severe damage to the motherboard and components.

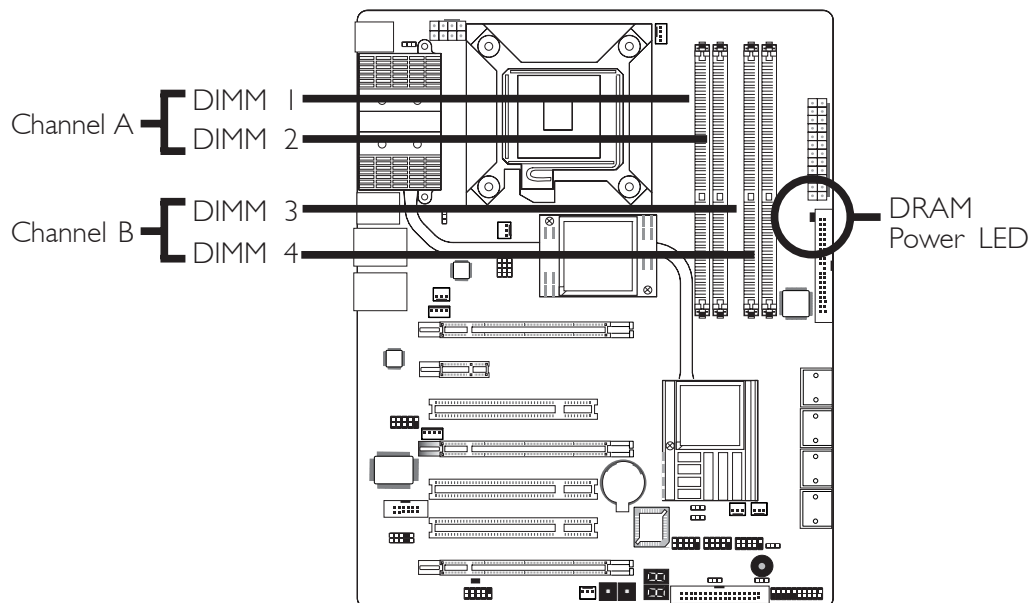

LP UT P35-T2R and LP LT P35-T2R

- Supports four 240-pin DDR2 DIMM sockets

LP UT P35-T3R and LP LT P35-T3R

- Supports four 240-pin DDR3 DIMM sockets

The four DIMM sockets on the system board are divided into 2 channels:

Channel A - DIMM 1 and DIMM 2

Channel B - DIMM 3 and DIMM 4

The system board supports the following memory interface.

Single Channel (SC)

Data will be accessed in chunks of 64 bits (8B) from the memory channels.

Dual Channel (DC)

Data will be accessed in chunks of 128 bits from the memory channels. Dual channel provides better system performance because it doubles the data transfer rate.

| | |
|----------------|---|
| Single Channel | <ul style="list-style-type: none">• DIMMs are on the same channel.• DIMMs in a channel can be identical or completely different. However, we highly recommend using identical DIMMs.• Not all slots need to be populated. |
| Dual Channel | <ul style="list-style-type: none">• DIMMs of the same memory configuration are on different channels. |

BIOS Setting


Configure the system memory in the Genie BIOS Setting submenu ("DRAM Timing" section) of the BIOS.

Installing the DIM Module


**Note:**

The system board used in the following illustrations may not resemble the actual board. These illustrations are for reference only.

1. Make sure the PC and all other peripheral devices connected to it has been powered down.
2. Disconnect all power cords and cables.
3. Locate the DIMM socket on the system board.
4. Push the “ejector tabs” which are at the ends of the socket to the side.

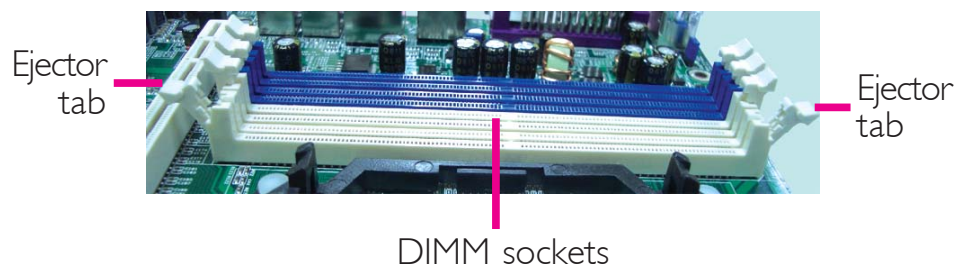

5. Note how the module is keyed to the socket.

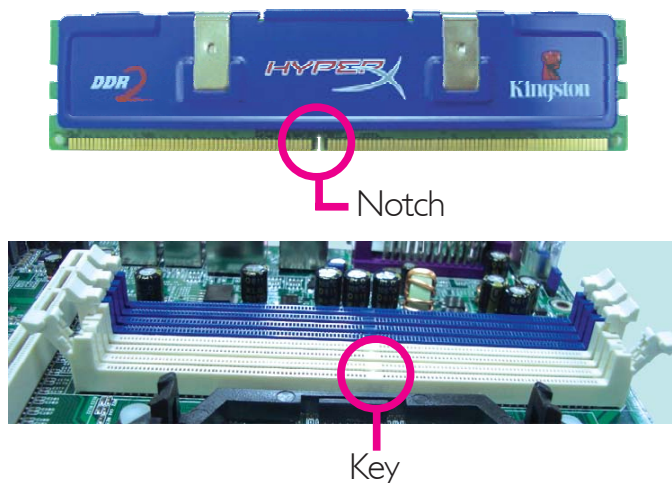

6. Grasping the module by its edges, position the module above the socket with the “notch” in the module aligned with the “key” on the socket. The keying mechanism ensures the module can be plugged into the socket in only one way.



7. Seat the module vertically, pressing it down firmly until it is completely seated in the socket.



8. The ejector tabs at the ends of the socket will automatically snap into the locked position to hold the module in place.



CPU

Overview

The system board is equipped with a surface mount LGA 775 socket. This socket is exclusively designed for installing a LGA 775 packaged Intel CPU.



Important:


- 1. Before you proceed, make sure (1) the LGA775 socket comes with a protective cap, (2) the cap is not damaged and (3) the socket's contact pins are not bent. If the cap is missing or the cap and/or contact pins are damaged, contact your dealer immediately.*
- 2. Make sure to keep the protective cap. RMA requests will be accepted and processed only if the LGA775 socket comes with the protective cap.*

Installing the CPU


1. Make sure the PC and all other peripheral devices connected to it has been powered down.
2. Disconnect all power cords and cables.
3. Locate the LGA 775 CPU socket on the system board.

Important:


The CPU socket must not come in contact with anything other than the CPU. Avoid unnecessary exposure. Remove the protective cap only when you are about to install the CPU.

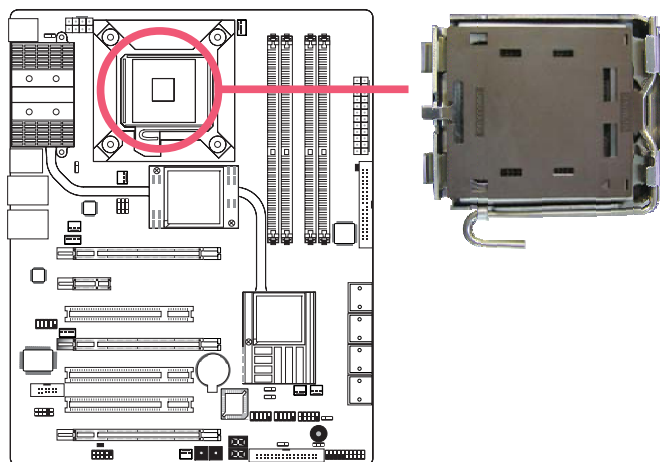


4. The CPU socket comes with a cover that is attached with a removable protective cap. The cap is used to protect the CPU socket against dust and harmful particles. Remove the protective cap only when you are about to install the CPU.

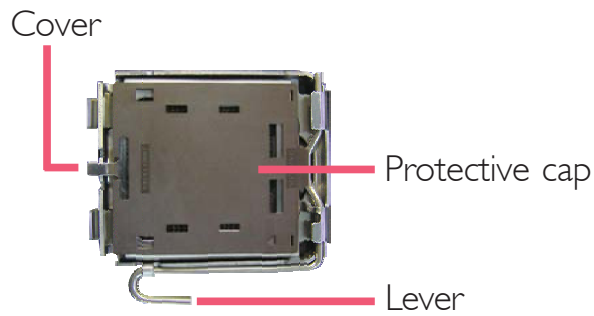


5. Lift the protective cap from the location pointed below to detach the cap from the cover.

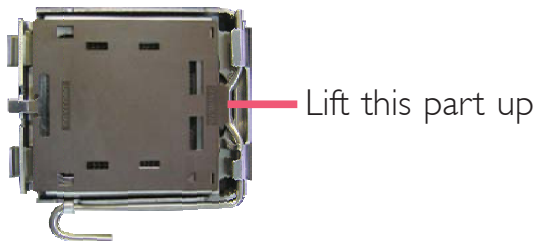

6. Unlock the socket by pushing the lever down, moving it away from the side tab of the socket, then lifting it up.

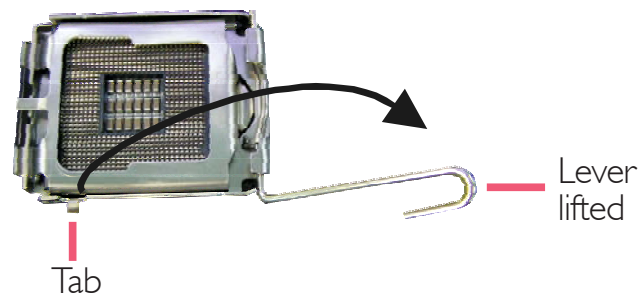


7. Now lift the cover.

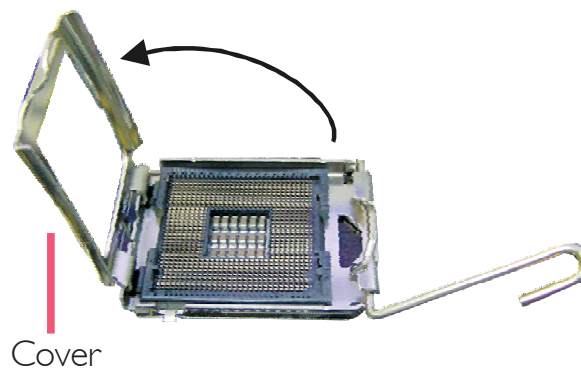

8. Position the CPU above the socket. The gold mark on the CPU must align with pin 1 of the CPU socket.

Important:


Handle the CPU by its edges and avoid touching the pins.

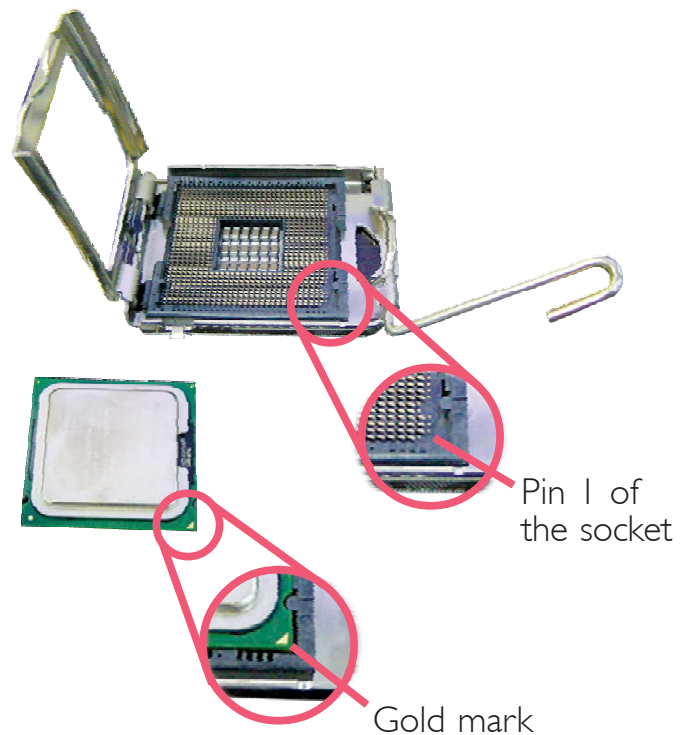


9. Insert the CPU into the socket until it is seated in place. The CPU will fit in only one orientation and can easily be inserted without exerting any force.

Important:


Do not force the CPU into the socket. Forcing the CPU into the socket may bend the pins and damage the CPU.

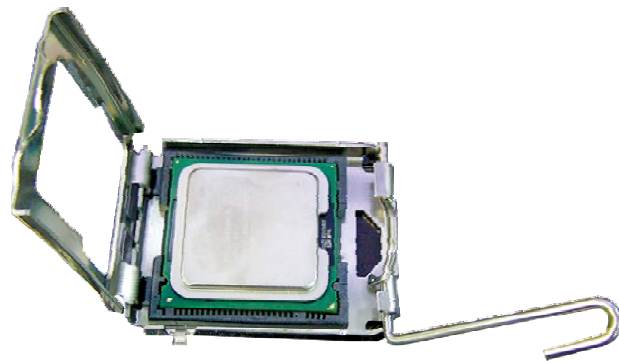

10. Once the CPU is in place, move the cover down.

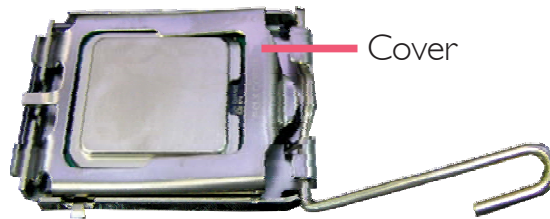

11. Push the lever down to lock the socket. The lever should hook onto the side tab to indicate that the CPU is completely secured in the socket.

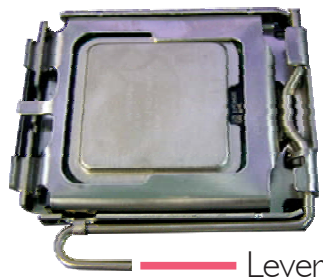

Installing the Fan and Heat Sink

The CPU must be kept cool by using a CPU fan with heat sink. Without sufficient air circulation across the CPU and heat sink, the CPU will overheat damaging both the CPU and system board.



Note:


- Use only certified fan and heat sink.
- The fan and heat sink package usually contains the fan and heat sink assembly, and an installation guide. If the installation procedure in the installation guide differs from the one in this section, please follow the installation guide in the package.

1. Before you install the fan / heat sink, you must apply a thermal paste onto the top of the CPU. The thermal paste is usually supplied when you purchase the CPU or fan heat sink assembly. Do not spread the paste all over the surface. When you later place the heat sink on top of the CPU, the compound will disperse evenly.

Do not apply the paste if the fan / heat sink already has a patch of thermal paste on its underside. Peel the strip that covers the paste before you place the fan / heat sink on top of the CPU.

- Place the heat sink on top of the CPU. The 4 studs around the heat sink which are used to secure the heat sink onto the system board must match the 4 mounting holes around the socket.

Position each stud so that the groove faces the heat sink then push it down firmly until it clicks into place.

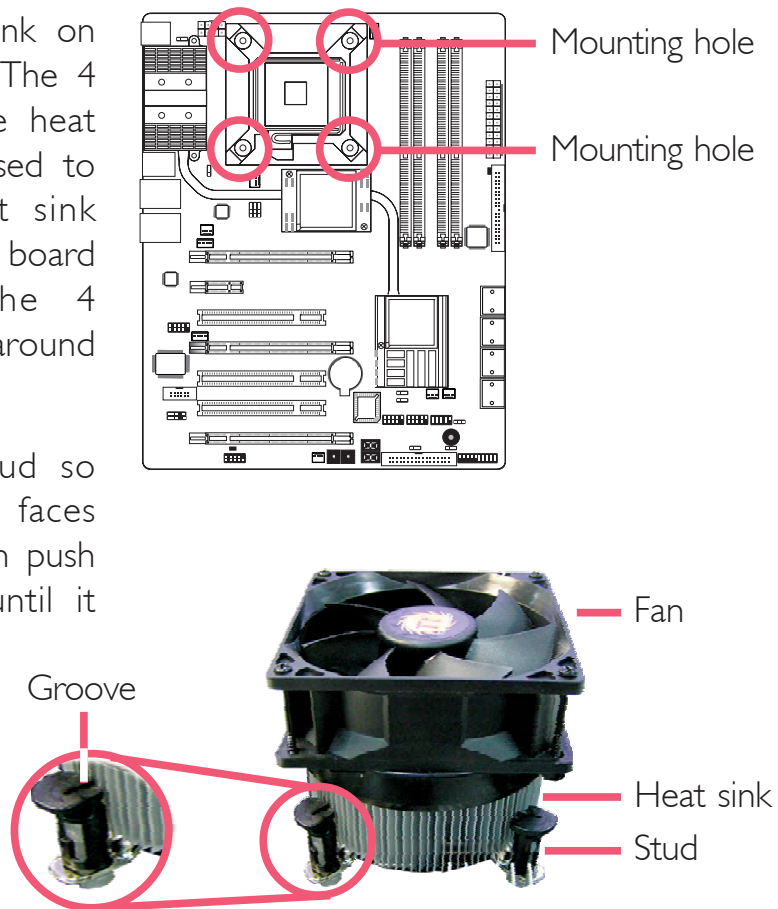

Note:

You will not be able to secure the fan and heat sink assembly in place if the groove is facing outward.

- Connect the CPU fan's cable connector to the CPU fan connector on the system board.



Note:

The LP UT P35 Series provides the option of using the provided Transpiper heat sink. However, instead of using the push-pin type of CPU heat sink / fan assembly, opt for an assembly that uses mounting screws. Refer to the Transpiper Heat Sink section for details.


Please refer to the link below for a list of the Intel® Pentium® D and Intel® Pentium® 4 CPUs supported by the system board.

http://us.dfi.com.tw/Support/mb_cpu_support_us.jsp?PRODUCT_ID=5497&SITE=US


Transpiper Heat Sink (LP UT P35 Series only)

Due to space restrictions, the heat dissipating effect of a heat sink mounted directly at the place where the heat is produced is usually limited. To overcome this problem, the system board uses the heat pipe design. Heat pipe is an extremely high thermal conductor that can quickly transfer heat from one point to another.

The heat pipe will transport heat generated by the chipsets or CPU to a place where more space for the Transpiper heat sink is available. By means of the airflow from the CPU fan and system fan, heat can be carried away and dissipated effectively.

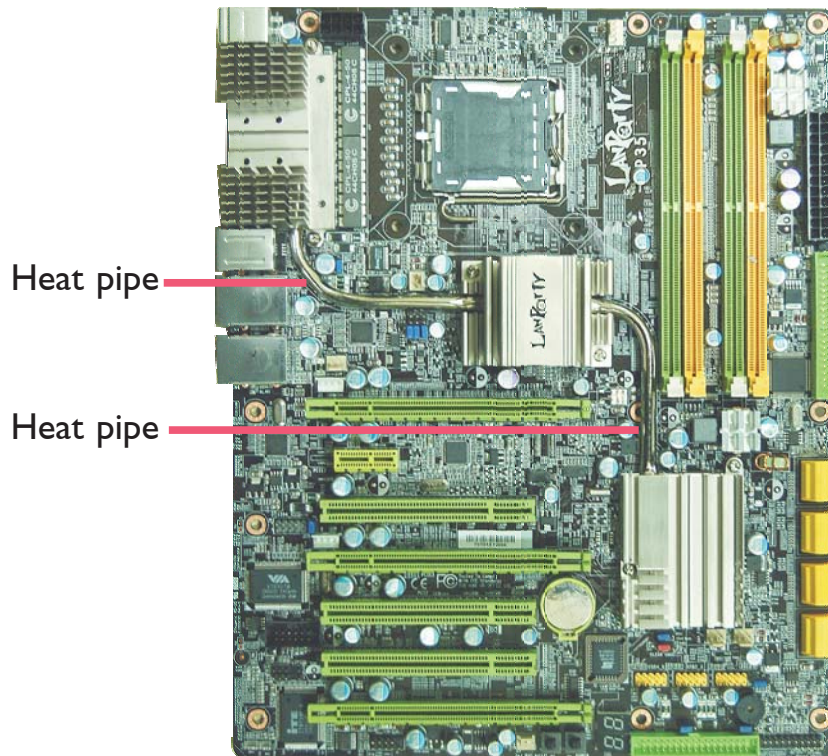


The Transpiper heat sink is included in the package. Install the Transpiper either inside the chassis, anywhere along an available expansion slot or externally - both of which provide effective cooling to the entire system.

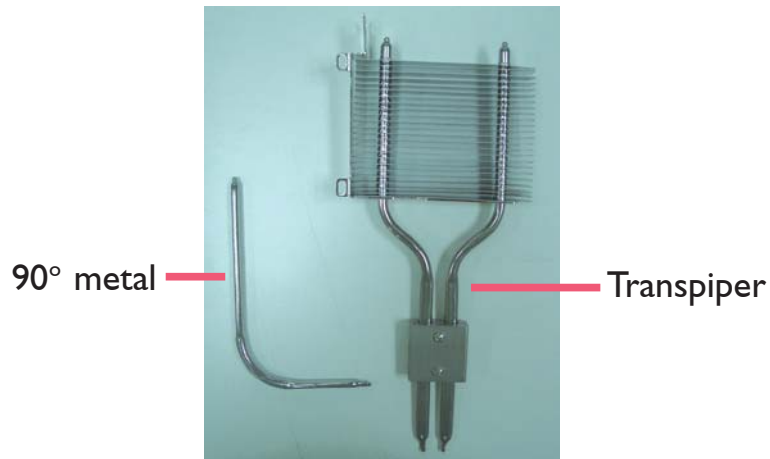


Installing the Transpiper Inside the Chassis


1. Loosen the screws on the Transpiper.

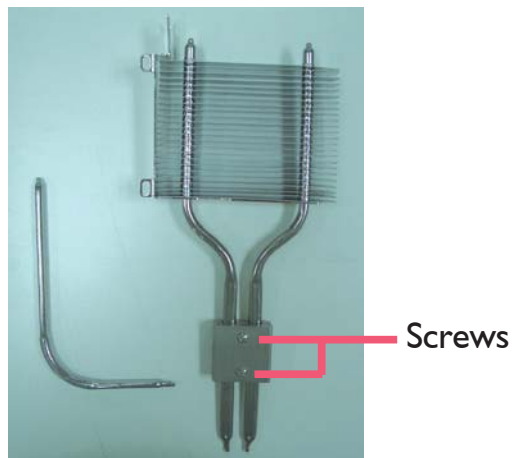


2. Insert the longer side of the 90° metal into the Transpiper. You can adjust its length later on before you fix the Transpiper in place.

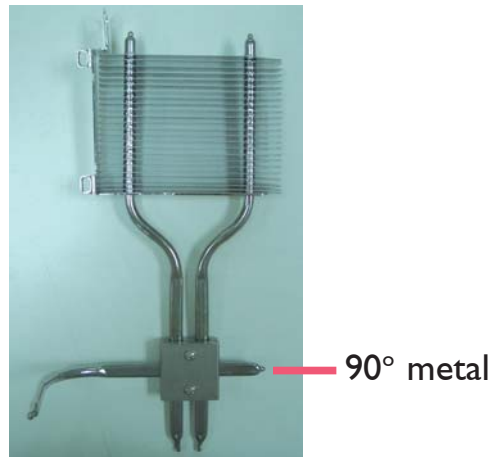


3. Insert the nuts into the southbridge's heat sink as shown.

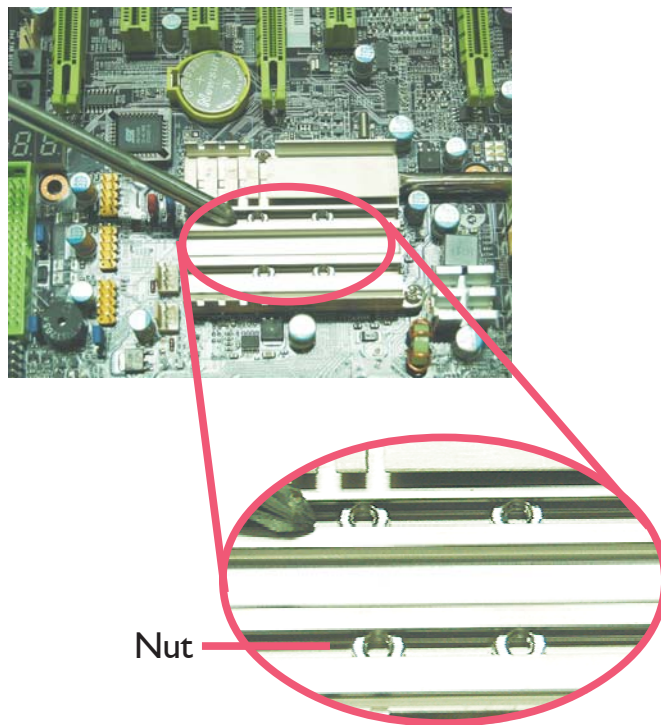

4. Place the rectangular metal plate on top then fasten bolts into the nuts.

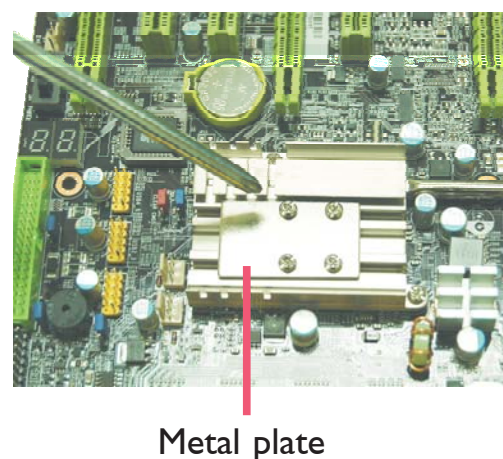


5. Coming from a side of the board, insert the Transpiper under the metal plate. Adjust the Transpiper to an available expansion slot then tighten its screws. The right photo shows the Transpiper on the PCI 3 slot.

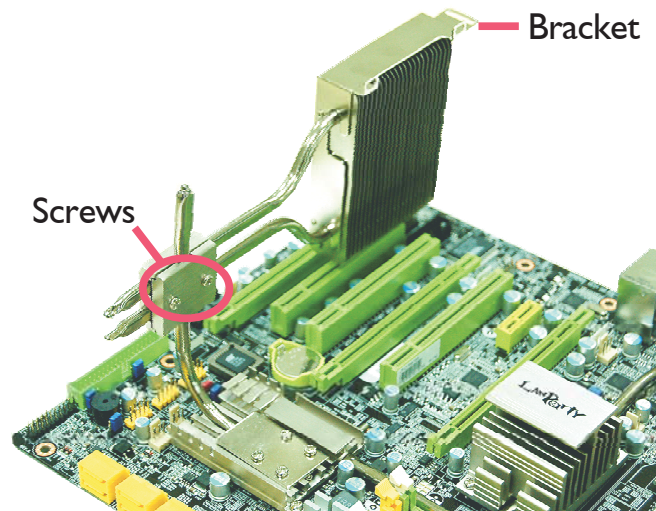

Note:

Before you install the Transpiper, make sure the bracket side is facing upward otherwise the Transpiper will not install properly.


6. The Transpiper can also be installed from the opposite side. The installation steps are the same but make sure it is the longer side of the 90° metal that is inserted into the Transpiper and the shorter side goes under the metal plate. The right photo shows the Transpiper on the PCIE 2 slot.

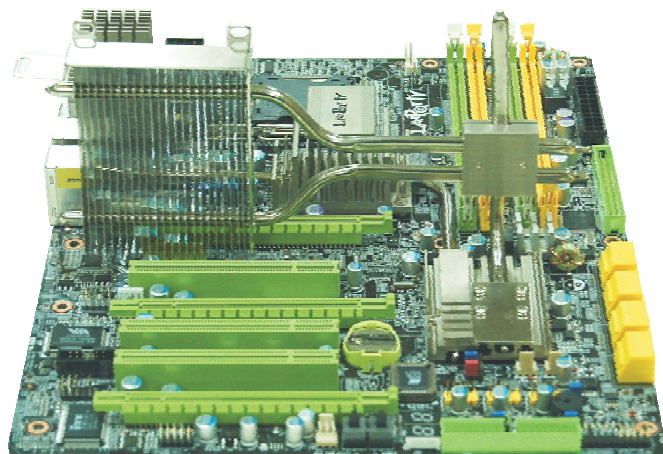


Installing the Transpiper Outside the Chassis

Before you proceed, make sure you have already installed the CPU. Refer to the “CPU” section in this chapter for installation instructions.


1. Place the copper plate on top of the CPU then secure it with the provided screws.

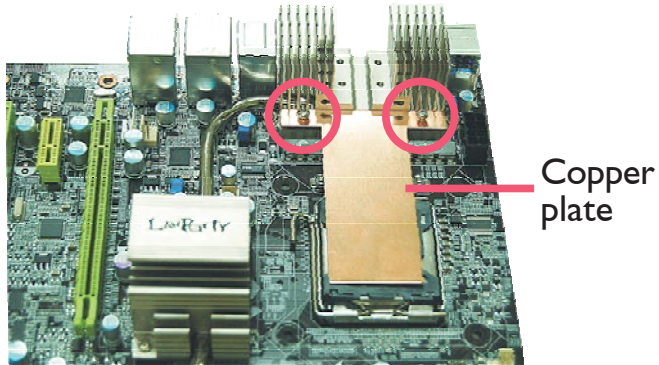

2. Place the rectangular metal plate on top of the heat sink then secure it with four screws.

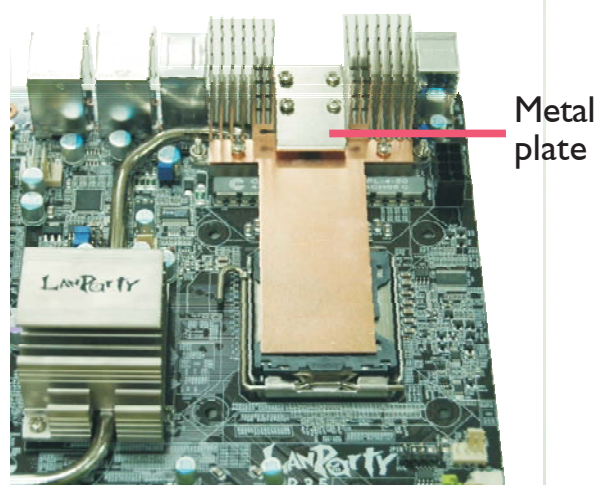

3. Do not install a push-pin type of heat sink and fan assembly. The thickness of the copper plate installed in step 1 will hinder you from installing it properly. Opt for an assembly that uses mounting screws.


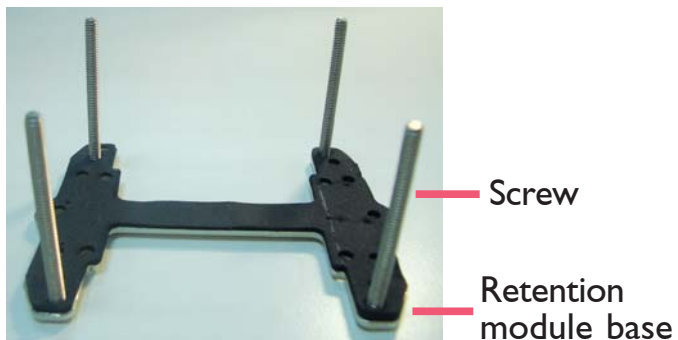


Insert screws into the retention module base's mounting holes - from the bottom through the top.

4. Position the retention module base at the bottom of the system board then match and insert the screws into the mounting holes around the CPU socket - from the bottom through the top of the system board.

Bottom side
of the board


Retention
module base

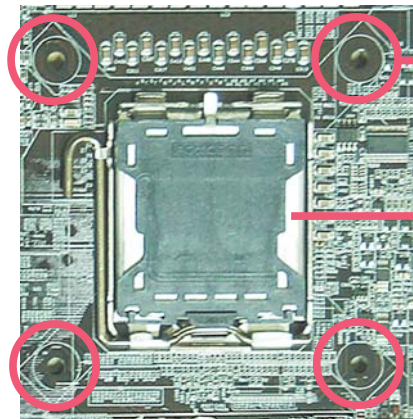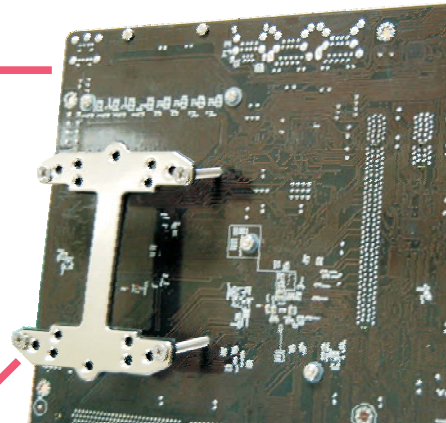


Mounting
hole

CPU
socket


5. The right photo shows the retention module positioned in place.

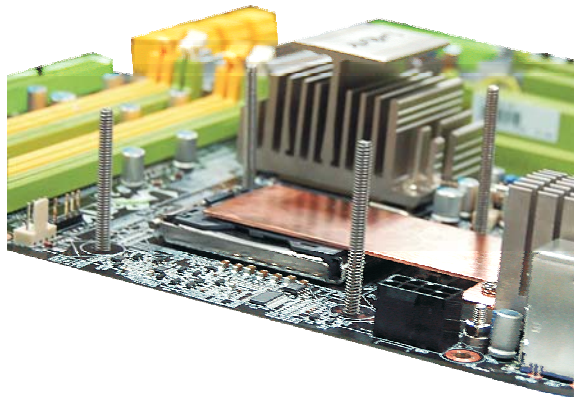

6. Apply a thin layer of thermal paste on top of the copper plate. Do not spread the paste all over the surface. When you later place the heat sink on top, the compound will disperse evenly.

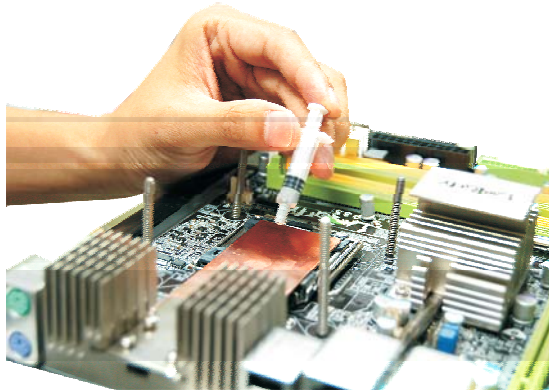


7. Place the heat sink / fan assembly on top of the CPU then connect the CPU fan's cable connector to the CPU fan connector on the system board.

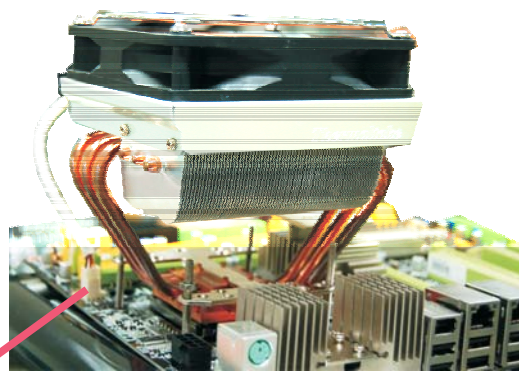


CPU fan
connector

8. Insert the other metal plate of the retention module into their corresponding screws then fasten nuts into the screws to secure the heat sink / fan assembly in place.

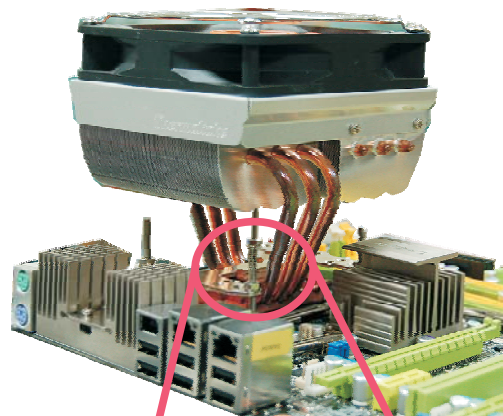


Retention
module


Nut

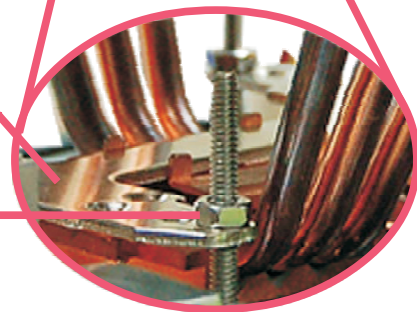

9. Install the system board into the chassis.

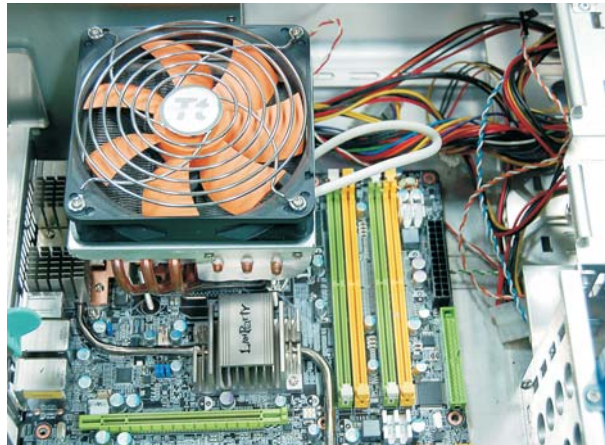

10. Loosen the screws on the Transpiper.

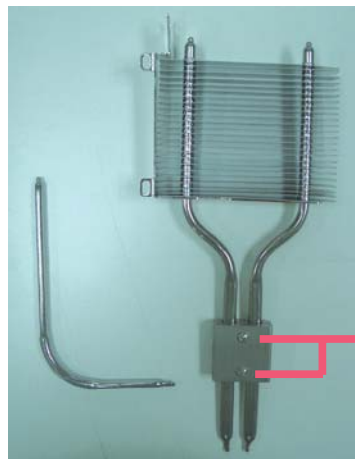

Screws

11. Insert the longer side of the 90° metal into the Transpiper. You can adjust its length later on before you fix the Transpiper in place.




90° metal

12. From the rear outside of the chassis, insert the shorter side of the 90° metal through the I/O shield so that it goes under the metal plate which you have installed in step 2.

Location where the 90° metal is inserted

I/O shield

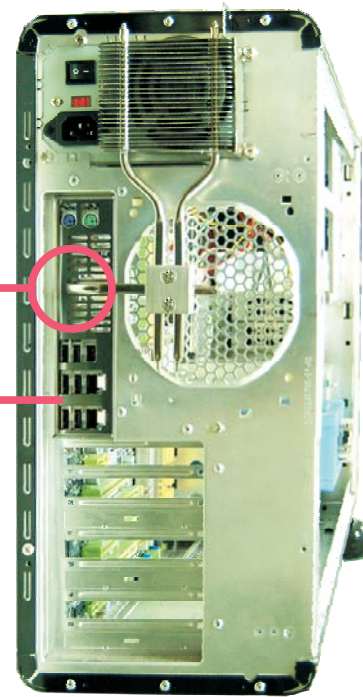


13. Adjust the Transpiper so that its fins face the power supply fan. This will allow air from the power supply to blow directly on the fins of the Transpiper. Tighten the screws on the Transpiper to secure it in place.

Fasten screws on the Transpiper's bracket to fix it in place.

Screws on bracket


Screws

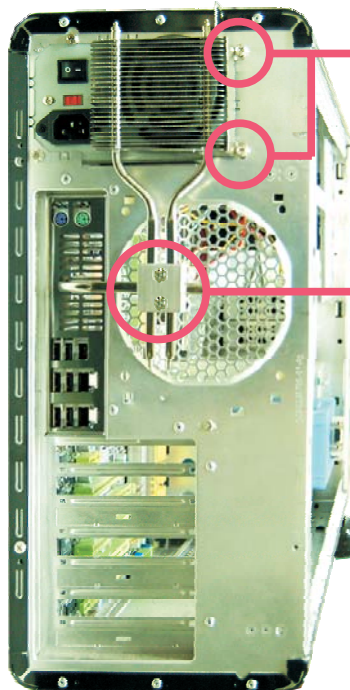

Jumper Settings

Clear CMOS Data

Clearing CMOS Data using JP2

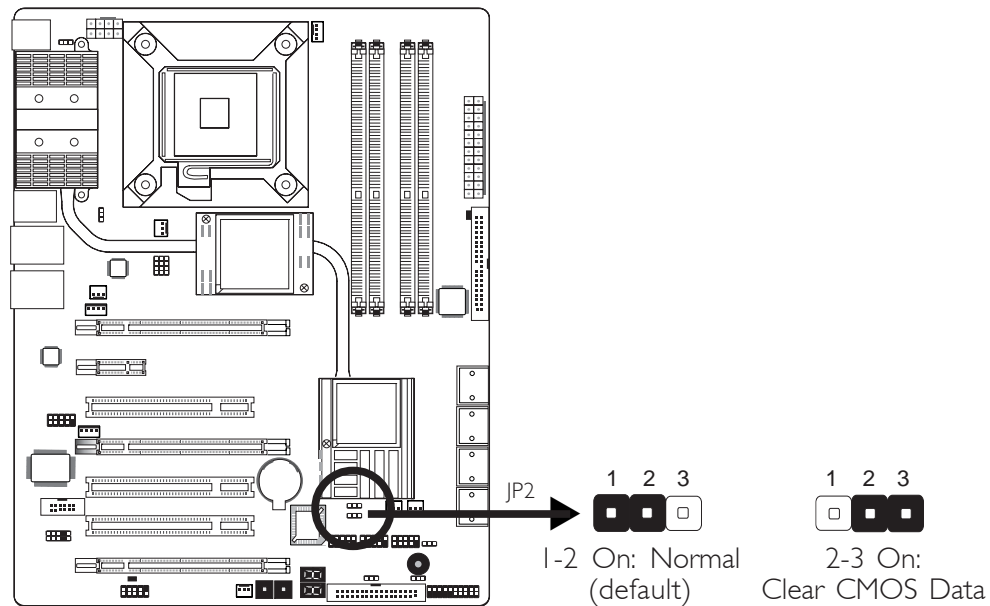

If you encounter the following,

- CMOS data becomes corrupted.*
- You forgot the supervisor or user password.*
- You are unable to boot-up the computer system because the processor's ratio/clock was incorrectly set in the BIOS.*

you can reconfigure the system with the default values stored in the ROM BIOS.

To load the default values stored in the ROM BIOS, please follow the steps below.

1. Power-off the system and unplug the power cord.
2. Set JP2 pins 2 and 3 to On. Wait for a few seconds and set JP2 back to its default setting, pins 1 and 2 On.
3. Now plug the power cord and power-on the system.

If your reason for clearing the CMOS data is due to incorrect setting of the processor's ratio/clock in the BIOS, please proceed to step 4.

4. After powering-on the system, press to enter the main menu of the BIOS.
5. Select the Genie BIOS Setting submenu and press <Enter>.
6. Set the processor's ratio/clock to its default setting or an appropriate setting. Refer to the Genie BIOS Setting in chapter 3 for more information.
7. Press <Esc> to return to the main menu of the BIOS setup utility. Select "Save & Exit Setup" and press <Enter>.
8. Type <Y> and press <Enter>.

Clearing CMOS Data using the EZ Clear® Function

EZ Clear® bypasses the manual process of using a jumper to clear the CMOS by simply using the reset and power buttons.




Important:

EZ Clear® is supported only if standby power is present in the system.

To use EZ Clear®:


1. Make sure the standby power is present.
2. Using the EZ touch switches on the system board, first press the Reset button then the Power button simultaneously for approximately 4 seconds.

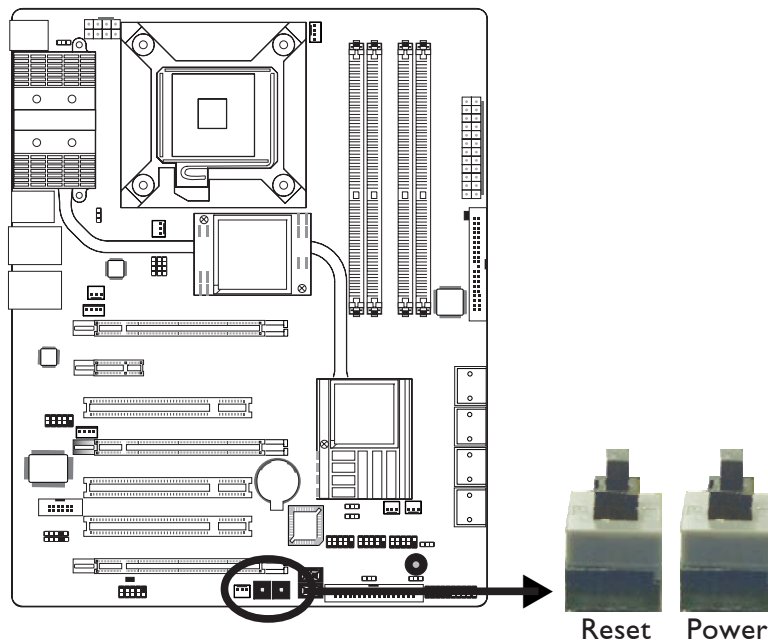

If the system board is already enclosed in a chassis, apply the same method using the Reset button and Power button located at the front panel of the chassis.

3. After 4 seconds, release the power button first then the Reset button.
4. The CMOS will restore the clock settings back to their default values.

PS/2 Power Select

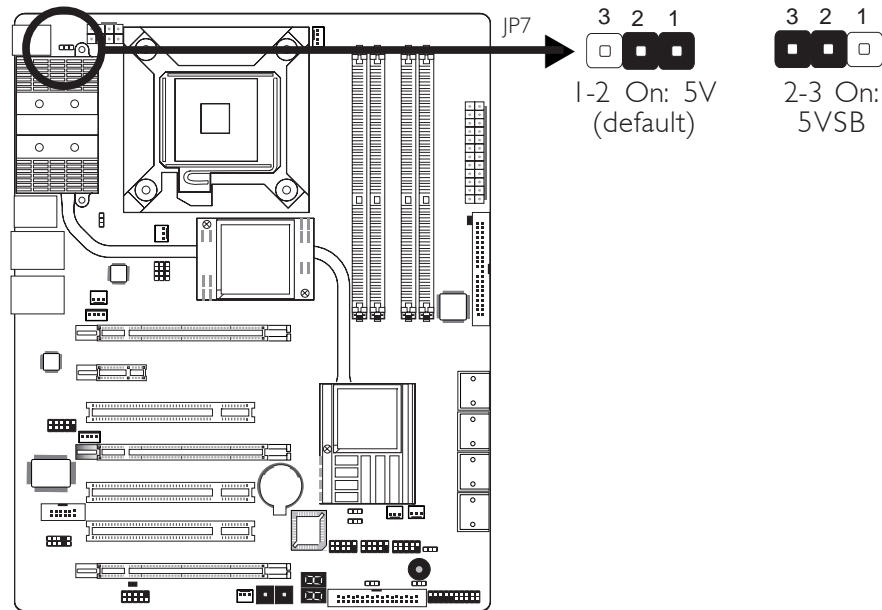

JP7 is used to select the power of the PS/2 keyboard/mouse port. Selecting 5VSB will allow you to use the PS/2 keyboard or PS/2 mouse to wake up the system.


BIOS Setting

Configure the PS/2 keyboard/mouse wake up function in the Integrated Peripherals submenu ("Super IO Device" section) of the BIOS. Refer to chapter 3 for more information.

**Important:**

The 5VSB power source of your power supply must support $\geq 720\text{mA}$.

USB Power Select

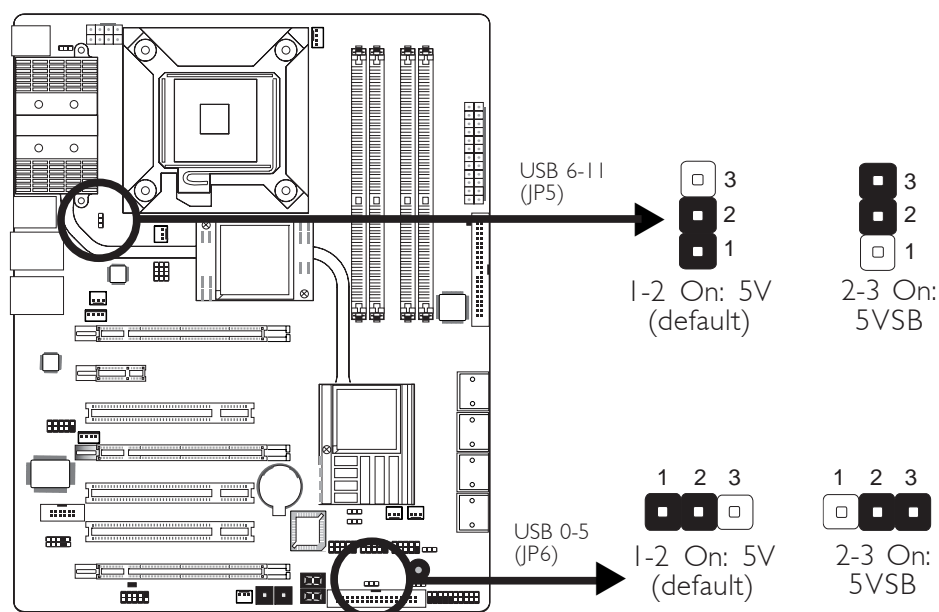

JP5 and JP6 are used to select the power of the USB ports. Selecting 5VSB will allow you to use the USB keyboard or USB mouse to wake up the system..

BIOS Setting


“USB KB WakeUp From S3(S4)” in the Power Management Setup submenu of the BIOS must be set to Enabled. Refer to chapter 3 for more information.



Important:


If you are using the Wake-On-USB Keyboard/Mouse function for 2 USB ports, the 5VSB power source of your power supply must support $\geq 1.5A$. For 3 or more USB ports, the 5VSB power source of your power supply must support $\geq 2A$.

Speaker On/Off Select

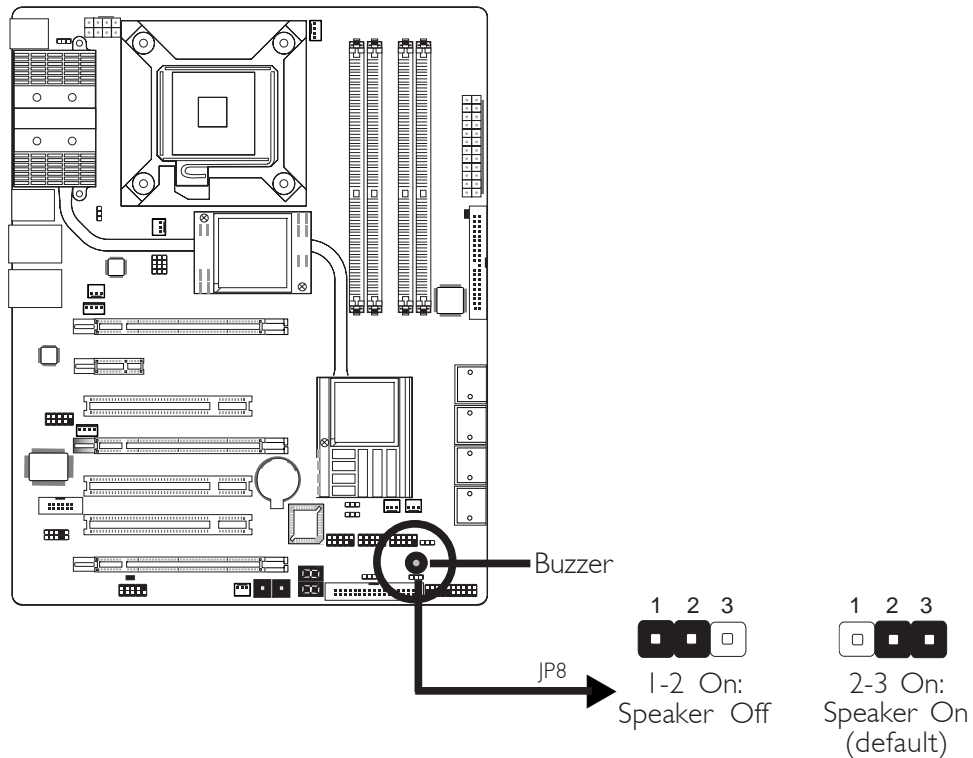

The system board is equipped with a buzzer which serves as the PC's speaker. By default the buzzer is "on" allowing you to hear the system's beep messages and warnings. If you intend to use an external speaker, turn this function off by setting JP8 pins 1 and 2 to On.


Safe Boot

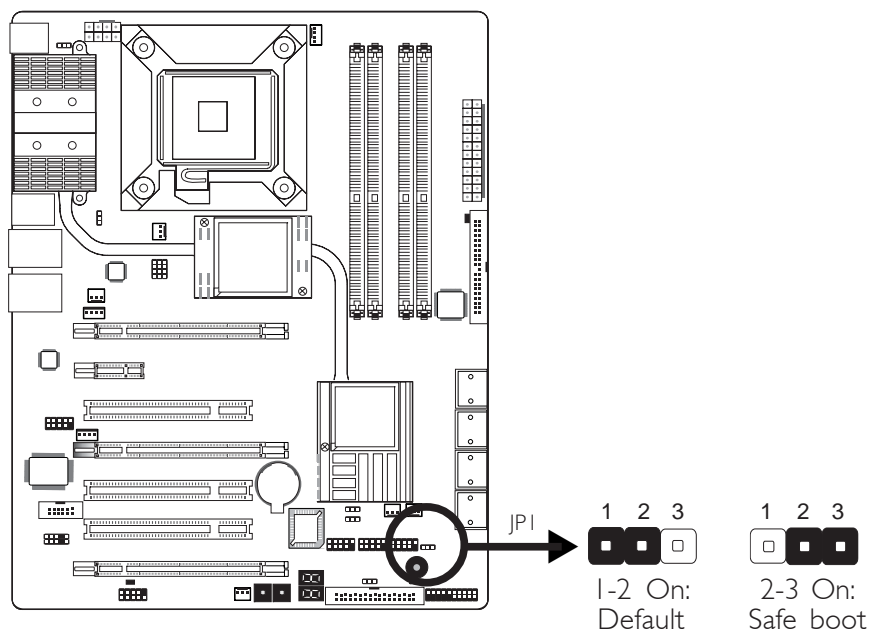

JPI is used to safely reboot the system whenever the system hangs and you are unable to restart the system.

1. Power-off the system and unplug the power cord.
2. Set JPI pins 2 and 3 to On. Wait for a few seconds then set JPI back to its default setting, pins 1 and 2 On.
3. Plug the power cord and power-on the system. The system will reboot normally without losing all data stored in the CMOS.

Secondary RTC Reset

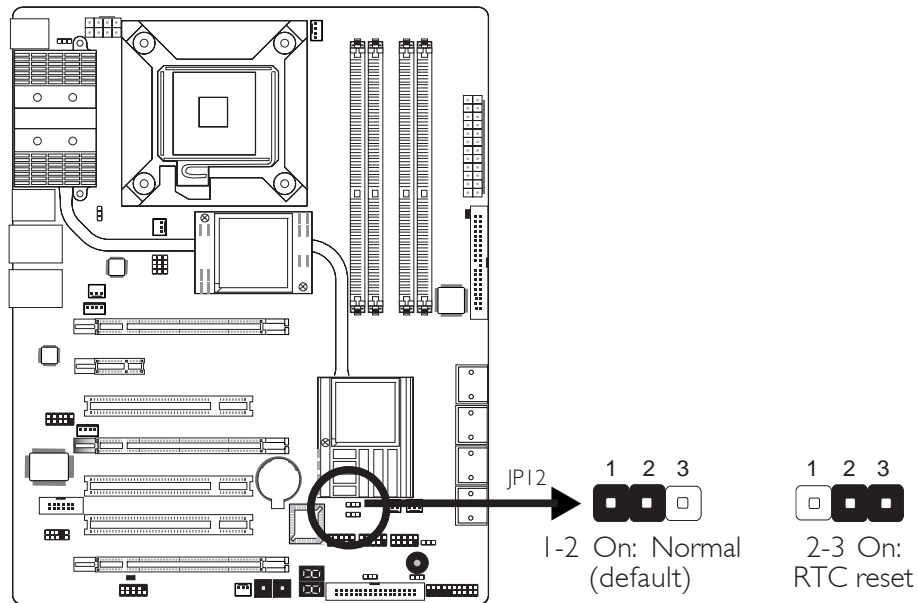


When the RTC battery is removed, JPI2 resets the manageability register bits in the RTC.

**Note:**

1. The *SRTCST#* input must always be high when all other RTC power planes are on.
2. In the case where the RTC battery is dead or missing on the platform, the *SRTCST#* pin must rise before the *RSMRST#* pin.



CPU FSB Select

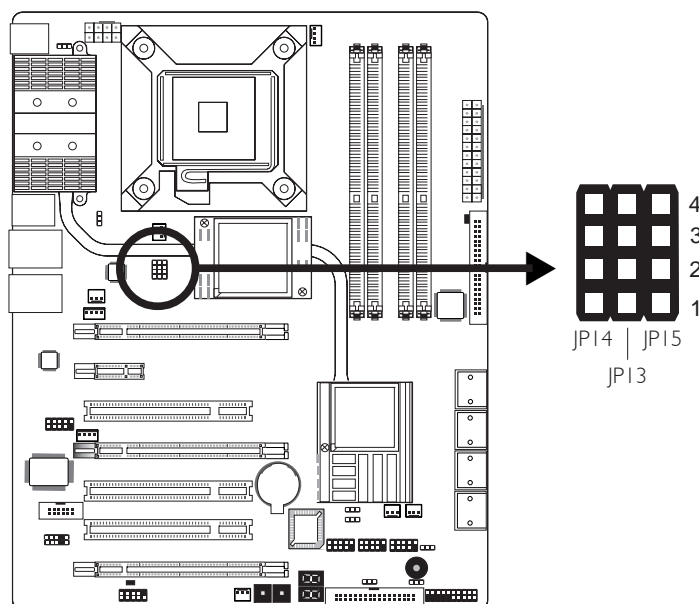

By default, JP13 to JP15 are set to pins 1 and 2 On. This setting will allow the system to automatically run according to the CPU's FSB. If you want to change the setting, please refer to the table below.

| | By CPU | FSB 800 | FSB 1066 | FSB 1333 |
|------|--------|---------|----------|----------|
| JP14 | 1-2 On | 3-4 On | 2-3 On | 2-3 On |
| JP13 | 1-2 On | 2-3 On | 2-3 On | 2-3 On |
| JP15 | 1-2 On | 2-3 On | 2-3 On | 3-4 On |


Rear Panel I/O Ports

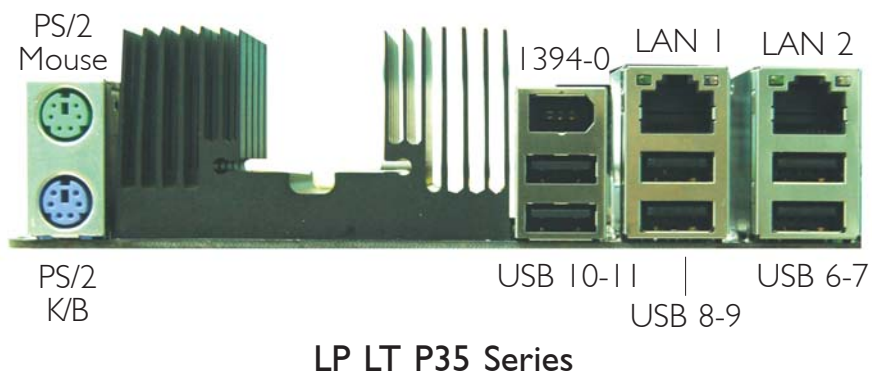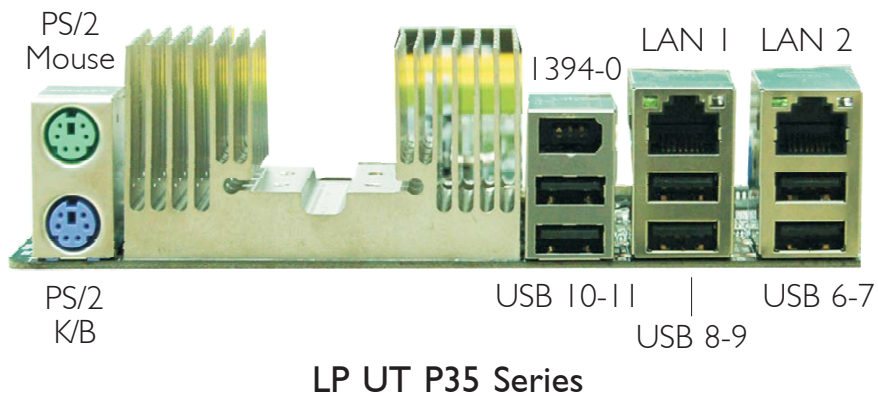

The rear panel I/O ports consist of the following:

- PS/2 mouse port
- PS/2 keyboard port
- 1394-0 port
- 6 USB ports
- 2 LAN ports

PS/2 Mouse and PS/2 Keyboard Ports

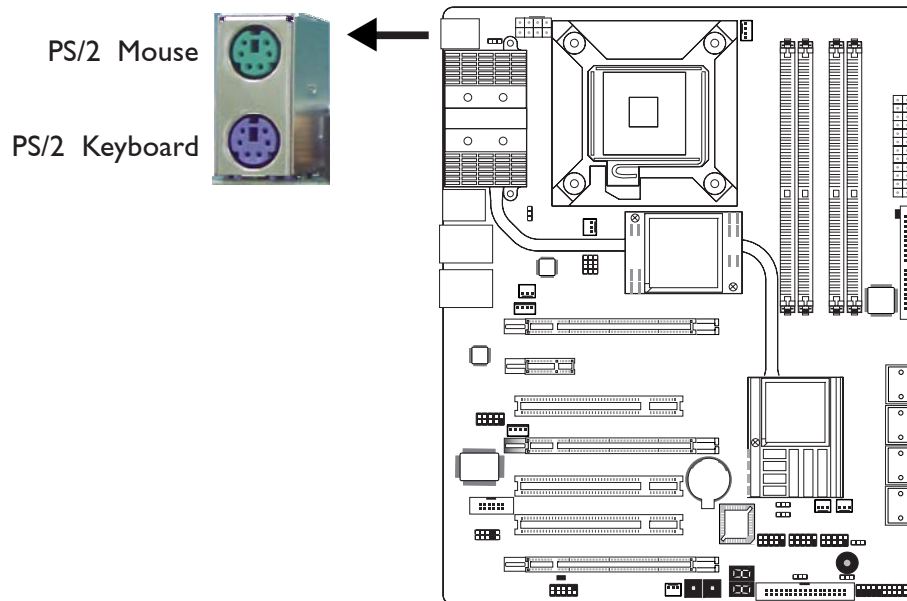

The onboard PS/2 mouse (Green) and PS/2 keyboard (Purple) ports are both at location CN2 of the system board. The PS/2 mouse port uses IRQ12. If a mouse is not connected to this port, the system will reserve IRQ12 for other expansion cards.



Warning:


Make sure to turn off your computer prior to connecting or disconnecting a mouse or keyboard. Failure to do so may damage the system board.

Wake-On-PS/2 Keyboard/Mouse

The Wake-On-PS/2 Keyboard/Mouse function allows you to use the PS/2 keyboard or PS/2 mouse to power-on the system. To use this function:

- **Jumper Setting:**
JP7 must be set to “2-3 On: 5VSB”. Refer to “PS/2 Power Select” in this chapter for more information.
- **BIOS Setting:**
Configure the PS/2 wake up function in the Integrated Peripherals submenu (“Super IO Device” section) of the BIOS. Refer to chapter 3 for more information.


IEEE 1394 Ports

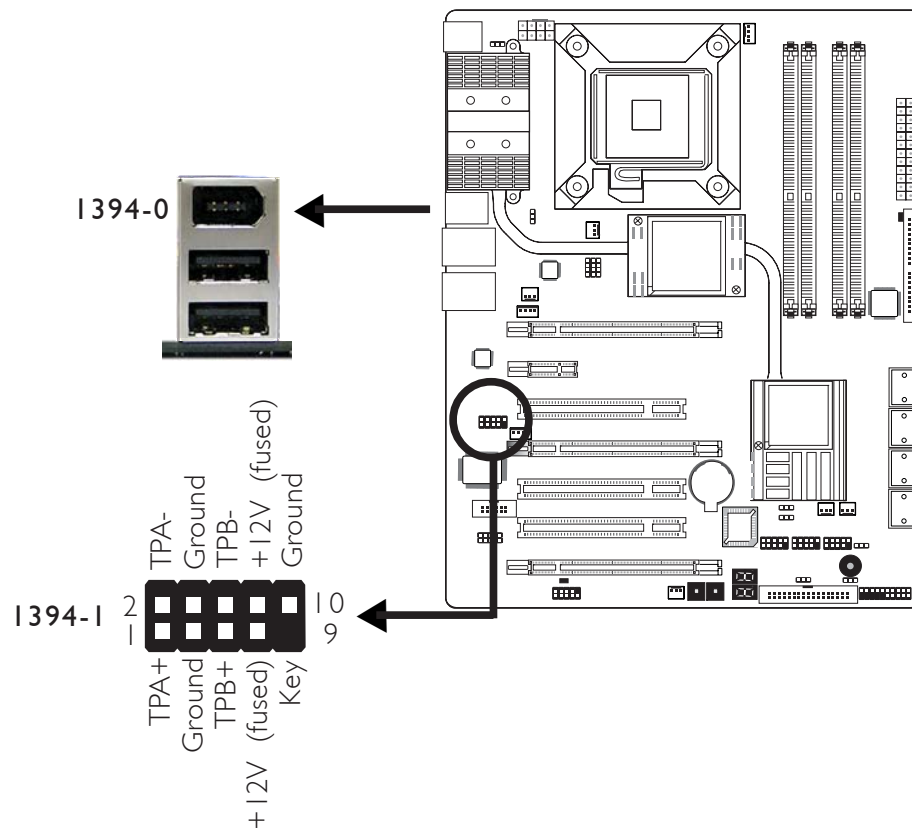

The onboard IEEE 1394 port is at location CN3 (IEEE 1394-0) of the system board.

It is also equipped with an IEEE 1394 connector at location J8 (1394-1) for connecting an additional 1394 device. The 1394 port may come mounted on a card-edge bracket. Install the card-edge bracket to an available slot at the rear of the system chassis then insert the connector that is attached to the 1394 port cable to J8. Make sure pin 1 of the cable connector is aligned with pin 1 of the J8.

USB (Universal Serial Bus) Ports

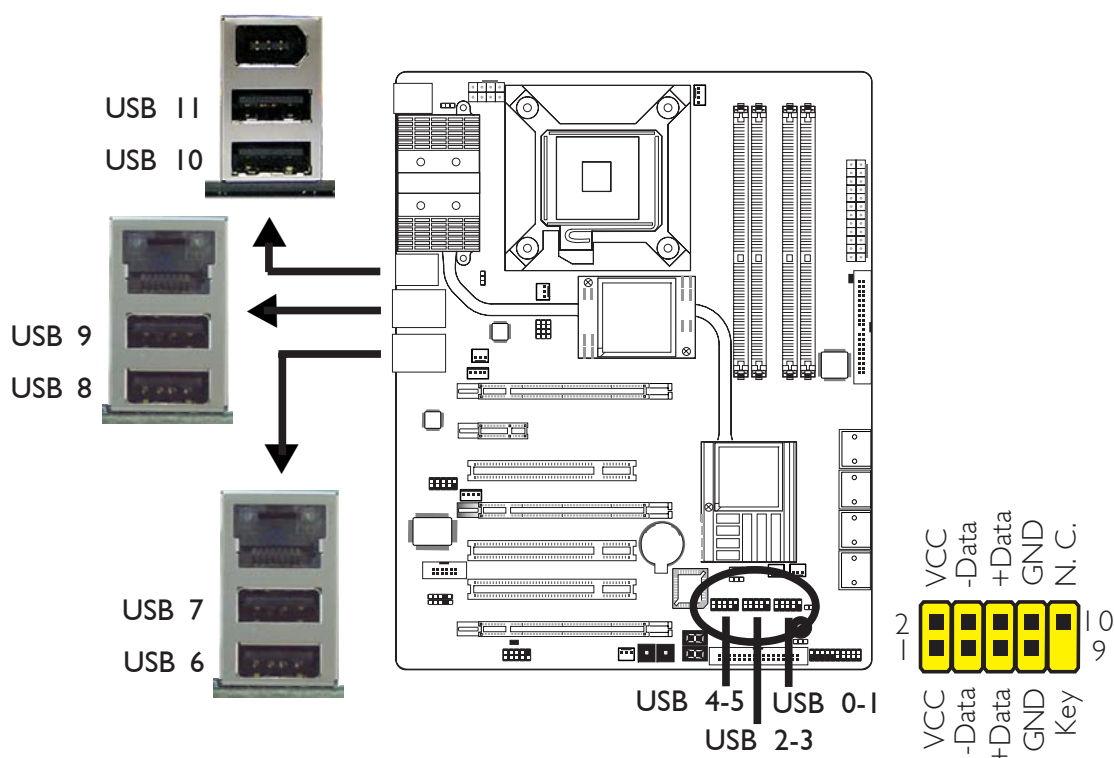

The system board supports 12 USB 2.0/1.1 ports. USB allows data exchange between your computer and a wide range of simultaneously accessible external Plug and Play peripherals.

Six onboard USB 2.0/1.1 ports (Black) are at locations CN3 (USB 10-11), CN4 (USB 8-9) and CN6 (USB 6-7) of the system board.

The J22 (USB 4-5), J18 (USB 2-3) and J33 (USB 0-1) connectors allow you to connect 6 additional USB 2.0/1.1 ports. The USB ports may come mounted on a card-edge bracket. Install the card-edge bracket to an available slot at the rear of the system chassis then insert the connector that is attached to the USB port cables to J22, J18 or J33.

BIOS Setting

Configure the onboard USB in the Integrated Peripherals submenu ("USB Device Setting" section) of the BIOS. Refer to chapter 3 for more information.

Driver Installation

You may need to install the proper drivers in your operating system to use the USB device. Refer to your operating system's manual or documentation for more information.

Refer to chapter 4 for more information about installing the USB 2.0 driver.

Wake-On-USB Keyboard/Mouse

The Wake-On-USB Keyboard/Mouse function allows you to use a USB device to wake up a system from the S3 (STR - Suspend To RAM) state. To use this function:


- **Jumper Setting:**
JP5 and/or JP6 must be set to "2-3 On: 5VSB". Refer to "USB Power Select" in this chapter for more information.
- **BIOS Setting:**
"USB KB WakeUp From S3(S4)" in the Power Management Setup submenu of the BIOS must be set to Enabled. Refer to chapter 3 for more information.



Important:

If you are using the Wake-On-USB Keyboard/Mouse function for 2 USB ports, the 5VSB power source of your power supply must support $\geq 1.5A$. For 3 or more USB ports, the 5VSB power source of your power supply must support $\geq 2A$.

RJ45 LAN Ports

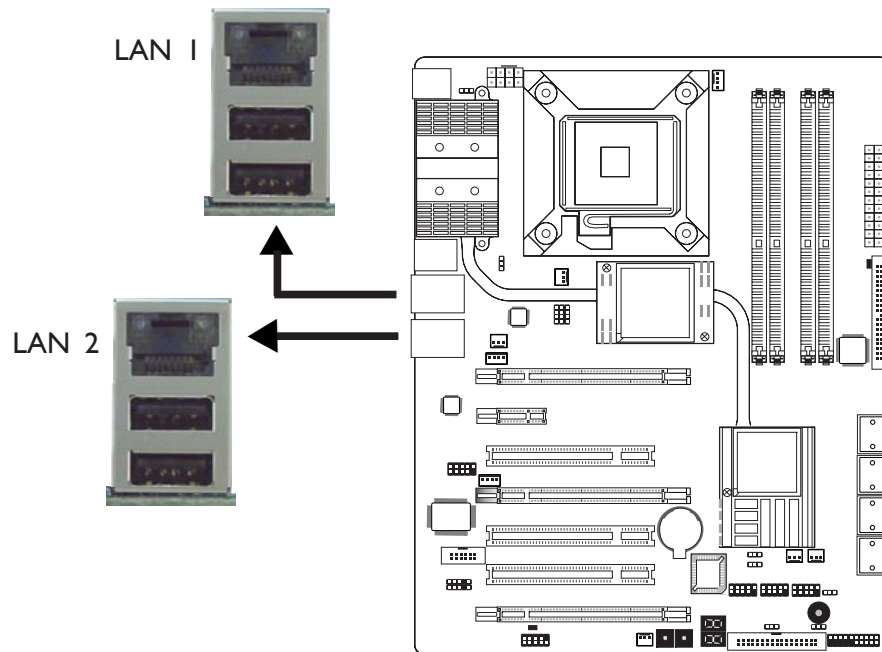


The onboard LAN ports are at locations CN4 (LAN 1) and CN6 (LAN 2) of the system board. LAN allows the system board to connect to a local area network by means of a network hub.

Driver Installation

Install the LAN driver. Refer to chapter 4 for more information.

Bernstein Audio Module

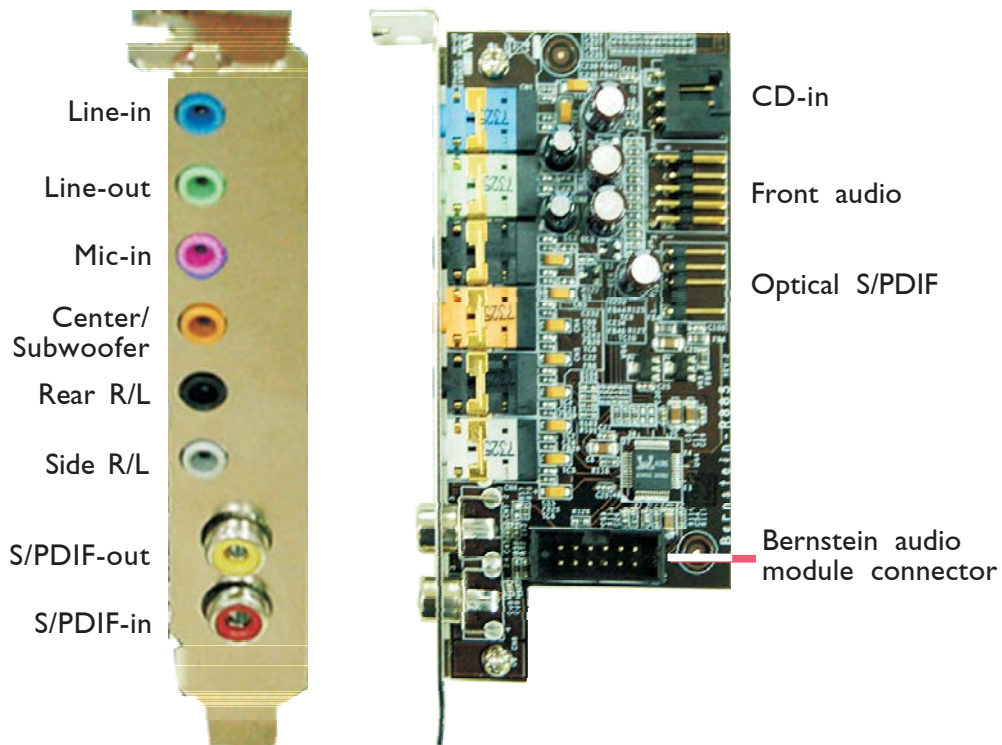

Line-in Jack (Light Blue)

This jack is used to connect any audio devices such as Hi-fi set, CD player, tape player, AM/FM radio tuner, synthesizer, etc.

Line-out Jack (Lime)

This jack is used to connect to the front right and front left speakers of the audio system.

Mic-in Jack (Pink)

This jack is used to connect an external microphone.

Center/Subwoofer Jack (Orange)

This jack is used to connect to the center and subwoofer speakers of the audio system.

Rear Right/Left Jack (Black)

This jack is used to connect to the rear right and rear left speakers of the audio system.

Side Right/Left Jack (Gray)

This jack is used to connect to the side left and side right speakers of the audio system.

Coaxial RCA S/PDIF-in and SPDIF-out Jacks

These jacks are used to connect external audio output devices using coaxial S/PDIF cables.

CD-in Connector

The CD-in connector at location J2 is used to receive audio from a CD-ROM drive, TV tuner or MPEG card.

Front Audio Connector

The front audio connector at location J4 allows you to connect to the line-out and mic-in jacks that are at the front panel of your system.


Optical S/PDIF Connector

The optical S/PDIF connector at location J3 is used to connect an external audio output device using an optical S/PDIF cable..



Important:

DO NOT use optical S/PDIF and coaxial RCA S/PDIF at the same time.


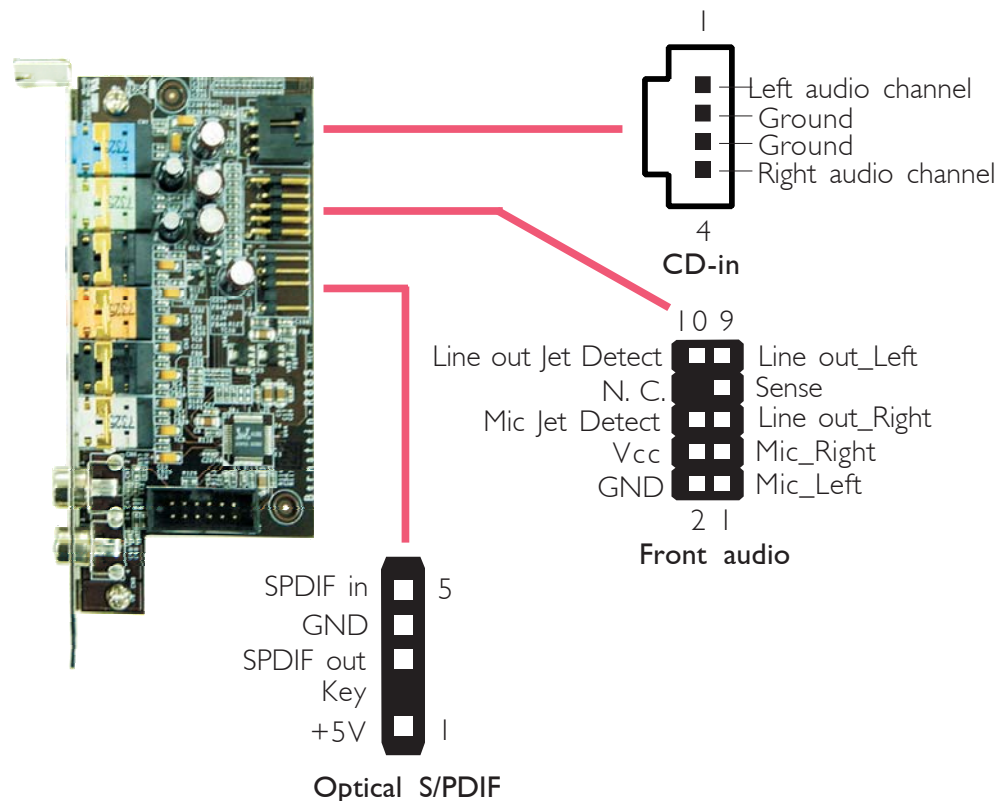


Installing the Bernstein Audio Module

1. The Bernstein audio module connects to the system board by means of the provided audio cable.




2. Insert one end of the cable to J7 on the system board and the other end to J5 on the audio module.

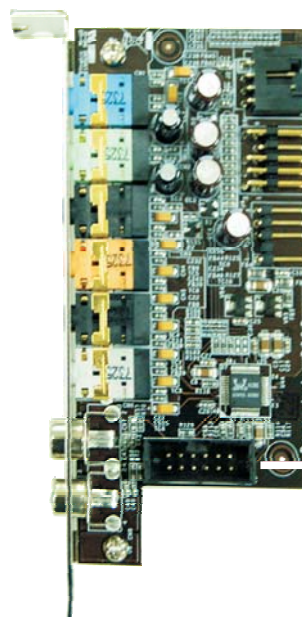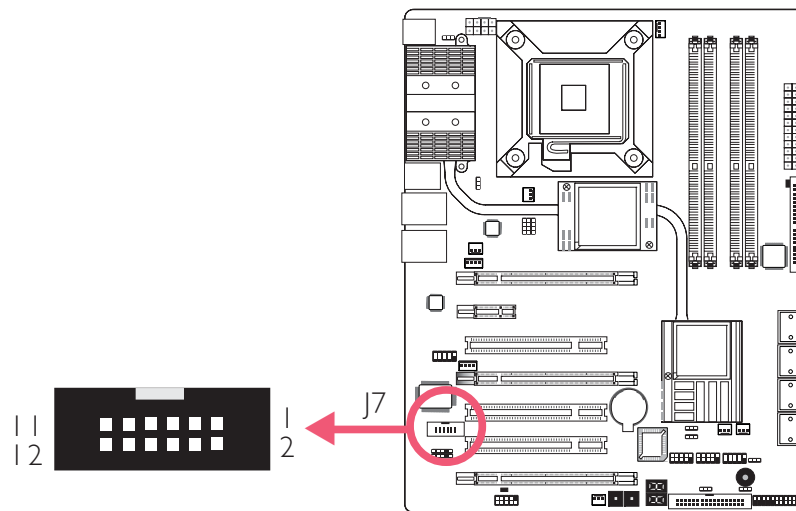


Bernstein audio
module connector
(J5)

3. The length of the audio cable provides the option and flexibility of installing the module on any available bracket slot at the rear of the system chassis. Remove the screw of the bracket where you want the audio module installed then remove the bracket.
4. Place the Bernstein audio module on the bracket slot then secure the module by replacing the bracket screw you removed in step 3.

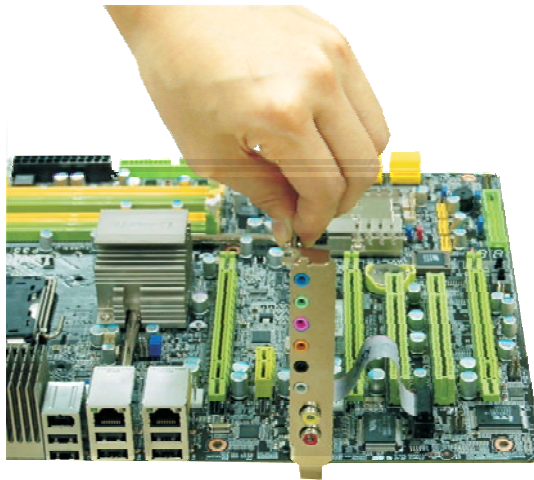

I/O Connectors

Floppy Disk Drive Connector

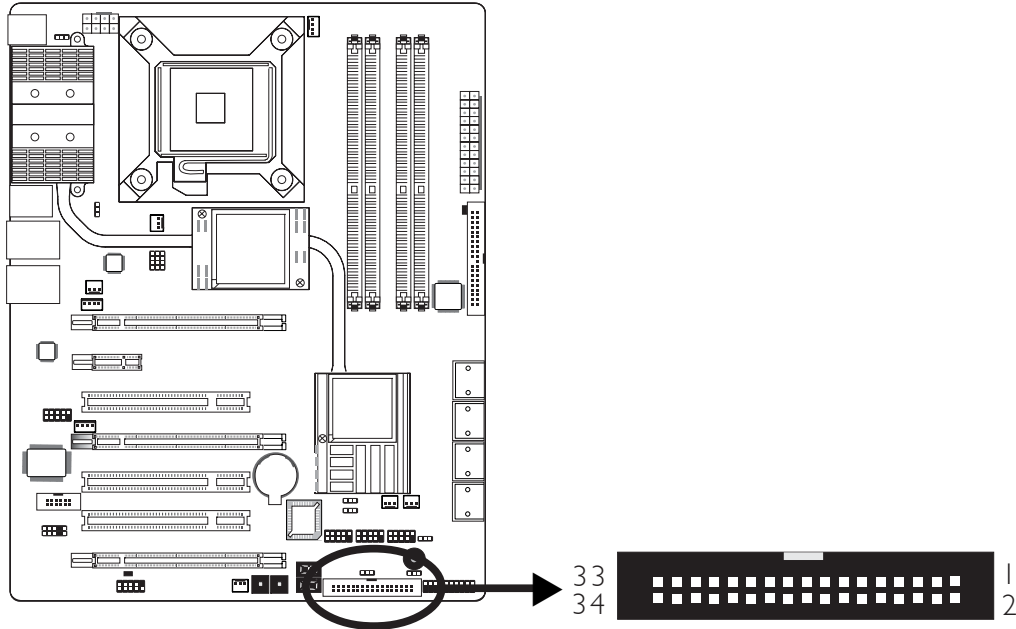

The system board is equipped with a floppy disk drive connector that supports a standard floppy disk drive. To prevent improper floppy cable installation, the floppy disk header has a keying mechanism. The 34-pin connector on the floppy cable can be placed into the header only if pin 1 of the connector is aligned with pin 1 of the header.


Connecting the Floppy Disk Drive Cable

Install one end of the floppy disk drive cable into the shrouded floppy disk header (J23) on the system board and the other end-most connector to the floppy drive. The colored edge of the daisy chained ribbon cable should be aligned with pin 1 of J23.

BIOS Setting

Enable or disable this function in the Integrated Peripherals submenu ("Super IO Device" section) of the BIOS. Refer to chapter 3 for more information.

Serial ATA Connectors

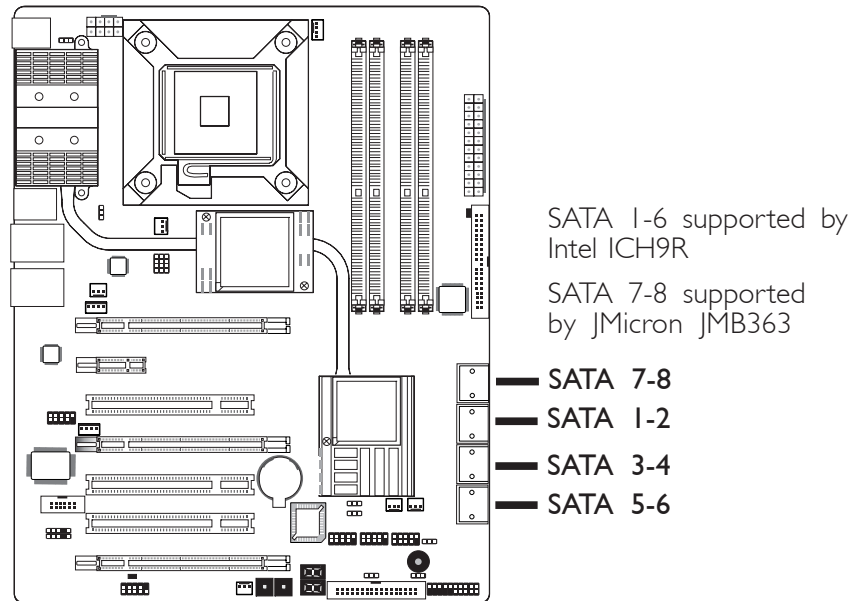

- Intel ICH9R chip
 - SATA speed up to 3Gb/s
 - RAID 0, RAID 1, RAID 0+1 and RAID 5
- JMicron JMB363
 - SATA speed up to 3Gb/s
 - RAID 0 and RAID 1

Connecting Serial ATA Cables

Connect one end of the Serial ATA cable to the Serial ATA connector and the other end to your Serial ATA device.


BIOS Setting

Configure Serial ATA in the Integrated Peripherals submenu ("OnChip IDE Device" section) of the BIOS. Refer to chapter 3 for more information.

Configuring RAID

The system board allows configuring RAID on Serial ATA drives. Refer to chapter 5 for steps in configuring RAID.

IDE Disk Drive Connector

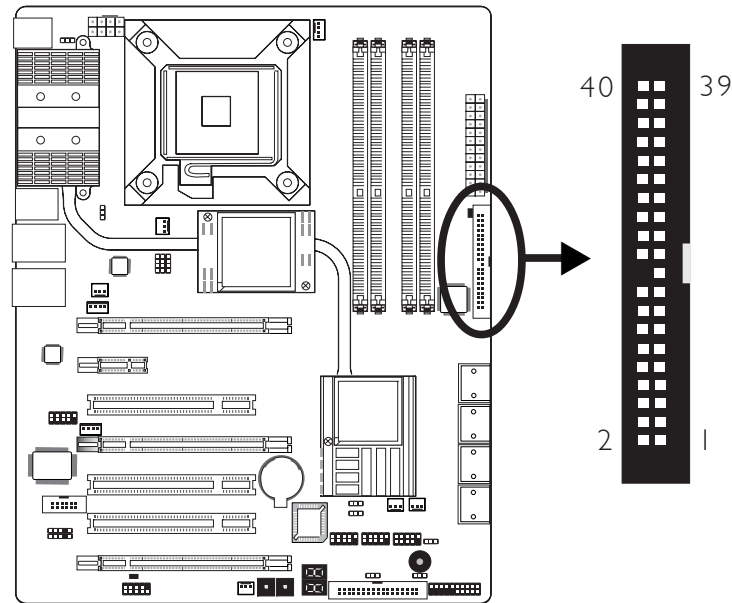

The system board is equipped with a shrouded PCI IDE header that will interface two Enhanced IDE (Integrated Drive Electronics) disk drives. To prevent improper IDE cable installation, the shrouded PCI IDE header has a keying mechanism. The 40-pin connector on the IDE cable can be placed into the header only if pin 1 of the connector is aligned with pin 1 of the header.

The IDE connector supports 2 devices, a Master and a Slave. Use an IDE ribbon cable to connect the drives to the system board. An IDE ribbon cable have 3 connectors on them, one that plugs into an IDE connector on the system board and the other 2 connects to IDE devices. The connector at the end of the cable is for the Master drive and the connector in the middle of the cable is for the Slave drive.

Connecting the IDE Disk Drive Cable

Connect one end of the IDE cable into the IDE header (J25) on the system board and the other connectors to the IDE devices.



Note:

Refer to your disk drive user's manual for information about selecting proper drive switch settings.

Adding a Second IDE Disk Drive

When using two IDE drives, one must be set as the master and the other as the slave. Follow the instructions provided by the drive manufacturer for setting the jumpers and/or switches on the drives.

The system board supports Enhanced IDE or ATA-2, ATA/33, ATA/66 or ATA/100 hard drives. We recommend that you use hard drives from the same manufacturer. In a few cases, drives from two different manufacturers will not function properly when used together. The problem lies in the hard drives, not the system board.




Important:

If you encountered problems while using an ATAPI CD-ROM drive that is set in Master mode, please set the CD-ROM drive to Slave mode. Some ATAPI CD-ROMs may not be recognized and cannot be used if incorrectly set in Master mode.

BIOS Setting

Configure the onboard IDE in the Integrated Peripherals submenu ("OnChip IDE Device" section) of the BIOS. Refer to chapter 3 for more information.

Serial (COM) Port

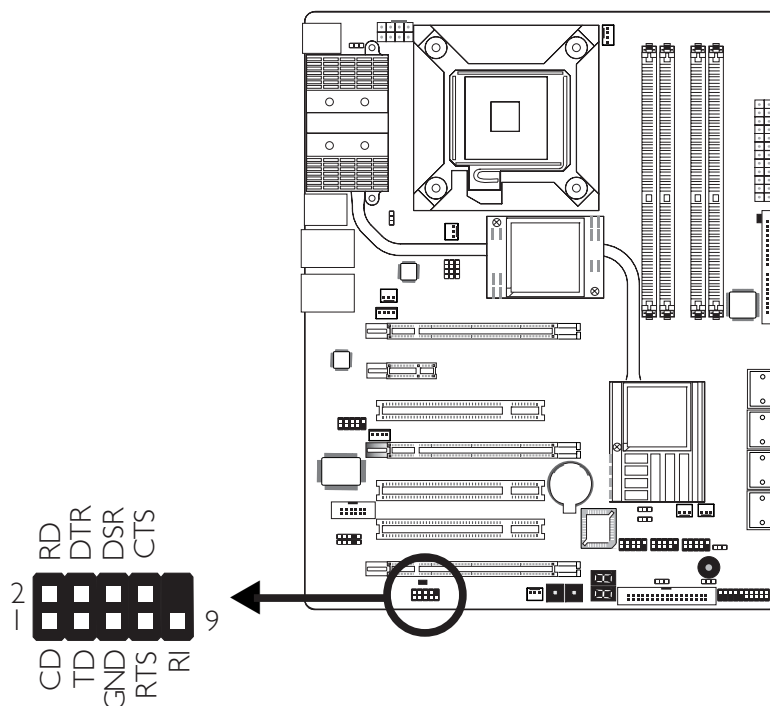


The 9-pin connector at location J4 is for connecting an external serial port. The serial port cable is an optional item and must be purchased separately. Insert the connector that is attached to the serial port cable to J4 then install the serial port bracket to an available bracket slot at the rear of the system chassis. Make sure the colored stripe on the ribbon cable is aligned with pin 1 of J4.

The serial port is an RS-232 asynchronous communication port with 16C550A-compatible UARTs that can be used with modems, serial printers, remote display terminals, and other serial devices.

BIOS Setting

Configure the serial port in the Integrated Peripherals submenu (“Super IO Device” section) of the BIOS. Refer to chapter 3 for more information.

IrDA and CIR Connectors

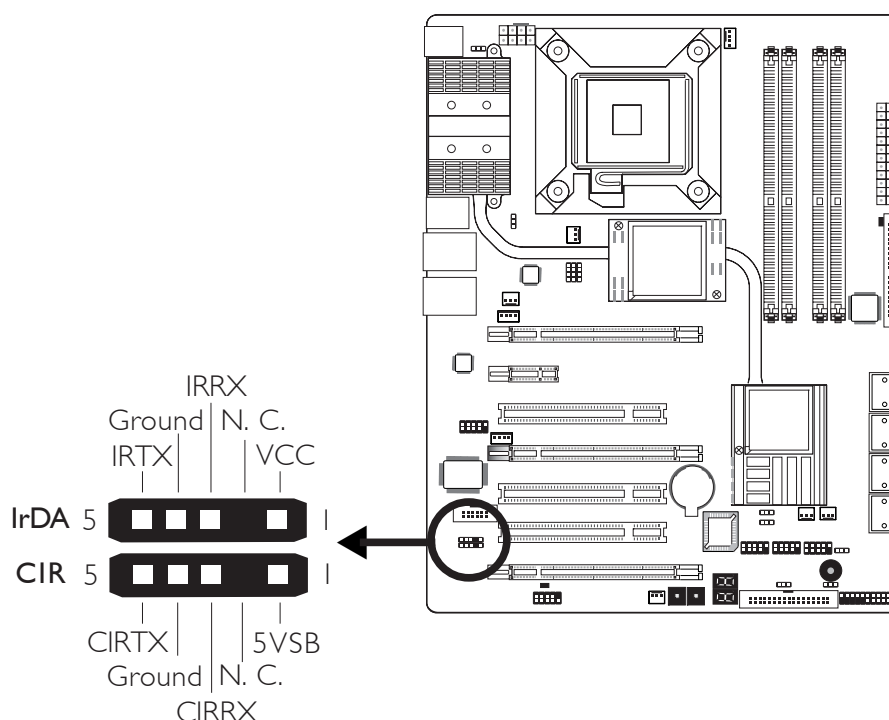

Connect the cable connector from your IrDA module to the IrDA connector (J5) or CIR connector (J14).



Note:

The sequence of the pin functions on some IrDA/CIR cable may be reversed from the pin function defined on the system board. Make sure to connect the cable connector to the IrDA/CIR connector according to their pin functions.


BIOS Setting

Configure IrDA/CIR in the Integrated Peripherals submenu ("Super IO Device" section) of the BIOS.

Driver Installation

You may need to install the proper drivers in your operating system to use the IrDA/CIR function. Refer to your operating system's manual or documentation for more information.

Cooling Fan Connectors

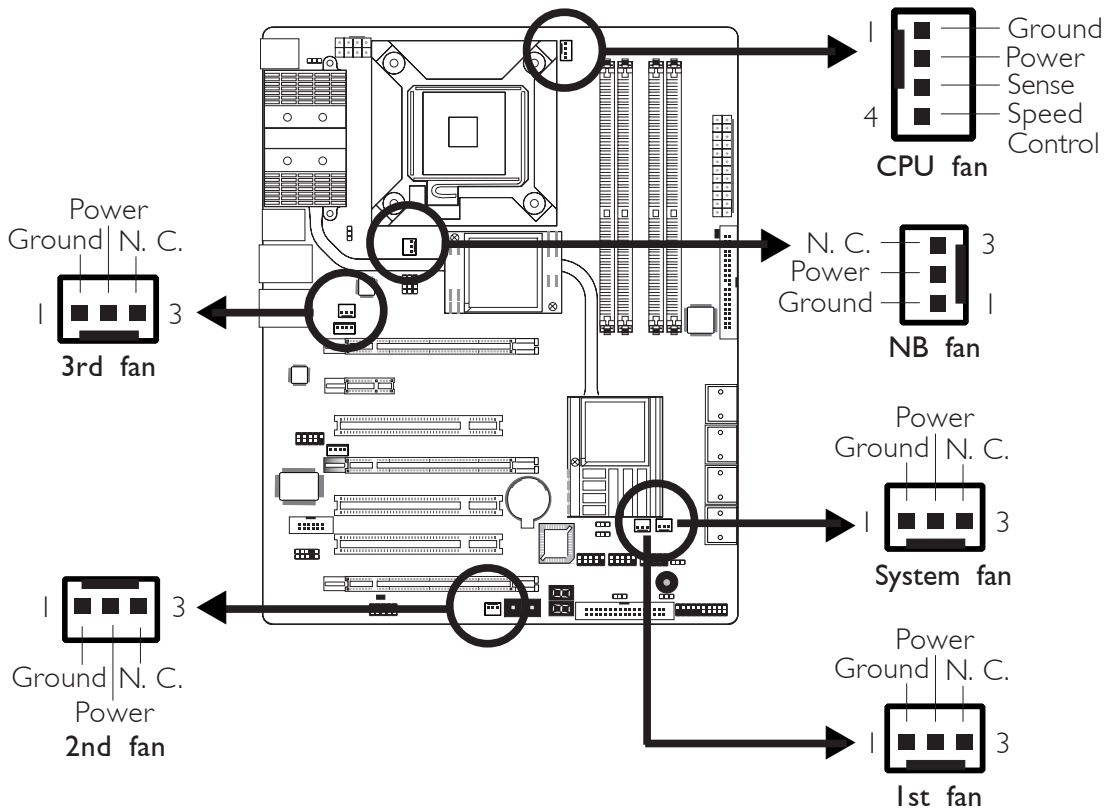


Connect the CPU fan's cable connector to the CPU fan connector (J31) on the system board. 1st fan (J9), 2nd fan (J6), 3rd fan (J17), NB fan (J30) and System fan (J32) are used to connect additional cooling fans. The cooling fans will provide adequate airflow throughout the chassis to prevent overheating the CPU and system board components.

BIOS Setting

The "PC Health Status" submenu of the BIOS will display the current speed of the cooling fans. Refer to chapter 3 for more information.

LEDs

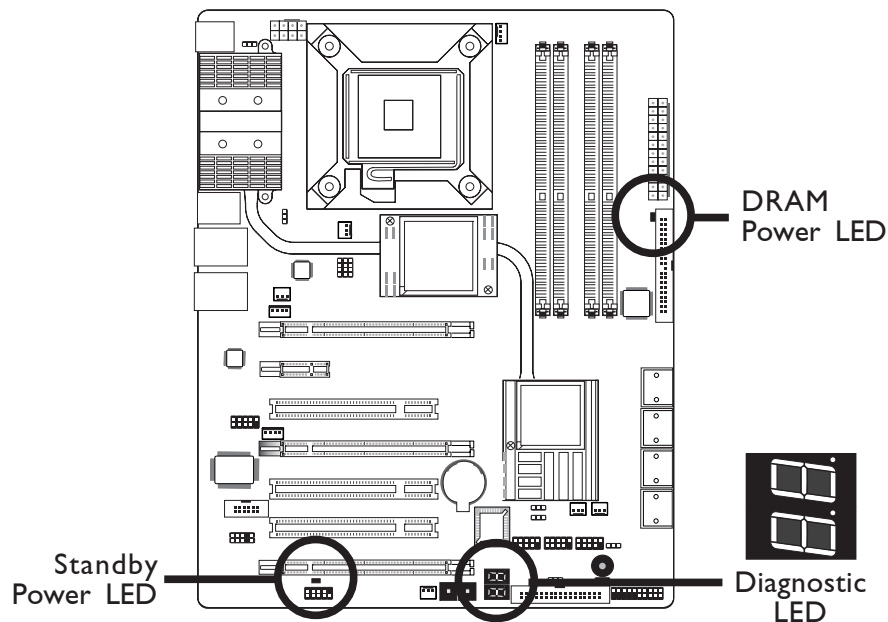

DRAM Power LED

This LED will light when the system's power is on.

Standby Power LED

This LED will light when the system is in the standby mode.

Diagnostic LED


The Diagnostic LED displays POST codes. POST (Power-On Self Tests) which is controlled by the BIOS is performed whenever you power-on the system. POST will detect the status of the system and its components. Each code displayed on the LED corresponds to a certain system status.

**Warning:**


When the DRAM Power LED and/or Standby Power LED lit red, it indicates that power is present on the DIMM sockets and/or PCI slots. Power-off the PC then unplug the power cord prior to installing any memory modules or add-in cards. Failure to do so will cause severe damage to the motherboard and components.

Power Connectors

Use a power supply that complies with the ATX12V Power Supply Design Guide Version 1.1. An ATX12V power supply unit has a standard 24-pin ATX main power connector that must be inserted onto CN10.

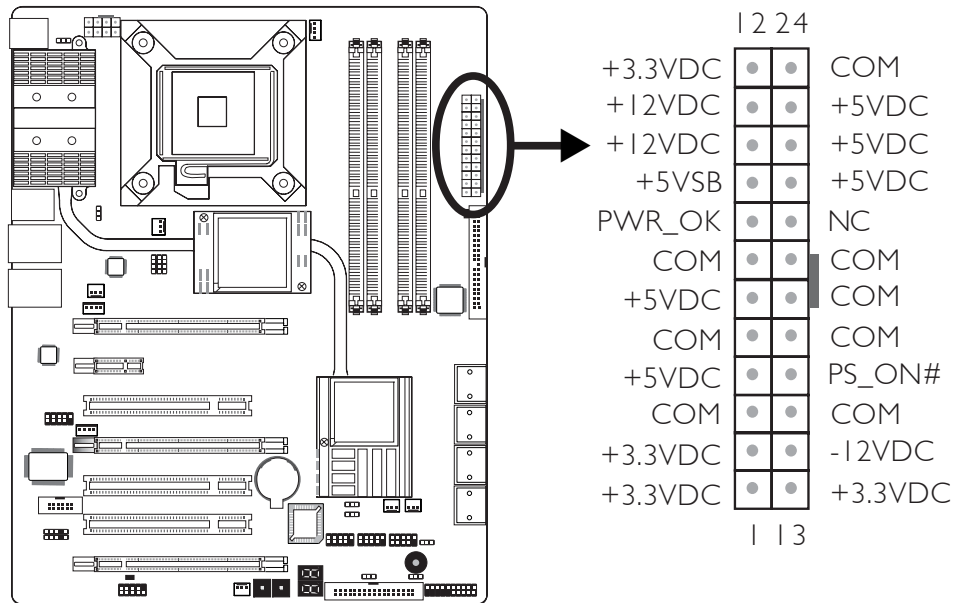


Your power supply unit may come with an 8-pin or 4-pin +12V power connector. The +12V power enables the delivery of more +12VDC current to the processor's Voltage Regulator Module (VRM). If available, it is preferable to use the 8-pin power; otherwise connect a 4-pin power connector to CN9.

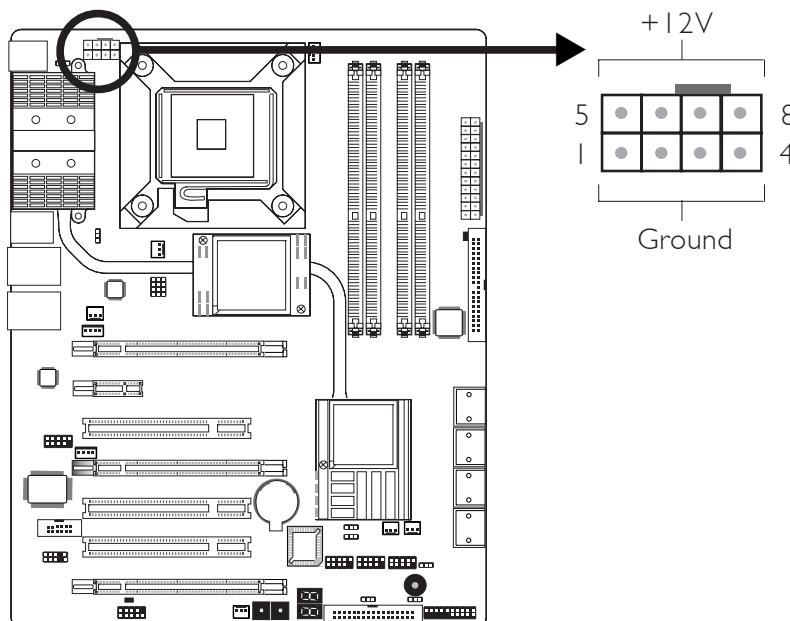

The power connectors from the power supply unit are designed to fit the 24-pin and 8-pin connectors in only one orientation. Make sure to find the proper orientation before plugging the connectors.

The FDD-type power connectors are additional power connectors. If you are using more than one graphics cards, we recommend that you plug a power cable from your power supply unit onto the 5V/12V power connectors at locations J1 and/or J15. This will provide more stability to the entire system. The system board will still work even if the additional power connector is not connected.

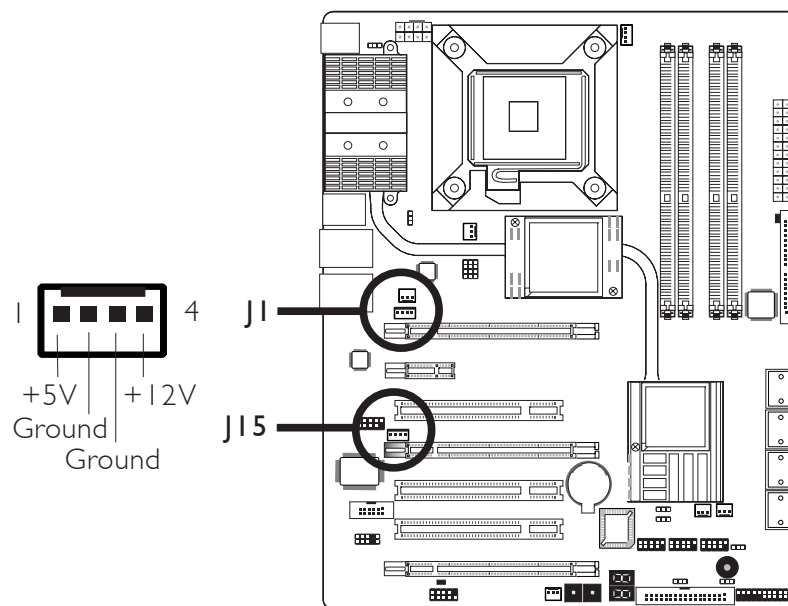

The system board requires a minimum of 300 Watt power supply to operate. Your system configuration (CPU power, amount of memory, add-in cards, peripherals, etc.) may exceed the minimum power requirement. To ensure that adequate power is provided, **we strongly recommend that you use a minimum of 400 Watt (or greater) power supply.**



Important:

Insufficient power supplied to the system may result in instability or the add-in boards and peripherals not functioning properly. Calculating the system's approximate power usage is important to ensure that the power supply meets the system's consumption requirements.

Restarting the PC

Normally, you can power-off the PC by:

1. Pressing the power button at the front panel of the chassis.
or
2. Pressing the power switch that is on the system board (note: not all system boards come with this switch).


If for some reasons you need to totally cut off the power supplied to the PC, switch off the power supply or unplug the power cord. Take note though that if you intend to restart it at once, please strictly follow the steps below.

1. The time where power is totally discharged varies among power supplies. It's discharge time is highly dependent on the system's configuration such as the wattage of the power supply, the sequence of the supplied power as well as the number of peripheral devices connected to the system. Due to this reason, we strongly recommend that you wait for the Standby Power LED (refer to the "LEDs" section in this chapter for the location of the Standby Power LED) to lit off.
2. After the Standby Power LED has lit off, wait for 6 seconds before powering on the PC.

If the system board is already enclosed in a chassis which apparently will not make the Standby Power LED visible, wait for 15 seconds before you restore power connections. 15 seconds is approximately the time that will take the LED to lit off and the time needed before restoring power.

The above will ensure protection and prevent damage to the motherboard and components.

Front Panel Connectors

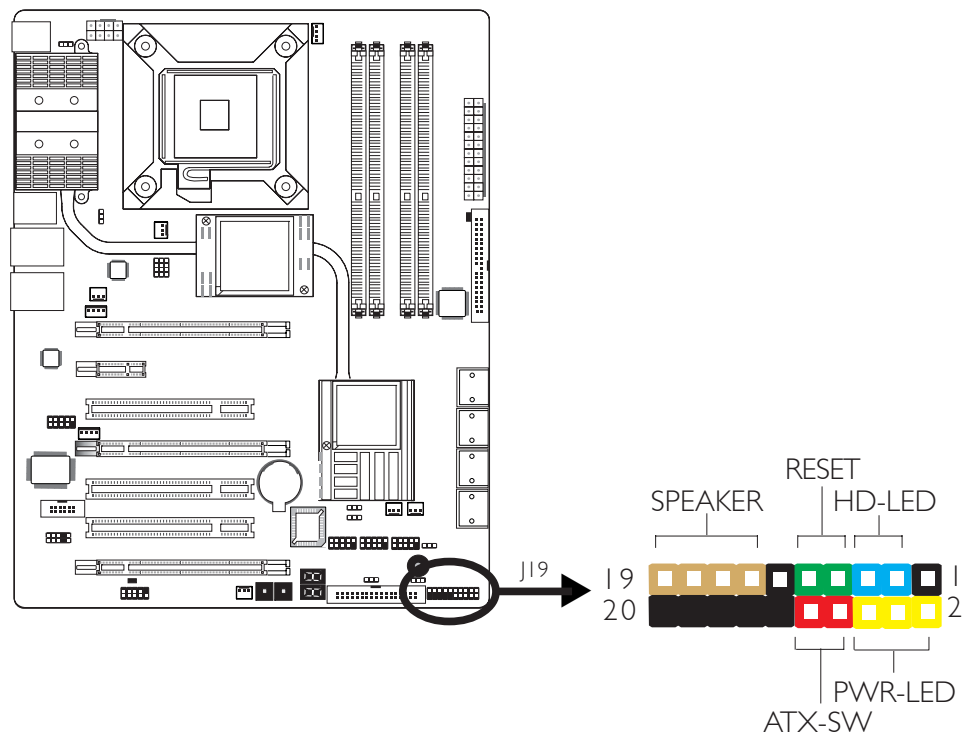

HD-LED: Primary/Secondary IDE LED

This LED will light when the hard drive is being accessed.

RESET: Reset Switch

This switch allows you to reboot without having to power off the system thus prolonging the life of the power supply or system.

SPEAKER: Speaker Connector

This connects to the speaker installed in the system chassis.

ATX-SW: ATX Power Switch

Depending on the setting in the BIOS setup, this switch is a “dual function power button” that will allow your system to enter the Soft-Off or Suspend mode. Refer to “Soft-Off By PWR-BTTN” in the Power Management Setup (Chapter 3).

PWR-LED: Power/Standby LED


When the system's power is on, this LED will light. When the system is in the S1 (POS - Power On Suspend) or S3 (STR - Suspend To RAM) state, it will blink every second.

**Note:**

If a system did not boot-up and the Power/Standby LED did not light after it was powered-on, it may indicate that the CPU or memory module was not installed properly. Please make sure they are properly inserted into their corresponding socket.


| | Pin | Pin Assignment |
|--|----------------------|---|
| HD-LED (Primary/Secondary IDE LED) | 3 5 | HDD LED Power HDD |
| Reserved | 14 16 | N. C. N. C. |
| ATX-SW (ATX power switch) | 8 10 | PWRBT+ PWRBT- |
| Reserved | 18 20 | N. C. N. C. |
| RESET (Reset switch) | 7 9 | Ground H/W Reset |
| SPEAKER (Speaker connector) | 13 15 17 19 | Speaker Data N. C. Ground Speaker Power |
| PWR-LED (Power/Standby LED) | 2 4 6 | LED Power (+) LED Power (+) LED Power (-) or Standby Signal |

EZ Touch Switches

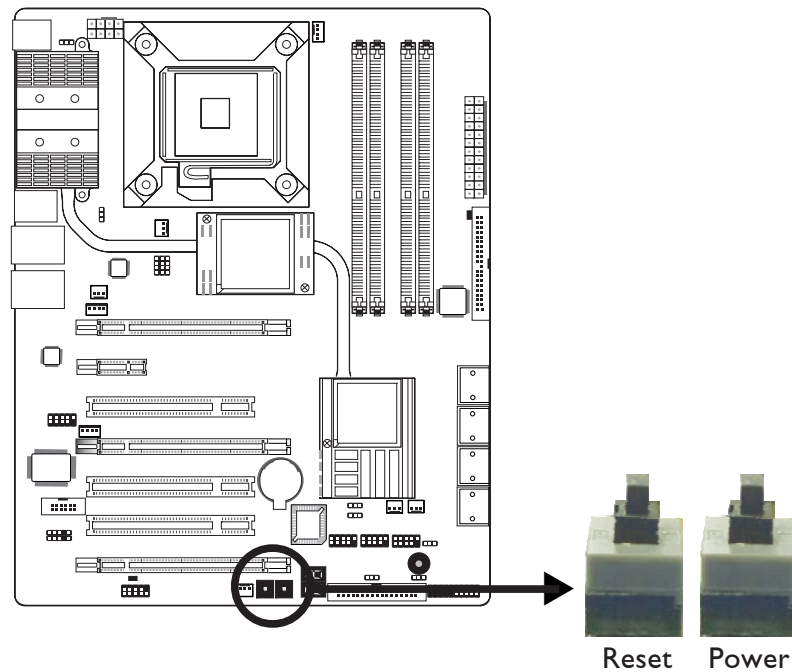

The presence of the power switch and reset switch on the system board are user-friendly especially to DIY users. They provide convenience in powering on and/or resetting the system while fine tuning the system board before it is installed into the system chassis.

PCI Express Slots

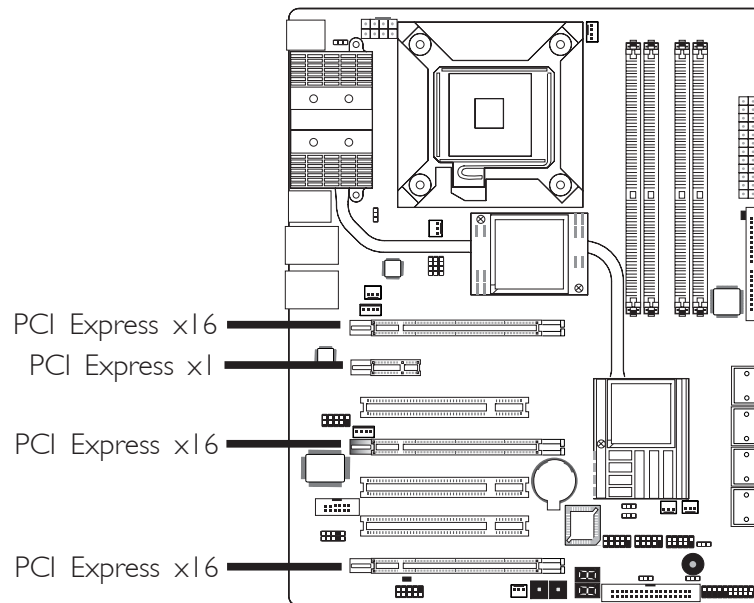


PCI Express x16

Install PCI Express x16 graphics card, that comply to the PCI Express specifications, into the PCI Express x16 slot. To install a graphics card into the x16 slot, align the graphics card above the slot then press it down firmly until it is completely seated in the slot. The retaining clip of the slot will automatically hold the graphics card in place.

PCI Express x1

Install PCI Express x1 cards such as network cards or other cards that comply to the PCI Express specifications into the PCI Express x1 slot.

Battery

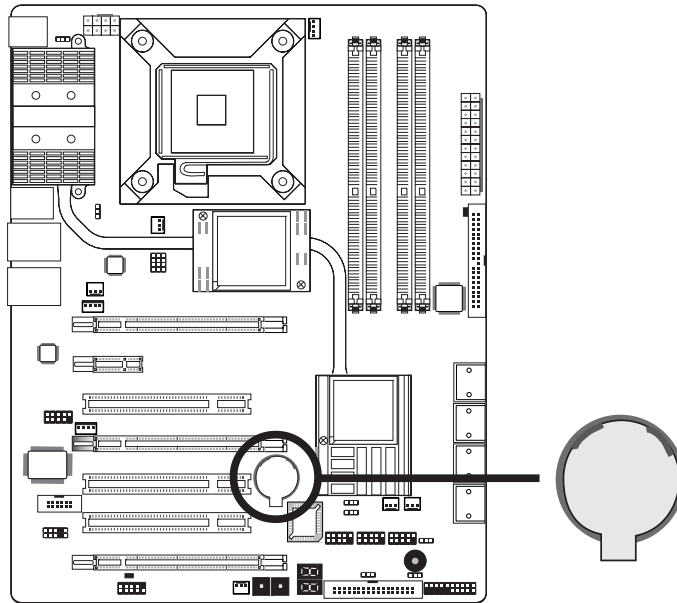

The lithium ion battery powers the real-time clock and CMOS memory. It is an auxiliary source of power when the main power is shut off.

Safety Measures

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommend by the manufacturer.
- Dispose of used batteries according to the battery manufacturer's instructions.

Chapter 3 - BIOS Setup

Award BIOS Setup Utility


The Basic Input/Output System (BIOS) is a program that takes care of the basic level of communication between the processor and peripherals. In addition, the BIOS also contains codes for various advanced features found in this system board. This chapter explains the Setup Utility for the Award BIOS.

After you power up the system, the BIOS message appears on the screen and the memory count begins. After the memory test, the following message will appear on the screen:

Press DEL to enter setup

If the message disappears before you respond, restart the system or press the "Reset" button. You may also restart the system by pressing the <Ctrl> <Alt> and keys simultaneously.

When you press , the main menu screen will appear:

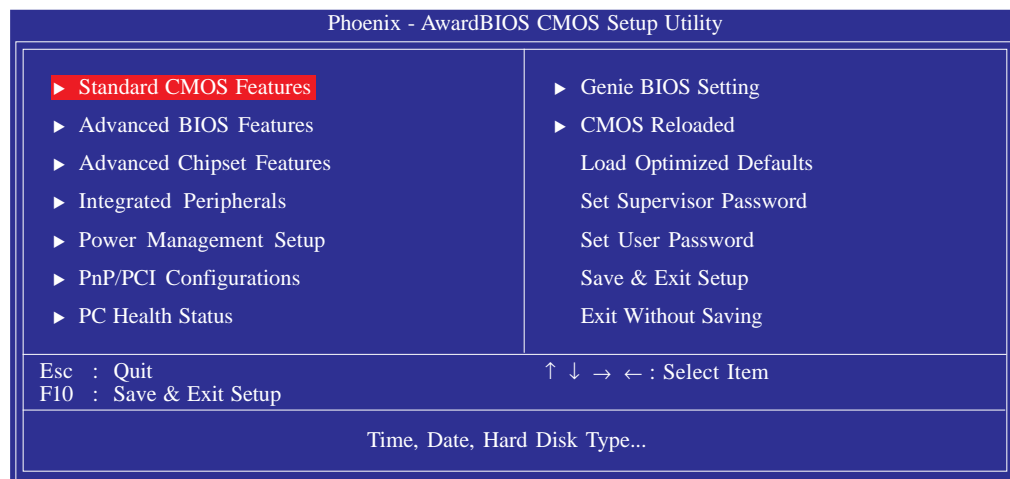

Standard CMOS Features

Use the arrow keys to highlight “Standard CMOS Features” then press <Enter>. A screen similar to the one below will appear.

| Phoenix - AwardBIOS CMOS Setup Utility | | |
|--|-------------------------|--|
| Standard CMOS Features | | |
| Date <mm:dd:yy> | Thu, Jun 28 2007 | Item Help Menu Level ▶ Change the day, month, year and century |
| Time <hh:mm:ss> | 20 : 20 : 30 | |
| ▶ IDE Channel 0 Master | CD-RW 48X24 | |
| ▶ IDE Channel 0 Slave | Maxtor 6B300S0 | |
| ▶ IDE Channel 1 Master | None | |
| ▶ IDE Channel 1 Slave | None | |
| ▶ IDE Channel 2 Master | None | |
| ▶ IDE Channel 3 Master | None | |
| Drive A | 1.44M, 3.5in. | |
| Video | EGA/VGA | |
| Halt On | All Errors | |
| Base Memory | 640K | |
| Extended Memory | 1046328K | |
| Total Memory | 1047552K | |

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
 F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

The settings on the screen are for reference only. Your version may not be identical to this one.

Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Sunday to Saturday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1994 to 2079.

Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

IDE Channel 0 Master to IDE Channel 3 Master

To configure the IDE drives, move the cursor to a field then press <Enter>. The following screen will appear:

| Phoenix - AwardBIOS CMOS Setup Utility | | |
|--|-------------|--|
| IDE Channel 0 Master | | |
| IDE HDD Auto-Detection | Press Enter | Item Help |
| IDE Channel 0 Master | Auto | Menu Level ▶▶ |
| Access Mode | Auto | To auto-detect the HDD's size, head... on this channel |
| Capacity | 0MB | |
| Cylinder | 0 | |
| Head | 0 | |
| Precomp | 0 | |
| Landing Zone | 0 | |
| Sector | 0 | |

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
 F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

The settings on the screen are for reference only. Your version may not be identical to this one.

IDE HDD Auto-Detection

Detects the parameters of the drive. The parameters will automatically be shown on the screen.

IDE Channel 0 Master to IDE Channel 3 Master

The drive type information should be included in the documentation from your hard disk vendor. If you select "Auto", the BIOS will auto-detect the HDD & CD-ROM drive at the POST stage and show the IDE for the HDD & CD-ROM drive. If a hard disk has not been installed, select "None".

Access Mode

For hard drives larger than 528MB, you would typically select the LBA type. Certain operating systems require that you select CHS or Large. Please check your operating system's manual or Help desk on which one to select.

Capacity

Displays the approximate capacity of the disk drive. Usually the size is slightly greater than the size of a formatted disk given by a disk checking program.

Cylinder

This field displays the number of cylinders.

Head

This field displays the number of read/write heads.

Precomp

This field displays the number of cylinders at which to change the write timing.

Landing Zone

This field displays the number of cylinders specified as the landing zone for the read/write heads.

Sector

This field displays the number sectors per track.

Drive A

This field identifies the type of floppy disk drive installed.

| | |
|-----------------------|--|
| <i>None</i> | No floppy drive is installed |
| <i>360K, 5.25 in.</i> | 5-1/4 in. standard drive; 360KB capacity |
| <i>1.2M, 5.25 in.</i> | 5-1/4 in. AT-type high-density drive; 1.2MB capacity |
| <i>720K, 3.5 in.</i> | 3-1/2 in. double-sided drive; 720KB capacity |
| <i>1.44M, 3.5 in.</i> | 3-1/2 in. double-sided drive; 1.44MB capacity |
| <i>2.88M, 3.5 in.</i> | 3-1/2 in. double-sided drive; 2.88MB capacity |

Video

This field selects the type of video adapter used for the primary system monitor. Although secondary monitors are supported, you do not have to select the type. The default setting is EGA/VGA.

| | |
|----------------|--|
| <i>EGA/VGA</i> | Enhanced Graphics Adapter/Video Graphics Array. For EGA, VGA, SVGA and PGA monitor adapters. |
| <i>CGA 40</i> | Color Graphics Adapter. Power up in 40-column mode. |
| <i>CGA 80</i> | Color Graphics Adapter. Power up in 80-column mode. |
| <i>Mono</i> | Monochrome adapter. |

Halt On

This field determines whether the system will stop if an error is detected during power up. The default setting is All Errors.

| | |
|--------------------------|--|
| <i>No Errors</i> | The system boot will not stop for any errors detected. |
| <i>All Errors</i> | The system boot will stop whenever the BIOS detects a non-fatal error. |
| <i>All, But Keyboard</i> | The system boot will not stop for a keyboard error; it will stop for all other errors. |
| <i>All, But Diskette</i> | The system boot will not stop for a disk error; it will stop for all other errors. |
| <i>All, But Disk/Key</i> | The system boot will not stop for a disk or keyboard error; it will stop for all other errors. |

Base Memory

Displays the amount of base (or conventional) memory installed in the system. The value of the base memory is typically 512K for systems with 512K memory installed on the motherboard or 640K for systems with 640K or more memory installed on the motherboard.

Extended Memory


Displays the amount of extended memory detected during boot-up.

Total Memory

Displays the total memory available in the system.

Advanced BIOS Features


The Advanced BIOS Features allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.

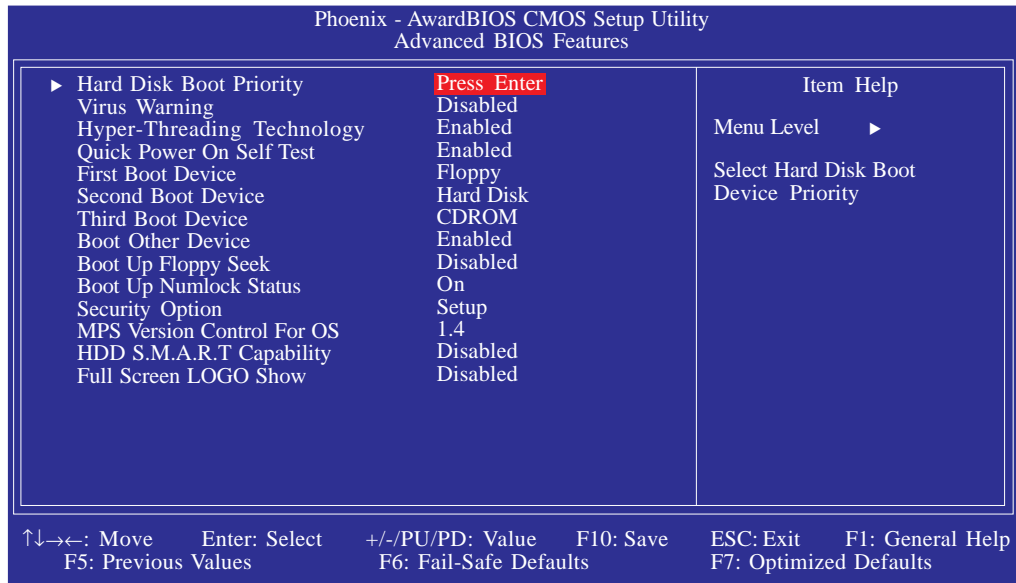

The settings on the screen are for reference only. Your version may not be identical to this one.

Hard Disk Boot Priority

This field is used to select the boot sequence of the hard drives. Move the cursor to this field then press <Enter>. Use the Up or Down arrow keys to select a device then press <+> to move it up or <-> to move it down the list.

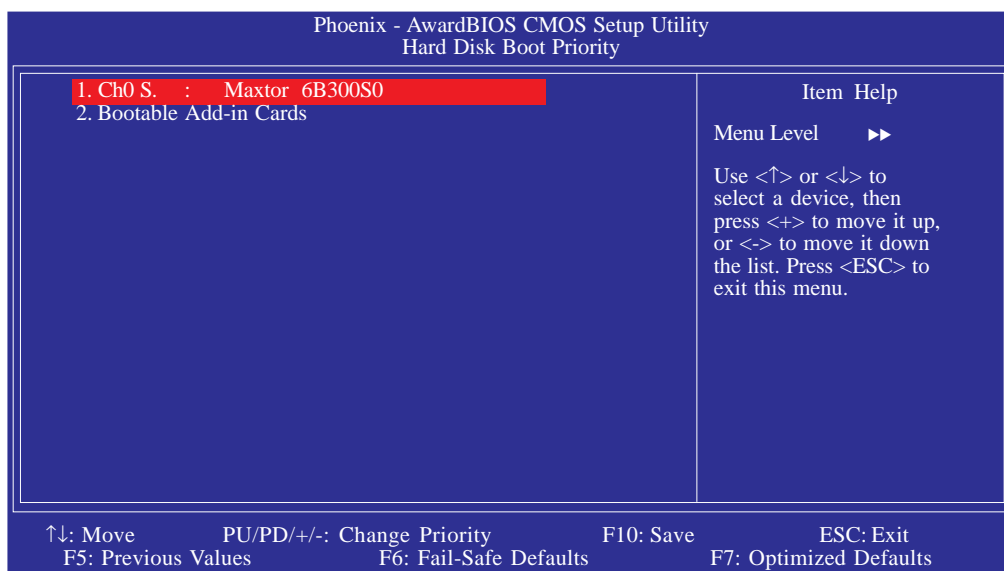

The settings on the screen are for reference only. Your version may not be identical to this one.

Virus Warning

This field protects the boot sector and partition table of your hard disk drive. When this field is enabled, the Award BIOS will monitor the boot sector and partition table of the hard disk drive. If an attempt is made to write to the boot sector or partition table of the hard disk drive, the BIOS will halt the system and an error message will appear.

After seeing the error message, if necessary, you will be able to run an anti-virus program to locate and remove the problem before any damage is done.

Many disk diagnostic programs which attempt to access the boot sector table will cause the warning message to appear. If you are running such a program, we recommend that you first disable this field. Also, disable this field if you are installing or running certain operating systems like Windows® 2000/XP or the operating system may not install nor work.

Hyper-Threading Technology (for Intel® processor with Hyper-Threading Technology only)

This field is used to enable the functionality of an Intel® processor that supports Hyper-Threading Technology and will appear only when using this processor.

Quick Power On Self Test

This field speeds up Power On Self Test (POST) whenever the system is powered on. The BIOS will shorten or skip some check items during POST. To attain the shortest POST time, select “Fast”.

First Boot Device, Second Boot Device, Third Boot Device and Boot Other Device

Select the drive to boot first, second and third in the “First Boot Device” “Second Boot Device” and “Third Boot Device” fields respectively. The BIOS will boot the operating system according to the sequence of the drive selected. Set “Boot Other Device” to Enabled if you wish to boot from another device.

Boot Up Floppy Seek

When enabled, the BIOS will check whether the floppy disk drive installed is 40 or 80 tracks. Note that the BIOS cannot distinguish between 720K, 1.2M, 1.44M and 2.88M drive types as they are all 80 tracks. When disabled, the BIOS will not search for the type of floppy disk drive by track number. Note that there will not be any warning message if the drive installed is 360KB.

Boot Up NumLock Status

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

Security Option

This field determines when the system will prompt for the password-everytime the system boots or only when you enter the BIOS setup. Set the password in the Set Supervisor/User Password submenu.

System The system will not boot and access to Setup will be denied unless the correct password is entered at the prompt.

Setup The system will boot, but access to Setup will be denied unless the correct password is entered at the prompt.

MPS Version Control for OS

This field is used to select the MPS version that the system board is using.

HDD S.M.A.R.T. Capability

The system board supports SMART (Self-Monitoring, Analysis and Reporting Technology) hard drives. SMART is a reliability prediction technology for ATA/IDE and SCSI drives. The drive will provide sufficient notice to the system or user to backup data prior to the drive's failure. The default is Disabled. If you are using hard drives that support S.M.A.R.T., set this field to Enabled. SMART is supported in ATA/33 or later hard drives.


Full Screen Logo Show

This field is applicable only if you want a particular logo to appear during system boot-up.

Enabled The logo will appear in full screen during system boot-up.

Disabled The logo will not appear during system boot-up.

Advanced Chipset Features

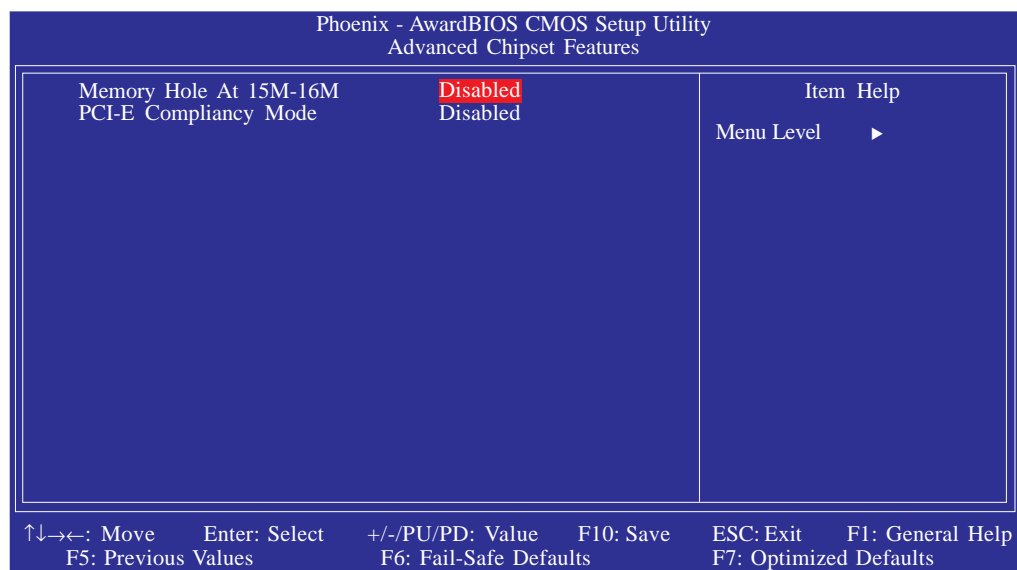

The settings on the screen are for reference only. Your version may not be identical to this one.

This section gives you functions to configure the system based on the specific features of the chipset. The chipset manages bus speeds and access to system memory resources. **These items should not be altered unless necessary.** The default settings have been chosen because they provide the best operating conditions for your system. The only time you might consider making any changes would be if you discovered some incompatibility or that data was being lost while using your system.


Memory Hole At 15M-16M

In order to improve system performance, certain space in memory can be reserved for ISA cards. This memory must be mapped into the memory space below 16MB. When enabled, the CPU assumes the 15-16MB memory range is allocated to the hidden ISA address range instead of the actual system DRAM. When disabled, the CPU assumes the 15-16MB address range actually contains DRAM memory. If more than 16MB of system memory is installed, this field must be disabled to provide contiguous system memory.

PCI-E Compliancy Mode


This field is used to select the mode for the PCI Express add-in card.

Integrated Peripherals

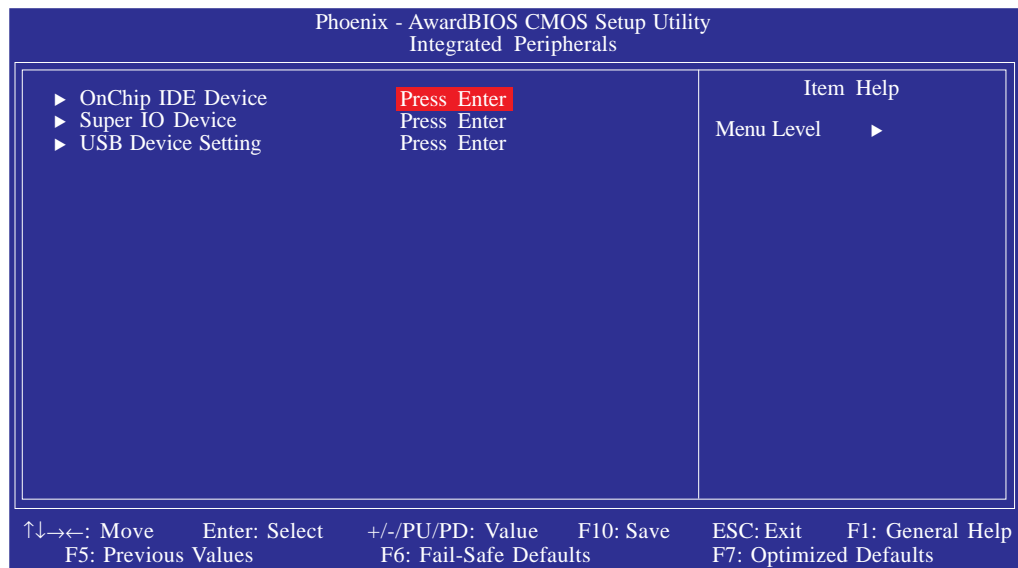

The settings on the screen are for reference only. Your version may not be identical to this one.

OnChip IDE Device

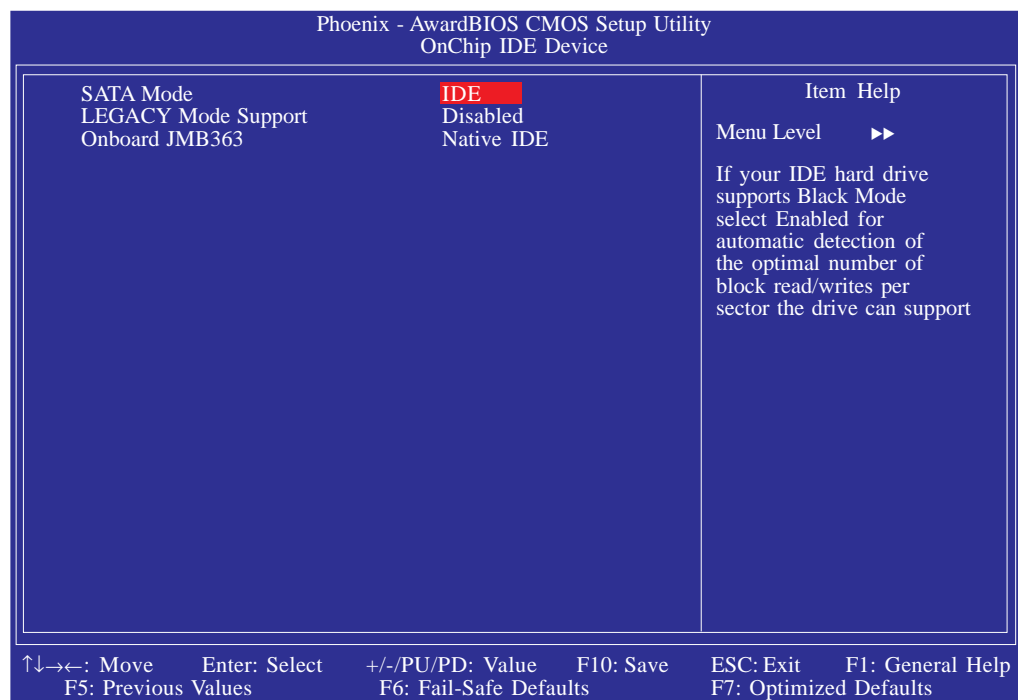

The settings on the screen are for reference only. Your version may not be identical to this one.

SATA Mode

This field is used to configure the SATA devices supported by the Intel ICH9R.

- IDE* This option configures the Serial ATA drives as Parallel ATA storage devices.
- RAID* This option allows you to create RAID or Intel Matrix Storage configuration on Serial ATA devices.
- AHCI* This option allows the Serial ATA devices to use AHCI (Advanced Host Controller Interface).


LEGACY Mode Support

The options are Enabled and Disabled.

Onboard JMB363

This field is used to configure the devices supported by the JMicron JMB363. The options are AHCI+IDE, RAID+IDE and Native IDE.

Super IO Device

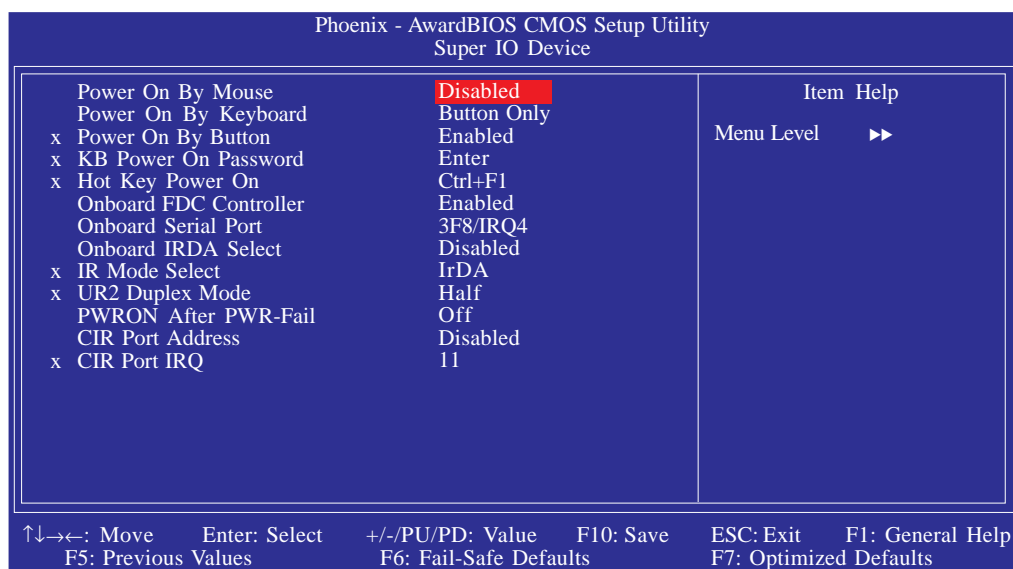

The settings on the screen are for reference only. Your version may not be identical to this one.

Power On By Mouse

| | |
|--------------------|---|
| <i>Disabled</i> | Disables the mouse power-on function. |
| <i>Mouse Move</i> | Move the mouse to power on the system. |
| <i>Mouse Click</i> | Click the mouse to power on the system. |

Power On By Keyboard

This field allows you to use the keyboard to power-on the system.

| | |
|--------------------|---|
| <i>Button only</i> | Default setting. Uses the power button to power on the system. |
| <i>Password</i> | When this option is selected, set the password you would like to use to power-on the system in the “KB Power On Password” field. |
| <i>Hot Key</i> | When this option is selected, select the function key you would like to use to power-on the system in the “Hot Key Power On” field. |
| <i>Any Key</i> | Press any key to power-on the system. |
| <i>Keyboard 98</i> | When this option is selected, press the “wake up” key of the Windows® 98 compatible keyboard to power-on the system. |

Power On By Button

To use the power button to power on the system, set this field to Enabled.

KB Power On Password

Move the cursor to this field and press <Enter>. Enter your password. You can enter up to 5 characters. Type in exactly the same password to confirm, then press <Enter>.

The power button will not function once a keyboard password has been set in this field. You must type the correct password to power-on the system. If you forgot the password, power-off the system and remove the battery. Wait for a few seconds and install it back before powering-on the system.

Hot Key Power On

This field is used to select a function key that you would like to use to power-on the system.

Onboard FDC Controller

| | |
|-----------------|--|
| <i>Enabled</i> | Enables the onboard floppy disk controller. |
| <i>Disabled</i> | Disables the onboard floppy disk controller. |

Onboard Serial Port

| | |
|---|--|
| <i>Auto</i> | The system will automatically select an I/O address for the onboard serial port. |
| <i>3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3</i> | Allows you to manually select an I/O address for the onboard serial port. |
| <i>Disabled</i> | Disables the onboard serial port. |

Onboard IRDA Select

| | |
|---|--|
| <i>3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3</i> | Allows you to manually select an I/O address for the onboard IrDA. |
| <i>Disabled</i> | Disables the onboard IrDA. |

IR Mode Select

This field is used to select the type of IrDA standard supported by your IrDA device. For better transmission of data, your IrDA peripheral device must be within a 30° angle and within a distance of 1 meter.

UR2 Duplex Mode

| | |
|-------------|---|
| <i>Half</i> | Data is completely transmitted before receiving data. |
| <i>Full</i> | Transmits and receives data simultaneously. |

PWRON After PWR-Fail

| | |
|-------------------|--|
| <i>Off</i> | When power returns after an AC power failure, the system's power is off. You must press the Power button to power-on the system. |
| <i>On</i> | When power returns after an AC power failure, the system will automatically power-on. |
| <i>Former-Sts</i> | When power returns after an AC power failure, the system will return to the state where you left off before power failure occurs. If the system's power is off when AC power failure occurs, it will remain off when power returns. If the system's power is on when AC power failure occurs, the system will power-on when power returns. |


CIR Port Address

This field is used to select an I/O address for the CIR device.

CIR Port IRQ

This field is used to select an IRQ for the CIR device.

USB Device Setting

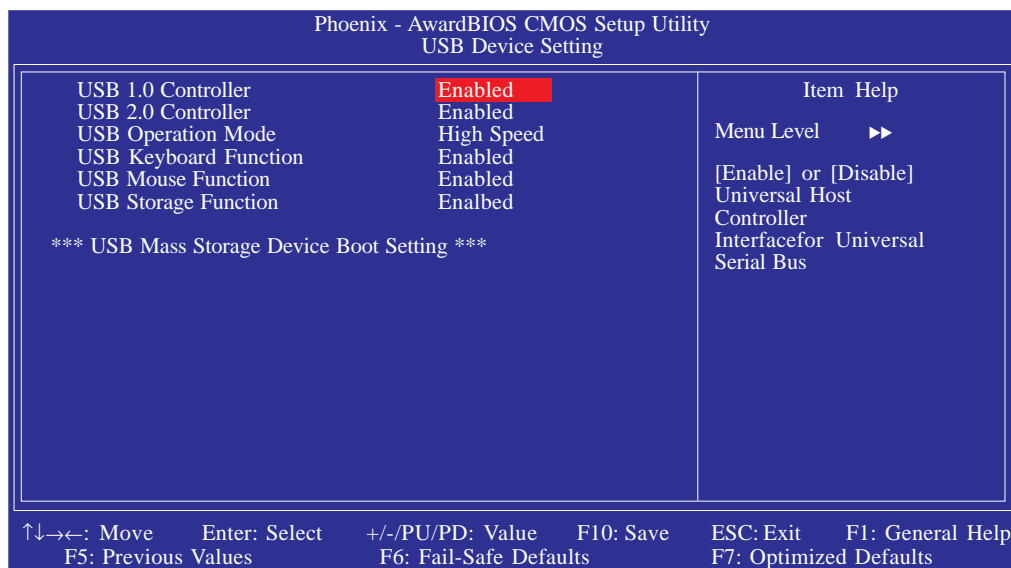

The settings on the screen are for reference only. Your version may not be identical to this one.

USB 1.0 Controller

This field is used to enable or disable the Universal Host Controller Interface (USB 1.0).

USB 2.0 Controller

This field is used to enable or disable the Enhanced Host Controller Interface (USB 2.0).

USB Operation Mode

This field is used to select the USB's operation mode. The options are Full/Low Speed and High Speed.

USB Keyboard Function

Due to the limited space of the BIOS ROM, the support for legacy USB keyboard (in DOS mode) is by default set to Disabled. With more BIOS ROM space available, it will be able to support more advanced features as well as provide compatibility to a wide variety of peripheral devices.

If a PS/2 keyboard is not available and you need to use a USB keyboard to install Windows (installation is performed in DOS mode) or run any program under DOS, set this field to Enabled.

USB Mouse Function

Due to the limited space of the BIOS ROM, the support for legacy USB mouse (in DOS mode) is by default set to Disabled. With more BIOS ROM space available, it will be able to support more advanced features as well as provide compatibility to a wide variety of peripheral devices.


If a PS/2 mouse is not available and you need to use a USB mouse to install Windows (installation is performed in DOS mode) or run any program under DOS, set this field to Enabled.

USB Storage Function

This field is used to enable or disable the support for legacy USB mass storage.

Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy.

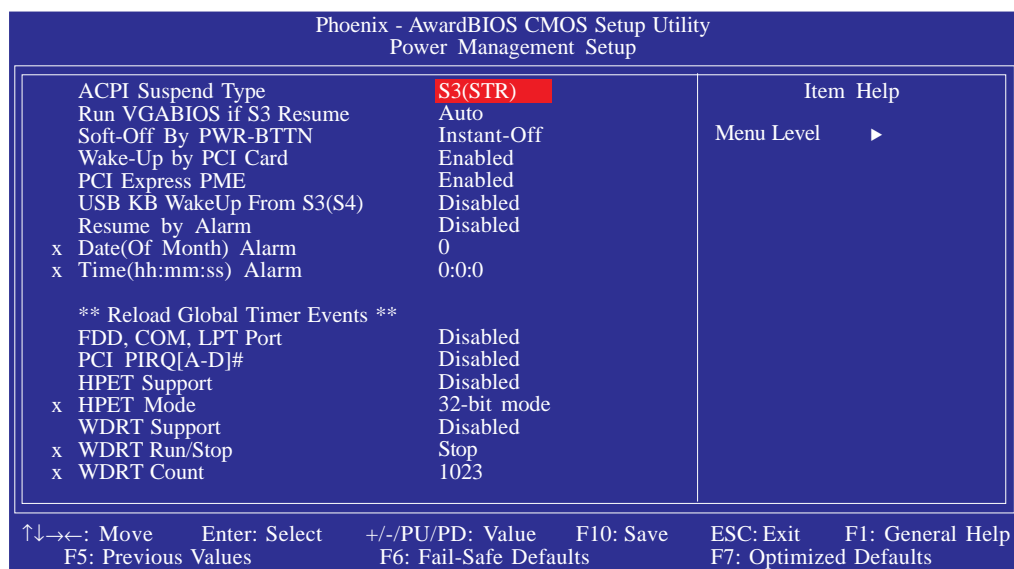

The settings on the screen are for reference only. Your version may not be identical to this one.

ACPI Suspend Type

This field is used to select the type of Suspend mode.

- S1(POS) Enables the Power On Suspend function.
- S3(STR) Enables the Suspend to RAM function.

Run VGABIOS if S3 Resume

When this field is set to Auto, the system will initialize the VGA BIOS when it wakes up from the S3 state. This can be configured only if the "ACPI Suspend Type" field is set to "S3(STR)". When this feature is disabled, the system resume time is shortened but system will need an AGP driver to initialize the VGA card. Therefore, if the AGP driver of the card does not support the initialization feature, the display may work abnormally or not function after resuming from S3.

Soft-Off by PWR-BTTN

This field allows you to select the method of powering off your system.

- Delay 4 Sec.* Regardless of whether the Power Management function is enabled or disabled, if the power button is pushed and released in less than 4 sec, the system enters the Suspend mode. The purpose of this function is to prevent the system from powering off in case you accidentally “hit” or pushed the power button. Push and release again in less than 4 sec to restore. Pushing the power button for more than 4 seconds will power off the system.
- Instant-Off* Pressing and then releasing the power button at once will immediately power off your system.

Wake-Up by PCI Card

- Enabled* This field should be set to Enabled only if your PCI card such as LAN card or modem card uses the PCI PME (Power Management Event) signal to remotely wake up the system. Access to the LAN card or PCI card will cause the system to wake up. Refer to the card's documentation for more information.
- Disabled* The system will not wake up despite access to the PCI card.

PCI Express PME

This field is used to configure the PCI Express PME.

USB KB WakeUp From S3(S4)

This field, when enabled, allows you to use a USB keyboard to wake up a system that is in the S3 (STR - Suspend To RAM) state. This can be configured only if the “ACPI Suspend Type” field is set to “S3(STR)”.

Resume By Alarm

- Enabled* When Enabled, you can set the time you would like the Soft Power Down (Soft-Off) PC to power-on in the "Time (dd:hh:mm) of Alarm" field. However, if the system is being accessed by incoming calls or the network prior to the time set in the field, the system will give priority to the incoming calls or network.
- Disabled* Disables the automatic power-on function. (default).

Day (of Month) Alarm

- 0 The system will power-on everyday according to the time set in the "Time (hh:mm:ss) Alarm" field.
- 1-31 Select a date you would like the system to power-on. The system will power-on on the set date, and time set in the "Time (hh:mm:ss) Alarm" field.

Time (hh:mm:ss) of Alarm


This is used to set the time you would like the system to power-on.

Reload Global Timer Events

When enabled, access to the specified field (FDD/COM/LPT Port or PCI PIRQ[A-D]#, HPET Support, HPET Mode, WDRT Support, WDRT Run/Stop, WDRT Count) will cause the system to wake up completely from the power management mode. When disabled, the system will not wake up from the power management mode despite access to the specified field.

PnP/PCI Configurations

This section describes configuring the PCI bus system. It covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

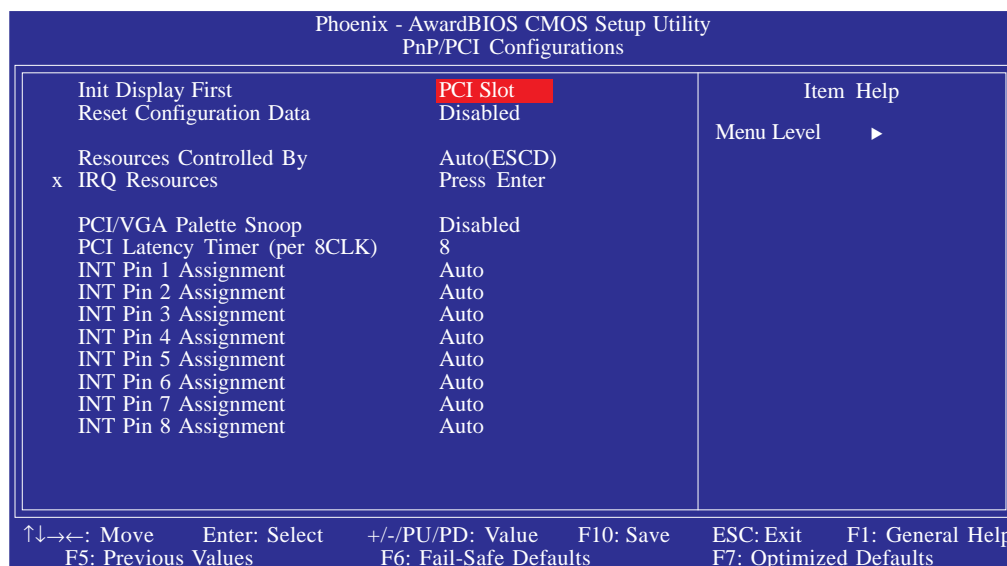

The settings on the screen are for reference only. Your version may not be identical to this one.

Init Display First

This field is used to select whether to initialize the PCI Express or PCI first when the system boots.

PCI Express Slot When the system boots, it will first initialize the PCI Express x16 graphics card.

PCI Slot When the system boots, it will first initialize PCI.

Reset Configuration Data

Enabled The BIOS will automatically reset the Extended System Configuration Data (ESCD) once. It will then recreate a new set of configuration data.

Disabled The BIOS will not reset the configuration data.

Resources Controlled By


The Award Plug and Play BIOS has the capability to automatically configure all of the boot and Plug and Play compatible devices.

Auto(ESCD) The system will automatically detect the settings for you.

Manual Choose the specific IRQ in the "IRQ Resources" field.

IRQ Resources

Move the cursor to this field and press <Enter>. This field is used to set each system interrupt to either Reserved or PCI Device.

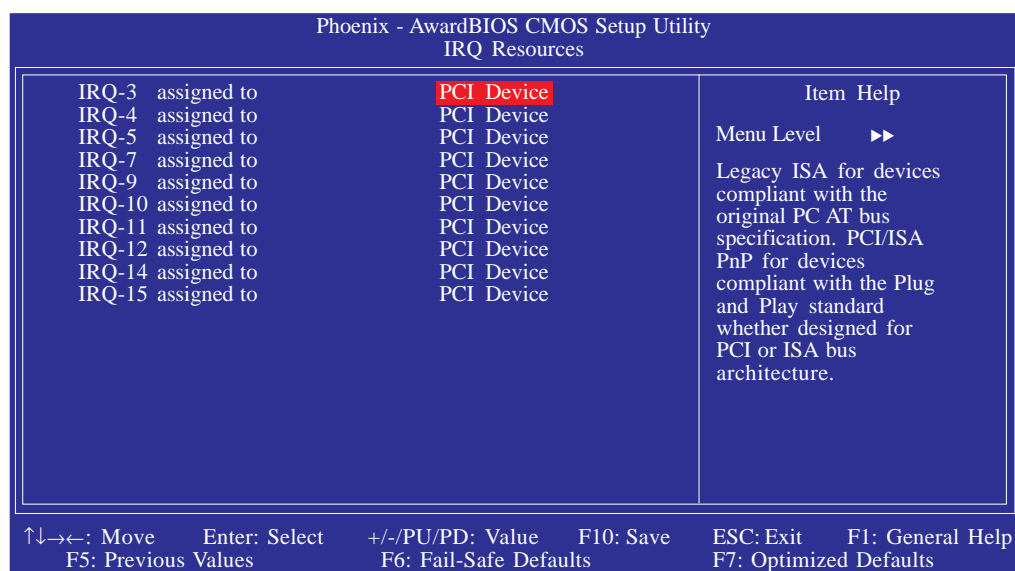

The settings on the screen are for reference only. Your version may not be identical to this one.

PCI/VGA Palette Snoop

This field determines whether the MPEG ISA/VESA VGA cards can work with PCI/VGA or not.

Enabled MPEG ISA/VESA VGA cards work with PCI/VGA.

Disabled MPEG ISA/VESA VGA cards does not work with PCI/VGA.

PCI Latency Timer (per 8CLK)

This feature is used to select the length of time each PCI device will control the bus before another takes over. The larger the value, the longer the PCI device can retain control of the bus. Since each access to the bus comes with an initial delay before any transaction can be made, low values for the PCI Latency Timer will reduce the effectiveness of the PCI bandwidth while higher values will improve it.

INT Pin 1 Assignment to INT Pin 8 Assignment

By default, a device is automatically assigned to each INT. You can also manually assign an INT for each device.

PC Health Status

| Phoenix - AwardBIOS CMOS Setup Utility | | | Item Help |
|--|------------|---|--------------|
| PC Health Status | | | Menu Level ► |
| Shutdown Temperature | 85°C/185°F | ▲ | |
| CPUFan Fully On if CPUTemp | >50°C | | |
| CPUFan Turn OFF if CPUTemp | <25°C | | |
| CHSFan Fully On if CHSTemp | >35°C | | |
| CHSFan Turn OFF if CHSTemp | <25°C | | |
| NB Fan Fully On if NB Temp | >55°C | | |
| NB Fan Turn OFF if NB Temp | <25°C | | |
| CPU Core Voltage | 1.31V | | |
| DRAM Voltage | 1.88V | | |
| NB Core Voltage | 1.23V | | |
| HT Link Voltage | 1.21V | | |
| ATX +3.3V Voltage | 3.26V | | |
| ATX +12V Voltage | 11.64V | | |
| 5V Standby Voltage | 4.73V | | |
| Battery Voltage | 3.28V | | |
| CPU CORE Temperature | 65°C | | |
| PWM AREA Temperature | 46°C | | |
| CHIPSET Temperature | 59°C | | |
| CPU FAN Fan Speed | 4787 RPM | | |
| CHIPSET Fan Speed | 0 RPM | | |
| CHS Fan Speed | 0 RPM | | |
| ↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults | | | |

The screen above list all the fields available in the PC Health Status submenu, for ease of reference in this manual. In the actual CMOS setup, you have to use the scroll bar to view the fields. The settings on the screen are for reference only. Your version may not be identical to this one.

Shutdown Temperature

You can prevent the system from overheating by selecting a temperature at which the system will shutdown. If the system detected that its temperature exceeded the one set in this field, it will automatically shutdown.

CPUFan Fully On If CPUTemp

This field is used to select the CPU's temperature at which the CPU fan will rotate at full speed.

CPUFan Turn Off If CPUTemp

This field is used to select the CPU's temperature at which the CPU fan will rotate at a start speed which is the slowest speed.



Note:

1. If the CPU temperature runs between the highest (set in the "CPUFan Fully On If CPUTemp" field) and lowest (set in the "CPUFan Turn Off If CPUTemp" field) temperature, the system will automatically adjust the CPU fan's speed according to the temperature.
2. If you want to reduce the CPU fan's noise or prevent CPU overheat, select a lower temperature in the "CPUFan Fully On If CPUTemp" field to allow the CPU fan to rotate full speed at the selected lower temperature.

CHSFan Fully On If CHSTemp

This field is used to select the system's temperature that would allow the chassis fan to rotate at full speed.

CHSFan Turn Off If CHSTemp

This field is used to select the system's temperature that would allow chassis fan to rotate at a start speed which is the slowest speed.



Note:

If the system's temperature runs between the highest (set in the "CHSFan Fully On If CHSTemp" field) and lowest (set in the "CHSFan Turn Off If CHSTemp" field) temperature, the system will automatically adjust the chassis fan's speed according to the temperature.

NB Fan Fully On If NB Temp

This field is used to select the Northbridge chip's temperature that would allow the chip's fan to rotate at full speed.

NB Fan Turn Off If NB Temp

This field is used to select the Northbridge chip's temperature that would allow the chip's fan to rotate at a start speed which is the slowest speed.



Note:

If the north bridge chip's temperature runs between the highest (set in the "NB Fan Fully On If NB Temp" field) and lowest (set in the "NB Fan Turn Off If NB Temp" field) temperature, the system will automatically adjust the north bridge chip fan's speed according to the temperature.

CPU Core Voltage to Battery Voltage

These fields will show the monitored output voltages.


CPU Core Temperature to Chipset Temperature

These fields will show the current temperature of the CPU, PWM area and chipset.

CPU Fan Speed to CHS Fan Speed

These fields will show the current fan speed of the monitored cooling fans in RPM (Rotation Per Minute).

Genie BIOS Setting

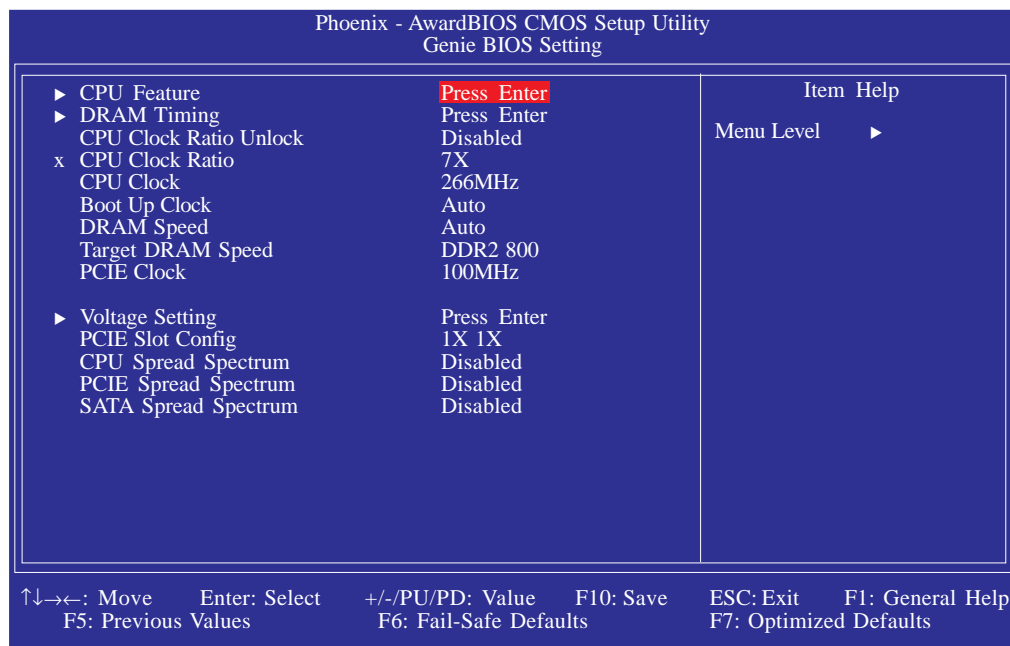

The settings on the screen are for reference only. Your version may not be identical to this one.

CPU Feature Refer to the following pages for more information on these submenus
DRAM Timing

CPU Clock Ratio Unlock

Set this field to Enabled to unlock the CPU clock ratio. This will allow you to select the CPU clock ratio in the field below.

CPU Clock Ratio

This field is used to select the CPU's frequency ratio.

CPU Clock

This field provides several options for selecting the external system bus clock of the processor. The available options allow you to adjust the processor's bus clock by 1MHz increment.



Important:

Selecting an external bus clock other than the default setting may result to the processor's or system's instability and are not guaranteed to provide better system performance.

Boot Up Clock

This field is used to select the boot up clock.

DRAM Speed

This field is used to select the clock speed of the DIMM.

Target DRAM Speed

This field will show the current target DRAM speed.

PCIE Clock

This field is used to select the bus clock of the PCI Express.

Voltage Setting

Refer to the following pages for more information on this submenu.

PCIE SLOT CONFIG

The options are 4X 1X and 1X 1X.

CPU Spread Spectrum

This field is used to configure the CPU spread spectrum. The options are Disabled, -0.5%, +-0.25%, -1.0% and +-0.5%.

PCIE Spread Spectrum


This field is used to configure the PCI Express spread spectrum. The options are Disabled, -0.5%, and -1.0%.

SATA Spread Spectrum

This field is used to enable or disable the SATA spread spectrum.

CPU Feature

Move the cursor to this field and press <Enter>, the following screen will appear:

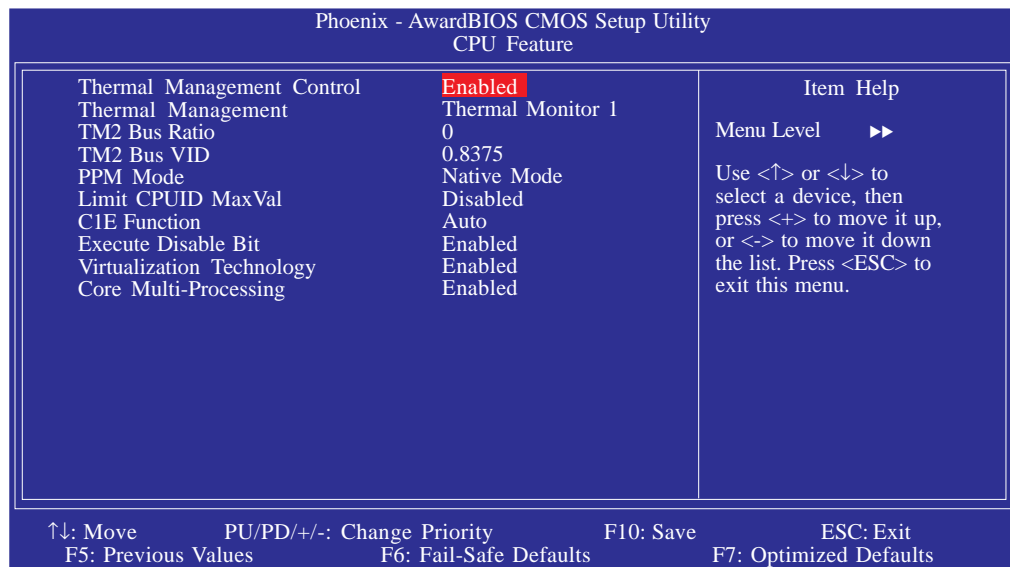

The settings on the screen are for reference only. Your version may not be identical to this one.

Thermal Management Control

This field is used to enable or disable thermal management.

Thermal Management

Select a “thermal monitor” in this field to enable the CPU’s speedstep function. Restart the system then go to the operating system’s “Control Panel”. Double-click “Power Options”. The “Power Options Properties” dialog box will appear. In the “Power Schemes” menu, select “Portable/Laptop”. Speedstep reduces the CPU’s frequency and voltage in accordance to its load.

Thermal Monitor 1 On die throttling.

Thermal Monitor 2 Ratio and VID transition.

TM2 Bus Ratio

This field is used to select the bus ratio of the throttled performance state that will be initiated when the on-die sensor turns from cool to hot.

TM2 Bus VID

This field is used to select the voltage of the throttled performance state that will be initiated when the on-die sensor turns from cool to hot.

PPM Mode

The options are Native Mode and SMM mode.

Limit CPUID MaxVal

The CPUID instruction of some newer CPUs will return a value greater than 3. Problems will occur only in certain operating systems. The default is Disabled because this problem does not exist in the Windows series operating systems. If you are using an operating system other than Windows, this problem may occur. To avoid this problem, enable this field to limit the return value to 3 or lesser than 3.

CIE Function

The options are Auto and Disabled.

Execute Disable Bit

When this field is set to Disabled, it will force the XD feature flag to always return to 0.

Virtualization Technology


When this field is set to Enabled, the VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

Core Multi-processing

The options are Enabled and Disabled.

DRAM Timing

Move the cursor to this field and press <Enter>. The following screen will appear:

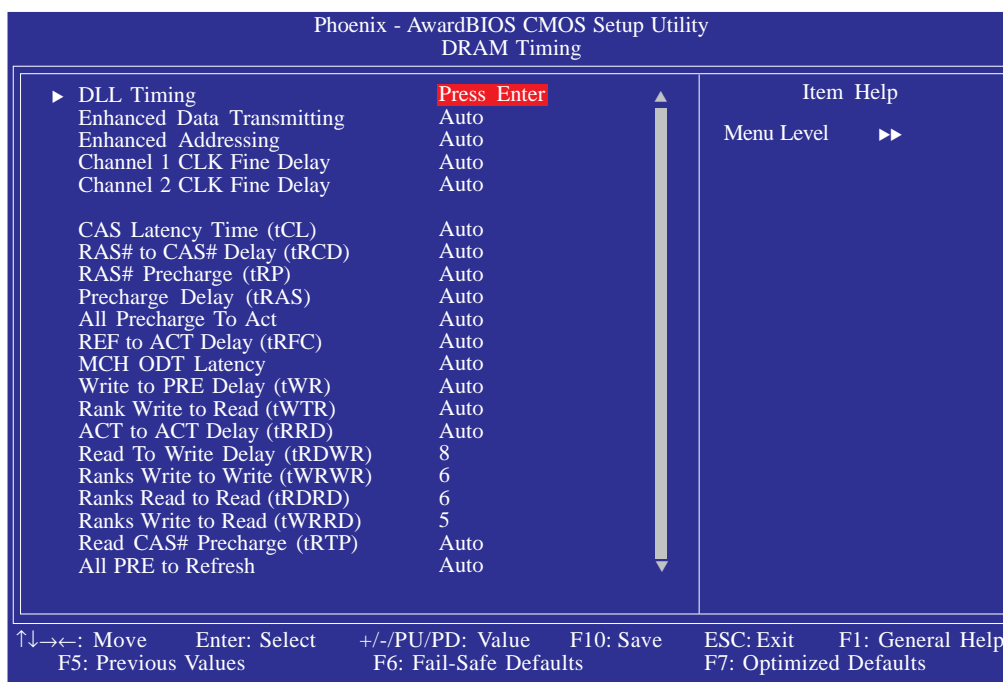

The screen above list all the fields available in the DRAM Timing submenu, for ease of reference in this manual. In the actual CMOS setup, you have to use the scroll bar to view the fields. The settings on the screen are for reference only. Your version may not be identical to this one.

DLL Timing

Refer to the following pages for more information on this submenu.

Enhance Data Transmitting

The options are Auto, Normal and Fast.

Enhance Addressing

The options are Auto, Normal and Fast.

Channel 1 CLK Fine Delay and Channel 2 CLK Fine Delay

The options are Auto, 1 and 2.

CAS Latency Time (tCL)

This field is used to select the clock cycle of the CAS latency time. The option selected specifies the timing delay before SDRAM starts a read command after receiving it.

RAS# to CAS# Delay (tRCD)

This field is used to select the RAS# to CAS# delay time when reading and writing to the same bank.

RAS# Precharge (tRP)

This field is used to select the idle clocks after issuing a precharge command to the DRAM.

Precharge Delay (tRAS)

The options are Auto, and 9 to 15.

ALL Precharge to Act

The options are Auto, and 2 to 9.

REF to ACT Delay (tRFC)

The options are Auto, and 16 to 33..

MCH ODT Latency

The options are Auto, and 1 to 12.

Write to PRE Delay (tWR)

The options are Auto, and 6 to 18.

Rank Write to Read (tWTR)

The options are Auto, and 6 to 18.

ACT to ACT Delay (tRRD)

The options are Auto, and 1 to 15.

Read to Write Delay (tRDWR)

This field is used to select the read to write delay time. Although this is not a DRAM specified timing parameter; it is related to the routing latencies on the clock forwarded bus. This is measured from the first address bus slot which is not associated with part of the read burst.

Ranks Write to Write (tWRWR)

The options are 0 to 15.

Ranks Read to Read (tRDRD)

The options are 0 to 15.

Ranks Write to Read (tWRRD)

The options are 0 to 15.

Read CAS# Precharge (tRTP)


The options are Auto, and 1 to 15.

ALL PRE to Refresh

The options are Auto, and 1 to 15.

DLL Timing

Move the cursor to this field and press <Enter>. The following screen will appear:

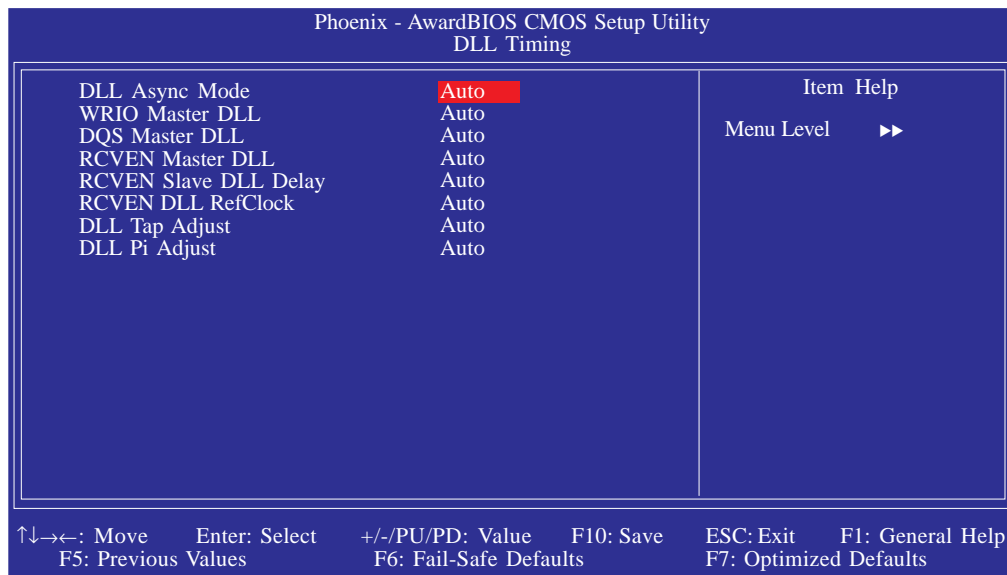

The settings on the screen are for reference only. Your version may not be identical to this one.

DLL Async Mode

The options are Auto, Mode 0 and Mode 1.

WRIO Master DLL

The options are Auto, and 1 to 15.

DQS Master DLL

The options are Auto, and 1 to 15.

RCVEN Master DLL

The options are Auto, and 1 to 15.

RCVEN Slave DLL Delay

The options are Auto, and 1 to 18.

RCVEN DLL RefClock

The options are Auto, 1x and 2x.

DLL Tap Adjust


The options are Auto, +1 to +7.

DLL Pi Adjust

The options are Auto, +1 to +7.

Voltage Setting

Move the cursor to this field and press <Enter>. The following screen will appear:

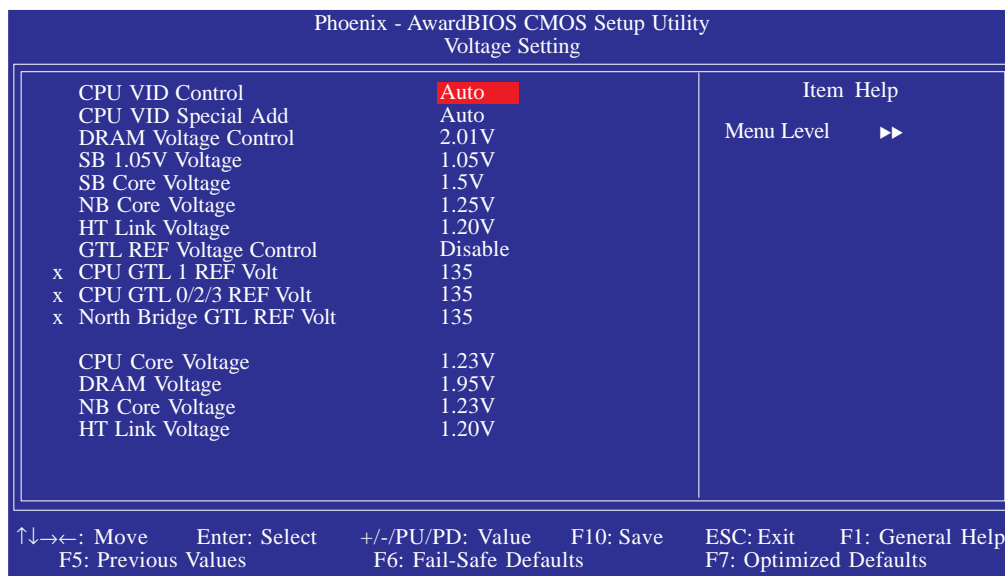

The settings on the screen are for reference only. Your version may not be identical to this one.

CPUVID Control

This field allows you to manually adjust to a higher core voltage that is supplied to the CPU. If you want to use the CPU's default core voltage, leave this field in its default setting. The CPU's Vcore will be generated according to the CPUVID configuration.



Important:

Although this function is supported, we do not recommend that you use a higher voltage because unstable current may be supplied to the system board causing damage.

CPUVID Special Add

This field provides more options to further adjust the voltage of the CPU.

DRAM Voltage Control

This field allows you to manually select higher voltage supplied to the DRAM.

SB 1.05V Voltage

The options are 1.05V, 1.133V, 1.217V and 1.3V.

SB Core Voltage

The options are 1.5V, 1.6V, 1.7V and 1.8V.

NB Core Voltage

The options are 1.25V to 1.55V.

HT Link Voltage

The options are 1.20V to 1.50V.

GTL REF Voltage Control

The options are Enabled and Disabled.

CPU GTL 1 REF Volt and CPU GTL 0/2/3 REF Volt

These fields are used to configure the CPU GTL REF voltage.

North Bridge GTL REF Volt

Leave this in its default setting.

CPU Core Voltage

This field will show the CPU's current voltage.

DRAM Voltage

This field will show the DRAM's current voltage.

NB Core Voltage

This field will show the NB's current core voltage.

HT Link Voltage

This field will show the HT Link's current voltage.

CMOS Reloaded

The CMOS Reloaded submenu allows you to save different configurations and when needed, allows you to conveniently restore one of these previously saved configurations. Highlight CMOS Reloaded in the main menu then press <Enter>.



The screen above list all the fields available in the CMOS Reloaded submenu, for ease of reference in this manual. In the actual CMOS setup, you have to use the scroll bar to view the fields. The settings on the screen are for reference only. Your version may not be identical to this one.

CMOS Reloaded is especially helpful to overclockers who often go through the tiresome trial and error process of repeatedly changing the BIOS settings to come up with the most ideal overclocked setting. By being able to save and load the settings, it eliminates the tedious job of remembering several settings and/or repeatedly resetting settings during the trial process. The settings are stored in the SEEPROM. SEEPROM is divided into 5 banks - the backup bank and the 4 user defined banks.

Auto Save Bootable Setting

This field is used to automatically save the last bootable setting from CMOS to an area in the SEEPROM referred to as the backup bank. To use this function:

1. Set this field to Enabled.
2. Select “Save & Exit Setup” in the main menu then press <Enter>.
3. Type <Y> then press <Enter>.

If the changes to the setting allowed the system to boot, the setting will be stored in the SEEPROM. In other words, if the system did not boot up, the setting will not be stored. You may then follow the steps in the next section to load the last bootable setting.

Load Last Bootable Setting

If, during the trial and error process, the setting resulted to the system's instability or worse yet, not being able to boot up the system, please follow the steps below to use the Load function.



Note:

You can use the Load function only if you have set the “Auto Save Bootable Setting” to Enabled.

1. If the system did not boot up properly but you were able to enter the BIOS utility:
 - a. Select “CMOS Reloaded” in the main menu then press <Enter>.
 - b. Move the cursor to “Load Last Bootable Setting” then press “Load”.
 - c. Press <Y> to load the last bootable setting that was stored in the backup bank.
2. If you cannot enter the BIOS utility:
 - a. Use the Clear CMOS jumper to clear the CMOS. Refer to chapter 2 for more information about clearing CMOS.
 - b. Enter the BIOS utility then perform steps 1a to 1c.

Saving, Loading and Naming BIOS Settings

For overclockers who require different sets of settings for various system environments or operating systems, CMOS Reloaded allows you to save, load and name up to four sets of BIOS settings - in the "User Defined Setting Bank #1" to "User Defined Setting Bank #4" fields.

Save Setting to Bank With

This field is used to select the type of setting you would like saved to a User Defined Setting Bank when you use the "Save to this Bank" function of that bank.

| | |
|-----------------------------|---|
| <i>Current BIOS Setting</i> | This option will save the current BIOS setting to the User Defined Setting Bank. |
| <i>Last BIOS Setting</i> | This option will save the last saved BIOS setting to the User Defined Setting Bank. |

User Defined Setting Bank #1/2/3/4

Bank Description

To name the BIOS setting, move the cursor to "Bank Description" then press <Enter>. You can enter up to 60 characters. Providing a name to the BIOS setting will allow you to easily remember the settings in the bank.

Save to this Bank

To save the BIOS setting, move the cursor to "Save to this Bank" then press <Enter>. Type <Y> then press <Enter>. This will save the current setting or the last saved setting to this bank; depending on the option selected in the "Save Setting to Bank With" field.

If you want to immediately reboot to use the new settings, make sure to save before you exit the BIOS setup utility by selecting "Y" in the "Save & Exit Setup" submenu.

Load from this Bank


To load the setting saved in the bank, move the cursor to “Load from this Bank” then press <Enter>. The setting in this bank will replace the current setting. Make sure to save before you exit the BIOS setup utility by selecting “Y” in the “Save & Exit Setup” submenu.

Hotkey

You can now load a BIOS setting during system boot up; bypassing the lengthy process of entering the BIOS utility to load a setting. Move the cursor to “Hotkey” then press <Enter>. Select the key you would like to use to load the settings from the bank. When the system boots up, press the key to load the setting.

Load Optimized Defaults

The “Load Optimized Defaults” option loads optimized settings from the BIOS ROM. Use the default values as standard values for your system. Highlight this option in the main menu and press <Enter>.

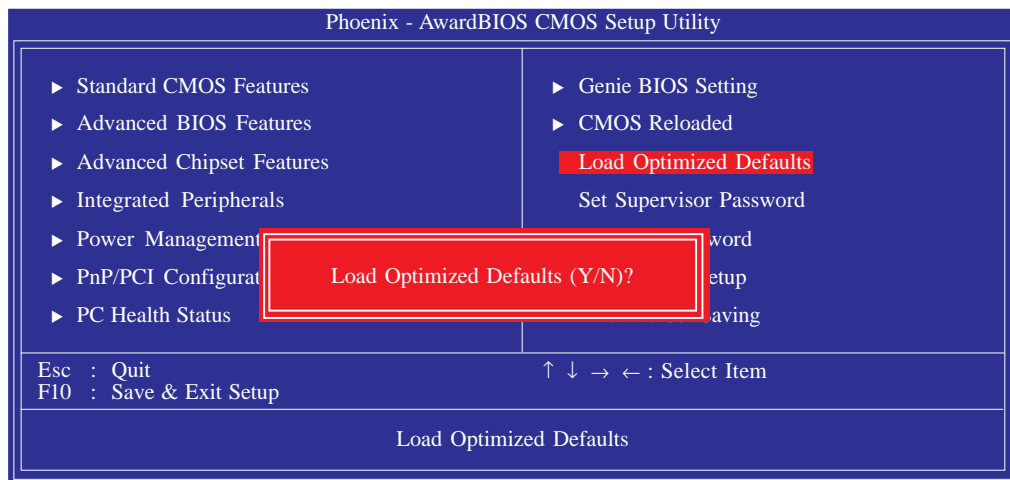


Type <Y> and press <Enter> to load the Setup default values.

Set Supervisor Password

If you want to protect your system and setup from unauthorized entry, set a supervisor's password with the "System" option selected in the Advanced BIOS Features. If you want to protect access to setup only, but not your system, set a supervisor's password with the "Setup" option selected in the Advanced BIOS Features. You will not be prompted for a password when you cold boot the system.

Use the arrow keys to highlight "Set Supervisor Password" and press <Enter>.

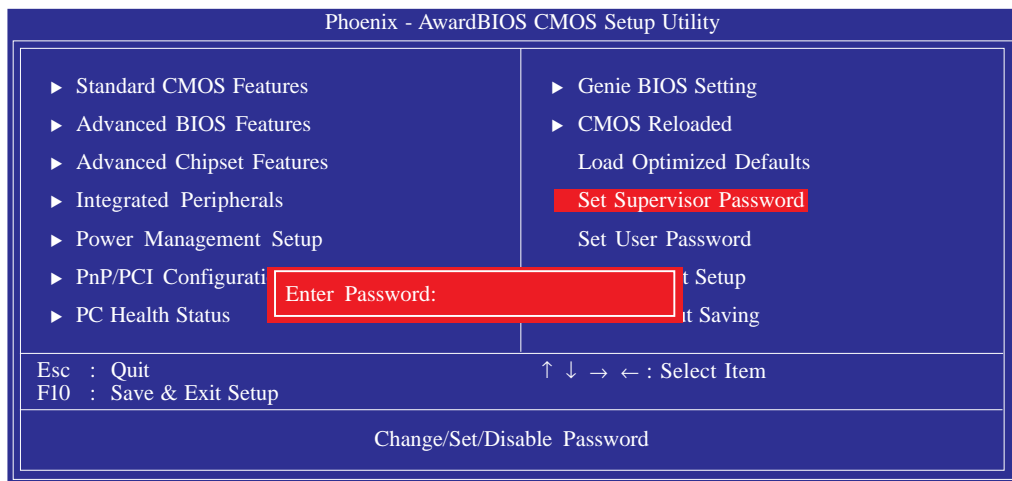

Type in the password. You are limited to eight characters. When done, the message below will appear:

Confirm Password:


You are asked to verify the password. Type in exactly the same password. If you type in a wrong password, you will be prompted to enter the correct password again. To delete or disable the password function, highlight "Set Supervisor Password" and press <Enter>, instead of typing in a new password. Press the <Esc> key to return to the main menu.

Set User Password

If you want another user to have access only to your system but not to setup, set a user's password with the "System" option selected in the Advanced BIOS Features. If you want a user to enter a password when trying to access setup, set a user's password with the "Setup" option selected in the Advanced BIOS Features.

Using user's password to enter Setup allows a user to access only "Set User Password" that appears in the main menu screen. Access to all other options is denied.

Use the arrow keys to highlight "Set User Password" and press <Enter>.

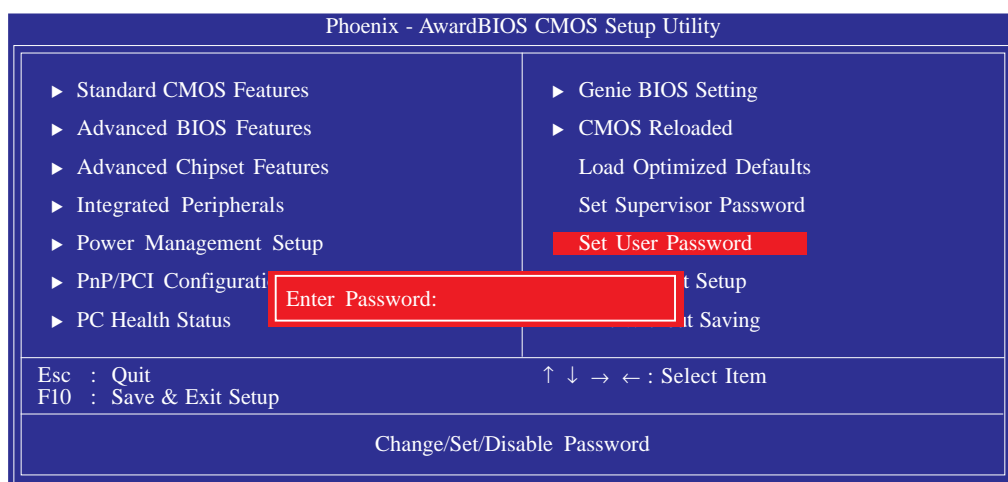


Type in the password. You are limited to eight characters. When done, the message below will appear:

Confirm Password:

You are asked to verify the password. Type in exactly the same password. If you type in a wrong password, you will be prompted to enter the correct password again. To delete or disable the password function, highlight "Set User Password" and press <Enter>, instead of typing in a new password. Press the <Esc> key to return to the main menu.

Save & Exit Setup

When all the changes have been made, highlight “Save & Exit Setup” and press <Enter>.

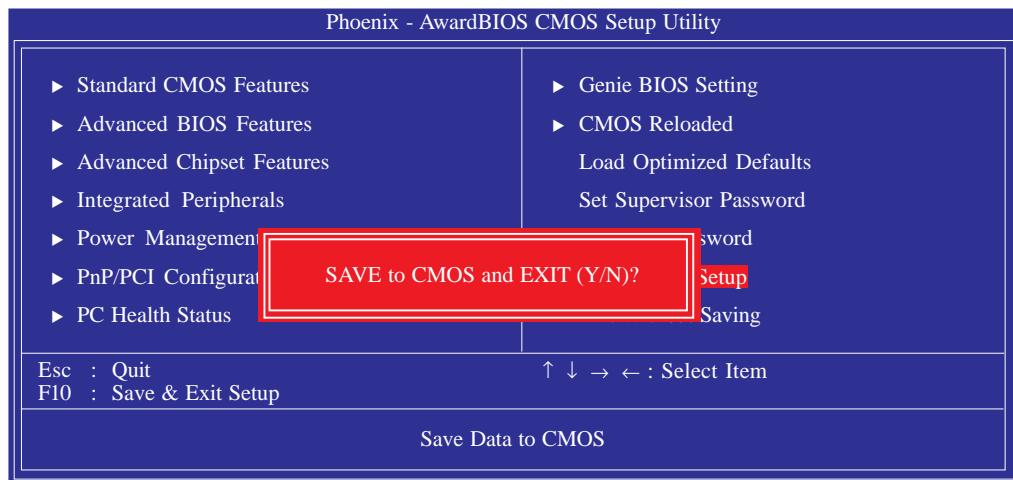

Type “Y” and press <Enter>. The modifications you have made will be written into the CMOS memory, and the system will reboot. You will once again see the initial diagnostics on the screen. If you wish to make additional changes to the setup, press <Ctrl> <Alt> <Esc> simultaneously or after memory testing is done.




Important:

As long as the DDR frequency, CPU clock and some memory timing fields were changed, and you try to save these settings in the BIOS, the system will normally shutdown within 3 seconds. However, you do not need to take any action in the event that the system will automatically restart in one to two seconds time.

Exit Without Saving

When you do not want to save the changes you have made, highlight “Exit Without Saving” and press <Enter>.

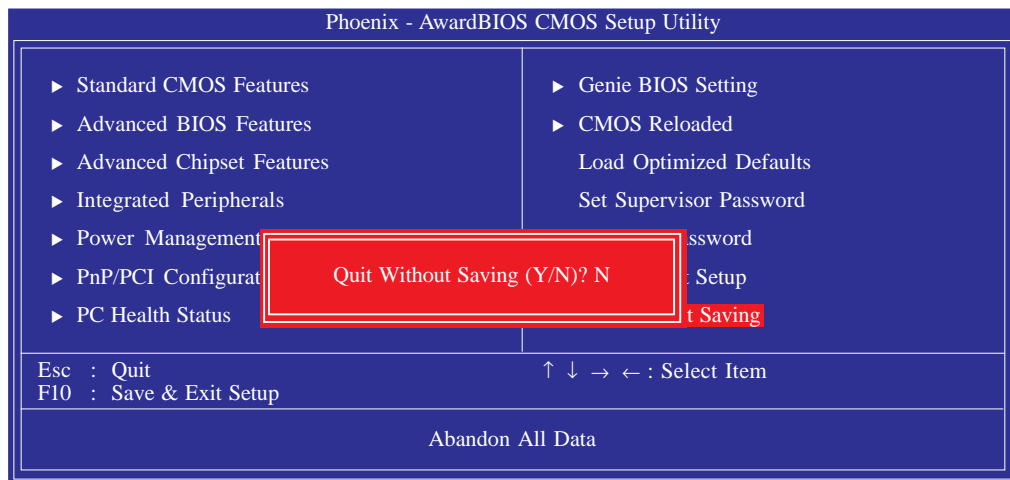

Type “Y” and press <Enter>. The system will reboot and you will once again see the initial diagnostics on the screen. If you wish to make any changes to the setup, press <Ctrl> <Alt> <Esc> simultaneously or after memory testing is done.

RAID BIOS

Intel RAID BIOS

The Intel RAID BIOS utility is used to configure and manage RAID on Serial ATA drives connected to SATA 1 to SATA 6.

When the system powers-up and all drives have been detected, the Intel RAID BIOS status message screen will appear. Press the <Ctrl> and <I> keys simultaneously to enter the utility. The utility allows you to build a RAID system on Serial ATA drives.

JMicron RAID BIOS

The JMicron RAID BIOS utility is used to configure and manage RAID on Serial ATA drives connected to SATA 7 and SATA 8.

When the system powers-up and all hard disk drives have been detected, the JMicron RAID BIOS status message screen will appear. Press the <Ctrl> and <J> keys simultaneously to enter the utility. The utility allows you to build a RAID system on Serial ATA drives.



Important:


Before creating RAID, make sure you have installed the Serial ATA drives and connected the data cables otherwise you won't be able to enter the RAID BIOS utility.

Refer to chapter 5 for steps in configuring RAID.

Updating the BIOS

To update the BIOS, you will need the new BIOS file and a flash utility, AWDFLASH.EXE. You can download them from DFI's web site or contact technical support or your sales representative.

1. Save the new BIOS file along with the flash utility AWDFLASH.EXE to a floppy disk.
2. Reboot the system and enter the Award BIOS Setup Utility to set the first boot drive to "Floppy".
3. Save the setting and reboot the system.
4. After the system booted from the floppy disk, execute the flash utility by typing AWDFLASH.EXE. The following screen will appear:

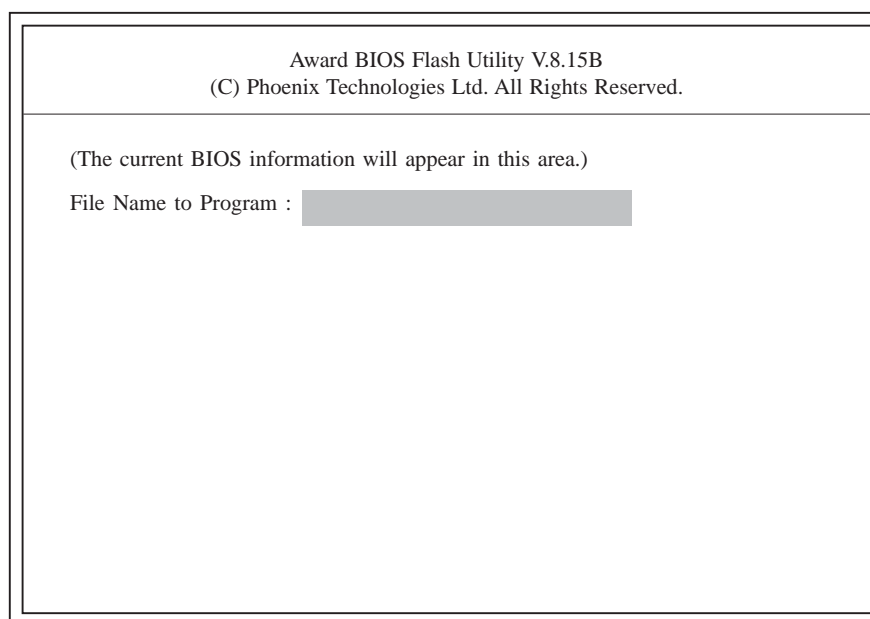

5. Type the new BIOS file name onto the gray area that is next to "File Name to Program" then press <Enter>.

6. The following will appear:

Do You Want to Save BIOS (Y/N)

This question refers to the current existing BIOS in your system. We recommend that you save the current BIOS and its flash utility; just in case you need to reinstall the BIOS. To save the current BIOS, press <Y> then enter the file name of the current BIOS. Otherwise, press <N>.

7. The following will then appear:

Press "Y" to Program or "N" to Exit


8. Press <Y> to flash the new BIOS.

Chapter 4 - Supported Software

Drivers, Utilities and Software Applications

The CD that came with the system board contains drivers, utilities and software applications required to enhance the performance of the system board.


Insert the CD into a CD-ROM drive. The autorun screen will appear. If after inserting the CD, "Autorun" did not automatically start, please go directly to the root directory of the CD and double-click "Setup".

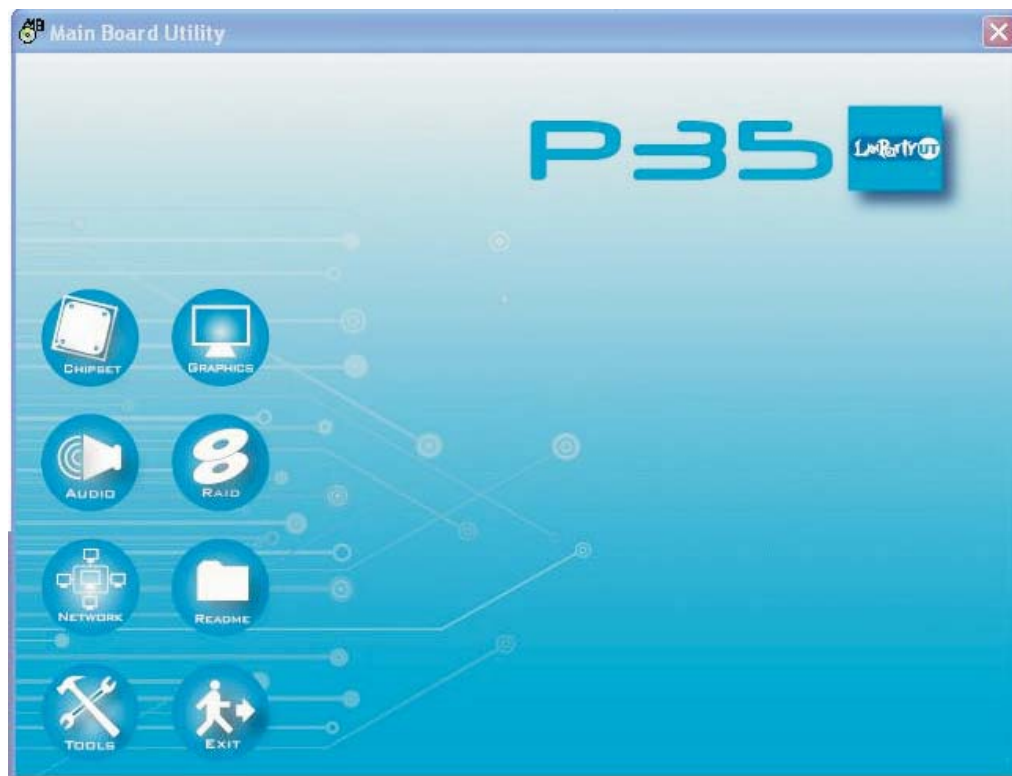


Intel Chipset Device Software

On the left side of the autorun screen, click the “CHIPSET” icon.

1. Click “Intel(R) Chipset Device Software” on the main menu.

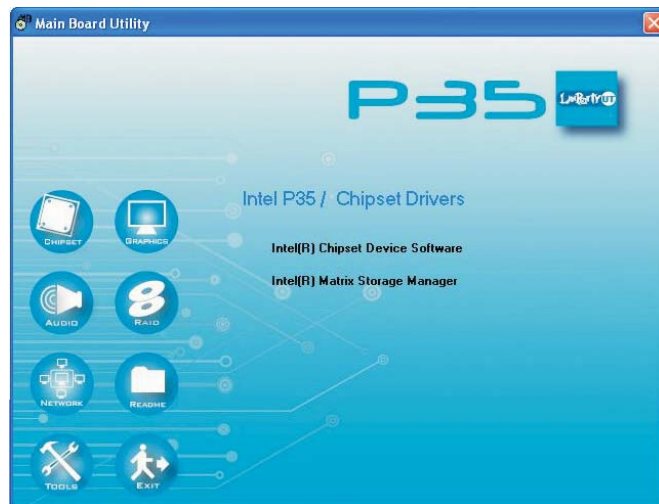

2. Setup is now ready to install the utility. Click Next.

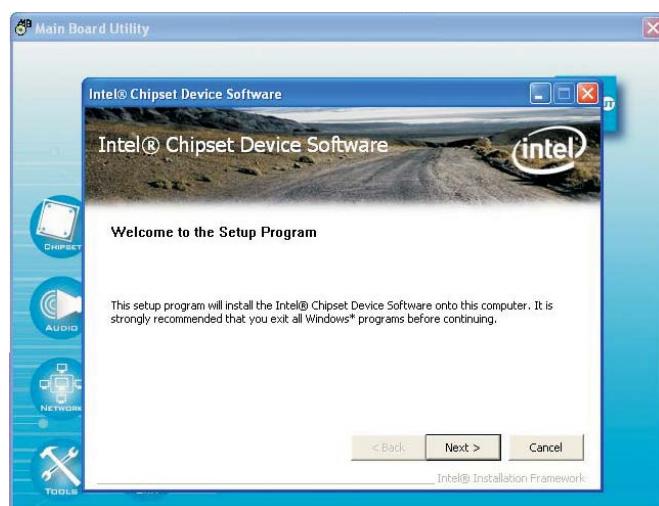

3. Read the license agreement then click Yes.



4. Go through the readme document for system requirements and installation tips then click Next.



5. Setup is now installing the driver. Click Next to continue.



6. Click “Yes, I want to restart this computer now” then click Finish.


Restarting the system will allow the new software installation to take effect.




Microsoft .NET Framework

On the left side of the autorun screen, click the “GRAPHICS” icon.


1. Click “Microsoft .NET Framework” on the main menu.

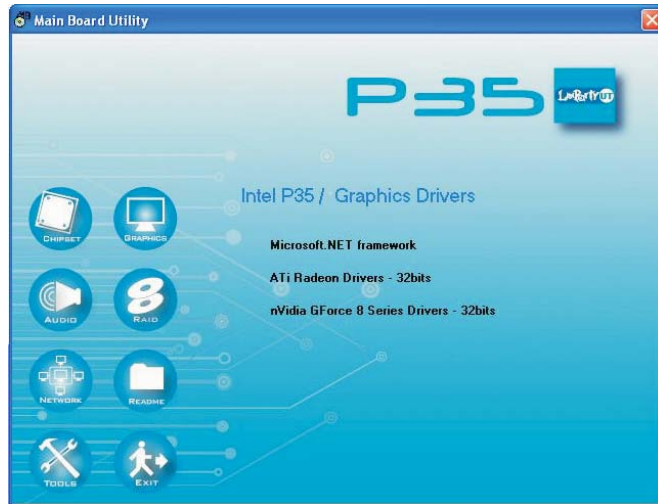


2. Setup is now ready to install the utility. Click Next.

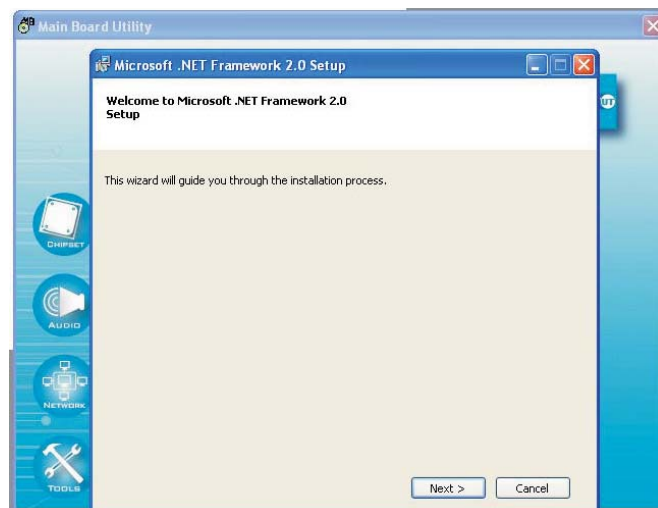


3. Read the license agreement then click "I accept the terms of the License Agreement.". Click Install.

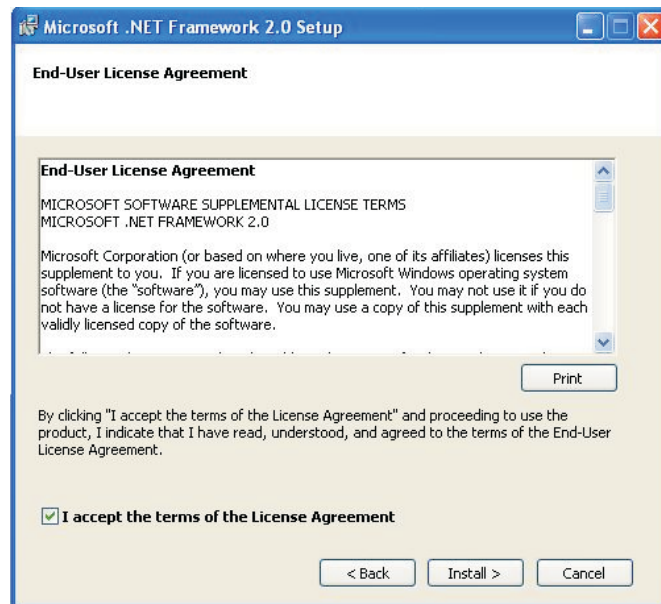

4. Setup is now installing the driver.

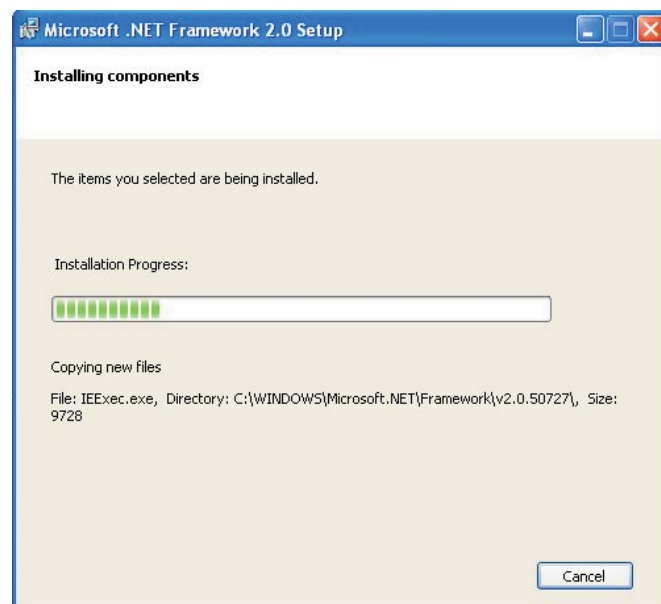

5. Click Finish. Reboot the system for the new software installation to take effect.

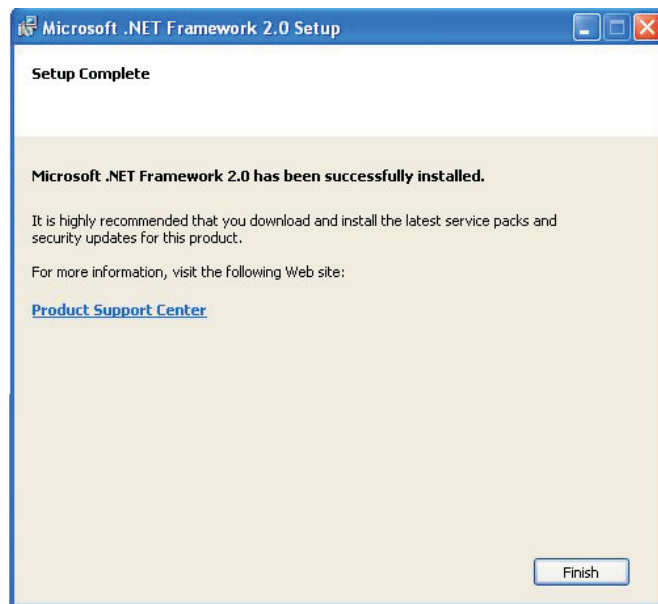

Graphics Drivers

The CD provides both ATI Radeon driver and nVidia GForce 8 series driver. Install the driver according to the graphics card that you are using.


For ATI Radeon graphics card, select ATI Radeon Driver:

For nVidia graphics card, select nVidia GForce 8 Series Drivers.

Realtek Audio Drivers

On the left side of the autorun screen, click the “AUDIO” icon.

1. Click “Realtek Audio Drivers” on the main menu.

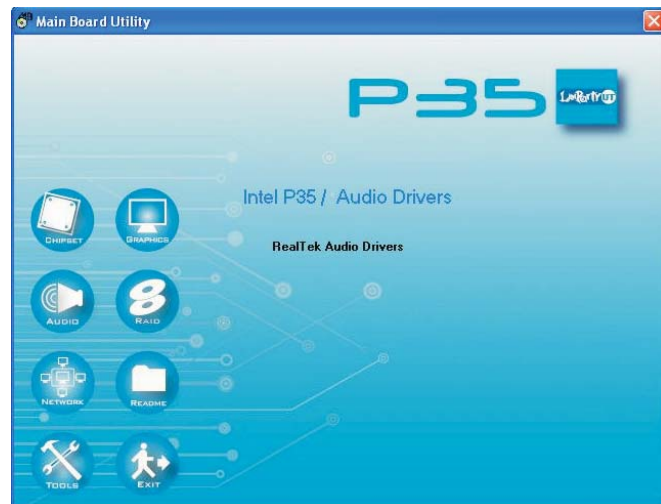

2. Setup is now ready to install the audio driver. Click Next.



3. Setup is currently configuring the new driver's installation.



4. Setup is now processing the settings.



5. Select the desired option then click Next.



6. Click "Yes, I want to restart my computer now" then click Finish.


Restarting the system will allow the new software installation to take effect.




Marvell LAN Drivers - 32bits

On the left side of the autorun screen, click the “NETWORK” icon.

1. Click “Marvell LAN Drivers - 32bits” on the main menu.

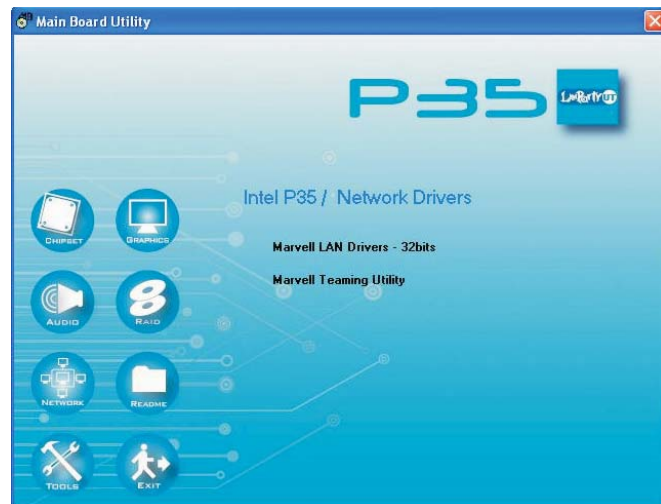


2. Setup is now ready to install the driver. Click Next.

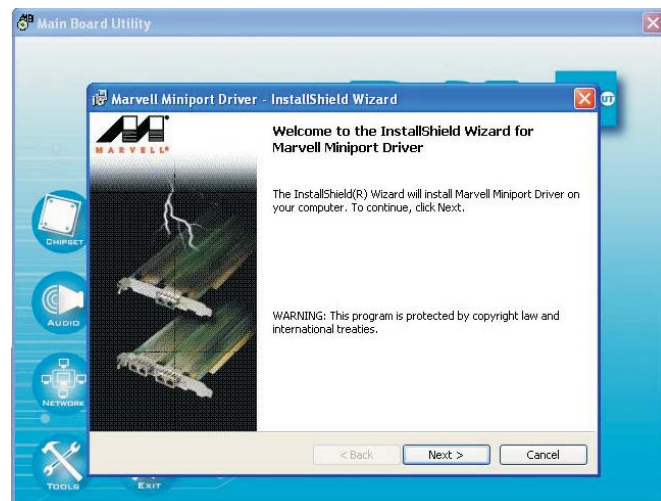

3. Read the license agreement then click “I accept the terms in the license agreement”. Click Next.




- Click Install to begin the installation.

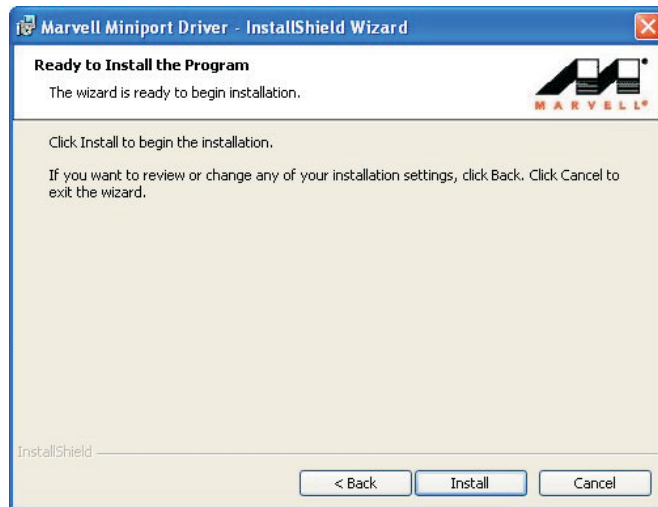

- After completing installation, click Finish to exit setup.


Reboot your system for the new software installation to take effect.

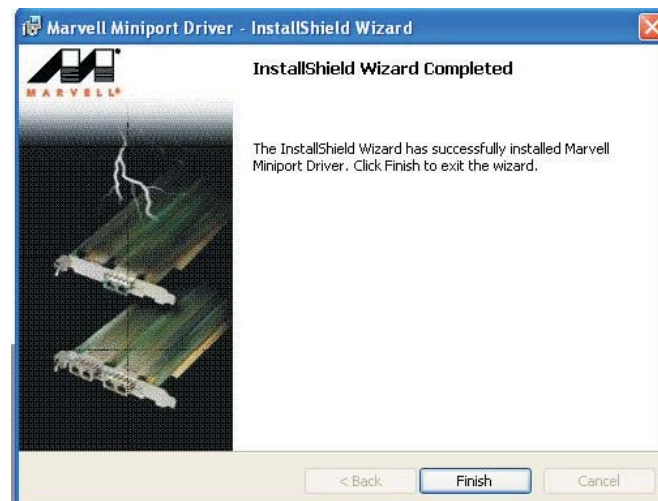


Marvell Teaming Utility

On the left side of the autorun screen, click the “NETWORK” icon.


1. Click “Marvell Teaming Utility” on the main menu.

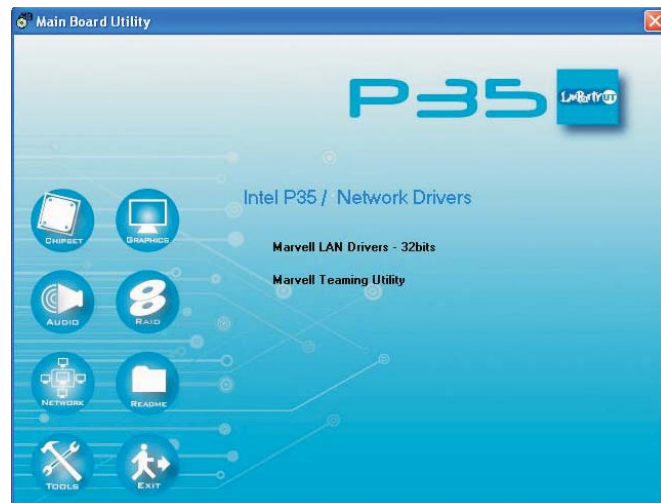

2. Setup is now preparing the wizard.

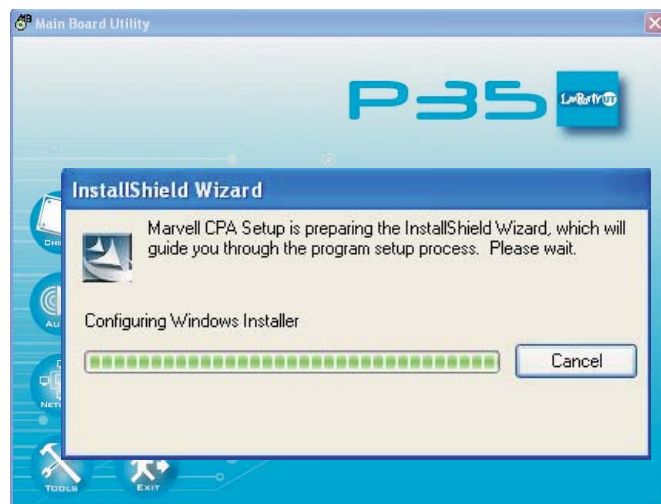


3. Setup is now ready to install the utility. Click Next.

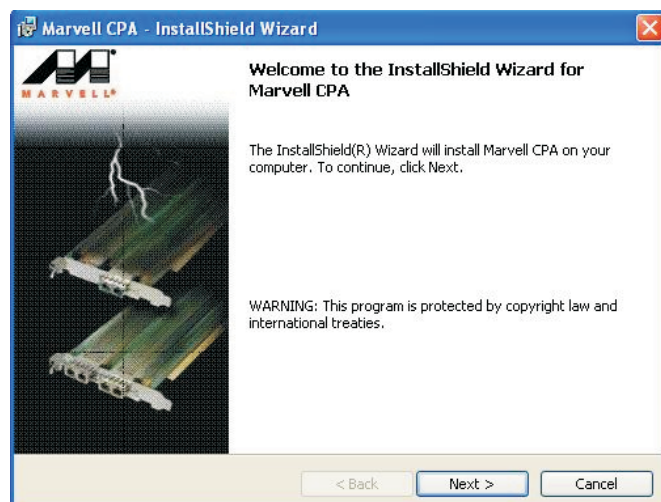


4. Read the license agreement, click "I accept the terms in the license agreement." then click Next.



5. Go through the readme document for system requirements and installation tips then click Next.

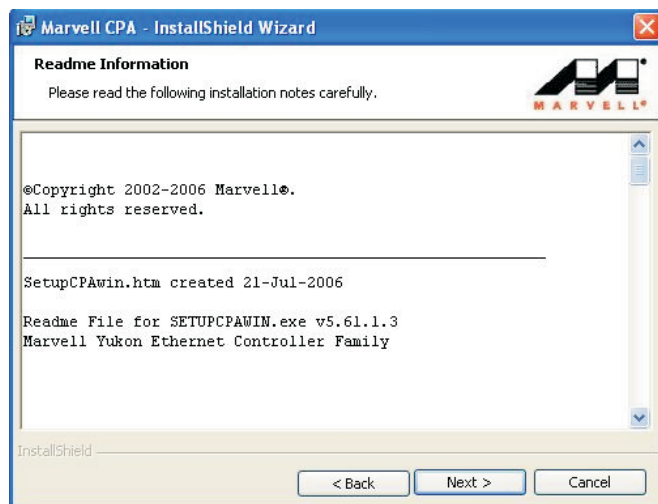

6. Click Install to begin the installation.

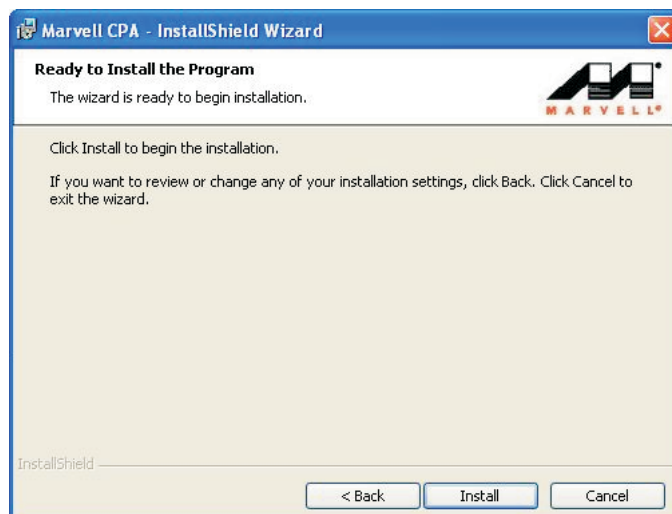

7. Click Finish.




ITE Smart Guardian


The ITE Smart Guardian utility is capable of monitoring the system's temperature, fan speed, voltage, etc. and allows you to manually set a range (Highest and Lowest Limit) to the items being monitored. If the settings/values are over or under the set range, a warning message will pop-up. The utility can also be configured so that a beeping alarm will sound whenever an error occurs. We recommend that you use the "Default Setting" which is the ideal setting that would keep the system in good working condition.

On the left side of the autorun screen, click the "TOOLS" icon.


1. Click "ITE Smart Guardian" on the main menu.

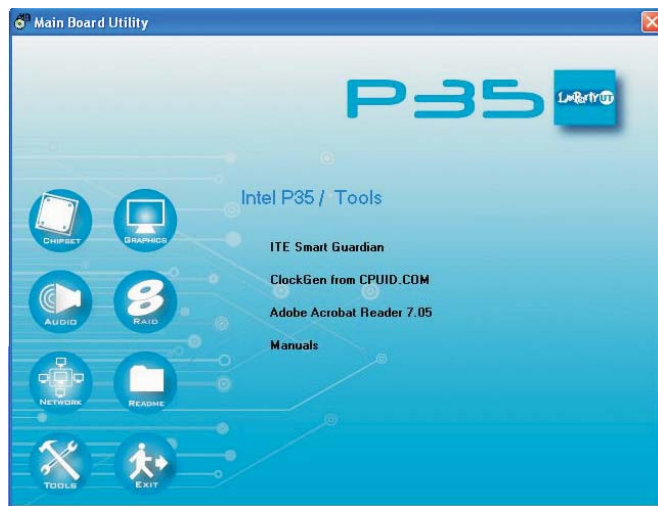


2. Setup is now ready to install the utility. Click Next.

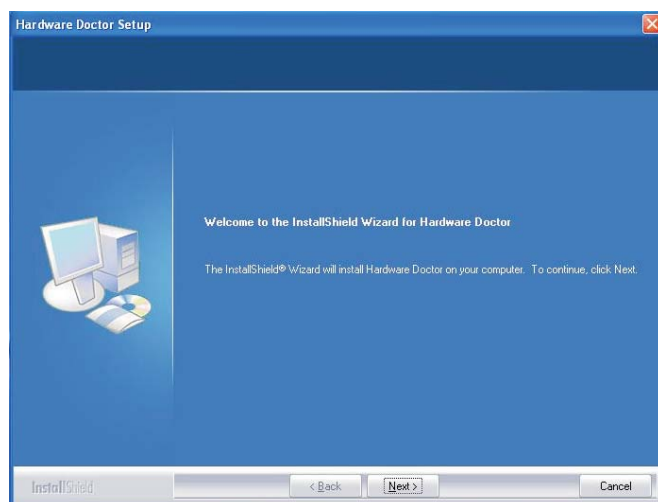


3. Fill in the necessary information then click Next..

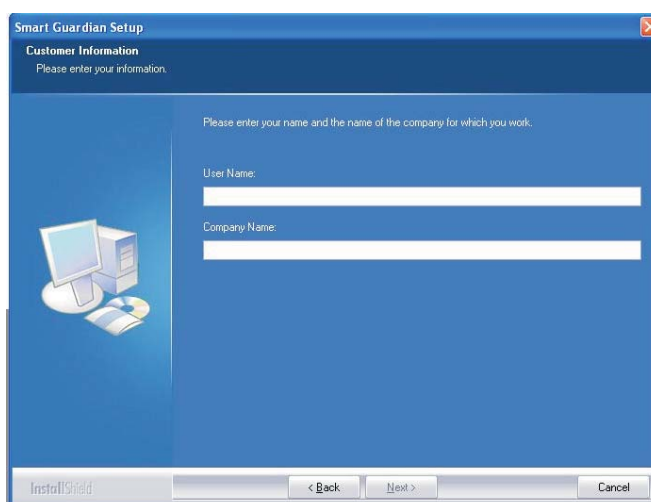

4. Click Next to install or click Browse to select another folder.

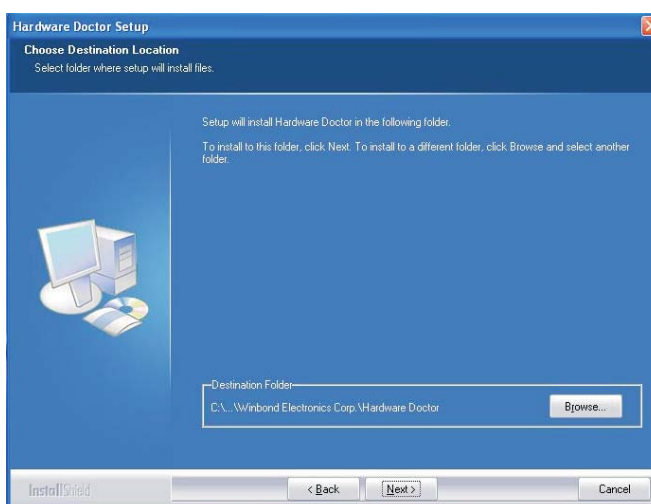


5. Select an option in accordance to the system that you are using then click Next.

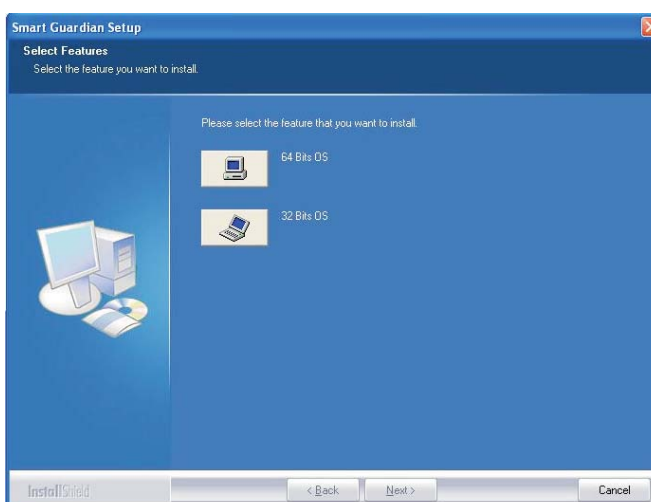

6. After completing installation, click Finish to exit setup.

Restarting the system will allow the utility to take effect.

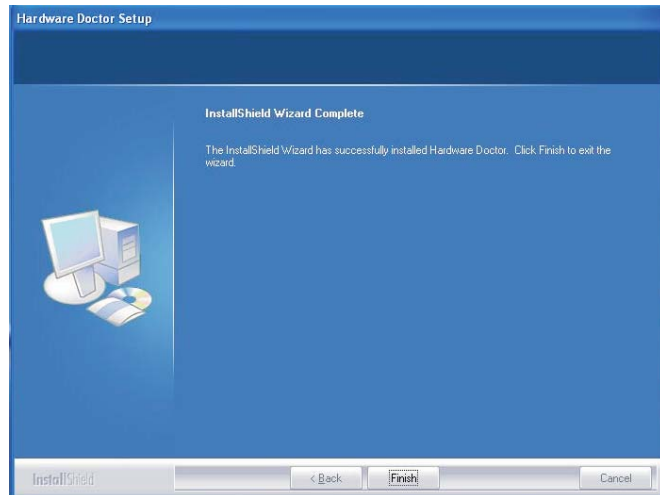

USB 2.0 Drivers

Windows® XP

If your Windows® XP CD already includes Service Pack 1, the USB 2.0 driver will automatically install when you install the operating system. If the CD does not include Service Pack 1, it is available for download at Microsoft's Windows Update website.

Windows® 2000

If your Windows® 2000 CD already includes Service Pack 4, the USB 2.0 driver will automatically install when you install the operating system. If the CD does not include Service Pack 4, it is available for download at Microsoft's Windows Update website.

Installation Notes

1. "Autorun" ONLY supports the Windows® XP and Windows® Vista operating systems. If after inserting the CD, "Autorun" did not automatically start (which is, the Mainboard Utility CD screen did not appear), please go directly to the root directory of the CD and double-click "Setup".
2. The drivers for Windows® 2000 are also included in the CD however "Autorun" is not supported for this operating system. Therefore you must manually install the drivers from the respective folders of each driver.
3. All steps or procedures to install software drivers are subject to change without notice as the softwares are occasionally updated. Please contact technical support or your sales representative for the latest version of the drivers or software applications.

Chapter 5 - RAID

The Intel ICH9R chip allows configuring RAID on Serial ATA drives connected to SATA 1 to SATA 6. It supports RAID 0, RAID 1, RAID 0+1 and RAID 5.

The JMicron JMB363 chip allows configuring RAID on another 2 Serial ATA drives (connected to SATA 7 and SATA 8). It supports RAID 0 and RAID 1.

RAID Levels

RAID 0 (Striped Disk Array without Fault Tolerance)

RAID 0 uses two new identical hard disk drives to read and write data in parallel, interleaved stacks. Data is divided into stripes and each stripe is written alternately between two disk drives. This improves the I/O performance of the drives at different channel; however it is not fault tolerant. A failed disk will result in data loss in the disk array.

RAID 1 (Mirroring Disk Array with Fault Tolerance)

RAID 1 copies and maintains an identical image of the data from one drive to the other drive. If a drive fails to function, the disk array management software directs all applications to the other drive since it contains a complete copy of the drive's data. This enhances data protection and increases fault tolerance to the entire system. Use two new drives or an existing drive and a new drive but the size of the new drive must be the same or larger than the existing drive.

RAID 0+1 (Striping and Mirroring)

RAID 0+1 is a combination of data striping and data mirroring providing the benefits of both RAID 0 and RAID 1. Use four new drives or an existing drive and three new drives for this configuration.

RAID 5


RAID 5 stripes data and parity information across hard drives. It is fault tolerant and provides better hard drive performance and more storage capacity.

Settings

To enable the RAID function, the following settings are required.

1. Connect the Serial ATA drives.
2. Configure Serial ATA in the Award BIOS.
3. Configure RAID in the RAID BIOS.
4. Install the RAID driver during OS installation.
5. Install the Intel Matrix Storage Manager
6. Install the JMB36X Driver

Step 1: Connect the Serial ATA Drives

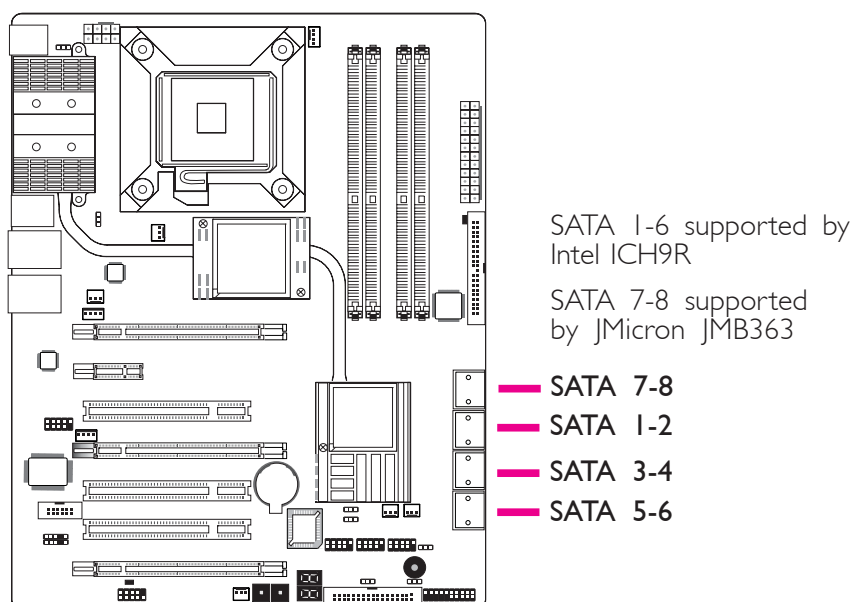

Refer to chapter 2 for details on connecting the Serial ATA drives.



Important:

1. Make sure you have installed the Serial ATA drives and connected the data cables otherwise you won't be able to enter the RAID BIOS utility.
2. Treat the cables with extreme caution especially while creating RAID. A damaged cable will ruin the entire installation process and operating system. The system will not boot and you will lost all data in the hard drives. Please give special attention to this warning because there is no way of recovering back the data.

Step 2: Configure Serial ATA in the Award BIOS

1. Power-on the system then press to enter the main menu of the Award BIOS.
2. Select the Integrated Peripherals submenu - OnChip IDE Device section of the BIOS.
3. To configure the SATA devices supported by Intel ICH9R, select "RAID" in the SATA Mode field.
4. To configure the SATA devices supported by JMicron JMB363, select "RAID+IDE" in the Onboard JMB363 field.



3. Press <Esc> to return to the main menu of the BIOS setup utility. Select "Save & Exit Setup" then press <Enter>.
4. Type <Y> and press <Enter>.
5. Reboot the system.

Step 3: Configure RAID in the RAID BIOS

Configure RAID in the Intel RAID BIOS

When the system powers-up and all drives have been detected, the Intel RAID BIOS status message screen will appear. Press the <Ctrl> and <I> keys simultaneously to enter the utility. The utility allows you to build a RAID system on Serial ATA drives.

Configure RAID in the JMicron RAID BIOS

When the system powers-up and all hard disk drives have been detected, the JMicron RAID BIOS status message screen will appear. Press the <Ctrl> and <J> keys simultaneously to enter the utility. The utility allows you to build a RAID system on Serial ATA drives.

Step 4: Install the RAID Driver During OS Installation

The RAID driver must be installed during the Windows® XP or Windows® 2000 installation using the F6 installation method. This is required in order to install the operating system onto a hard drive or RAID volume when in RAID mode or onto a hard drive when in AHCI mode.


1. Start Windows Setup by booting from the installation CD.
2. Press <F6> when prompted in the status line with the 'Press F6 if you need to install a third party SCSI or RAID driver' message.
3. Press <S> to "Specify Additional Device".
4. At this point you will be prompted to insert a floppy disk containing the RAID driver. Insert the provided RAID driver diskette.
5. Locate for the drive where you inserted the diskette then select RAID or AHCI controller that corresponds to your BIOS setup. Press <Enter> to confirm.

You have successfully installed the driver. However you must continue installing the OS. Leave the floppy disk in the floppy drive until the system reboots itself because Windows setup will need to copy the files again from the floppy disk to the Windows installation folders. After Windows setup has copied these files again, remove the floppy diskette so that Windows setup can reboot as needed.


Step 5: Install the Intel Matrix Storage Manager

The Intel Matrix Storage Manager can be installed from within Windows. It allows RAID volume management (create, delete, migrate) from within the operating system. It will also display useful SATA device and RAID volume information. The user interface, tray icon service and monitor service allow you to monitor the current status of the RAID volume and/or SATA drives. It enables enhanced performance and power management for the storage subsystem.

1. Insert the CD into a CD-ROM drive.
2. On the left side of the autorun screen, click the “CHIPSET” icon.
3. Click “Intel(R) Matrix Storage Manager” on the main menu.

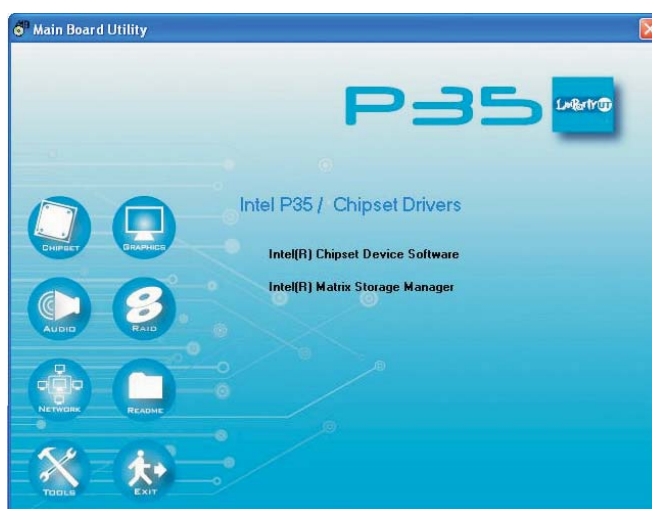


4. Setup is now ready to install the utility. Click Next.

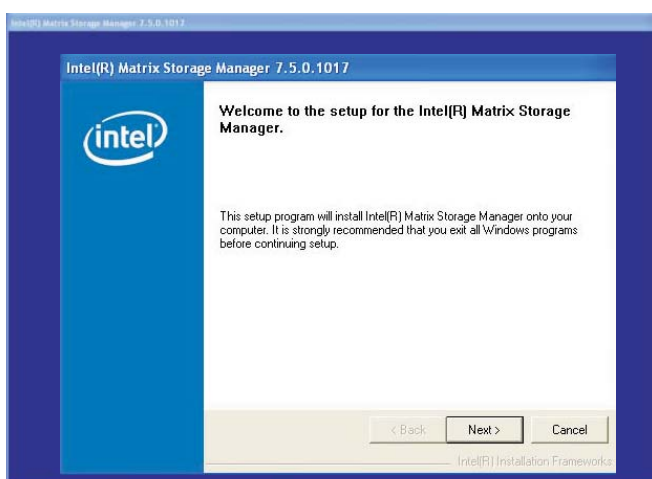


5. Read the warning carefully then click Next.



6. Read the license agreement then click Yes.

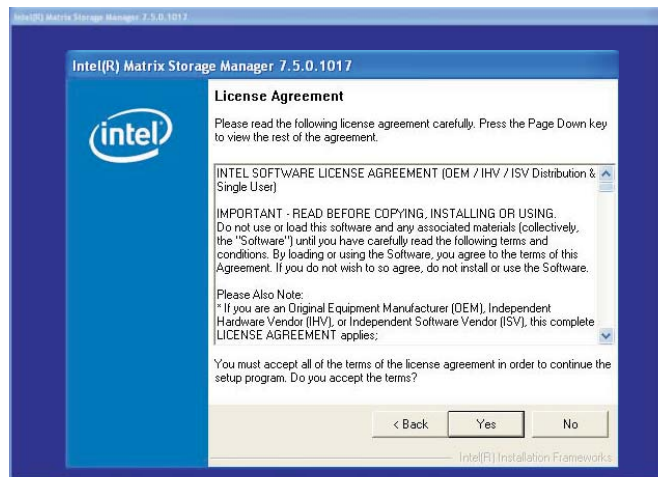

7. Go through the readme document to view system requirements and installation information then click Next.

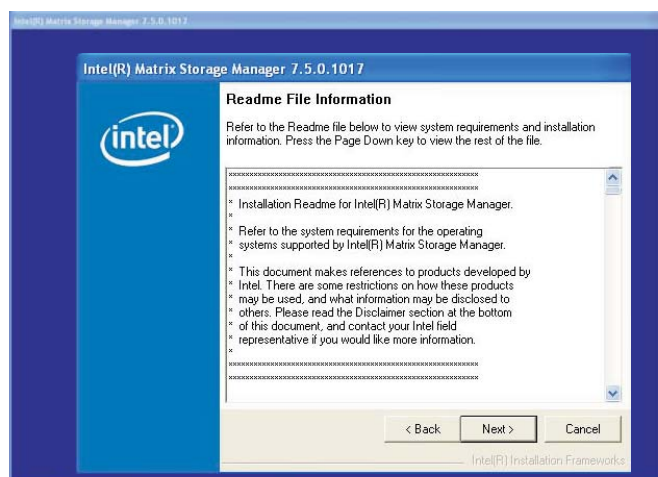


8. Follow the remainder of the steps listed on the screen; clicking "next" each time you finish a step.
9. Click Finish to complete installation and reboot the system.


Step 6: Install the JMB36X Driver

On the left side of the autorun screen, click the “RAID” icon.


1. Click “JMB36X Drivers” on the main menu.

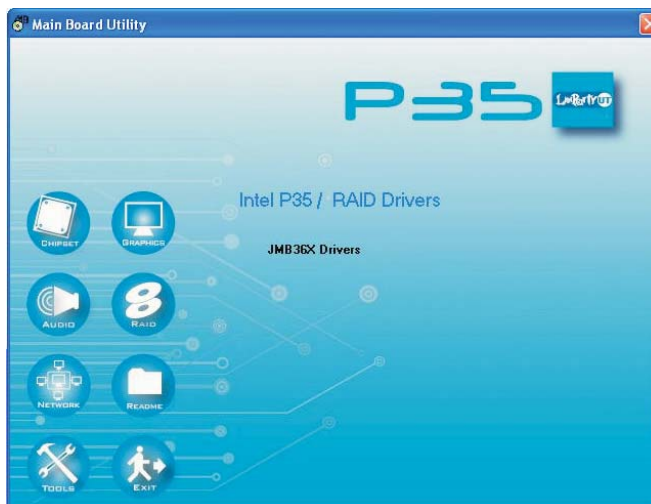


2. Setup is now ready to install the driver. Click Next.

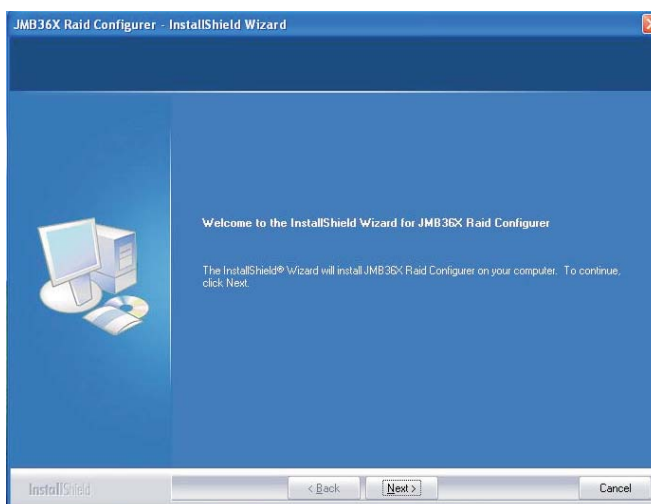

3. Click Install to begin the installation.

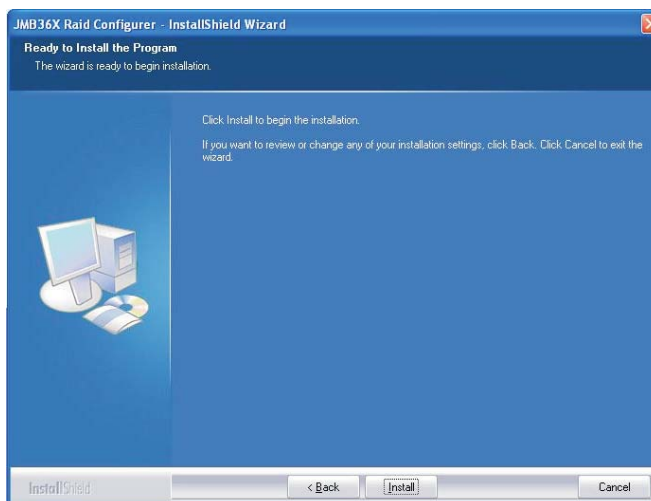


4. Setup is now installing the driver.

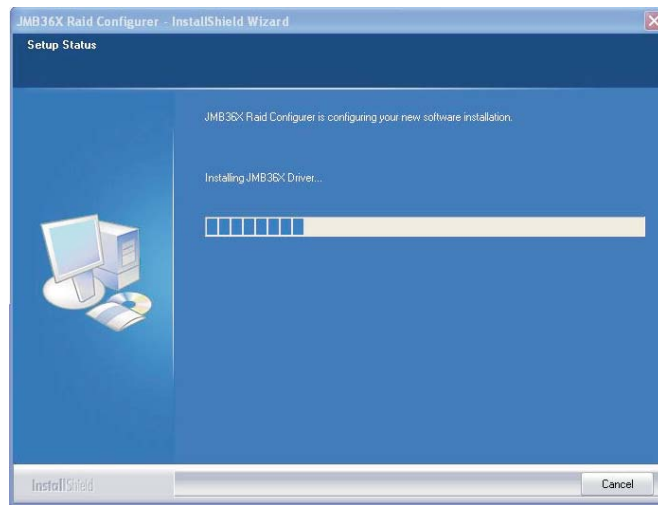

5. Follow the remainder of the steps listed on the screen; clicking “next” each time you finish a step.
6. Click “Yes, I want to restart my computer now” then click Finish.

Restarting the system will allow the new software installation to take effect.

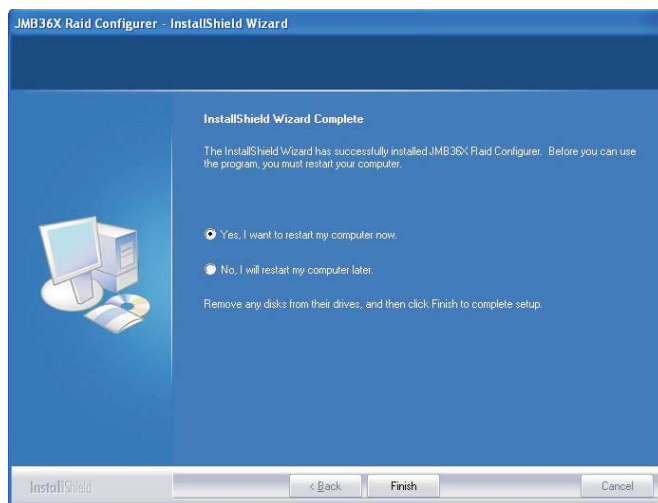


Appendix A - Enabling Hyper-Threading Technology

Enabling Hyper-Threading Technology


To enable the functionality of the Hyper-Threading Technology, please follow the requirements and steps below. Basically, the following presumes that you have already installed an Intel® Pentium® 4 Processor with Hyper-Threading Technology.

1. The system requires a minimum of 300 Watt ATX 12V power supply.
2. Aside from installing a CPU fan on the Intel® Pentium® 4 Processor with Hyper-Threading Technology, make sure to install cooling fans. The system requires adequate airflow throughout the chassis to prevent overheating the processor.
3. The “CPU Hyper-Threading” field in the Advanced BIOS Features submenu of the Award BIOS setup will appear. Make sure this field is set to Enabled.
4. Currently, only Windows® XP supports the Hyper-Threading Technology. If this OS has been previously installed, you must **REINSTALL** it.
5. After installing Windows® XP, please check the following to ensure that the operating system has been properly installed.
 - a. Click Start, point to Settings then click Control Panel.
 - b. Double-click the System icon. The System Properties dialog box will appear.

- c. Click the General tab. The processor shown under Computer should resemble the one shown below.

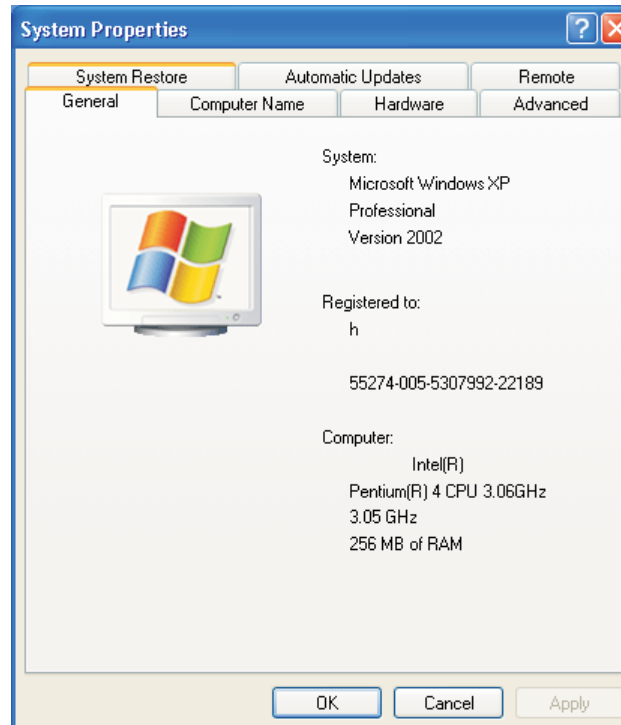


- d. Now click the Hardware tab then click Device Manager. The items shown under Computer and Processors should resemble the ones shown below.

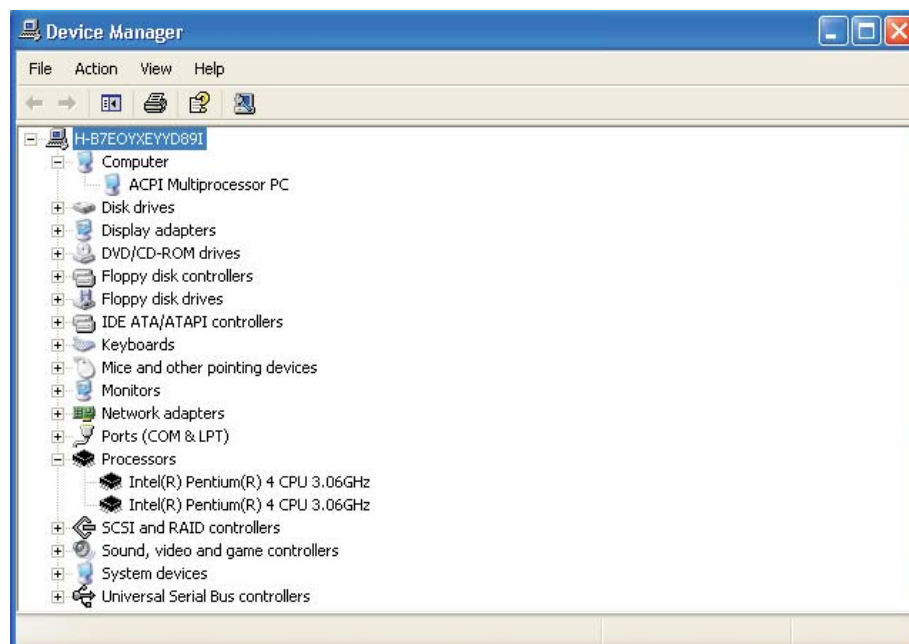

Enabling Hyper-Threading Technology

- e. Lastly, press the <Ctrl> <Alt> and keys simultaneously. The Windows Task Manager dialog box will appear. Click the Performance tab. The diagram under CPU Usage History should resemble the one shown below.

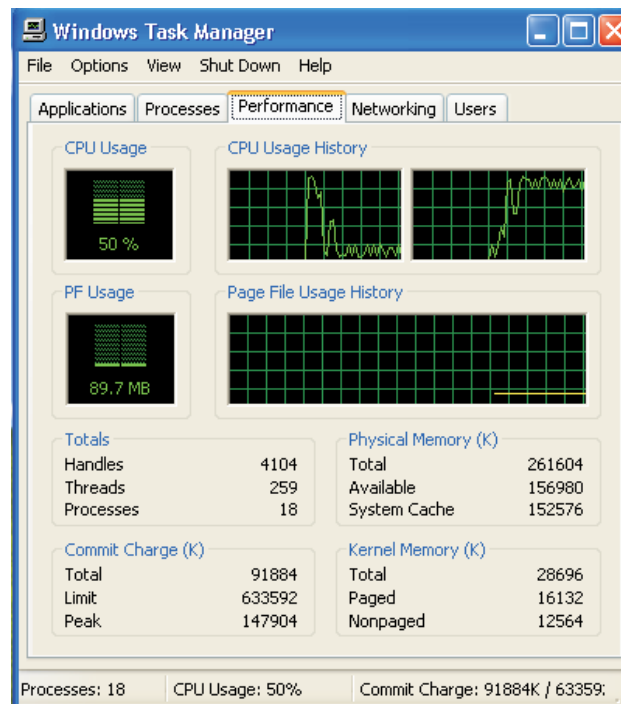

Appendix B - System Error Message

When the BIOS encounters an error that requires the user to correct something, either a beep code will sound or a message will be displayed in a box in the middle of the screen and the message, PRESS F1 TO CONTINUE, CTRL-ALT-ESC or DEL TO ENTER SETUP, will be shown in the information box at the bottom. Enter Setup to correct the error.

Error Messages

One or more of the following messages may be displayed if the BIOS detects an error during the POST. This list indicates the error messages for all Awards BIOSes:

CMOS BATTERY HAS FAILED

The CMOS battery is no longer functional. It should be replaced.



Caution:

Danger of explosion if battery incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the battery manufacturer's instructions.

CMOS CHECKSUM ERROR

Checksum of CMOS is incorrect. This can indicate that CMOS has become corrupt. This error may have been caused by a weak battery. Check the battery and replace if necessary.

DISPLAY SWITCH IS SET INCORRECTLY

The display switch on the motherboard can be set to either monochrome or color. This indicates the switch is set to a different setting than indicated in Setup. Determine which setting is correct, either turn off the system and change the jumper or enter Setup and change the VIDEO selection.

FLOPPY DISK(S) fail (80)

Unable to reset floppy subsystem.

FLOPPY DISK(S) fail (40)

Floppy type mismatch.

Hard Disk(s) fail (80)

HDD reset failed.

Hard Disk(s) fail (40)

HDD controller diagnostics failed.

Hard Disk(s) fail (20)

HDD initialization error.

Hard Disk(s) fail (10)

Unable to recalibrate fixed disk.

Hard Disk(s) fail (08)

Sector Verify failed.

Keyboard is locked out - Unlock the key

The BIOS detects that the keyboard is locked. Keyboard controller is pulled low.

Keyboard error or no keyboard present

Cannot initialize the keyboard. Make sure the keyboard is attached correctly and no keys are being pressed during the boot.

Manufacturing POST loop

System will repeat POST procedure infinitely while the keyboard controller is pull low. This is also used for the M/B burn in test at the factory.

BIOS ROM checksum error - System halted

The checksum of ROM address F0000H-FFFFFFH is bad.

Memory test fail

The BIOS reports memory test fail if the memory has error(s).

Appendix C - Troubleshooting

Troubleshooting Checklist

This chapter of the manual is designed to help you with problems that you may encounter with your personal computer. To efficiently troubleshoot your system, treat each problem individually. This is to ensure an accurate diagnosis of the problem in case a problem has multiple causes.

Some of the most common things to check when you encounter problems while using your system are listed below.

1. The power switch of each peripheral device is turned on.
2. All cables and power cords are tightly connected.
3. The electrical outlet to which your peripheral devices are connected is working. Test the outlet by plugging in a lamp or other electrical device.
4. The monitor is turned on.
5. The display's brightness and contrast controls are adjusted properly.
6. All add-in boards in the expansion slots are seated securely.
7. Any add-in board you have installed is designed for your system and is set up correctly.

Monitor/Display

If the display screen remains dark after the system is turned on:

1. Make sure that the monitor's power switch is on.
2. Check that one end of the monitor's power cord is properly attached to the monitor and the other end is plugged into a working AC outlet. If necessary, try another outlet.
3. Check that the video input cable is properly attached to the monitor and the system's display adapter.
4. Adjust the brightness of the display by turning the monitor's brightness control knob.

The picture seems to be constantly moving.

1. The monitor has lost its vertical sync. Adjust the monitor's vertical sync.
2. Move away any objects, such as another monitor or fan, that may be creating a magnetic field around the display.
3. Make sure your video card's output frequencies are supported by this monitor.

The screen seems to be constantly wavering.

1. If the monitor is close to another monitor, the adjacent monitor may need to be turned off. Fluorescent lights adjacent to the monitor may also cause screen wavering.

Power Supply

When the computer is turned on, nothing happens.

1. Check that one end of the AC power cord is plugged into a live outlet and the other end properly plugged into the back of the system.
2. Make sure that the voltage selection switch on the back panel is set for the correct type of voltage you are using.
3. The power cord may have a "short" or "open". Inspect the cord and install a new one if necessary.

Floppy Drive

The computer cannot access the floppy drive.

1. The floppy diskette may not be formatted. Format the diskette and try again.
2. The diskette may be write-protected. Use a diskette that is not write-protected.
3. You may be writing to the wrong drive. Check the path statement to make sure you are writing to the targeted drive.
4. There is not enough space left on the diskette. Use another diskette with adequate storage space.

Hard Drive

Hard disk failure.

1. Make sure the correct drive type for the hard disk drive has been entered in the BIOS.
2. If the system is configured with two hard drives, make sure the bootable (first) hard drive is configured as Master and the second hard drive is configured as Slave. The master hard drive must have an active/bootable partition.

Excessively long formatting period.

If your hard drive takes an excessively long period of time to format, it is likely a cable connection problem. However, if your hard drive has a large capacity, it will take a longer time to format.

Parallel Port

The parallel printer doesn't respond when you try to print.

1. Make sure that your printer is turned on and that the printer is on-line.
2. Make sure your software is configured for the right type of printer attached.
3. Verify that the onboard LPT port's I/O address and IRQ settings are configured correctly.
4. Verify that the attached device works by attaching it to a parallel port that is working and configured correctly. If it works, the printer can be assumed to be in good condition. If the printer remains inoperative, replace the printer cable and try again.

Serial Port

The serial device (modem, printer) doesn't output anything or is outputting garbled characters.

1. Make sure that the serial device's power is turned on and that the device is on-line.
2. Verify that the device is plugged into the correct serial port on the rear of the computer.

3. Verify that the attached serial device works by attaching it to a serial port that is working and configured correctly. If the serial device does not work, either the cable or the serial device has a problem. If the serial device works, the problem may be due to the onboard I/O or the address setting.
4. Make sure the COM settings and I/O address are configured correctly.

Keyboard

Nothing happens when a key on the keyboard was pressed.

1. Make sure the keyboard is properly connected.
2. Make sure there are no objects resting on the keyboard and that no keys are pressed during the booting process.

System Board

1. Make sure the add-in card is seated securely in the expansion slot. If the add-in card is loose, power off the system, re-install the card and power up the system.
2. Check the jumper settings to ensure that the jumpers are properly set.
3. Verify that all memory modules are seated securely into the memory sockets.
4. Make sure the memory modules are in the correct locations.
5. If the board fails to function, place the board on a flat surface and seat all socketed components. Gently press each component into the socket.
6. If you made changes to the BIOS settings, re-enter setup and load the BIOS defaults.