# MITSUBISHI DEHUMIDIFIER

## MODEL MJ-E16AX-H

# **INSTRUCTION MANUAL**

#### Features

- Supplement Air for Drying Indoors
- Drying inside
- Air Filter and Silver Ion Sterilizing and Deodorizing Filter
- Easy Dehumidifying · Intelligent Laundry



| Table of Contentspage  |                       |
|--|-----------------------|
| <ul> <li>Recommended ways of using the unit depending on purpose</li></ul> | Before using the unit |
| <ul> <li>Turning the Unit ON and OFF</li></ul>                             | Operating             |
| Maintenance  | Troubleshooting       |

- In order to ensure correct usage, please read this instruction manual carefully and retain it for future reference.
- Before accepting the Warranty at the time of purchase, please make sure that the date of purchase, place of purchase and other items are correctly filled in the form.




Protect our environment and enrich our lives by saving energy

ш


English

# **Recommended ways of using the unit depend**

Combine operating mode and swing louvre function to get optimum results.

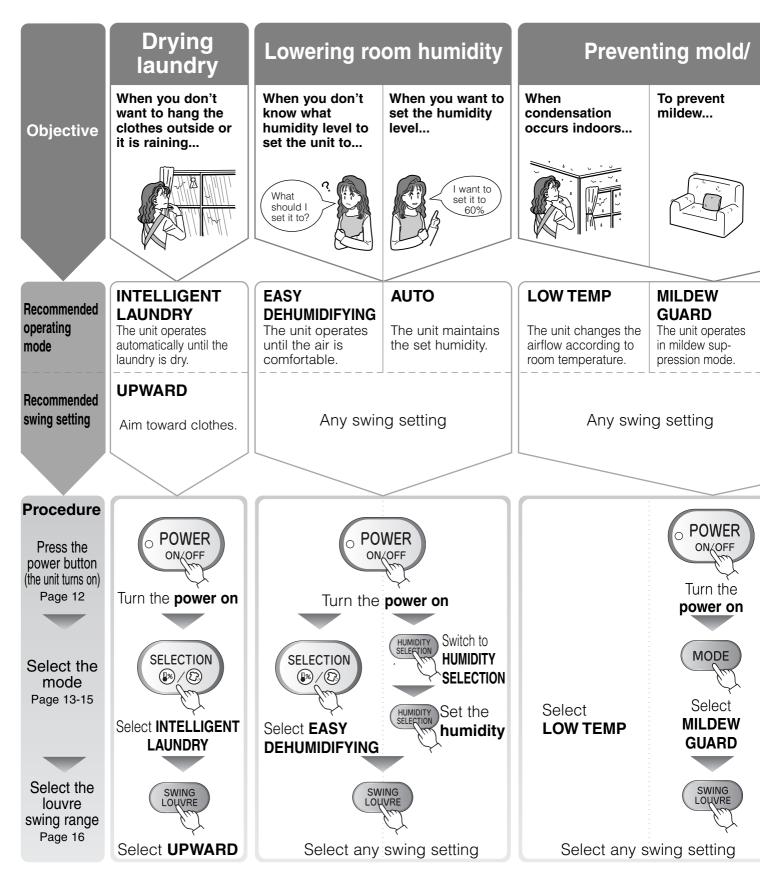

# ing on purpose

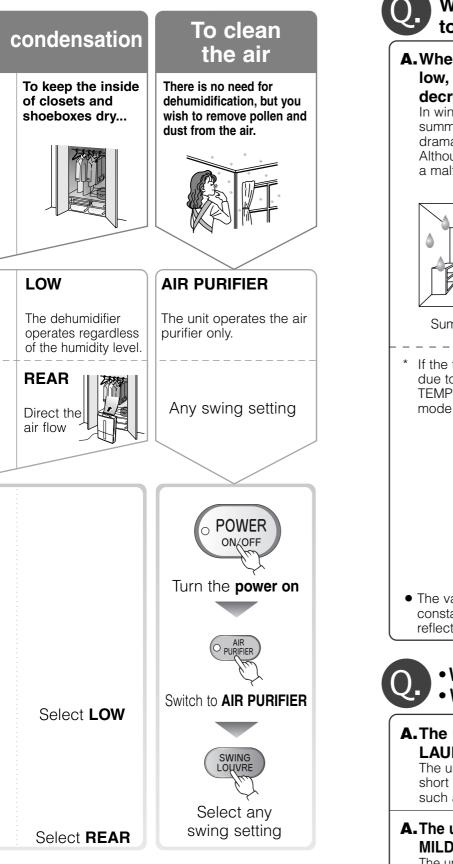

# **Frequently Asked Questions**


#### Q. Why to co

# Why does the dehumidifier seem to collect less water in winter?

# **A.** When the temperature and humidity are low, the amount of water collected is decreased.

In winter, because the temperature is lower than in summer, the effects of the dehumidifier decrease dramatically as shown in the graph below. Although less water collects in the tank, this is not a malfunction.




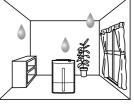

Summer (humidity)

Winter (dampness)

\* If the temperature is low, but the humidity is high due to snow or rain, operating the unit in LOW TEMP mode will yield better results than in LOW mode.

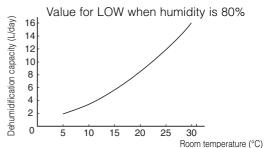

- The values shown on the graph were measured at constant temperature and humidity and do not reflect values obtained in actual usage conditions.
  - Why doesn't the dehumidifier operate?Why does the unit stop operating suddenly?

#### A.The unit might be in INTELLIGENT LAUNDRY mode. The unit may sometimes stop operation after just a short amount of time as a result of conditions such as the room temperature and humidity. 13

#### A. The unit might be in EASY DEHUMIDIFYING, MILDEW GUARD, or AUTO mode.

The unit automatically switches between dehumidifying, airflow only, and non-operation. 13-15

# Precautions


The following diagrams indicate circumstances where danger can result from mishandling the unit.




cord.)

Mishandling may result in fatal or serious injuries.

Meanings of the graphic symbols used in this manual and on the unit are explained below.

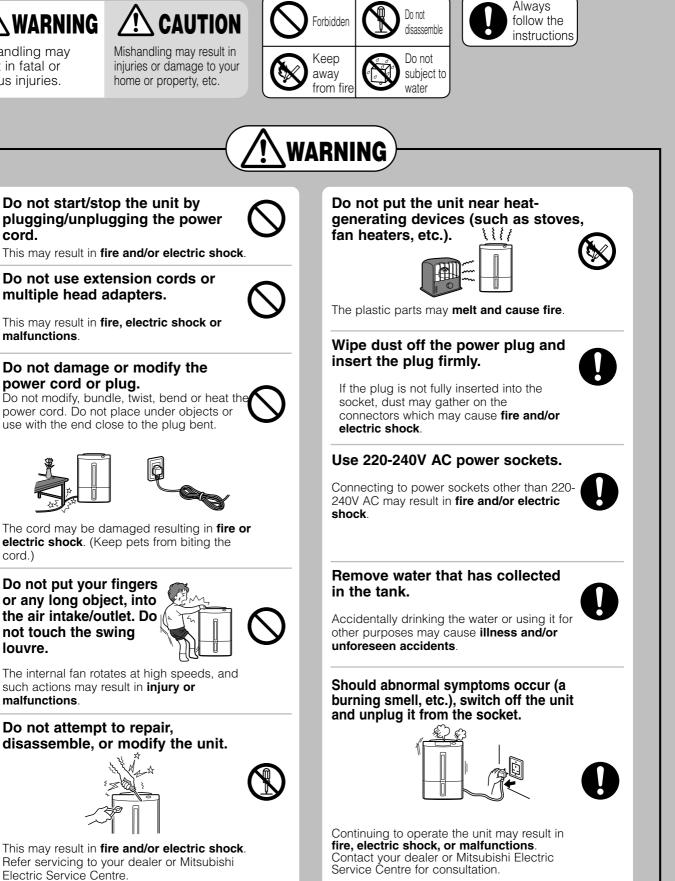

# CAUTION

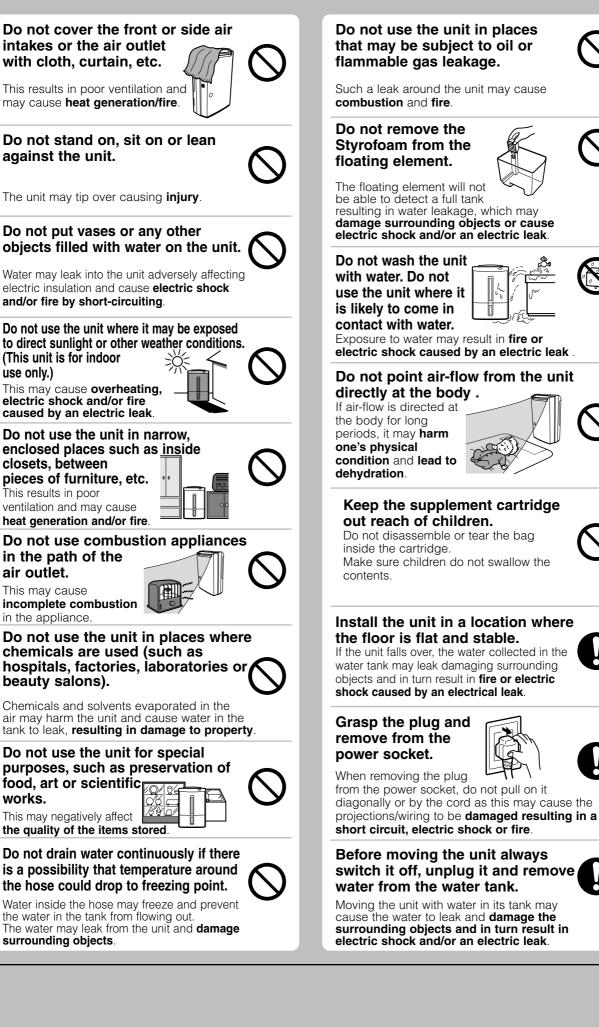

use only.)

air outlet.

works.

# **Precautions (cont.)**

# **A**CAUTION

#### After emptying the tank, transport the unit by grasping the handle firmly.



Losing your footing while carrying the unit may cause **personal injury or damage to the floor**.

When using the continuous drainage outlet, make sure to position the hose so that the water drains without obstruction.



The water in the tank may leak and damage surrounding objects.

When draining water continuously or left unattended for long periods, inspect the unit every two weeks.

Do not allow debris to clog the filter/hose as this may cause **over-heating/leakage**.

Use the unit with caution in rooms where the walls, furniture and art work are vulnerable to dry air, as it may cause cracks and warping.

Switch the unit off and unplug from the power source when cleaning it.



When the unit is on, the internal fan rotates at high speeds and may cause **injury**.

Unplug the unit from the power source when not using the unit for an extended period of time.

Otherwise it may cause fire and/or electric shock caused by an electric leak.

# Tips on dehumidifying

#### Drain the water tank before use

**R**efrain from opening doors/windows during operation

## Drying laundry indoors

Direct the louvres at the laundry.
 Space laundry to improve airflow.
 Inserting the deprint of the space local to the space loc

# Maintain room temperature above 16°C with a heater


- Drying times will vary depending on the nature of the laundry and the room temperature.
- The airflow is strongest to the top right of the unit.

## Installing your dehumidifier

Make sure to leave some space around the unit.

<For use in close proximity to At least

a wall> Stop the louvre in the vertical position. Blowing air at the wall may cause staining.

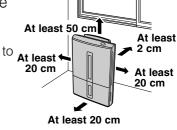

## **O**perating noise

Place the unit on top of a mat. This reduces vibration and noise. It also prevents leaving depressions on carpets.


# Warning

- Keep the unit always in an upright position. Inclining the unit may cause water in the tank to leak into the unit, **resulting in malfunction**. Should this happen contact service number on the last page for advice.
- Damage to the dehumidifier caused by atmospheric conditions (ie. Salt or Sulphur) will not be covered under warranty.
- Do not carry the unit horizontally. This may result in malfunctions.


Such malfunctions are NOT covered under warranty.





# **Names and Functions of Parts**

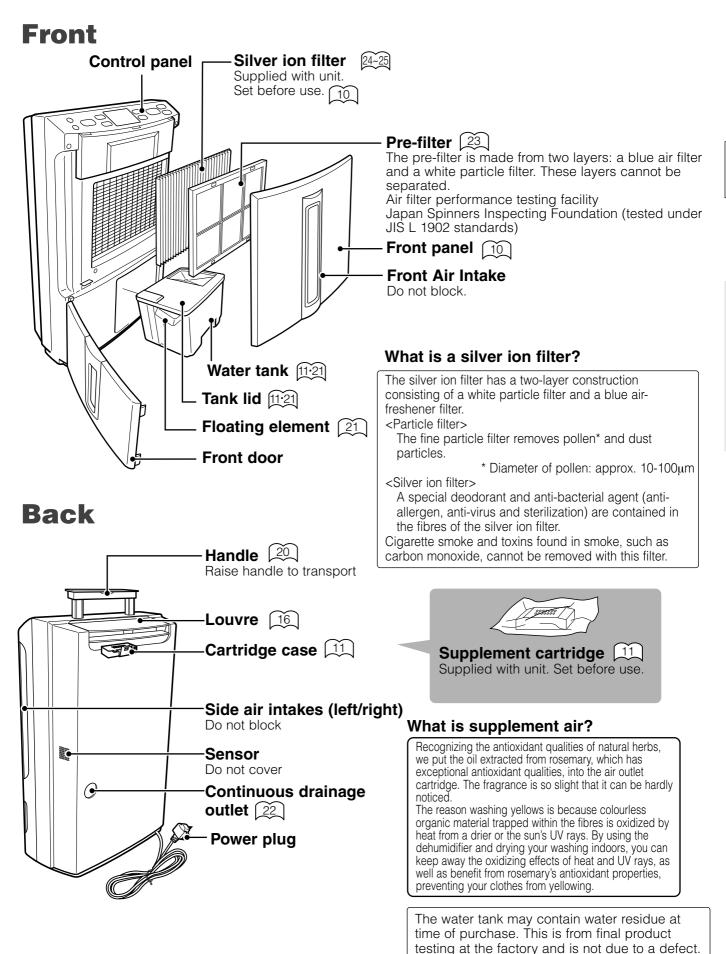

## **Control Panel**

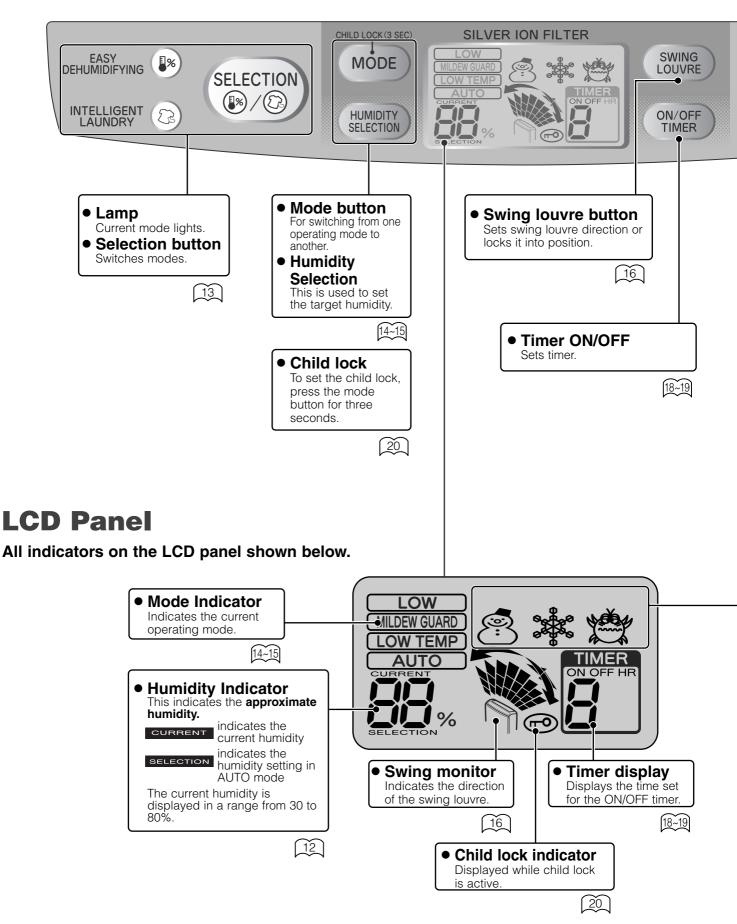

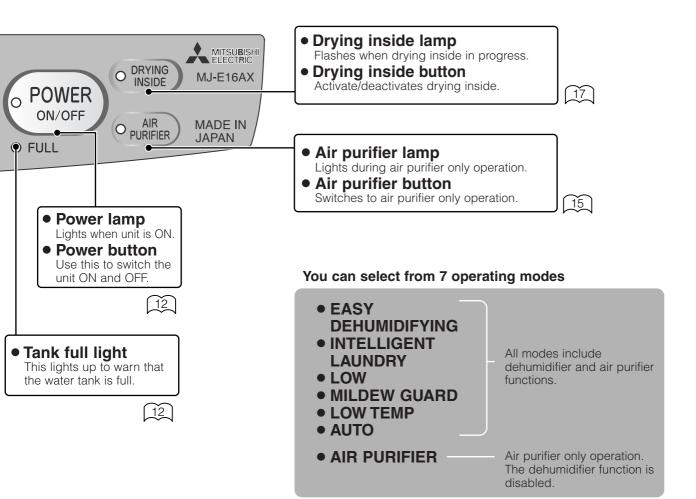

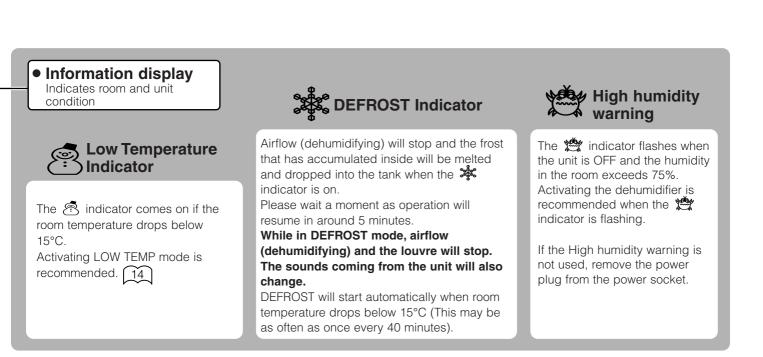

#### Room temperature may rise 2-4°C during operation

The dehumidifier does not have a cooler function. Due to heat produced during operation, the room temperature may rise 2-4°C. As a result, the unit may blow warm air, but this is not due to a malfunction.During winter, the air may not feel warm as the temperature is below body temperature.

#### How does the dehumidifier work?


If you pour cold water into a cup, the air around it becomes cold, causing water droplets to form on the surface of the cup.

The dehumidifier takes advantage of this phenomenon to remove moisture from the air.

- (1) The unit draws air from the room, cools it with its cooling coil, causing the moisture to transform into water droplets.
- (2) The water droplets fall into the water tank.
- (3) The dehumidified air is reheated by the heating coil, and then discharged.

The humidity of the room is thus reduced by repeating steps (1), (2), and (3).

Dried (warm) air

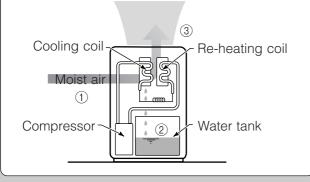

#### The humidity reading on the unit may differ from a hygrometer in the same room

Even in the same room, temperature and humidity levels may differ from place to place. If the hygrometer and the unit are in different parts of the room, the humidity levels are prone to differ. Moreover, humidity levels differ between places that have good and no airflow.

Use the reading on the unit as an estimate.




## Setting the silver ion filter

The silver ion filter is supplied with the unit at time of purchase. Fit silver ion before using the unit.

#### Remove the silver ion filter from the polyethylene bag.




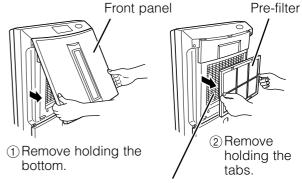

Performance is unaffected even if the metal fins inside the main unit are slightly bent.

**3** Fit the silver ion filter into the pre-filter.

With the strips facing up, set the silver ion filter inside the tabs on the prefilter.

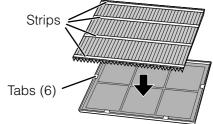







(1) Attach holding the tabs.


(2) Hook the top edge to the top part of the unit and push the bottom in.


# Setting the supplement cartridge


The unit disperses antioxidants during dehumidifier and air purifier operation by setting the supplement cartridge.

#### Remove the case.


2

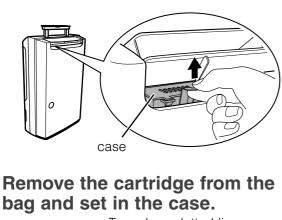

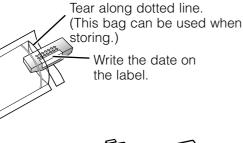

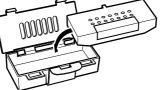

# Inserting the water tank correctly

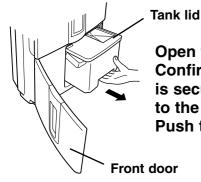

Open the front door. Confirm that the lid is securely attached to the water tank. Push the tank in.

# 1 Set the case. 2 Move the louvre manually and see if it does not hit the cartridge. Image: Imag

Set the case in the unit.

- The unit can be operated without the cartridge.
   The unit can be operated with an expired cartridge, but will lack antioxidant properties.
   The herbal oil used in the cartridge is only alight fragment, and is hard to detect.
- slight fragrant, and is hard to detect.
  Use the original bag when storing the cartridge after a short use (1-2 months).

**Cartridge life** 


Information

Replace the cartridge after 6 months (not including the time it is stored in the bag). Replacement cartridges available for purchase. Only the cartridge is replaced. Do not throw away the case.



Keep the supplement cartridge out reach of children. Do not disassemble or tear the bag inside the cartridge. Make sure children do not swallow the contents.

## Plug the power cord into the power socket

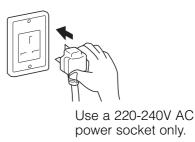


• The current humidity level is indicated.

If the louvre is open, it closes automatically.

# **Turning the Unit ON and OFF**

# To turn ON

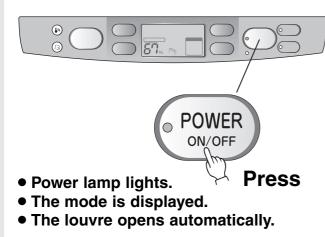

To start dehumidifying, select the desired mode. 13-15

The dehumidifier does not activate for 3 minutes when the unit is turned ON immediately after turning it OFF or plugging it into the power socket. (In order to protect the compressor.) When dehumidifying begins, the operational noise increases.

The dehumidifier remembers the operating mode. Even if the plug is disconnected or the power turned off, the unit restarts at the previous setting.

## To turn OFF



 Power lamp turns off.
 The Mode Indicator goes out.

Drying inside will commence if it has been activated. 17

If the room temperature falls below 15°C, defrosting mode is activated once every 40 minutes (for about 5 minutes) causing water to drain to the tank.

- The unit can operate in a room temperature range of 1-35°C. However, if the room temperature exceeds 35°C, the unit may operate in blower mode or increase the airflow. This is because the temperature within the unit rises causing the protection mechanism to operate. In order to lower the temperature within the unit, when using the louvre, point UPWARD.
  - If the temperature is below 1°C, the extracted water is close to freezing disabling the dehumidifier, and only the blower is operational.


#### Reading the humidity display CURRENT indicates the Example current humidity. Current humidity range is between 30-80%. 1% • Humidity levels below 30% are displayed as 30%. Humidity levels above 80% are displayed as 80%. Example SELECTION indicates set humidity level 8 15 (Automatic mode only) Tank full lamp The unit automatically shuts down and indicates with the lamp and sound that the water tank is full. Empty the water tank. 21 • Tank full lamp lights. (The unit beeps continuously). • Air flows stops (louvre stops). • Swing monitor turns off. • Compressor turns off. • After removing the water and replacing the tank, the Tank full lamp will go off, and the unit will automatically return to operation mode.

• When the Tank full lamp is lit, no operation but ON/OFF is possible.

Information

# **Easy Operation**


The unit automatically monitors room temperature/humidity alleviating the necessity to make minor adjustments. Use EASY DEHUMIDIFYING for dehumidifying a room and INTELLIGENT LAUNDRY for drying clothes.

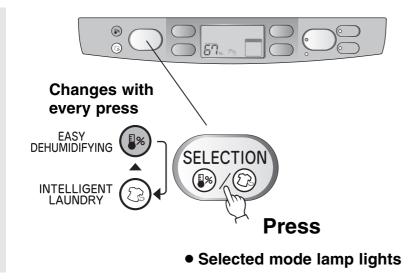

#### • EASY DEHUMIDIFYING

The unit operates intermittently controlling the airflow to remove the damp feeling in the air. (There is no need to set the humidity level.) When the room temperature is high, the blower operates to decrease the damp feeling.

The airflow or louvre operation may stop according to the humidity level.

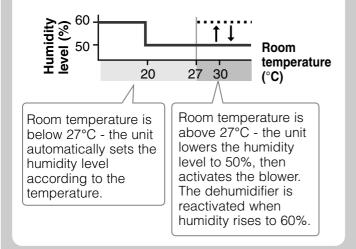

## • INTELLIGENT LAUNDRY

The unit controls the airflow rate while monitoring the humidity in the room, and automatically stops operation when the laundry is dry. (This eliminates the need to make minor changes to the humidity and operating time settings depending on the amount of laundry.) Operation is performed for a maximum of approximately 12 hours.


Drain the tank before use. The unit may stop before the laundry dries because of a full tank. Do not use in conjunction with the OFF timer. The timer may turn the unit off before the laundry dries. If the room temperature is approximately 5°C or less, the operation stops for around Information 1 hour. If the room temperature is low, it becomes difficult for water to evaporate from the laundry, because the humidity does not change. Use a heater in combination with the unit in order to raise the room temperature to approximately 16°C or more. The following conditions prevent clothes from drying well: Room temperature below 15°C, large volume of laundry; laundry not spaced well; clothes of thick fabric and spacious room. \_ð\_`

Information Pressing Humidity Selection switch while in EASY DEHUMIDIFYING or INTELLIGENT LAUNDRY mode changes the mode to AUTO.

# **Setting modes**

## LOW, MILDEW GUARD and LOW TEMP


LOW mode is for when you want to leave the dehumidifier on. MILDEW GUARD mode suppresses mildew growth. LOW TEMP mode is for preventing condensation or when the room temperature is low.

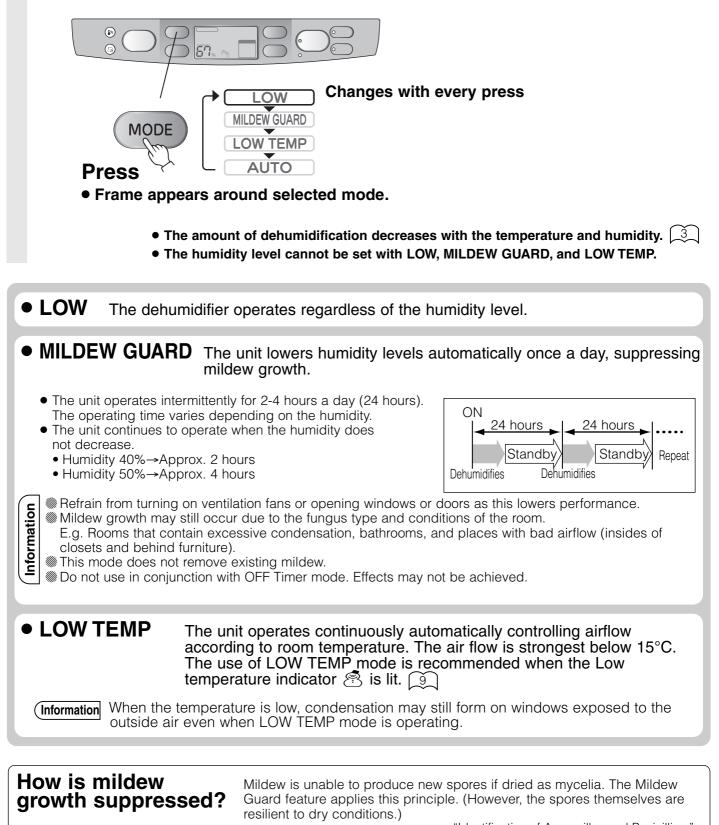

"Identification of Aspergillus and Penicillium" <Research paper by Dr. K. Abe of the Environmental Biology Research Center>

## AUTO

When you want to set the humidity level.

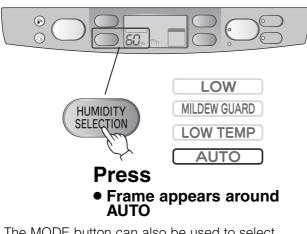

The MODE button can also be used to select AUTO.

#### • AUTO

#### The unit maintains the humidity level by automatically controlling airflow and operating intermittently as necessary. All you have to do is set the humidity level.

- The unit turns off when current humidity decreases past the set humidity level, and restarts when the level is exceeded. (airflow and louvre stops)
- The unit operates for 6 minutes continuously regardless of the humidity level immediately after turning the power on.

Information

Frequent use of exits and room size/conditions may cause the humidity to not reach the set level.

# <To view set humidity level/ To set humidity level>



HUMIDITY

SELECTION

Press

again

 Pressing the button once displays the set humidify level with

the **SELECTION** indicator. After 3 seconds, the display ratures


display returns to the current humidity display.

• Pressing the button while **SELECTION** is displayed sets the humidity level. Each time the button is pressed, the humidity setting changes.

 $70 \rightarrow 65 \rightarrow 60 \rightarrow 55 \rightarrow 50$ 

## **AIR PURIFIER**

To operate only the air purifier.

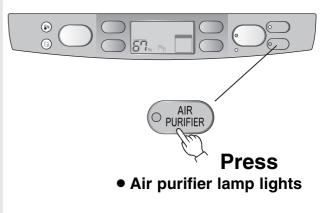

To return to the previous mode, press the air purifier button again.

#### • AIR PURIFIER The unit cleans the air by passing it through the pre-filter and silver ion filter. The dehumidifying function is disabled.




The air passes through the silver ion filter in all modes, cleaning the air even if the air purifier lamp is not lit.

Cigarette smoke and toxins found in smoke, such as carbon monoxide, cannot

be removed with these filters.

Swing louvre function (how to read the swing monitor)

The louvre can be made to swing. Select from the 4 possible settings to suit the purpose.

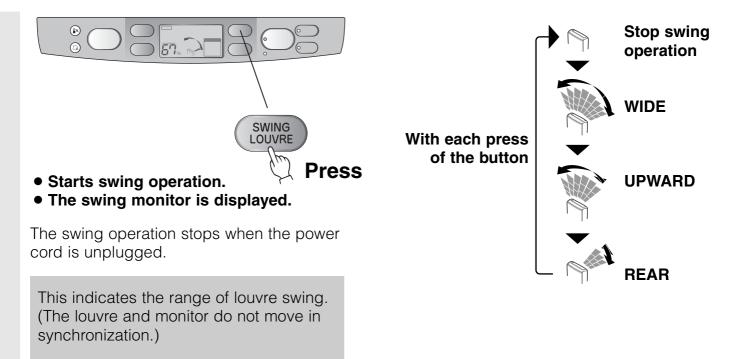

| Objective                                     | Recommended swing setting                    |  | Explanations of the swing modes   |  |
|---|--|--|---|--|
| To stop the<br>louvre at the<br>desired angle | <ul> <li>Stop swing<br/>operation</li> </ul> |  | <ul> <li>The louvre stops in a vertical position.</li> <li>The swing monitor turns off.</li> <li>To change the louvre to a desired angle, wait until the louvre stops, then adjust by hand.</li> </ul>  |  |
| To cover the<br>entire room                   | • WIDE                                       |  | The louvre swings from the UPWARD position through to the REAR position.  |  |
| For drying clothes, etc.                      | • UPWARD                                     |  | Swing speed is automatically controlled to send<br>at washing from all angles.<br>The louvre moves slowly through<br>the last 30° of the swing, as the<br>time taken to traverse the rear and<br>is shorter than that for the upward<br>arc when moving at a constant<br>speed. |  |
| For directing<br>air into a<br>closet         | ● REAR                                       |  |   |  |

The louvre may stop up to a maximum of 8 seconds to correct its position, after which it will start moving again.

If the louvre is knocked out of the desired angle, readjust by following the above steps.

Stop the louvre in the vertical position when using the unit against a wall. Blowing air at the wall may cause staining.


nformation

# **Drying inside**

The inside of the unit can be dried to suppress mildew growth on the cooler. On days the dehumidifier is used, drying inside is recommended.

## **Automatic operation**

To activate drying inside after every use.

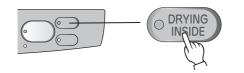

#### Press while the unit is on

#### • Drying inside standby

(Drying inside lamp lit)

#### Drying inside starts when operation ends

When the unit is turned off, INTELLIGENT LAUNDRY mode ends, or the OFF timer ends.

#### • Drying inside starts

The Drying inside lamp flashes, the humidity indicator turns off, and the louvre stops in the vertical position.

Drying inside mode

#### Drying inside ends


The Drying inside lamp turns off and the louvres shut.

#### <To deactivate automatic operation>

Press the drying inside button while the unit is on (the Drying inside lamp turns off)

## **Manual operation**

To activate drying inside by pressing a button.

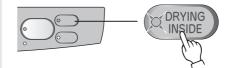

#### Press while the unit is off

#### • Drying inside starts

The Drying inside lamp flashes, the humidity indicator turns off, and the louvre stops in the vertical position.

Drying inside mode

#### • Drying inside ends

The Drying inside lamp turns off and the louvres shut.

## To abort drying inside

Press the drying inside button while the unit is performing drying inside (the Drying inside lamp turns off)

Press the power button to abort drying inside, and resume normal operation.


Operatinç

- M Connecting/disconnecting the power plug deactivates automatic operation.
  - This function does not remove existing mildew. Also, aborting drying inside may cause the benefits to diminish.
- The moisture expelled from inside the unit may cause the humidity level of the room to rise.
- The air leaving the unit may appear white depending on the humidity or temperature of the room.
- The moisture expelled from inside the unit may smell due to odorants\* that were not caught by the filter dissolving in the water.
  - \* The silver ion filter is mainly for absorbing ammonia.
- The OFF timer cannot be set during drying inside.

#### <Drying inside operation> OFF


Information

This operation takes approximately one hour. However, when the room temperature is below 1°C, drying time is shortened to protect the compressor.

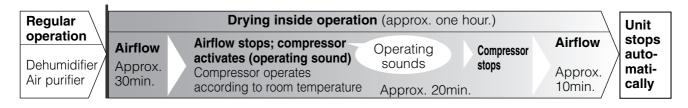

# **OFF** timer operation

The OFF timer can be set for 1 to 9 hours. Set the timer when the power is switched on.

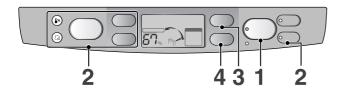

## To set

- Switch the power on. [12]
- Select operating mode. 13-15 Select desired operating mode.
- **Change the louvre swing direction.** 16 Select the desired setting.
- 4

Set the operating time.




- When pressed once the figure [*!*] and [OFF] appear.
- Each subsequent press changes the display in order from 1 to 9 hours. (Hold the button to run automatically through the numbers.)

$$\rightarrow$$
 No Display  $\rightarrow$   $i \rightarrow 2 \cdots i \beta \rightarrow 3 - (LOW mode)$ 

 $\rightarrow$  The OFF timer is set.

The following is an example of a display indicating AUTO dehumidifying (set to 60%), swing set to WIDE and the OFF timer set for 2 hours.

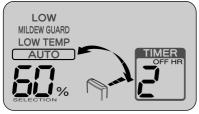

- The time remaining until the unit switches itself off is indicated in increments of one hour.
- When the set time is reached, the unit switches itself off and the louvre closes automatically.
   Drying inside will commence if it has been activated. 17

## To cancel

<When you want to turn the unit off>

Press the POWER button. (Power off)




• The OFF Timer is cancelled.

<When you want to disable the Timer OFF mode, and continue operation>

Keep pressed until the remaining time display disappears. The unit returns to LOW mode.




• The OFF Timer is cancelled.

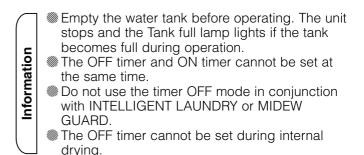

## **ON timer operation** The ON timer can be set for 1 to 9 hours.

Set the timer when the power is switched off.

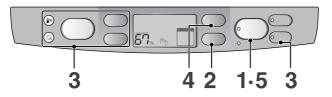

## To set

- Switch the power off. 12
- Set the time you wish the unit to turn on.



- Press once. The Power lamp, Mode indicator, and a [1] on the digital display flash. The [ON] indicator lights.
- Each subsequent press changes the display in order from 1 to 9 hours. (Hold the button to run automatically through the numbers.)

$$\begin{array}{c} \stackrel{\text{No Display}}{\to} \stackrel{\text{(operation}}{\to} i \rightarrow 2 \longrightarrow 8 \rightarrow 9 \\ \stackrel{\text{(operation}}{\to} i \rightarrow i \rightarrow 2 \longrightarrow 8 \rightarrow 9 \end{array}$$

Select operating mode. 13-15 Select desired operating mode. Set drying inside as desired.

4 Change the louvre swing direction. Select the desired setting.


5 Confirm the operating start time.



• Power lamp and Timer display light. → The ON timer is set.

The unit informs you if you forget to press the Power button by making the Timer display and Mode indicator blink and sounding an alarm for 1 minute.

The following is an example of a display indicating AUTO dehumidifying (set to 60%), swing set to WIDE and the ON timer set for 5 hours.

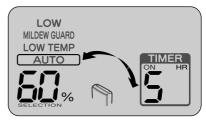

- The time remaining until the unit switches itself on is indicated in increments of one hour.
- When the set time is reached, the unit switches itself on.

## To cance

Press the Power button. (Power off)



• The ON timer is cancelled.




Drying inside is deactivated when the ON timer is set during drying inside operation.

M The ON timer function is not operable using a commercially-available timer plug outlet.

# Using the Child Lock

# To Lock

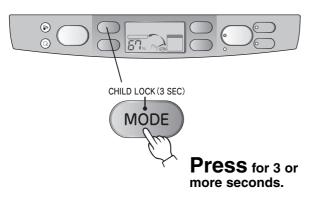

#### • The child lock indicator

The child lock is switched off when the power cord is unplugged.

When the child lock is activated, the other switches are inoperable. Deactivate the child lock to use the other buttons.

#### If you lock the unit when the POWER is OFF.

The unit will not turn on, even if you press the POWER button to turn it on. Only the CHILD LOCK lamp will blink.


(Press the POWER button once again so that the lamp lights.)

#### If you lock the unit when the POWER is ON.

The unit will not turn off, even if you press the POWER button to turn it off. Only the CHILD LOCK lamp will blink.

(Press the POWER button once again so that the lamp lights.)

# Releasing the child lock

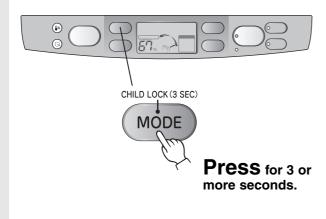

• The child lock lamp goes out.

# Carrying the Unit

# Pull the handle out, and grasp with a firm grip



Before moving the unit, first make sure to remove water from the water tank and close the louvre.




Do not carry the unit on its side as this may cause malfunctions.
 Do not let the power cord drag, as this may

damage the cord.

# **Removing Water from the Tank**

The unit automatically shuts down and lights the Tank full lamp when the tank (approximately 3.8L) is full. Empty the tank. 12

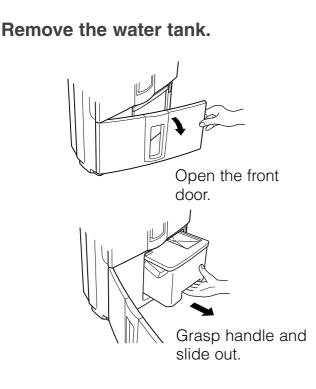

<Hold the tank this way>




## **2** Remove the tank lid, and empty.




#### Floating element

Do not remove or dismantle the float.

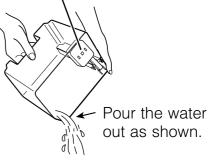

**3** Reattach the tank lid and replace the water tank.

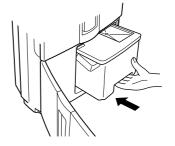


Confirm that the lid is securely attached to the water tank, and push the tank in. Close the front door.

- If the lid is not properly closed, you may have problems removing the tank.
- If the tank is not installed correctly, the tank full light will come on, and the unit will not operate.

# **Continuous Drainage**

If a drain is available, the unit can continuously drain excess water by attaching a commercially available hose (internal diameter 15mm).


The unit can be operated for extensive periods without the need to empty the water tank.

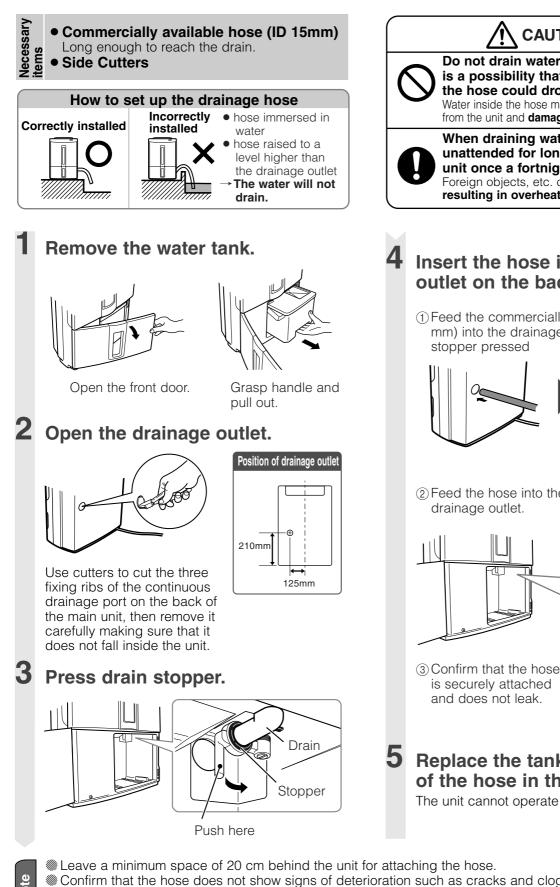


CAUTION Do not drain water continuously if there is a possibility that temperatures around the hose could drop below freezing point. Water inside the hose may freeze and water may leak from the unit and damage surrounding objects. When draining water continuously or left unattended for long periods, inspect the unit once a fortnight. Foreign objects, etc. could clog the hose resulting in overheating and/or leakage.

#### Insert the hose into the drainage outlet on the back.

(1) Feed the commercially available hose (ID 15 mm) into the drainage outlet while keeping the stopper pressed

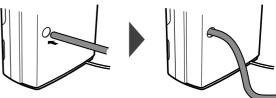



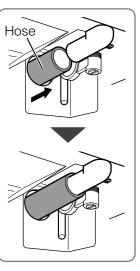


#### **5** Replace the tank, and set the end of the hose in the drain.

The unit cannot operate without returning the tank.


- Confirm that the hose does not show signs of deterioration such as cracks and clogging.
- Inspect the hose every 2 weeks. Insects or dirt blocking the hose may cause leakage resulting in malfunctions.

# Maintenance

Do not use detergents, cleaning agents for heat exchange equipment, abrasive powders, chemically treated dusters, gasoline, benzene, thinners or other solvents, as they can damage the unit or the water tank, which may result in leakage.

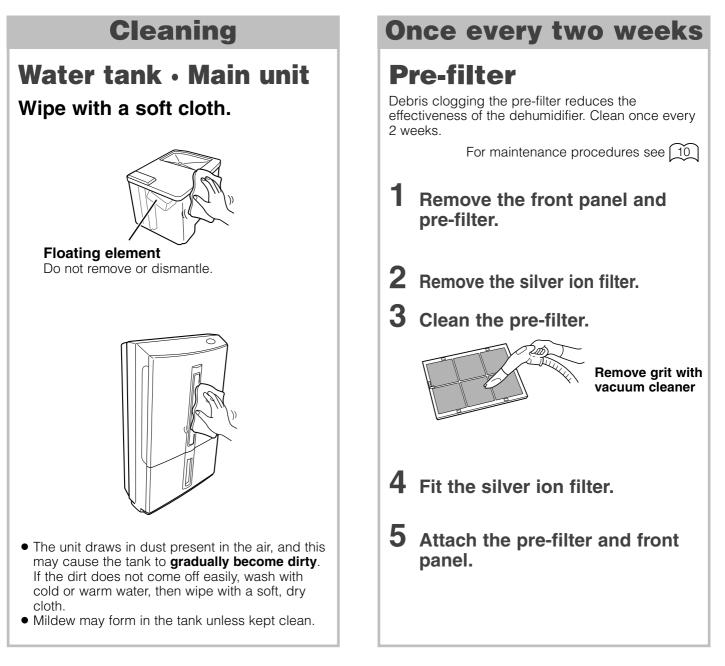

Troubleshooting

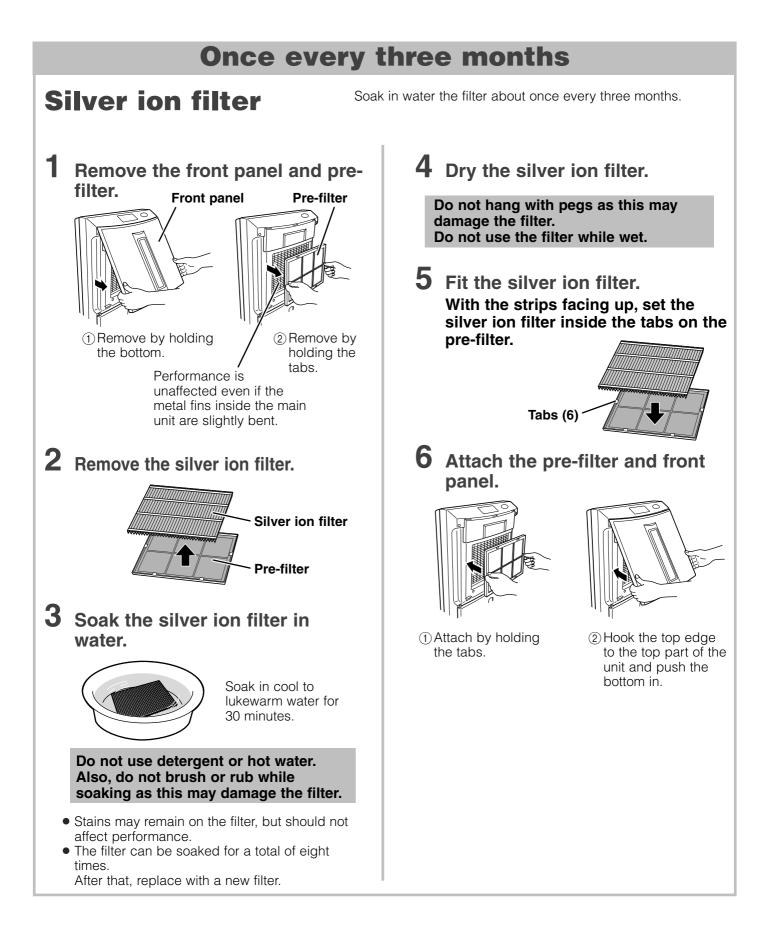

# **Replacing Consumable Parts**

# The silver ion filter and supplement cartridge become depleted over time.

Replace them when necessary. The dehumidifier can still operate without replacing the supplement cartridge. Replace as desired.

## Replacing the silver ion filter

Although the silver ion filter lasts roughly 2 years, replace it when:

- You have soaked the filter 8 times.
- The silver ion filter has turned brown due to cigarette smoke or black with dust.

Life of the silver ion filter differs on usage and environmental conditions.

# Remove the front panel and pre-filter to replace the silver ion filter.

For maintenance procedures see 10

#### **Replacing the supplement cartridge**

#### Replace after 6 months.

Detach the case from the unit and replace the cartridge. Only replace the cartridge. Do no throw away the case.

For maintenance procedures see 11

#### – Parts sold separately -

#### Silver ion filter for replacement

- Type: MJPR-10WXFT
- M Type code: 5C5 818

#### Replacement supplement cartridge

 Type: MJ-E100SPL (This contains the same content as KD-E100SPL.)
 Type code: 5C7 810

For these items contact your nearest Mitsubishi Electric dealer.

# Storage and Disposal

#### Storage

After switching the unit off, leave for one day until any water inside has had time to run off, then carry out the following steps.




• Store the unit in an upright position in a place not exposed to direct sunlight.

#### When disposing the unit

Dispose according to the garbage regulations in your district.

- Silver ion filter Material: PET and PS
- Supplement cartridge Material: PP Do not disassemble. Dispose as plastic waste.
- Unit Do not disassemble. Dispose according to the garbage regulations in your district.

For the symptoms listed below, refer to the remedies listed right.

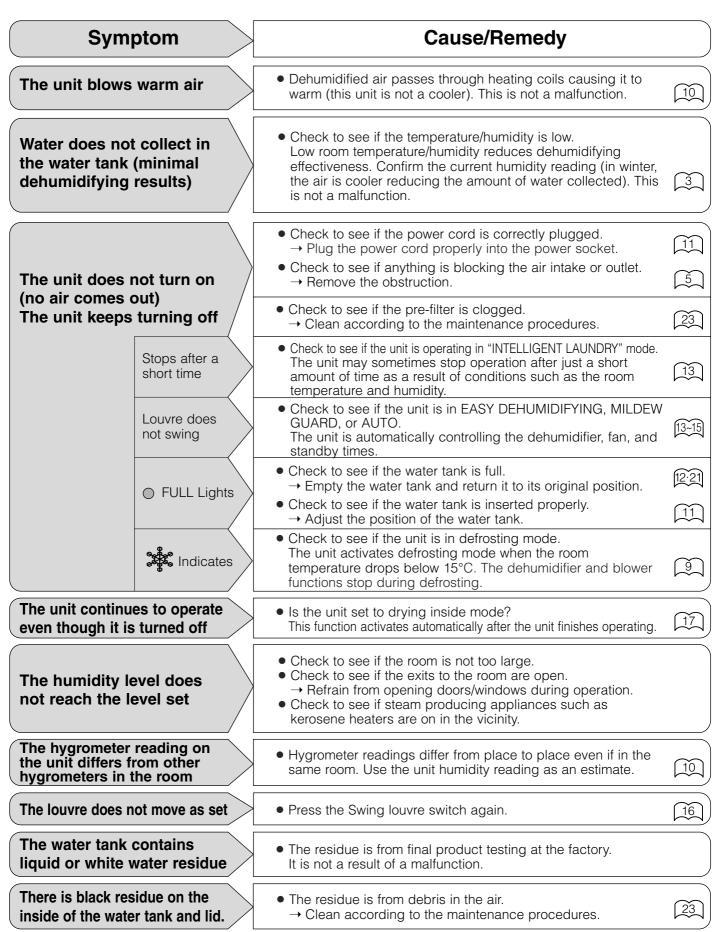

| S  | ymptom   | Cause/Remedy  |    |
|--|--|---|----|
|  | The operating<br>noise is<br>loud/reverberates   | <ul> <li>Check to see if the unit is on a slope or uneven surface.</li> <li>→ Move to a sturdy even surface.</li> <li>Check to see if the pre-filter is clogged.</li> <li>→ Clean according to the maintenance procedures.</li> <li>Operating the unit in small rooms or in tight spaces sometime causes the sound to reverberate.</li> <li>→ Place a mat underneath the unit.</li> </ul>                         |    |
| The unit makes   | The operating<br>sound suddenly<br>increases in volume<br>The wind sound<br>changes in volume            | <ul> <li>The sound increases when the compressor activates (3 minutes after turning on the unit or during One-touch dehumidifier and Automatic modes).</li> <li>The volume of the sound differs depending on the angle of the louver.</li> </ul>  | 16 |
| noises<br>The uprodu<br>simme<br>The ur<br>a buzz<br>sound<br>interm<br>the co | The unit<br>produces a<br>simmering sound  | <ul> <li>This is the sound of the refrigerant.<br/>The sound can be heard while the refrigerant stabilizes after<br/>the unit turns on, changes modes, or stops.</li> </ul>   |    |
|  | The unit produces<br>a buzz that<br>sounds<br>intermittently (or<br>the compressor<br>does not activate) | <ul> <li>This is the sound of the compressor.<br/>In modes that monitor the humidity level or during drying<br/>inside, the compressor operates intermittently causing the<br/>sound to be heard occasionally.<br/>The compressor does not activate after turning the unit off, or<br/>for 3 minutes after plugging the unit into a power socket. (This<br/>is to protect the compressor from damage.)</li> </ul> | 12 |
| The unit   | When first used  | • The heat converter heats rapidly causing a brief odour. This is not a malfunction.  |    |
| produces<br>an odour   | During drying inside   | • The moisture expelled from inside the unit may smell due to odorants that were not caught by the silver ion filter dissolving in the water. This is not a malfunction.  |    |

#### • Error message (Humidity indicator)


| Digital display                      | Cause/Remedy   |            |  |
|--------------------------------------|--|------------|--|
| R2 or R3 is displayed                | <ul> <li>Check to see if the power cord is plugged into the power socket properly.</li> <li>→ Plug the power cord into the power socket properly.</li> </ul>   |            |  |
| ₽Ч is displayed                      | <ul> <li>Check to see if anything is blocking the air outlet. <ul> <li>→ Remove the obstruction, and plug the power cord into the power socket again.</li> </ul> </li> <li>Check to see if the pre-filter is clogged. <ul> <li>→ Clean according to the maintenance procedures.</li> </ul> </li> </ul> | 5:11<br>23 |  |
| R1,R5, or ED through EB is displayed | <ul> <li>Malfunction         <ul> <li>→ Take note of the error message, unplug the power cord, and seek service assistance using the number on the next page.</li> </ul> </li> </ul>   |            |  |

If the symptoms persist even after following the prescribed remedies, or the error message does not disappear, unplug the power cord, and seek service assistance using the number on the next page.

| Model                                | MJ-E16AX-H                          |
|--------------------------------------|-------------------------------------|
| Power supply                         | Single phase 220-240V 50Hz          |
| Dehumidifying capacity               | 16 L/day                            |
| Power consumption                    | 275W                                |
| Water tank capacity                  | stops automatically at approx. 3.8L |
| Weight                               | 11.7kg                              |
| Dimensions ( $h \times w \times d$ ) | 570mm × 384mm × 187mm               |

The dehumidifying capacity is a value obtained when the dehumidifier is continuously run at a room temperature of 30°C and humidity of 80%. It indicates the amount of dehumidification per day (24 hours).

Standby power approximately 1.5W.

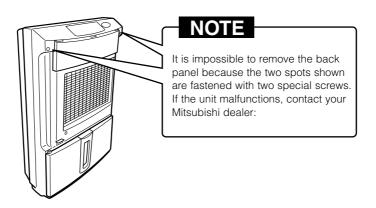

Sole Agent in Hong Kong Mitsubishi Electric Ryoden Air-Conditioning & Visual Information Systems (Hong Kong) Limited. Head Office: Tel.: 2510 1505 Service Center: Tel.: 2427 8484

#### Fill in the following for your future reference.

| Place of purchase:         |                   | Telephone number | :    |  |
|----------------------------|-------------------|------------------|------|--|
| Authorised Service Centre: | Telephone number: |                  |      |  |
| Date of purchase:          | Day               | Month            | Year |  |

## MITSUBISHI ELECTRIC CORPORATION