



CERAMIC TOWER HEATER

請記錄下列資料

- 型號 _____
- 機身編號 _____
- 經銷商名稱 _____
- 購買日期 _____

本產品不斷改進中，如功能有所更改，恕不另通知，如有疑問，請與維修中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準




Gilman Home Appliances
太平家庭電器

香港香港仔大道232號
城都工業大廈2樓
顧客服務專線：8210 8210

2/F, Shing Dao Industrial Building,
232 Aberdeen Main Road, Hong Kong
Service Hotline : 8210 8210

客戶服務熱線 8210 8210
Customer Service Hotline
www.gilman.hk

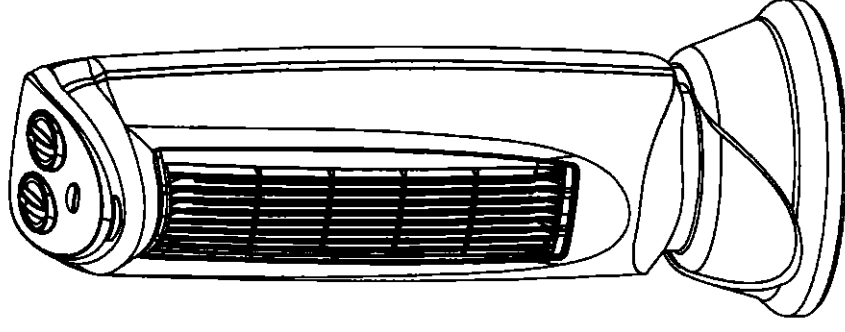

Model: PCH-2000M
Owner's Manual

Please read these instructions carefully before installing and operating the Ceramic Tower Heater.

CERAMIC TOWER HEATER
MODEL: PCH-2000M

IMPORTANT INSTRUCTION

- Read all instructions before using this heater.
- Ensure that the voltage on the rating plate is the same as in your home.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 0.9M from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Never pull or yank on the cord or the appliance. To disconnect heater, turn control to OFF, grasp plug and remove it from outlet.
- Do not use the unit in enclosed spaces such as inside cabinets or walls in order to defrost pipes or prevent pipes from freezing.
- Do not plug heater into loose-fitting or worn out electrical outlets.
- Do not wash with water, or touch with wet hands.
- Do not cover with clothing or place alongside inflammable objects such as cushions, newspapers or curtainsetc.
- The sides are hot during operation, do not touch the heater while it is running.
- Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical mechanical adjustment, or repair to avoid a hazard.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container. If the heater does become wet, unplug it from the wall receptacle before touching it, as a wet

heater may create an electrical shock hazard even if the heater is turned off. The heater must not be located immediately below a socket-outlet.

- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from trafficked area and where it will not be tripped over or stepped on.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, carpets, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Do not use this heater as an integral part of any life support or equipment protection system, where a functional failure or misapplication of the heater could jeopardize the people or things being protected.
- Avoid using heater while sleeping.
- To prevent electrical overload and blown fuses, be sure that no other appliances are plugged into the same outlet.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.
- **WARNING IN ORDER TO AVOID OVERHEATING, DO NOT COVER THE HEATER.**

The heater carries the Warning word indicating that it must not be covered.

SAVE THESE INSTRUCTION

防霜功能:
防止機身結霜

- 當暖風機已插上電源，而電源燈亮著，使用者可設定房間制及將溫控制調至「FROST WATCH」最低當的設定，暖風機將不會啟動直至溫度下降約 4℃，防霜功能即自動生效啟動暖風機保持 4℃至溫。

注意事項及清潔

- 於暖風機不使用時使用，必須關上暖風機，並將電源插頭拔除。並需待暖風機冷卻後方可清潔。清潔外殼時，可用軟布或微濕清潔劑的布抹去外殼污垢，切勿使用沙布或溶劑抹機身。於再使用前以乾布抹乾機身或用吸塵機或毛刷除去機身上的塵垢。

注意

- 請勿將機身浸入水中或讓水珠滴入機身內，以免觸電。
- 暖風機需儲存乾的地方。電源線要整理好及縛好，電源線不能與銳角接觸或受重物壓著以免折斷及觸電。
- 暖風機只是用作副助發熱用途，不能作為主要的暖風系統作用。

Frost Watch Feature

- **Frost Watch:** When the heater is plugged in and the Power Indicator is on, you can select any setting for room size and leave the Thermostat Control on the FROST WATCH or lowest setting. Your unit will remain Off unless the temperature drops below (4°C). If this happens, Frost Watch will automatically cycle the heater/ fan On.

Care And Cleaning

- Always turn the unit Off, unplug disconnect the cord from the outlet, and allow the heater to cool completely before cleaning. To clean the exterior, use a soft dry cloth or one moistened with a mild detergent to wipe the outside surfaces. Do not use abrasive or harsh cleaners. Dry surfaces thoroughly before using the heater. Or, use a vacuum with a dusting brush attachment to clean away dust.

CAUTION: DO NOT immerse the heater in water or allow water to drip into the interior of the heater, as this could create an electric shock hazard.

- Store the heater in a dry area. Gather the power cord in loops and secure it with a twist tie. Don't let the power cord come in contact with sharp edges or get compressed by heavy objects. Portable electric heaters are designed for space heating as a supplementary heat source. They are not intended be the main source of heat.

直立式陶瓷暖風機

型號：PCH-2000M

使用說明書


- 使用前閱讀此說明書
- 首先確認電源與機體所印的要求一致
- 暖風機於使用時，外殼將會發熱。為免燙傷皮膚，應避免與機身直接接觸。
- 搬動機身時應使用機身手柄。易燃物料如：傢俱、枕頭、床單、紙張及窗簾等應距離機體約 0.9 公尺
- 應特別小心使用暖風機，當使用時避免沒有成人在場或使用時只有兒童。
- 在未有用時，不應插頭連線，亦不能拉搭電源線或機體。關機時，應將電源的插頭分離電源插座。開關制製設定「OFF」位置。
- 機體不能使用於密閉空間如衣櫃 或於牆格內用以溶雪或防止水管結冰等。
- 插頭不可使用於不合規格或容易鬆脫的插座上
- 請勿用水清洗或手濕時接觸機身。
- 請勿以易燃物蓋於機身上，如報紙、窗簾或軟墊等。
- 使用時應避免觸及機身兩旁。
- 電源線不應扭於機身以避免機身出線位的電源線過份扭摺，以致損壞或斷裂。
- 如遇電線損壞，電線插頭受損，機身破損或不能正常操作，應退回認可維修人員檢查，調整及處理。
- 不能於戶外使用
- 暖風機不適用於浴室、洗衣間或相類的室內地方。亦不應將暖風機置於容易掉進浴缸、水箱等的位置上。如機身被弄濕，應先拔除插頭才可觸摸以免觸電。如只關上電源，亦有可能觸電，請注意危險。
- 請勿將暖風機置於電源插頭的位置旁
- 電源線不應藏於地毯之下。亦不可被蓋於雜物之下。電線必須遠離通道或可被踐踏的地方。
- 閉關暖風機時，必需先將開關設置於「OFF」位置，再將電源插頭拔離牆上的電源插座。
- 外物不可放於入風及出風口位置以免做成觸電危險、火警或損壞機體。
- 為免發生火警，機體的入風及出風位置切勿受阻。亦不能把機體放置於柔軟的平面上如軟墊、地毯等。

- 暖風機機身內會發熱或產生電弧及火花，切勿使用於汽油、油漆、易燃液體的近處或儲存倉內。
- 請勿將暖風機用於輔助其他救生設備或儀器保護系統，以免暖風機的故障或錯誤使用會導致失誤。
- 睡眠不應使用暖風機。
- 為免電插座超負荷及損壞電源保險絲，請不要與其他產品共用插座。
- 請依照本說明書來使用暖風機，其他非生產商建議的使用方法，可能會導致火警、觸電及受傷。
- 避免使用電源接線以免過熱而發生火警。
- 警告：為免暖風機過熱，切勿覆蓋。
- 暖風機亦帶有警告字樣表示切勿覆蓋。

請保留此使用手冊

主要部份

1. 電源顯示燈
2. 溫度控制旋鈕
3. 房間選擇鈕
4. 送風搖擺制
5. 前網
6. 搖擺座
7. 離地/翻到自動停機制
8. 腳墊

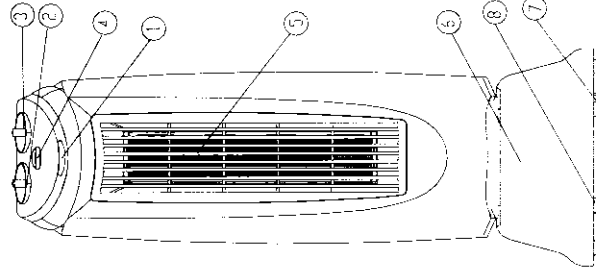

操作方法

- 暖風機使用時應置於堅固的平面上，如地板、檯面、架框，面出風及風罩位置不受阻為原則，所有易燃物如傢俱、枕頭、紙張、衣物、軟墊應與暖風機保持3呎距離。切勿使用於濕度高的地方如浴室、洗衣房。或有易燃物的地方如油漆、易揮發液體或氣體或揮發性高的液體存放區。
 注意：不能與其他電器產品共用插座以免過熱及超負荷。
- 先將開關制置於「關上」的位置上。然後才可插上電源線於電源插座，將房間選擇旋鈕轉至合適的「LOW」（低）/

「HIGH」（高）位置上，電源顯示燈將亮著。


- 將溫度控制轉至「HOT」（熱）的位置，當室溫到達要求的溫度時，將溫度控制調整（向 FROST WATCH）至風葉剛停止的位置上，暖風機會自動循環啟動或關上以保持室溫。如只使用風扇，可將旋鈕轉到「FAN ONLY」的位置上，並將溫度控制轉至「HOT」的位置上，風扇便會啟動並且不會產生熱風。
- 機體的搖擺功能可以於任何功能時設置。
- 只要按動搖擺功能制即可啟動或關上功能。
- 按動房間選擇鈕之後暖風機即可啟動。

特別功能：

- 此機設有安全自動關閉功能及高溫保險絲，當機體過熱時，自動制即生效關閉暖風機。如發生這種情況應將開關制轉至「OFF」關閉的位置上。檢查出風及入風位置是否受阻。拔除插頭等待機體冷卻才新插入電源啟動。並重新設定溫度控制按鈕及房間控制等，如機體冷卻後未能啟動即表示暖風機內部已經受損及高熱保險絲已啟動折斷電源，因此暖風機已不能操作。
- 機身離地或翻倒時，電源即會自動截斷（如將機身側放或於房中移動時）。自動停機制於機身翻側（如被寵物撞翻等）即會截斷電源停止操作。自動停機制是安全裝置，請勿對此安全制功能加以干擾。
- 電源顯示燈顯示機體已插入電源並已啟動，即使機體外殼是防熱設計，亦需注意機身兩側，機身後前後網乃會發熱，切勿觸摸。

Main elements

1. Power Indicator Light
2. Thermostat Control Knob
3. Room Select Knob
4. Swing Button
5. Front Grille
6. Oscillation Base
7. Tip Over Switch (under unit)
8. Stable Feet

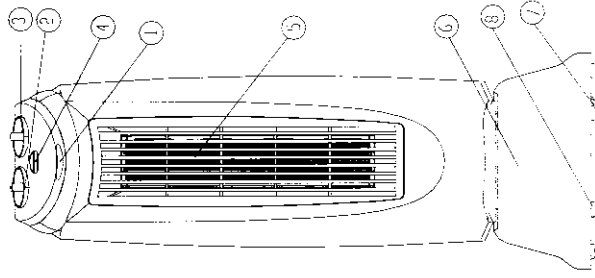

Operation

- This heater is intended for use on a flat, stable surface, such as a floor, tabletop, shelf, or desk in a location where the airflow grille openings won't be obstructed. Keep all combustible material such as furniture, pillows, paper, clothes and curtains at least 3 feet (0.9m) away from the heater. Do not use in wet or moist locations, like bathrooms or laundry areas, or in areas where paint or other flammable or volatile liquids are used or stored.
- CAUTION: Be sure no other appliances are plugged into the same circuit with this heater/ fan. A circuit overload could occur.

- Be sure the Switch Knob is in the OFF position before plugging the unit in. Plug in to an AC outlet. Move the Room Select knob to the appropriate setting for a Low or High. The POWER Indicator will light up.
- Move the Thermostat Control to HOT to activate the unit. Once the desired room temperature is achieved, turn the Thermostat Control towards FROST WATCH until the fan cycles off. The heat will now cycle On/Off to maintain a comfortable level.
- To use as a fan without heat, move the knob to FAN ONLY and the Thermostat Control toward Hot until the fan begins to operate. No heating will occur in this mode.
- The oscillation feature functions in any power or mode setting.
- Press the oscillation button to toggle this feature on and off.
- The room select knob must be switched on to activate the heater

SPECIAL FEATURES

- This unit is equipped with a Safety Auto-Off, plus a safety Thermal Fuse. If the unit experiences excessive heat, the Safety Auto-Off will shut the unit off. If this happens, move the knob to Off immediately. Be sure the front and back grilles are not blocked and nothing is restricting airflow. Unplug the unit, let it cool down before plugging it back in to operate. Readjust your temperature or room settings. If the unit fails to operate again, it may mean the heater has internal damage and that the Thermal Fuse has been tripped so the heater can no longer operate.
- The Motion Off Detection Feature will cut the power if the unit falls over in any direction or is lifted (such as if you move it to another part of the room). The Tip-Over Switch will cut the power if the unit is knocked over forward or backward (for example, if a pet accidentally tips it over). Both are controlled by the Tip Over Switch on the bottom of the unit. Do not attempt to defeat this safety feature.
- The power indicator shows that the heater is switched on and operating. Note that even though this unit has a Cool-Touch Housing, both the front and back grilles will get hot. Be careful not to touch them.