
AS140





Quick start guide 快速启用指南

PHILIPS

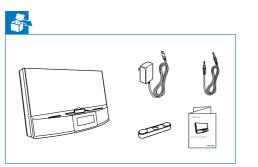



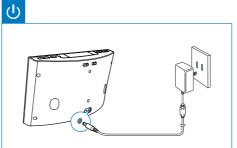

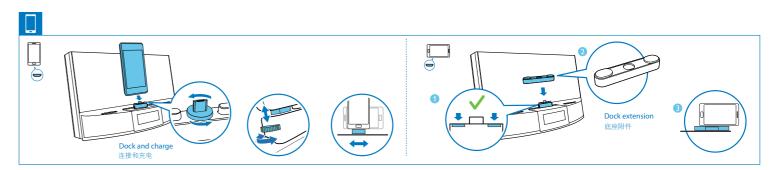

▶ Play music /播放音乐

















ption/选用 Install Songbird / 安装 Songbird
























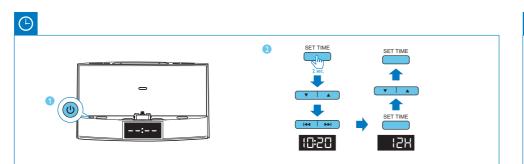


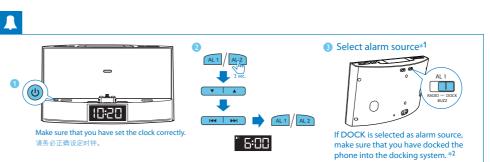


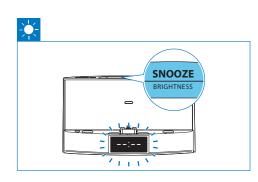


All registered and unregistered trademarks are property of their respective owners.
© 2012 Koninklijke Philips Electronics N.V.



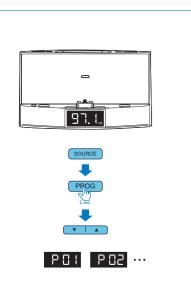

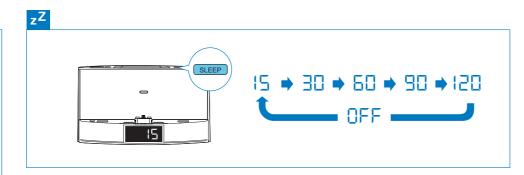

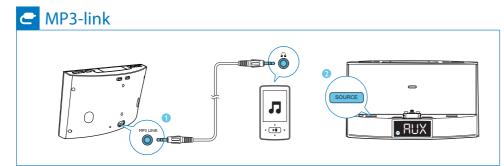



















- *2 If DOCK is selected as alarm source, make sure that you have docked the phone into the
- *3 Before using your product, read all accompanying safety information...
- *4 System requirements:

Android system (version 2.1 or above);

Bluetooth 2.1 or above; and

Note: If the micro USB connector is located at the top, screen auto-rotation is available for Visit www.philips.com/FlexiDock for more details.

- *5 To download and install Songbird on your computer, visit www.philips.com/songbird.
- *6 To get the detailed instructions for use, visit www.philips.com/welcome.

Canaifications

	Specifications
Rated Output Power	2x5 W RMS
Tuning Range	FM: 87.5 - 108 MHz
AC Power	Model: AS180-070- AB250; Input: 100-240 V ~, 50/60Hz, 0.7A; Output: 7V === 2.5A
Operation Power Consumption	<35 W
Standby Power Consumption	<1 W
Max. load of Android output	5V == 1A
Dimensions - Main Unit (W x H x D)	290 × 160 × 113mm
Weight - With Packing - Main Unit	2.0 kg 1.4 kg

☑ 简体中文

- *1 选择闹钟来源
- *2 如果您选择 DOCK 作为闹钟来源,必须确保您已将手机连接 | 本装置。
- *3 在使用产品之前, 请先阅读所有随附的安全信息。
- *4 系统要求:

适用于Android 系统 (2.1 或更高版本):

蓝牙 2.1 或更高版本

注意: 如果微型 USB 接口位于顶部,则屏幕自动旋转功能适用于Android 2.3

有关详细信息,请登陆 www.philips.com/FlexiDock。

*5 要在您的电脑上下载并安装Songbird,请登陆 www.philips.com/songbird。

*6 要获取完整的用户手册,请登陆 www.philips.com/welcome。

	规格
额定输出功率	2x5 W RMS
调谐范围	FM: 87,5-108 MHz
交流电源(电源适配器)	型号: AS180-070-AB250 电源适配器; AC 输入: 100-240 伏,50/60 赫兹,700毫安; DC 输出: 7伏 == 2500毫安
工作功耗	<35 W
节能待机功耗	<1 W
最大 Android 输出电荷	5V === 1A
尺寸 - 主装置 (宽×高×厚)	290×160×113毫米
重量 - 含包装 - 主装置	2.0 千克 1.4 千克

Important

Safety

- · Read these instructions.
- Heed all warnings.
- Follow all instructions.
- · Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- · Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- · Protect the power cord from being walked on or pinched, particularly at
- plugs, convenience receptacles, and the point where they exit from the unit. Only use attachments/accessories specified by the manufacturer.
- · Unplug this unit during lightning storms or when unused for long periods of time.
- · Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- This unit shall not be exposed to dripping or splashing.
- . Do not place any sources of danger on the unit (e.g. liquid filled objects,
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

Know these safety symbols







This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION:To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old

简体中文

1 注意事项

- 阅读这些说明。 注意所有警告。
- 遵循所有说明。
- 不要堵塞任何通风口。按照制造商的说明进行安装。
- 不要在任何热源附近安装,如散热器、蓄热器、炉具或其它发热 设备(包括功放器)
- 防止电源线被踩踏或挤夹,特别是在插头、电源插座和装置电源 线出口位置。
- 仅使用制造商指定的附件/配件。
- 在雷电天气期间或长期不用的情況下,请拔下本装置的电源插头。
- 所有维修均应由合格的维修人员来执行。本装置有任何损坏时、 如电源线或插头损坏,液体泼溅到或物体跌落到设备上,装置淋 雨或受潮, 无法正常运行, 或者跌落, 均需要进行维修。
- 切勿将本装置暴露在漏水或溅水环境下。
- 不要将任何危险源放在本装置上(例如装有液体的物体、点燃的 蜡烛)
- 如果将直插式适配器的插头用作断开设备,则断开设备应可以随 时使用。

了解这些安全标志







上"闪电标志"表示设备中的未绝缘材料可能导致触电。为了您家中 每个人的安全,请勿卸下产品外盖。

"惊叹号"表示需要对某些功能多加注意,您应仔细阅读附带的说明 书以防止出现操作和维护问题。 警告: 为减少火灾或触电危险, 此设备应避免淋雨或受潮, 不得将装

有液体的物体(如花瓶)放在此设备上。 注意: 为防止触电, 请将插头的宽插片完全插入宽插槽。

2 注意

如果用户未经 Philips 优质生活部门的明确许可而擅自对此设备进行更 改或修改,则可能导致其无权操作此设备。

弃置旧产品

本产品采用可回收利用的高性能材料和组件制造而成。

切勿将本产品与其它生活垃圾一起处理。请自行了解当地关于分类收 集电子、电气产品及电池的规定。正确弃置这些产品有助于避免对环 境和人体健康造成潜在的负面影响。

关于您所在地区回收中心的更多信息,请访问 www.recycle.philips.com。

环境信息

已省去所有不必要的包装。我们努力使包装易于分为三种材料: 纸板 (盒)、泡沫塑料(缓冲物)和聚乙烯(袋、保护性泡沫片)。 您的系统包含可回收利用的材料(如果由专业公司拆卸)。请遵守当 地有关包装材料、废电池和旧设备的处理的规定。

有毒有害物质或元素 Hazardous/toxic Substance 汞 (Hg, 镉 (Cd, 六价铬(Chromium 多溴联苯 多溴二苯醚 Name of the cadmium) (PBB) 游易面板 由路垢组件 Accessories (Remote control & 附件 (电源线,

〇:表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 - 2006 标准规定的限量要求以下。 O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 - 2006.

× 表示该有毒有害物质至少在该部件的某一均质材料由的含量积出SI/T11363 - 2006 标准银定的限量要

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变,电子信息产品用户使 用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

Note