

## ENGLISH

### Important

- Some instructions only refer to a particular type number. Please check the type number of your shaver and follow the relevant instructions.
- Prevent the appliance and the cord from getting wet.
- Only use the cord supplied.

### Charging

- Recharge and keep the appliance at a temperature between 5° and 35°C.
- Do not recharge the shaver in a closed pouch.
- To optimise the life of the appliance do not leave the shaver connected to the mains continuously.
- Put the appliance plug into the shaver up to the indication mark (fig. 1).**
- Put the mains plug into the socket.**
- Types HQ 384 and HQ 382 can be connected to mains voltages between 100 and 240 volts.
- Type HQ 380 can be connected to mains voltages between 220 and 240 volts.
- The green pilot light will illuminate as soon as the appliance starts charging.
- Charging time HQ 384 approx. 1 hour. When charging the appliance for the first time or after a long period of not using it, leave the shaver to charge for 4 hours.
- Charging time HQ 382 and 380: approx. 8 hours.
- To extend the lifetime of the battery, remove the plug from the appliance as soon as the battery has been fully charged.**
- Type HQ 384: when the battery is full, the green pilot light starts to blink.
- A fully charged shaver has a cordless shaving time of approx. 30 minutes.
- Types HQ 384 and 382: you can shave without changing the appliance first by connecting the shaver to the mains. For type HQ 382 only: wait a few seconds before you switch on the appliance.

### Shaving

- Switch the appliance on by pressing the yellow switch lock and pushing the slide upwards.
- The switch lock will prevent accidental switching on of the appliance.

Move the shaving heads quickly over the skin. Make both straight and circular movements (fig. 2).

Shaving on a dry face gives the best results.

Your skin may need some time to get used to this shaving system.

- Switch the appliance off.
- Put the dust cover on the shaver (fig. 3).

Replace the shaving heads every 2 years (type HQ 3 Double Action) for optimal shaving results.

### Trimmer (types HQ 384 and HQ 382 only)

For grooming sideburns and moustache.

Open the trimmer by pushing the slide upwards (fig. 4).

Switch the appliance on.

### Cleaning

- Regular cleaning of the shaver guarantees better shaving performance.
- Switch the appliance off, remove the mains plug from the socket and disconnect the appliance plug from the shaver.

### Every week: shaving unit

- Clean the top of the shaving unit with the brush supplied (fig. 5).
- Press the release button and take the shaving unit off the shaver (fig. 6).
- Brush the inside of the shaving unit and the hair chamber (fig. 7 and 8).
- Put the shaving unit back onto the appliance.

### Every two months: shaving heads

- Press the release button and take the shaving unit off the shaver (fig. 6).
- Press the two sides of the S-shaped spring together and remove the retaining frame (fig. 9).
- Slide the shaving heads out of the retaining frame (fig. 10 and 11).

Remove and clean only one shaving head at a time. Avoid mixing the sets of cutters and guards up to maintain optimal shaving performance.

- Brush the cutter carefully in the direction of the arrow (fig. 12).
- Brush the guard (fig. 13).

If necessary use a degreasing liquid (e.g. alcohol). In this case, remember to lubricate the shaving heads with a drop of sewing machine oil after cleaning (fig. 14).

- Reassemble the shaving unit.
- Put the shaving unit back onto the appliance.

### After every use: trimmer (types HQ 384 and HQ 382 only)

- Clean the trimmer with the brush (fig. 15).
- Lubricate the trimmer teeth every six months with a drop of sewing machine oil (fig. 16).

### Disposal of battery

Remove the battery when you discard the appliance. Do not throw the battery away with the normal household waste but hand it in at an official collection point. You can also take the battery to a Philips Service Centre, which will dispose of it in an environmentally safe way.

Only remove the battery if it is completely empty.

- Remove the mains plug from the socket.

Let the shaver run until it stops, undo the screws and open the appliance (fig. 17).

Remove the battery (fig. 18).

Do not connect the shaver to the mains again after the battery has been removed.

If you have any questions, call the Philips Helpdesk. For telephone numbers, see the worldwide guarantee leaflet.

Www.philips.com/garantie

Www.philips.com/service

Www.philips.com/repair

Www.philips.com/online

