

Quick start guide

快速入门指南


Quick start guide

Register your product and get support at
www.philips.com/welcome

PHILIPS

Unpack

打开包装

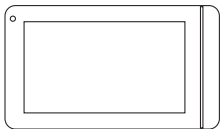

 XP (SP3) / Vista / 7



USB 





500Mb

1

Charge

充电


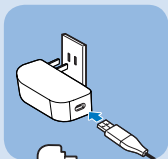
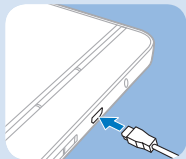


The first time you use the device, use the by-packed USB power adapter to charge the device for more than eight hours. | 首次使用本机时，应使用随机所附的USB电源适配器为本机充电8小时以上。

2

Use

  使用

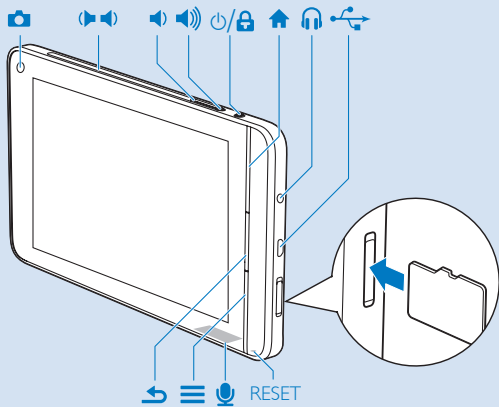




Home screen

主屏幕




Press  to return to the Home screen. | 按  回到主屏幕。

Tap  to find all the functions. | 点击  查看所有功能。

 




Wi-Fi

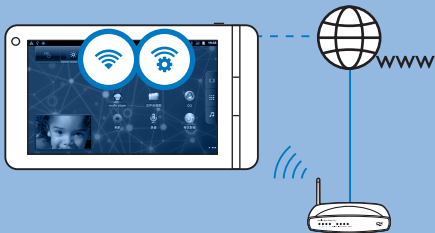

To enjoy entertainment online, connect the device to the Internet through Wi-Fi. From the Home screen, swipe left/ right to select the power control widget. Tap  to switch on Wi-Fi. Tap  to connect to an available Wi-Fi network. | 将本机经 Wi-Fi 接入互联网以享受您的在线娱乐。在主屏幕，左、右滑动页面选择电源控件工具条。点击  开启Wi-Fi。点击  接入可用的Wi-Fi网络。




Install Philips Device Manager 安裝

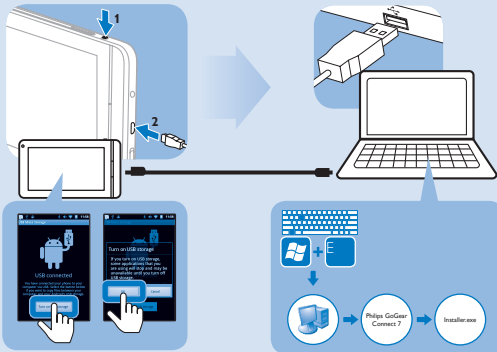

To connect to a PC, switch on the device, and then tap on the pop-up screen to switch on the USB storage. | 连接电脑时，开启本机后，在弹出屏幕上点击选择打开USB存储设备。

Device does not power on |
设备未启动

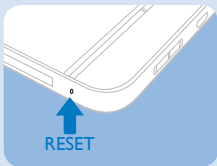

Cannot find the user manual |
找不到用户手册

On the Home screen, select
📁 > **Local Files** > **Manual** |
在主屏幕中，选择 📁 > 本地
文件 > **Manual**。

See **support information** in the user manual for more | 详情请参阅用户手册中的支持信息



Be responsible
Respect copyrights

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

© 2011 Koninklijke Philips Electronics N.V.

All rights reserved.

www.philips.com



Printed in China
PI5000_93_QSG_V1.3
WK11325