

Quick start guide

快速入门指南

快速入門指南


Quick start guide

Register your product and get support at
www.philips.com/welcome

PHILIPS

Unpack

打开包装
打開包裝

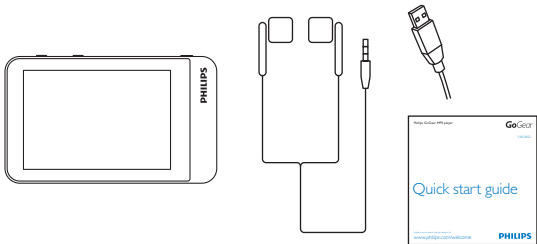

 XP (SP3) / Vista / 7




USB 



500Mb

1

Install

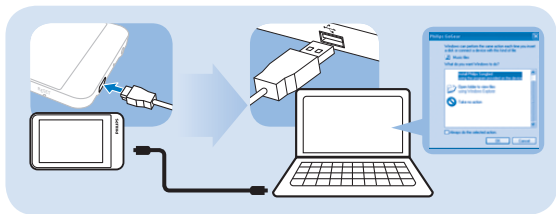安裝
安裝

2



Transfer

傳輸
傳輸

3

Use

使用
使用

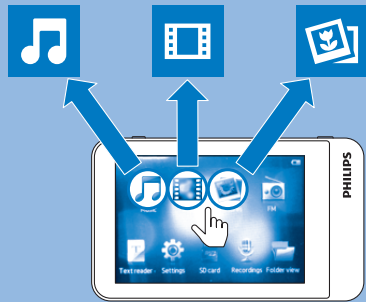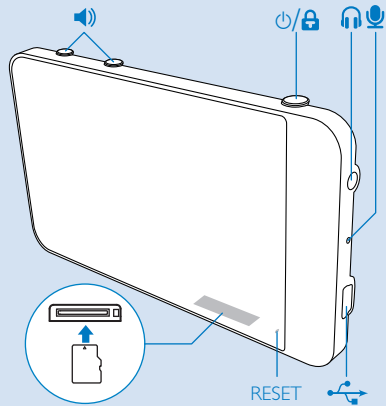



Tap to return to the Home screen


| 点击返回主屏幕 | 點選以返回主屏幕



Tap to switch to the library or play screen
| 点击选择媒体库或播放屏幕 | 點選媒體庫或播放屏幕



Tap to display play options such as Surround for movies (Surround sound for movie play)
| 点击显示播放选项，例如 Surround for movies（用于电影播放的环绕音效） | 點選顯示播放選項，例如 Surround for movies（電影播放的環迴音效）

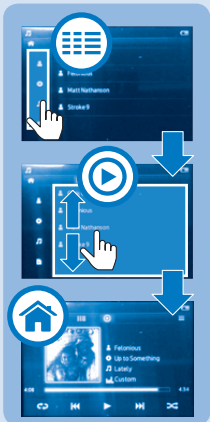




On the play screen, tap on the progress bar to select a play position. | 在播放屏幕，在进度条上点击选择播放位置。 | 在播放屏幕，在進度欄上點選播放位置。




Tap to display the bar of track bar; tap on the middle to select normal play, tap on the left or right to select a speed for fast play. | 点击显示跟踪球控制条，点击左侧和右侧选择快进、快退速度，点击中间点返回正常播放。 | 點選顯示追蹤球控制欄，點選左側和右側以選擇快進、快退速度，點選中間點以返回正常播放。

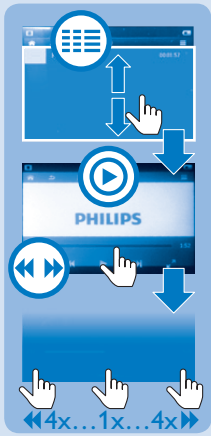





Tap to display zoom control bars;
drag the track ball to zoom in/ out;
swipe to pan through the picture |
点击显示缩放控制栏：拖动跟踪
球放大、缩小；滑动屏幕以移动
图片 | 點選顯示縮放控制欄：拖
拉追蹤球以放大、縮小；滑動
屏幕以移動圖片

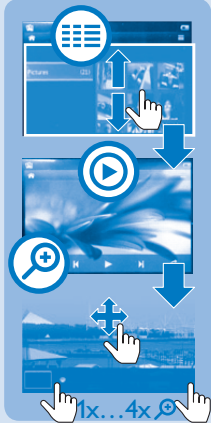

Device does not power on |
设备未启动 | 裝置尚未啟動

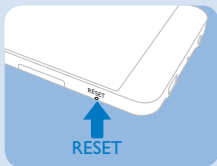

Software installation does not
happen | 软件安装未启动 | 軟件
安裝尚未啟動

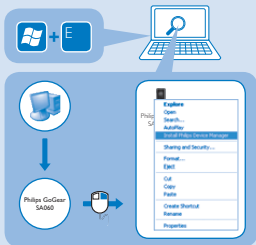

See **support information** in the user manual for more | 详情请参阅用户手册中的支持信息 | 請參閱用戶手冊中的支援資訊以了解更多



Be responsible
Respect copyrights

All rights reserved.

www.philips.com

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

© 2011 Koninklijke Philips Electronics N.V.



Printed in China
SA060_93_QSG_V1.0
wk11244