





Photos

To view pictures, select “**photos**” from the main menu and press the **[MODE]** button to enter the photo browser.

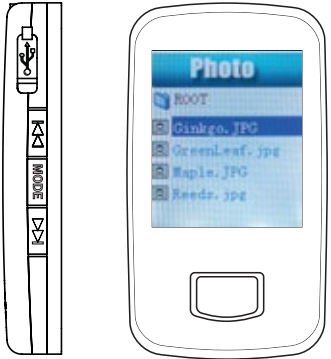 


Photo browser screen

- 1. Use the **[◀▶]** or **[▶▶]** button to scroll through the “**ROOT**” folder and select a photo you would like to view, and press the **[MAIN]** button.
- 2. Use the **[◀▶]** or **[▶▶]** button to scroll through your pictures.
- 3. Press the **[MAIN]** button again to return to the “**ROOT**” folder.

Photo menu

While in the “**ROOT**” folder, press the **[MODE]** button to access the photo menu where you can select from the following options:

Photo	<b>Local folder</b> – browse photo files on the player
>>Local folder	<b>Slideshow</b> – set slideshow mode
>>Slideshow	<b>Delete file</b> – delete a single photo file
>>Delete file	<b>Delete all</b> – delete all photo files
>>Delete all	<b>Exit</b> – exit to photo playback screen
>>Exit	

Slideshow

- 1. To view all pictures in slideshow mode, press the **[MODE]** button while in the “**ROOT**” folder to enter the photo menu, then select “**Playback set**”, then choose “**Auto Play**”.
- 2. Choose a time interval between photos, then press the **[MAIN]** button to start the slidshow.
- 3. To stop the slideshow and return to the “**ROOT**” menu, press the **[MAIN]** button again
- .

Record

To record voice memos, select “**record**” from the main menu and press the **[MODE]** button to enter the recording mode.

 
- 1. Press the **[MAIN]** button to start recording.
- 2. To pause recording, press the **[MAIN]** button again.
- 3. To save the recording and exit to the main menu, press and HOLD the **[MAIN]** button or the **[MODE]** button.



record screen

Voice

To play back recorded voice memos, select “voice” from the main menu and press the **[MODE]** button to enter the voice memos mode.

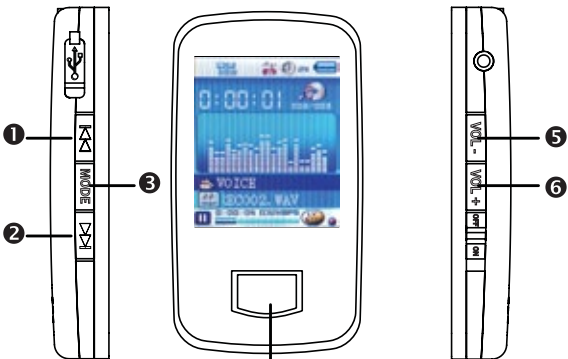

Voice memo playback screen

Voice playback controls

- 1. **[◀▶]** button – Previous memo / Rewind (hold)
- 2. **[▶▶]** button – Next memo / Fast forward (hold)
- 3. **[MODE]** button – Enter voice memo menu
- 4. **[MAIN]** button – Play / Pause
- 5. **[VOL-]** button – Decrease volume
- 6. **[VOL +]** button – Increase volume

Voice Menu 1

While music is PLAYING, press the **[MODE]** button to access music menu 1 where you can select from the following options:

Voice	
>>Repeat	<b>Repeat</b> – memo repeat options
>>Replay mode	<b>Replay mode</b> – memo loop options
>>Exit	<b>Exit</b> – exit to voice memo playback screen

Voice menu 2

While music is PAUSED, press the **[MENU]** button to access music menu 2 where you can select from the following options:

Voice	<b>Local folder</b> – browse voice memos on the player
>>Local folder	<b>Delete file</b> – delete a single voice memos
>>Delete file	<b>Delete all</b> – delete all voice memos
>>Delete all	<b>Exit</b> – exit to voice memo playback screen
>>Exit	

To listen to radio, select “radio” from the main menu and press the **[MODE]** button to enter the radio mode.

- 1. Press the **[◀▶]** or **[▶▶]** button to tune the radio manually through the FM dial.
- 2. Press and HOLD the **[◀▶]** or **[▶▶]** button for one second to tune backward or forward to the next available station.

**To save a station to the preset list:**  
You can save up to 20 preset stations for your enjoyment.

- 1. While liseting to a station you want to save, press the **[MODE]** button.
- 2. Use the **[◀▶]** or **[▶▶]** button to select “Save” from the music menu and press the **[MODE]** button to confirm. The station will now be saved to the preset list.
- 3. To scroll through the Preset Stations, press the **[▶■]** button.

 
Note: The headphones must by plugged into the player for the FM Radio feature to work.

To delete a station from the preset list:

- 1. Tune to the station you would like to delete and press the **[MODE]** button.
- 2.Use the **[◀▶]** or **[▶▶]** button to select “Delete” and press the **[MODE]** button to confirm.
- 3.If you would like to delete all preset stations, select “Delete all” and press the **[MODE]** button to confirm.

Autoscan:

- 1. To make the player autoscan and save all available stations to your preset list, press the **[MODE]** button, then select “**Auto Search**” and press the **[MODE]** button to confirm.
- 2. The player will scan through all available stations and save them to your Preset list.

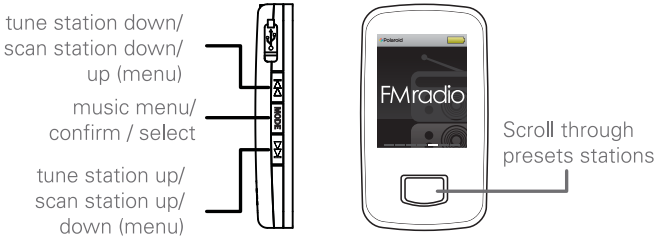

Note: Selecting “Autoscan” will erase your previously saved preset stations and replace them with all available stations in your area.

Recording FM Radio

- 1. While listening to FM radio, press the **[MODE]** button, use the **[◀▶]** or **[▶▶]** button to select “record”, then press the **[MODE]** button to confirm. The FM record screen will open.
- 2. To start recording, press the **[▶■]** button.
- 3. To stop recording, press the the **[▶■]** button.
- 4. To continue recording within the same file press the **[▶■]** button, the press the **[▶■]** button to stop recording.
- 5. To save the file press and HOLD the **[MODE]** button.

To listen to your FM Recorded files:

- 1. Select “voice” from the main menu and press the **[MODE]** button to confirm.
- 2. Press the **[MODE]** button, select “Local folder” and press the **[MODE]** button to confirm.
- 3. Select “Voice Memos” and press the **[MODE]** button to confirm.
- 4. You can now browse your recorded FM Radio files and press the **[▶■]** button to listen to your choice.

Settings

In the settings menu you can customize various player settings such as power usage, language, display settings and more.

- 1. To adjust date and time, select “**Clock**” from the setup menu. Press the **[MAIN]** button to select an option and use **[◀▶]** or **[▶▶]** button to adjust.



settings menu

Adjust the “LCD Set” and “Power off” options to extend and optimize battery performance.

Legal information

**FCC Part 15:**  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.  
  
**Warning:** Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.  
  
NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.  
  
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

  
Do not attempt to repair or modify this equipment.  
  
Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.  
  
PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.  
  
You may also go to HYPERLINK “http://www.polaroid.com” www.polaroid.com and reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.  
  
If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Troubleshooting

- Can not power on**
  - The battery may be exhausted, please recharge the battery.
- Files can not be transferred to the player**
  - Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer
  - Check the connection between the player and PC, and confirm the USB cable is properly connected.
- No sound from the headphones**
  - Please ensure the volume is turned up, and the \ headphones are properly connected.
  - Check if the format of music file is supported by the player.
- Can not record**
  - Check if there is enough memory and battery capacity.
- Display is in the wrong language**
  - Please ensure you selected the correct language from the “Settings” menu.
- I cannot display my .jpg files**
  - Many digital cameras and image editing softwares add hidden data to the .jpg files. This data can prevent the player from loading the images. Try to eliminate them by saving the file with another name.

Limited Warranty

This product as supplied and distributed new by AIT, Inc. (“AIT”) to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase (“Warranty”).  
In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.  
  
**TO OBTAIN WARRANTY SERVICE:**

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no R.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

  
Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.  
  
The shipping address of the authorized service center is:  
  
**AIT, Inc.**  
ATTN: Customer Service (2nd Floor)  
14-C 53rd Street  
Brooklyn, NY 11232  
  
IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.  
  
Should you have any questions or problems concerning this product, please contact our customer service department at:  
  
**Customer Support:**  
☎ 1-877-768-8483 (Toll Free)  
✉ polaroidsupport@southerntelecom.com  
  
Monday - Thursday: 9AM - 5PM (EST)  
Friday: 9AM - 3PM (EST)

