

**San'Dy<sup>®</sup>**  
Dynamic  
Japan

使用説明書  
Instruction Manual

電熱水壺

Kettle

Model : SD-8026



SAN DYNAMIC LTD.  
Customer Hotline: (852)8206 2666

## 重要安全事項

- 請在水平、平坦的位置使用本產品。
- 熱水會燙傷人體，請勿將熱的水煲置于兒童易觸及的地方。
- 請勿將本產品的電源線置于兒童易觸及或拖拉的位置。
- 如果超出額度裝水，沸騰的水可能會噴濺出來。
- 當水沸騰時，請勿移開蓋子。
- 請不要在無水情況下操作本產品。
- 閑置時，請關閉電源並拔掉電源線。
- 本產品只可以在電源底座的作用下方可工作。
- 當開啓電源后，請勿移動本產品。
- 請在插接或拔去電源插頭時，將電源關閉。請手持插頭，而勿拽拉電源線。
- 在不使用本產品的情況下或清洗本產品之前，請關閉電源，移走插頭。
- 在未經相關專業人員檢查、測試之前，請勿使用加長電源接線。
- 請使用符合本產品標識之電壓設備。
- 兒童或者智障者使用本產品時，請予以緊密監督。
- 本產品使用過程中，不能處于無人監視狀態。請監督小孩子不要玩耍本產品。
- 請勿將本品作其他用途使用。
- 請勿將本品擺放或靠近燃汽火焰，電氣元件或正在加熱的烤爐。
- 請勿將電源線懸掛于廚房工作台邊緣或接觸任何熱源表面。
- 在電源線損壞的情況下，請勿使用本產品。
- 爲了額外的保護，建議您使用當地的，較平穩的電源設施，電源不超過30毫安。
- 請勿將本品置于水或者其他液體之中。
- 使用過程中，如有任何疑問，請與本公司聯系，請確認您理解以上安全說明。

## 部件名稱



- 1、壺蓋
- 2、管口過濾裝置
- 3、開／關按鈕
- 4、水位標尺
- 5、360度旋轉電源底座
- 6、手柄

## 產品規格

型號	SD-8026
電壓	220V~ 50Hz
功率	2000W

## 使用方法

第一次使用之前，請注水至最高標尺處，燒開並倒掉。

- 1、注水至所需水量（最少250毫升），您可以：  
通過出水口注水。

抓住把手，打開壺蓋，通過壺口注水。

注意：請勿注入超出水標尺最大尺度的水量，以防開水時熱水溢出。

- 2、如果您是打開壺蓋注水的，注完水后，請將壺蓋蓋緊。
- 3、將本產品置于其電源底座上，連接上220V交流電源，開啓電源。
- 4、按下ON / OFF開關，指示燈會顯示水煲處于工作狀態之中。

注意：請勿在水煲工作過程中移開煲蓋。

- 5、當水燒開時，本產品會自動關閉。

注意：請確保本產品的ON / OFF開關無任何障礙物塞住，如果有外力作用，ON / OFF開關不會自動關閉。使用過程中請不要將本產品從電源底座上移開。

- 6、將本產品從電源底座上提開，倒出熱水。
- 7、當不使用本產品時，請將其置于電源底座上。本產品不會重新工作，直至ON / OFF開關重新被開啓。

注意：當不使用本產品時，請確保電源開關處于關閉狀態。如果您讓本產品在無水狀態下工作，它將會自動切斷電源。如果發生此種情況，請待本產品完全冷卻之后，再重新注水操作。

- 8、電線儲存設施: 多余的電源線可以通過纏繞的方式隱藏並儲存在電源底座下方。
- 9、360度全方位電源底座。

## 清潔與保養

- 清洗本產品前，請將電源線拔開。  
在任何情況下，請勿將本產品的開關區域、電源線、電源底座置于水中或使得蒸汽接觸上述元件。
- 沉積物的移除：
  - 1、將3杯白醋注入本產品中，再加水注滿，保持一整夜。請勿煮沸。
  - 2、將本產品注滿水，燒開並倒掉。重複數次。
- 清洗拋光的煲身表面  
不鏽鋼煲身應使用潮濕的布擦拭，然後使用干燥的軟布擦干。  
注意：請勿使用化學製劑，金屬或研磨劑清洗本產品的表面，因為此類物品會刮花不鏽鋼表面。
- 清洗網狀過濾器  
移開煲蓋。抓住過濾器向上拉直至移開。請使用溫熱的肥皂水清洗，在再次使用前，請徹底使其干燥。

## WARNING

- Do not attempt to connect any other appliance to the base unit or this appliance to another base unit.
- Do not tamper with the connector in any way.
- Do not use the appliance for any use other than to boil water.
- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- The appliance must not be on the base unit when being filled with water.
- The mains lead of the cordless base cannot be repaired. If the mains lead is damaged, the cordless base should be discarded and replaced contact the help line for advice.
- Unplug from the outlet when not in use.
- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug-do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage(A.C only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not immerse the appliance in water or any other liquid unless recommended. If you have concerns regarding the performance and use of your appliance. Please contact the Consumer Service Line. Ensure the above safety precautions are understood.

## FEATURES



- 1, Lid
- 2, Spout filter
- 3, On/off switch
- 4, Water level indicator
- 5, 360° connector
- 6, Handle

## SPECIFICATIONS

Model Number	SD-8026
Power Supply	220V~ 50Hz
Power Consumption	2000W

## HOW TO USE

**Before using your kettle Fill the kettle with water up to the maximum level indicator, boil and discard.**

1. To fill the kettle with the desired amount of water(minimum 1cup/500ml) you can either:  
Fill the kettle through the large spout or Remove the lid by holding the cool touch knob firmly and pulling out.

**NOTE: Do not fill above the maximum level indicator(marked on the gauge as MAX) as water may spill out of the spout when boiling.**

2. If you filled the kettle by removing the lid, replace the lid by positioning it on top of the kettle and pressing firmly until it locks into position.

3. Place the kettle on the power base and connect the plug into a 220 Volt AC power outlet. Turn the power ON.

4. Press the ON/OFF switch downwards. The light will illuminate to indicate the kettle is heating.

**NOTE: Do not remove the lid while the kettle is in use.**

5. The kettle will switch off automatically once the water has boiled.

**NOTE:** Ensure that the ON/OFF switch is clear of obstructions. The kettle will not turn off if the ON/OFF switch is constrained. Do not remove the kettle from the power base while in use.

6. Lift the kettle from the power base and pour the water.

7. The kettle may be stored on the power base while not in use. The kettle will not re-boil until the ON/OFF switch is pressed downward.

**NOTE: Ensure the power is turned off at the power outlet when the kettle is not in use. Should you accidentally allow the kettle to operate without water, it will cut out for boil-dry protection. If this occurs, allow the kettle to cool before filling with cold water and re-boiling.**

**Cord Storage Facility.**

Excess cord can be stored by winging the cord around the storage facility underneath the power base.

**360° power base.**

## CARE AND CLEANING

- **Always disconnect the kettle from the power outlet before cleaning.**

- Never immerse the kettle switch area, cord or power base in water, or allow moisture to come into contact with these parts.

1. Fill the kettle with 3 cups of white vinegar and the remainder with water and allow to stand overnight. DO NOT BOIL.

2. Empty the solution from the kettle. Fill the kettle. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

- **To clean the polished exterior.**

The stainless steel surface may be wiped over with a damp cloth and polished with a soft dry cloth.

**CAUTION: Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the stainless steel surface.**

- **To clean the mesh filter.**

Remove the lid from the kettle. Grasp the top of the scale filter and pull upwards to remove. Wash in warm soapy water and dry thoroughly before replacing in the kettle.