


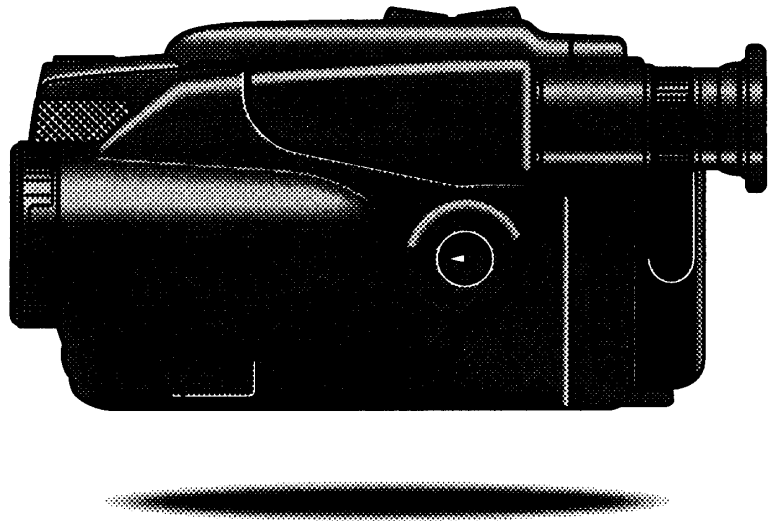

Instruction Manual

8 mm
Camcorder

VM-EX20P



8 PAL

PRECAUTIONS

Condensation

Condensation is the moisture that forms on the outside of a glass when you fill it with cold water.

Your camcorder incorporates a special safety device to avoid damage to the unit and to protect the internal mechanisms and tape when condensation is detected inside the unit.

Conditions where condensation might appear


- If the camcorder is suddenly moved from a cold place to a warm, humid one, or vice versa.
- If a heater has been turned on to quickly heat the room, or if the level of humidity is high.
- If taken from an air conditioned room, or car to a hot humid place.

Condensation warning indicator

- If condensation is detected inside the camcorder, the warning indicator illustrated below (A) will flash in the viewfinder.

As condensation may also appear inside the cassette casing, the warning indicator (B) might also flash when the cassette is loaded. When one of those indicators is displayed, the controls will be inoperative, except to unload the cassette. In such a case, eject the cassette and wait for 1 – 2 hours for the condensation to dry up. The time required to completely eliminate condensation may vary according to conditions.

- The first sign of condensation is fogging of the camcorder lens and viewfinder. As condensation may not have yet reached the inside of the camcorder the warning indicators will not appear. To stop the formation of condensation, wrap the camcorder in a cloth until the fogging on the lens and in the viewfinder disappears.

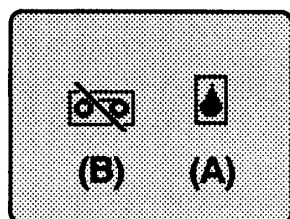

To prevent formation of condensation

In places like ski slopes, where the camcorder is subject to temperature variations, place the camcorder in a plastic bag before using it outside. When bringing back the camcorder indoors, leave it in the plastic bag for about one hour.



DO NOT OPEN THE CAMCORDER CASING

- Do not allow rain, steam, dew, salt water, sand, oily smoke, metal objects, etc. to enter the unit.
- Do not let direct sunlight or strong light hit directly on the lens or the viewfinder, as that may cause damage to the unit.
- If you notice anything unusual (smoke, strange noise or odour, etc.), stop using the unit and switch it off immediately. Consult the dealer where the unit was purchased, or contact a Sanyo authorized service centre.

Precautions during recording or playback

- Do not wrap the camcorder in a cloth, as the temperature inside will raise and damage the unit.
- Do not approach the camcorder to magnets, or magnetic fields as they may damage the recordings on the tape.
- Do not approach the camcorder to transmitting antennas, as this might cause the unit to malfunction.
- Do not use the unit for monitoring. If the unit is used to record the same subject for a long time (e.g. for surveillance), the picture quality will deteriorate.

Storage

Do not store the unit in the following locations:


- where it will be subject to direct sunlight (e.g. on a car dashboard, etc.),
- near bright light sources, or where the humidity level is high,
- in a closed car on warm or hot days, or close to a heat source (e.g. heater, stove, etc.),
- in presence of excessive dirt or dust,
- where it will be subject to strong vibrations, or near strong magnetic fields.

ABOUT COPYRIGHTS

Your recordings should only be used for personal purposes. The public showing of such material may be contrary to applicable laws.

ACCESSORIES

- ① AC adaptor/charger (VAR-S15B)
- ② DC connecting cord
- ③ RF converter
- ④ RF connecting cable
- ⑤ Battery pack (NP-55)
- ⑥ Lithium battery (CR2025)
- ⑦ Shoulder belt and lens cap cord
- ⑧ Remote control unit

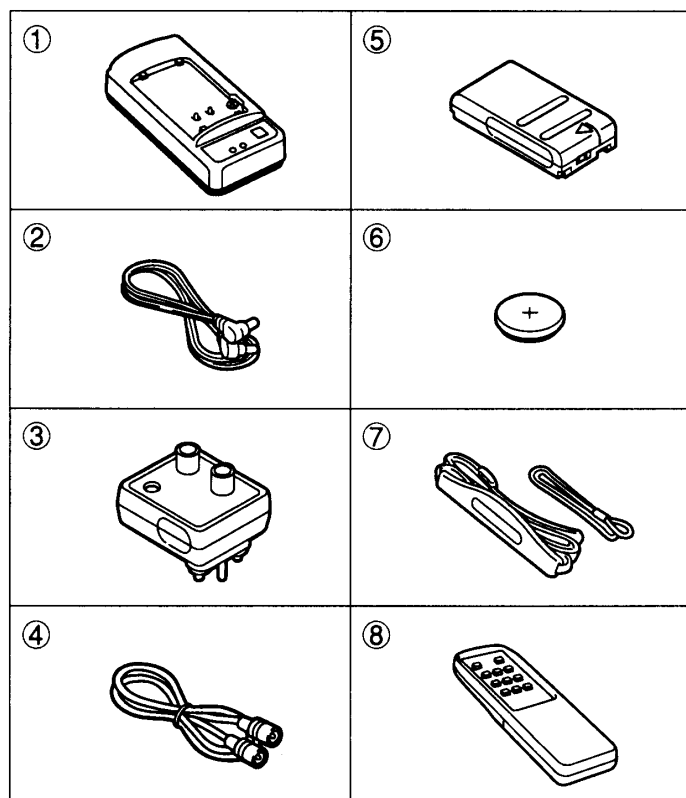

Features

8x power zoom
 Fuzzy logic system

- Full range auto focus
- Auto exposure
- Auto white balance

User-friendly operation

- 6 Preset modes
- Stand-by switch

Infrared remote control
 Fade-in, Fade-out


CONTENTS

CAMCORDER PARTS NAMES	3
● Rear 1	
● Rear 2	
● Front	
REMOTE CONTROL PARTS NAMES	5
● Using the remote control	
RECORDING BASIC STEPS	6
BATTERY PACK	8
● Installing the battery pack on the AC adaptor/charger	
● Recharging the battery pack	
● Refreshing the battery pack	
● Charging/Operating time	
● Installing the battery pack	
INDOORS RECORDING	10
● AC adaptor/charger	
LOADING AND UNLOADING THE CASSETTE	11
CAMCORDER OPERATION	12
● Using the stand-by switch	
● Setting the recording tape speed mode	
● Recording the date and time	
● Recording review	
● Fade-in, Fade-out	
● Zooming	
● Linear time counter	
INSTALLING THE LITHIUM BATTERY	14
SETTING THE DATE AND TIME	15
FOCUS	16
PRESET MODES	17
PLAYBACK	18
EDITING	19
● Tape copy	
● Transition recording	
CONNECTIONS	20
AVAILABLE ACCESSORIES SOLD SEPARATELY ...	22
MAINTENANCE	23
● Cleaning the viewfinder	
● Using the camcorder abroad	
TROUBLESHOOTING GUIDE	24
SPECIFICATIONS	25
INDICATORS	26

CAMCORDER PARTS NAMES


Rear 1

- ❶ Viewfinder
- ❷ Eyesight compensation ring
- ❸ Control panel (1)
- ❹ Preset mode selector
- ❺ Control panel (2)
- ❻ Battery release button (**BATT**)
- ❼ Shoulder belt hook
- ❽ Battery pack holder
- ❾ DC input terminal

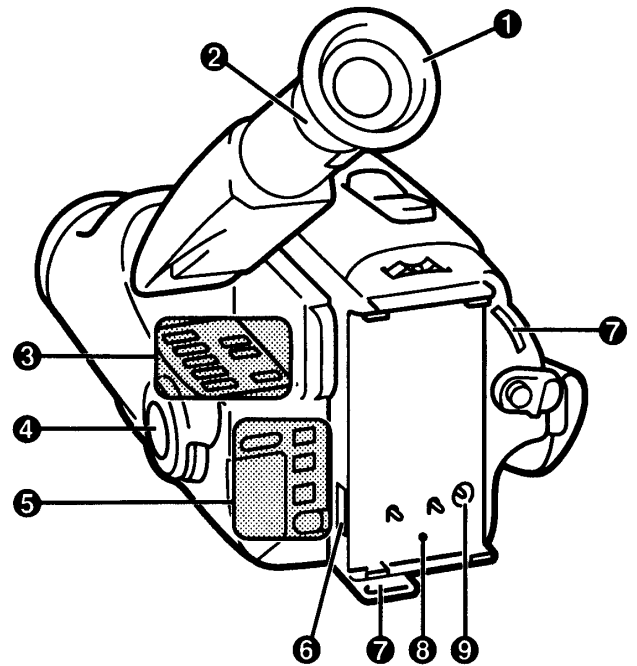

Control panel (1)

- ❶ Rewind/Reverse search button (**REW**)
- ❷ Playback button (**PLAY**)
- ❸ Fast-forward/Forward search button (**FF**)
- ❹ Still button (**STILL**)
- ❺ Stop button (**STOP**)
- ❻ Tape speed select button (**SP/LP**)
- ❼ On-screen display button (**DATA ON SCREEN**)
- ❽ Cassette eject button (**EJECT**)

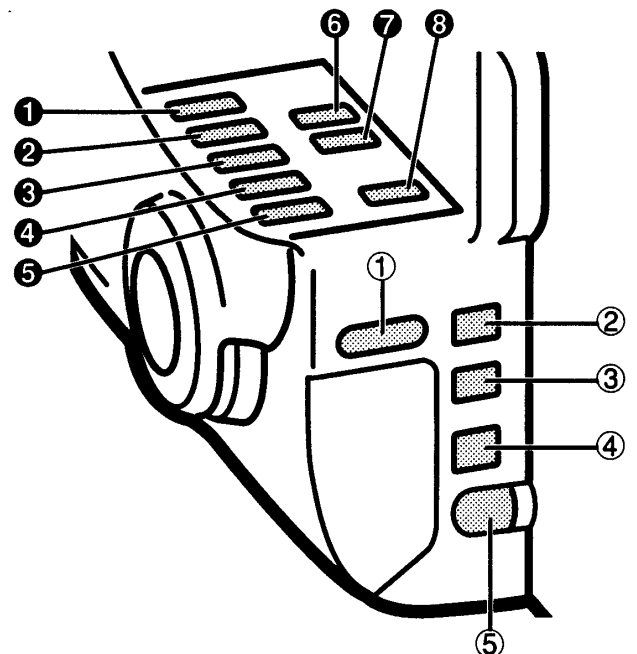



Control panel (2)

- ❶ Auto focus/Manual focus select button (**FOCUS AF/MF**)
- ❷ Counter reset button (**COUNTER RESET**)
- ❸ Counter memory button (**COUNTER MEMO**)
- ❹ Date/Time select button (**DATE**)
- ❺ Fade button (**FADE**)

CAMCORDER PARTS NAMES


Rear 2

- ❶ Power switch (**POWER; CAMERA, OFF, PLAYER**)
- ❷ Tripod screw mount
- ❸ Date and time adjustment button (**ADJ**)
- ❹ Recording start/stop button (**REC START/STOP**)
- ❺ LANC terminal (Ⓛ)
- ❻ Stand-by switch (**STANDBY, POWER SAVE**)
- ❼ Terminals cover
 - Ⓐ Remote control terminal (**REMOTE**)
 - Ⓑ External microphone jack (**MIC**)
 - Ⓒ Video output terminal (**VIDEO**)
 - Ⓓ DC output terminal
 - Ⓔ Audio output terminal (**AUDIO**)

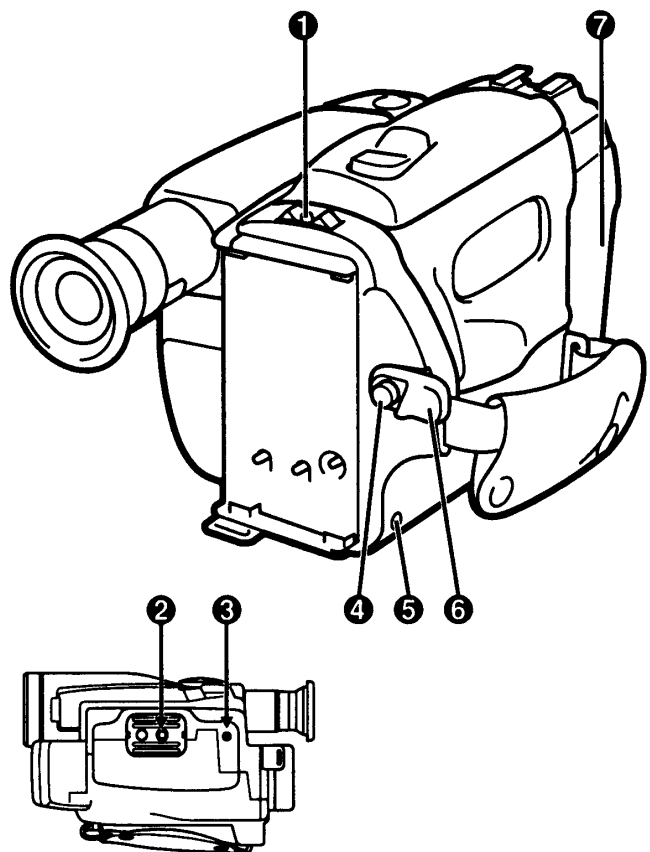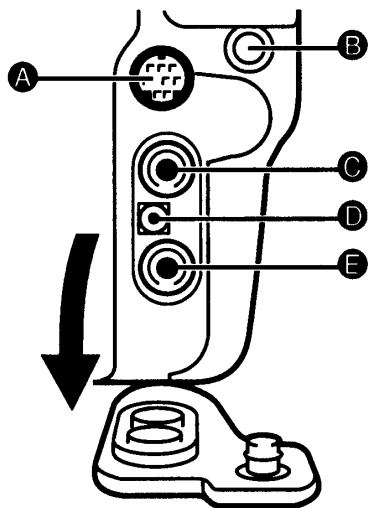


Front

- ❶ Power zoom button (**T, W**)
- ❷ Scene search buttons (**SCENE SEARCH +, -**)
- ❸ Accessory shoe (hot shoe)
- ❹ Microphone (monaural)
- ❺ Recording indicator
- ❻ Manual focus dial (**MANUAL FOCUS**)
- ❼ Lithium battery tray
- ❽ Remote control sensor
(Press to expose it, it can then be turned 360° to face the remote control location.)

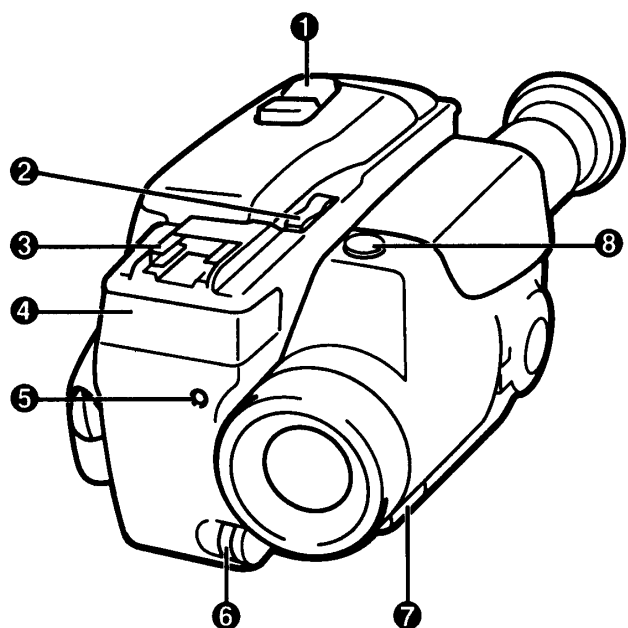


REMOTE CONTROL PARTS NAMES

- ❶ Recording start/stop button (**REC START/STOP**)
- ❷ Rewind/Reverse search button (**REW**)
- ❸ Pause/still button (**STILL**)
- ❹ On-screen display button (**DATA ON SCREEN**)
- ❺ Counter reset button (**COUNTER RESET**)
- ❻ Counter memory button (**COUNTER MEMORY**)
- ❼ Scene search buttons (**- SCENE SEARCH +**)
- ❽ Fast-forward/Forward search button (**FF**)
- ❾ Stop button (**STOP**)
- ❿ Playback button (**PLAY**)

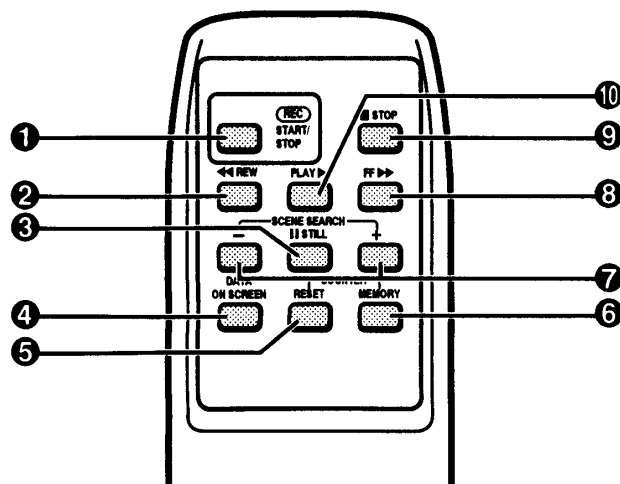

Inserting the batteries

Open the battery compartment lid, and insert two AA 1.5 volt batteries (sold separately), respecting the (+) and (-) polarity indicated inside the battery compartment. Close the battery compartment lid.

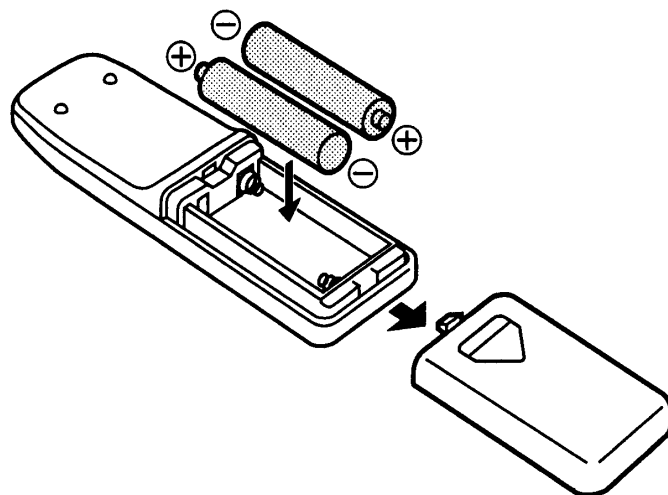

Using the remote control

The remote control can be used within a range of 5 m (16 ft) from the front of the sensor window. If the range seems to decrease or the remote control does not function, replace the remote control batteries.


- ❶ Press on the remote control sensor to expose it. The remote control sensor on the camcorder can then be turned to face any direction. Press it again to conceal it when not using the remote control.

- ❷ Direct the remote control toward the remote control sensor window, press the desired buttons to operate the camcorder.

During recording, the recording indicator (A) will light. It will flash during a recording pause.

Note: Remote control operation is not possible if:

- a strong light or sunlight is directed at the remote control sensor,
- there is an obstacle between the remote control unit and the camcorder,
- it is operated from the cassette holder side of the camcorder.

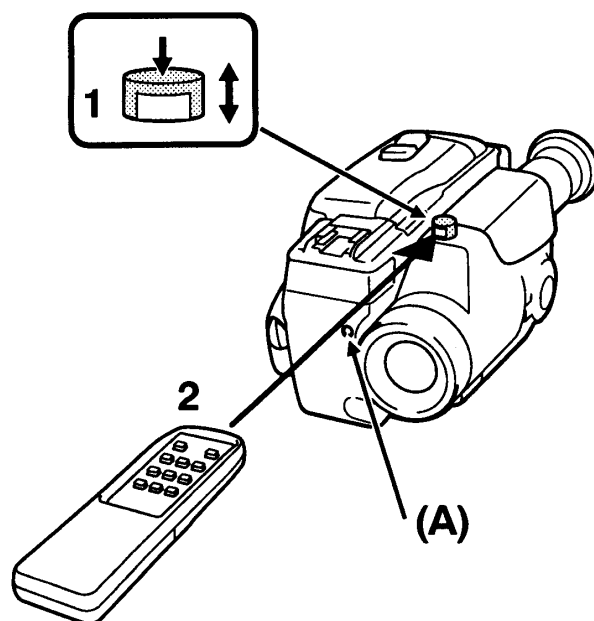

RECORDING BASIC STEPS

- 1 Install a charged battery pack on the camcorder. (See pages 8 and 9.)
- 2 Load a cassette tape. (See page 11.)
- 3 Set the **POWER** switch to "**CAMERA**".
Set the **POWER** switch while holding down the small button in the centre of the switch.
- 4 Set the preset mode selector to "**AUTO**". (See page 17.)
- 5 Set the stand-by switch to "**STANDBY**". (See page 12.)



- 6 Press the **REC START/STOP** button to start recording. "**REC**" is displayed in the viewfinder.





To stop recording, press the **REC START/STOP** button again. Recording will stop and "**PAUSE**" will be displayed in the viewfinder. To resume recording press the **REC START/STOP** button again.

When finished recording, press the **REC START/STOP** button, then unload the cassette tape and set the **POWER** switch to "**OFF**".

Notes:


- Vertical stripes may appear when recording, in a dark place, a light source such as a candle light, etc.
- If a recording pause continues for more than 5 minutes, the power is cut to prevent the tape from being damaged. To resume recording, press the **REC START/STOP** button twice.

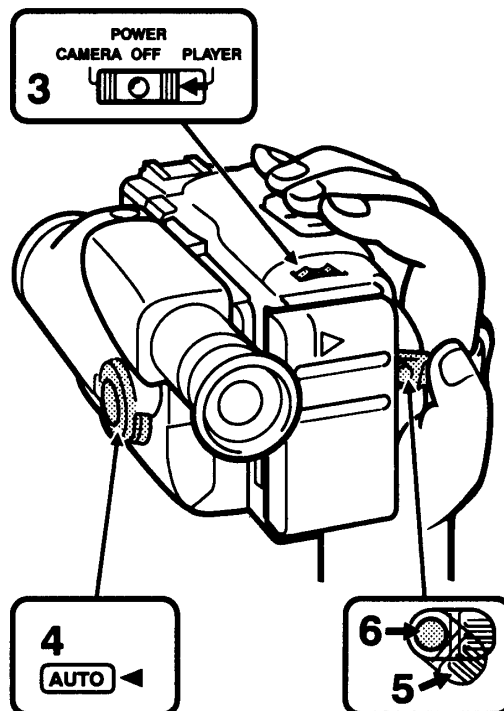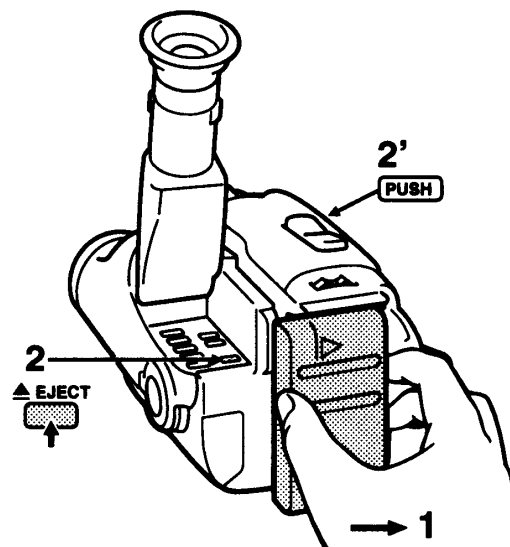


RECORDING BASIC STEPS

Lens cap

A: To remove the lens cap, press on both sides, as illustrated.

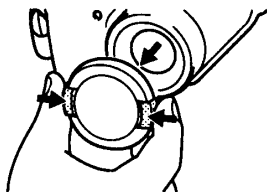

B: To prevent losing the lens cap, attach it to the camcorder using the cord.

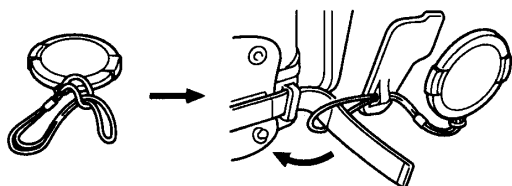


Adjusting the grip belt

Adjust the grip belt as illustrated, so that it is tight around the hand when the **REC START/STOP** button and the power zoom button are reached with the tip of the fingers.


Eyesight compensation ring

Turn the camcorder on, then while looking into the viewfinder turn the ring (A), to the right or to the left, to obtain the clearest possible picture.

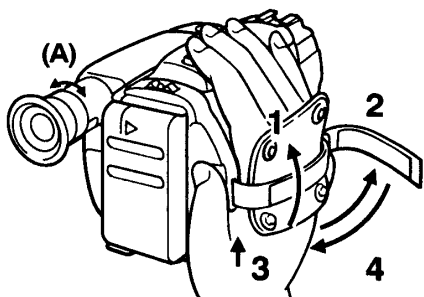

Installing the shoulder belt

Install the shoulder belt as illustrated.

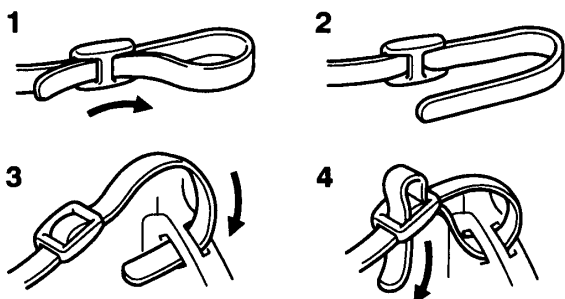

Installing the tripod

Align the tripod mounting screw with the tripod mounting hole in the bottom of the unit. Then, securely tighten the mounting screw.

Holding the camcorder

A: Keep your feet slightly apart, and the upper arms close to the body. Hold the camcorder horizontally. When possible rest your elbows on a table, or your back on a wall, etc. for more stability.

B: Raise the viewfinder, for a comfortable low angle recording position.


C: Use a tripod for jitter-free pictures.



BATTERY PACK

Installing the battery pack on the AC adaptor/charger

- 1 Align the marks on the battery pack with the ones on the AC adaptor/charger and while pressing it down, slide it in the direction of the arrow until a click is heard.
- 2 Plug the AC adaptor/charger power cord into an AC outlet. The **POWER** indicator (A) lights.

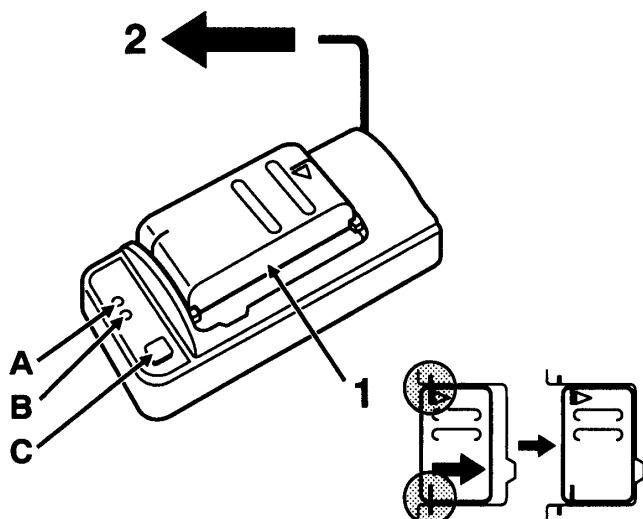

Recharging the battery pack

When the battery pack is installed on the AC adaptor/charger and the power cord is plugged in an AC outlet, the **CHARGE** indicator (B) will light and the battery pack is automatically recharged. When it is fully charged, the indicator will go off. Remove the battery pack in the reverse order of installation.

Refreshing the battery pack

Install the battery pack on the AC adaptor/charger, then press the **REFRESH** button (C). The **CHARGE** indicator (B) will flash (slow cycle), and the remaining charge of the battery pack is discharged, then the **CHARGE** indicator will stop flashing and the battery pack is automatically recharged.


Notes:

- If the **CHARGE** indicator flashes rapidly, remove the battery pack immediately, then try again making sure the battery pack is correctly installed. If the **CHARGE** indicator still flashes rapidly it may indicate that the battery pack cannot be used. Please consult your dealer for assistance.
- When finished, make sure to unplug the AC adaptor/charger power cord from the AC outlet.
- Do not use the AC adaptor/charger for a purpose other than charging the battery pack or supplying power to the camcorder.


Charge condition indicator switch


When the battery pack is fully charged, slide the switch on the end of the battery in order to reveal the red circle. Once it is exhausted, slide the switch to cover the red circle.

This switch is used as a reminder only, it has no function in the operation of the battery pack.

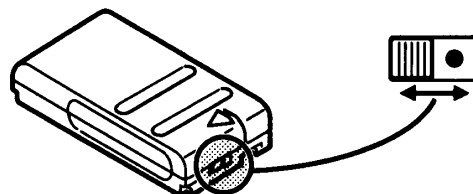

Battery pack low power indicator

The low power indicator  flashes in the viewfinder when the remaining charge of the battery pack is low and there are only a few minutes of operation left before the power to the camcorder is cut off. The battery pack should be recharged, or replaced with a charged one.

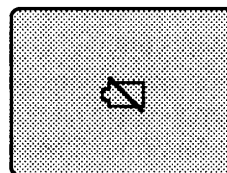

Notes:

- Do not short-circuit the battery pack terminals, and never try to disassemble or modify it.
- Do not throw in the fire, as it may explode.
- Before recharging the battery pack, exhaust the available charge or use the Refresh function of the AC adaptor/charger. Recharging a battery pack when it is not completely discharged will shorten the operating time it provides.
- If a charged battery pack is not used for 2 – 3 months or more, its charge will last shorter than normal. To restore the charge to its original level, it should be used until completely discharged and recharged two or three times.

BATTERY PACK

Charging/Operating time

When the battery pack is fully charged, the approximate available operating time (the camcorder in recording mode), at normal temperatures, is as described below.

Battery pack model	Refresh time	Charging time	Operating time
NP-55 (supplied)	210 min.	60 min.	65 min.
NP-77 (sold separately)	420 min.	120 min.	130 min.
NP-77H (sold separately)	480 min.	150 min.	140 min.

Ni-MH battery pack

This AC adaptor/charger can also be used to charge Ni-MH battery packs (model NP-S88A, sold separately). For more details, please consult the dealer where the unit was purchased.


Notes:

- The following operations also require power, and will shorten the operating time indicated above. It is therefore recommended to have available charged battery packs to last 2 or 3 times the actual planned recording duration.
 - Recording pause mode
 - Using the power zoom
 - Loading and unloading the cassette
 - Using a video light (sold separately)
 - Monitoring the recording on the remote control colour monitor (sold separately)
- When the battery pack is used for the first time, the operating time will be slightly shorter than normal. It should be used until completely discharged and recharged two or three times before the complete charge is available.
- Charging the battery pack is possible within a temperature range of 5° – 35°C. For best results, a temperature range of 10° – 30°C is recommended.
- If the camcorder is not used for a long period, remove the battery pack. If not, the battery pack will slowly lose its charge.
- Do not store a battery pack where it could reach high temperatures.
- Battery packs last shorter when used in low temperatures.

Installing the battery pack


The supplied battery pack has not been charged, make sure to charge it before using it on the camcorder for the first time.

- 1 Set the **POWER** switch to "OFF".
- 2 Align the marks on the battery pack with the ones on the camcorder and while pressing it down, slide it in the direction of the arrow, until a click is heard.

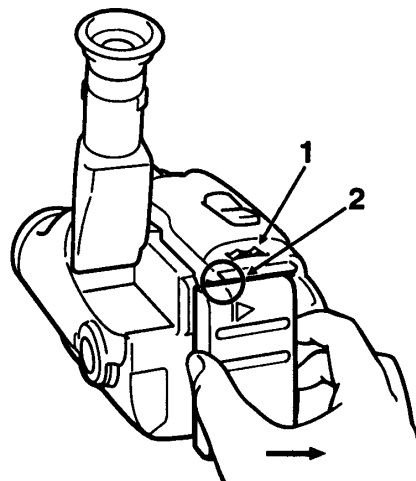

Removing the battery pack

To remove the battery pack, push and hold down the **BATT** button, then slide the battery pack in the opposite direction of the arrow.

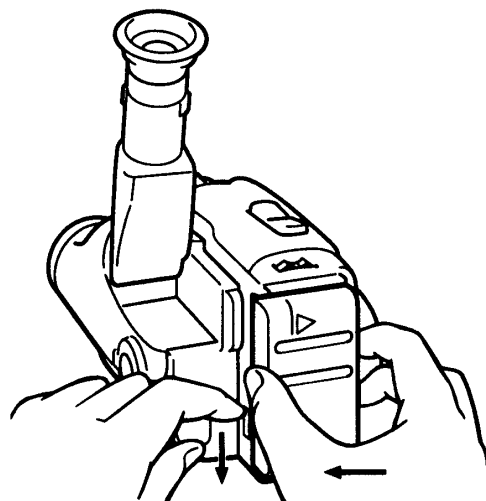


INDOORS RECORDING


AC adaptor/charger

The AC adaptor/charger is used to power the camcorder indoors, where an AC outlet is available. It is also used to recharge your battery pack(s).


The supplied AC adaptor/charger can be used in any country where the standard voltage is between 100 V and 240 V AC. However, you will have to use a plug adaptor where the plug standard is different.

- 1 Connect to DC connecting cord from the DC output terminal on the AC adaptor/charger to the DC input terminal on the back of the camcorder.
- 2 Plug the AC adaptor/charger power cord into an AC outlet.

 **Note:** For this product use the supplied AC adaptor/charger (conforming to the EIA Japanese standard, with a unified polarity type plug). Use of another AC adaptor/charger may cause trouble.

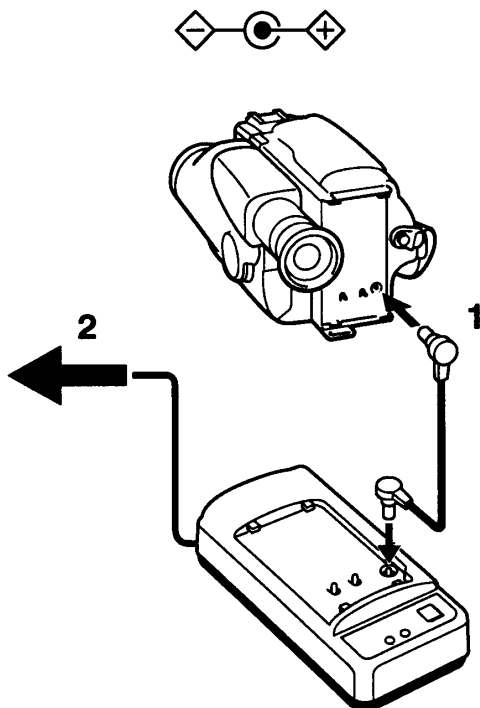

THIS PLUG IS NOT WATERPROOF-KEEP DRY

This cord is already fitted with a moulded plug incorporating a fuse, the value of which is indicated on the pin face of the plug. Should the fuse need to be replaced, an ASTA approved BS 1362 fuse must be used of the same rating, marked thus .

If the fuse cover is detachable, never use the plug with the cover omitted. If a replacement fuse cover is required ensure, it is of the same colour as that visible on the pin face of the plug (ie red or orange). Fuse covers are available from the Parts Department indicated in your User Instructions.

If the plug supplied is not suitable for your socket outlet, it should be cut off and destroyed. The end of the flexible cord should be suitably prepared and the correct plug fitted.

WARNING: A PLUG WITH BARED FLEXIBLE CORDS IS HAZARDOUS IF ENGAGED IN A LIVE SOCKET OUTLET.


IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:



As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal in the plug which is marked with the letter N or coloured Blue or Black. The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  OR COLOURED GREEN OR GREEN/YELLOW.


LOADING AND UNLOADING THE CASSETTE

Loading a cassette


A charged battery pack must be installed on the camcorder for cassette loading and unloading.

- 1 Press the **EJECT** button, the cassette holder will open.
- 2 Insert the cassette fully with the window facing outwards.
- 3 Gently press on the indication "**PUSH**" on the cassette holder until it clicks into place.


1

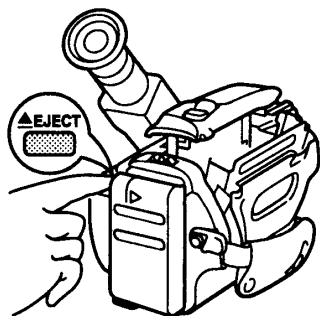

2

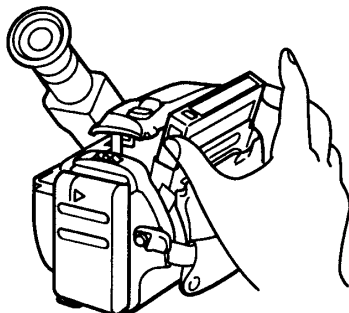

3

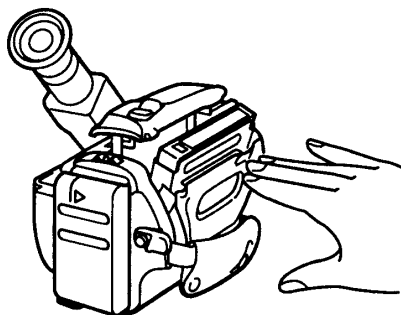


Erasure-prevention switch

To prevent accidental erasure of recorded material, use the erasure-prevention switch, as described below.


A: Recording is possible

B: Recording is not possible

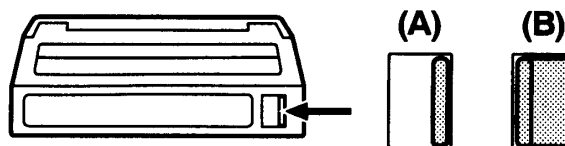

Before loading the cassette

Recorded cassettes or new cassettes tapes may be loosely wound. Loose tape winding can be eliminated by gently turning with a finger the left reel, see illustration, at the bottom of the cassette.

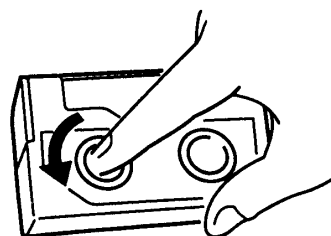

Notes:

- Do not cover the holes at the bottom of the cassette.
- Store the cassettes in their case, away from strong light or heat sources, standing upright (vertical) to prevent dust from entering, as well as uneven tape winding.

Unloading the cassette

- 1 Press the **EJECT** button, the cassette holder will open.
- 2 Remove the cassette.
- 3 Gently press on the indication "**PUSH**" on the cassette holder until it clicks into place.

CAMCORDER OPERATION

Using the stand-by switch


When the **POWER** switch is set to "**CAMERA**", the stand-by switch is used as follows:

A: "STANDBY" position:

For recording; press the **REC START/STOP** button to start recording or to go into recording pause mode.

B: "POWER SAVE" position:

When not recording momentarily; the power to the viewfinder is cut in order to save the battery pack charge.

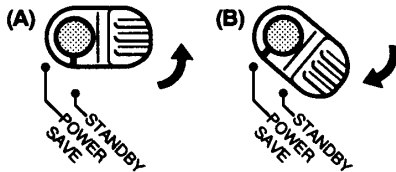

Setting the recording tape speed mode

When the camcorder is turned on, the SP mode (high quality recording) is set automatically. No tape speed mode display indicates that the SP mode is selected.

The tape speed cannot be modified while recording.

A: To set the tape speed to LP mode, the longest recording duration (double the standard recording duration), press the **SP/LP** button for about two seconds.

If the camcorder is turned off and on again (with the **POWER** switch) the tape speed mode is automatically reset to SP mode.




B: To set the tape speed to SP mode, for high quality recording, press the **SP/LP** button for about two seconds.



Recording the date and time

The date and time will be recorded on the tape as displayed in the viewfinder. The date and time will not be displayed if they have not been set. (See pages 14 and 15.)


Press the **DATE** button to select the desired display mode, as shown below.

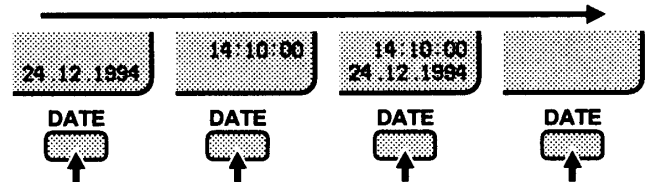

Recording review

If the camcorder is in recording pause mode, press and release the **SCENE SEARCH** (←) button once to review, in the viewfinder, the last few seconds of the recording. Then, the camcorder will automatically return to recording pause mode at the exact point where it previously was.


Note: Do not hold the **SCENE SEARCH** (←) button as the camcorder will go into scene search mode.

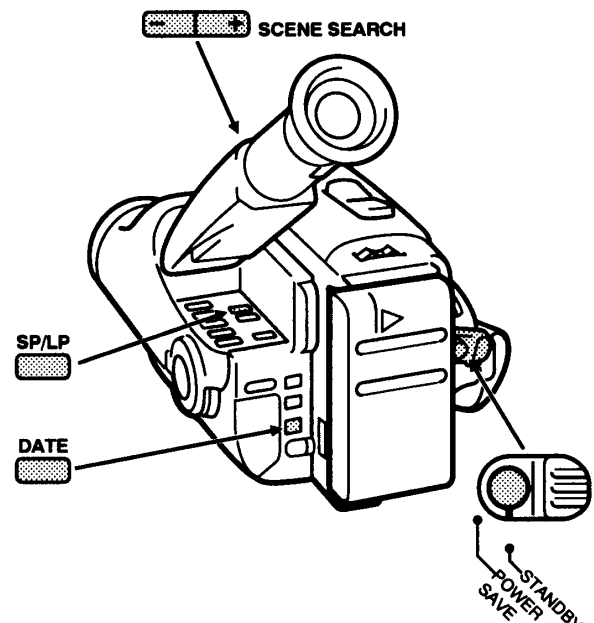

Fade-in, Fade-out


The fade-in will bring the picture and sound gradually. Fade-out will do the reverse, gradually erasing the picture and sound.

 - For example, after recording a title, set the camcorder to recording pause mode, then press the **FADE** button.




- Press the **REC START/STOP** button. The picture and sound will gradually fade in from a white background.


Note: During the fade-in or fade-out "**FADE**" flashes in the viewfinder. Do not press the **REC START/STOP** button while "**FADE**" is flashing in the viewfinder, as that will cancel the fade-in function.

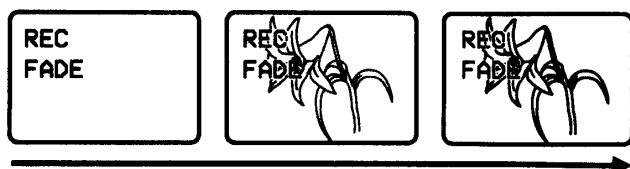

- Press the **REC START/STOP** button again. The picture and sound will gradually fade out to a white background, and the camcorder will go into recording pause mode and the fade function is cancelled.


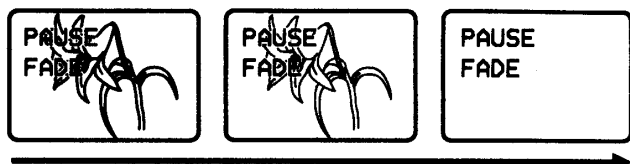


Note: During recording, the fade-out function can be cancelled or turned on by pressing the **FADE** button.

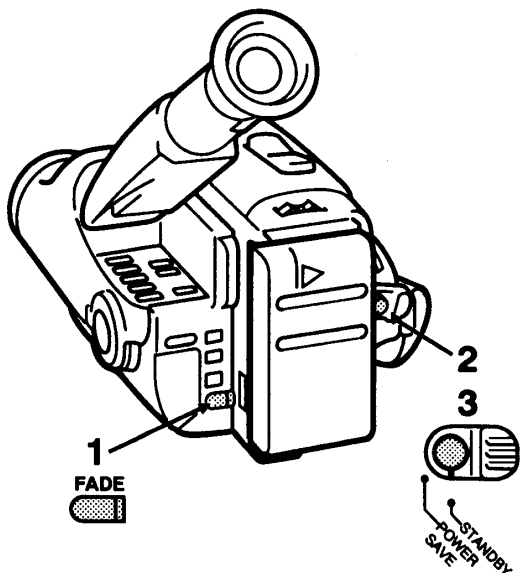

Zooming

Press the "**T**" side of power zoom button for a close-up shot (A: Zoom-in) and the "**W**" side for a wide-angle shot (B: Zoom-out).

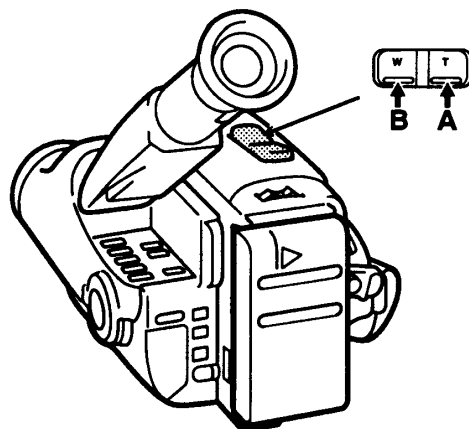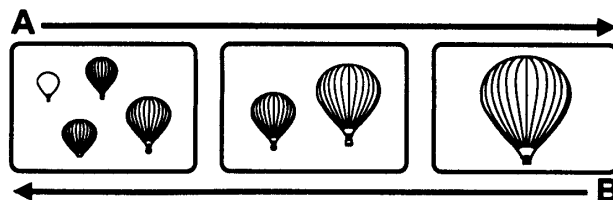

Notes:

- Picture vibration is more noticeable when zooming in to record a close-up shot. If possible, use a tripod or make sure that the camcorder is kept steady.
- When the **POWER** switch is set to "**OFF**", the zoom will automatically return to the full zoom-out position.

CAMCORDER OPERATION


Linear time counter

The linear time counter indicates the tape run time in hours, minutes and seconds.

- Press the **COUNTER RESET** button to reset the counter to "0:00:00". If you reset the counter at the beginning of the tape, you can determine the recording duration.
- Press the **COUNTER MEMO** button and "M" is displayed. When "M" is displayed, the "0:00:00" point is memorized (not the point where the **COUNTER MEMO** button was pressed). Press the **COUNTER MEMO** button again to erase the "M" and cancel the memory function.

Using the memory function

- 1 Press the **COUNTER RESET** button.
- 2 Press the **COUNTER MEMO** button.
- 3 Set the **POWER** switch to "PLAYER".
- 4 Press the **REW** button. The tape will be rewound and will automatically stop at the counter reading "0:00:00".

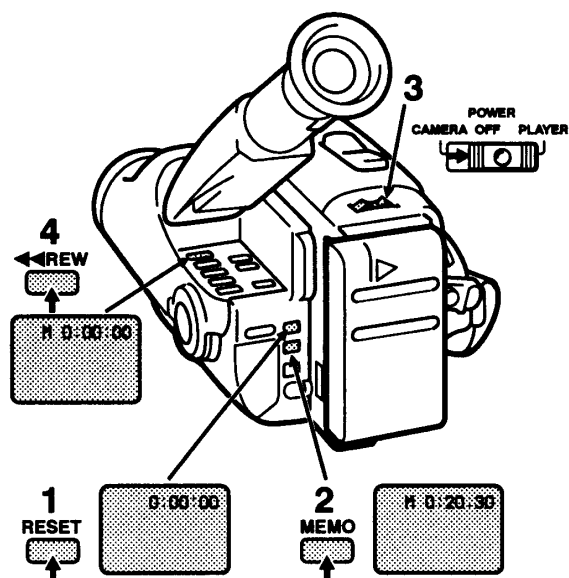


Notes:

- When pressing the **REW** button, the tape might not stop at the exact "0:00:00" location.
- If tape is rewound past "0:00:00", the counter reading will indicate a negative "-" value.

INSTALLING THE LITHIUM BATTERY

After the lithium battery is installed, the time and date will need to be set. (See page 15.)

- 1 Open the lithium battery tray (at the bottom of the camcorder), using a coin as shown below.
- 2 Insert the lithium battery in the tray with the (+) sign facing up.
- 3 Insert the tray back into the camcorder.

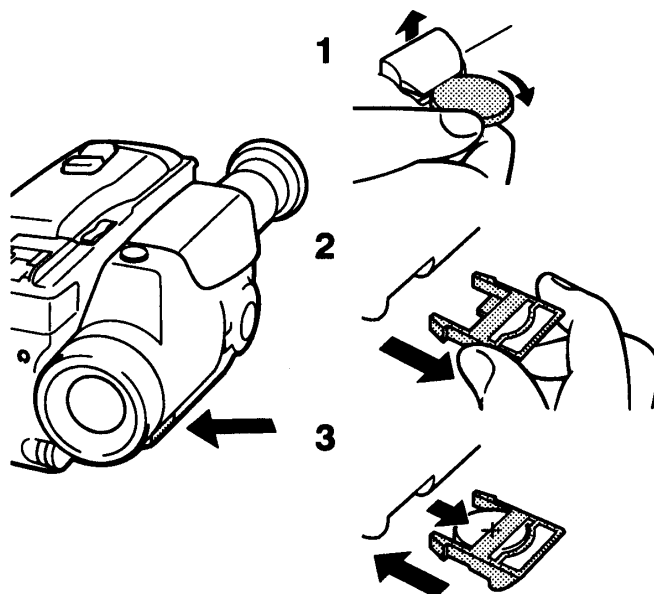

Notes:

- Before use, wipe the battery clean with a dry soft cloth to assure good contact.
- Never use metallic tweezers to hold the battery, and never short circuit the (+) and (-) sides of the battery.
- Under normal conditions, the lithium battery should last about 1 year. If the lithium battery is expired "88:88" will flash in the viewfinder.

WARNING:

- The lithium battery must only be replaced with a lithium battery model number Sanyo CR2025 [3 V]. Use of another lithium battery may present the risk of fire or explosion.
- Keep the batteries away from children.
- If a battery is swallowed, see a doctor immediately.
- Dispose of used lithium batteries promptly, in a safe manner that complies with all applicable laws.
- The lithium battery may present the risk of fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 212°F (100°C) or dispose of in the fire.

SETTING THE DATE AND TIME

Example: Setting the date and time to 2:10 P.M.,
December 24, 1994.

When holding the **DATE** button to set the date and time, the numbers will change rapidly. When the desired setting approaches, release the button, then press it repeatedly so that the desired number is not missed.


Use a thin object, such as a pen, to press the **ADJ** button on the bottom of the camcorder.

- 1 Set the **POWER** switch to "**CAMERA**".
- 2 Press the **ADJ** button for about two seconds. The reset time (0:00:00) and date (1. 1. 1993) are displayed flashing.
- 3 Press the **DATE** button until the desired day (24) is set, then press the **ADJ** button.
- 4 Press the **DATE** button until the desired month (12) is set, then press the **ADJ** button.
- 5 Press the **DATE** button until the desired year (1994) is set, then press the **ADJ** button.
- 6 Press the **DATE** button until the desired hour (14 (2 P.M.)) is set, then press the **ADJ** button.
- 7 Press the **DATE** button until the desired minutes (10) are set.

The seconds counter will start counting from "00" when the **ADJ** button is pressed after setting the minutes. To set the seconds accurately, press the **ADJ** button in coordination with the actual time indication (radio signal, etc.).

Notes:

- The date and time are not displayed when the **POWER** switch is set to "**PLAYER**".
- The date and time cannot be set while in recording or playback mode.
- If "88:88" is displayed flashing, it indicates that the lithium battery is exhausted. Replace it with a new one, and reset the date and time.
- The date and time need to be set only once. However, they will need to be reset after the lithium battery is replaced.

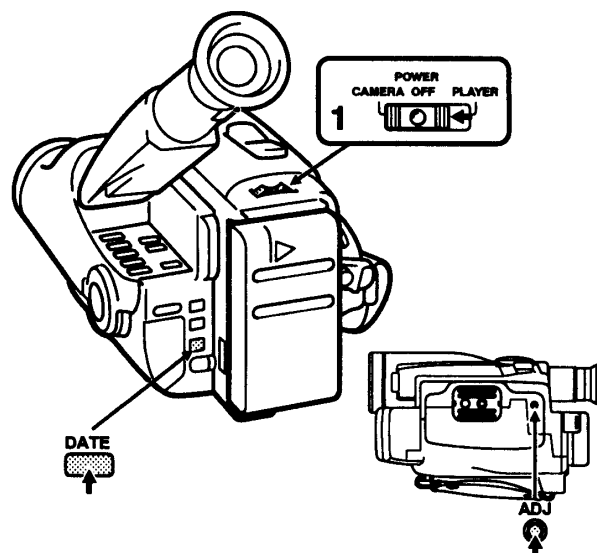

2		ADJ	0:00:00 1.1.1993
3	DATE	ADJ	0:00:00 24.1.1993
4	DATE	ADJ	0:00:00 24.12.1993
5	DATE	ADJ	0:00:00 24.12.1994
6	DATE	ADJ	14:00:00 24.12.1994
7	DATE	ADJ	14:10:00 24.12.1994


FOCUS

Auto focus

With the **POWER** switch set to "**CAMERA**", set the preset mode selector to "**AUTO**" and the auto focus mode will be set. The camcorder will automatically focus on any subject at a distance of 1.1 m or more from the lens.

In the following recording conditions the focus may not adjust properly. It is recommended to switch to manual focus or change the preset mode selector setting to get a focused picture. (See page 17.)

- A:** When recording two subjects, one nearby and one distant.
- B:** When recording through a dirty or wet window.
- C:** When recording a dark subject.
- D:** When recording subjects without contrast (a white wall, etc.).
- E:** When recording a horizontally striped subject.
- F:** When recording very bright subjects.
- When recording a fast moving subject.
- When using a filter or conversion lens.

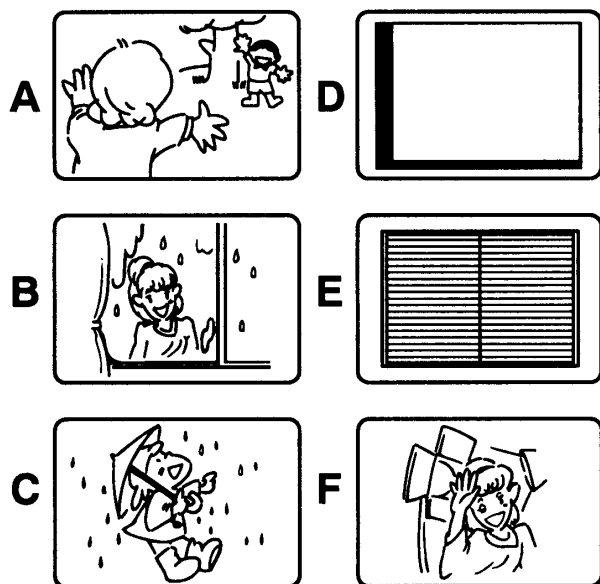


Note: When zooming in to record a distant subject, at close-range, the auto focus might not function properly due to the instability of the picture. In that case, use a tripod for stable focused pictures.

Close-up recording

When recording a subject closer than 1.1 m, change to wide-angle (the subject is as small as possible in the viewfinder). At full wide-angle, the focus is automatically set at distances as close as 1 cm from the lens. (See close-up mode, page 17.)

Manual focus

- 1 Press the **FOCUS AF/MF** button. "MF" is displayed in the viewfinder.
- 2 Press "**T**" of the power zoom button to zoom in on the subject.
- 3 Turn the manual focus dial to adjust the focus. If you set the focus on a zoomed out picture, then the picture will not be in focus when zooming in.
- 4 Press "**W**" of the power zoom button to select the desired recording field.

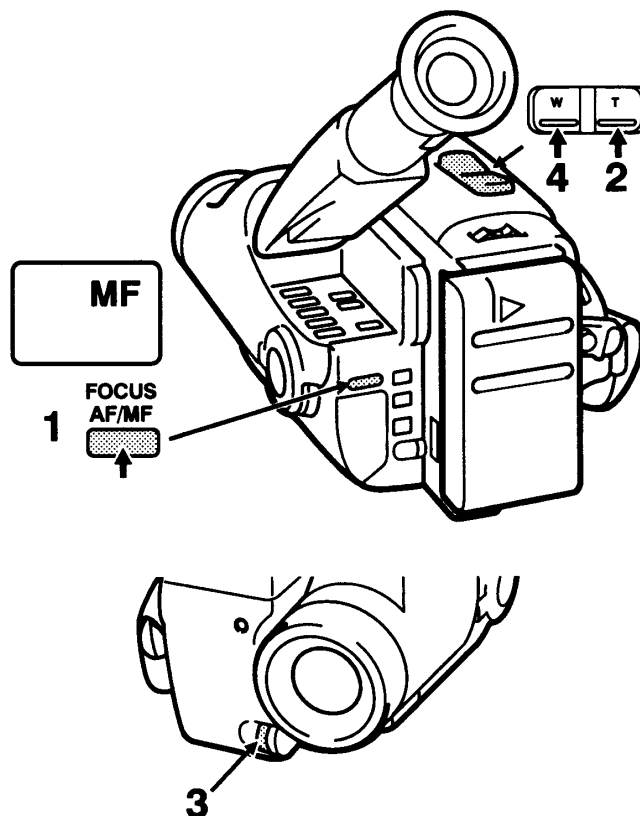


PRESET MODES

By turning the preset mode selector, you can set one of the preset modes by aligning the arrow with the mode indicator. Using preset modes you can easily record fast moving subjects, record under insufficient light conditions, etc.

When a preset mode is selected, the corresponding indicator will appear in the viewfinder.

Note: When a preset mode is set or changed, the focus is automatically reset to auto focus mode.

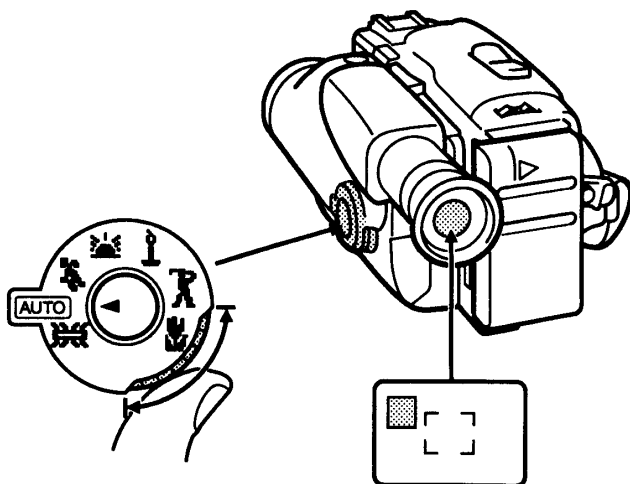

Indicator	Shutter speed	Auto focus range
	1/120 sec.	1 cm – ∞
	1/50 – 1/250 sec.	2.5 m – ∞ centre frame area only
	1/50 sec.	1 cm – ∞
	1/50 sec.	1 cm – ∞
	1/250 – 1/10,000 sec.	1 cm – ∞
	1/50 sec.	1 cm – 2 m

■ Flickerless mode

This mode is used to record under fluorescent lighting, if a flickering picture is seen in the viewfinder. This may be useful when recording under fluorescent lamps in a foreign country where the current is 60 Hz.

■ Auto mode **AUTO**

Normally, this mode should be used under normal recording conditions.

In the Auto mode no indicator will appear in the viewfinder. The shutter speed is set to 1/50 sec. and the auto focus range to 1 cm – ∞, for best recording under normal conditions.

■ Sports mode

This mode is used for recording football games, or other fast-moving subjects. When using this mode the main subject should be kept in the frame area at the centre of the viewfinder for the focus to function properly.

Colours may change if this mode is used indoors under fluorescent lighting.

■ Twilight mode

Use this mode to capture the colours of sunrise or sunset.

■ Low Light mode

This mode will give the best results when recording indoors under low light conditions. Brighter pictures will be recorded but the picture quality will be coarser.

Should not be used if the lighting is sufficient.

■ Auto High Speed Shutter mode

For recording very fast movements such as a golf swing, a tennis stroke, etc., that will give a clear playback picture.

Colours may change if this mode is used indoors under fluorescent lighting.

■ Close-up mode

This mode will permit you to record small subjects such as flowers, insects, etc. at short distance. The zoom will be automatically set to full wide-angle position.

PLAYBACK

The camcorder can be used to play back a recorded tape and view it on a TV receiver.

For playback, a stable power supply to the camcorder is necessary, it is recommended to use the AC adaptor/charger. (See page 10.)

Load the recorded tape into the camcorder, then set the **POWER** switch to "**PLAYER**".

Using the **PLAY**, **STILL**, and **STOP** buttons

- Press the **PLAY** button to start playback.
- Press the **STILL** button for a still picture. Press the **STILL** button again to resume playback.
- Press the **STOP** button to stop playback.

Using the **REW** and **FF** buttons

- Press the **REW** button to rewind the tape.
 - Press the **FF** to advance the tape.
- To stop the tape, press the **STOP** button.

Special playback mode A

- Press and hold the **REW** button while the tape is being rewound to watch the reverse picture playback.
- Press and hold the **FF** button while the tape is being advanced to watch the picture playback.
- Release the **REW** or **FF** button to resume normal tape rewind or advance.

Special playback mode B


- Press and hold the **REW** button during playback to watch the reverse picture playback.
- Press and hold the **FF** button during playback to watch the picture playback.
- Release the **REW** or **FF** button to resume normal playback.

Using the **SCENE SEARCH** buttons

- Press and hold the **SCENE SEARCH (-)** button during still picture playback to watch reverse picture playback.
- Press and hold the **SCENE SEARCH (+)** button during still picture playback to watch forward picture playback.
- Release the **SCENE SEARCH** button to resume normal still picture playback.

Notes:

- The sound is muted during playback modes other than normal playback.
- During reverse picture playback there will be some noise bands in the picture, this is normal and does not indicate a malfunction.

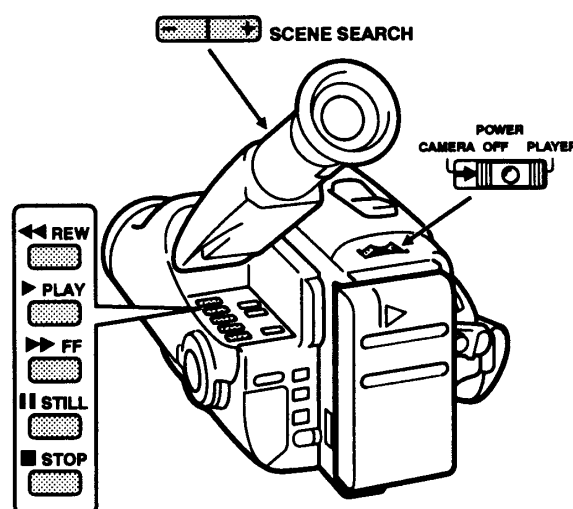

EDITING

Tape copy

Please refer to page 20 on how to connect the camcorder.

- 1 Connect the camcorder to a VCR.
- 2 Load the recorded tape into the camcorder. Set the erasure-prevention switch so that the tape cannot be recorded on. (See page 11.)
- 3 Set the camcorder **POWER** switch to "**PLAYER**".
- 4 Turn on the VCR and load the tape for recording.
- 5 Set the VCR to external input mode, then set it to recording pause mode.
- 6 Press the **PLAY** button on the camcorder, to start playback.
- 7 Start recording on the VCR.
- 8 When finished, stop recording on the VCR, then press the **STOP** button on the camcorder.

Notes:


- When copying a tape, the picture and sound will not be as good as on the original tape.
- During editing operations, it is recommended to connect the camcorder to an AC outlet with the AC adaptor/charger.


On-screen display

When the camcorder is connected to a TV receiver, the indications appearing in the viewfinder can be displayed on the TV screen by pressing the **DATA ON SCREEN** button. Pressing this button again will cancel the on-screen display. Please refer to pages 20 – 21 on how to connect the camcorder.

Note: If the on-screen display is activated during tape copy, it will be recorded on the tape along with the picture and sound.

LANC terminal

The symbol  identifies the LANC (Local Application Control Bus System) terminal. If you are using an edit controller or a computer for special editing functions, the external equipment is connected to the LANC terminal to precisely control all the tape transport functions of your camcorder. Please refer to the concerned equipment instruction manual for detailed operation.

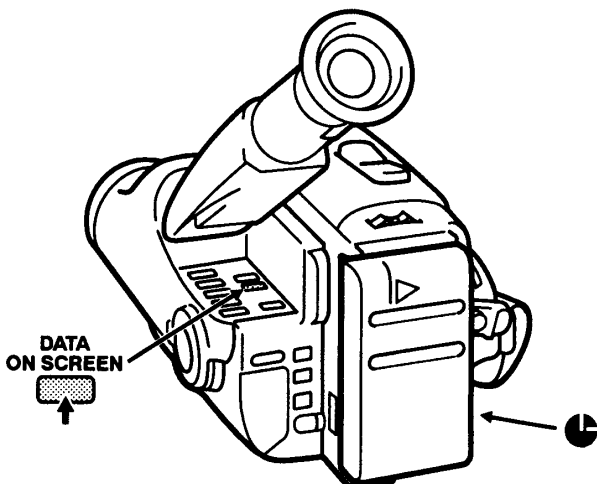



Transition recording

If at the end of a recording, some unwanted pictures and sound have been recorded, they can be eliminated by replacing them with newly recorded pictures and sound.

Example: To replace unwanted pictures (A) by new pictures (B).

- 1 Set the camcorder to recording pause mode.
- 2 Press and hold the **SCENE SEARCH (+ or -)** button until the beginning of the unwanted pictures. When the button is released the camcorder will go back to recording pause mode.
- 3 Press the **REC START/STOP** button to start recording the new pictures.

Note: At playback, during scene search operations, white bars will appear at that position.

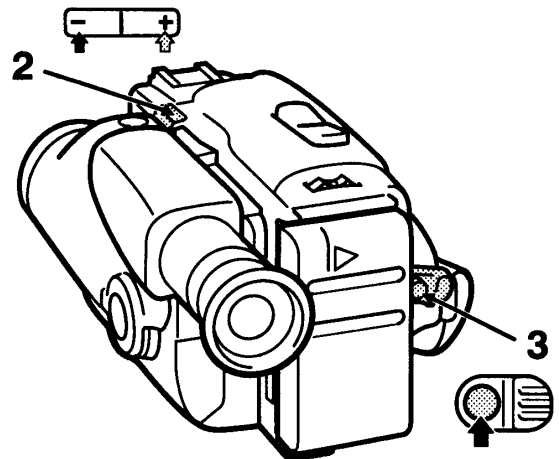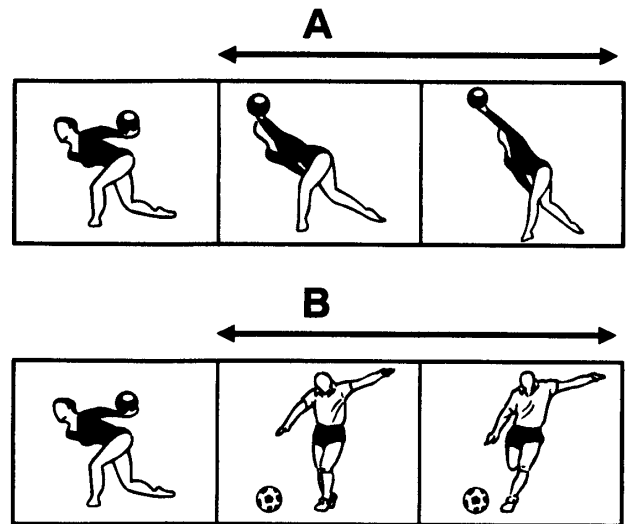


CONNECTIONS

Connections to a TV or VCR equipped with a SCART terminal

Connect the SCART adaptor (sold separately) to the SCART terminal on your TV or VCR.


Connection for playback on a TV

When connected, make sure to set the **VIDEO/TV** switch on the TV to "**VIDEO**".

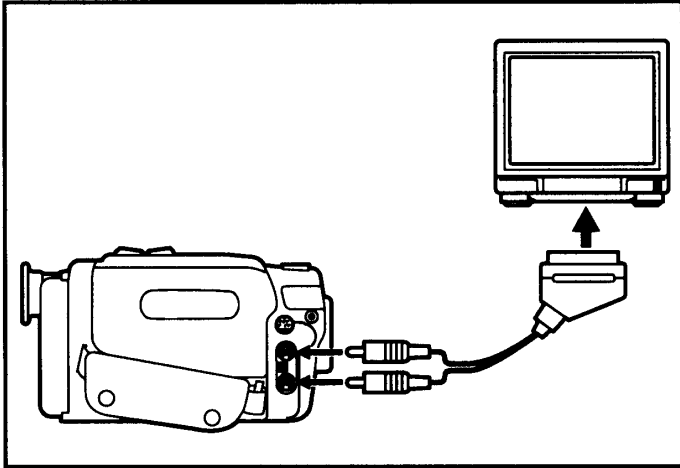

Connection for editing to a VCR

When connected, make sure to set the **VIDEO/TV** switch on the TV to "**VIDEO**", and set the input on the VCR to external input mode.

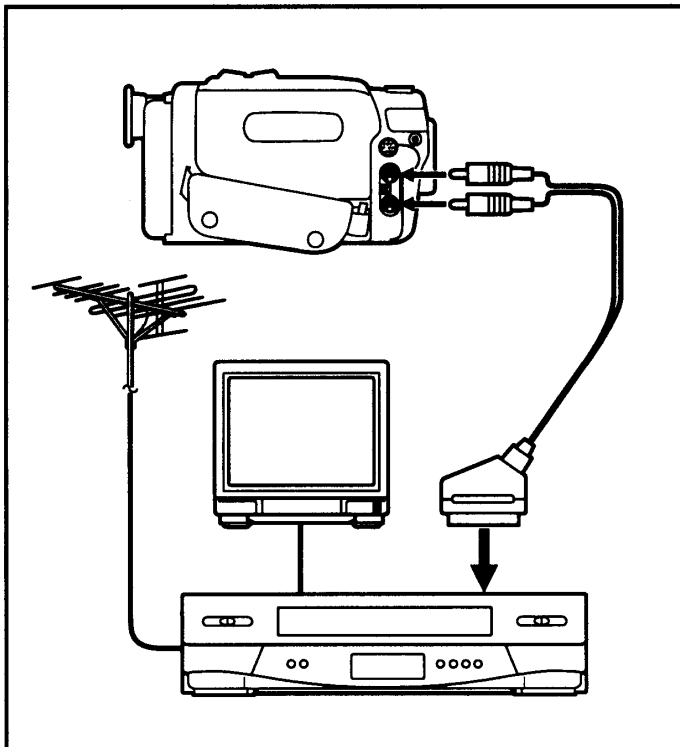


Connections to a TV or VCR equipped with AUDIO/VIDEO terminals

Connect an AV cable (sold separately) to the terminals on your TV or VCR.

- Connect the **VIDEO** output to the **VIDEO** input (yellow) terminal.
- Connect the **AUDIO** output to the left **AUDIO** input (white) terminal.


Connection for playback on a TV

When connected, make sure to set the **VIDEO/TV** switch on the TV to "**VIDEO**".

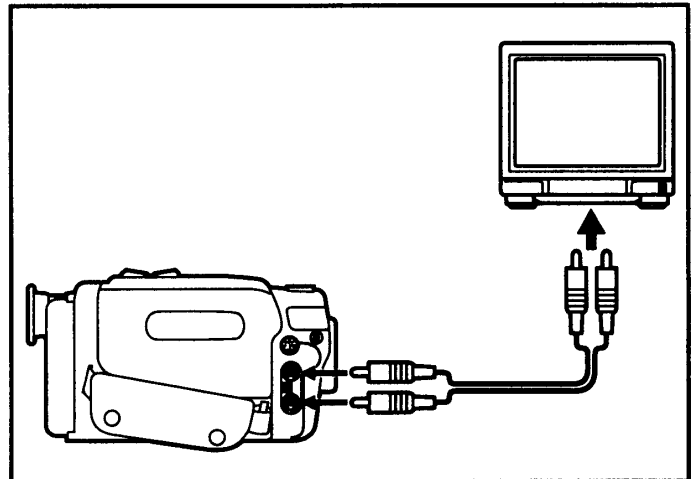

Connection for editing to a VCR

When connected, make sure to set the **VIDEO/TV** switch on the TV to "**VIDEO**", and set the input on the VCR to external input mode.

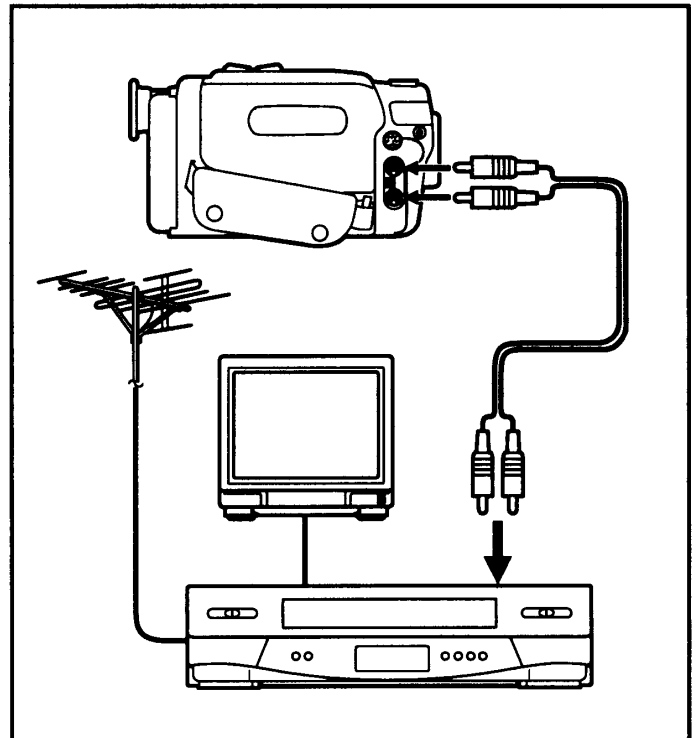


Connections to a TV not equipped with a SCART terminal or AUDIO/VIDEO terminals

You will need an RF converter and RF cable (both supplied).

- 1 Unplug the aerial cable from your TV and reconnect it to the **ANT IN** terminal on the RF converter.
- 2 Connect the RF cable to the **ANT OUT** terminal on the RF converter and to the **ANT IN** terminal on your TV.
- 3 Connect the RF converter to your camcorder.
- 4 Turn the TV on, and start playback on the camcorder.
- 5 Select an available channel on the TV, e.g. not used for broadcasting.

With a small screwdriver turn the RF channel screw on the RF converter until the picture and sound from the camcorder are played back clearly on the TV.

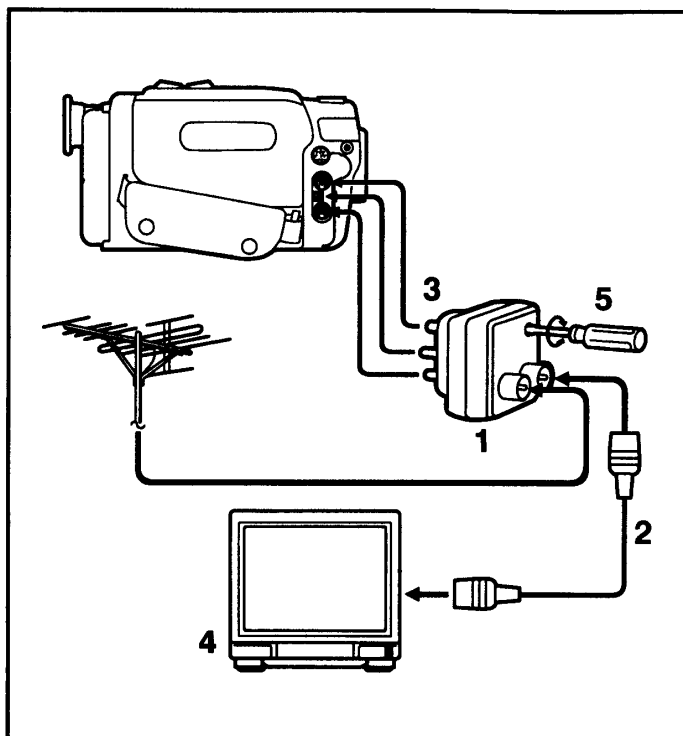

AVAILABLE ACCESSORIES SOLD SEPARATELY

Colour monitor remote control


The colour monitor remote control can be installed on the camcorder accessory shoe to perform the following functions.

The colour monitor remote control cable is connected to the **REMOTE** terminal on the camcorder.

It can be inserted in the accessory shoe facing 4 directions (front, rear, left or right side).

- It can control an auto pan/tilt head

When using the auto pan/tilt head (model VAH-30, sold separately), you can control the recording angle from a distance (using the extension cable supplied with the remote control) while watching the picture on the remote control colour monitor.

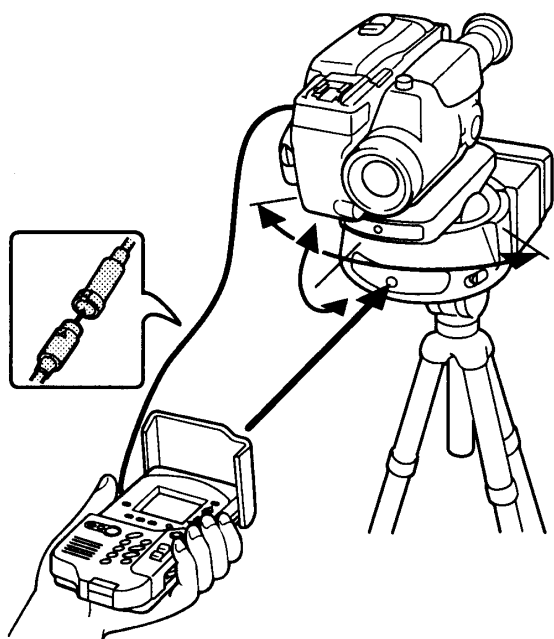


- It can be used as a colour monitor (with sound during playback).

Recording monitoring and playback can be viewed on the colour monitor.

- It can perform programmed editing.

Programmed editing allows you to easily select up to 5 segments of a recording to transfer to a new tape.

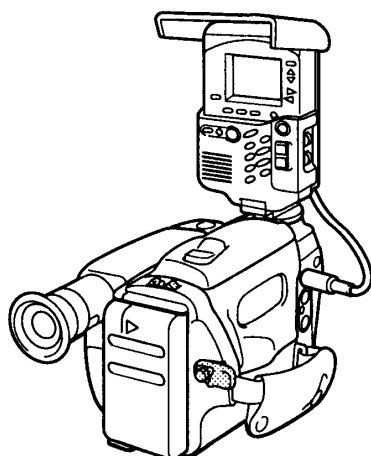

Video light

A video light (sold separately) can be installed on the accessory shoe.


Installing the video light

Slide the video light foot (A) into the accessory shoe, until a click is heard and it is firmly locked into place.

To remove the video light, press and hold button (B), then pull the video light toward the front.

Using the video light

Set the **POWER** switch on the camcorder to "**CAMERA**", set the stand-by switch to "**STANDBY**", then press the power switch (C) on the video light to turn it on and off.

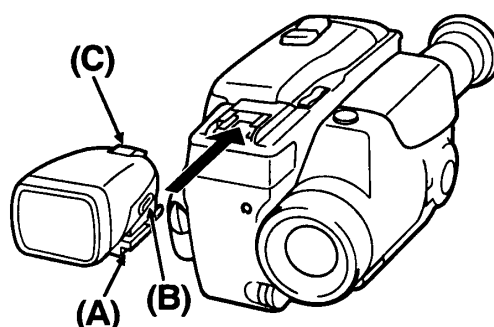

Note: The video light cannot be used if the remote control is connected to the camcorder.

WARNING:


When the video light is used, it will get very hot. Be careful not to get burnt by touching the front glass or the light cabinet when the video light is on or just after it has been turned off.

If the video light bulb is burnt out, have it replaced by the dealer where it was purchased.

ND filters

ND4 filters available on the market (size: 37 mm), give good results, when recording on a beach or a ski slope if the sun is very strong, so that the picture is not over exposed. For more details, please consult the dealer where the unit was purchased.

Auto pan/tilt head (VAH-30)

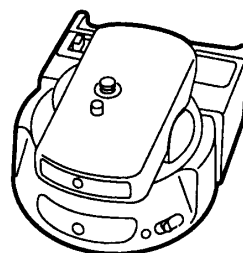

MAINTENANCE

Video heads maintenance

- When the camcorder has been used for a long time, the sound and picture playback quality deteriorate (as illustrated). In such case, the video heads should be cleaned.
- Be very careful when using commercially available video head-cleaning products, as some might not be effective or damage the heads.
- Video heads will wear after they have been used for a long period. If the playback quality is poor, even after having cleaned the video heads, they might need to be replaced. For detailed information and assistance, please consult your dealer.




Note: Do not use commercially available wet-type video head-cleaning cassettes. They may damage the video heads in your unit. For the most suitable head-cleaning cassettes, please consult the dealer where the unit was purchased.

Inspection at 1000-hour intervals

For continued trouble free operation and beautiful pictures, it is recommended to have the unit inspected (including cleaning, lubrication and replacement of worn parts as necessary), every 1000 hours of use (approximately). For detailed information and assistance, please consult your dealer.

Cleaning the viewfinder


- 1 Fully pull out the eye-piece, then push it back slightly.
 - 2 Turn it towards the left (in the direction of the arrow, as illustrated), then remove it.
 - 3 Use an air blower (sold separately) to remove any dust on the viewfinder.
- Reassemble in the reverse order of disassembly.

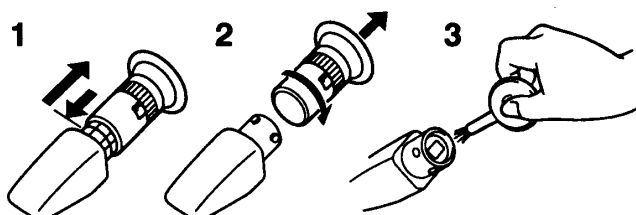

Holding the camcorder

Use the grip belt to carry the camcorder. Holding it as shown in the illustration below might damage the camcorder or some of its components.

Remove the cassette tape when the unit is not being used.

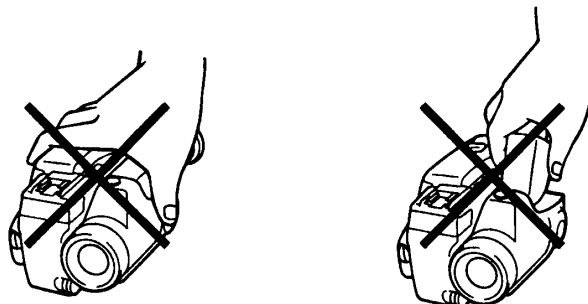

Using the camcorder abroad

■ To recharge the battery pack in a foreign country

The AC adaptor/charger can be used in any country where the standard voltage is between 100 V and 240 V AC. You may need a plug adaptor (sold separately) to use the AC adaptor/charger abroad.

■ To view the tape playback on a TV receiver

It is always possible to view the tape playback in the viewfinder.

To watch playback on a TV, you will need to connect the camcorder to a TV using the same colour system standard (PAL).

Main countries using the PAL standard:

Australia, Austria, Belgium, Britain, China, Denmark, Germany, Holland, Hong Kong, Italy, Kuwait, New Zealand, Norway, Portugal, Singapore, Spain, Sweden, Switzerland, Thailand

Main countries using the SECAM standard:

Bulgaria, France, Hungary, Iran, Iraq, Luxembourg, Monaco, Poland, CIS

Main countries using the NTSC standard:

Canada, Japan, Korea, Mexico, the Philippines, Taiwan, U.S.A.

TROUBLESHOOTING GUIDE

If the camcorder seems not to be operating normally, first check the items below. If operation is still not normal, please consult the dealer where the unit was purchased.

Symptom	Possible Cause	Corrective Action
No power	Is the battery pack exhausted?	Recharge the battery pack
	Is the battery pack incorrectly installed?	Install the battery pack correctly
	Is the AC adaptor/charger DC connecting cord incorrectly installed?	Install the DC connecting cord correctly
The power is on, but the unit cannot be operated	Is the  indicator displayed in the viewfinder?	Wait until the condensation inside the unit dries up
	Is the stand-by switch set to " POWER SAVE "?	Set the stand-by switch to " STANDBY "
The power is cut during operation	Is the battery pack exhausted?	Recharge the battery pack
	Was recording pause mode continued for 5 minutes or more?	Press the REC START/STOP button, or set the stand-by switch to " POWER SAVE " then to " STANDBY "
Recording is not possible	Is a cassette tape loaded in the camcorder?	Load a cassette tape
	Is the tape wound to the end?	Rewind the tape, or load a blank cassette tape
	Is the cassette erasure prevention switch set to the red position?	Change the switch position, or insert a blank cassette tape
Focus is not working properly	Is the recorded subject difficult to focus on or too dark?	Set the camcorder to manual focus
Noise in the playback picture	Are the video heads dirty?	Clean the video heads
The remote control doesn't operate	Is the battery exhausted?	Replace the battery
	Is the remote control sensor concealed?	Release the remote control sensor
	Is the remote control unit operated from more than 5 m (16 ft)?	Operate the control unit from within 5 m (16 ft)
	Is the remote control unit aimed at the remote control sensor window?	Aim the remote control unit at the sensor window on the camcorder
	Is there an obstacle between the remote control and the camcorder?	Change the direction of the remote control sensor or the position of the remote control
The battery pack charge doesn't last the normal duration	Is the battery pack fully charged?	Use the battery pack completely before recharging it, or use the Refresh feature of the AC adaptor/charger to fully charge the battery pack
		Check the battery pack life span
Spots in the viewfinder	Is there dust on the viewfinder?	Clean the viewfinder
	Is there dust on the lens?	Clean the lens



SPECIFICATIONS

Camcorder

Television system:	PAL, CCIR
Video recording system:	Rotating 2-head, helical-scan system
Audio recording system:	Rotating head, FM system
Cassette type:	8 mm video cassette tape
Tape speed:	SP: approx. 20.051 mm/sec. LP: approx. 10.058 mm/sec.
Maximum recording time:	90 minutes (P5-90 cassette) SP mode 180 minutes (P5-90 cassette) LP mode
Fast forward/Rewind time:	Approx. 6.5 minutes (P5-90 cassette)
Image sensor:	CCD solid-state type (320,000 pixels)
Viewfinder:	0,6 inch electronic viewfinder (black and white)
Lens:	8x power zoom F1.8 (f=5.8 to 58 mm)
Filter diameter:	37 mm
Focus:	Fuzzy logic auto focus
White balance:	Full auto fuzzy logic
Iris:	Fuzzy logic auto iris
Minimum subject illumination:	2 lux (Low Light mode)
Subject illumination range:	2 – 100,000 lux
Recommended subject illumination:	300 lux or more
Power supply:	6 V: battery pack 6.5 V: AC adaptor/charger
Power consumption:	5.4 W during camera recording
Operating temperature range:	0°C – 40°C (32°F – 104°F)
Storage temperature range:	–20°C – 60°C (–4°F – 140°F)
Dimensions (W x H x D):	119 x 111 x 205 mm
Weight:	Approx. 760 g (excluding the battery pack and tape)
Microphone:	Electret condenser type, omnidirectional
Video output terminal:	Video output 1Vp-p, 75 ohms unbalanced, negative sync
Audio output terminal:	Audio output –7 dBs, 2.2 kohms or less


Products are subject to change in design and specifications without notice and without incurring any obligation.

INDICATORS

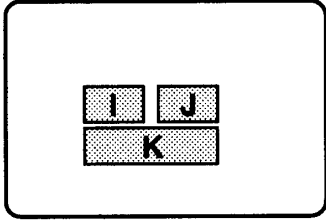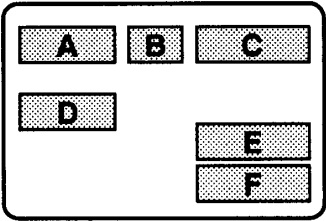

Page

A	REC, PAUSE PLAY, STOP, REW, FF	6 18
B	LP : the longest recording duration SP (displayed for 2 seconds when set) : high quality recording	12
C	M : memory, — : minus 0 : 00 : 00 : counter	14
D	FADE	13
E	Clock: hours, minutes, seconds	15
F	Date: day, month, year	15
	88 : 88 (flashing): the lithium battery is not installed or is expired. The date and time have not yet been set	

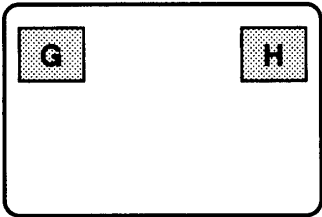

Page

	REC, PAUSE	6
G	 displayed when the corresponding preset mode is set	17
H	MF : manual focus	16

Warning indicators (blinking)

Page

I		The battery pack is weak	8
J		No cassette is loaded, or the loaded cassette has the erasure-prevention switch set to the red position	1
		Condensation has formed inside the unit	
K	TAPE	The tape is within about 5 minutes from the end	
	TAPE END	The tape has reached the end	

GUARANTEE TO CUSTOMER

Sanyo U.K. Sales Ltd. (the Company) guarantees to the initial retail purchaser that if this equipment is or becomes defective and that, in the opinion of the Company, the defect is due to faulty material or workmanship the Company will, for a period of 12 calendar months from the date of sale to the original purchaser repair or replace, at its sole option, free of charge, any such defective component part of the equipment, always provided that:-

1. The equipment has at all times been used in accordance with the operating instructions issued by the Company, and has not been connected to an electrical mains supply for which it has not been adjusted.
2. Accidental damage, or damage caused by negligence or misuse by the user, including leakage from exhausted batteries, is specifically excluded.
3. Unauthorised repairs, or any modification to the equipment which has not been expressly approved by the Company, shall render this guarantee null and void.
4. Failure due to fair wear and tear of any item, such as batteries, record playing styli, and tape recording, playback and erase heads and head cleaning is specifically excluded.

This guarantee is not transferable and is only applicable within the United Kingdom (and the Republic of Ireland). Nothing in this express guarantee affects the statutory rights available to the purchaser of this equipment.

Dear Customer

Thank you for buying Sanyo. This equipment should give you many years of pleasure and faithful service but in the event that a fault occurs, the following notes for your guidance may be helpful:-

1. PLEASE RETAIN YOUR PURCHASE RECEIPT WHICH WILL BE REQUIRED FOR SERVICE DURING GUARANTEE.
2. If your Sanyo equipment proves faulty during the period of guarantee, take it or send it back to the dealer who originally supplied it together with this guarantee and the proof of purchase. We have made arrangements with our approved dealers under which they will carry out in guarantee service repairs on our behalf. In this way, we hope to reduce to a minimum the amount of time you will be without your equipment.
3. If for some reason it is impossible to return the equipment to the original supplier, please contact our Service Administration Department at the address below for further advice.
4. Should the equipment require servicing after the expiry of the guarantee period, take or send it to the original supplier or any other Sanyo dealer. He will be pleased to give you a quotation for the repair. If you are in any doubt about what to do, write to us at the address below or telephone:

Sanyo U.K. Sales Ltd.

Sanyo House Otterspool way, Watford, Hertfordshire WD2 8JX Tel: Watford 246363

SANYO

SANYO Electric Co., Ltd.
Printed in Japan