

Micro HI-Fi Component System 迷你音响组合

CS Operating Instructions
CS 使用说明书

在使用产品前，请仔细阅读本使用说明书

CMT-MX500i



© 2010 Sony Corporation Printed in China

http://www.sony.net/

WARNING

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus. Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.


As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.


The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

CAUTION
The use of optical instruments with this product will increase eye hazard.

Except for customers in the U.S.A. and Canada

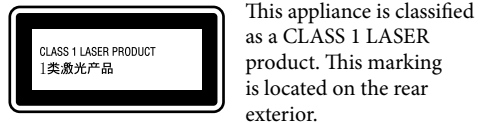


This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.

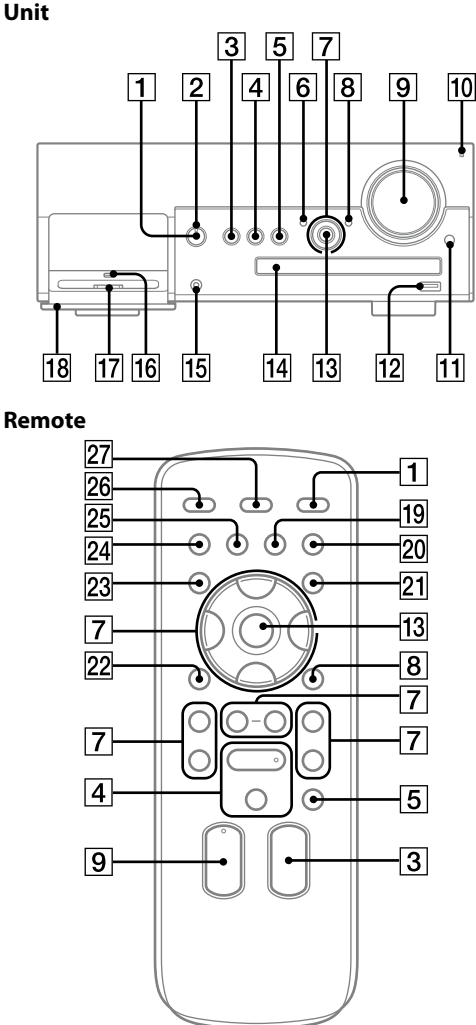

This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

 To use the remote
Slide and remove the battery compartment lid, and insert the two supplied R6 (size AA) batteries. ● side first, matching the polarities shown below.



Notes on using the remote
● With normal use, the batteries should last for about six months.
● Do not mix an old battery with a new one or mix different types of batteries.
● If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.

When carrying this system
Use buttons on the unit.


- 1 Remove a disc to protect the CD mechanism.
- 2 Press FUNCTION [3] repeatedly to select the CD function.
- 3 While holding down TOOL MENU [5], hold down I/O (power) [1] until "STANDBY" appears.
- 4 After "LOCK" appears, unplug the power cord.

- To set the clock**
- 1 Press I/O [1] to turn on the system.
 - 2 Press TIMER MENU [2] to select the clock set mode. If "PLAY SET?" flashes, press ●/● [7] repeatedly to select "CLOCK SET?", and then press [enter] [8].
 - 3 Press ●/● [7] repeatedly to set the hour, then press [enter] [8].
 - 4 Use the same procedure to set the minutes.

Note
The clock settings are lost when you disconnect the power cord or if a power failure occurs.

To display the clock when the system is off
Press DISPLAY [2]. The clock is displayed for about 8 seconds.

Getting Started

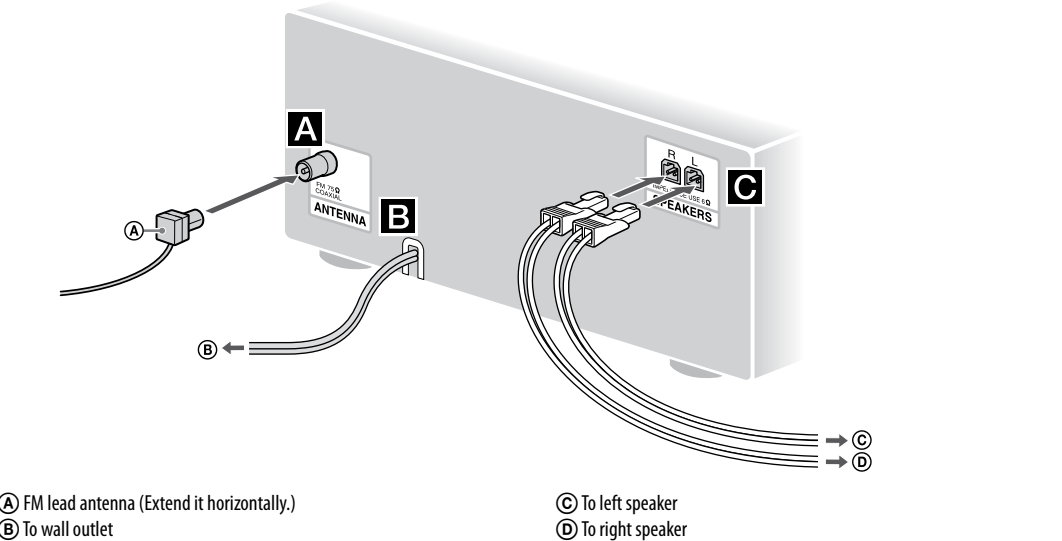

④ FM lead antenna (Extend it horizontally.)

⑤ To wall outlet

⑥ To left speaker

⑦ To right speaker

A FM antenna


Find a location and an orientation that provide good reception, and then set up the antenna. When using an iPod model, use the Dock Adapter supplied with your iPod. When using an iPhone model, use the Dock Adapter supplied with the system.

B Power

Connect the power cord to a wall outlet. The demonstration appears in the display. When you press I/O [1], the system turns on and the demonstration automatically ends. If the plug does not fit the wall outlet, detach the supplied plug adaptor (only for models equipped with an adaptor).


C Speakers

Connect the speaker cords to the SPEAKERS jacks on the unit, and then connect the other end of the speaker cords to the terminals on the speakers as shown below.

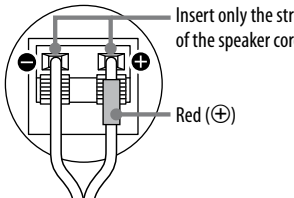

To attach the speaker pads

Attach the supplied speaker pads to the bottom of the speakers to prevent slipping.

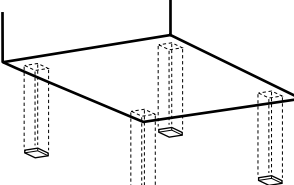

Operations

Playing a CD/MP3 disc

- 1 Select the CD function.
Press PLAY MODE [24] repeatedly while the player is stopped. You can select normal play (□) for all MP3 files in the folder on the disc, shuffle play ("SHUF" or □ SHUF) for folder shuffle), or program play ("PGM").
- 2 Place a disc.
Press ▲ (open) [11] on the unit, and place a disc with the label side up on the disc tray [5]. To close the disc tray, press ▲ [11] on the unit.
- 3 Start playback.
Press ► (play) [4].

Other operations

To	Press
Pause playback	II (pause) [4]. To resume play, press the button again.
Stop playback	■ (stop) [5].
Select a folder on an MP3 disc.	□ (select folder) +/- [7] repeatedly.
Select a track or file	◀▶ (go back)▶▶ (go forward) [7].
Find a point in a track or file	Hold down ◀◀ (rewind)▶▶ (fast forward) [7] during playback, and release the button at the desired point.
Select Repeat Play	REPEAT [28] repeatedly until "REP" or "RP1" appears.


To change the play mode
Press PLAY MODE [24] repeatedly while the player is stopped. You can select normal play (□) for all MP3 files in the folder on the disc, shuffle play ("SHUF" or □ SHUF) for folder shuffle), or program play ("PGM").

Notes on Repeat Play
● All tracks or files on a disc are played repeatedly up to five times.
● "REP" indicates that a single track or file is repeated until you stop playback.

Note on shuffle play mode
When you turn off the system, the selected shuffle play mode ("SHUF" or □ SHUF) is cleared and the play mode returns to normal play mode (□).

Notes on playing MP3 discs
● Do not save other types of tracks or files, or unnecessary folders on a disc that has MP3 files.
● Folders that have no MP3 files are skipped.
● MP3 files are played back in the order that they are recorded onto the disc.
● The system can only play MP3 files that have a file extension of ".mp3".
● Even when file name has the ".mp3" file extension, if the actual file differs, playing this file may generate a loud noise which could damage the speaker system and the system may malfunction.
● The maximum number of:
—Folders is 255 (including the root folder).
—MP3 files is 511.
—MP3 files and folders that can be contained on a single disc is 512.
—Folder files (the tree structure of files) is 8.
● Compatibility with all MP3 encoding/writing software, recording device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play at all.

使用前的准备工作

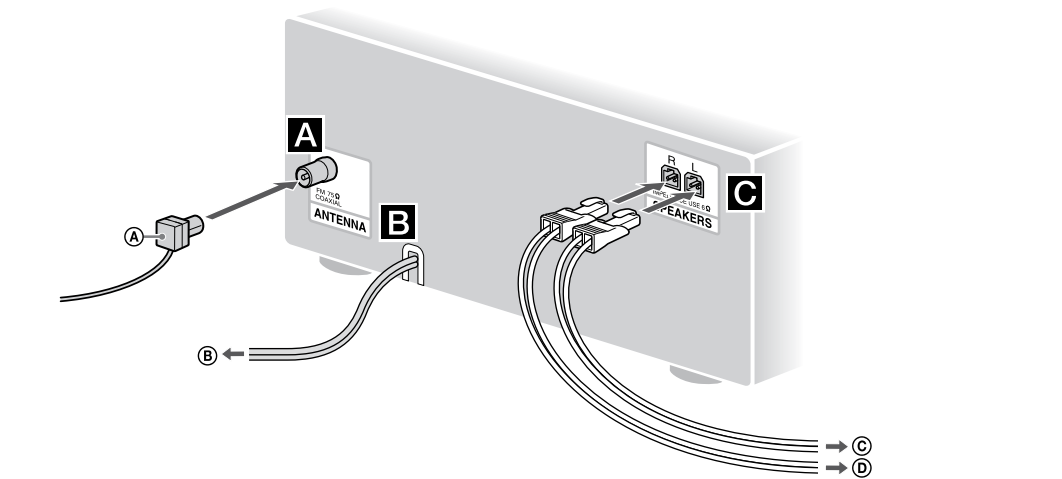

④ FM导线天线（将其水平延伸。）

⑤ 至墙上电源插座

⑥ 至左扬声器

⑦ 至右扬声器

A FM天线


找到一个好的接收状态良好的位置和方向，然后设置天线。今天线远离扬声器导线和电源线，以避免受到噪音干扰。

B 电源

连接电源线至墙上电源插座。显示屏中会出现演示。当您插入 I/O [1] 时，系统将接通电源并自动开始。如果插头不适合墙上电源插座，请拔下附带的插头适配器（仅限于配备有适配器的机型）。


C 扬声器

如下图所示，将扬声器导线连接到主机上的 SPEAKERS 插孔。然后将扬声器导线的另一端连接到扬声器上的端子。

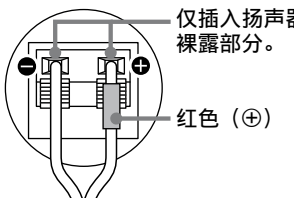

要安装扬声器垫片时

在扬声器底部安装附带的扬声器垫片以防止扬声器滑动。

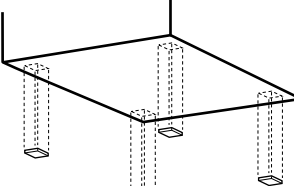

操作

播放CD/MP3光盘

- 1 选择CD功能。
反复按FUNCTION [3] 选择想要的预设号码。
- 2 放入光盘。
按主机上的▲ (打开) 图，将光盘标签面朝上放在光盘托盘上。然后按播放按钮。
- 3 开始播放。
按► (播放) [4]。

要	按
暂停播放	II (暂停) [4]。要恢复播放时，再次按该按钮。
停止播放	■ (停止) [5]。
选择MP3光盘上的文件夹	□ (选择文件夹) +/- [7] 反复按。
选择曲目或文件	◀▶ (后退)▶▶ (前进) [7]。
寻找曲目或文件中的点	在播放期间按住◀◀ (快倒) 或▶▶ (快进) [7]，然后在想要的位置释放该按钮。
选择反复播放	反复按REPEAT [28]直到出现"REP"或"RP1"为止。

Notes on playing multitrack discs
● If the first session on the disc is a CD-DA session, the other sessions on the disc cannot be recognized regardless of the session format; only CD-DA tracks in the first session can be played back.
● If the session format for the first session is CD-ROM and the following sessions are recorded in the same format, the system will continue to play back MP3 files accordingly in multiple sessions until the system encounters another session recorded in a different format.

Listening to the radio

- 1 Select "FM".
Press FUNCTION +/- [3] repeatedly.
- 2 Perform tuning.
For automatic scanning
Press TUNING MODE [28] repeatedly until "AUTO" appears, and then press +/- [7]. Scanning stops automatically when a station is tuned in, and "TUNED" and "STEREO" (for stereo programs only) light up in the display.



If "TUNED" does not light up and the scanning for an FM station does not stop, press ■ [5] to stop scanning, then perform manual tuning (below).

 
For manual tuning

Press TUNING MODE [28] repeatedly until "AUTO" and "PRESET" disappear and then press +/- [7] repeatedly to tune in the desired station.

Tip
To reduce static noise on a weak FM stereo station, press FM MODE [28] repeatedly until "MONO" appears to turn off stereo reception.

Presetting radio stations

- 1 Tune in the desired station.
- 2 Press TUNER MEMORY [23] to select the tuner memory mode.



- 3 Press +/- [7] repeatedly to select the desired preset number.
If another station is already assigned to the selected preset number, the station is replaced by the new station.
- 4 Press [enter] [8] to store the station.
- 5 Repeat steps 1 through 4 to store other stations. You can preset up to 20 FM stations.
- 6 To call up a preset radio station, press TUNING MODE [28] repeatedly until "PRESET" appears, and then press +/- [7] repeatedly to select the desired preset number.

Playing the iPod/iPhone

- 1 Select the iPod function.
Press FUNCTION +/- [3] repeatedly.
- 2 Place the iPod/iPhone.
- 3 Start playback.
Press ► [4].

To control the iPod/iPhone

To	Press
Pause playback	II (pause) [5].
Scroll up/down the iPod menus	▲/▼ [7].

Select a track or chapter of audiobook/podcast.
Choose the selected item.
Find a point in a track or chapter of audiobook/podcast.
Return to the previous menu or select a menu.

To use the system as a battery charger
You can use the system as a battery charger for the iPod/iPhone when the system is on. The charging begins when the iPod/iPhone is placed on the iPod/iPhone connector [7]. The charge status appears in the iPod/iPhone display. For details, see the user's guide of your iPod/iPhone.

To stop charging the iPod/iPhone
Remove the iPod/iPhone. Turning off the system also stops charging the iPod/iPhone.

有关播放多区域光盘的注意事项
如果光盘上标有一个区域段ID标识，不管区域格式如何，光盘上的其他区域段不会被识别，只会播放第一区域段中的CD-DA曲。

●如果第一区域段的区域格式为CD-R和标有ID标识的区域段也以相同格式记录，系统将按照依次连接播放多区域段中的MP3文件，直到系统遇到以不同格式记录的其他区域段为止。

收听广播

- 1 选择 "FM"。
反复按FUNCTION +/- [3]。
- 2 执行调谐。
反复按TUNING MODE [28]直到出现 "AUTO"，然后反复按+/- [7]。当调到电台时扫描自动停止，并且显示屏中 "TUNED" 和 "STEREO"（仅限于立体声节目）点亮。

 
如果 "TUNED" 不点亮或者FM电台扫描不停止，按+/- [7]停止扫描，然后执行手动调谐（下述）。

对于手动调谐
反复按TUNING MODE [28]直到 "AUTO" 和 "PRESET" 消失，然后反复按+/- [7]调入想要的电台。

提示
要减少信号微弱的FM立体声电台的静电噪声，反复按FM MODE [28]直到出现 "MONO" 以关闭立体声接收。

预设广播电台

- 1 调入希望的电台。
反复按FUNCTION +/- [3]。
- 2 按TUNER MEMORY [23]选择调谐器存储模式。



- 3 反复按+/- [7]选择想要的预设号码。
如果所选预设号码已被其它电台占用，已存在的电台会替换新电台替换。
- 4 按 [enter] 存储电台。
- 5 重复步骤1至4存储其它电台。
最多可以预设20个FM电台。
- 6 要调出预设电台时，反复按TUNING MODE [28]直到出现 "PRESET"，然后反复按+/- [7]选择想要的预设号码。

播放 iPod/iPhone

- 1 选择 iPod 功能。
反复按FUNCTION +/- [3]。
- 2 放置 iPod/iPhone。
将 iPod/iPhone 放在 iPod/iPhone 连接器 [7] 上。当系统电源打开时，可将系统作为 iPod/iPhone 的电池充电器使用。

当 iPod/iPhone 放在 iPod/iPhone 连接器 [7] 上时，充电开始。充电状态显示在 iPod/iPhone 的显示屏上。有关详细说明，请参见 iPod/iPhone 的用户指南。

要停止给 iPod/iPhone 充电时
取下 iPod/iPhone。关闭系统电源也会停止给 iPod/iPhone 充电。

Notes
● When placing or removing the iPod/iPhone, handle the iPod/iPhone in the same angle as that of the iPod/iPhone connector on the unit and do not twist or sway the iPod/iPhone to prevent connector damage.
● Do not carry the unit with an iPod/iPhone set on the connector. Doing so may cause a malfunction.
● When placing or removing the iPod/iPhone, brace the unit with one hand and take care not to press the controls of the iPod/iPhone by mistake.
● Before disconnecting the iPod/iPhone, pause playback.
● Hold down ◀◀ [7] to fast forward (fast rewind) while playing video if ◀◀ [7] does not function.
● When the iPhone is connected to the system and you receive a call during playback, playback will pause and you can take an incoming call.
● To change the volume level, use VOLUME +/- [9]. The volume level does not change even if adjusted on the iPod/iPhone.
● This system is designed for iPod/iPhone only. You cannot connect any other portable audio players.
● To use an iPod/iPhone, refer to the user's guide of your iPod/iPhone.
● Sony cannot accept responsibility in the event that data recorded to iPod/iPhone is lost or damaged when using an iPod/iPhone with this unit.

Playing a file of the USB device

The audio format that can be played back on this system is MP3/WMA/AAC.

Files with DRM (Digital Rights Management) copyright protection cannot be played back on this system. Files downloaded from an online music store may not be played back on this system. You can use an optional USB device with this system, connecting to the ◀- (USB) port [12] on the unit. Make sure you use CCC-certified USB devices.

Note on the usage of CCC-certified USB devices
Compatibility with CCC (China Compulsory Certification)-certified USB devices on this system is not fully guaranteed. This is because the USB device specifications may differ depending on the manufacturers. For more information on how to use a USB device, see the operation manual supplied with the USB device.

- 1 Select the USB function.
Press FUNCTION +/- [3] repeatedly.
- 2 Connect the USB device to the ◀- (USB) port [12].
- 3 Start playback.
Press ► [4].

Other operations

To	Press
Pause playback	II [4]. To resume play, press the button again.
Stop playback	■ [5]. To resume play, press ► [4]. To cancel resume play, press ■ [5] again.
Select a folder	□ +/- [7] repeatedly.
Select a file	◀▶ [7].
Find a point in a file	Hold down ◀◀ [7] during playback, and release the button at the desired point.
Select Repeat Play	REPEAT [28] repeatedly until "REP" or "RP1" appears.
Remove the USB device	Hold down ■ [5] on the unit until "No Device" appears, then remove the USB device.

* When playing a VBR MP3/WMA file, the system may resume playback from a different point.

To change the play mode

Press PLAY MODE [24] repeatedly while the USB device is stopped. You can select normal play (□) for all files in the folder on the USB device, shuffle play ("SHUF" or □ SHUF) or program play ("PGM").

Note on Repeat Play
"REP" indicates that all audio files on a USB device are repeated until you stop playback.

Note on shuffle play mode
When you turn off the system, the selected shuffle play mode ("SHUF" or □ SHUF) is cleared and the play mode returns to normal play mode (□).

To select a memory on the USB device
If the USB device has more than one memory (for example, internal memory and a memory card), you can select which memory to use and then start playback. You cannot select a memory during playback. Make sure to select a memory before starting playback. Use buttons on the unit to select a memory on the USB device.

- 1 Press FUNCTION [3] repeatedly to select the USB function.
- 2 Connect the USB device to the ◀- (USB) port [12].
- 3 Press TOOL MENU [8], and then press ENTER [2].
- 4 Press ●/● [7] repeatedly to select a memory
Proceed to step 5 if only one memory can be selected. To cancel this operation, press ■ [5].
- 5 Press ENTER [2].

Micro HI-Fi Component System 迷你音响组合

CS 使用说明书

在使用产品前，请仔细阅读本使用说明书

CMT-MX500i



© 2010 Sony Corporation Printed in China

http://www.sony.net/

注意

为了减少火灾危险，请勿用报纸、桌布、窗帘等覆盖本装置的通风口。请勿将明火源（如点燃的蜡烛）放在本装置上。

为了减少火灾或触电的危险，请勿将本装置暴露于滴水或溅水处，并不要把装有液体的物品（如花瓶）放在本装置上。

请勿将本机安放在书橱或壁橱等狭窄封闭处。由于电源插头用于断开主机与电源的连接，请将主机连接到容易插拔的交流电源插座上。如果发现主机发生异常，请立即将电源插头从交流电源插座上拔下。

请勿将电池或装有电池的装置暴露于阳光、火焰或类似的高温热源附近。

即使关闭本机自身的电源，只要其电源线仍插在交流电源插座上，便未脱离电源。

警告

与光学仪器一起使用本产品将会增加眼睛受伤的危险。

美国和加拿大的用户除外



本装置属于1类激光 (CLASS 1 LASER) 产品。本标签位于背面外壳上。

制造商：索尼公司
用户地址：中国
经销商：索尼 (中国) 有限公司
地址：北京市朝阳区东三环北路霞光里18号佳程大厦A座25层

出版日期：2010年6月



产品中有毒有害物质或元素名称及含量

(○：不含有，×：含有)

部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
内置线路板	×	○	○	○	○	○
外壳	×	○	○	○	○	○
光学块	×	○	○	○	○	○
驱动单元	×	○	○	○	○	○
扬声器	×	○	○	○	○	○
附件	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在S4/T11363-2006标准规定的限量要求以下。
×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出S4/T11363-2006标准规定的限量要求。

