

*TALKABOUT*

DIGITAL WIRELESS PHONE

Model T2688

GSM 900/GSM 1800 System

---

User Guide

MOTOROLA, the Motorola logo and Motorola Talkabout are trademarks of Motorola, Inc.

© 2000 Motorola, Inc. All Rights Reserved.

## Quick Start

Simply follow the steps below to make your first call:

 
### Install the SIM card.

Locate the SIM card socket in the back of the phone. Follow the steps below to install the SIM card.




The metal contact of the SIM card can easily be damaged by scratches. Pay special attention to the SIM card when you handle and install.

**1**

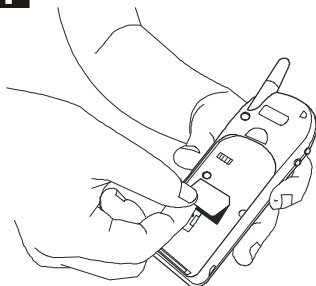


Insert the SIM card into the SIM card socket. Make sure the metal contact faces down when you insert.

**2**

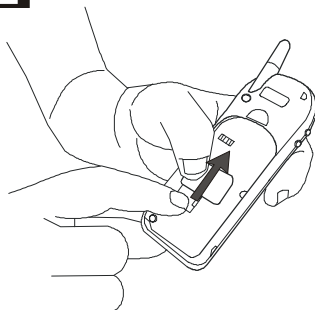 


Push the SIM card completely into the socket and slide the SIM card stopper upward.

**3**

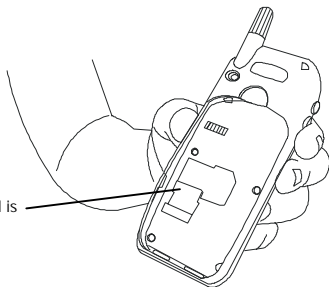 


Make sure the SIM card is held properly.

### 2 Install the battery.

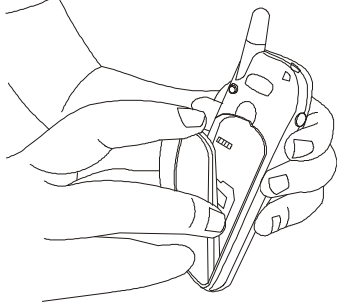 
**1**

 Place the bottom end of the battery on the phone.

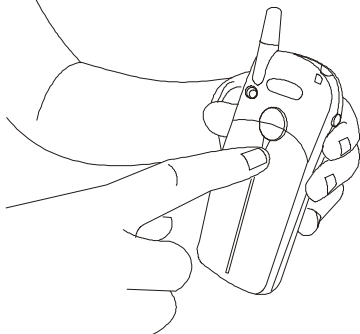
**2**


Hold down the top side of the battery. You will hear a click when the battery is secured.


### Charge the battery.

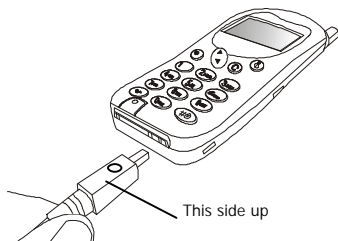 **1****2**


Insert the travel charger connector into the battery-charging socket at the bottom of the phone. Make sure you insert the connector in the right direction.


	<p>It takes 24 hours for the travel charger to fully charge a new battery. Recharging takes about 160 minutes each time.</p> <p>During charging the battery strength bars on the LCD display will flash until the battery is full.</p>
--	--


	<p>Use only genuine authorized Motorola batteries, battery charger and accessories to ensure the proper function of your phone and battery life. Any malfunction or damage caused by the use of any third-party accessories will cause the void of product warranty.</p> <p>For safety concerns, when the temperature of the phone goes over 45°C or below 5°C, the battery charging will come to a halt. When the phone temperature returns to a normal range, the battery charging will resume.</p>
--	---

**Press and hold  key for about two seconds to turn on the phone.**

**Enter your PIN, then press  key.**

	<p>When you enter wrong PIN for over three times in a row, your phone will be locked up. Please contact your dealer to solve this problem.</p>
---	--

**After your PIN is accepted, the phone starts searching for the designated network automatically. This may take a few seconds. When the phone beeps twice and the network service provider's name appears on the display, you can start to dial the number (including area code) using the keys on the keypad, then press  key to dial.**

**When you finish your telephone call, press  key to end the call and return to standby mode.**

<Memo>

# Table of Contents

<b><u>SAFETY INFORMATION</u></b> .....	<b>VII</b>
<b><u>YOUR PHONE</u></b> .....	<b>1</b>
<b><u>CHINESE INPUT</u></b> .....	<b>9</b>
<b><u>CHAPTER 1: BASIC OPERATION</u></b> .....	<b>13</b>
<b><u>1.1 TURN ON THE PHONE POWER</u></b> .....	13
<b><u>1.2 TURN OFF THE PHONE POWER</u></b> .....	13
<b><u>1.3 MAKE A CALL</u></b> .....	13
<b><u>1.4 END A CALL</u></b> .....	13
<b><u>1.5 ANSWER A CALL</u></b> .....	13
<b><u>1.6 ADJUST THE EARPIECE VOLUME</u></b> .....	14
<b><u>CHAPTER 2: BASIC CALL FUNCTIONS</u></b> .....	<b>15</b>
<b><u>2.1 ONE-TOUCH DIALING</u></b> .....	15
<b><u>2.2 MAKE AN INTERNATIONAL CALL</u></b> .....	15
<b><u>2.3 MAKE AN EMERGENCY CALL</u></b> .....	15
<b><u>2.4 MAKE A VOICEMAIL CALL</u></b> .....	15
<b><u>2.5 MISSED CALL MESSAGE</u></b> .....	15
<b><u>2.6 ABBREVIATED CALL</u></b> .....	16
<b><u>2.7 PHONE BOOK SHORTCUT</u></b> .....	16
<b><u>2.8 ADD NEW PHONE BOOK ENTRIES</u></b> .....	16
<b><u>2.9 LAST 10 NUMBER REDIAL</u></b> .....	16
<b><u>2.10 INCOMING CALL WAITING</u></b> .....	16
<b><u>2.11 DIAL EXTENSION NUMBER</u></b> .....	17
<b><u>2.12 CALL OPTIONS</u></b> .....	17

<u>Mute call</u> .....	17
<u>Conference</u> .....	17
* <u>End call</u> .....	17
* <u>Swap</u> .....	17
* <u>Hold</u> .....	17
* <u>Unhold</u> .....	18
* <u>Join</u> .....	18
* <u>Private</u> .....	18
* <u>Messages</u> .....	18
<u>Phone Book</u> .....	18
<b>2.13 KEY LOCK</b> .....	18

## **CHAPTER 3: MENU OPTIONS .....**19

<b>3.1 PHONE BOOK (1)</b> .....	21
<u>Last Number (1-1)</u> .....	21
<u>Dialed (1-1-1)</u> .....	21
<u>Received (1-1-2)</u> .....	21
<u>Missed (1-1-3)</u> .....	21
<u>Delete all (1-1-4)</u> .....	22
<u>Dialed (1-1-4-1)</u> .....	22
<u>Received (1-1-4-2)</u> .....	22
<u>Missed (1-1-4-3)</u> .....	22
<u>Delete All (1-1-4-4)</u> .....	22
<u>Find Record (1-2)</u> .....	23
<u>Add Record (1-3)</u> .....	23
<u>Delete (1-4)</u> .....	24
<u>By Name (1-4-1)</u> .....	24
<u>Delete All (1-4-2)</u> .....	24
<u>Memory (1-5)</u> .....	24
<u>Own Number (1-6)</u> .....	25
<b>3.2 MESSAGES (2)</b> .....	25
<u>Inbox (2-1)</u> .....	25
<u>Delete</u> .....	25
<u>Edit</u> .....	25
<u>Reply</u> .....	26
<u>Send</u> .....	26
<u>Use Number</u> .....	26
<u>New Message (2-2)</u> .....	26
<u>Outbox (2-3)</u> .....	27



<a href="#"><u>Delete</u></a>	27
<a href="#"><u>Edit</u></a>	27
<a href="#"><u>Send</u></a>	27
<a href="#"><u>Use Number</u></a>	27
<a href="#"><u>Voice Mail (2-4)</u></a>	28
<a href="#"><u>Broadcast (2-5)</u></a>	28
<a href="#"><u>Receive (2-5-1)</u></a>	28
<a href="#"><u>Topics (2-5-2)</u></a>	28
<a href="#"><u>Language (2-5-3)</u></a>	28
<a href="#"><u>Settings (2-6)</u></a>	29
<a href="#"><u>Route Center (2-6-1)</u></a>	29
<a href="#"><u>Valid Period (2-6-2)</u></a>	29
<a href="#"><u>Voice Mail (2-6-3)</u></a>	29
<a href="#"><u>Reply Path (2-6-4)</u></a>	29
<a href="#"><u>Notification (2-6-5)</u></a>	29
<a href="#"><u>Alert Beep (2-6-6)</u></a>	30
<a href="#"><u>Format (2-6-7)</u></a>	30
<a href="#"><u>Delete All (2-7)</u></a>	30
<b><a href="#"><u>3.3 CALL SERVICES (3)</u></a></b>	31
<a href="#"><u>Call Divert (3-1)</u></a>	31
<a href="#"><u>Divert Voice (3-1-1)</u></a>	31
<a href="#"><u>When Busy (3-1-2)</u></a>	31
<a href="#"><u>If No Reply (3-1-3)</u></a>	32
<a href="#"><u>Unreachable (3-1-4)</u></a>	32
<a href="#"><u>Divert Cond. (3-1-5)</u></a>	32
<a href="#"><u>Divert Data (3-1-6)</u></a>	32
<a href="#"><u>Divert Fax (3-1-7)</u></a>	33
<a href="#"><u>Cancel All (3-1-8)</u></a>	33
<a href="#"><u>Call Barring (3-2)</u></a>	33
<a href="#"><u>All Outgoing (3-2-1)</u></a>	33
<a href="#"><u>Int'l Out (3-2-2)</u></a>	33
<a href="#"><u>Int Exc Home (3-2-3)</u></a>	34
<a href="#"><u>All Incoming (3-2-4)</u></a>	34
<a href="#"><u>In When Roam (3-2-5)</u></a>	34
<a href="#"><u>Cancel All (3-2-6)</u></a>	34
<a href="#"><u>Call Waiting (3-3)</u></a>	35
<a href="#"><u>Activate (3-3-1)</u></a>	35
<a href="#"><u>Cancel (3-3-2)</u></a>	35
<a href="#"><u>Status (3-3-3)</u></a>	35
<a href="#"><u>Call Record (3-4)</u></a>	35

<u>Last Call (3-4-1)</u> .....	35
<u>Time (3-4-1-1)</u> .....	35
<u>Cost (3-4-1-2)</u> .....	35
<u>All Calls (3-4-2)</u> .....	35
<u>Time (3-4-2-1)</u> .....	35
<u>Cost (3-4-2-2)</u> .....	35
<u>Clear Cost (3-4-2-3)</u> .....	36
<u>Clear Time (3-4-2-4)</u> .....	36
<u>Call Rate (3-4-3)</u> .....	36
<u>Currency (3-4-3-1)</u> .....	36
<u>Charge Unit (3-4-3-2)</u> .....	36
<u>Cost Limit (3-4-4)</u> .....	36
<u>Line in Use (3-5)</u> .....	37
<u>Next Call (3-6)</u> .....	37
<u>Voice (3-6-1)</u> .....	37
<u>Data (3-6-2)</u> .....	37
<u>Fax (3-6-3)</u> .....	37
<b>3.4 PHONE SETTING (4)</b> .....	38
<u>Back Light (4-1)</u> .....	38
<u>Auto Redial (4-2)</u> .....	38
<u>Answer by (4-3)</u> .....	38
<u>Key Lock (4-4)</u> .....	38
<u>Language (4-5)</u> .....	39
<u>Time Alert (4-6)</u> .....	39
<u>Restore (4-7)</u> .....	39
<u>Display (4-8)</u> .....	39
<u>On (4-8-1)</u> .....	39
<u>Animation 1 (4-8-2)</u> .....	39
<u>Animation 2 (4-8-3)</u> .....	39
<b>3.5 NETWORK (5)</b> .....	40
<u>Automatic (5-1)</u> .....	40
<u>Manual (5-2)</u> .....	40
<u>Band (5-3)</u> .....	40
<u>Automatic (5-3-1)</u> .....	40
<u>900MHz (5-3-2)</u> .....	40
<u>1800MHz (5-3-3)</u> .....	41
<b>3.6 SECURITY (6)</b> .....	41
<u>Code Status (6-1)</u> .....	41

<a href="#"><u>PIN code (6-1-1)</u></a>	41
<a href="#"><u>Phone Code (6-1-2)</u></a>	41
<a href="#"><u>Change Code (6-2)</u></a>	41
<a href="#"><u>PIN Code (6-2-1)</u></a>	41
<a href="#"><u>PIN2 (6-2-2)</u></a>	42
<a href="#"><u>Phone Code (6-2-3)</u></a>	42
<a href="#"><u>Network Code (6-2-4)</u></a>	42
<a href="#"><u>Fixed Dial (6-3)</u></a>	42
<a href="#"><u>View (6-3-1)</u></a>	42
<a href="#"><u>Set Status (6-3-2)</u></a>	42
<a href="#"><u>Modify (6-3-3)</u></a>	42
<a href="#"><u>SIM Lock (6-4)</u></a>	43
<a href="#"><u>Set Status (6-4-1)</u></a>	43
<a href="#"><u>Change Code (6-4-2)</u></a>	43
<b><a href="#"><u>3.7 AUDIO SETTING (7)</u></a></b>	44
<a href="#"><u>Ring Volume (7-1)</u></a>	44
<a href="#"><u>Ring Type (7-2)</u></a>	44
<a href="#"><u>Keypad Tone (7-3)</u></a>	44
<a href="#"><u>Alarm Type (7-4)</u></a>	44
<b><a href="#"><u>3.8 TOOLS (8)</u></a></b>	45
<a href="#"><u>Set Alarm (8-1)</u></a>	45
<a href="#"><u>Set Time (8-2)</u></a>	45
<a href="#"><u>Calendar (8-3)</u></a>	45
<a href="#"><u>View Day (8-3-1)</u></a>	45
<a href="#"><u>Make Note (8-3-2)</u></a>	46
<a href="#"><u>Erase Notes (8-3-3)</u></a>	46
<a href="#"><u>View All (8-3-4)</u></a>	46
<a href="#"><u>Select Date (8-3-5)</u></a>	46
<a href="#"><u>Calculator (8-4)</u></a>	47
<a href="#"><u>SIM</u></a>	48
<b><a href="#"><u>CHAPTER 4: MENU STRUCTURE MAP</u></a></b>	49
<b><a href="#"><u>CHAPTER 5: CARE AND MAINTENANCE</u></a></b>	50
<b><a href="#"><u>CHAPTER 6: TROUBLESHOOTING</u></a></b>	51

## <Memo>

## Safety Information

### IMPORTANT

**For the efficient and safe operation of your wireless handheld mobile telephone, observe these guidelines.**

#### ***Exposure to Radio Frequency Signals***

Your wireless handheld portable telephone is a low power transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

European and international agencies have set standards and recommendations for the protection of public exposure to RF electromagnetic energy.

- International Commission on Non- Ionizing Radiation Protection (ICNIRP) 1996
- Verband Deutscher Elektrikingenieure (VDE) DIN- 0848
- Directives of the European Community, Directorate General V in Matters of Radio Frequency Electromagnetic Energy
- National Radiological Protection Board of the United Kingdom, GS 11, 1988
- American National Standards Institute (ANSI) IEEE. C95.1- 1992
- National Council on Radiation Protection and Measurements (NCRP). Report 86
- Department of Health and Welfare Canada. Safety Code 6

These standards are based on extensive scientific review. For example, over 120 scientists, engineers and physicians from universities, government health agencies and industry reviewed the available body of research to develop the updated ANSI Standard.

The design of your phone complies with these standards when used normally.

## ***Antenna Care***

Use only the supplied or approved replacement antenna. Unauthorized antennas, modifications or attachments may damage the phone and violate FCC regulations.

## ***Phone Operation***

**Normal Position:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

**Tips on Efficient Operation:** For your phone to operate most efficiently:

- Extend your antenna fully (if applicable).
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at higher power level than otherwise needed.

## ***Batteries***

All batteries can cause property damage, injury or burns if a conductive material such as jewelry, keys or beaded chains touches exposed terminals. The material may complete electrical circuit and become quite hot. To protect against such unwanted current drain, exercise care in handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. When battery is detached from the phone, your batteries are to be packed with a protective battery cover. Please use this cover for storing your batteries when not in use.

## ***Driving***

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving--driving safety is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

## ***Electronic Devices***

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

## ***Pacemakers***

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should **ALWAYS** keep the phone more than six inches from their pacemaker when the phone is turned **ON**.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.

If you have any reason to suspect that the interference is taking place, turn your phone **OFF** immediately.

## ***Hearing Aids***

Some digital wireless phones may interfere with some hearing aids. In the event of such interference you may want to consult your hearing aid manufacturer to discuss alternatives.

## ***Other Medical Devices***

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone **OFF** in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## ***Vehicles***

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## ***Posted Facilities***

Turn your phone **OFF** in any facility where posted notice so require.

## ***Aircraft***

FCC regulations prohibit using your phone while in the air. Switch **OFF** your phone before boarding an aircraft.

## ***Blasting Areas***

To avoid interfering with blasting operations, turn your phone **OFF** when in a “blasting area” or in area posted “TURN OFF TWO-WAY RADIO”. Obey all signs and instructions.

## ***Potentially Explosive Atmospheres***

Turn your phone **OFF** and do not remove the battery when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks, from your battery, in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always clearly marked. They include fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

## ***For Vehicles Equipped with an Air Bag***

An air bag inflates with great force. **DO NOT** place objects, including both installed or portable wireless equipment, in the area over the air bag or in the



air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

### ***European Union Directives Conformance Statement***



This product is in conformance with the requirements of the applicable EU Council Directives.

Declarations of Conformance with the requirements are located at:

 
Motorola Ltd.

European Cellular Subscriber Division

Midpoint Alençon Link

Basingstoke, Hampshire RG21 7PL

United Kingdom

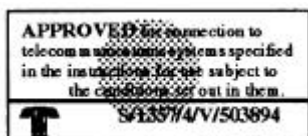

# <Memo>

# Your Phone

 
## Welcome

Welcome to the world of Motorola wireless communications from a global leader in communications technology! We are pleased you have chosen the Motorola Talkabout™ cellular phone to keep you connected with ease.

All Motorola phones are designed and manufactured to meet Motorola's rigorous specifications and world-class quality standards. During development, our testing team took the Talkabout™ phone through rigorous durability tests including temperature, humidity, shock, dust, vibration, and drop tests and the phone still worked!


We are confident that your callers will find your wireless phone to be a convenient and reliable way to stay in touch. Thank you for choosing Motorola Talkabout™, and enjoy your new phone!

## Front View

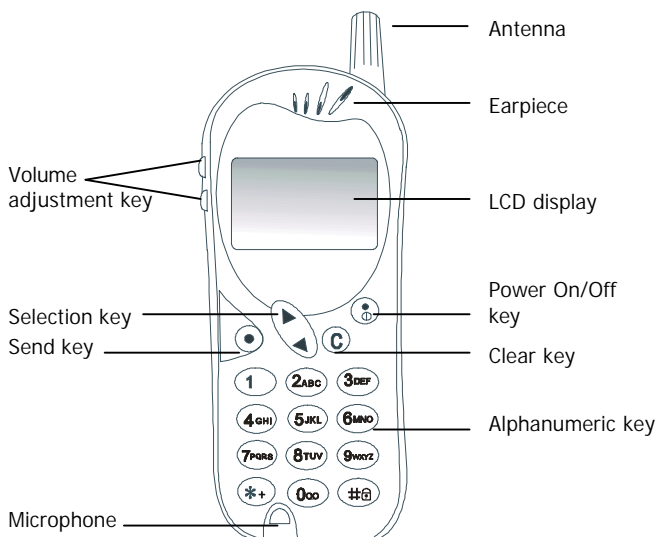


\*For a detailed description of the function of each key, please refer to page 6.

## Side View

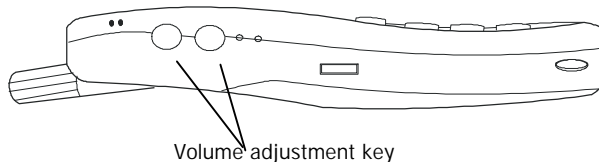 


\*Under standby mode, you can press the volume adjustment key to browse the Phone Book entries directly.

## Bottom View

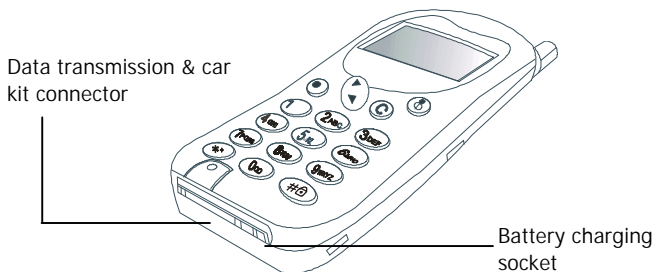 


\*The data transmission & car kit connector can be used to connect the optional data service cable and hands-free kit.

## Rear View

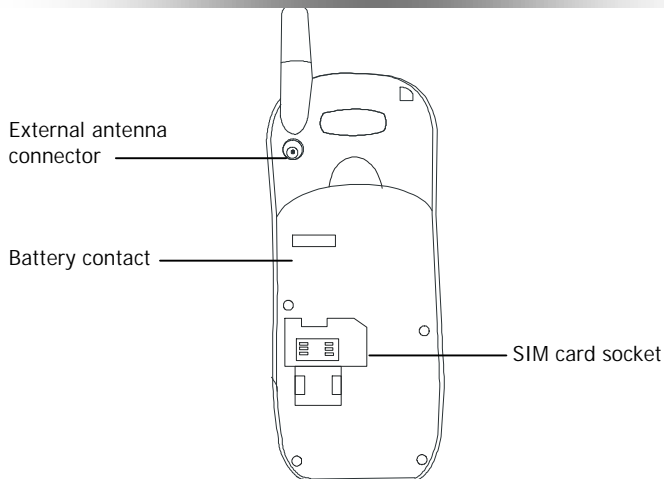 





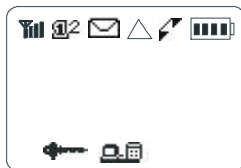 






## The LCD Display

There are several icons often shown on the LCD display:



The table below  
each icon:

describes the meaning of

	<b>Signal Strength</b>	The more bars displayed, the better the signal strength.
	<b>Roaming</b>	When your phone is not used under your home network, this icon will appear.
	<b>Short Message</b>	This icon will show on the screen when short message is received by the phone. When the message storage memory is full, this icon will flash.
	<b>Line in use</b>	Display the current line in use. Please see page 37 for details.
	<b>Call divert activated</b>	This icon will appear when you activate the call divert function. Please see page 31 for details.
	<b>Voice message waiting</b>	This icon indicates a voice message waiting at a designated line. Please see page 28 for details.
	<b>Vibrator mode</b>	This icon will appear when vibrator ringer mode is on.
	<b>Speaking</b>	This icon appears when you speak with your phone.
	<b>Battery Status</b>	It shows the strength of the battery. The more the bars, the more the strength. When charging the battery, the bars flash until the battery is full.
	<b>Key Lock</b>	This icon indicates that the key lock mode is ON.
	<b>Data Call</b>	This icon will appear if you set the next call as data call (Please see page 37 for details).

**Fax Call**

This icon will appear if you set the next call as fax call. (Please see page 37 for details).

## Keys





The keys on your phone can be divided into two categories: **function keys** and **alphanumeric keys**.

There are two ways to press these keys. In the sections below, “long press” means “pressing and holding the key for about 2 seconds”, while “press” means “pressing and releasing the key immediately”.

In standby mode, when you press a key on the keypad, the backlight will be turned on automatically. If you want to turn off the backlight, please refer to page 38 for details.

### Function Keys



There are 4 function keys on the keypad:

Key	Function
	<b>Power On/Off Key</b> Press this key to abort any selection or operation. Long press this key to turn the phone on or off.
	<b>Clear Key</b> Press this key to clear a single letter. Long press this key to clear a line.
	<b>Send Key</b> Press this key to send a call, enter a function, or confirm selections. Long press this key to redial the last call number.
	<b>Scroll Key</b> Press this key to move the cursor forward or backward. Use this key to navigate and select among function items in a menu or submenu.








 



 


## Alphanumeric Keys






There are a total of 12 alphanumeric keys on the keypad. You can use these keys to key in numbers and letters. If you type a wrong letter or number, you

can move the cursor to it by pressing  key, then press  key to erase it. Also you can long press an alphanumeric key to display a capital letter. When you have entered a letter and want to enter the next one, you can wait for about two seconds until the cursor moves to the position of the next letter, or simply press a key immediately to enter it.

The table below is a list of the alphanumeric keys and their corresponding characters.

Key	Characters
	, . : 1 % ! ? ; " ' < > ( ) @ &
	A B C 2 Å Ä å ä à Ç æ ß
	D E F 3 è é É £ Æ \$
	G H I 4 ì í ħ
	J K L 5 Δ _ Φ Γ Λ Ω
	M N O 6 Ñ ñ ò ö ø Ø ø
	P Q R S 7 ¥ §
	T U V 8 ü ũ ù
	W X Y Z 9 Π Ψ Σ Θ Ξ Ι )
	(Space)_ 0
	+ - * / =
	# P






For example, if you want to enter "Mary":

1. Press  key until "M" displays on the screen.
2. Long press  key until "a" appears on the screen.
3. Press  key several times until "r" appears on the screen.
4. Press  key several times until "y" appears on the screen. Finally press  key to confirm.

## Chinese Input

The Chinese input function of your phone allows you to enter Chinese characters when you:

- edit or add new Phone Book entries.
- search for a Chinese name in the Phone Book.
- write short messages.
- make notes in calendar.

To use the Chinese input function, first long press  key to enter the Pin-Yin input method, then you can switch among the three Chinese input methods by pressing  or long pressing  key: (Pin-Yin )? (Zhu-Yin )?






### (Frequently Used Phrases )


Note:















1. To receive and display the Chinese message properly, the receiver's phone must be able to display Chinese characters.
2. The Chinese input is available only when the language mode is Chinese.

### Pin-Yin

Pin-Yin method uses combinations of English alphabets to simulate the sounds of Chinese characters (Tones are not supported in this input method):

- Enter a combination of alphabets.
- Press  to display candidates, then use  key or a number key to select.
- Use  key or a number key to pick a context-related character.
- When the input is complete, press  or  to return to Phone Book or Message editing screen.






1. After you enter this input method, key in the combination of alphabets you want with alphanumeric keys. If two or more combinations appear on the screen after you press certain keys, you can scroll with  key to select the desired combination (the selected combination will be color-reversed).



2. Once an alphabet combination is located by the cursor, press  key and a list of 6 character candidates will be shown at the bottom of the screen. You can move the cursor with  key to select a desired candidate and press  to input, or simply press a corresponding number key (<1> to <6>, from left to right) to enter the character you want. If there are more than 6 candidates you will see "<<" or ">>" beside the candidates. You can then use  key to scroll through candidates one by one into the next/previous page, or press  and  to browse lists of candidates page by page.
3. After you input a character successfully, if there are context-related characters that can appear after the character you just entered, they will be displayed at the bottom of the screen. Again, You can use  or a corresponding number key to pick the desired one. When there are over six candidates you can press  or  and  to go to the next/previous page for more choices (Note: this function is NOT available in Phone Book). If you do not find the related character you want, simply press  or long press  to return to Pin-Yin input idle mode and input a new one.
4. When you finish with inputting the characters, press  or  key to go back to the Phone Book or Message editing screen.

 
## Zhu-Yin 注



 



The Zhu-Yin input method utilizes 37 phonetic symbols and 5 tone symbols (the first, second, third, fourth, and light tones) defined for traditional Chinese. Different combinations of these symbols represent different pronunciations. When you enter a combination that represents a specific pronunciation, characters of that pronunciation will appear on the screen as candidates for you to choose from.



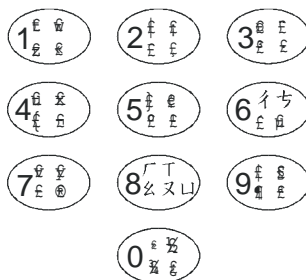



The general procedure for Zhu-Yin input method:



- Enter a combination of phonetic symbols and then a tone symbol.
- Press  to show candidates, then use  key or a number key to select.
- Use  key or a number key to pick a context-related character.
- When the input is complete, press  or  to return to Phone Book or Message editing screen.

1. When you switch to this input mode, follow the Zhu-Yin key mapping below to key in a valid combination of phonetic symbols. If two or more combinations appear on the screen after you press certain keys, you can move the cursor with  key to select the combination you want. Once the desired combination of phonetic symbols is located by the cursor, use  key to add a correct tone symbol.






 




2. When a valid combination of symbols appears on the screen, press  key to display possible candidates. You can move the cursor using  key to select a desired candidate and press  to input, or simply press a corresponding number key to enter the character you want. If there are more than 6 candidates you can press  or  and  to go to the next/previous page for more to choose from.
3. After you input a character successfully, if there are context-related characters that can appear after the character you just entered, they will

be shown at the bottom of the screen. Again use  or a number key to pick one, and scroll with  and  or  if there are more candidates in other pages (Note: Not available in Phone Book). If you do not find the related character you want, you can press  or long press  to return to Zhu-Yin input idle mode and input a new one.


4. When you finish Chinese input, press  or  to exit to the Phone Book or Message editing screen.

## Frequently Used Phrases


This method is the fastest way to enter frequently used Chinese phrases. After you switch to this input mode, press  key to bring up a list of frequently used phrases at the bottom of the screen, then press  key to scroll until you see the one you want. Press  key to select the phrase and input. You can also access a desired phrase directly by entering its number. For example, you can press  and  to get a phrase that is numbered 12, then press  to input. When finished, press  or  key to exit to the Phone Book or Message editing screen.

# Chapter 1: Basic Operation




## 1.1 Turn On the Phone Power

Long press  key to turn on the phone power.

## 1.2 Turn Off the Phone Power

Long press  key to turn off the phone power.


## 1.3 Make a Call

1. Long press  key to switch your phone on.
2. Enter your PIN and press  key.
3. After the PIN is accepted, your phone will start searching for the designated network automatically.
4. After connecting to the network successfully, the phone will beep twice and the LCD display will show the network you connect to and go into standby mode.
5. In this standby mode, dial the phone number including the area code. Then, press  key to send out your call.




- ◆ When the network service is not available, no signal level will be displayed on the screen.
- ◆ When connected to the network other than your designated one, the signal strength will still be displayed on the screen. However, you can only make an emergency call.
- ◆ During a call, you can use the call functions described on page 17.

## 1.4 End a Call

Press  key to end or cancel a call.

## 1.5 Answer a Call

When the phone rings or vibrates, the screen will display the name or the number of the caller (If your network service provider supports such function and you have subscribed to it). The name displayed depends on the data in the Phone Book. Press  key to answer a call. There are three answering mode options for you to answer your calls. Please refer to page 38 for details.

## **1.6** Adjust the Earpiece Volume



When you are speaking with your phone, press the volume adjustment keys on the side of the phone to adjust the volume of the earpiece. Five levels of volume are available for your selection.





## Chapter 2: Basic Call Functions

### 2.1 One-Touch Dialing


There are two ways for you to do one-touch dialing while in standby mode:

- ◆ You can long press  key. The last number you dialed will be dialed again automatically.
- ◆ You can use the first 9 records saved in the Phone Book by pressing the location of the desired number. For instance, if the number is saved in the Phone Book at the location of 5, long press  key to initiate the call.


### 2.2 Make an International Call

- ◆ Enter the outgoing national code, or press  key for about 1 second until “+” shows up on the display.
- ◆ Enter outgoing call's national code, area code and phone number. Send out your call by pressing .




### 2.3 Make an Emergency Call

Enter 112 (the international emergency number) and press  key. The call will be sent out. (This 112 number can be used in any country whether a SIM card is available or not, as long as you are included in a GSM network).



### 2.4 Make a Voicemail Call

Long press  key and you will link to your voicemail center directly. Network and subscription dependent feature. Not available in all areas. For details, please refer to page 28.






### 2.5 Missed Call Message

If for any reason, an incoming call cannot be answered, a missed call message will appear on the screen to remind you of the call you missed (Network and subscription dependent feature. Not available in all areas). To reply to the missed call, first press  key, then press  key to select the number you want to reply to and press  key to dial it.



## 2.6 Abbreviated Call

Key in a number (1 to 99) which locates the desired phone number in the Phone Book memory, then press  key. When the desired phone number appears, press  key to dial it.

## 2.7 Phone Book Shortcut




Under standby mode, you can press the volume adjustment keys to enter the Phone Book and browse the entries (you can also press  to browse). When the desired phone number appears, press  key to dial. You can also find a Phone Book record by typing the first letter of its name. For example, if you want to find a name that starts with "K", enter "K" and press  key. The names starting with "K" will appear on the screen. Use  key or volume adjustment keys to scroll the names until the one you want appears on the screen. Finally, press  key to dial.

## 2.8 Add New Phone Book Entries


Under standby mode, you can add new entries to Phone Book by first entering the phone number and long pressing  key. You will then be prompted to enter the name, number and record number (i.e., the location of that entry). When finished, press  key.

The phone book can store up to 100 entries in the phone memory plus additional 120 entries on the SIM card.

## 2.9 Last 10 Number Redial

- ◆ Press  key to access the last number dialed.
- ◆ Press  key to scroll through the last 10 numbers dialed.
- ◆ Press  key to send the call if the number shown is correct.






You can long press  key to send out the last number dialed directly.



## 2.10 Incoming Call Waiting

(Network and subscription dependent feature. Not available in all areas.)


If another call comes in while you are on the phone, you can:

- ◆ Press 0 and  key to reject the waiting call.
- ◆ Press 1 and  key to end the active call and connect the waiting call.
- ◆ Press 2 and  key to hold on the active call and connect to the waiting call.

## 2.11 Dial Extension Number

After you key in the telephone number, long press  key for a second, then "P" will display on the screen. Enter the extension number and press  key to make the call.

## 2.12 Call Options

When you are on a telephone call, you can press  key to enter the call options. The options are listed as follows:



The options marked "\*" are only available if you have subscribed to your network service provider.

### Mute call

When no sound wants to be heard by your caller when you are on a call. You can choose the Mute function to do so.

### Conference

#### \* **End call**

Under a circumstance of multi-party call, you can end the call on one of them by selecting this function.

#### \* **Swap**

This function is available when you have both active and held calls. Swap transfers the active call to hold and vice versa, so that you may converse with the other party.

#### \* **Hold**

This function allows you to put a currently active call on hold, so that you can initiate a new call.

### \* ***Unhold***

Once you end the new call while holding an old call, the old call can be made active again by selecting this function.

### \* ***Join***

This function can let you make a conference call.

### \* ***Private***

During a conference call, you can use this function to talk privately with one participant.



## \* Messages



You can read or write messages under this function. Please refer to page 25 for details.

## Phone Book

You can access your Phone Book by selecting this item. For details on how to use the Phone Book, please refer to page 21.

## **2.13** Key Lock

You can long press  key to initiate the key lock function to prevent turning on or off your phone unintentionally. When the key lock function is initiated, the  icon will appear on the screen.

To unlock, press  key and then press  key.


 



## Chapter 3: Menu Options



Your mobile phone provides many extra options for you to select. The following sections describe the options in the menu and their functions respectively. There are two ways to access the menu options:






### Normal Access

In standby mode, press  key to enter the main screen.

- ◆ Press  key to toggle between the functions in the main screen, then press  key to select and enter. Select the desired function with  key and press  to confirm.
- ◆ Press  key several times to return to standby mode.

For example, when you want to change the language setting:






Press  key to select "Phone Setting" , then press  key to confirm.

- ◆ Press  to highlight the "Language" item, and press  key to confirm.
- ◆ Select the desired language item with  key, then press  key to confirm.
- ◆ Press  key several times to return to standby mode.


## Shortcut Access

After you enter the main screen, key in the function codes listed behind each function item in the following sections. With this shortcut, you can reach your desired function instantly.

For example, when you want to change the language setting (The function code for "Language" setting is 4-5):

- ◆ Press  key to enter the main screen.
- ◆ Press 4 (go to "Phone Setting") then press  key.
- ◆ Press 5 (go to "Language").
- ◆ The options of the "Language" function item will be displayed automatically. Select the desired language with  key and press  key to confirm.
- ◆ Press  key several times to return to standby mode.



You will see a function code listed to the right of each function item in the following sections. When you enter the main menu screen, type a function code to go to a desired function through shortcut access. (Note: you must press  key right after you press the FIRST number of a function code, then you can access the desired function directly by pressing the rest numbers of the code.)

## 3.1 Phone Book (1)



Phone Book menu allows you to set up your own phone book. You can add or delete the records anytime you want. In addition, you are able to choose to save the records either in SIM card memory or phone memory. You can also find the last number you dialed, the last number you received, and the last number you missed through this Phone Book function.

You can store up to 100 entries in the phone memory and up to an additional 120 entries on the SIM card.






The following is the structure and details of this directory.

### Last Number (1-1)

You can find the record for the latest calls you made in a variety of situations.



 


#### ***Dialed (1-1-1)***

Display the last 10 calls you dialed.

After you press  key to enter this item, you can press  key to browse the number you dialed. Select a number and press  key to enter, then press  key to choose to dial that number (Send) or save that number to Phone Book (Save). Finally, press  key to confirm.






#### ***Received (1-1-2)***

Displays the last 10 calls you received.

After you press  key to enter this item, you can press  key to browse the calls you received. Select a call and press  key to enter, then press  key to choose to dial that number (Send) or save that number to Phone Book (Save). Finally, press  key to confirm.

#### ***Missed (1-1-3)***

Displays the last 10 missed calls.




After you press  key to enter this item, you can press  key to browse the calls you missed. Select a call and press  key to enter, then press  key to choose to dial that number (Send) or save that number to Phone Book (Save). Finally, press  key to confirm.

## **Delete all (1-1-4)**

This function allows you to clear the data in the record.




### ***Dialed (1-1-4-1)***

Deletes the record of last dialed calls.

After you press  key to enter this item, "Delete All?" will appear on the screen. Press  key to delete the record. You can also press  key to cancel.




### ***Received (1-1-4-2)***

Deletes the record of last received calls.

After you press  key to enter this item, "Delete All?" will appear on the screen. Press  key to delete the record. You can also press  key to cancel.




### ***Missed (1-1-4-3)***

Deletes the record of last missed calls.

After you press  key to enter this item, "Delete All?" will appear on the screen. Press  key to delete the record. You can also press  key to cancel.

### ***Delete All (1-1-4-4)***




Deletes all call data.


After you press  key to enter this item, "Delete All?" will appear on the screen. Press  key to delete all call data. You can also press  key to cancel.





## Find Record (1-2)


You can search the saved record by entering the name of the receiver. You can also choose to dial, edit, delete or save that number in another location.


After entering this item, you will be prompted to enter the name of the receiver. You can key in the name with the alphanumeric keys then press  key. When completed, the corresponding location, telephone number and name will appear on the screen. You can also find a Phone Book record by typing the first letter of its name. For example, if the first letter of the name is "K", enter "K" and press  key. The names starting with "K" will appear on the screen (including the Chinese names whose Pin-Yin combinations start with "K"). Use  key to scroll the names until the one you want appears on the screen.

Now you can press  key to choose from the options below:

Send: press  key to dial that number.

Edit: press  key to edit that record.





Delete: press  key to delete that record.

Move: press  key to move that record to another location.

(Note: in standby mode, you can also access a phone book record directly by pressing the volume adjustment key.)

## Add Record (1-3)


This function allows you to add new records to the Phone Book.

After selecting this function, you will be prompted to enter the name. Enter the name and press  key, then enter the telephone number. If you want to enter an extension number, press  key for about one second until "P" appears on the screen, then key in the extension number. When completed, press  key. Your phone will assign a location to save this record automatically. Press  key to confirm, and "Record Saved" will appear on the screen.

If you want to add more records, please repeat the steps above. The Phone Book memory of the phone can store up to 100 phone book entries.




When you enter a new telephone number, use the international number format:

Long press  key to display "+", then enter your country code and the phone number.



By doing this, you do not have to change the records when you are roaming in other countries.

## Delete (1-4)

You can erase records that are no longer needed here. After you enter this item, the following options will appear on the screen. You can press  key to enter each option:


### ***By Name (1-4-1)***

You can delete the records in the Phone Book by name.

After you enter this item by pressing  key, the screen will ask you to enter the name of the record. After you key in the name of the record you wish to delete, the record will display on the screen. Press  and this record will be erased.




### ***Delete All (1-4-2)***

Deletes all records in the Phone Book.

After you select this item, press  to clear all records in the Phone Book.


## Memory (1-5)



You can select the memory where the Phone Book records can be saved. Two options are available: the memory in the SIM card or the memory in your phone.



After you enter this item by pressing  key, "SIM" and "Phone" will display on the screen. Press  key to select which memory you wish to use, then press  key to confirm.



## Own Number (1-6)


Sets or displays the current SIM card number.

If there is no own number data saved in the memory, the message "No Records. Add Record?" will display on the screen when you enter this function. You can press  key to enter your name and your phone number, then specify a location for this number (1 or 2).

If you have previously entered your own number data in this function, you can first press  key to enter, then press  key to select from the following options:

Add Record: press  key, then enter the name, number and record number. Finally, press  key to confirm.

Edit Record: press  key to edit the number. When completed, press  key.





Delete Record: press  key to delete.

## 3.2 Messages (2)






You have to subscribe to your network service provider before you can use the message functions described below. For details, please consult your network service provider.

### Inbox (2-1)

If a new text message is received,  icon appears on the screen. Please enter this function to read the new message. If there is no new message, "No Messages" will appear on the screen. If you have new messages, you can first press  key to browse the messages and then press  to read. After you read a message, you can press  key again to enter the following options:

#### **Delete**


Delete current message.



 
Press  key to delete the message. When deleted, "Deleted, Read Next?" will display on the screen. If you want to read the next message, please press  key. If you want to exit, please press  key.



#### **Edit**

Edit current message.

Press  key to start editing the message. When completed, you can



press  key to choose from the following options:

Send: press  key to select this item. Enter the receiver's phone number, or press  key twice to use the number in Phone Book. Finally, press  key to send.

Save: press  key to save the message. Enter the number and then press  key.




## ***Reply***

Reply to current message.

Press  key to enter this item, then edit the reply message. When completed, press  key.




## ***Send***


Forward current message.



Press  key to enter this item and enter the receiver's phone number, or press  key twice to use the number in Phone Book. When completed, press  key to confirm.

## ***Use Number***

Display and use the phone number in the message.



Press  key to enter this item. If there is more than one number in a message, the phone will display all numbers captured. Choose a number with  key then press  key, and the following options will appear on the screen:




Send: press  key to dial that number.




Save: press  key, then enter the name for that number. Finally, press  key to save the number to Phone Book.

## **New Message (2-2)**


You can write short messages with this function.

After you press  key to enter this function, key in the message you want to send and press  key, then choose "Send" or "Save":

Send: press  key, then enter the receiver's number and press  to send or press  key to cancel.




Save: press  key, then enter the receiver's number. Finally, press  key to save, or press  key to cancel.

## Outbox (2-3)

You can use this function to read the messages you sent. After you select a message, you can press  key to choose from the following options:



### **Delete**




Delete the selected message.



Press  key to delete the message. When deleted, "Deleted, Read Next?" will display on the screen. If you want to read the next message, please press  key. If you want to exit, please press  key.

### **Edit**

Edit current message.




Press  key to start editing the message. When completed, you can press  key to choose from the following options:

Send: press  key to select this item. Enter the receiver's phone number, or press  key twice to use the number in Phone Book. Finally, press  key to send.

Save: press  key to save the message. Enter the number and then press  key.




### **Send**


Send the message selected.



Press  key to enter this item and enter the receiver's phone number, or press  key twice to use the number in Phone Book. When completed, press  key to confirm and send.

### **Use Number**




Display and use the phone number in the message.

Press  key to enter this item. If there is more than one number in a message, the phone will display all numbers captured. Choose a number with  key then press  key, and the following options will appear on the screen:


Send: press  key to dial that number.

Save: press  key, then enter the name for that number. Finally, press  key to save the number to Phone Book.

## Voice Mail (2-4)




With this function, you can call the voice mailbox provided by your network service provider to listen to the voice mail. Once your phone receives a voice message at line 1, the icon for the voice message waiting  will appear on the screen ( will show up if line 2 is in use). Then you can enter this item by pressing  key and the phone will automatically dial the designated voice mailbox number for you. (Note: for how to designate the line in use, please see page 37)

## Broadcast (2-5)

You can receive cell broadcast offered by your network service provider, and choose preferred topics and languages. You can press  key to choose from the following options:






### ***Receive (2-5-1)***

Receive the cell broadcast provided by your network service provider.

After pressing  key to enter this item, you can press  key to choose "ON" or "OFF" to decide whether to receive or not. Finally, press  key to confirm.




### ***Topics (2-5-2)***

Display the topics of the broadcast message.


After you press  key to enter this item, "No Topics Add Topic?" will appear on the screen if no topics have been saved before. You can press  key and enter the topic you want, then press  to confirm. If you have entered a topic before, it will appear on the screen when you enter this item. Then you can press  to choose to add a new topic or delete the saved one. When completed, press  again key to confirm.

### ***Language (2-5-3)***

You can choose the language used to display the broadcast message.



After you press  key to enter this item, the options will display on the screen. Press  key to choose the language you want and press  key to confirm.

## Settings (2-6)

This menu item includes several options to adjust the message settings. Press  key and the following options will display on the screen:




### ***Route Center (2-6-1)***

This function stores the phone number of the message center for sending your text messages. The message you send is transmitted via this message center to the receiver.


Press  key and enter the message center number provided by your network service provider. When completed, press  key to confirm.



### ***Valid Period (2-6-2)***

You can set the length of time that your text messages are stored at the message center while the message center attempts to deliver them.

Press  key and use  key to select a desired valid period. Finally, press  key to confirm.

### ***Voice Mail (2-6-3)***

Within this submenu, you can store the phone number of your voice mailbox. You can long press  or enter 2-4 **Voice Mail** to dial.

Press  key, then enter the voice mailbox number provided by your network service provider. Finally, press  key to confirm.

### ***Reply Path (2-6-4)***

You can ask the network to set the route of the reply message via your own message center.

Press  key and then use the  key to select "On" or "Off". Finally, press  key to confirm.

### ***Notification (2-6-5)***

If you activate this function, your network will send you a delivery report.

Press  key and then use the  key to select "On" or "Off". Finally, press  key to confirm.




### ***Alert Beep (2-6-6)***

If you activate the alert beep function, it will alert you when you receive a short message.

Press  key and then use the  key to select "On" or "Off". Finally, press  key to confirm.




### ***Format (2-6-7)***

You can ask the network to convert your text message into different formats.

Press  key and then use the  key to select from the following formats: Text, Paging, E-mail, Fax, Voice, ERMES, Telex and Grp4 Fax. When completed, press  key to confirm.

## **Delete All (2-7)**

Delete all the messages. If you just want to delete certain messages, please refer to pages 25 and 27 for details.

Press  key, and "Delete All?" will appear on the screen. If you want to delete all message data, press  key. You can also press  key to cancel.



### 3.3 Call Services (3)





Call Services provide several options to manage your calls.




The call functions below are only available if you have subscribed to your network service provider.



#### Call Divert (3-1)


You can select several call diverting modes here. When you don't need a certain divert mode any more, you can deactivate it individually. After you have the call divert function activated, the icon  or  will appear on the standby-mode screen depending on which line you use (for how to designate the line in use, please see page 37).


##### ***Divert Voice (3-1-1)***

You can send your voice calls to another designated phone number.

Press  key to display the following options:


Activate: after you press  key to enter this function, you will be prompted to enter the number to divert to. When you finish entering the number, press  key to activate the function.



Cancel: press  key to cancel the function.


Status: press  key, and the status of this function will appear on the screen.


##### ***When Busy (3-1-2)***

You can send your calls to a designated phone number when your phone is busy.

Press  key to display the following options:


Activate: after you press  key to enter this function, you will be prompted to enter the number to divert to. When you finish entering the number, press  key to activate the function.



Cancel: press  key to cancel the function.


Status: press  key, and the status of this function will appear on the screen.


### ***If No Reply (3-1-3)***

When the incoming call is not replied, your calls will be sent to another designated phone number.

Press  key to display the following options:


Activate: after you press  key to enter this function, you will be prompted to enter the number to divert to and a no reply time (in seconds). When you finish entering the data, press  key to activate the function.


 
Cancel: press  key to cancel the function.


Status: press  key, and the status of this function will appear on the screen.


### ***Unreachable (3-1-4)***

When the phone is turned off or located outside the network service area, your calls will be sent to another designated number.

Press  key to display the following options:


Activate: after you press  key to enter this function, you will be prompted to enter the number to divert to. When you finish entering the number, press  key to activate the function.


 
Cancel: press  key to cancel the function.


Status: press  key, and the status of this function will appear on the screen.

### ***Divert Cond. (3-1-5)***

Divert all voice calls to the number designated when your phone is busy, unreachable or there is no reply from your phone.


Press  key to display the following options:


 
Activate: after you press  key to enter this function, you will be prompted to enter the number to divert to. When you finish entering the number, press  key to activate the function.


Cancel: press  key to cancel the function.


### ***Divert Data (3-1-6)***

Divert all data calls to the number designated.

Press  key to display the following options:


Activate: after you press  key to enter this function, you will be prompted to enter the number to divert to. When you finish entering the number, press  key to activate the function.



Cancel: press  key to cancel the function.


Status: press  key, and the status of this function will appear on the screen.


### ***Divert Fax (3-1-7)***

Divert all fax calls to the number designated.

Press  key to display the following options:



Activate: after you press  key to enter this function, you will be prompted to enter the number to divert to. When you finish entering the number, press  key to activate the function.

Cancel: press  key to cancel the function.

Status: press  key, and the status of this function will appear on the screen.

### ***Cancel All (3-1-8)***

You can cancel all call divert functions here.


Press  key, and "Cancel All?" will appear on the screen. Press  key again to confirm.



## **Call Barring (3-2)**


If you wish to restrict outgoing or incoming calls, you can use the call barring function to set up limitations.


### ***All Outgoing (3-2-1)***

Bar all outgoing calls.

Press  key to display the following options:



Activate: after you press  key to enter this function, you will be prompted to enter the password provided by your network service provider. When you finish entering the password, press  key to activate the function.


Cancel: press  key to cancel the function.


Status: press  key, and the status of this function will appear on the screen.

### ***Int'l Out (3-2-2)***

Bar all outgoing international calls.



Activate: after you press  key to enter this function, you will be prompted to enter the password provided by your network service provider. When you finish entering the password, press  key to activate the function.


Cancel: press  key to cancel the function.


Status: press  key, and the status of this function will appear on the screen.

### ***Int Exc Home (3-2-3)***

Bar outgoing international calls except calls that are connected to home network.



Activate: after you press  key to enter this function, you will be prompted to enter the password provided by your network service provider. When you finish entering the password, press  key to activate the function.


Cancel: press  key to cancel the function.


Status: press  key, and the status of this function will appear on the screen.

### ***All Incoming (3-2-4)***

Bar all incoming calls.



Activate: after you press  key to enter this function, you will be prompted to enter the password provided by your network service provider. When you finish entering the password, press  key to activate the function.


Cancel: press  key to cancel the function.


Status: press  key, and the status of this function will appear on the screen.

### ***In When Roam (3-2-5)***

Bar incoming calls when roaming.



Activate: after you press  key to enter this function, you will be prompted to enter the password provided by your network service provider. When you finish entering the password, press  key to activate the function.

Cancel: press  key to cancel the function.

Status: press  key, and the status of this function will appear on the screen.

### ***Cancel All (3-2-6)***

Cancel all call barring settings.


Press  key to enter this function, then press  key again to confirm.

## Call Waiting (3-3)

This function is only available when you have subscribed to your network service provider. An incoming call number and a call-waiting message will appear when a new incoming call is directed to your phone when you are on another call. You can activate or deactivate this function by checking the status here.


### ***Activate (3-3-1)***

Activate call waiting function.

Press  key to activate this function.


### ***Cancel (3-3-2)***

Cancel call waiting function.

Press  key to deactivate this function.


### ***Status (3-3-3)***

Inquire the status of call waiting function.

Press  key to check the status of the call waiting function.


## Call Record (3-4)

This function records the information of the call duration and call cost.


Press  key to display the following options:

### ***Last Call (3-4-1)***

#### ***Time (3-4-1-1)***


Press  key, and the duration of the last call in hours, minutes & seconds will be displayed on the screen.

#### ***Cost (3-4-1-2)***

Press  key, and the cost of the last call will be displayed on the screen (Network support required).

### ***All Calls (3-4-2)***

#### ***Time (3-4-2-1)***

Press  key, and the duration of all calls will be displayed on the screen.

#### ***Cost (3-4-2-2)***

Press **[\*]** key, and the cost of all calls will be displayed on the screen (Network support required).

#### ***Clear Cost (3-4-2-3)***

Press **[\*]** key to clear the call cost data (PIN 2 is required).

#### ***Clear Time (3-4-2-4)***

Press **[\*]** key to clear the call duration data.

### ***Call Rate (3-4-3)***

#### ***Currency (3-4-3-1)***

Press **[\*]** key to enter a preferred currency base to calculate the cost of your calls (PIN 2 is required).

#### ***Charge Unit (3-4-3-2)***

Press **[\*]** key to enter the unit price to calculate the cost (PIN 2 is required).

### **What is PIN2?**

PIN2 is a second set of PIN that is mainly used to control limited services such as call cost limitation and fixed dialing numbers.

### ***Cost Limit (3-4-4)***

You can set limits to the total call cost. If the call cost goes over the limit, the phone can't be used to dial a pay call. When this function is activated, the remaining cost will appear on the screen.





Press **[\*]** key, and the following options will appear on the screen:

On: press **[\*]** key to activate the cost limit function (PIN2 is required).

Off : press **[\*]** key to deactivate this function.

## Line in Use (3-5)


This function allows you to use two different telephone numbers for one single phone. You can designate the number used to make a call and use both of these numbers simultaneously to receive calls without having to use two phones to do so. This function is only available if your network service provider provides such service.

After you enter this item, you can press  key to choose the number (Line 1 or Line 2), then press  key to confirm. The number you selected (Line 1  or Line 2 ) will appear on the screen while in standby mode.


## Next Call (3-6)

Your phone can receive voice, data and fax calls. Depending on your network service provider, you may have to select among the voice, data and fax calls under this option before you can receive them correctly. This scenario only applies to one number scheme network service providers (i.e., the voice, data and fax calls are all transmitted via a single telephone number). Consult your network service provider to decide if you need to do such setting.


### ***Voice*** (3-6-1)

Press  key to set the next call as a voice call (This is the default setting).

### ***Data*** (3-6-2)

Press  key to set the next call as a data call.

### ***Fax*** (3-6-3)

Press  key to set the next call as a fax call.

After you receive a data or fax call, you need to change the setting back to "voice" in order to receive ordinary voice calls.




## 3.4 Phone Setting (4)



Under this menu you can select to customize the way in which your phone works.

### Back Light (4-1)



You can adjust the brightness of the LCD back light here.

Press  key to enter and press  key to select the brightness level of the LCD back light. The more bars displayed, the brighter the LCD back light becomes. Finally, press  key to confirm.

### Auto Redial (4-2)


There are two ways to redial a call.


- ◆ Automatic: redials the number continuously.
- ◆ Prompt: requires your confirmation before redialing the phone number
- ◆ Off: you are able to cancel these auto redial modes by choosing "Off".


Press  key to select the redial mode you like and press  key to confirm.



### Answer by (4-3)

Three options are available for you to answer incoming calls.




Press  key, and the following options will appear on the screen:

Auto: after you press  key to select this mode, the incoming call will be automatically answered after it rings once. This mode is effective only when the portable hands-free kit is connected to the phone.

Any Key: after you press  key to select this mode, the incoming calls can be answered by pressing any key.

Send Key: after you press  key to select this mode, the calls can be answered by pressing  key.




### Key Lock (4-4)

You can use the keypad lock function to prevent unwilling key-in actions, say, when you put your phone in a bag. In locked mode, you can answer calls by pressing  key. To unlock, press  key, then press  key.






## Language (4-5)

You can choose the language used to display the information.

After you press  key to enter this item, press  key to select the language and press  key to confirm.




## Time Alert (4-6)

Your phone will beep once a minute when you make a call after you initiate this function.

Press  key to enter this function and use  key to select "On" or "Off", then press  key to confirm.

## Restore (4-7)



Reset all settings to default setting.

After you enter this function by pressing  key, you will be prompted to enter the phone code (The default setting for the phone code is 1234). Enter the phone code and press  key. Press  key again to confirm.


## Display (4-8)

With this function, you can choose to display two different kinds of animations on the LCD screen.


Choosing animation mode can reduce the phone's standby time by up to 10%.

After you press  key to enter this item, press  key to scroll the display modes:


### ***On (4-8-1)***

Press  key to select this mode. The LCD screen will display phone and network information by default.

### ***Animation 1 (4-8-2)***

Press  key to select this mode. If no incoming call is received and you leave the keypad untouched for about 20-30 seconds under standby status, Animation 1 will be displayed on the LCD screen. The display will be switched to the default mode if there is an incoming call received by the phone or when you touch any key on the keypad.

### ***Animation 2 (4-8-3)***


Press  key to select this mode. If no incoming call is received and you leave the keypad untouched for about 20-30 seconds under standby status, Animation 2 will be displayed on the LCD screen. The display will be switched to the default mode if there is an incoming call received by the phone or when you touch any key on the keypad.

## **3.5 Network (5)**





When turning on your mobile phone, the phone automatically selects the home network for you. You can also do network selection by manual modes. Network and subscription dependent feature. Not available in all areas.

### **Automatic (5-1)**

The phone would perform another network search after this function is selected. Press  key to select.

### **Manual (5-2)**

The phone would list the available networks when this function is selected. Use  key to select the network to use, then press  key to confirm.

### **Band (5-3)**

Your phone can be used under a GSM 900 or GSM 1800 network environment. You can select which network to connect to under this function item. The band select option is a network and subscription dependent feature. (Note: Not available in all areas.)

#### ***Automatic (5-3-1)***

After you enter this item, the phone will detect the network environment and select an appropriate network system automatically.



#### ***900MHz (5-3-2)***

Connect your phone to a GSM 900 network system.

After you enter this function with  key, press  key again to confirm.

### **1800MHz (5-3-3)**

Connect your phone to a GSM 1800 network system.

After you enter this function by pressing  key, press  key again to confirm.

## **3.6 Security (6)**






The security functions can help prevent your phone and SIM card from being used by an unauthorized person.

### **Code Status (6-1)**

The code status includes:




#### ***PIN code (6-1-1)***

Activate/Deactivate the PIN code function.

After you enter this function by pressing  key, the screen will display two options: "On" and "Off". Use  key to select and press  key to confirm. When you change the PIN code status, you will be prompted to enter PIN.

#### ***Phone Code (6-1-2)***




You can activate/deactivate the Phone Code function here.

After you enter this function by pressing  key, the screen will display two options: "On" and "Off". Use  key to select and press  key to confirm. When changing the Activate/Deactivate status, you have to enter your phone code. (The default phone code is 1234).

### **Change Code (6-2)**

#### ***PIN Code (6-2-1)***

You can change your PIN here.

You need to activate the PIN function as described in 6-1-1 before changing your PIN. First, enter the original PIN and press  key. Then enter the new PIN and press  key. Finally, enter the new PIN again and press  key to confirm.

### ***PIN2 (6-2-2)***

You can change PIN 2 the same way as described in 6-2-1.

### ***Phone Code (6-2-3)***


You can change your phone code the same way described in 6-2-1.

### ***Network Code (6-2-4)***

You can change net password the same way described in 6-2-1.


## **Fixed Dial (6-3)**

You can set limitation of the numbers you call out.

	You must have PIN2 before you can use this function.
--	--




### ***View (6-3-1)***

Under this branch, you can see what Fixed Dial numbers you set.

Press , and the numbers will appear on the screen.



### ***Set Status (6-3-2)***

Switch on/off about this Fixed Dial function.

After you enter this function by pressing , press  key to select "On" or "Off" and press  key to confirm.

### ***Modify (6-3-3)***


You can add or change records of your fixed-dial numbers.

Press , and the numbers will appear on the screen. You can press  key again to add, edit or delete numbers.

## SIM Lock (6-4)


With this function, you can help prevent unauthorized usage of the phone with unknown SIM cards.


After you set this function ON, if the SIM card in your phone is not the one used to enable this function, you will be prompted to enter the unlock code when you power on your phone. If the unlock code entered is correct, the phone will recognize the SIM card automatically. The next time you power on your phone with this newly recognized SIM card, you will not be prompted to enter the unlock code again. However, if the unlock code entered is incorrect, the display will show "Insert Correct SIM", and the phone will function as if the SIM card was not inserted. The phone can recognize up to 3 different SIM cards.

After you enter this function by pressing  key, the following options will appear on the screen:

### ***Set Status (6-4-1)***



After you select this item, you can choose from the following options:

On: press  key to enable the SIM lock function. You need to enter the unlock code first (The default unlock code is 00000000).

Off: press  key to disable the SIM lock function. You need to enter the unlock code to disable it.

### ***Change Code (6-4-2)***

Change the unlock code. You need to enter the original unlock code.

After you select this item, press  key and you will be prompted to enter the original unlock code. Enter the original unlock code and the new unlock code, then press  key.



## 3.7 Audio Setting (7)



You can adjust the audio setting of your phone here.

### Ring Volume (7-1)

You can select the ring volume level here. A total of five levels are available.

After you enter this item, press  key to change the ring volume level. The more bars appear beside the bell icon, the louder the ring volume. Finally, press  key to confirm.

### Ring Type (7-2)

You can choose the ring type of your phone from 5 ring types, 13 melodies and 2 vibration types.

After you enter this item, press  key to choose the ring type to be used. Finally, press  key to confirm.

### Keypad Tone (7-3)

This setting determines whether keypad tones will be sounded.

After you enter this item, press  key to choose from "On" or "Off". Finally, press  key to confirm.

### Alarm Type (7-4)

You can set the alarm type here.



After you enter this item, press  key to choose the alarm type to be used. Finally, press  key to confirm.

## 3.8 Tools (8)







This sub-menu allows you to set alarm, current time or jot down notes as a reminder for your important matters.

### Set Alarm (8-1)

After entering this function item, you can choose to set alarm function On or Off. If you choose "On", "Time" will pop up on the screen. You can press  key or press alphanumeric keys directly to set the alarm time, then press  key to confirm. If you choose "Off", the alarm function will be disabled.


### Set Time (8-2)


You can set current date and time in this function item. Totally two options are available:

On: you can choose this item to set current date and time. To set the date, use alphanumeric keys to enter year, month and day, then press  key to confirm. To set the time, use  key or alphanumeric keys to enter hour and minute, then press . If you want to clear a number, press  key.


Off: do not set and display current time.

### Calendar (8-3)




When you enter this function, a calendar will be displayed on the screen, and current date will be highlighted. If you haven't set current time and date yet, please do it in function **8-2--Set Time**. You can use the volume adjustment key to jump to the last or next month, then press  key to select date forward or backward.

When a date is selected, you can press  key to enter its options.



#### *View Day (8-3-1)*

View the notes for current selected date. After you finish reading the notes, you can press  key to enter and edit, erase the note or forward the note to another date.



### ***Make Note (8-3-2)***

After entering this item, you can first jot down the notes, then press  key to confirm. You will be prompted to enter the date for this note. When finished, "Set Alarm?" will display on the screen. If you want to enable the alarm function to remind you, you can press  key to set the alarm time. If you don't need the alarm, press  key to save the note.


### ***Erase Notes (8-3-3)***

You can choose "One By One" and press  key to select and erase notes individually, or choose "All" and when "Erase All Notes?" appears on the screen, press  key to erase all notes.

### ***View All (8-3-4)***

You can press  key to display the notes. When you finished reading the note, you can press  key to enter and choose to delete, edit the note or forward the note to another date.



### ***Select Date (8-3-5)***

















You can enter the date of the note you want to read. When done, the screen will display the date you input. Press  key to display the note for that day.



## Calculator (8-4)

This function allows you to use your phone as a handy calculator.

Press  key to enter this function and a cursor will appear on the upper left corner of the LCD screen. Enter numbers by pressing numeric keys. To enter arithmetic symbols, press  key according to the chart below:


Key	Number/Function	Key	Number/Function	
	1		Display result	
	2		Move the cursor	
	3		Pressed once	+
	4		Pressed twice	-
	5		Pressed 3 times	*
	6		Pressed 4 times	/
	7		Pressed once	.
	8		Pressed twice	(
	9		Pressed 3 times	)
	0		Cancel	
	Clear number			

For example, to calculate the following formula:

$$123 \times (456 + 34) / 4 - 2$$

Press     (thrice)  (twice)       

(thrice)  (4 times)   (twice) .

 
Finally, press  key to display the result.

## SIM

This function is provided by your network service provider. Depending on your SIM card and the service provided, there will be several extra options under this directory. However, if the SIM card and your network service provider do not offer such service, this item will not be displayed on the screen. For more details, please contact your network service provider.

## Chapter 4: Menu Structure Map

Please refer to the Menu Structure Map below to access each function item quickly and easily:

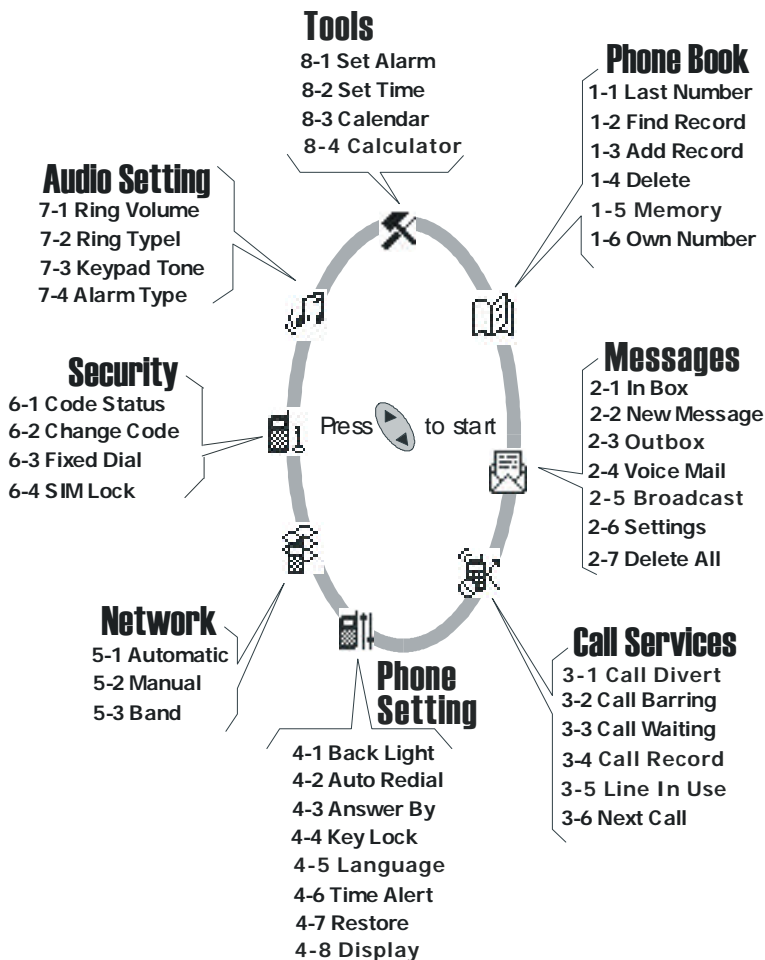

## Chapter 5: Care and Maintenance

Notice the following to help ensure the proper use and the life of your mobile phone:

- ◆ Keep your mobile phone and its accessories out of small children's reach.
- ◆ Keep your phone dry. Use your phone at a normal temperature. Temperature higher than 55°C or lower than -20°C (higher than 131°F or lower than -4°F) may cause damage to your phone.
- ◆ Do not use or store your phone in dusty or dirty areas if possible.
- ◆ Do not disassemble the phone.
- ◆ Do not use harsh detergents to clean the phone.
- ◆ If your mobile phone or its accessory is not working properly, contact your dealer immediately.
- ◆ Use only approved batteries, battery chargers and accessories to help ensure the proper function of your phone and battery life. Any malfunction or damage caused by the use of any third-party accessories will void the product limited warranty.
- ◆ Keep battery contacts and the battery charging socket at the bottom of your phone from direct contact with conductive objects. Otherwise it could cause a short-circuit and result in potential damage or harm.

## Chapter 6: Troubleshooting

When you encounter any problem while using your mobile phone, please refer to the following table to solve the problem. If the problem persists, please contact your dealer immediately for service.

Problems	Possible cause	How to solve the problem
Poor signal reception	1. You are using your mobile phone in a location (e.g. in the basement or building) where signal is weak.	Move to a location where signal can be received properly.
	2. You are using your mobile phone in a peak demand time (e.g. the rush hour).	Avoid using your mobile phone in such time.
	3. You are too far from the base station of your network service provider.	You can ask your network service provider for a service range map.
Echo or noise	1. Due to the quality of the network trunk of your network service provider.	Hang up the phone and then dial again. You may be switched to a better-quality network trunk or line.
	2. Poor local telephone line quality.	
The standby time becomes short	1. The standby time can depend on the system settings of your network service provider.	If you are in a location where the signal is weak, turn off your phone temporarily.
	2. The battery life is over.	Use a new battery.
	3. If the phone cannot get connected to a network, it will continue searching for the signal from the base station, which consumes battery capacity.	Change your location or turn off your phone temporarily.
Unable to power on	The battery is used up.	Check the battery capacity or charge the battery.
SIM card error	1. SIM card is out of order.	Send it to your network service provider for check.
	2. SIM card is not installed properly.	Install SIM card correctly.
	3. SIM card contact is contaminated.	Clean the SIM card contact.

Unable to connect to the network	1. SIM card is invalid.	Contact your network service provider.
	2. You are away from the GSM service area.	Check the service area with your network service provider.
	3. Poor signal.	Move your location to another place where signal can be received properly.
Unable to send message	Your network service provider doesn't support such service.	Contact your network service provider.
Unable to make a call	You have enabled fixed dial function.	Cancel fixed dial function.
Wrong PIN	You have entered the wrong PIN three times.	Contact your network service provider.
Unable to charge the battery	1. The battery or charger is out of order.	Contact your dealer.
	2. The phone temperature goes under 5°C or above 40°C.	Change the battery charging environment.
	3. Poor connection.	Check if all connectors are connected properly.
Unable to input data into the Phone Book	The Phone Book memory is full.	Delete some data from the Phone Book.
Unable to choose certain function	Your network service provider doesn't support such function.	Contact your network service provider.

# Pocket User's Guide




## Abbreviated call

Long press "1" (~9) to dial the number stored in location "1" (~9).

## Last number redial

Long press  key.



## Redial the last 10 numbers

Press  key and choose the number you want with  key, then press  key to dial.



## Phone Book shortcut

Press the phone book number and then press  key.

## Make international call

Long press  key until "+" appears on the screen, then key call on hold. in the national code, area code and telephone number. Finally, press  key to dial.

## Manual network selection

Press  key to enter "Network" and choose "Manual". The screen will display all available network connections. Press  key to select.

## Set phone code

Press the scroll key to enter "Security", then choose "Phone Code".

## Adjust earpiece volume

Press the volume adjustment keys while using the phone.


## Adjust ring volume

Press the scroll key to enter "Audio Settings" and choose "Ring Volume".

## Select ring tone



Press the selection key to enter "Audio Settings" and choose "Ring Type".



## Mute

While talking, press  key to enter the menu and choose "Mute".



## Incoming call waiting



Press  and  key to reject the call.



Press  and  key to end current call and connect to the waiting call.

Press  and  key to hold current call and connect to the waiting call.





## Hold call

Press  and  key end the call on hold.



Press  and  key to end current call and connect to the call on hold.

Press  and  key to hold current call and connect the call on hold.


## Key lock

Long press  key to activate the key lock function. To answer calls, press  key. To unlock, Press  key, then press  key.

## Read messages

Press  key, when the message-received time and source displays on the screen, press  key again.

## Delete messages

Press the scroll key to enter "Messages" function and then choose "Inbox". Push  key three times and "Delete Messages" will display on the screen.

Cut along the dotted line

Voice mail box shortcut

Long press  key.

## Menu Structure Map

