


WHIRLPOOL AIR PURIFIER

惠而浦(光觸媒)空氣清新機

AP588

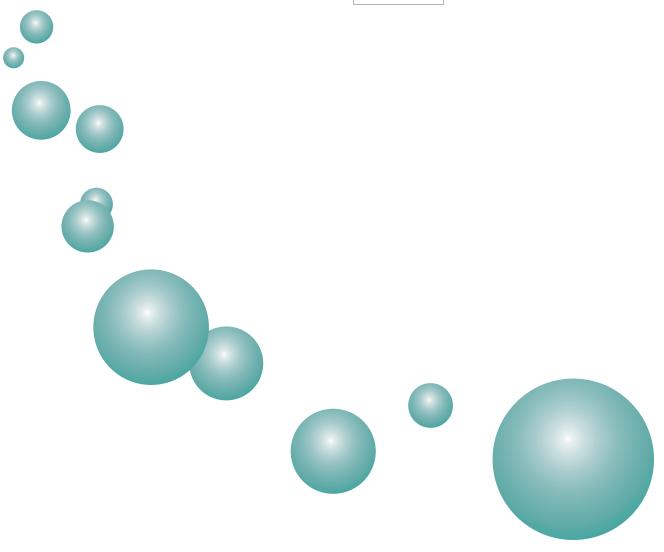

OWNER'S INSTRUCTIONS 使用説明

Before operating the unit, please read this manual thoroughly, and retain for future reference.

操作前,請先仔細閱讀本説明書,並請妥善保存,以備日後參考之用。

安全注意事項

在使用之前,請仔細閱讀"安全注意事項",以便能正確使用。

本節所述的注意事項,是為了安全、正確的使用本產品,使可能對您或他人產生的危害及損害防止於未然。為了明確表示危害及損害的嚴重程度,這些注意事項根據由於操作不當可能發生的現象區分為"警告"、"注意"。不管怎樣,這些都是與安全有關的内容,請務心遵守。

▲ 警告

可能會有死亡或嚴重受傷的危險

🛕 注意

可能會造成人員傷害或財物損害



禁止事項



應做事項

▲警告



不要改裝本機器。 除了為修技術人員外,其他人 不得擅自進行分解、修理。



在清潔、檢查或移動本產品時 請先從電源插座中拔掉插頭。 拔插頭時,請握住插頭拔出。



切勿手濕時拔插頭或操作本機。



切勿使用額定電壓以外的電源, 且不得使用超出電源插座功率 和線路的負荷。



若電源線或插頭有損毀,或插座鬆脫時,請勿使用本產品。



不要用拔插頭的方式來停止機 器運轉。



請勿剪短或修改電源線,也 不要使用延長線。 R

確認電源插頭上沒有灰塵等髒物,將它確實插到底,確認沒 有鬆動情況。



不要放在發熱 設備附近。



▲ 注意



切勿將易燃物品,如香煙等, 靠近本機。



 


切勿遮蓋出、入風口。





切勿使用汽油和溶劑擦拭,更 不可對本機噴灑殺蟲劑。




 \bigcirc


切勿在易燃氣體、腐蝕性氣體 或金屬性塵埃的地方使用本空 氣清新機。




 切勿在浴室等濕氣較多的地方 使用本產品。



切勿在釋放煙霧殺蟲劑時使用 本產品。

 

 

本產品不能吸走一氧化碳。若 室内使用火焰爐具,需要注意 換氣。



切勿將花瓶等盛水容器放在 本產品上方。



不要坐在本產品上。





不要放在應用化學品的場所(醫院、車間、實驗室、美容院 等) 使用。



切勿用水沖洗本機。



切勿將本產品放置在高牆或高 櫃上,以冤掉落。

A注意

 


切勿在有油煙的地方使用本產品。



切勿在不平穩、傾斜的地方使 用,以冤傾倒。






勿讓本機直接吸入加濕器或類 似裝置產生的水氣。

- 高避免危險,損壞的電源線應 由生產商、服務代理商或其他 合格人士更換。
- R 本機長時間不使用時,請拔下 插頭。

本機不得在沒有協助或監控下,給兒童或其他因身體、感官或心智能力無法安全使用的人士使用。

應該監督兒童確保他們不玩本機。

各部名稱

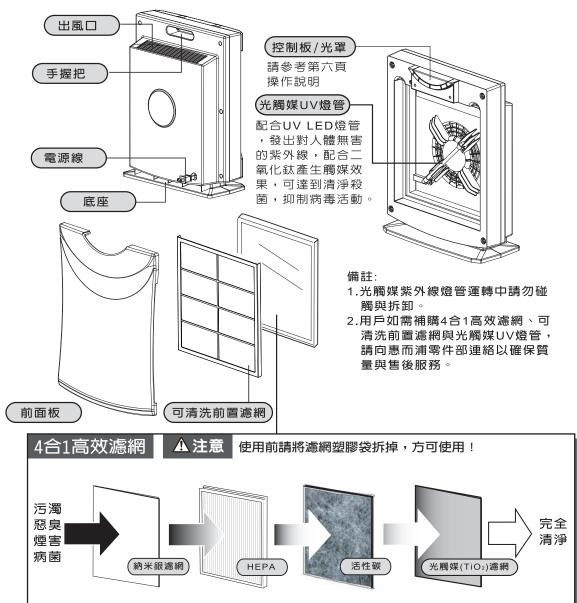

第一層-納米銀濾網 (正面淺黃色)

採強力不織布配合納米銀元素,首先清除較大之灰塵與塵埃,抑制塵**蟎**病菌。 第二層-醫療級高效HEPA

瞬間捕捉微塵及過濾空氣中污染粒子(0.3微米),清淨效率達到99.97%。


第三層-活性碳

吸附HEPA無法處理之有害化學物質及強力去除惡臭及煙害。

第四層-光觸媒(TiO2)濾網 (反面淺藍色)

光觸媒(TiO2)可有效殺菌、抑制病毒活動、分解有害物質,常保空氣清新。

操作說明

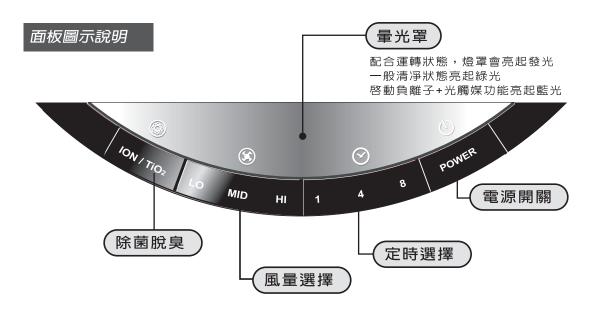

詳細操作與功能說明

電源開關

電源接通後,按壓即啓動運轉,光罩亮起綠光狀態,表示進行空氣清淨,再按壓,光罩燈滅,即關閉電源。

定時選擇

按壓選擇1,4,8小時後關機或連續運轉(不亮燈),於每次開機會重新由連續開始。

風量選擇

按壓選擇低、中、高風量,每次開機時會記憶上次使用時的選擇位置。

除菌脫臭

按壓啓動負離子+光觸媒功能,光罩亮起由綠光轉換為藍光,負離子由出風口處釋放,可享受如森林浴般的清新感受,配合光觸媒功能,可強力除菌及其他有害物質。

更換方法

濾網檢測與更換

請定時檢查濾網,當濾網過髒(有明顯污物 堵塞或顏色達到背板標籤所示污濁顏色)時, 清淨機效率會下降,應立即更換。

以下狀況會讓濾網的更換時間提早:

- 1. 長期室内充斥大量香煙惡臭之際。
- 2. 吸入揮發溶劑或大量燃燒瓦斯油煙之際。
- 3. 使用場所靠近交通流量大,塵埃多的道路附近。

A 注意

- 1.未安裝濾網時請勿開機。
- 2.新濾網須拆掉包裝塑膠袋方可使用。

4合1高效濾網(以下簡稱高效濾網)更換步驟: 步驟1. 請先關機。

步驟2. 更換高效濾網前, 必須先把本機插頭拔掉。

步驟3. 請戴上口罩及手套。


步驟4. 雙手握住前飾板入風兩側,向外取出。

步驟5. 取出舊高效濾網,換上新品。

注意:放置次序如右圖,淺黃色面朝外。 步驟6. 裝回前飾板。

注意:前飾板未定位妥當,機器無法運轉。 步驟7. 把骯髒的高效濾網放入封密的膠袋内,然 後適當棄掉。

步驟8. 把口罩及手套棄掉。

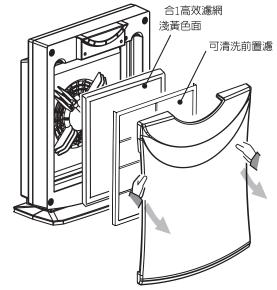

步驟9. 記緊使用清潔液洗手。

完成更換濾網後,請把電源插頭插上電源插座。 備註:

- 1. 高效濾網不可清洗。
- 可清洗前置濾網上附著灰塵,會使風量減少, 清淨能力會降低。約兩個星期請檢查
- 一次。濾網上的灰塵用吸塵器吸取或用水用水 沖洗後擦乾後裝回。
- 3. 用戶如需補購濾網,請與惠而浦零件部聯絡。


光觸媒UV燈管檢測與更換

注意: 光觸媒UV燈管壽命終盡熄滅後,請聯絡客戶服務部,本燈管為本機型專用,請勿自行拆卸更換替代品,以免造成機件故障。

燈管簡易偵測步驟:

- 1. 請先關機。
- 2. 拆卸前飾板,取出濾網。
- 3. 重新裝回前飾板,開機按壓負離子+光觸媒鍵 (光罩藍光亮起)。
- 4. 從機體兩側之入風洞口觀看燈管明亮狀況,若熄滅,則須更換
- 5. 關機,裝回瀘網與前飾板。

注意:偵測時若燈管正常,請勿直視過久,以冤傷害視力。

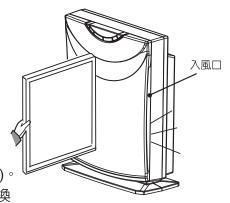

保養方法

機體保養

- 1. 清潔保養前必須先關機並拔下插頭。
- 2. 出、入風口容易沾染灰塵,請經常用軟棉布擦拭。
- 3. 請用較柔性的清潔劑清潔機體並用軟棉布擦拭,禁止採用 其他化學性洗劑,以免損傷機體或塑膠變色、變形。
- 4. 清潔時請勿用水沖洗,以冤對機器造成損壞。

長期不使用時

- 1. 關機後請拔下插頭,電源線收入機體内。但請小心取放,以避免損傷電源線。
- 2. 清潔濾網,出、入風口及機體。
- 3. 機器裝置好後蓋上防塵罩,放置在陰涼、通風處。

電源線的維護與更換

當發現電源線受損時,請即時停機並將插頭從插座上拔下後,與客戶服務部聯絡,請不要自行拆卸或更換非本機專用電源線。

一般故障排除

| 故障情況 | 故障原因 | 處理方法 |
|--------|--|---|
| 機器不能運轉 | 1.電源異常 2.濾網框架未裝置好 | 檢查電源及插頭 檢查並裝置固定 |
| 清淨效果欠佳 | 1.濾網污濁 2.有障礙物阻礙進出風口 3.室内空間太大 4.機器放置位置不當 | 更換濾網 清除障礙物使空氣流通 提高風速 將機器移到較佳循環位置 |
| 噪音太大 | 1.機器放置不平穩 2.濾網污濁 | 將機器重新放置好 更換濾網 |

當上述故障不能排除並確認需要修理時,請與客戶服務部聯絡,勿擅自拆卸機器修理。

規格

| 機種 | AP588 | | |
|----------|--------------------|-----|-----|
| 電源 | 220V / 50Hz | | |
| 消耗電力(瓦) | 高速 | 中速 | 低速 |
| | 45 | 35 | 25 |
| 風量 | 高速 | 中速 | 低速 |
| (立方米/分鐘) | 2.0 | 1.5 | 1.0 |
| 外形尺寸 | 380寬X174深X490高(毫米) | | |
| 淨重量 | 4千克(含濾網) | | |

耗件

4合1高效濾網 AP588 型號:


APF001



請向惠而浦零件部指定購買 電話:24063861/24063862

 AP588 專用可清洗前置濾網





專用UV燈管 AP588

型號:

764100430






惠而浦星級情報站 Star Service Hotline 24069138 www.whirlpool.com.hk



WHIRLPOOL AIR PURIFIER

惠而浦(光觸媒)空氣清新機

AP588

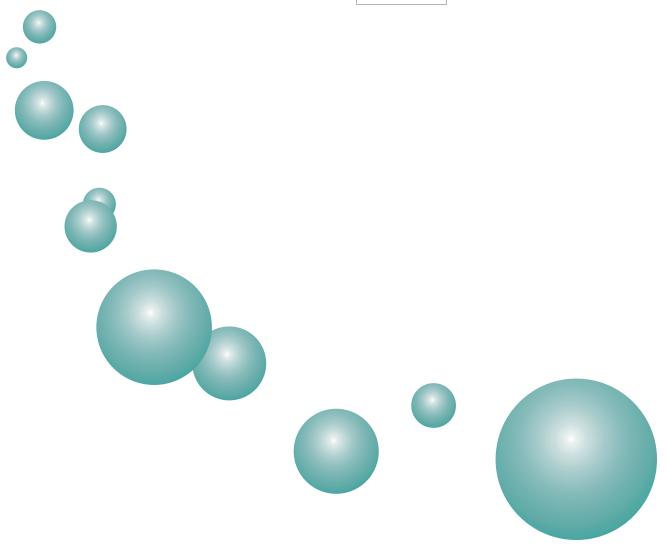

OWNER'S INSTRUCTIONS 使用説明

Before operating the unit, please read this manual thoroughly, and retain for future reference.

操作前,請先仔細閱讀本説明書,並請妥善保存,以備日後參考之用。

Safety Precautions

Please read these safety precautions before using this machine to ensure correct operation. The cautions shown here tell you how to use this unit safely and prevent harm to you and other people. Furthermore, in order to differentiate between the magnitude and severity of the precautions, the effects that may occur if the product is handled incorrectly are divided into "Warnings" and "Cautions". In either case, all of these precautions are important to safety and must be followed at all times.

▲ WARNING

May cause death or serious injury if you don't follow these instructions.



May cause injury or property damage if you don't follow these instructions.



Actions prohibited



Actions Recommended

A WARNING



Do not modify the unit.
Disassembly and repairs
should only be carried out by
a qualified technician.



Unplug before cleaning, inspecting or moving the unit. Always grip the mains plug when unplugging.



Do not touch the mains plug or operate with wet hands.



Do not use mains voltage other than that specified. Do not exceed the voltage specified for the mains and the wiring.



Do not operate with damaged power cord or plug or loose electrical outlet.



Do not stop the unit from operating by pulling out the power plug from the electrical outlet.



Do not shorten, damage or process the power cord, or use an extension cord.



Check that there is no dust adhering to the power plug, and insert it securely into the electrical outlet so that it is not loose.



Do not place near a heat source.



Do not insert your fingers or any other objects into the air inlet and outlet.

A CAUTION



Do not expose to naked flame, such as cigarettes.





Do not cover the air inlet or outlet.



Do not clean with petrol or thinner or apply insecticide.

 




Do not use in the vicinity of flammable or corrosive gases or metal dust.



Do not use in wet places such as the bathroom.





Do not operate in the vicinity of smoke-producing insecticide machines.



This unit cannot eliminate carbon monoxide. So if a fire is lit in the same room, ensure proper ventilation.



Do not place objects containing water such as vases on top of the unit.



Do not sit on the unit.





Do not use in places where chemicals may be drawn in. (such as hospitals, factories, laboratories and salons)



Do not wash the unit with water.



Do not mount high on wall or shelf.

A CAUTION



Do not expose to oily vapours.





Do not use in an unstable position where unit may tilt or fall over.





The machine must not be allowed to ingest humidifier steam.



If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.




If the unit will not be used for a long time, always unplug the power plug from the electrical outlet.


The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Children should be supervised to ensure that they do not play with the appliance.

Components

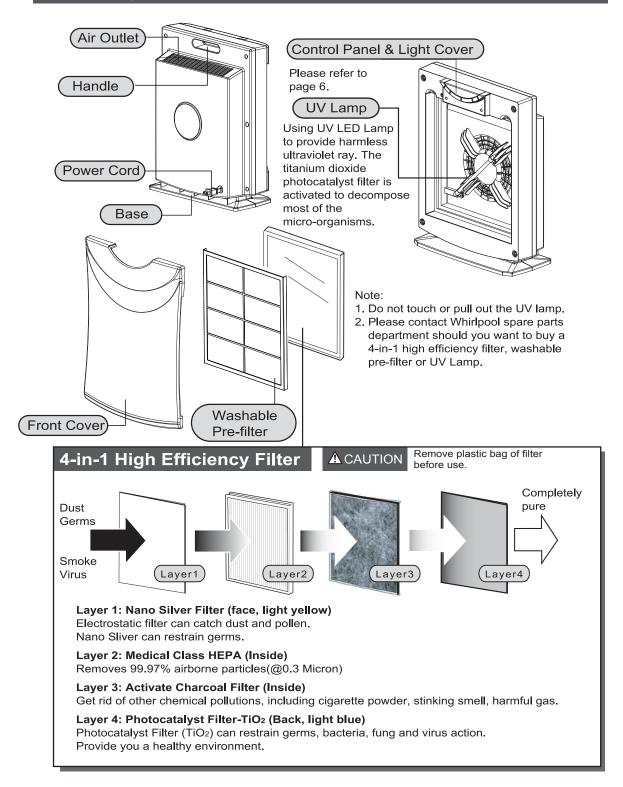

To Operate

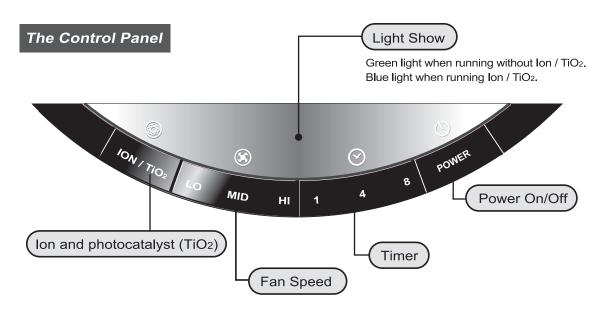

To Operate

Power On/Off

After plug to power, push the "POWER" button to turn on the unit, meanwhile the display light on. Push the "Power" button again to turn off the unit, the display turns off.

(Timer

Push the "Timer" button to select 1,4,8 hours or continue run (LED off). Each time when turning on the unit, the unit starts at continuous run.

Fan Speed

Push the "Fan speed" button to select Low, Mid or High speed as you want. When turn off the unit, the current fan speed status each time will be memorized automatically.

Ion and photocatalyst(TiO₂)

Push the "lon / TiO₂" button for this special function. The display turns blue when running ion and photocatalyst condition. Ion provides fresh air like in nature. Photocatalyst (TiO₂) can restrain germs, microbe, bacillus and virus action. Provide you a healthy environment.

Replacement

Filter Replace

Please check the filter when using a period of time. If the filter is covered by plenty of dust or the color of filter is turned into filthy as the lable shows, the airflow and the performance of the unit will be affected.

- ⚠ CAUTION 1. Do not turn on the unit without using a filter.
 - 2. Remove the plastic bag of filter before use.

The 4-in-1 High Efficiency Filter Replace

- 1. Please turn off the unit first.
- 2. Unplug the unit before replacing the High Efficiency Filter.
- 3. Please put on a mouthpiece and gloves.
- 4. Press the latches on both sides of the front cover and pull out the cover.
- 5. Unpack a new High Efficiency Filter, replace the dirty filter with the new one. The yellow surface faces outward.
- 6. Replace the High Efficiency Filter cover in right position.
- 7. Seal the dirty High Efficiency Filter in a plastic bag, then suitably discard.
- 8. Discard the mouthpiece and the gloves.
- 9. Remember to wash your hands with cleanser.

Warning:

- 1. The 4-in-1 High Efficiency Filter can not be washed.
- 2. Dust coverd on the filter will affect the performance. Please check the Washable Pre-filter every 2 weeks. Vacuum the filter or wash it with clean water and dry it.
- 3. Please contact Whirlpool spare parts department should you want to buy a qualified filter.

Check up of UV lamp


Note: The UV Lamp may turn out after its life.


The Lamp can only be replaced by our service departments. Never replace yourself with any other component that will cause damage or danger.

To check the lamb:

- 1. Turn off the unit.
- 2. Remove the front cover and take out the filter.
- 3. Replace the front cover only. Turn on the unit and press the ION / TiO2 button to turn on the photocatalyst function (the light show turns to blue)
- 4. Check the UV light through sideholes of the front cover. If the UV light is off then it should be replaced.
- 5. Turn off the unit, replace filter and front cover and call for service.

Note: To protect your eyes, don't look at the UV light for a long time.

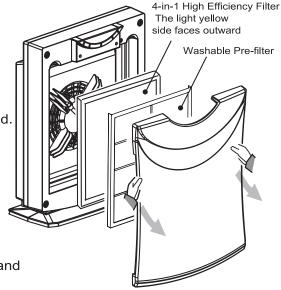

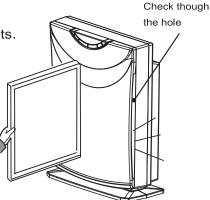

Maintenance

To Clean the Unit

- 1. Before clean or maintain, turn off the unit and unplug the cord.
- 2. Air outlet may gather dust easily, please clean it with a soft cloth.
- 3. Never use solvent that could damage the surface of the machine.
- 4. In order to avoid damage, do not wash the machine with water.

Before Storing

- 1. Turn off the unit and unplug the cord. Store the power cord into the cabinet if you want. Be tender to prevent damaging the cord.
- 2. Clean air inlet, outlet and the unit, and vacuum-clean the unit.
- 3. Cover the unit to prevent it from gathering dust. Store it in a cool and dry place.

Power Cord Safety

Do not use cord that shows cracks or abrasion damage alone its length or either the plug or connector end. Call us for service when a replacement needs.

Trouble Shooting

| Problem | Possible Cause | What to do | |
|---------------------------|--|---|--|
| The machine doesn't start | The unit is not powered Front cover is not in place | Make sure the power, cord and plug. Check and push the cover in place. | |
| Poor performance | The filter is dirty Air inlet or outlet is covered Used for a large space Unsuitable allocation | 1. Replace the filter 2. Free the airflow 3. Try the high speed 4. Move to a better ventilation position. | |
| Noise occurs | The unit is not place stably The filter is dirty | Replace the unit Replace the filter | |

Should there still be a problem, please unplug the unit and contact us.

Specification

| Model | AP588 | | |
|-----------------------|-------------------------|-----|-----|
| Power | 220V / 50Hz | | |
| Power consumption (W) | High | Mid | Low |
| | 45 | 35 | 25 |
| Ventilation (Cmm) | High | Mid | Low |
| | 2.0 | 1.5 | 1.0 |
| Dimension | 380W x 174D x 490H (mm) | | |
| Net weight | 4Kg (Filter included) | | |

Components

AP588 4-in-1 High Efficiency Filter

Model: APF001



Please designate the purchase to Whirlpool spare parts department. Tel:24063861/24063862

AP588 Washable Pre-Filter
 Model:
 APF004

AP588 UV Lamp Model:

764100430





惠而浦星級情報站 Star Service Hotline 24069138 www.whirlpool.com.hk