

Basic Manual



A1406PT
by PANTECH

au by KDDI

Contents /
Getting Ready

Making and
Answering Calls

Character Entry

Address Book

Pair Function /
One Touch Keys

Mail

Camera

EZweb

Other Features

If Trouble Occurs

Index

Cell Phone Etiquette

● Good Manners when using your Cell Phone ●

Cell phones emit weak radio waves when power is on even if you are not talking to anyone.

Enjoy using your cell phone but remember to be considerate of others around you.


Cell phones cannot be used in some places

- Do not use your cell phone while driving. It is both dangerous and against the law.
- It is against the law to use cell phones on airplanes, so turn your phone off before boarding.



Be considerate of where you use your cell phone and how loudly you talk

- Refrain from making calls from cinemas, theaters, museums, libraries and the like. Also, either turn your phone off or activate the manner mode in order not to disturb others around you with ring tones of incoming calls and E-Mail.
- Do not obstruct the passage of others by using your cell phone.
- On trains, in hotel lobbies and other crowded places, move to an area where you will not inconvenience others.
- Be mindful not to talk excessively loud on your cell phone.
- Ask people for their permission before taking their picture with the cell phone camera.

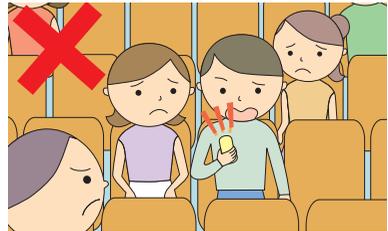

Radio waves from cell phones may interfere with medical equipment

- Someone close to you on a packed train or other busy place may be using a pacemaker, therefore turn your phone off.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.




Smart Mode

How to Use the Smart Mode

The A1406PT is set to the smart mode when you purchase it. The smart mode makes your phone easier to use by displaying only often used telephone, E-Mail and camera functions in menus and displaying larger text.

This manual explains operations in the smart mode.

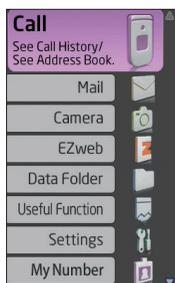

[Smart mode menu]



NOTE

● How to Turn the Smart Mode Off

When the smart mode is off, the phone is in the “normal mode”. To turn the smart mode off, see “Before setting the display language : Set the phone to the normal mode” (p. 22).

One Touch Keys

How to Use the One Touch Keys


The A1406PT has three one touch keys: **1**, **2** and **3**. Pressing them automatically dials the telephone numbers registered to those keys.

How to Make Calls

Registered telephone numbers can be automatically dialed by pressing and holding (approx. 1 sec or longer) the one touch keys.

Follow the procedure below to confirm the telephone number registered in the one touch key and dial the telephone number.

- ① Press a one touch key.
- ② Confirm the telephone number.
- ③ Press  (Call).

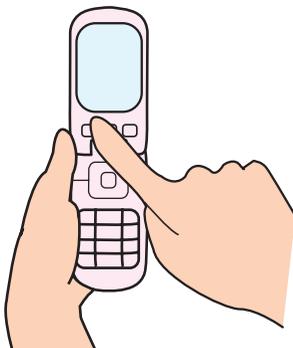

How to Register Telephone Numbers in One Touch Keys

See “Registering Pair Numbers in One Touch Keys” (p. 44).

Cell Phone Basics

You can do this with your A1406PT

One Touch keys

You can easily call numbers registered under the Pair function by pressing just one key.



→ p. 44

E-Mail

You can send E-Mail to other cell phones or PCs.



→ p. 46

EZweb

You can download Chaku-Uta®, wallpaper and other fun resources.



→ p. 58

Pair Function

You can easily call and send E-Mail to registered numbers.



→ p. 42

Camera

You can take still pictures and video, and attach them to E-Mails.



→ p. 54

Safety Buzzer

You can sound a loud buzzer if in danger.



→ p. 63

Manner Mode and Answering Memo

Manner Mode

The manner mode silences ring tones of incoming calls and other sounds so as not to disturb others around you.



With the standby screen on the display, press and hold  (approx. 1 sec or longer).

To turn the manner mode off, press and hold  (approx. 1 sec or longer) again.

Answering Memo

If you cannot answer your phone, the phone will play a prepared message to advise the caller and then record the caller's message.



With the standby screen on the display, press and hold  (approx. 1 sec or longer).

To turn the answering memo off, press and hold  (approx. 1 sec or longer) again.

Check Power, Signal Strength and Battery Level!

Normally, leave the cell phone turned on → p. 16

The power must be on in order to make and receive calls.

Press and hold  (approx. 1 sec or longer).



You cannot talk on the phone if it cannot get a signal → p. 16

Signals can be weak in some places even you are within the service area.

Signal strength is indicated on the display as [] .



Watch you battery level → p. 16

The cell phone may not work properly if the battery is low.


Battery level is indicated on the display as [] .



Do not use your cell phone while driving

Holding a cell phone, talking on a cell phone or looking at the cell phone display to send E-Mail or perform some other operation while driving is against the law in Japan.

(Amended Traffic Control Law, effective November 1, 2004)

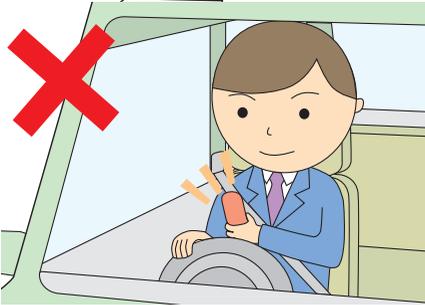

Looking at E-Mail on the cell phone display



Holding the cell phone in your hand and talking

Turn your cell phone off or set it to the drive mode while driving

●Drive Mode

In the drive mode, the ring tone does not sound if a call or E-Mail comes in. Calls are answered with a prepared message in Japanese, equivalent to “I am driving now and cannot answer the phone,” that instructs the caller to leave a voice memo.



NOTE

- The drive mode cannot be turned on in the smart mode. To use the drive mode, first set the normal mode and then turn on the drive mode.

Spam and One-Ring Calls!

If you receive spam

The E-Mail filters accept E-Mail only from user-set sources and rejects messages that contain “unsolicited advertisement ※,” which often is spam.

- Unsolicited mail filter
- Address filters
 - “指定否定設定” To stop receiving messages from unknown sources
 - “指定受信設定” To receive only messages from user-set sources
 - “なりすまし規制” To stop receiving messages from pretenders



NOTE

- Mail filters are set in the normal mode.
- Changing your E-Mail address can prevent spam. To change your E-Mail address, see “Changing Your E-Mail Address” (p. 26).

If you receive a call from an unknown number

Be careful because it may be an attempt to get you to call a service with high rates. Incoming calls that last 3 sec or less (One-Ring call) are indicated with a [!] in the Incoming history.



Disaster Message Board Service

In a disaster, you can leave a message explaining your status and location on this message board. The information you post can be checked from anywhere in Japan via EZweb or the internet.

Posting Disaster Messages

In a disaster, you can call from your au phone and post a message explaining your status and location on a [災害用伝信板] (Disaster Message Board). After posting your message, it is sent via E-Mail to family members and friends that you register in advance.

Checking Disaster Messages

You can check disaster messages of other persons by entering their telephone numbers from EZweb or the internet.

- * : To check disaster messages from a cell phone of another carrier (excluding TU-KA), PHS or PC, access the below URL.
<http://dengon.ezweb.ne.jp/>


Accessing the Disaster Message Board

How to access

 → [Top Menu] → [災害用伝言板] (Disaster Message Board)

<http://dengon.ezweb.ne.jp/>



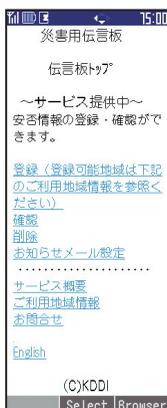


<Top page of Disaster Message Board>

Posting


Select [登録] (Post)

Checking

Select [確認] (Check)

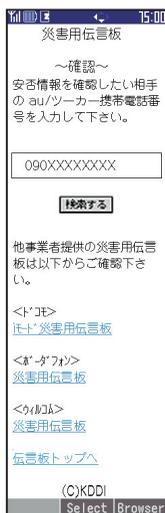

<Screen for checking messages>

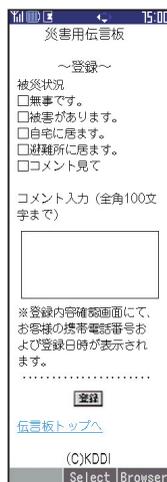

<Screen for registering messages >



NOTE



- Posted messages are kept for a maximum of 72 hours.
- Up to 10 messages can be posted per telephone number. New messages after the tenth overwrite existing messages in the order of the oldest message first.
- A demo can be viewed at any time by selecting [Top Menu] → [料金・申込・インフォ] (Rates/Applications/Information) → [災害用伝言板 (デモ版)] (Disaster Message Demo).
- Select [English] to view the disaster message board in English.

Contents

● Introduction	
● Cell Phone Etiquette	1
Good Manners when using your Cell Phone	1
● Smart Mode	2
How to Use the Smart Mode	2
● One Touch Keys	3
How to Use the One Touch keys	3
● Cell Phone Basics	4
You can do this with your A1406PT	4
Manner Mode and Answering Memo	5
Check Power, Signal Strength and Battery Level!	5
Do not use your cell phone while driving	6
Spam and One-Ring Calls!	7
Disaster Message Board Service	8
● Contents	10
● Getting Ready	12
Checking Package Contents	12
Names of Parts	13
Charging Your Cell Phone	14
Turning the Power On/Off	16
Key Assignments	17
Reading the Display	18
Basic Operation	19
Security Code and Passwords	21
Switching the Display Language to English	22
Activating E-Mail and EZweb	24
Checking Your Telephone Number and E-Mail Address	25
Changing Your E-Mail Address	26
● Making and Answering Calls	28
Making Calls	28
Answering Calls	29
Returning Calls (Incoming history/Outgoing history)	30
● Character Entry	31
How to Switch Character Entry Mode	31

Character-Key Assignment	32
How to Enter Characters	33
Entering Characters	34
● Address Book	36
Saving Address Book Entries	36
Making Calls from the Address Book	40
● Pair Function/One Touch Keys	42
Registering Pair Numbers	42
Calling Pair Numbers	43
Sending E-Mail to Pair Numbers	43
Registering Pair Numbers in One Touch Keys	44
Calling from One Touch Keys	45
Checking and Calling Pair Numbers from One Touch Keys	45
● Mail	46
E-Mail	46
Composing and Sending E-Mail	47
Viewing E-Mail in the Inbox	49
C-Mail	51
Composing and Sending C-Mail	52
● Camera	54
What You Can Do with This Camera	54
How to Take Pictures and Movies	55
Taking Still Pictures	56
Attaching Photos or Movies to E-Mail	57
● EZweb	58
Accessing the EZweb Top Menu	59
Accessing Information Sites	60
Downloading Chaku-Uta®	61
● Other Features	63
Sounding the Safety Buzzer	63
Remote Auto Lock	64
Infrared Communications	65
● If Trouble Occurs	66
● Index	67

Names of Parts

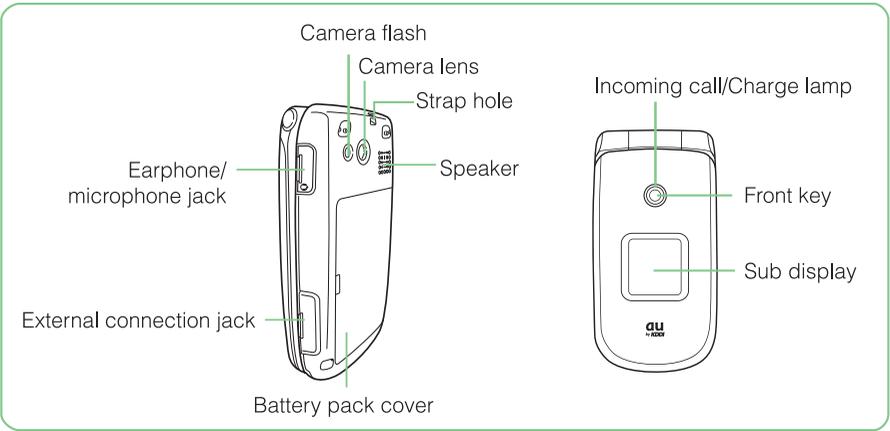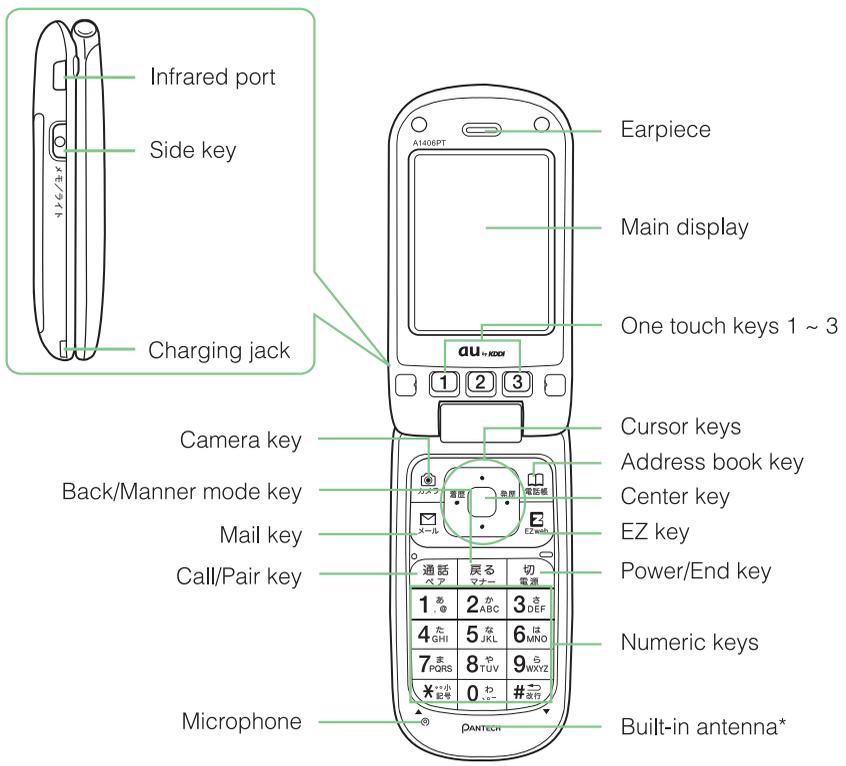


* Do not cover the antenna area with your hands while calling or using EZweb.

Charging Your Cell Phone

The battery is not fully charged when you purchase the cell phone. Therefore, charge it before using it for the first time and whenever the battery gets low.

Charging in the Desktop Holder

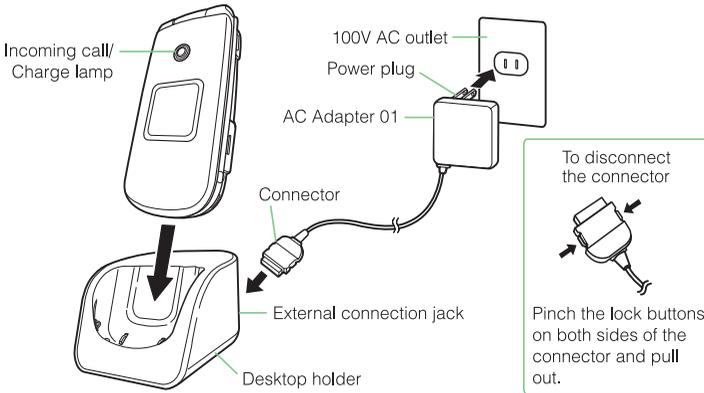

1 Connect the AC Adapter 01 to the desktop holder.

Check the configuration of the connector from the adapter before inserting it into the desktop holder.

2 Plug the plug from the AC Adapter 01 into a 100V AC outlet.

3 Set the A1406PT in closed posture with the battery mounted into the desktop holder.


Check that the incoming call/charge lamp on the A1406PT lights up. It goes out when charging ends.

4 Once charged, remove the A1406PT from the desktop holder and unplug the AC Adapter 01 from the outlet.

* Caution

- The AC Adapter 01 (sold separately) is required to charge the A1406PT. The adapter in the illustrations may differ from some actual adapters.
- Keep the connector of the AC Adapter 01 (sold separately) in a horizontal posture when inserting into and removing from the jack on the desktop holder.

Charging Directly via the AC Adapter 01

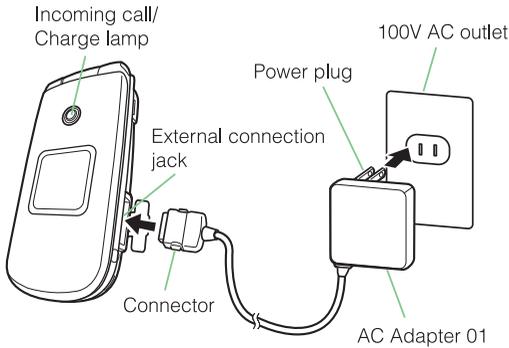

To disconnect the connector



Pinch the lock buttons on both sides of the connector and pull out.

1 Insert the connector of the AC Adapter 01 into the external connection jack of the A1406PT.

Check the configuration of the connector from the adapter before inserting it into the cell phone.

2 Insert the plug from the AC Adapter 01 into a 100V AC outlet.

Check that the incoming call/charge lamp on the A1406PT lights up. It goes out when charging ends.

3 Once charged, unplug the AC Adapter 01 from the outlet and disconnect the connector of the AC Adapter 01 from the A1406PT.

Turning the Power On/Off

Turning the Power On

Press and hold  (approx. 1 sec or longer).

Signal strength

				
Strong	Medium	Weak	Very weak	Out of range



NOTE

- You cannot talk on the cell phone when [] appears on the display.
- You may not be able to talk on the cell phone when [] appears on the display.



Battery level

				
Full	Low	Charging required	Empty	Charging

Turning the Power Off

Press and hold  (approx. 2 sec or longer).



Key Assignments

-  : Smart menu
Key operation enable/disable
(Press and hold for approx. 1 sec or longer.)
-  : Menu item selection and volume adjustment
-  : Calendar display
-  : Incoming call history
-  : Outgoing call history
-  : Memo
Answering memo on/off
(Press and hold for approx. 1 sec or longer.)


- 
- 1 ~ 3** : Pair number registration/
call screen
Pair number calling
(Press and hold for approx.
1 sec or longer.)
 -  : Camera/Movie
 -  : E-mail/C-mail
 -  : Call placing/answering
Pair function
 -  : Address book
 -  : EZ menu
Connection to user site
(Press and hold for approx.
1 sec or longer.)
 -  : Manner menu
Manner mode on/off
(Press and hold for approx.
1 sec or longer.)
Character deletion
 -  : Call/Function ending
Power on
(Press and hold for approx.
1 sec or longer.)
Power off
(Press and hold for approx.
2 sec or longer.)
Return to standby screen
 -  : Telephone number/text entry



- Side button
(When phone is open) Memo function
Answering memo on/off
(Press and hold for approx. 1 sec or longer.)
(When phone is closed)
Light on (Press and hold for approx. 2 sec or longer.)/off

Reading the Display

Icons Appearing on the Main Display

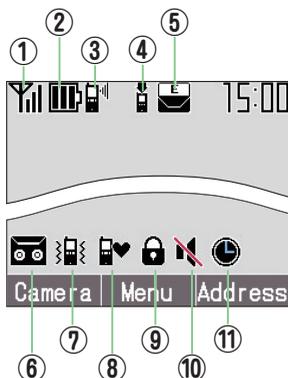

	Icon	Meaning
①		Signal strength
②		Remaining battery power (Reference only)
③		Call coming in/Placing call or talking/EZweb starting up
④		Unanswered call
⑤		Unread E-Mail
⑥		Answering memo on
⑦		Vibrator on
⑧		Manner mode on
⑨		Key operation is disabled
⑩		Incoming ring tone off
⑪		Alarm on

Icons Appearing on the Sub Display

The sub display displays incoming call information, date, time and icons. Pressing the front key switches the displayed information.




	Icon	Meaning
①		Signal strength
②		Remaining battery power (Reference only)
③		Manner mode on
④		Incoming ring tone off
⑤		Vibrator on

Basic Operation

How to Use the Cursor and Center Keys

Cursor keys are used to select items on menus and to move the cursor through text input screens.

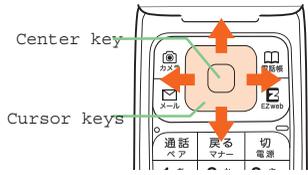


Cursor keys 	Menu items selection Scrolling through E-Mails, etc.
Center key 	Selecting, entering and executing items

How to Use Soft Keys


The functions appearing along the bottom of screens are called “soft keys”. They are operated by pressing the cell phone keys corresponding to the displayed positions of the soft keys.

For example, press  to display the address book.

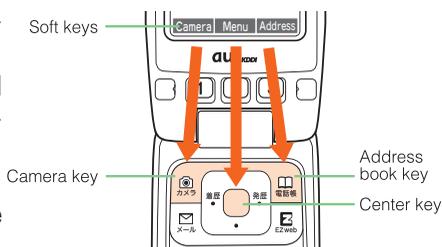


To Return to the Standby or Previous Screen

If you operate the phone in the wrong way and want to return to the previous screen or if you want to stop the current operation and return to the standby screen, press  or .

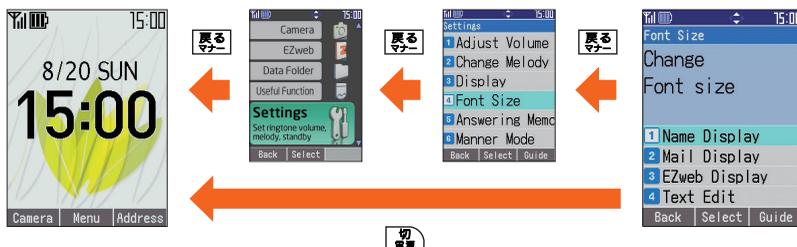


Smart Mode Menu

Pressing  (Menu) with the standby screen on the display opens the smart mode menu. The following functions can be accessed from the smart mode menu.

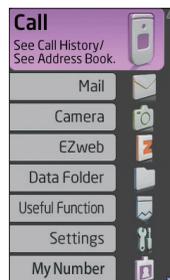

How to Use the Smart Mode Menu

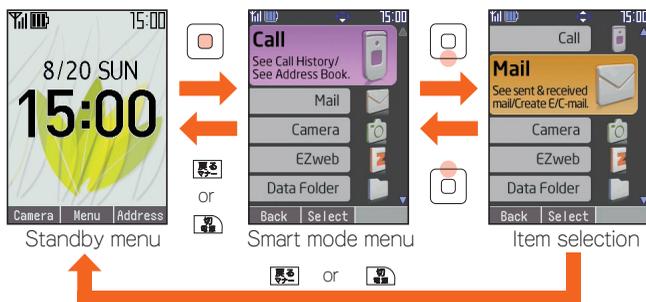

Security Code and Passwords

You can use the security code and passwords described below to restrict use of your A1406PT.

Take care not to forget the security code and passwords, because they are required for performing various operations and using subscription services.

Security Code

Example use	<ul style="list-style-type: none"> ① To remotely access answering or forwarding service from ordinary phones ② To make inquiries, apply for or make changes using the automated guidance of the au Customer Service Center, au website or EZweb ③ To change settings under Other Settings in E-Mail Setup
Initial setting	4-digit number you entered on your service application

EZ password

Example use	Subscribing to or canceling EZweb paid services
Initial setting	4-digit number you set when subscribing to paid services the first time

Premium EZ password

Example use	<ul style="list-style-type: none"> ① Subscribing to or canceling EZweb paid services using 「まとめてau支払い」 (Combined au Payment Service) ② Purchasing products on the EZweb site using 「まとめてau支払い」 (Combined au Payment Service)
Initial setting	4 to 8-digit number you set the first time you use 「まとめてau支払い」 (Combined au Payment Service)

Lock No.

Example use	① Silencing the safety buzzer
Initial setting	1234



NOTE

- Passwords for new subscribers and new EZweb options as of September 2006 are the 4-digit number set by the user on his/her application.

Switching the Display Language to English

The display language can be switched so that menus and other indications appear in English.

Before setting the display language : Set the phone to the normal mode

The display language is selected from the normal mode.

Therefore, the first thing to do is to turn the smart mode off and set the normal mode as follows.

1 With the standby screen on the display, press  (メニュー).

2 Select [設定] (Settings) with  and press  (選択).

3 Select [スマートモード解除] (Release smart mode) with the  and press  (選択).

4 Select [解除する] (Release) with  and press  (選択).

A confirmation message appears on the display followed by the normal mode menu.


1 When the normal mode standby screen is displayed, press  (メニュー).




2 Select [設定] (Settings) with  and press  (選択).



- 3** Select [画面表示] (Display) with  and press  (選択).

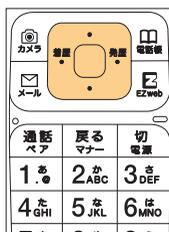

- 4** Select [Set Language] with  and press  (選択).

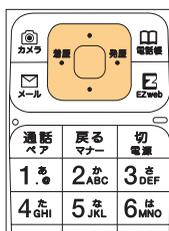

- 5** Select [English] with  and press  (確定).
The menus and soft key indications will appear in English.



Returning to the Smart Mode

- 1** With the standby screen on the display, press  (Menu).
- 2** Select [Smart Mode] with  and press  (Select).
- A warning on changing the setting appears on the display, therefore press  (OK) or wait a moment.
- 3** Select [Yes] with  and press  (Select).


A confirmation message appears on the display followed by the smart mode menu.

Activating E-Mail and EZweb

EZweb subscription required


It is necessary to apply for the service to use E-Mail and EZweb. If you did not apply at the time of purchase, direct your inquiries to an au store or an au Customer Service Center. Also, activate the service before attempting to use it the first time. Your E-Mail address is automatically set when you activate the service.

- 1 With the standby screen on the display, press .**

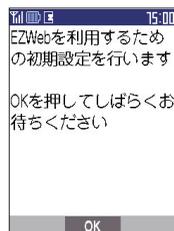

- 2 Press  (OK).**

The A1406PT connects to the server to activate the service. Wait a moment.

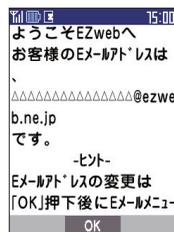

- 3 Press  (OK).**



NOTE

- You may change your E-Mail address to a preferred address. To do so, see “Changing Your E-Mail Address” (p. 26).
- The service can be activated also by pressing  with the standby screen on the display.

Checking Your Telephone Number and E-Mail Address

- 1 With the standby screen on the display, press  (Menu).**



- 2 Select [My Number] and press .**


Your phone number and E-Mail address appear on the display.



Changing Your E-Mail Address

You can change the user name (△△△) in your E-Mail address (△△△@ezweb.ne.jp).


- 1 With the standby screen on the display, press  (Menu).

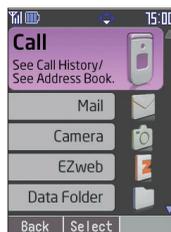

- 2 Select [Mail] and press  (Select).




- 3 Select [E-Mail] and press  (Select).

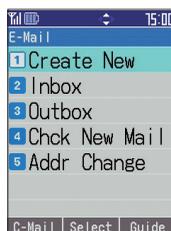


- 4 Select [Addr Change] and press  (Select).

With the connection confirmation screen on the display, select [Connect] and press  (Select).

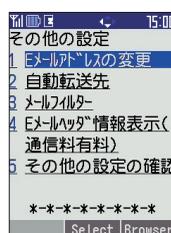


- 5 Select [Eメールアドレスの変更] (Change E-Mail address) and press  (Select).

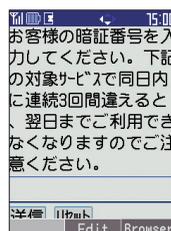


6 Input your Security Code, press (OK), select [送信] (Send) and press (Select).

Your Security Code is the 4-digit number you entered on your service application.

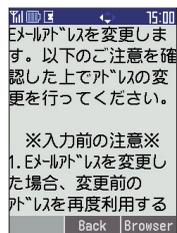


7 Select [承諾する] (Accept) and press (Select).

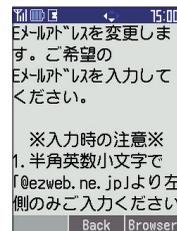

8 Select the input area, press (Edit), enter the new E-Mail address and press (OK).

1. Enter only 1-byte alphanumeric characters left of the @ mark.
2. User names can be up to 30 characters long.
3. The only acceptable symbols are “-” (hyphen), “.” (dot) and “_” (underbar).
4. User names cannot begin with a “.” (dot) or “0”.

9 Select [送信] (Send) and press (Select).

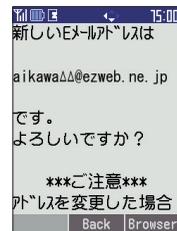

10 Select [OK] and press (Select).



NOTE


- If you enter an E-Mail address that is already used by someone else, an error message appears on the display. Set another E-Mail address in such a case. E-Mail addresses are more readily accepted if you take the following into consideration.
 - Use a “-” (hyphen), “.” (dot) and “_” (underbar) between characters.
 - Mix alphabet with numbers.
 - Make user names as long as possible (max. 30 characters).
- Once you change your E-Mail address, you cannot go back to the old address.
- E-Mail I may not be received for a short period of time immediately after changing your E-Mail address.

Making and Answering Calls

Making Calls


- 1 With the standby screen on the display, enter the other party's telephone number using **0** ~ **9** .

The area code is needed for calling ordinary numbers.

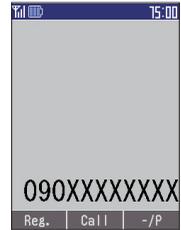

- 2 Press **通話ペア** .

Pressing (Call) gives you the choice of sending your telephone number to the other party as a caller ID (add 186) or blocking your caller ID (add 184).

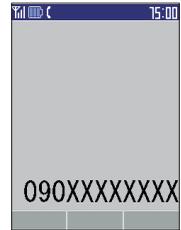

- 3 When finished with the call, press **切電** .



Answering Calls

1 A call comes in.


If the caller is registered in your address book by name and telephone number, his/her name appears on the display.

If there is no caller ID from the caller, the following information is displayed.

- ID unsent : The caller did not send his/her telephone number.
- Reject Not Support : The call is coming from an area or telephone that cannot send a caller ID.
- Payphone : The call is coming from a public telephone.



2 Press to answer the call.

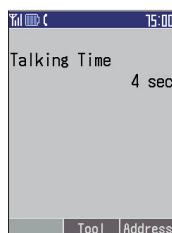


3 When finished with the call, press .




NOTE

- When calls go unanswered, [Missed Call △] appears on the standby screen. You can check the incoming call history for the originating telephone number by pressing  (Check). To call that person back, see “Returning Calls (Incoming history/Outgoing history)” (p. 30).

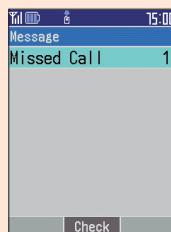


Returning Calls (Incoming history/Outgoing history)

- 1 With the standby screen on the display, press  (Menu).

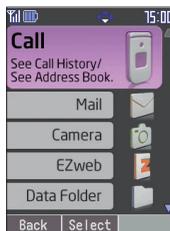


- 2 Select [Call] and press  [Select].

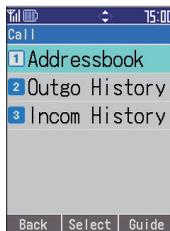

- 3 Select [Outgo History] or [Incom History], and press  (Select).



- 4 Select a telephone number to call using , and press .

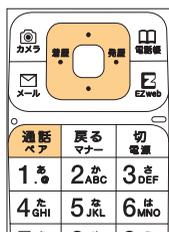

NOTE

- The outgoing and incoming histories each hold 20 numbers. New calls after the twentieth overwrite existing calls in the order of the oldest call first.

Character Entry

How to Switch Character Entry Mode

Entries are made in the address book and E-Mail is composed using ,  and . This manual refers to the screens where text and numbers are entered as “character entry screens”.

1 With the character entry screen on the display, press .



2 Select a character entry mode using , and press  (OK).

	Kanji		Pictogram
	2-byte Katakana		1-byte Katakana
	2-byte Roman alphabet		1-byte Roman alphabet
	2-byte Numerals		1-byte Numerals
	2-byte Symbols		1-byte Symbols

NOTE

- Pressing  on a character entry screen enables entry of pictograms, 1-byte symbols and 2-byte symbols.
- Some character entry modes cannot be selected with some functions.

Character-Key Assignment

Multiple characters are assigned to a single key. Repeatedly pressing the same key displays the assigned characters in turn.

● 1-byte alphabet

Key	Number of times to press the key								
	1	2	3	4	5	6	7	8	9
1 あ	.	@	-	_	/	:	~	1	
2 か ABC	a	b	c	A	B	C	2		
3 さ DEF	d	e	f	D	E	F	3		
4 た GHI	g	h	i	G	H	I	4		
5 な JKL	j	k	l	J	K	L	5		
6 は MNO	m	n	o	M	N	O	6		
7 ま PQRS	p	q	r	s	P	Q	R	S	7
8 や TUV	t	u	v	T	U	V	8		
9 ゑ WXYZ	w	x	y	z	W	X	Y	Z	9
0 り	0	,	.	-	~	!	?	space	
* 小 大 号	Capital/Small case letter switching								
	Pictogram/Symbol screen switching								
# 実行	Line break entry								
	Displays candidate characters in reverse order (back) during character entry								

※To switch between capital and small case letters, enter the letter and then press .

How to Enter Characters

Basic Character Entry

The characters displayed on each key top can be entered.

For 

In a 2-byte or 1-byte alphanumeric entry mode

Example : When  is pressed 1 time → 2 times → 3 times → 4 times → 5 times → 6 times → 7 times ...
a → b → c → A → B → C → 2 ...

If you pass the targeted character (Back)

Pressing  during character entry returns the cursor to the previously entered character.

Example : If you wanted to enter “c” but enter “A” by mistake, press  to return the entry to “c”.

To enter the letters assigned to the same key

Press  to move the cursor to the right and enter the character.

Example : To enter “ab”, press  →  →  (2 times).

To switch between capital and small case letters

Enter the letter, then press .

Example : To enter “A”, press  → .

To delete characters

Move the cursor to the targeted character using , and press .

Pressing and holding  (approx.1sec or longer), all characters at and right of the cursor are deleted.

Placing the cursor at the end of the text then pressing and holding  (approx.1sec or longer) deletes all of the text.

To enter a line break

Enter the characters and press  (if during character entry).

Press  or  (if not during character entry).

* Line breaks are not available for C-Mail.

Entering Characters

Entering E-Mail Addresses

Example : To enter alan-f00@ezweb.ne.jp

- 1 Display the recipient entry screen as explained in steps 1 ~ 4 of “Composing and Sending E-Mail” (p. 47).

- 2 Select [Manual Input] and press  (Select).



- 3 Press  (once),
 (3 times),  (once),
 (2 times),  (4 times),
 (3 times),  (once),
 and  (once).

Then, input “@ezweb.ne.jp”.



Characters Available for E-Mail Addresses

The following characters can be used for E-Mail addresses.

Key	Times to press								
	1	2	3	4	5	6	7	8	9
1 <small>あ</small>	.	@	-	_	/	:	~	1	
2 <small>あ ABC</small>	a	b	c	A	B	C	2		
3 <small>あ DEF</small>	d	e	f	D	E	F	3		
4 <small>あ GHI</small>	g	h	i	G	H	I	4		
5 <small>あ JKL</small>	j	k	l	J	K	L	5		
6 <small>あ MNO</small>	m	n	o	M	N	O	6		
7 <small>あ PQRS</small>	p	q	r	s	P	Q	R	S	7
8 <small>あ TUV</small>	t	u	v	T	U	V	8		
9 <small>あ WXYZ</small>	w	x	y	z	W	X	Y	Z	9
0 <small>あ .,-</small>	0	,	.	-	~	!	?		

Note : The characters in the shaded boxes cannot be used when changing your own address.

Address Book


The address book can hold up to 700 entries between often-called telephone numbers and E-Mail addresses.

Saving Address Book Entries

- 1 With the standby screen on the display, press  (Menu).




- 2 Select [Call] and press  (Select).

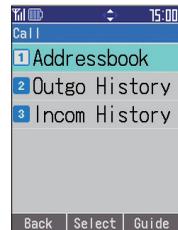


- 3 Select [Addressbook] and  press (Select).



- 4 Press  (New).

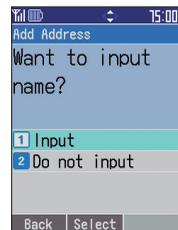


5 Select [Input] and press  (Select).

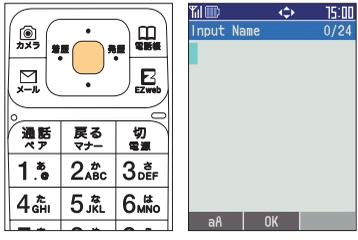


6 Enter the name and press  (OK).

Example : Alan Ford

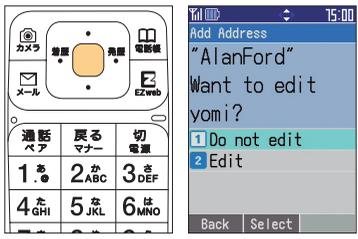


7 Select [Edit] and press  (Select).


The yomi (reading) is automatically saved when the name is input.

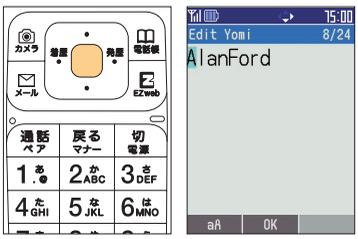

8 Correct yomi (reading) and press  (OK).

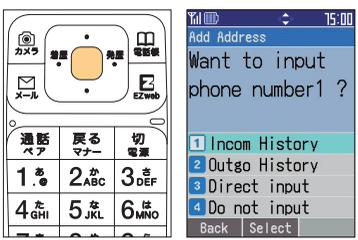


9 Select [Direct input] and press  (Select).

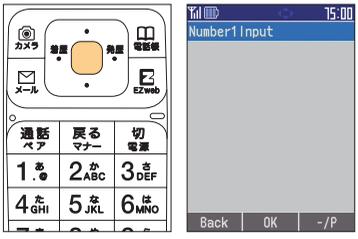

10 Enter the telephone number and press (Save).

Example : 090XXXXXXXX


If saving an ordinary telephone number, enter the area code.

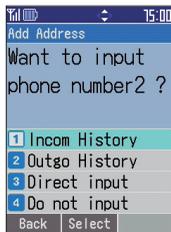

11 Select [Do not input] and press (Select).




12 Select [Direct input] and press (Select).

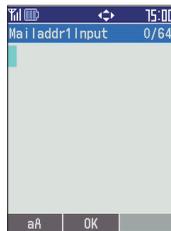


13 Enter the E-Mail address and press (OK).

Example : alan-f△△@ezweb.ne.jp

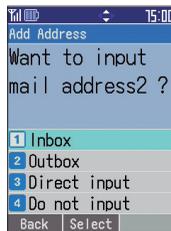

14 Select [Do not input] and press (Select).

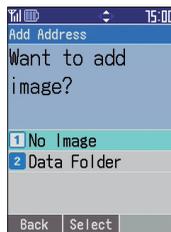

15 Select [No Image] and press  (Select).



16 Press  (Save).




NOTE


- For instructions on character entry, see “How to Enter Characters” (p. 33).
- Each address book entry may have 3 telephone numbers and 3 E-Mail addresses.
- Address book entries are numbered from 000 to 699. New information is saved in the lowest available number.
- To save telephone numbers from the incoming history or outgoing history Select history in step 3 of “Returning Calls (Incoming history/Outgoing history)” (p. 30), press  (Select) and press  (Reg.) on the small screen that appears.

Making Calls from the Address Book

- 1 With the standby screen on the display, press  (Menu).

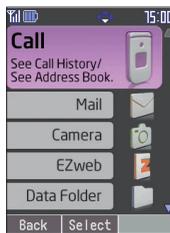


- 2 Select [Call] and press  (Select).

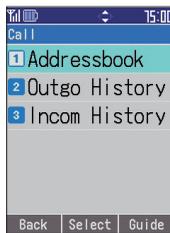

- 3 Select [Addressbook] and press  (Select).



- 4 Select a party to call and press  (Call).

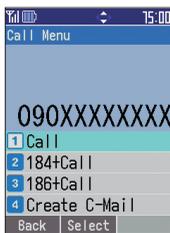


5 Select a call method and press (Select).

Call method

Call : According to the call method setting, sets whether to send your telephone number or not.

184+Call : Blocks your telephone number from being seen by the call recipient.

186+Call : Sends your telephone number to the call recipient.

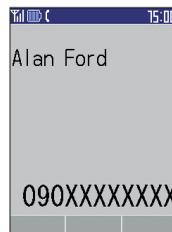

6 When finished with the call, press .



Pair Function/One Touch Keys

Up to three numbers in your address book can be registered for speed dialing or speed mailing. Simply pressing the one touch keys calls those numbers.

Registering Pair Numbers

Example : Pair 1

- 1 With the standby screen on the display, press .



- 2 Press  (Add).



- 3 Select a number for the pair, and press  (Reg.).

If multiple telephone numbers and E-Mail addresses are saved for the selected number, a screen for selecting which to use as the pair appears.




NOTE

- Numbers must be saved in the address book in order to be registered as a pair.
- To cancel a pair number, do as follows.
With the standby screen on the display, press , select the number to cancel, press  (Release), and select [Yes].
- If a pair number is deleted from the address book, it is also deleted from the pair function.
- Pair numbers 1 ~ 3 correspond to one touch keys  ~ , respectively.


Calling Pair Numbers

Example : Pair 1

- 1 With the standby screen on the display, press  .

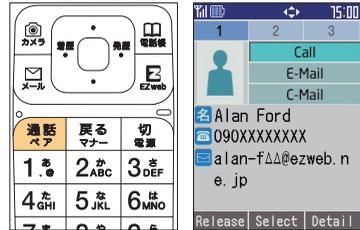


- 2 Select a number using , select [Call] using  and press  (Select).

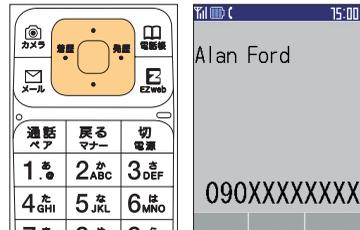

Sending E-Mail to Pair Numbers

Example : Pair 1

- 1 With the standby screen on the display, press  .

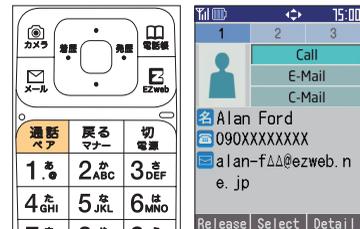

- 2 Select a number using , select [E-Mail] or [C-Mail] using  and press  (Select).

For E-Mail

For the rest of the procedure, see step 5 and beyond of “Composing and Sending E-Mail” (p. 47).

For C-Mail

For the rest of the procedure, see step 5 and beyond of “Composing and Sending C-Mail” (p. 52).

● Registering Pair Numbers in One Touch Keys ●

In addition to “Registering Pair Numbers” (p. 42), pair numbers can be registered by pressing the one touch keys.


1 Press a one touch key (1 ~ 3).



2 Select [Add] and press  (Select).



3 Select a number for the pair, and press  (Reg.).

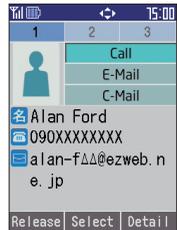

Pair Function/One Touch Keys

 **NOTE**

- Numbers must be saved in the address book in order to be registered as a pair.
- Pair numbers cannot be canceled from the one touch keys.
To cancel a pair number, do so from .

Calling from One Touch Keys

- 1 Press and hold (approx. 1 sec or longer) the one touch key of the pair number.**


For example, to call the number registered as pair 1, pressing and holding one touch key **1** calls that number.




Checking and Calling Pair Numbers from One Touch Keys

- 1 With the standby screen on the display, press the one touch key of the pair number.**

For example, to call the number registered as pair 1, press **1**.

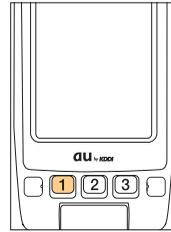

- 2 Check the recipient and telephone number, and press  (Call).**

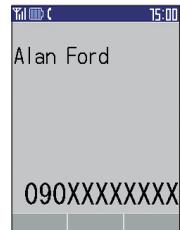

Mail

E-Mail

EZweb subscription required

You must subscribe to EZweb to use E-Mail with your phone. If you did not apply for the service when you purchased your phone, contact an au store or an au Customer Service Center.

Before attempting to use the E-Mail feature, activate the service as explained in “Activating E-Mail and EZweb” (p. 24).

E-Mail can be exchanged with cell phones and PCs that support E-Mailing. You can send and receive a maximum of 5,000 2-byte characters (10,000 1-byte characters) at a time, as well as send photos and movies.



NOTE


- You can send a maximum of 1,000 E-Mails per day.
- E-Mail with attachments may require time to send and receive.
- E-Mails may require time to send and receive in some areas because of signal conditions.



I'm going to send an E-Mail to this address.
(Ex.: △△△@□□□.ne.jp)




I can send E-Mails to au cell phones and phones of other manufacturer.

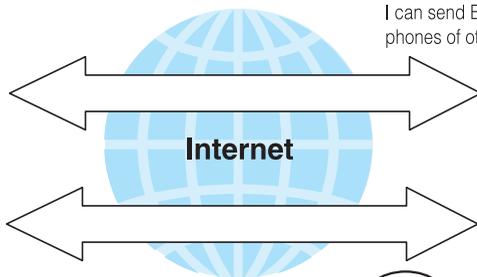


E-Mails can be sent to PCs.

Composing and Sending E-Mail

- With the standby screen on the display, press  (Menu).

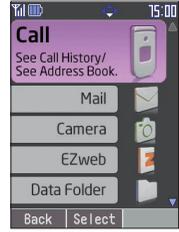

- Select [Mail] and press  (Select).

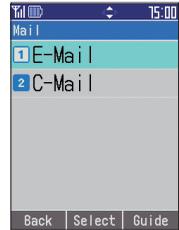

- Select [E-Mail] and press  (Select).



- Select [Create New] and press  (Select).




- Select [AddressBook] and press  (Select).

Destination E-Mail addresses can be selected from the outgoing/incoming histories or directly entered.



6 Select a destination E-Mail address and press (Select).

If multiple E-Mail addresses are saved for the selected address, a screen for selecting which to use appears on the display.

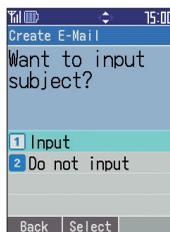

7 Select [Input], press (Select), enter the subject and press (OK).

1-byte kana and line breaks cannot be entered.



8 Select [Input], press (Select), enter the message and press (OK).

1-byte kana cannot be entered.




9 Select [Do not attach], press (Select) and press (Send).

When the E-Mail is sent, a "Sending Completed" message appears on the display. The sent E-Mail is stored in the outbox. To attach data, select [Data Folder] and press (Select).



Viewing E-Mail in the Inbox

- 1 With the standby screen on the display, press  (Menu).

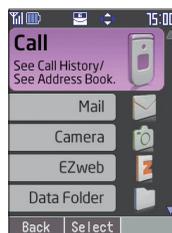

- 2 Select [Mail] and press  (Select).



- 3 Select [E-Mail] and press  (Select).




- 4 Select [Inbox] and press  (Select).

A list of received E-Mails appears on the display.


 : Unread E-Mail

 : Already read E-Mail

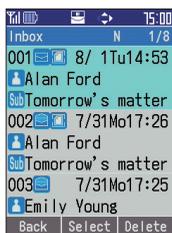


- 5 Select an E-Mail and press  (Select).

The message of the selected E-Mail appears on the display.

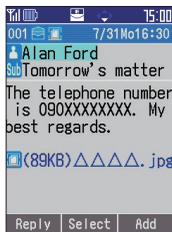

How to Read E-Mail

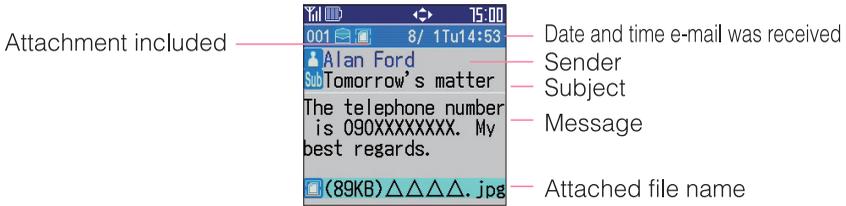


NOTE

- To save the sender of an E-Mail in the address book, do the follows.
Press (Add) on the received E-Mail small screen (displaying E-Mail text).
- The previous and next E-Mails can be viewed by pressing and , respectively.
Pressing returns the screen to the inbox.
- Photo and movie files may appear directly instead of just the name depending on the file size. In such cases, the photo or movie can be viewed by selecting the file using and pressing (Play).

C-Mail

The C-Mail Service allows au telephones that support the feature to exchange short Mails of up to 50 2-byte characters (100 1-byte characters) at a time.

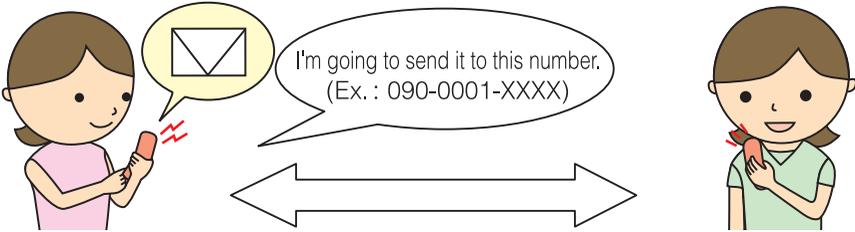

I just type in a message and select the telephone number!


I can send C-Mails to au cell phones.

C-Mail Block

C-Mail Block allows you to block C-Mails with messages that include URLs (<http://□□□> or <https://□□□>) or telephone numbers. The feature is on when you start using the service, but you can turn it off if you want to receive C-Mails with URLs or telephone numbers in the message.

Composing and Sending C-Mail

- 1 With the standby screen on the display, press  (Menu).

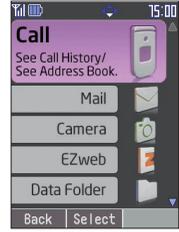


- 2 Select [Mail] and press  (Select).



- 3 Select [C-Mail] and press  (Select).



- 4 Select [Create New] and press  (Select).

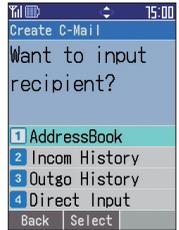


- 5 Select [AddressBook] and press  (Select).

Destination telephone number can be selected from the outgoing/incoming histories or directly entered.




6 Select a destination telephone number and press (Select).


If multiple telephone numbers are saved for the selected address, a screen for selecting which to use appears on the display.

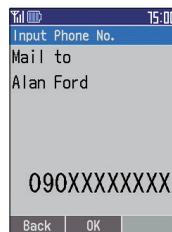

7 Press (OK) and press (Select).

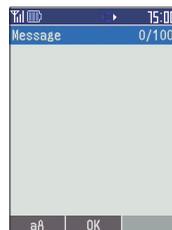

8 Enter the message and press (OK).

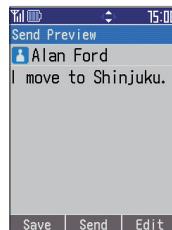

9 Press (Send).

When the C-Mail reaches the recipient, a “Sending C-Mail Success!” message appears on the display. The sent C-Mail is stored in the outbox.




Camera

The A1406PT has a built-in camera of an effective 1.35 million pixels that can be used to take still pictures and movies. Captured images can be used as wallpaper for the standby screen or attached to E-Mails.

What You Can Do with This Camera


Captured photos can be used with the A1406PT

Captured photos can be used as wallpaper for the standby screen, set to appear when calls come in and saved in the address book.

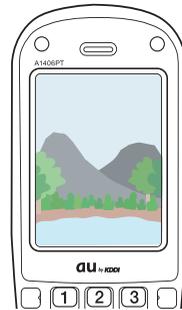

Captured photos and movies can be attached to E-Mails

Photos and movies of 300 KB or less can be attached to E-Mails.

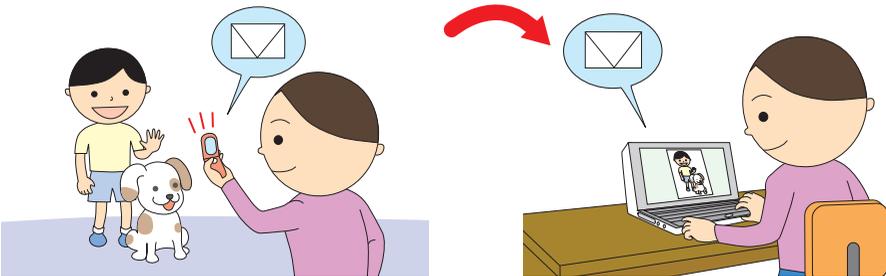

* E-Mails may require time to send and receive in some areas because of signal conditions.


How to Take Pictures and Movies

To take beautiful pictures and movies ...

How to Hold

Hold the cell phone firmly with both hands, being careful not to cover the lens or flash. Keep your elbows tucked in to prevent shaking. When taking still photos, stay still for a short while after hearing the shutter release.

Because VGA or SXGA size pictures are saved in landscape format, hold the camera in a horizontal position.

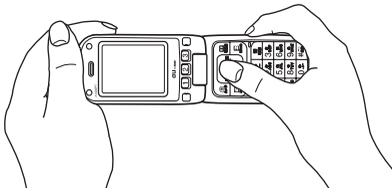


Sizes and Capacity

Still Picture Sizes, Applications and Capacities

Size (dot)	Application	File size (Number of pictures)
① Photomail size (120 x 160)	Attachments to E-Mail for sending to cell phones	Approx. 8 KB (Approx. 1076 pictures)
② Wallpaper size (240 x 320)	Wallpaper for standby screen, etc.	Approx. 28 KB (Approx. 639 pictures)
③ VGA size (640 x 480)	Viewing on large PC monitor	Approx. 80 KB (Approx. 243 pictures)
④ SXGA size (1280 x 960)	High quality prints	Approx. 270 KB in normal mode (Approx. 75 pictures)

Movie Sizes

Size (dot)	File size (Number of pictures)
High quality L size (176 x 144)	Approx. 150 KB (Approx. 130 clips)

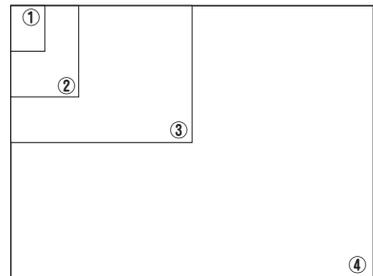


* The number of pictures is for reference only; the actual capacity will differ according to shooting conditions and the amount of available space in the data folder.

* A maximum of 15 sec of video footage can be recorded.

Taking Still Pictures

- 1 With the standby screen on the display, press  (Menu).

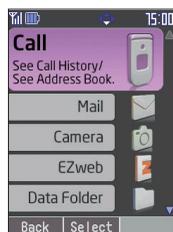

- 2 Select [Camera] and press  (Select).



- 3 Select [Photo] and press  (Select).



- 4 Press  (Shot).

The shutter releases, which you can hear, and the picture is taken.



- 5 Press  (Save).

The captured photo is saved in the data folder.

To take it again, press .






NOTE

- The shutter sound is heard even in the manner mode.
- The captured photo is saved in the [My photo] data folder under the date and time of the photo, as follows.
A picture taken at 10:30 on August 12, 2006 is named :
 - Photomail size, Wallpaper size : 060812_1030~01.
(01 is the first serial number of pictures taken at the same time.)
 - VGA size, SXGA size : 08120001
(0001 is the first serial number of pictures taken on the same day.)
- The minimum shooting distance is 30 cm.

Attaching Photos or Movies to E-Mail

- 1 With the photo or movie on the display (preview screen), press  (E-Mail).

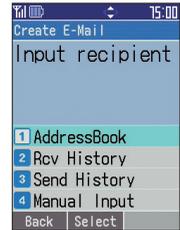

- 2 Compose and send the E-Mail.

For instructions on composing and sending E-Mail, see step 4 and after “Composing and Sending E-Mail” (p. 47).



NOTE


- E-Mails may require time to send and receive in some areas because of signal conditions.

EZweb

EZweb subscription required

EZweb allows you to use Chaku-Uta® (ring tone service) and get the latest news using your cell phone. You must subscribe to EZweb to use the service. If you did not apply for the service when you purchased your phone, contact an au store or an au Customer Service Center.

Before attempting to access EZweb, activate the service as explained in “Activating E-Mail and EZweb” (p. 24).

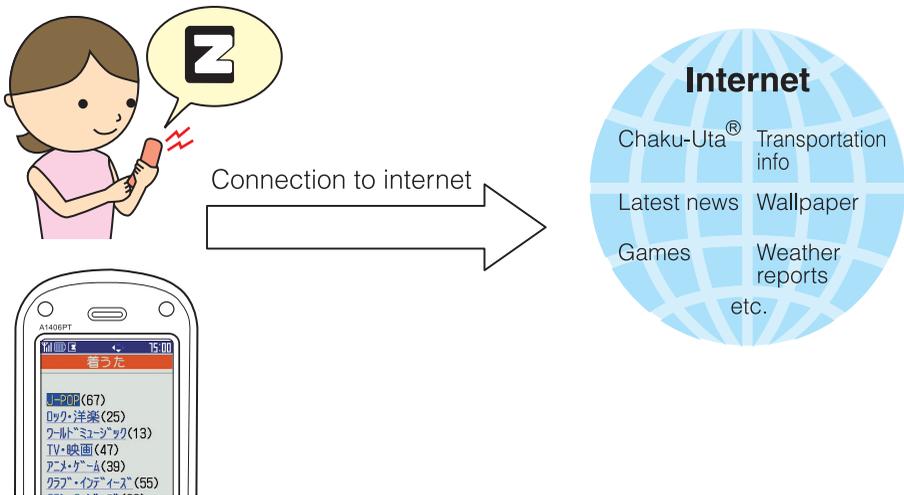

● Accessing the EZweb Top Menu ●

You can access convenient fun sites from the EZweb top menu.



Keyword search	Search for info by keyword input
au style	Intro to info and sites recommended by au
とくする情報	Presents and info provided free-of-charge to EZweb subscribers
最新情報	Easy to view featured info, weather reports, daily info such as horoscopes, etc.
EZサービスで探す	Recommended convenient and fun EZweb services
カテゴリで探す	Site searches by category
1 ビジネス&ニュース	Latest info such as news, weather and stocks, plus business info
2 エリア	Regional info such as weather, maps, etc.
3 ショッピング&オークション	Shopping info for cell phones, plus auction info on exhibiting and bidding
4 ライフ	Info useful towards lifestyles
5 ホビー&カルチャー	Games, horoscopes, music, books and other info on hobbies and entertainment trends
6 料金・申込・インフォ	Rating info, application for services, au online manual, au notices
7 カンタンアクセス・オープンサイト	Intro to easy access open sites
災害用伝言板	Posting and checking info in a disaster
English	Intro to English sites




NOTE

- Some information sites charge for connection and information.
- Only one example of display layout and content is shown. Layouts and content will differ according to site.
- The [料金・申込・インフォ] (Rates/Applications/Information) title will change in September 2006.

Accessing Information Sites

- 1 With the standby screen on the display, press  (Menu).

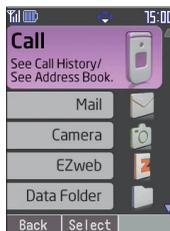

- 2 Select [EZweb] and press  (Select).

The EZ menu appears on the display.



- 3 Select [Top Menu] and press  (Select).

Some pages require time to appear on the display.




- 4 Select a site and press  (Select).



Select [カテゴリで探す] and press  (Select)

Press  or 

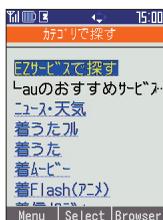

Select [ニュース・天気] and press  (Select)

Press  or 



Press and hold  or  (approx. 1 sec or longer).



NOTE


- You can scroll up and down through sites using  and , respectively.

● Downloading Chaku-Uta®

- 1 Display the EZweb top menu as explained in steps 1~3 of “Accessing Information Sites” (p. 60).



- 2 Select [カテゴリで探す] (Search by category) and press (Select).

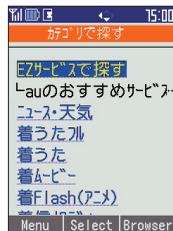

- 3 Select [着うた] (Chaku-Uta) and press (Select).



- 4 Select an item and press (Select).

Download the Chaku-Uta® as instructed by the information site. The downloaded Chaku-Uta® is stored in the [Sound] folder.





NOTE


- To set a downloaded Chaku-Uta[®] as the incoming ring tone
 1. With the standby screen on the display, press , select [Settings], press , select [Change Melody], press , select [Ring Tone] and press .
 2. Select [Data Folder], press , select [Sound], press , select a Chaku-Uta[®] to set and press .
- The download procedures are for reference only. Actual procedures may differ. Follow the instructions appearing on the display.
- An EZ password or Premium EZ password is required to access paid information sites.
 - EZ password : 4-digit number you set when subscribing to paid services the first time
 - Premium EZ password : 4 to 8-digit number you set the first time you use [まとめてau支払い] (Combined au Payment Service). Input one password or the other as instructed by the service.
 - These passwords are set when using the services for the first time. Memorize your passwords for future reference.
 - Passwords for new subscribers and new EZweb options as of September 2006 are the 4-digit number set by the user on his/her application.
- Connection and information fees are charged when downloading paid content such as Chaku-Uta[®].
- Wallpaper is downloaded and set as the standby screen by following the procedure above.

Other Features

Sounding the Safety Buzzer

The A1406PT has a built-in safety buzzer for use when you are in danger. The buzzer sounds at the loudest volume level.

The buzzer sounds at the loudest volume level when the front button is pressed and held for about 3 sec or longer with the phone closed and the standby screen on the display. To silence the buzzer, open the phone and enter the lock No.

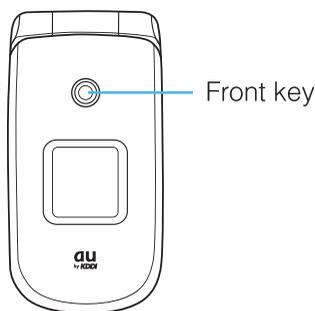

NOTE

- The safety buzzer is OFF when the cell phone is purchased. To turn it on, it must be set in advance in the normal mode.
- The safety buzzer sounds only when the standby screen is on the display.
- The safety buzzer continues to sound until silenced, the battery is detached or the battery runs down.

Remote Auto Lock

If your cell phone is lost or misplaced, someone else can see and steal your personal information. To prevent that from happening, other people can be kept from operating the cell phone by setting the Remote Auto Lock.

Trigger Condition of the Remote Auto Lock

The auto lock is set by calling the A1406PT from a registered telephone number within a preset time frame from the time the phone went missing. The trigger condition for the auto lock is set in the normal mode.

Triggering the Remote Auto Lock

- 1 Call the A1406PT from a registered phone within the time frame set in “Trigger Condition of the Remote Auto Lock”.**

The remote auto lock triggers and a message about the auto lock scrolls across the display when the set number of calls come in.




NOTE

- The remote auto lock does not work if power to the A1406PT is off, if the phone is outside the service area or if the emission off mode is set to on.

● Infrared Communications ●

In infrared communications, both the sender and recipient must be set up for infrared communications before the sender can send any data. During communications, face the infrared ports toward one another, no more than 20 cm apart, and hold them still.

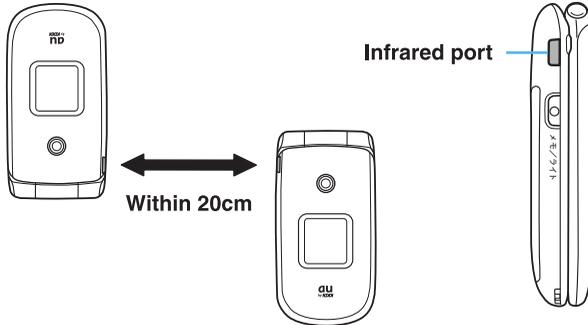

NOTE

- Only data reception via infrared communications is possible in the smart mode. Switch to the normal mode to send data.
- Infrared communications are not possible with some devices even though they may support infrared communications.
- Data transmission and reception may not be successful under direct sunlight or fluorescent light.
- Data transmission and reception may be interrupted if the two facing infrared ports are moved during infrared communications.

If Trouble Occurs

Trouble	Check	Action to take	See page
Power does not come on.	Is the battery properly mounted?	Properly mount the battery.	—
	Is the battery charged?	Charge the battery.	14
	Did you press and hold  (approx. 1 sec or longer).	Press and hold  (approx. 1 sec or longer).	16
The phone does not ring.	Is  on the display?	Move the phone to a location where  disappears from the display.	—
	Did you enter the telephone number, area code first?	Enter the area code first when calling numbers that are not cell phone numbers.	28
	Did you press  .	Press  .	—
Calls do not come in.	Is  on the display?	Move the phone to a location where  disappears from the display.	—
	Is the power on?	Press and hold  (approx. 1 sec or longer).	16
The phone does not respond to key input.	Is the power on?	Press and hold  (approx. 1 sec or longer).	16
	Are the keys locked?	Press and hold  (approx. 1 sec or longer), to turn the key lock off.	—
A warning sounds and the power shuts off.	The battery has run out.	Charge the battery.	14
The phone answers calls on its own.	Is the answering memo on?	Press and hold  (approx. 1 sec or longer), to turn the answering memo off.	5
I cannot hear the other party's voice?	Is the volume level too low?	Press  during a call. This increases the volume.	—

Index

A

Activating E-Mail and EZweb	24
Address book	36
Making calls from the address book	40
Saving address book entries	36
Answering memo	5

B

Battery level	16
Battery pack	12

C

Camera	54
Movie sizes	55
Photo sizes	55
Taking pictures	56
Calling	28
Answering calls	29
Making calls	28
Returning calls	30
Character entry	31
Character entry modes	31
Character-Key assignment	32
Charging the battery pack	14
C-Mail	51
C-Mail Block	51
General information	51
Sending	52
Cursor keys/Center key How to use	19

D

Desktop holder	12
Directly charging the battery pack	15
Disaster bulletin board	8
Drive mode	6

E

E-Mail	46
Mail filter	7
Receiving	49
Sending	47
Spam	7
E-Mail address	25
Changing	26
Viewing	25
EZweb	58
Chaku-Uta	61
EZweb top menu	59

I

Icons	18,19
If trouble occurs	66
If you pass the targeted character (Back)	33
Incom history	30
Infrared Communications	65

K

Key assignments	17
Key names	13

M

Manner mode	5
-------------------	---

O

One-ring calls	7
One touch keys	3,13
Calling from one touch keys	45
Registering pair numbers in one touch keys	44
Outgo history	30

● **P**

Pair function 42

- Making calls to pair numbers 43
- Turning the pair function off 42
- Registering pair numbers 42
- Sending E-Mail to pair numbers ... 43

● **R**

Remote auto lock 64

● **S**

Shutting the power off 16

Signal level 16

Smart mode 2,20

Sounding the safety buzzer 63

● **T**

Turning the power on 16

For inquiries, call:

au Customer Service Center (General Information)

From EZweb:

<Easy access>



or

EZ → [Top menu] → [料金・申込・インフォ]
→ [お問い合わせ]

※ The menu configuration is subject to change without prior notice.

From regular phones:

 **0077-7-111**
フリーコール (toll free)

From au cell phones:

157 area code not required
(toll free)

Pressing "zero" will connect you to an operator, after calling "157" on your au cellphone.



モバイル・リサイクル・ネットワーク

携帯電話・PHSのリサイクルにご協力を。

Cell phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the  logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Sales: KDDI Corporation / Okinawa Cellular Telephone Company
Manufactured by: Pantech&Curitel Communications, Inc.

First Edition issued in August 2006