 


English Simple Manual (簡易英語版)

中文简易说明书(簡易中国語版)



Nomenclature

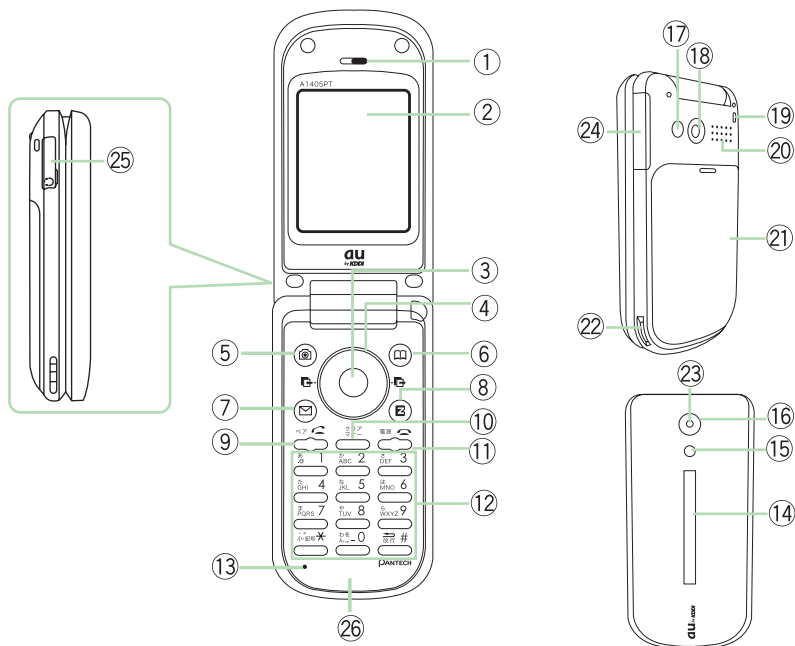

- ① Earpiece
- ② Main display
- ③ Center key
- ④ Cursor key
- ⑤ Camera key
- ⑥ Address Book key
- ⑦ Mail key
- ⑧ EZ key
- ⑨ Send key
- ⑩ Clear/Manner Mode key
- ⑪ Power/End key
- ⑫ Number keypad
- ⑬ Microphone
- ⑭ Sub-display

术语

- ① 听筒
- ② 主显示屏
- ③ 中心键
- ④ 推移键
- ⑤ 照相机键
- ⑥ 电话簿键
- ⑦ 电子邮件键
- ⑧ EZ键
- ⑨ 拨打键
- ⑩ 取消/静音键
- ⑪ 电源/结束键
- ⑫ 数字键盘
- ⑬ 麦克风
- ⑭ 副显示屏





- ⑮ 前部键 2
- ⑯ 前部键 1
- ⑰ 摄影灯
- ⑱ 照相机 (镜头)
- ⑲ 手机链安装孔
- ⑳ 立体扬声器
- ㉑ 电池组件盖 (电池组件仓)
- ㉒ 充电端口
- ㉓ 来电提示灯
- ㉔ 外部设备接口
- ㉕ 耳机/麦克风插
- ㉖ 天线 (内置式孔)

Turning the Power On and Off

- Turning the power on
Hold down  for more than one second.
- Turning the power off
Hold down  for more than two seconds.

Configuring E-mail and EZweb






Before using E-mail and EZweb, you must configure your EZweb settings.
Your E-mail address will be registered when you complete this configuration.

From the stand-by screen: Press  or  → Press  configure default settings
→ Press .




 
 





Checking Your Own Phone Number/E-mail Address

From the stand-by screen: Press  → Press  (displays your own phone number and E-mail address in the profile).

Placing and Answering a Call

- Placing a call
From the stand-by screen: Enter the phone number you want to make a call.
→ Press . To end the call: Press .
- Answering a call
While the phone is ringing, press . To end the call: Press .
To adjust the earpiece volume: Press .



Storing and Recalling Address Book Entries




- Storing an entry
From the stand-by screen: Press  → Press  → Select the item to be stored and press 
→ Enter the data and press  → Check the details and press .
- Recalling an entry
From the stand-by screen: Press  → Press  to select the different rows
→ Press  to select the name → Press  → Press .

Using E-mail and C-mail

- Sending an E-mail message.
From the stand-by screen: Press  → Select 「新規作成」 (New mail) and press  → Enter the recipient's E-mail address, the subject and the message → Press  → Press .
- Receiving (reading) E-mail
When you receive E-mail 「E メール受信△件」 (You have △ new messages) will be displayed on the stand-by screen with incoming E-mail tone.
Select 「E メール受信」 (New mail) and press  → Select a message and press .

● Sending a C-mail message.

From the stand-by screen: Hold down  for more than one second → Select 「新規作成」 (New mail) and press .

→ Enter the message → Press  to select 「直接入力」 → Press  → Enter the recipient's phone number → Press .




● Receiving (reading) C-mail

When you receive C-mail 「C メール受信△件」 (You have △ new messages) will be displayed on the stand-by screen with incoming C-mail tone.

Select 「C メール受信」 (New mail) and press  → Select a message and press .



● Using the Camera (Photos and Movies) ●

● Taking a Photo

From the stand-by screen: Press  → Press  → Press .

 
● Recording a Movie clip

From the stand-by screen: Hold down  for more than one second → Press .

→ Press  → Press .

● Making an International Call ●

E.g.: To call 212-123-△△△△ in the USA

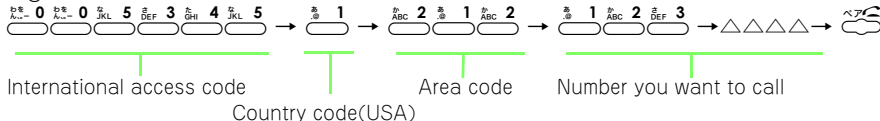

● Other Handy Features ●

● Manner Mode

From the stand-by screen: Hold down  for more than one second.

To disable Manner mode, repeat the above step.

● Simple Voice Recorder

・ Setup


From the stand-by screen: Hold down  for more than one second.

To disable the voice record function.

From the stand-by screen: Hold down  for more than one second.

・ Playback

From the stand-by screen: Press  → Select 「録音再生」 (Play message) and press .

→ Select a message and press .

For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone:  0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)