


Replacement Kit Instructions

Replacing your BladeRunner rotors is easy.
Follow these instructions and you will be back in the air in no time!

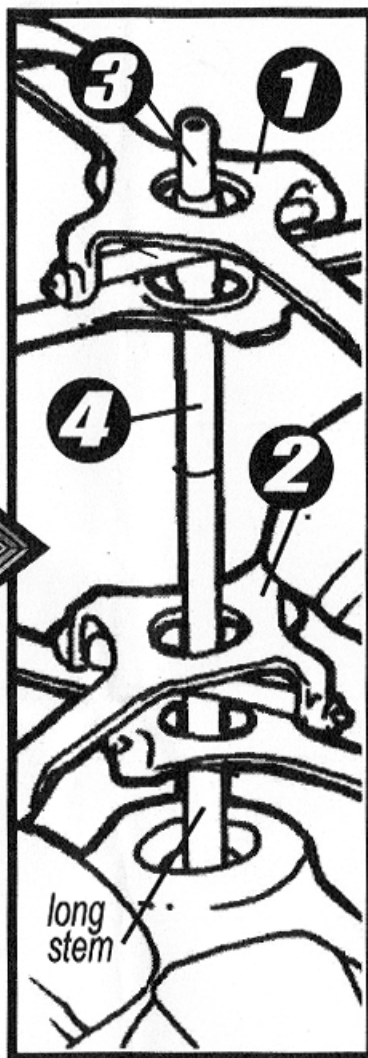

Component List

- ① 1-Upper Rotor.
- ② 1-Lower Rotor (long stem).
- ③ 2-Rubber Stoppers.
- ④ 2 Spacers.
- ⑤ 1-Rear Rotor.

Instructions

Slide the lower rotor (long stem) down the drive shaft.

Slide down 1 of the supplied spacers. Next slide the upper rotor down the drive shaft.

Then, supporting the bottom of the drive shaft slide the other stopper on the top to hold the rotor assembly together.

Squeeze all components together.
Keep instructions for future reference.



Replacing the Rear Rotor

Remove the damaged rotor and insert the rear rotor onto the rear drive shaft.

Contact us: www.interactivetoy.com or call: 1-866-214-2220

Limited 30-day warranty

This product is warranted by Interactive Toy Ltd. against manufacturing defects in material and workmanship under normal use for thirty (30) days from the date of purchase. Please retain proof of purchase.

BlackGhost Helicopter & BladeRunner Series are registered trademarks of
Interactive Toy Concepts © 2007 All rights reserved.

Manufactured by and distributed by Interactive Toy Concepts Ltd.

MADE IN CHINA.