



## ANIMATED CONCERTINA

**THIS PRECISION SET IS NOT A TOY!**

Please read this entire instruction booklet

### I. Operation

1. Place the unit on any flat surface.
2. Insert the AC adaptor plug into the power jack and plug the AC adaptor into a nearby working outlet as shown in (FIG.II).
3. Turn the power switch at the rear to the "ON" position (See FIG.II). The unit will start to play music.
4. Turn the volume control to adjust the loudness of the music (See FIG.II).
5. Turn the power switch to the "OFF" position when the unit is not in use.
6. To select a new song:  
Turn the ALPHABETIC POINTER and the NUMBER POINTER to the position of the chosen song number. For example, if song no.C3 is selected, turn the ALPHABETIC POINTER to the "C" position and the NUMBER POINTER to the "3" position (See FIG.III).
7. Your **ANIMATED CONCERTINA** plays 25 Christmas Carols and 25 all time classics for year-round use. The first song starts at the song number where the ALPHABETIC POINTER and the NUMBER POINTER are positioned. The sequential song will play next and then play is continuous.



FIG.I



FIG.II



FIG.III

### II. Trouble Shooting

Your **ANIMATED CONCERTINA** has been designed to give many seasons of trouble-free operation. In the event that a problem does occur, please refer to the following chart for suggest solutions.

<b>Problem</b>	<b>Likely Causes</b>	<b>Solution</b>
No music or motion	No power	Make sure the AC adaptor is plugged into a working outlet. Check to see that the AC adaptor plug is securely inserted into the power jack.
	The power switch is "OFF"	Turn the power switch to the "ON" position.
Selected song does not play	Unit needs restarted	Turn the power switch to "OFF" and then to "ON".

**WARNING:** DO NOT PLACE THE UNIT IN DIRECT SUNLIGHT OR NEAR HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS STOVES, OR OTHER APPLIANCES (INCLUDING TELEVISIONS AND STEROS) THAT PRODUCE HEAT.

### THIS IS NOT A TOY

THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED.

**CAUTION:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT MOVE COVER. NO USER SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

### III. SAFETY INSTRUCTION

1. Read Instruction - All the safety and operation instructions should be read before the appliance is operation.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, etc.
6. Heat - the appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances including amplifiers) that produce heat.
7. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
8. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
9. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged ; or
  - B. Objects have fallen, or liquid has been spilled into the appliance ; or
  - C. The appliance has been exposed to rain ; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance ; or
  - E. The appliance has been dropped, or the enclosure damaged.
10. Servicing - The user should not attempt to service the appliance beyond that described in the operating instruction. All other servicing should be referred to qualified service personnel.

### CHRISTMAS CAROLS

- |                                  |                                   |                                   |
|----------------------------------|-----------------------------------|-----------------------------------|
| A1. Angels We Have Heard On High | B1. It Come Upon A Midnight Clear | C1. The First Noel                |
| A2. Auld Lang Syne               | B2. Jingle Bells                  | C2. Twelve Days Of Christmas      |
| A3. Away In Manger               | B3. Joy To The World              | C3. We Three Kings Of Orient Are  |
| A4. Deck The Halls               | B4. What Child Is This            | C4. We Wish You A Merry Christmas |
| A5. God Rest Ye Merry Gentlemen  | B5. O Little Town Of Bethlehem    | C5. O Holy Night                  |
| A6. Good King Wenceslas          | B6. O Tannenbaum                  |                                   |
| A7. Hark! The Herald Angels Sing | B7. O Come All Ye Faithful        |                                   |
| A8. Here We Come A Caroling      | B8. Hallelujah Chorus             |                                   |
| A9. The Holly And The Ivy        | B9. Up On The House Top           |                                   |
| A10. I Saw Three Ships           | B10. Silent Night                 |                                   |

### ALL TIME CLASSICS

- |                                      |                                       |  |
|--------------------------------------|---------------------------------------|--|
| C6. Beautiful Dreamer                | D1. East Side, West Side              | E1. Alexander's Ragtime Band                     |
| C7. Blue Danube                      | D2. When The Saints Go Marching In    | E2. Oh, You Beautiful Doll                       |
| C8. By The Light Of The Silvery Moon | D3. For Me and My Gal                 | E3. Oh Moonlight Bay                             |
| C9. Danny Boy                        | D4. Give My Regards To Broadway       | E4. Peg O' My Heart                              |
| C10. Down By The Old Mill Stream     | D5. Hail, Hail, The Gang's All Here   | E5. Shine On, Harvest Moon                       |
|                                      | D6. Jeannie With The Light Brown Hair | E6. Skaters' Waltz                               |
|                                      | D7. I Wonder Who's Kissing Her Now    | E7. The Band Played On                           |
|                                      | D8. In The Good Old Summertime        | E8. The Entertainer                              |
|                                      | D9. Can Can                           | E9. Wait Till The Sun Shines, Nellie             |
|                                      | D10. Let Me Call You Sweetheart       | E10. While Strolling Through The Park<br>One Day |

Crosley Radio Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale to the end user/retailer. Should the unit fail under normal usage during the 90 day warranty period, a request for RETURN AUTHORIZATION (R.A.) must be made by the end user/retailer before returning the unit. Call Crosley Radio customer service for Return Authorization at (502) 583-4246 from 9 AM to 5 PM (EST) Monday through Friday.

Upon receiving the RETURN AUTHORIZATION number from the Customer Service Department, properly pack your unit in its original packaging. Include any adapters, parts, & accessories which were originally provided with the product, along with a check or money order for \$19.95 made out to Crosley Radio to cover the handling and return postage. Display the R.A. # on the outside of the carton and ship PREPAID via standard UPS or its equivalent.

ATTN: RETURNING DEPT  
2001 PRODUCTION DRIVE  
BAY 2 & 3  
LOUISVILLE, KY 40299

CROSLEYRADIO assumes no responsibility for units sent without prior Return Authorization. The purchaser's bill of sale is the only proof of warranty entitlement and must accompany the unit. The warranty does not cover damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Crosley Radio to service the product. This warranty does not cover products sold AS IS or consumables (such as fuses or batteries). This warranty is valid only in the United States. This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state. In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Radio's high standards of Quality and Workmanship.