




THIS PRECISION SET IS NOT A TOY!

Please read this entire instruction manual

DELUXE MUSIC BOX INSTRUCTION MANUAL

I. OPERATION


1. Open the battery compartment cover and insert four AA size batteries (not included) making sure they are positioned properly. Close the compartment cover (see Fig.I).
2. Turn the tree plaque at the front in a clockwise direction to wind the unit up (see Fig.II). The music will start to play, the figures will move and the lights will come on after a 2 ~ 3 second delay.
3. To restart, turn the tree plaque in a clockwise direction.

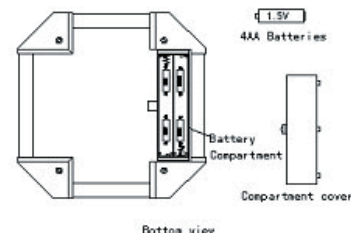

II. TROUBLE SHOOTING

Your MUSIC Box has been designed to give many seasons of trouble-free operation. In the event a problem occurs, please refer to the following chart for a suggested solution.

Problem	Likely Cause	Solution
No motion, music or light	Unit not wound up	Turn the tree plaque in a clockwise direction .
Lights not on	No power	Check for proper battery installation, make sure the batteries are not exhausted.
	Normal delay after wind up mechanism starts	Wait 2~3 seconds for the light to come on.

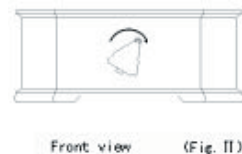

THIS IS NOT A TOY

THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED.

WARNING: DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (NICK-CADMIUM) BATTERIES. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONAL.

Crosley Radio Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale to the end user/retailer. Should the unit fail under normal usage during the 90 day warranty period, a request for RETURN AUTHORIZATION (R.A.) must be made by the end user/retailer before returning the unit. Call Crosley Radio customer service for Return Authorization at (502) 583-4246 from 9 AM to 5 PM (EST) Monday through Friday.

Upon receiving the RETURN AUTHORIZATION number from the Customer Service Department, properly pack your unit in its original packaging. Include any adapters, parts, & accessories which were originally provided with the product, along with a check or money order for \$19.95 made out to Crosley Radio to cover the handling and return postage. Display the R.A. # on the outside of the carton and ship PREPAID via standard UPS or its equivalent.

ATTN: RETURNING DEPT
2001 PRODUCTION DRIVE
BAY 2 & 3
LOUISVILLE, KY 40299

CROSLEYRADIO assumes no responsibility for units sent without prior Return Authorization. The purchaser's bill of sale is the only proof of warranty entitlement and must accompany the unit. The warranty does not cover damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Crosley Radio to service the product. This warranty does not cover products sold AS IS or consumables (such as fuses or batteries). This warranty is valid only in the United States. This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state. In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Radio's high standards of Quality and Workmanship.