


INSERT KEY. **PUSH DOWN**

HARD. BULB

WILL LIGHT.

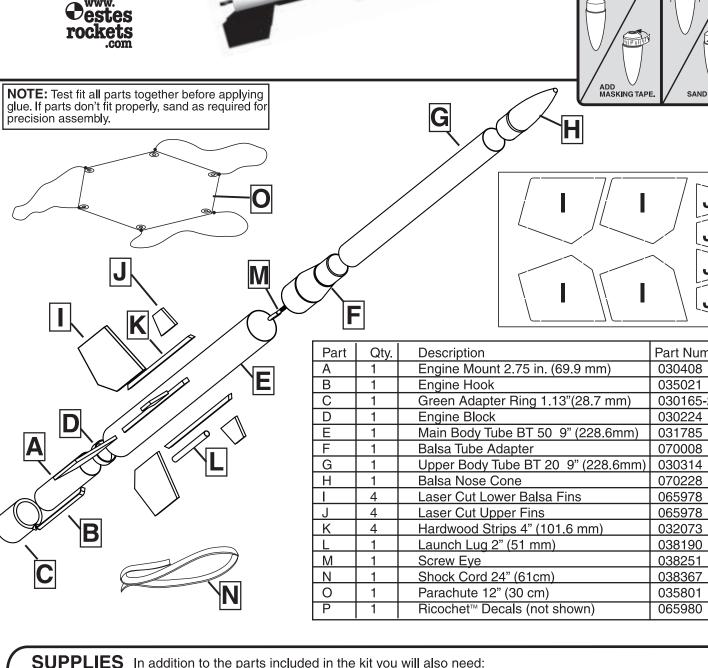

(#320-#400 GRIT)

KEEP FOR FUTURE REFERENCE

For safety, never launch a damaged rocket. Check the rocket's body, nose cone and fins. Also, check the engine mount, recovery system and launch lug. Repair

Choose a large field (500 ft. [152 m] square) free of dry weeds and brown grass. The larger the launch area, the better your chance of recovering your rocket. Football fields and playgrounds are great. Launch only with little or no wind and

Always follow the enclosed National Association of Rocketry (NAR) SAFETY CODE.

TAKE THE KEY OUT OF THE CONTROLLER. WAIT ONE MINUTE BEFORE GOING NEAR THE ROCKET! Disconnect the igniter clips and remove the engine. Take the plug and igniter out of the engine. If the igniter has burned, it worked but did not ignite the engine because it was not touching the propellant inside the engine. Put a new igniter all the way inside the engine without bending it. Push the plug in place. Repeat the steps under Countdown and Launch.

#7208

SAND FOR FIT.

Part Number

030408

035021

030165-2

030224

070008

070228

065978

065978

032073

038190

038251

038367


035801


065980


031785

HELPFUL HINT: IF NOSE CONE FIT IS...

ADD WASKING TAPE.

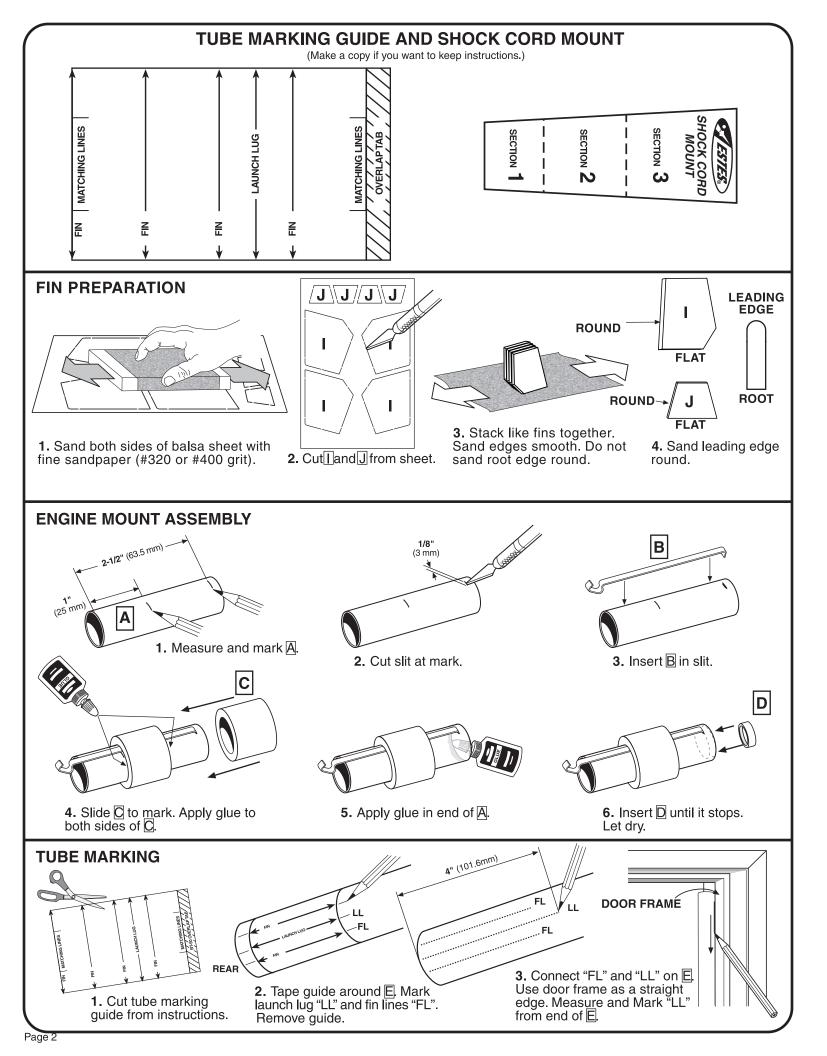

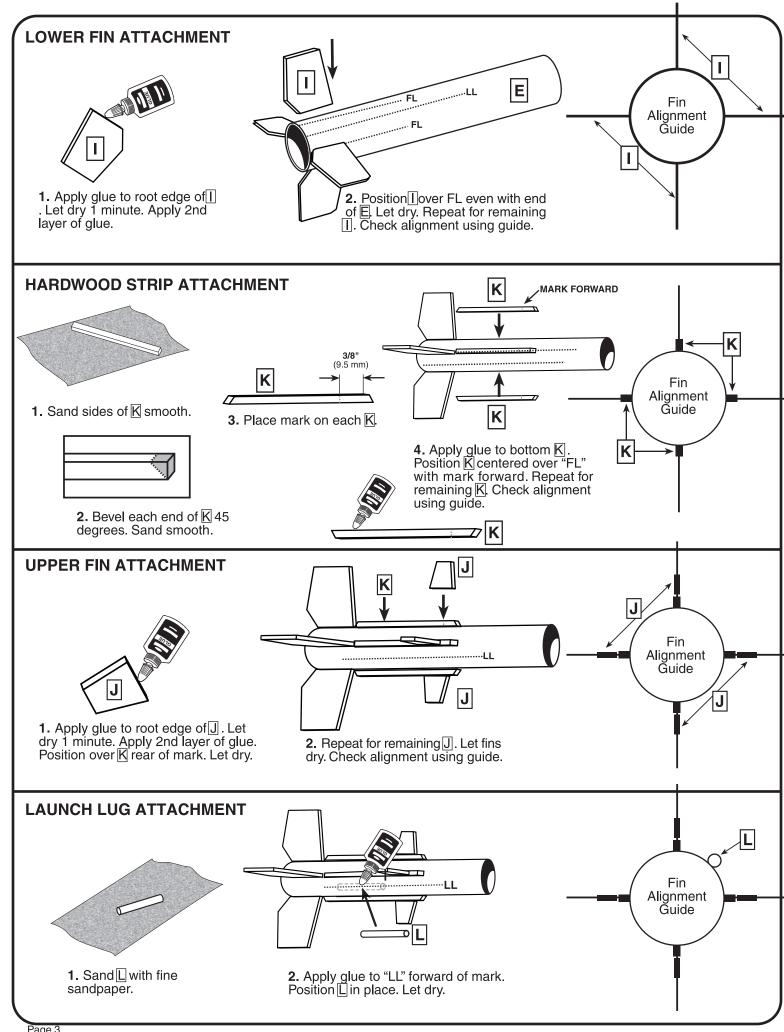

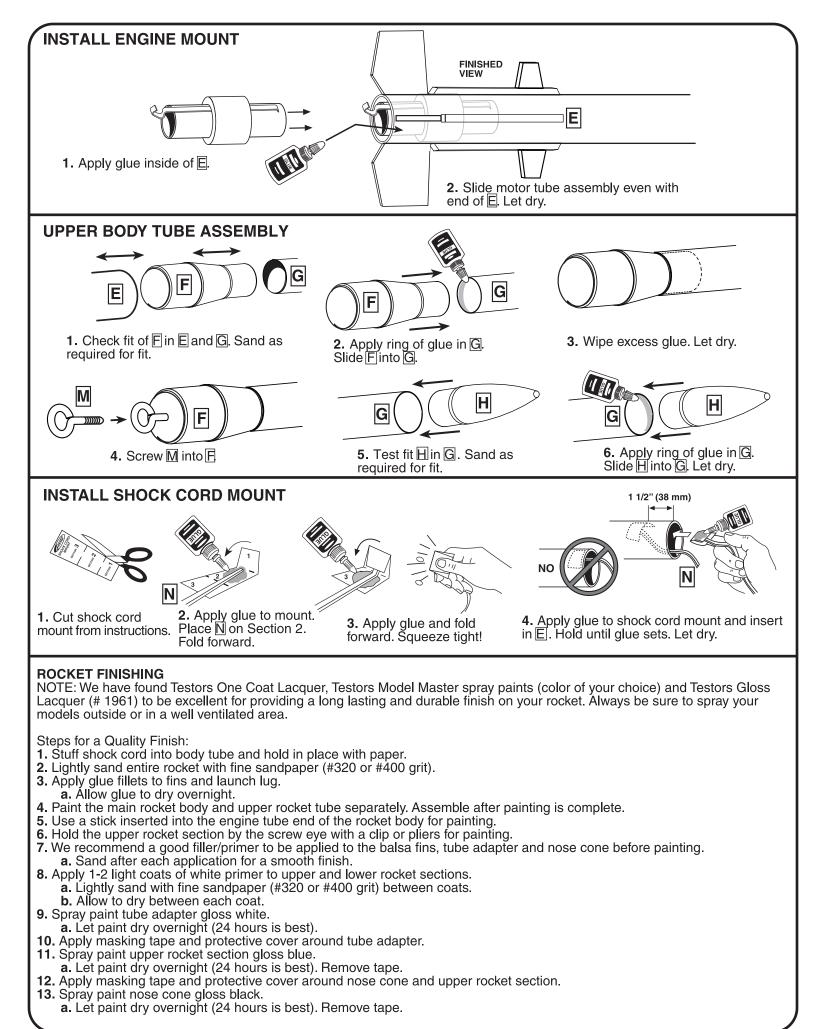

Page 3