

AWO41628

A.「開門」指示燈


此機具備內置安全檢查裝置，
當此機出現故障便會自動作出檢查及
自動修正或調整。

B.「入水喉關閉」指示燈

請檢查水源壓力、水龍頭

C.「清理過濾器」指示燈

程序表

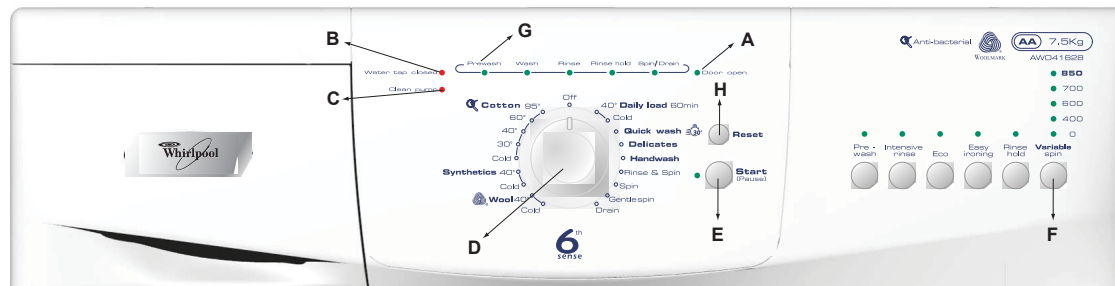

D. 程序選擇旋鈕

E.「開始/暫停」按鈕

F.「脫水轉速選擇」按鈕

G.「洗衣程序」指示燈



H.「重設」按鈕

洗衣程序	衣服標籤	衣物類型 / 骯髒程度 關於溫度的選擇，請遵從衣物標籤上的建議進行	最大 洗衣量 公斤	洗衣劑及柔順劑			洗衣功能程序						最高 脫水轉速 轉 / 分鐘
				預洗 	主洗 	柔順劑 	慳電	預洗	易熨貼	深層 過水	延遲 脫水	脫水 轉速 選擇	
棉質 冷水；30℃；40℃； 60℃；95℃		一般至非常骯髒之床單、桌布及內衣褲、毛巾、襯衫等棉麻衣物。 非常骯髒衣物請選擇額外之「預洗」功能。	7.5	*	是	*	*	*	*	*	*	*	850
合成纖維 冷水；40℃		一般骯髒之外套、襯衫、罩衫等合成纖維（人造纖維、特雷維拉）或混棉衣物。	2.5	*	是	*	*	*	*	*	*	*	700(1)
60分鐘日日洗 冷水；40℃		輕微骯髒、中度骯髒的棉質或合成纖維衣物。	3.0	—	是	*	—	—	—	*	*	*	850
30分鐘速洗 30℃		適合只穿著了短時間由棉質、滌綸、錦綸及混棉織物製成之外衣。	3.0	—	是	*	—	—	—	—	*	*	850
纖幼 30℃		窗簾與質料纖幼之連身裙、半截裙及襯衫等衣物。	1.5	*	是	*	—	*	—	—	*	*	700(1)
羊毛 冷水；40℃		只可洗滌有羊毛標記並標明可機洗的羊毛衣褲。 如選擇「延遲脫水」功能，切勿讓衣物浸泡過久。	1.0	—	是	*	—	—	—	—	*	*	700(1)
手洗 冷水		標記為手洗的麻質、絲質或人造絲的衣物。 如選擇「延遲脫水」功能，切勿讓衣物浸泡過久，當洗衣程序結束，會進行輕柔脫水操作。	1.0	—	是	*	—	—	—	—	*	*	400(2)
過水+脫水	—	與「棉質」程序的最後一次過水及最後脫水相同。	7.5	—	是	*	—	—	—	—	*	*	850
脫水	—	強力脫水，與「棉質」程序的脫水過程相同。	7.5	—	—	—	—	—	—	—	—	*	850
輕柔脫水	—	輕柔脫水，與「羊毛」程序的脫水過程相同。	1.0	—	—	—	—	—	—	—	—	*	700(1)
排水	—	只進行排水，並沒有脫水操作。 可於「延遲脫水」程序後，啟動排水操作，然後結束程序。	—	—	—	—	—	—	—	—	—	—	—

*可選擇 / 是：必須加入

- 為更好地護理衣物，脫水轉速限制於700轉/分鐘。
- 為更好地護理衣物，脫水轉速限制於400轉/分鐘。

惠而浦乃美國惠而浦 Whirlpool, U.S.A. 的註冊商標。

基本程序表



功能資料表			
程序	溫度 攝氏(℃)	洗衣量 (公斤)	程序時間 (大約)(小時:分鐘)*
棉質**	95	7.5	2:15
棉質***	60	7.5	2:10
棉質	40	7.5	1:59
棉質	30	7.5	1:55
棉質	冷水	7.5	1:54
合成纖維	40	2.5	1:15
合成纖維	冷水	2.5	1:10
60分鐘日日洗	40	3.0	0:55
60分鐘日日洗	冷水	3.0	0:50
30分鐘速洗	30	3.0	0:30
纖幼	30	1.5	0:40
羊毛	40	1.0	0:46
羊毛	冷水	1.0	0:41
手洗	冷水	1.0	0:35

上述功能表之數據是標準於正常條件下測試而獲得，根據 IEC/EN 60456 GB/T4288標準。與用戶使用時的實際耗水、耗電、水溫、水壓以及洗滌衣物種類有關。

* 時間顯示器可能與表中所列數值有所偏差。洗衣程序會根據洗滌條件自動調節。

** 為減少衣物皺褶此機會於主洗步驟結束時及排水前，自動注入冷水降低水溫。

*** 標準測試的洗衣程序。

加入洗衣劑，關閉機門並選擇程序

按「使用說明書」中的「洗衣劑及柔順劑」一節所述，加入洗衣劑後，關好機門。

將程序選擇旋鈕轉到所需程序及溫度。洗衣程序「開始/暫停」按鈕顯示燈閃動。

轉速指示燈會跟據所選程序之預設轉速亮起。

選擇所需的特別功能

按下所需的任何特別功能按鈕時，相應的指示燈會發亮。當程序與附加功能的組合不適當，選擇會被取消，指示燈會自動熄滅。

「慳電洗」

• 延長洗衣時間及降低水量洗衣，可獲得最佳的洗衣效果及減低能源消耗。

「預洗」

• 適用於非常骯髒的衣物(含泥沙、粗粒)。洗衣時會延長15分鐘。

「易熨貼」

• 可以與「綿質」及「合成纖維」程序組合，令衣物更易熨燙。
• 避免衣物皺褶，注水量增加，並配合輕柔脫水。

深層過水

• 增加一次過水程序，並延長過水時間。
• 此功能特別適用於軟性水質地區，清洗嬰兒衣物，及對洗衣劑過敏的人。

延遲脫水

• 衣物保留在最後一次過水中，不進行最後脫水步驟，以防衣物起皺及變色。
• 建議採用合成纖維及纖幼衣物時選擇此功能。
• 當想延遲脫水時間，此功能很有效用。

備註：程序步驟顯示器的「延遲脫水」指示燈發亮時，程序在「延遲脫水」時停止。「開始/暫停」按鈕旁邊的指示燈會閃爍。

如何結束延遲脫水功能：

• 按下「開始/暫停」按鈕，洗衣機自動運轉至當前選擇程序的脫水過程，結束程序。
• 如果你不想將衣物進行脫水，請把程序選擇按鈕設至排水位置然後按**開始/暫停**按鈕。

脫水轉速選擇

• 每一程序自動預設最高的脫水轉速。
• 按此按鈕選擇其他脫水轉速。
• 如選擇的脫水轉速為「0」，最後一次脫水將會取消，程序結束時只進行排水，但過水過程仍會進行脫水動作。

啟動程序

打開水龍頭並按下「開始/暫停」按鈕。「開始/暫停」按鈕旁邊的指示燈會亮起。洗衣程序指示燈會順序顯示正進行之洗衣階段；從左至右為預洗、洗衣、過水、脫水/排水操作。

• 當洗衣程序逐步完成，指示燈會相應熄滅。

「開門」指示燈

當結束洗衣程序後，指示燈亮起表示可以打開機門。洗衣程序運行期間，機門保持鎖定，便不能用力打開以免損壞機器。如在洗衣程序運行期間急需打開機門，請參閱程序結束前取消/重設一節。

紅燈警示

入水喉關閉

洗衣機無水供應或供應不足。打開水龍頭；如指示燈仍顯示，請查閱使用說明書中的故障排除指引。

清理過濾器

洗滌用水沒有排出。檢查排水軟管是否扭曲及阻塞。過濾器是否需要清潔；在後一種情況請查閱使用說明書清理過濾器一節。

程序結束

洗衣程序結束後，所有洗衣指示燈會熄滅。開門指示燈亮起。

1. 將程序選擇旋鈕轉到關機的位置。
2. 關閉水龍頭。
3. 打開機門並取出衣物。
4. 讓機門微開，令洗衣桶吹乾。

程序開始後更改程序、附加功能

1. 按「開始/暫停」按鈕暫停洗衣程序。指示燈會閃動。
2. 選擇新程序和任何附加功能，如需要時也可選另一脫水轉速。
3. 再次按下「開始/暫停」按鈕。新程序在先前的程序中斷之處繼續進行。此程序無需添加洗衣劑。

程序結束前取消/重設

在程序結束前，按重設按鈕取消洗衣程序。

• 按重設按鈕至少3秒。在開門前排出機內積水。

AWO41628


A. "Door Open" Indicator

In this machine, there is a built-in safety function which automatically performs checking, diagnosis and self-adjustment when problem arises.

B. "Water tap closed" Indicator

Please check the inlet water pressure and tap.

C. "Clean pump" Indicator

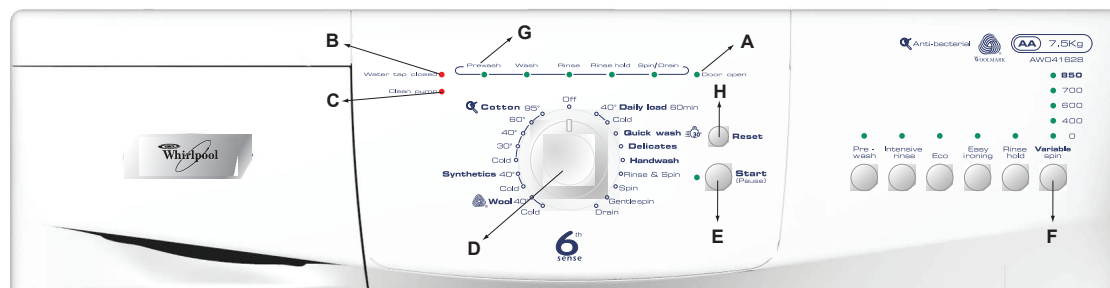


D. Program Selector Knob

E. "Start/Pause" button

F. "Variable spin" button

 G. "Program Sequence" Indicator



H. "Reset" button

Washing Program	Care Labels	Type of wash/ Degree of dirtiness For temperature selection, please follow the recommendations on the care label.	Max Load Kg	Detergents and Softener			Wash Function Selection						Max Spin Speed rpm
				Pre-wash	Main Wash	Softener	Eco	Prewash	Easy ironing	Intensive Rinse	Rinse hold	Variable spin	
Cotton Cold Water; 30°C; 40°C; 60°C; 95°C		For heavily soiled to normally soiled bed sheet, table cloth, underwear, towels, shirts, made of cotton or linen. Please select an additional "Pre-wash" function for heavily soiled clothes.	7.5	*	Yes	*	*	*	*	*	*	*	850
Synthetics Cold water; 40°C		Normally soiled jackets, blouses, clothes and coats made of synthetics fibres (polyester fiber, trevira) or blends with cotton.	2.5	*	Yes	*	*	*	*	*	*	*	700(1)
Daily load 60 min Cold water; 40°C		Slightly or normally soiled clothes made of cotton or synthetic.	3.0	—	Yes	*	—	—	—	*	*	*	850
Quick wash 30 min 30°C		Shortly worn outer clothing made of cotton, polyester fibre, polyesteramine and blends with fabric.	3.0	—	Yes	*	—	—	—	—	*	*	850
Delicate 30°C		Curtain and skirts, blouses, coats made of delicate materials.	1.5	*	Yes	*	—	*	—	—	*	*	700(1)
Wool Cold water; 40°C		Only woollens labeled with the woolmark and identified as machine washable. If the "Rinse hold" function is chosen, do not leave the clothes to soak for too long.	1.0	—	Yes	*	—	—	—	—	*	*	700(1)
Handwash Cold water		Clothes made of linen, silk, viscose and labeled as handwashable If the "Rinse hold" function is chosen, do not leave the clothes to soak for too long. The Gentle Spin function will operate when the program ends.	1.0	—	Yes	*	—	—	—	—	*	*	400 (2)
Rinse + Spin	—	Same as the last rinse and spin in the "Cotton" programme.	7.5	—	Yes	*	—	—	—	—	*	*	850
Spin	—	Intensive Spinning, same as the spin cycle in the "Cotton" programme.	7.5	—	—	—	—	—	—	—	—	*	850
Gentle spin	—	Gentle spinning, same as the spin cycle in the "Wool" programme.	1.0	—	—	—	—	—	—	—	—	*	700(1)
Drain	—	Drain only no - spinning. It can be treated as no-spin option after "Rinse Hold" to end programme.	—	—	—	—	—	—	—	—	—	—	—

* Optional/Yes: dosing required

(1) For caring garment quality, spin speed is restricted to 700rpm in this programme.

(2) For caring garment quality, spin speed is restricted to 400rpm in this programme.

Whirlpool is a registered trademark of Whirlpool USA

Basic Programme Chart

Performance Data			
Programme	Temperature (°C)	Load (kg)	Programme Duration (approximately) (hour:minute)
Cotton	95	7.5	2:15
Cotton	60	7.5	2:10
Cotton	40	7.5	1:59
Cotton	30	7.5	1:55
Cotton	Cold water	7.5	1:54
Synthetics	40	2.5	1:15
Synthetics	Cold water	2.5	1:10
Daily Load 60 min	40	3.0	0:55
Daily Load 60 min	Cold water	3.0	0:50
Quick Wash 30 min	30	3.0	0:30
Delicate	30	1.5	0:40
Wool	40	1.0	0:46
Wool	Cold water	1.0	0:41
Handwash	Cold water	1.0	0:35

Performance data is measured in normal condition in compliance with IEC/EN60456 GB/T4288 standard. Energy and water consumption of domestic use is subject to water pressure, temperature and the type of wash.

The actual programme time may deviate from the values in the table. The washing programme will be adjusted automatically according to the washing condition.

To reduce the water temperature for preventing of wrinkles, cold water is added automatically after the main wash cycle and before draining process.

Standard Testing for Washing Programme

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergents as described in the "Detergents and softener" section in the User Manual and close the door after adding detergents.

Turn the programme selector knob to the desired programme and temperature. The indicator next to the "Start / Pause" button is flashing.

The predefined spin speed indicator corresponding to the selected programme lights up.

SELECT DESIRED FUNCTION

Press the desired option button and the corresponding indicator lights up. When the combination of selected programme and the desired additional option is not practicable, the option will be cancelled and the indicator switches off immediately.

"Eco"

With a prolonged washing duration and lower washing temperature, a desirable washing performance can be obtained and reduces energy consumption.

"Prewash"

Suitable for heavily soiled loads (for example with sand and dust) and the programme duration is prolonged for 15 minutes.

"Easy Ironing"

Can be used together with "Cotton", "Synthetics" programmes to make ironing easier.

To avoid creasing, water level is increased and gentle spin programme is applied.

"Intensive Rinse"

Adding one more rinsing programme and extend its rinsing duration.

This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

"Rinse Hold"

The laundry remains in the last rinse water without proceeding to the spin cycle to avoid creasing and fading

This function is recommended for washing synthetic and delicate clothes.

This function is very effective to delay the spinning time.

Note: When the "rinse-hold" light in the programme sequence is on and the indicator next to "Start / Pause" button flashes, the programme switches to rinse hold sequence and the programme stops.

How to stop the "Rinse Hold" Programme

Press the "Start / Pause" button, the washing machine automatically switches to the spinning process of the selected programme option, and the programme ends.

If you do not want to spin the clothes, please turn the programme selector knob to the position of "Drain" programme and press the "Start / Pause" button.

Variable Spin

Every programme has an automatic predefined maximum spin speed

Press button to select desired spin speed.

If the spin speed "0" is selected, the final spinning is cancelled.

Draining will occur when the programme ends, but spinning continues during rinsing programme.

Programme Start

Open the tap and press the "Start/Pause" button. The indication lamp next to the "Start/Pause" button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Prewash, Wash, Rinse, Spin/Drain.

●When the programme phase is finished, the corresponding indicator goes out.

"Door Open" Indicator

Before the programme starts and after it ends, the indicator will light up and the door of the machine can be opened. When the Programme is running, the door will remain locked and cannot be forced open or the machine will be damaged. If you need to open the door urgently during the programme is running, please refer to the Chapter of "Cancel / Reset A Running Programme Before It Ends".

Red Indicator for Warning

Water tap closed

The appliance has no or insufficient water supply. Open the water tap; if the indicator still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

Clean Pump

Waste water is not pumped out. Check whether the drain hose is kinked or clogged. Clean the filter if it is the latter case. Please refer to the chapter of "Removing the filter" in the Instructions for Use.

Programme Ends

All of the lights of the programme sequence are off. "Door Open" indicator lights up.

1. Turn the Programme selector to the "Off" position.
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry out.

Change Programme and Options after the Programme Starts

- 1 Press the "Start/Pause" button to pause the Programme. The indicator flashes.
2. Select the new programme and any additional function. Select the spin speed if necessary.
3. Press the "Start/Pause" button again to start a new programme.

The new Programme continues at the same position where the previous Programme was interrupted, so no additional detergent is needed.

Cancel / Reset A Running Programme Before It Ends

Press the "Reset" button to cancel a programme before the programme ends

Press the "Reset" button for at least 3 seconds. Any water that remains in the appliance will be drained out before the door is opened.